

1 / 37

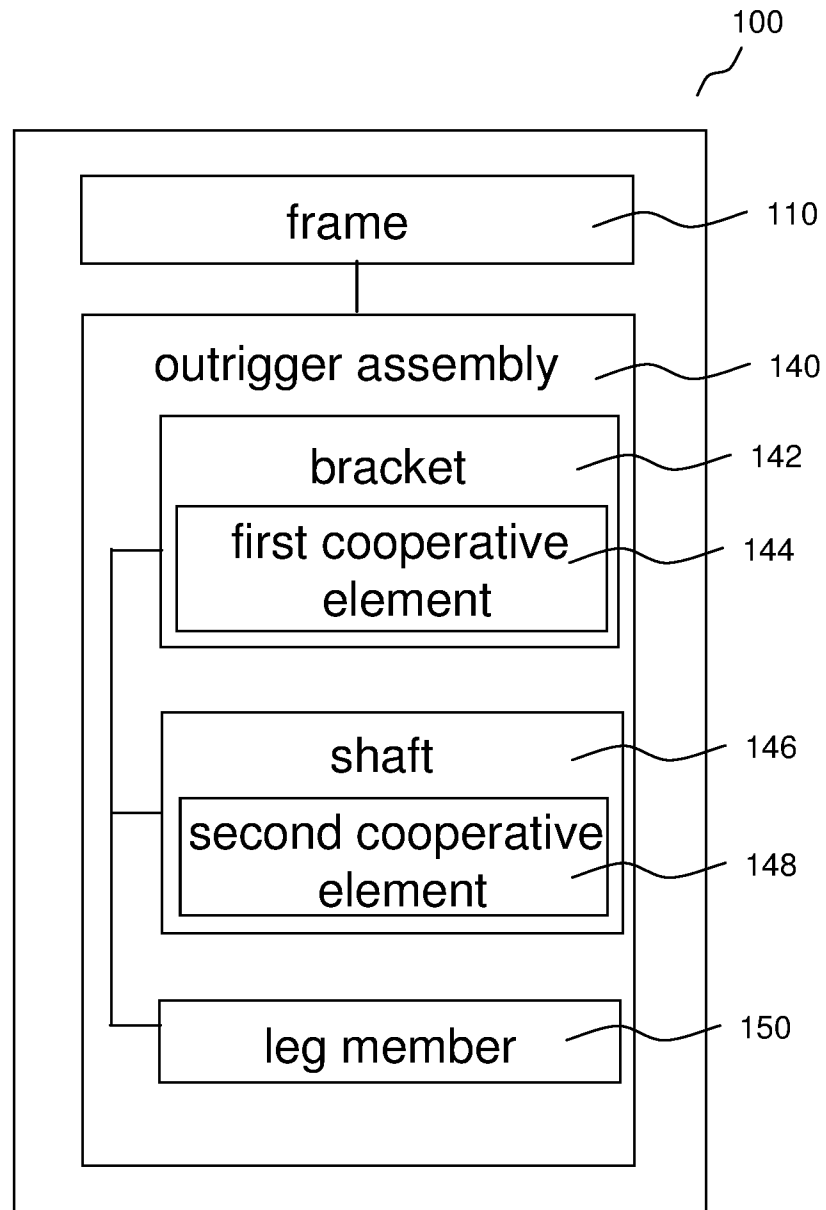 


FIG. 1A

2 / 37

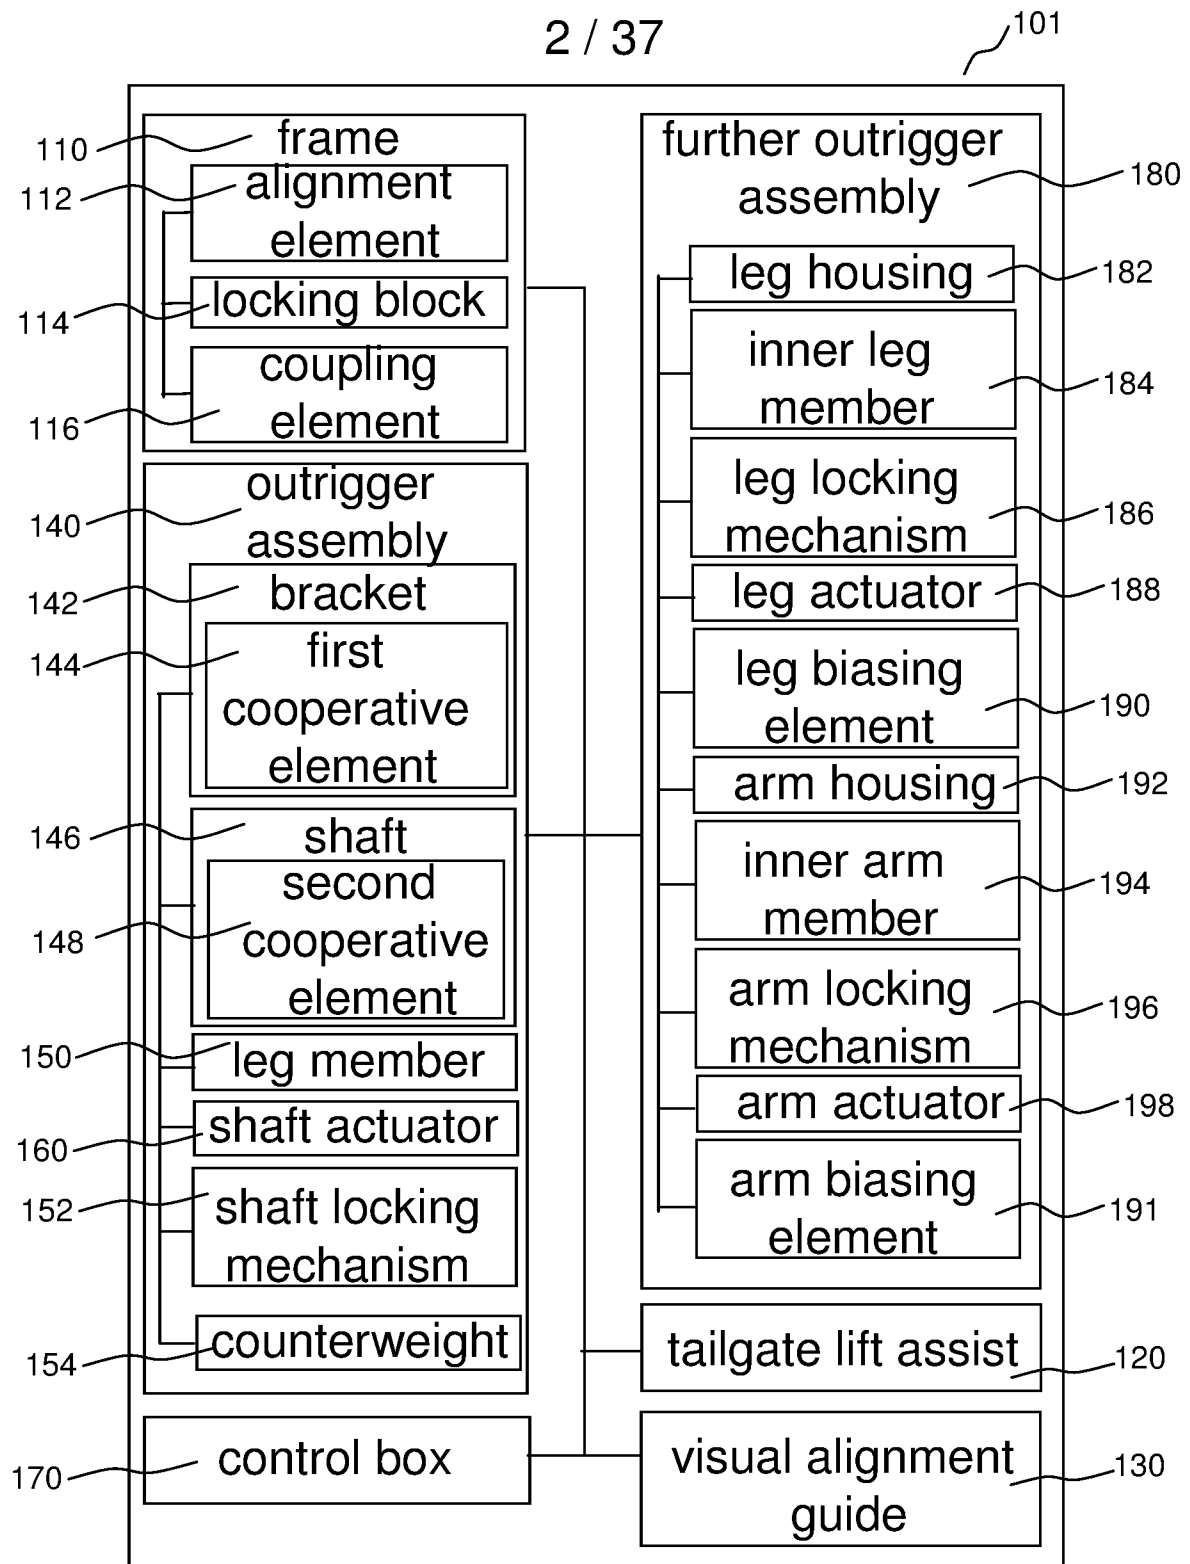 


FIG. 1B

3 / 37

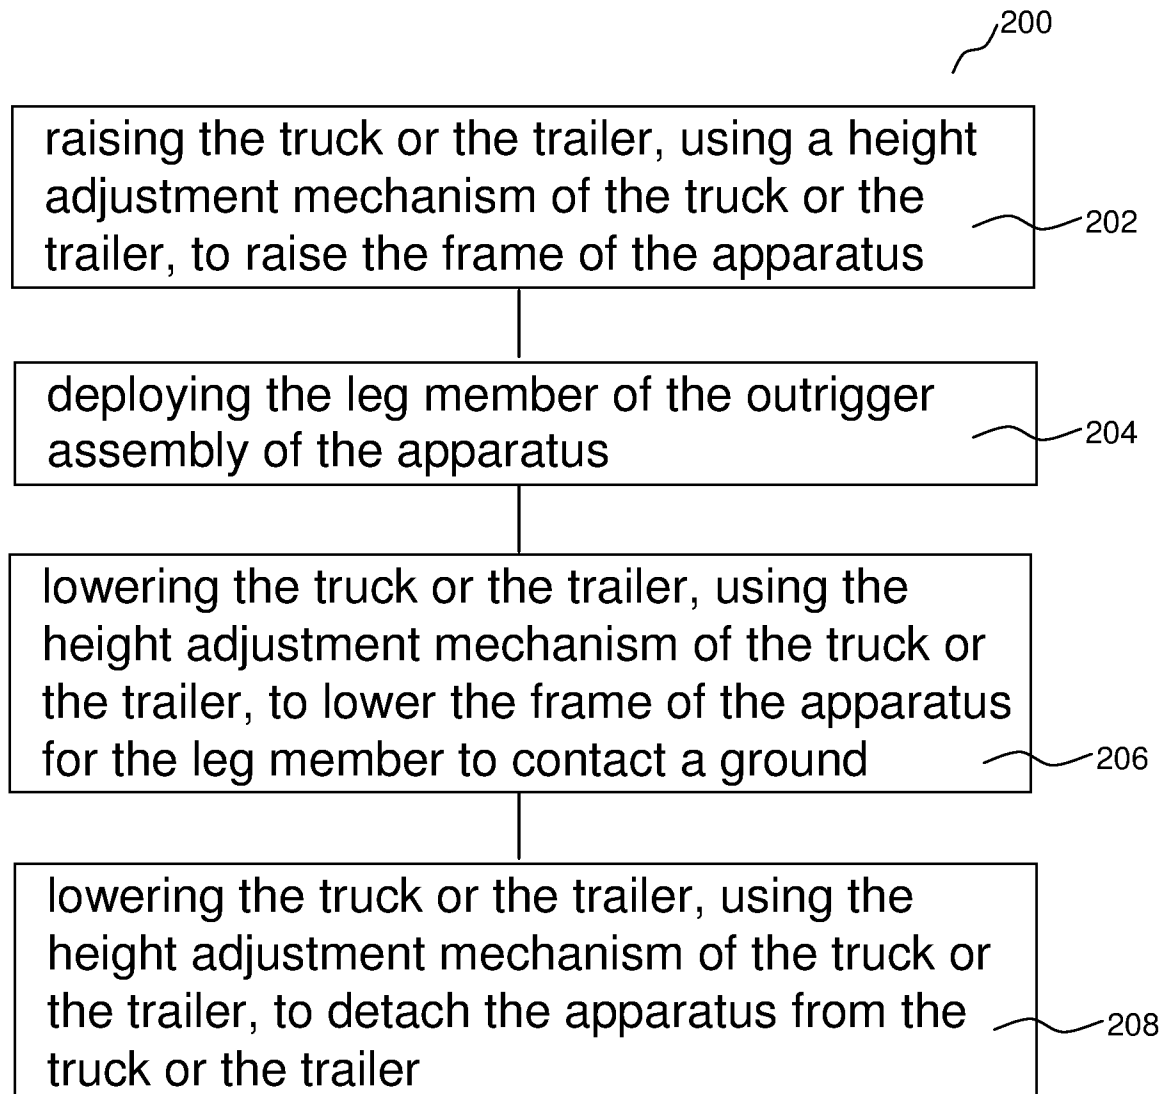 


FIG. 2

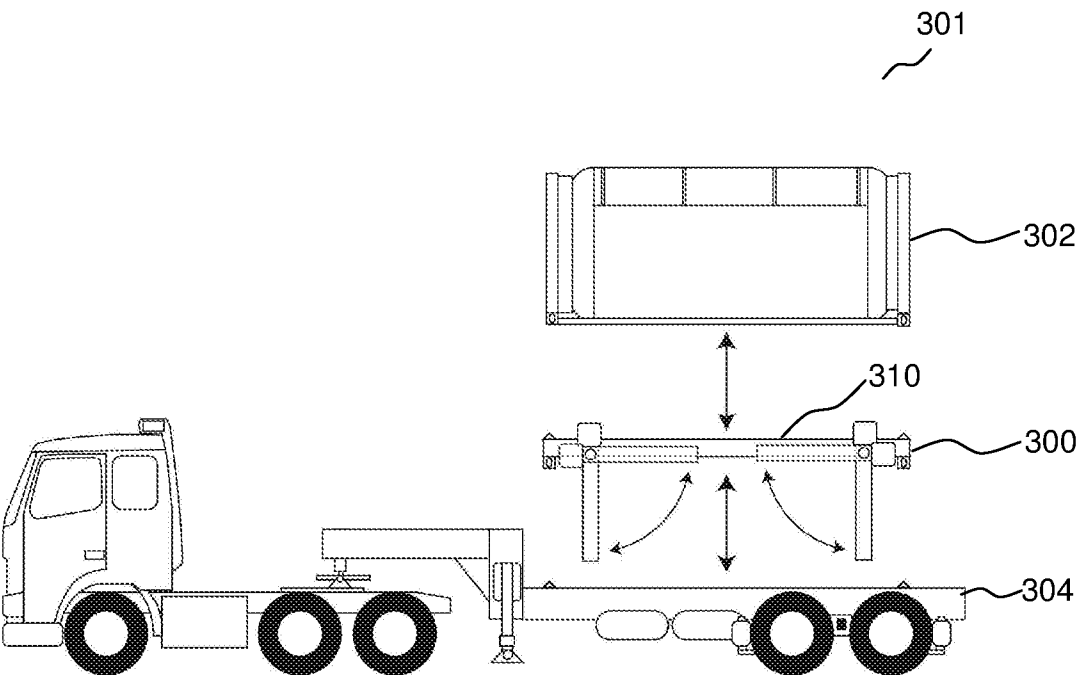 


FIG. 3

5 / 37

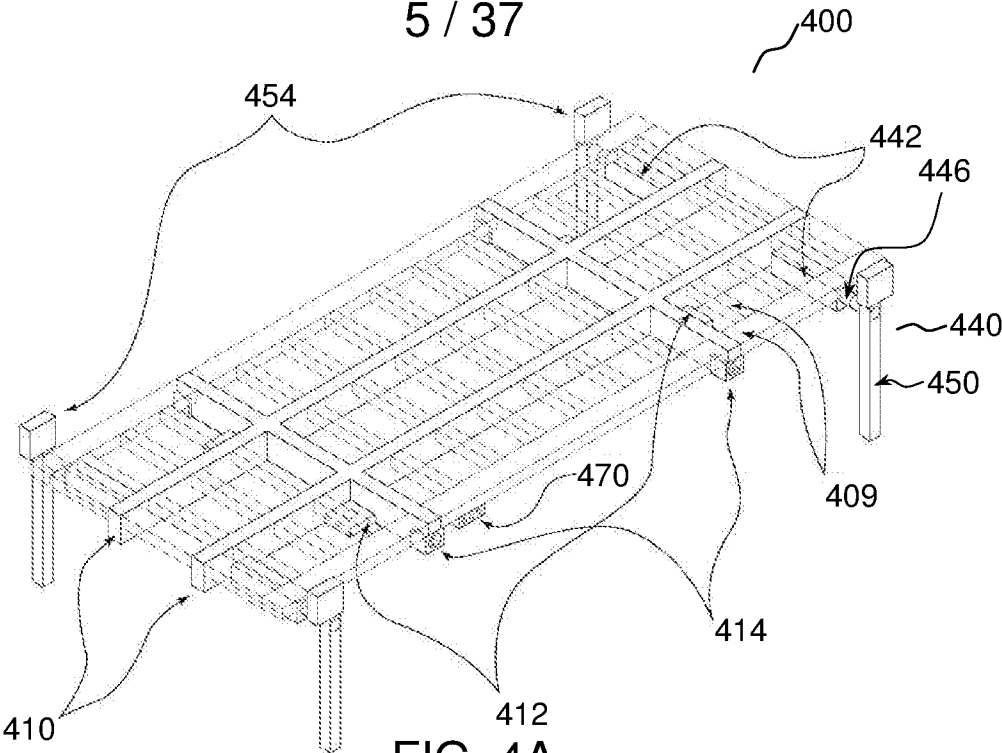 


FIG. 4A

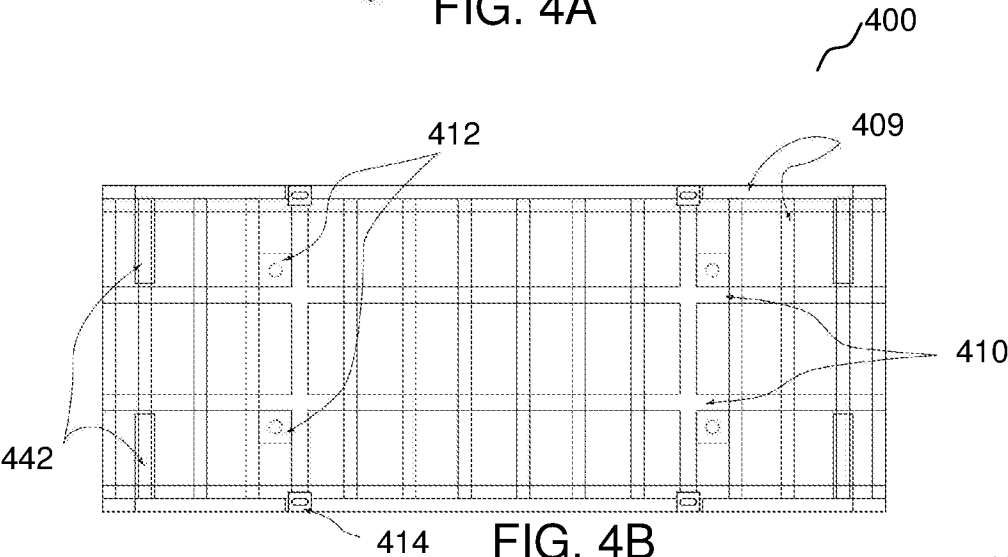 


FIG. 4B

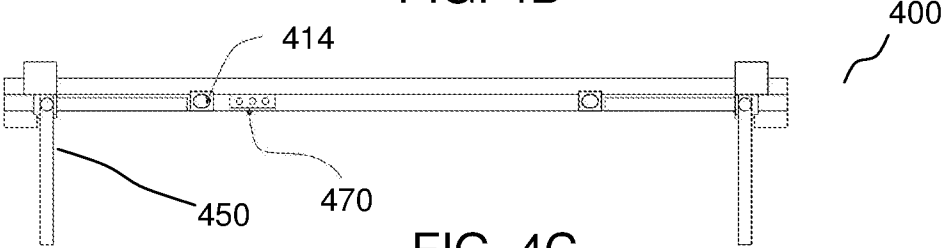 


FIG. 4C

6 / 37

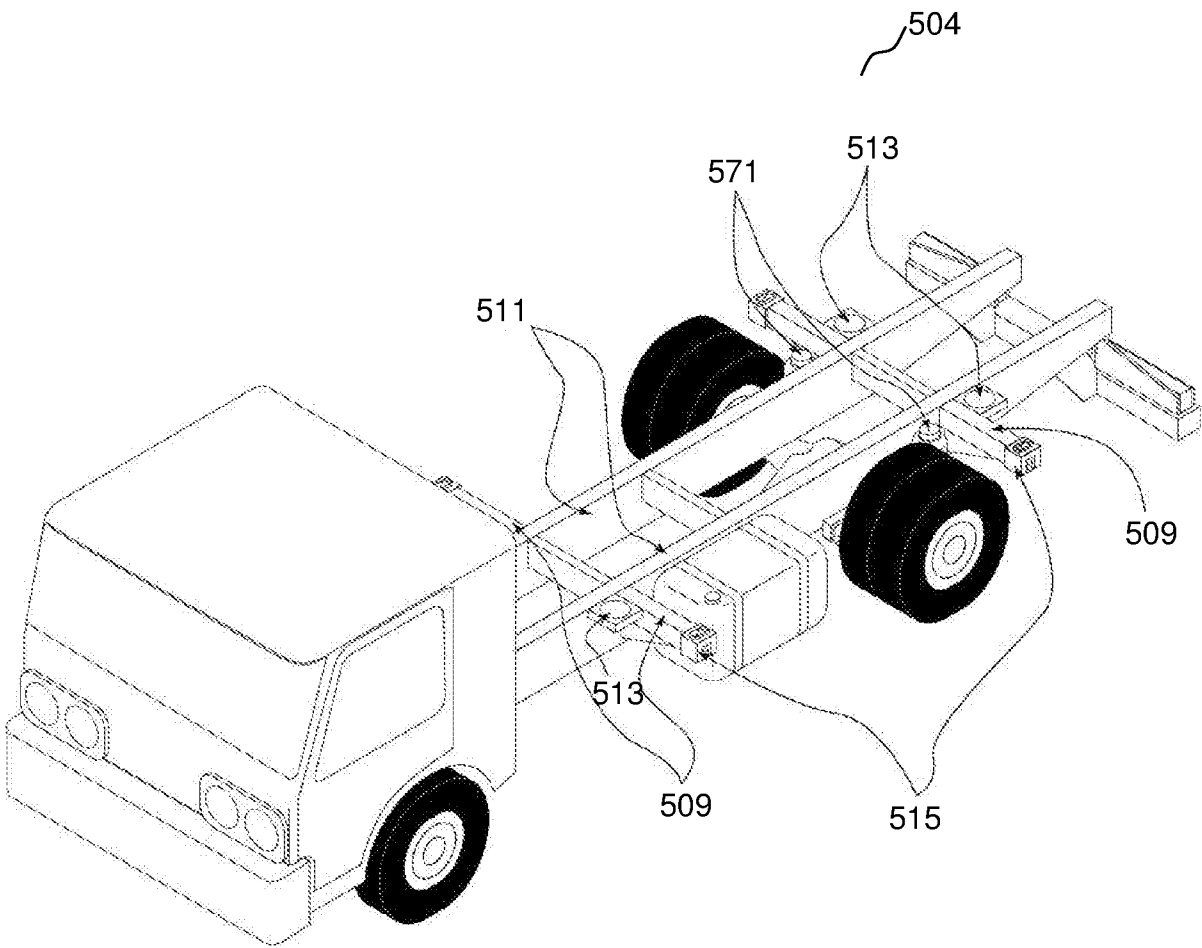 


FIG. 5

7 / 37

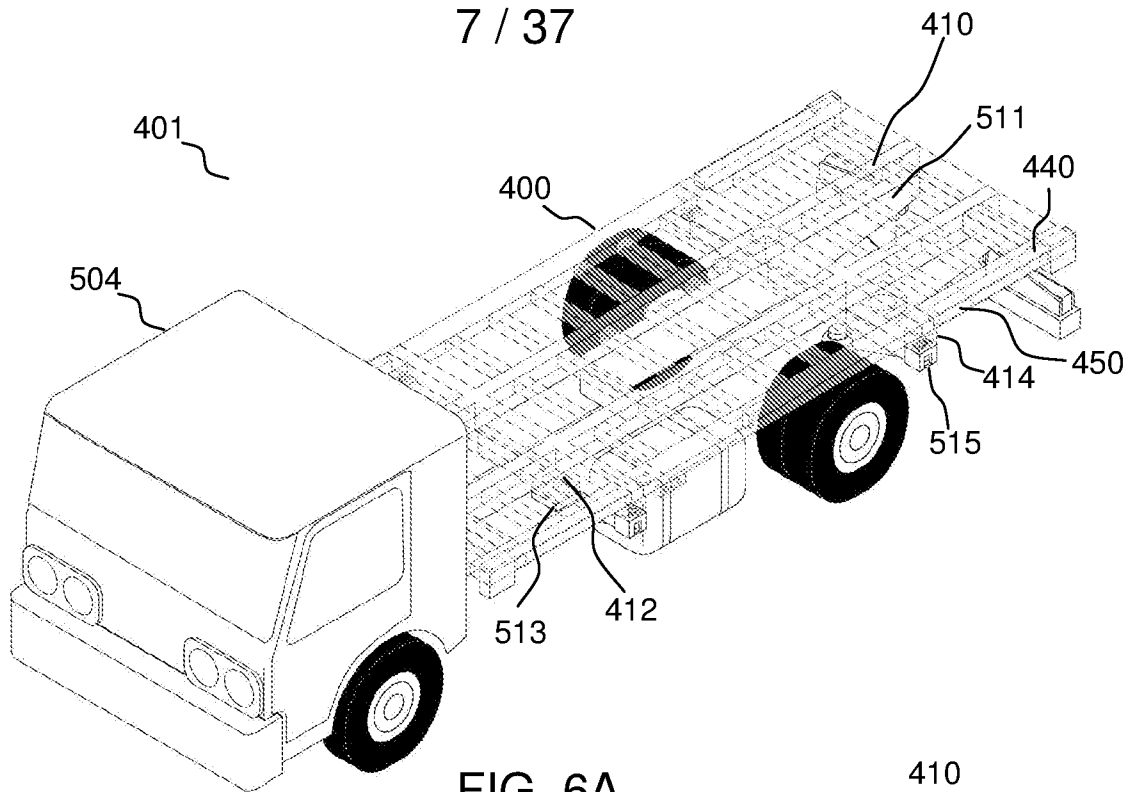 


FIG. 6A


 
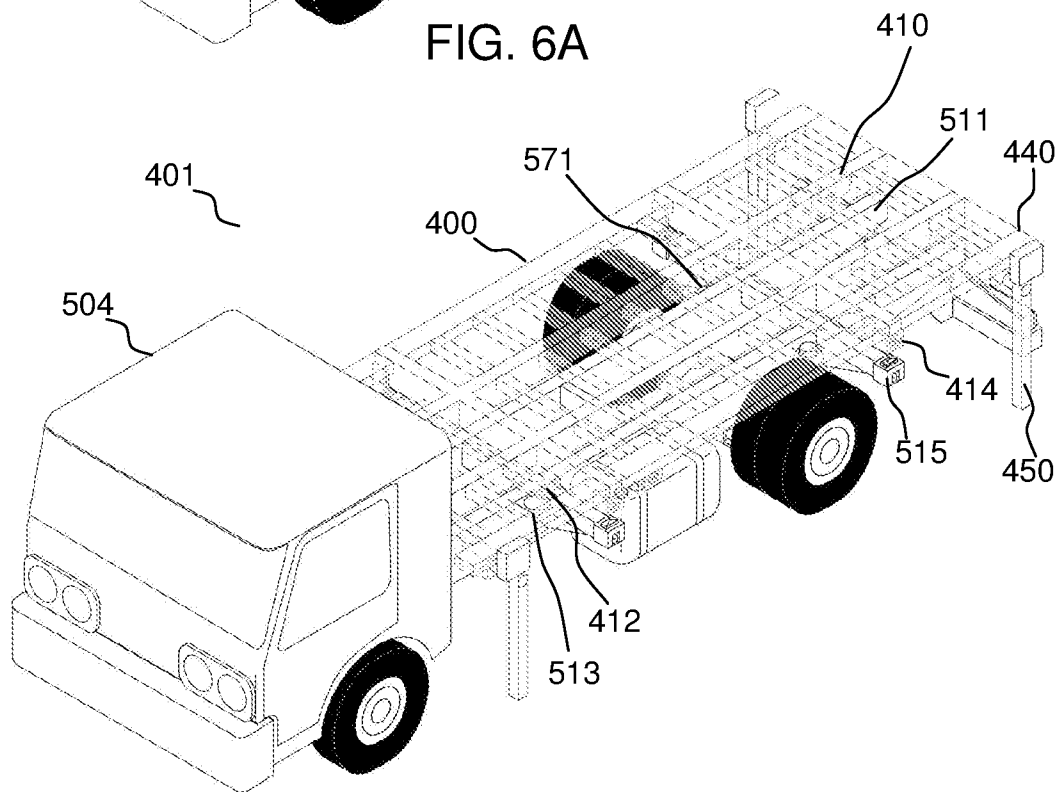 


FIG. 6B

 8 / 37

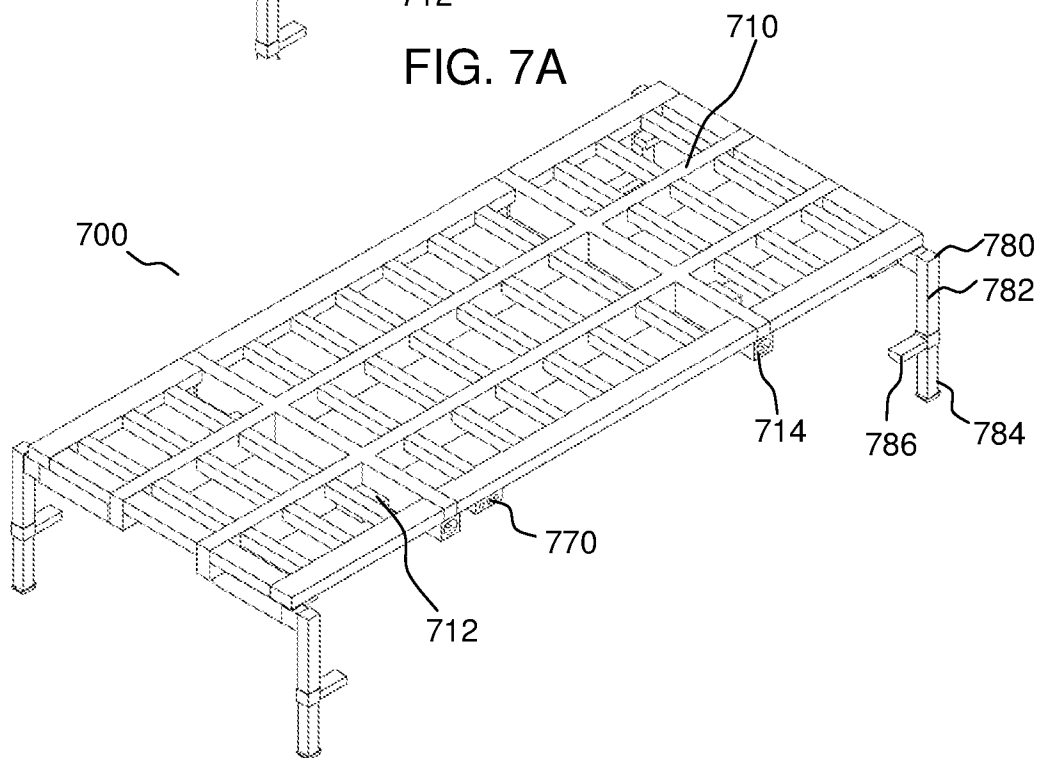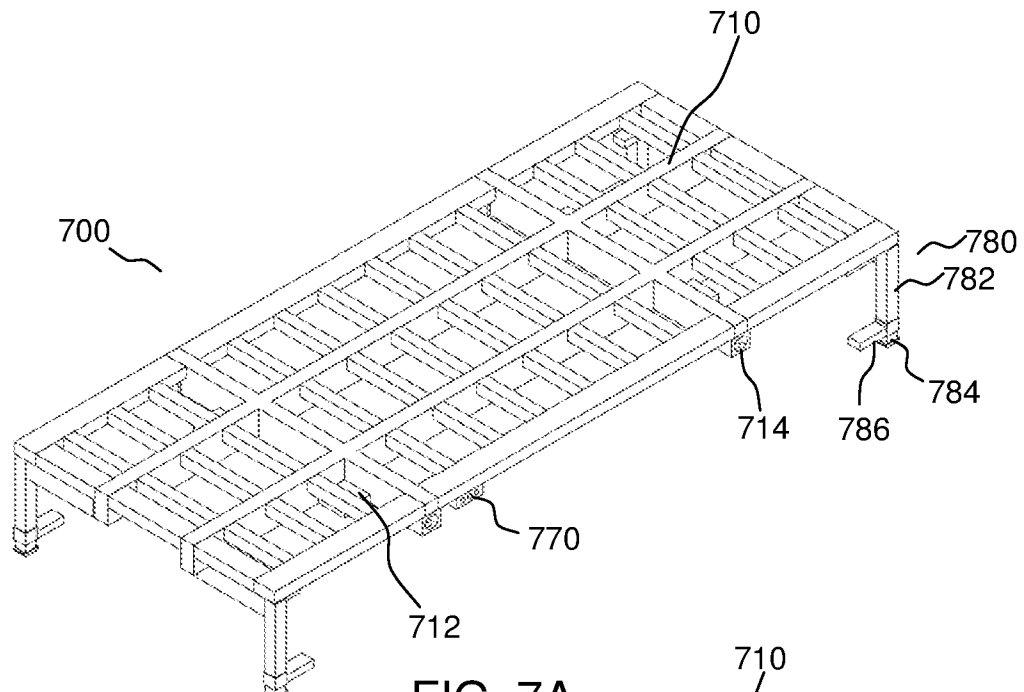

9 / 37

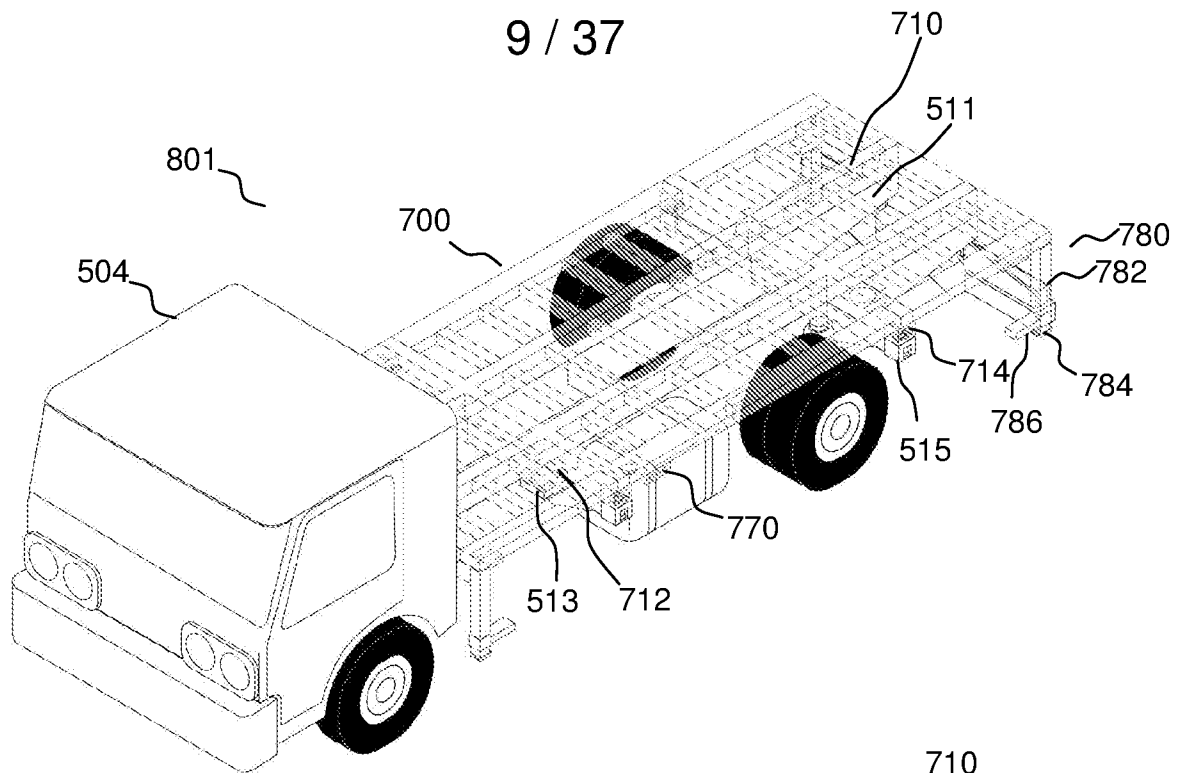 


FIG. 8A

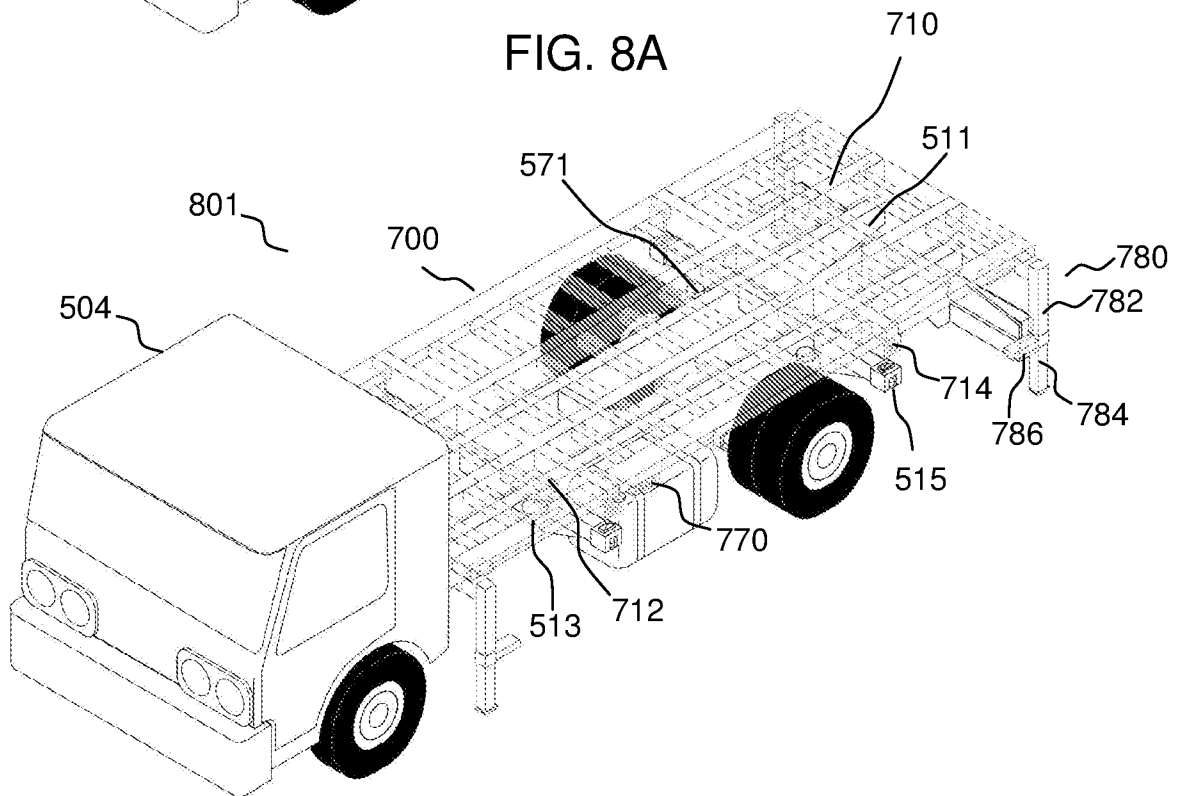 


FIG. 8B

10 / 37

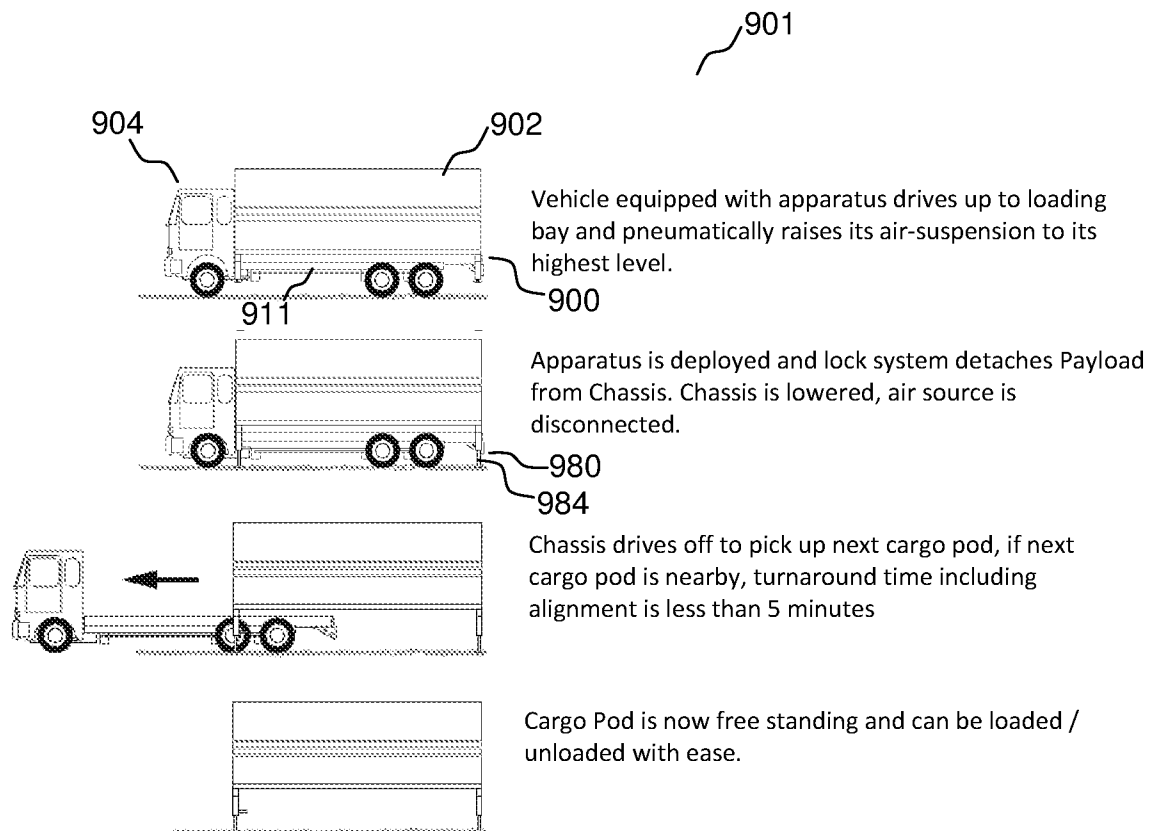 


FIG. 9

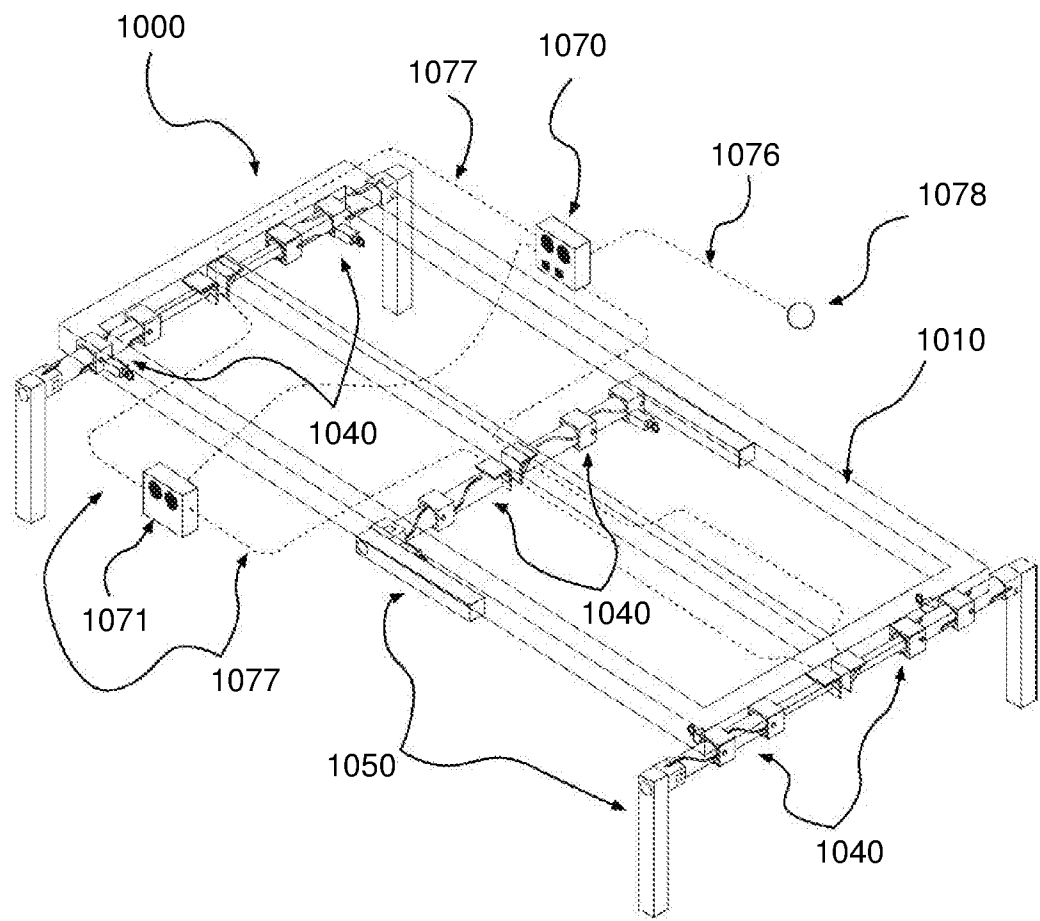 


FIG. 10

12 / 37

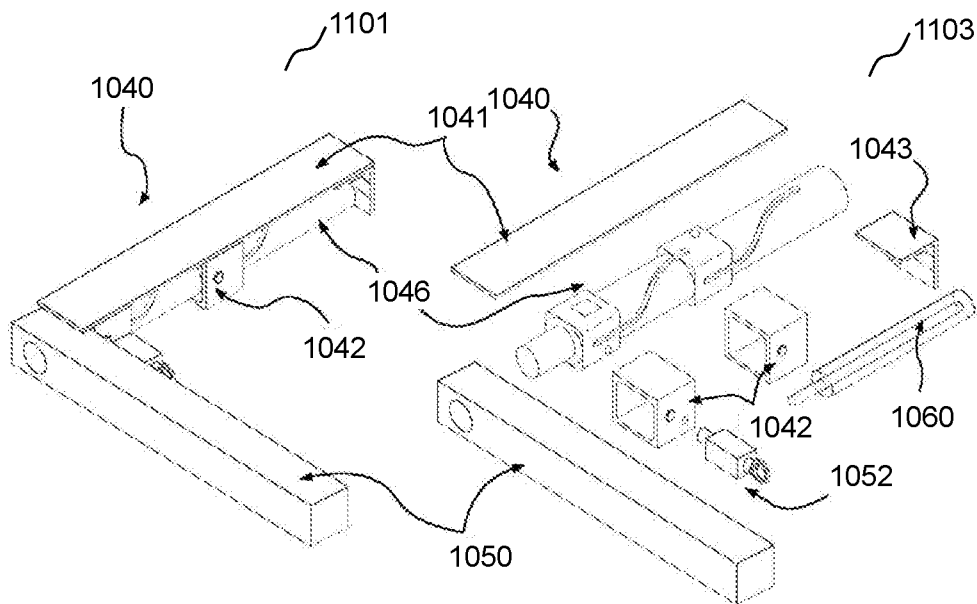 


FIG. 11A

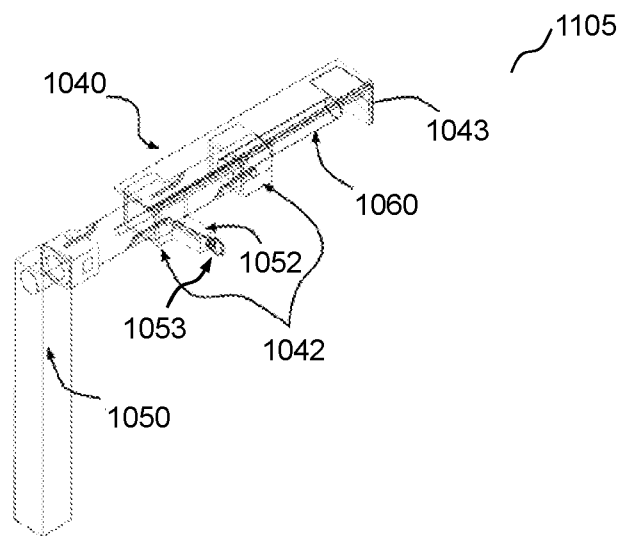 


FIG. 11B

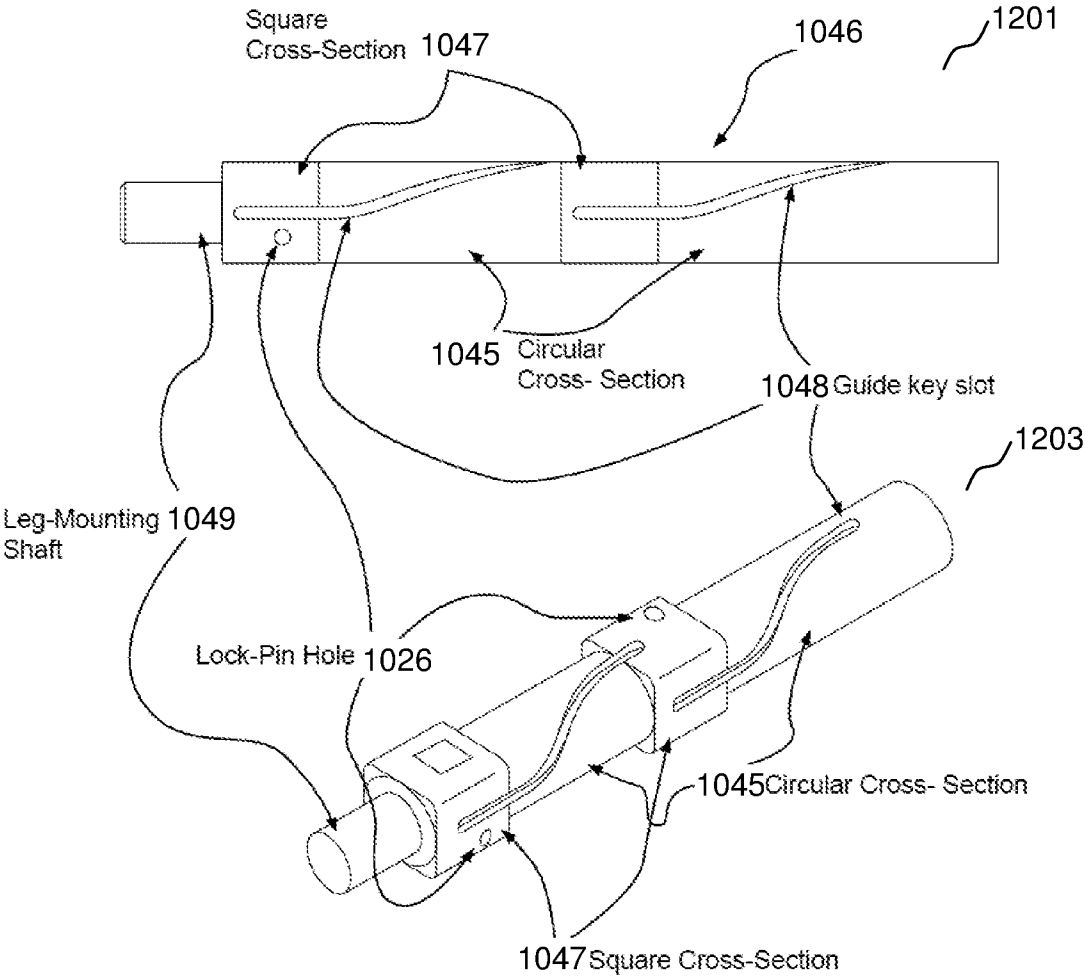 


FIG. 12

14 / 37

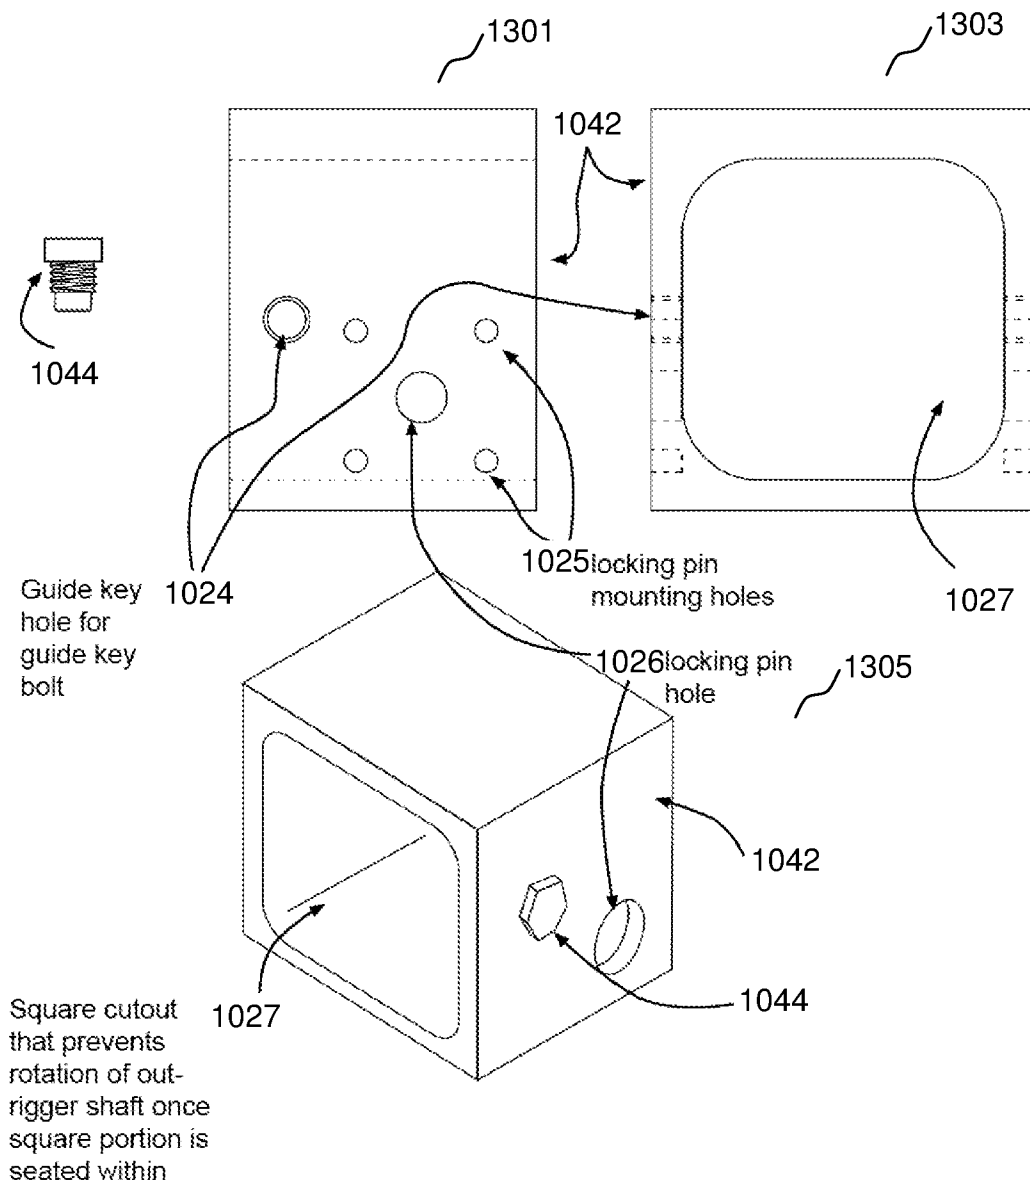 


FIG. 13

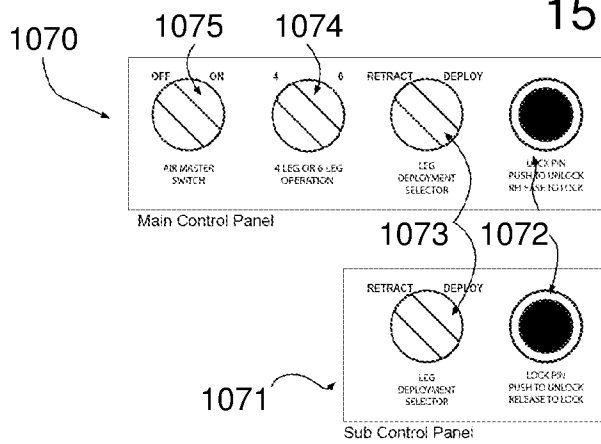 


FIG. 14A

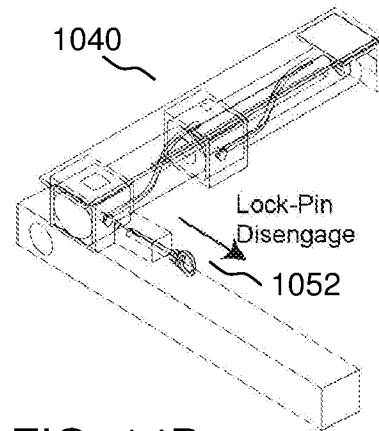 


FIG. 14B

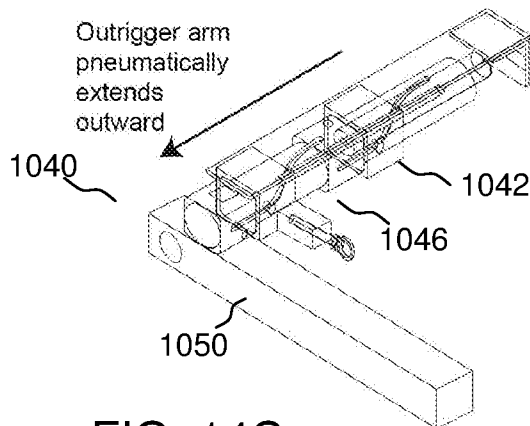 


FIG. 14C

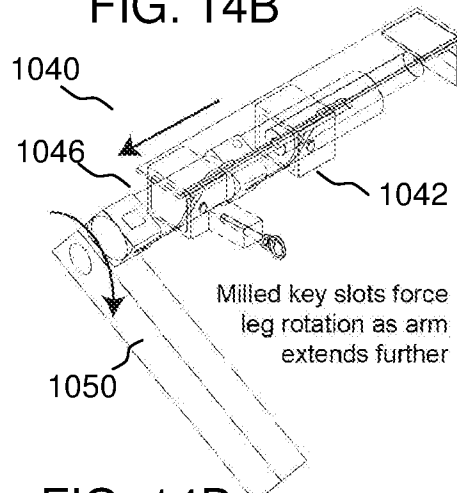 


FIG. 14D

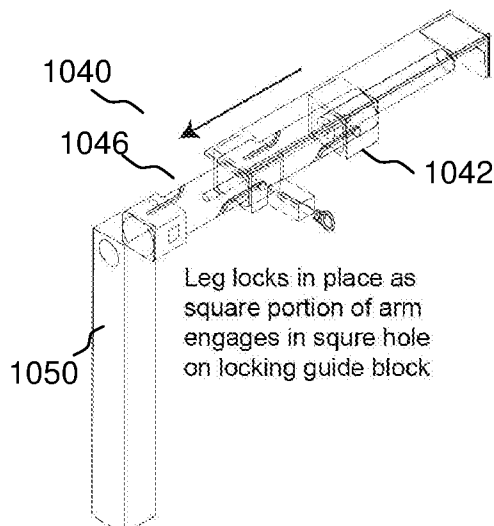 


FIG. 14E

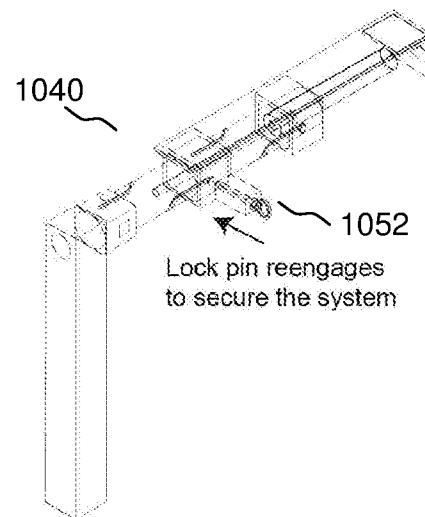 


FIG. 14F

16 / 37

Deployment of Apparatus -
How it is used

Step 1:
HGV suspension is raised to its highest point (using
vehicle pneumatic suspension or using other means)

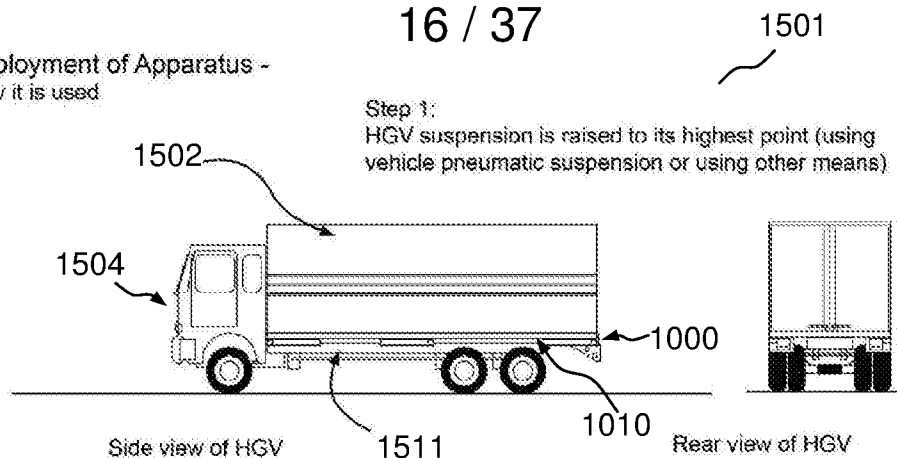 


FIG. 15A

Deployment of Apparatus -
How it is used

Step 2:
Apparatus is pneumatically deployed

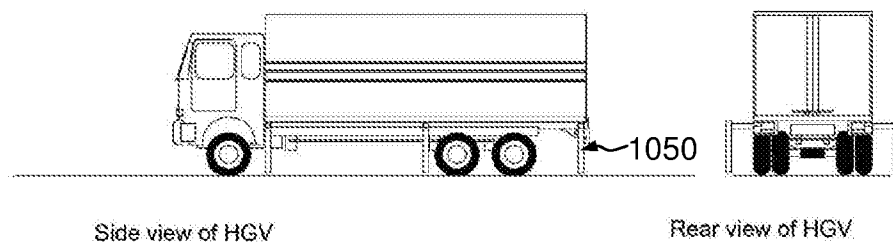 


FIG. 15B

Deployment of Apparatus -
How it is used

Step 3:
HGV body is disconnected from the HGV chassis and
the chassis is lowered to its lowest point

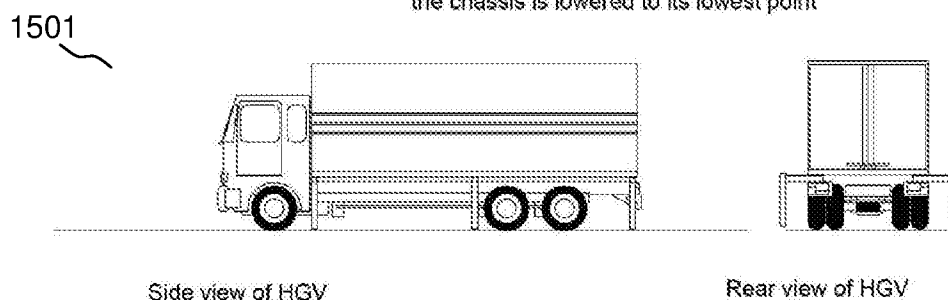 


FIG. 15C

17 / 37

Deployment of Apparatus -
How it is used

Step 4:
HGV Chassis can be driven away leaving the HGV
Body free standing on the apparatus

1501

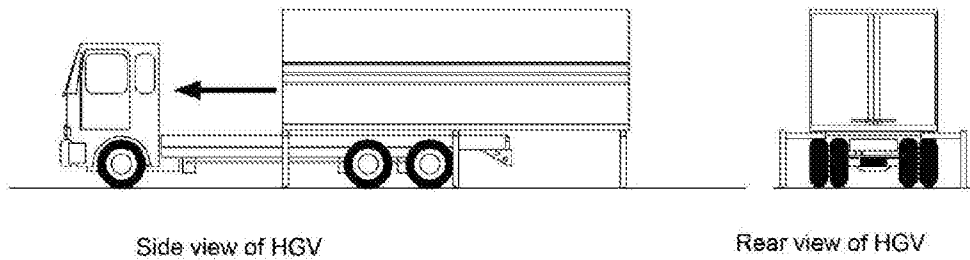 


FIG. 15D

Deployment of Apparatus -
How it is used

Step 5:
HGV Body is now free standing on the apparatus

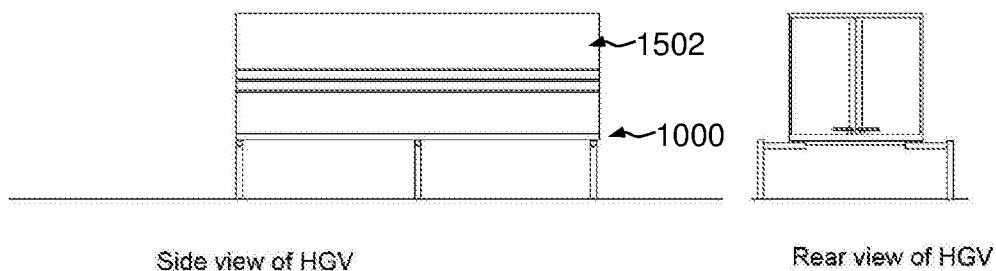 


FIG. 15E

Recovery of Apparatus -
How it is used

Step 6:
HGV Chassis is lowered to its minimum height and
backed up under the HGV Body

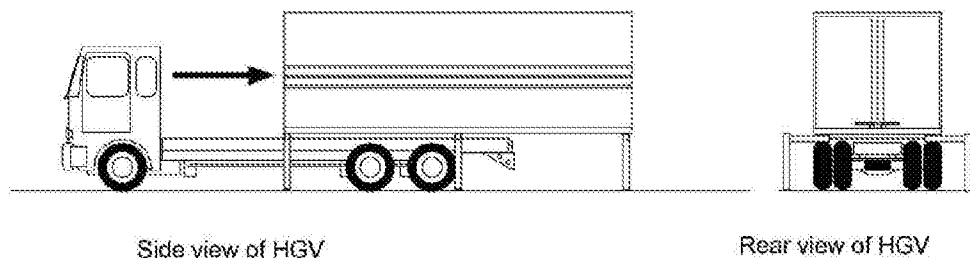 


FIG. 15F

 
18 / 37

Recovery of Apparatus -
How it is used

Step 7:

HGV Chassis is raised to its highest point so that the
apparatus legs no longer touch the ground.

1501

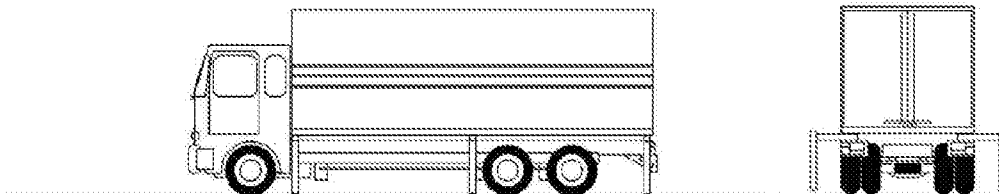

Side view of HGV


FIG. 15G

Rear view of HGV

Recovery of Apparatus -
How it is used

Step 8:

 HGV Body is secured to the HGV Chassis and the
apparatus is retracted

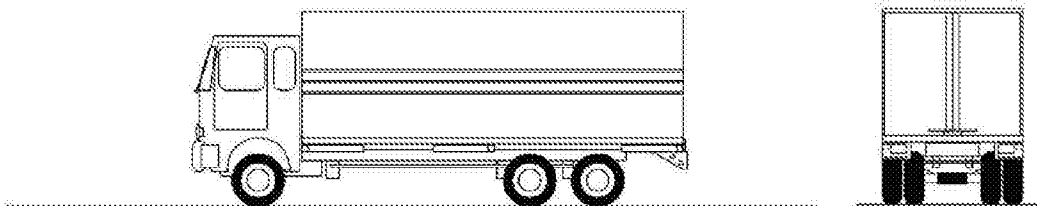

Side view of HGV


FIG. 15H

Rear view of HGV

Recovery of Apparatus -
How it is used

Step 9:

 HGV Chassis is lowered to its normal operating height
and the HGV can now be driven off as a single unit.

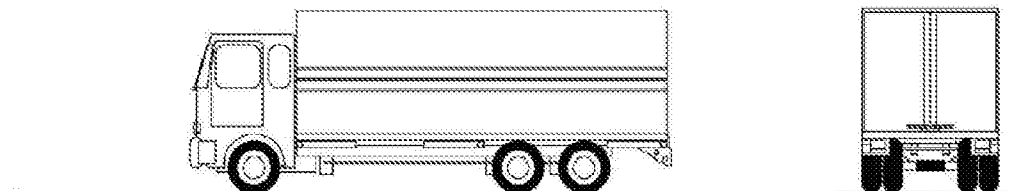

Side view of HGV

FIG. 15I

Rear view of HGV

19 / 37

FIG. 16A

System in fully stowed and retracted position

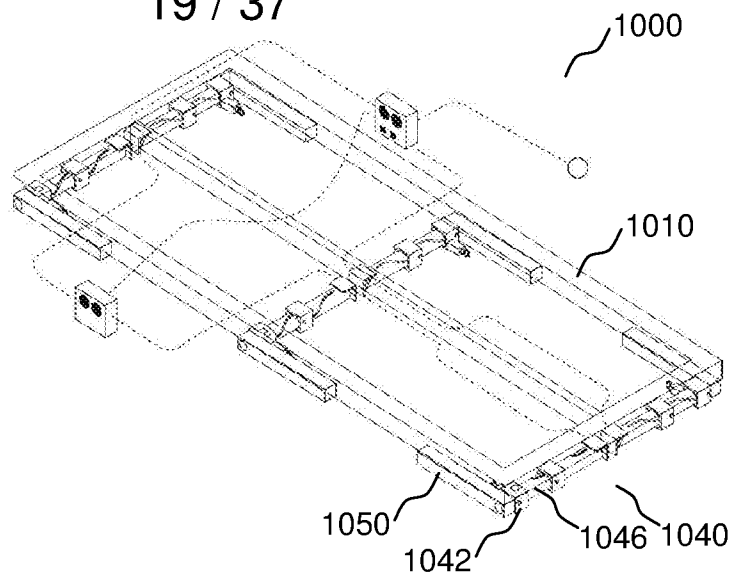 


FIG. 16B

System with outriggers fully deployed and legs rotated to full down and locked position

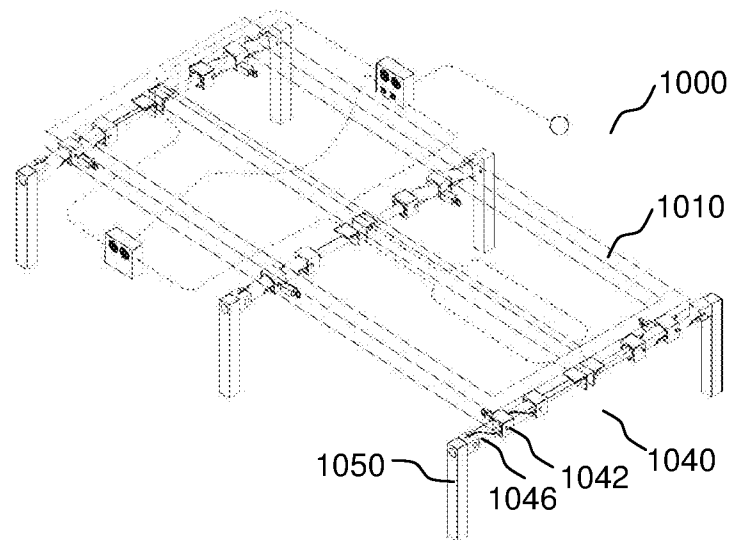
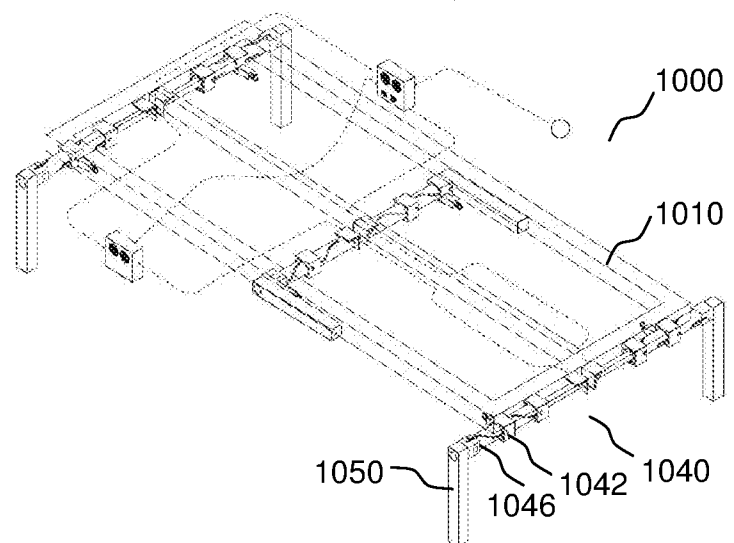 


FIG. 16C

System with four outriggers deployed and legs rotated to full down and locked position, two middle legs remain stowed - based on user selection

 

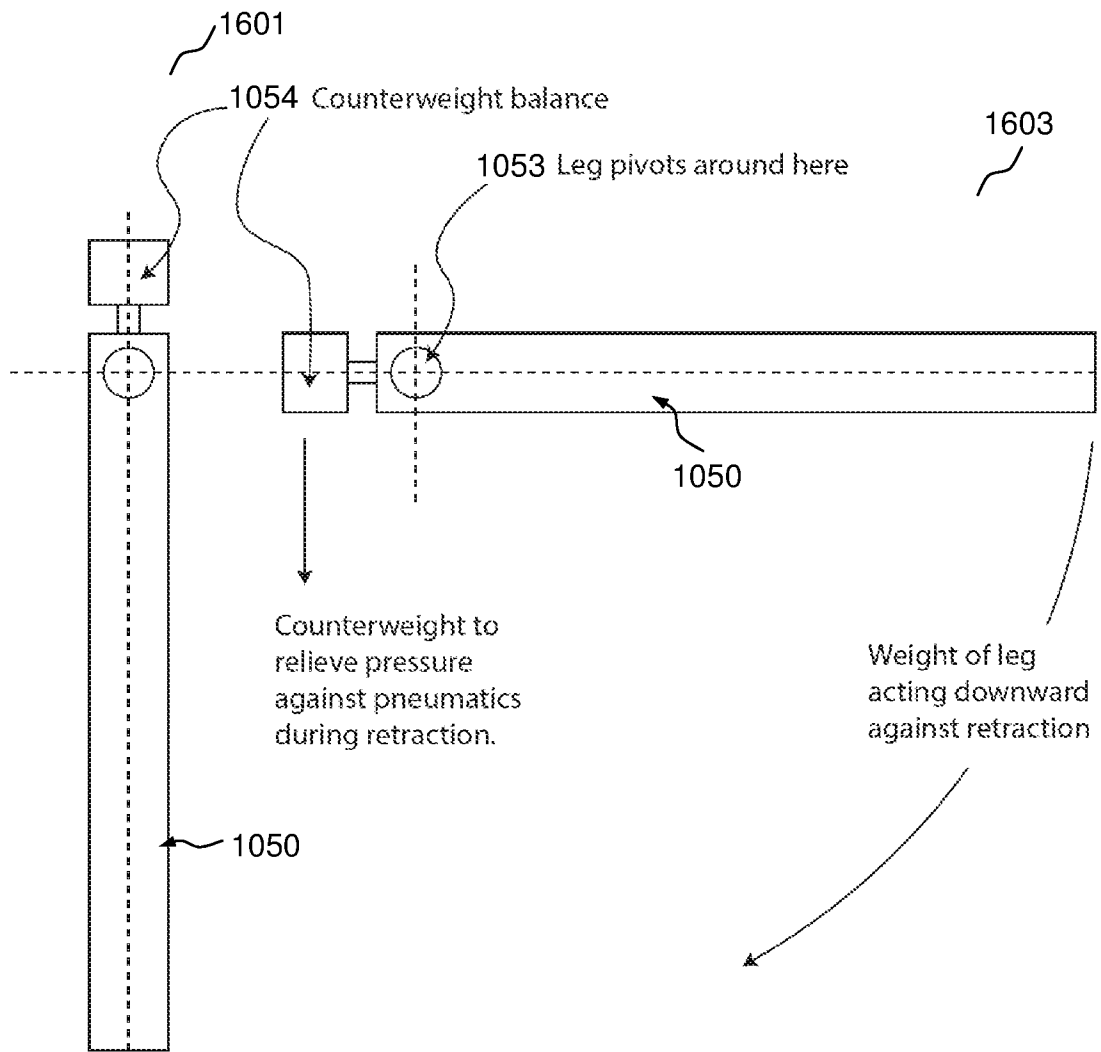 


FIG. 16D

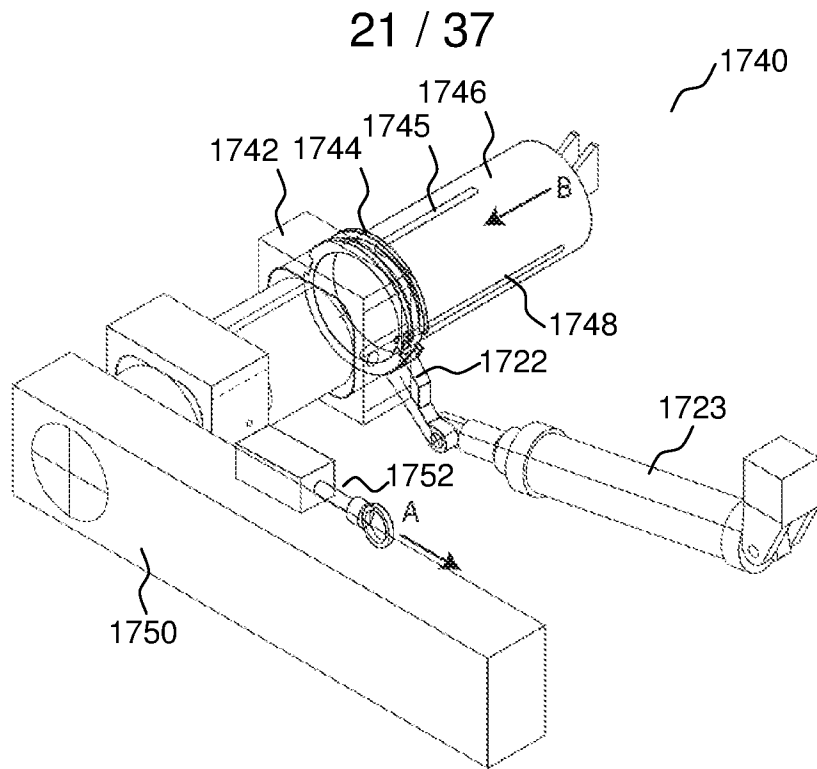 


FIG. 17A

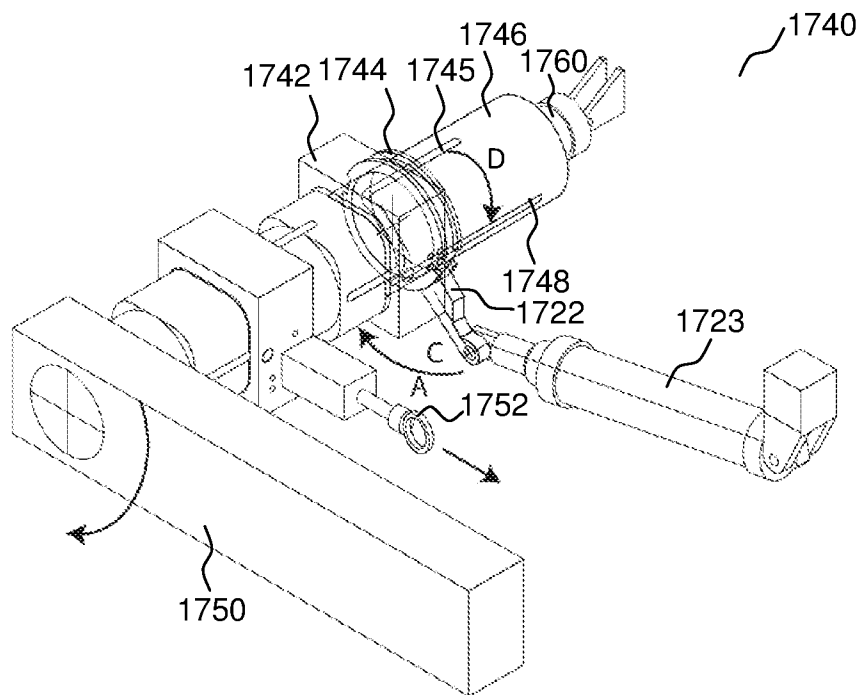 


FIG. 17B

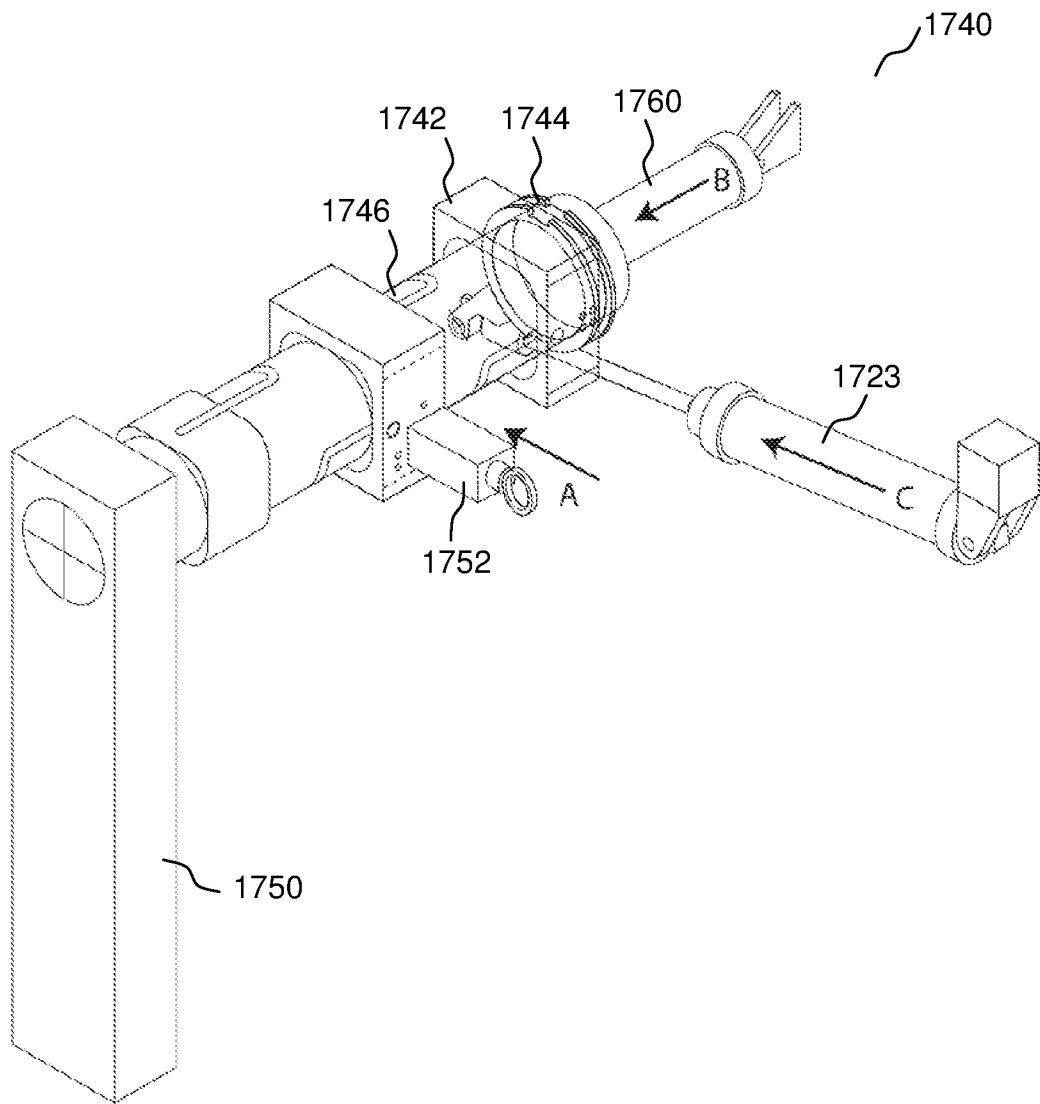 


FIG. 17C

23 / 37

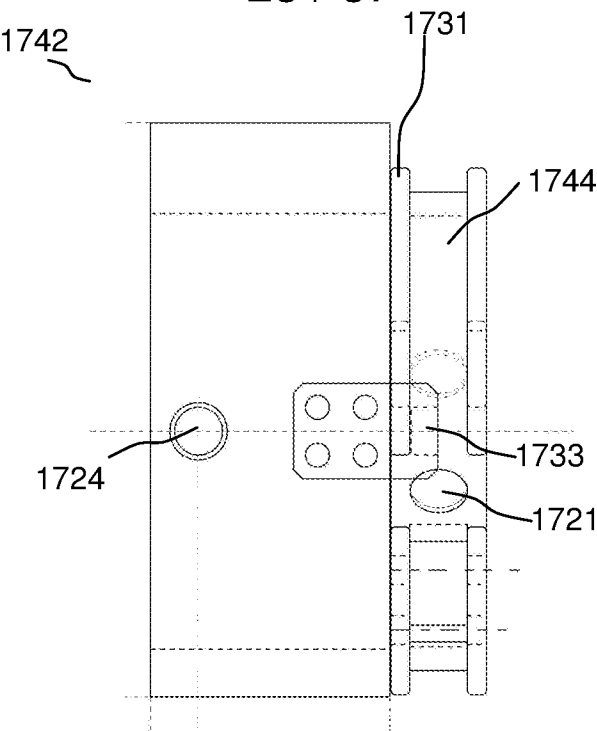 


FIG. 17D

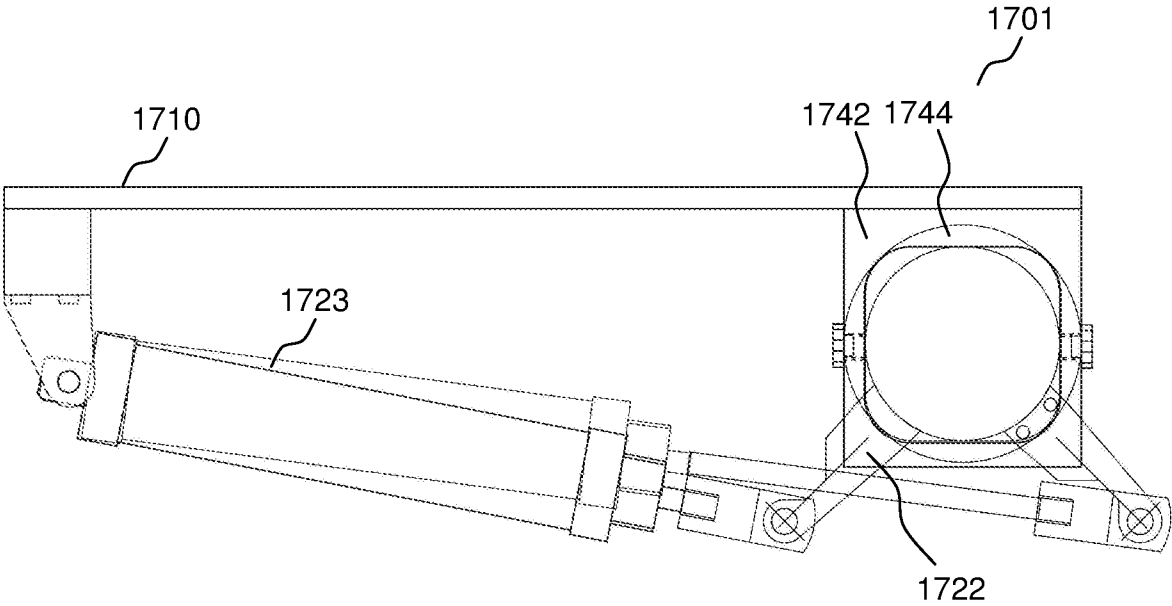 


FIG. 17E

24 / 37

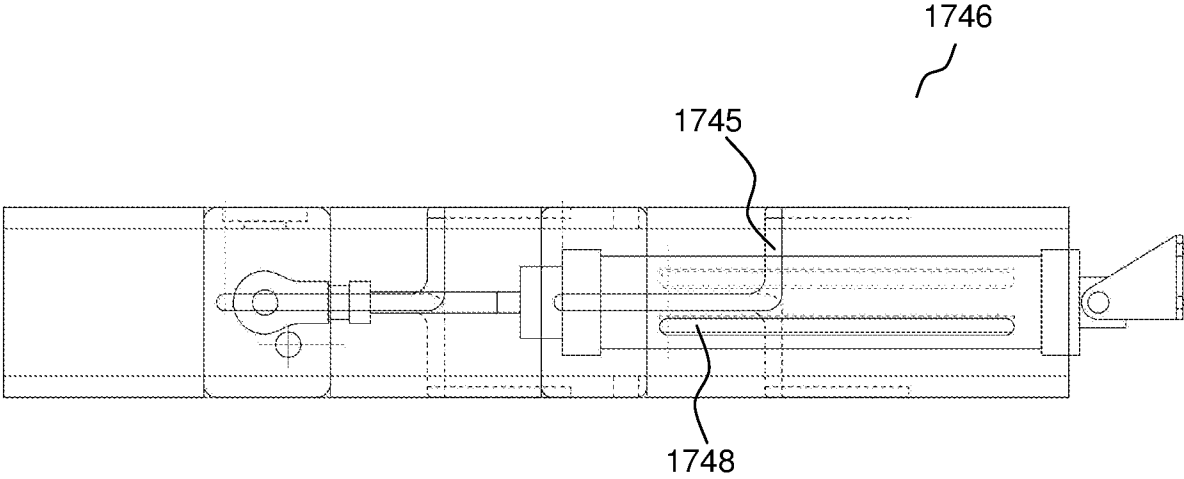 


FIG. 17F

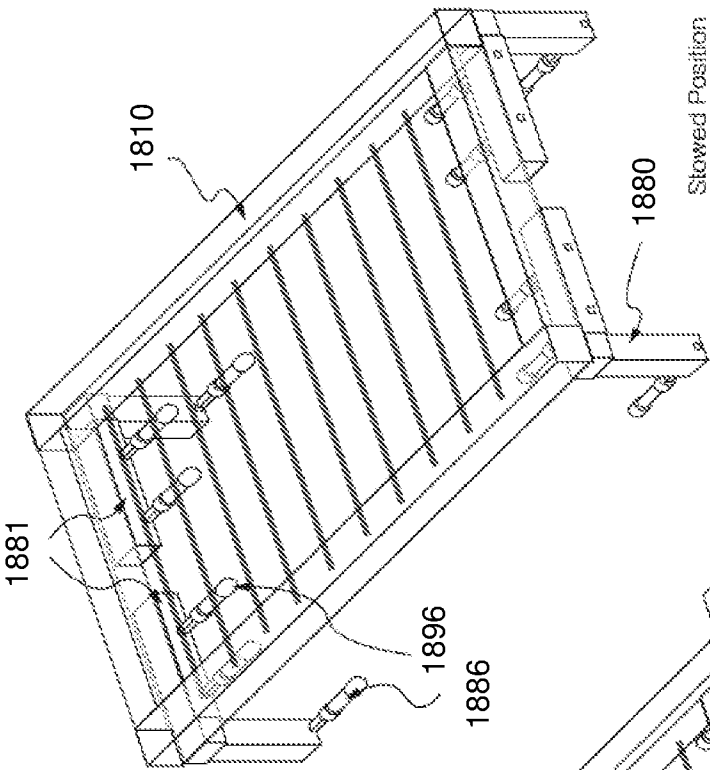 


FIG. 18B

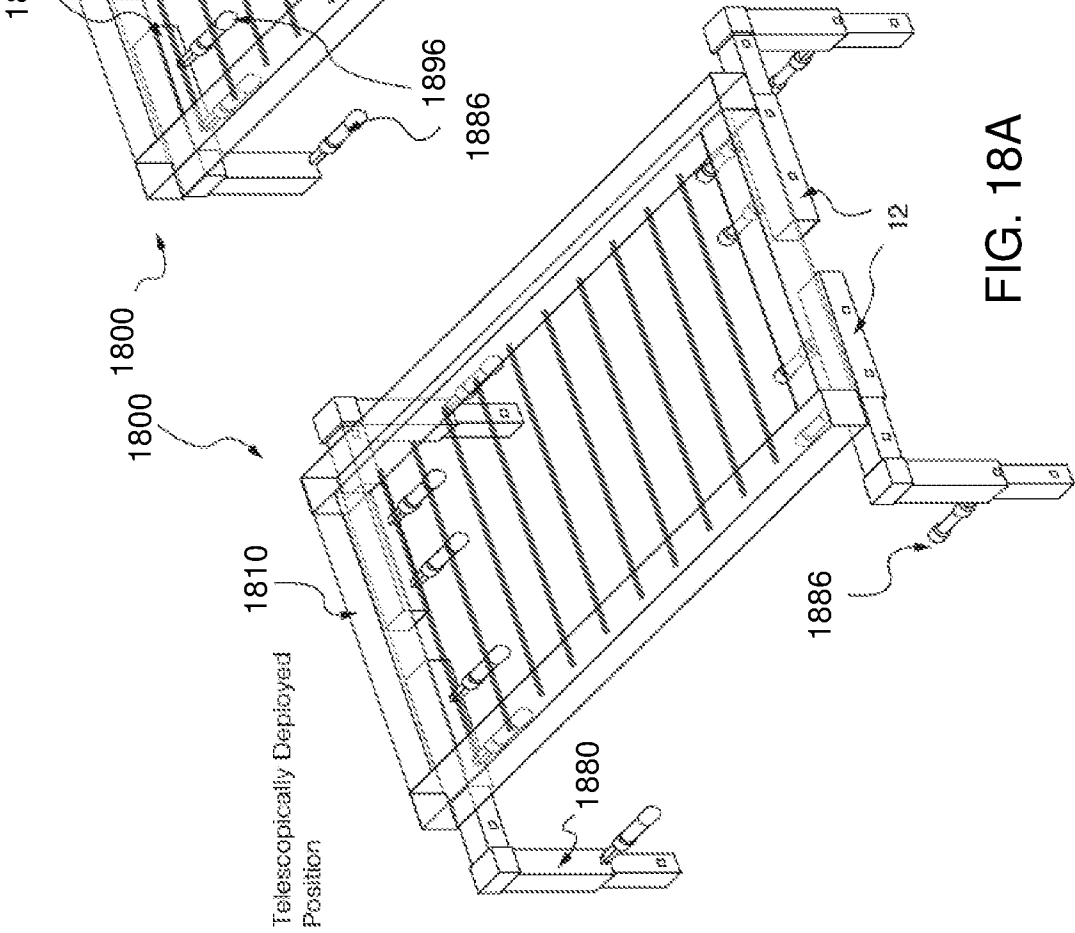 


FIG. 18A

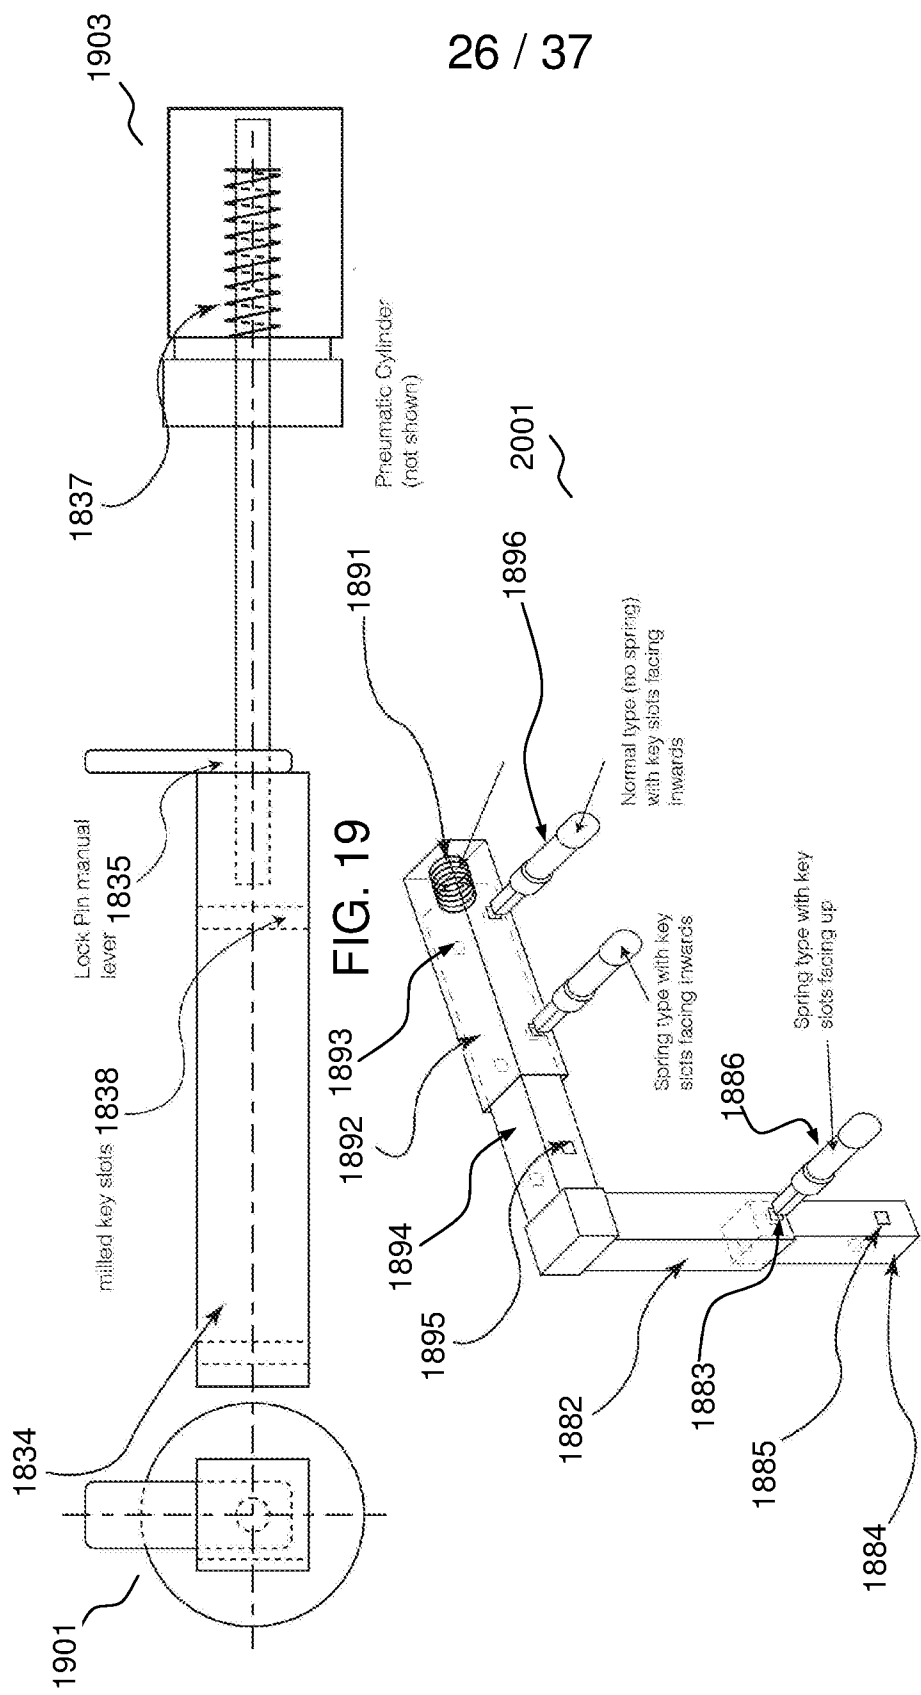
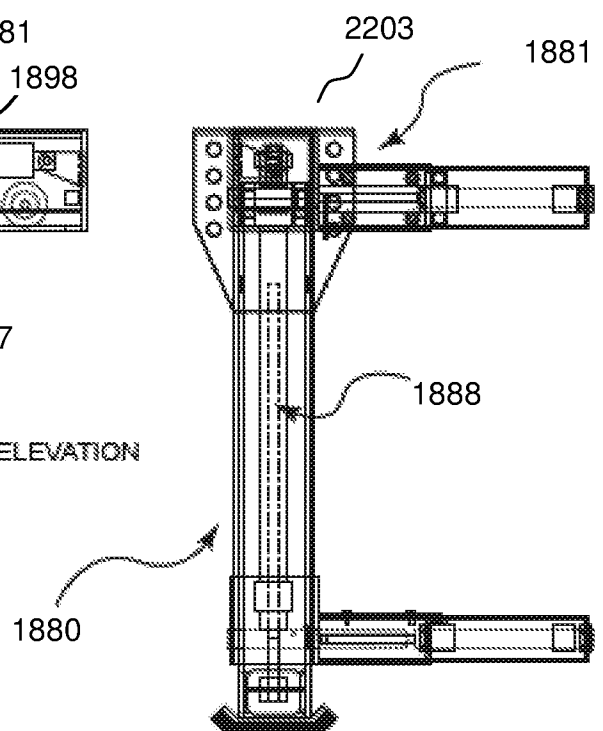 
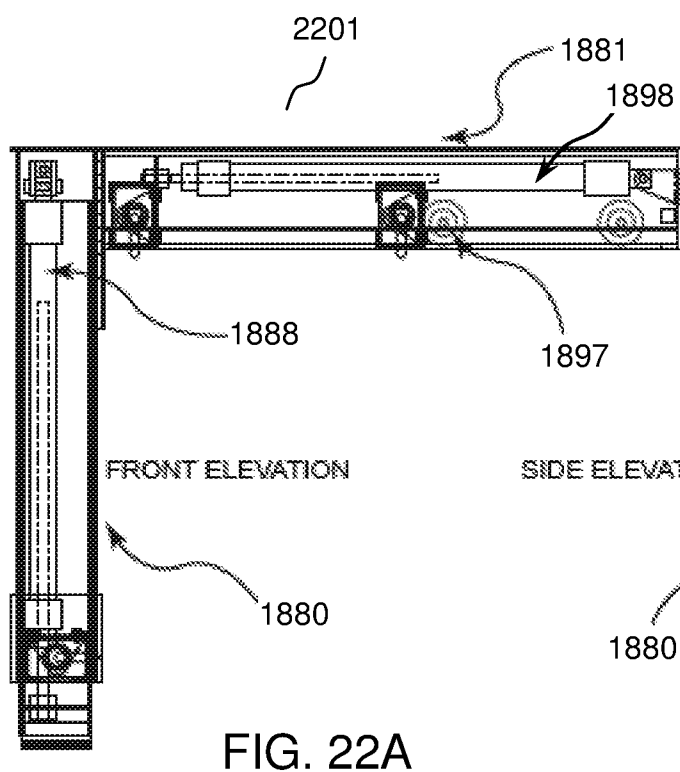 
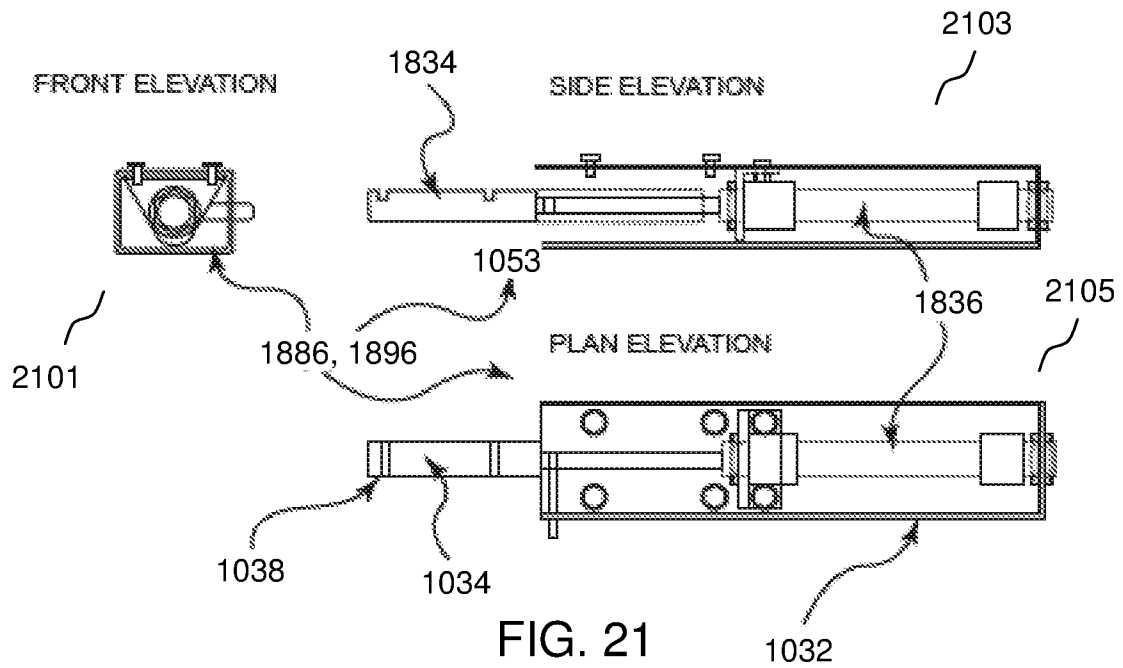 


FIG. 20

27 / 37

 

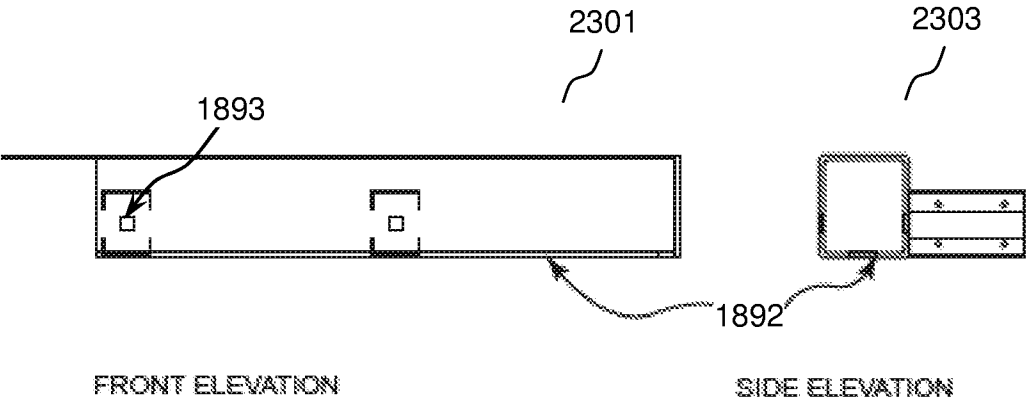 


FIG. 23

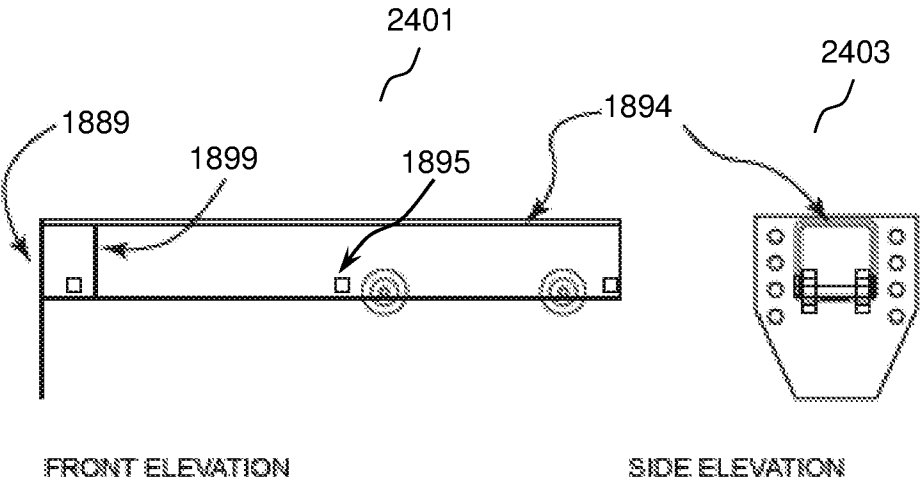 


FIG. 24

29 / 37

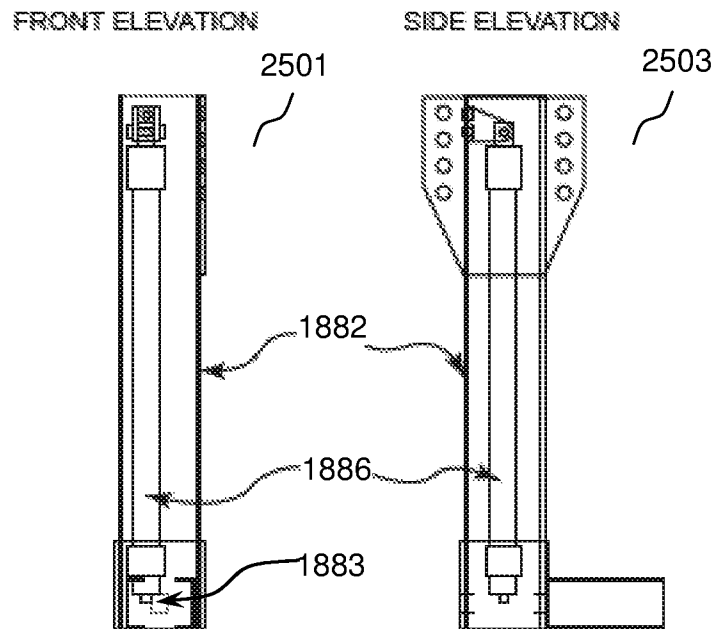 


FIG. 25


 
 
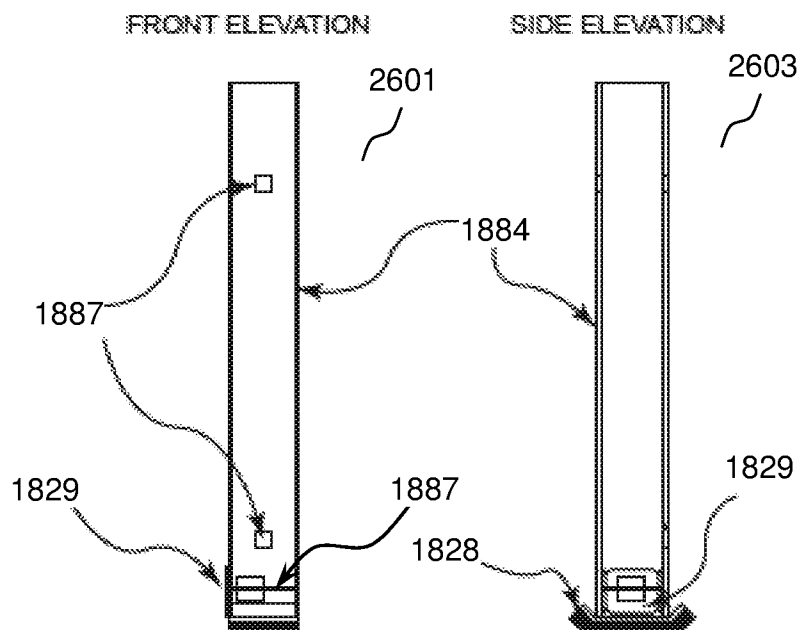 


FIG. 26

 30 / 37

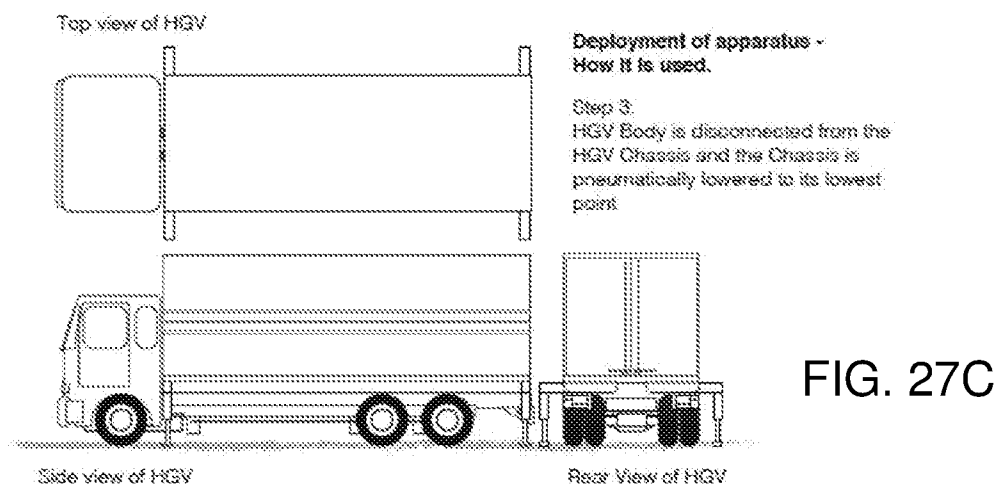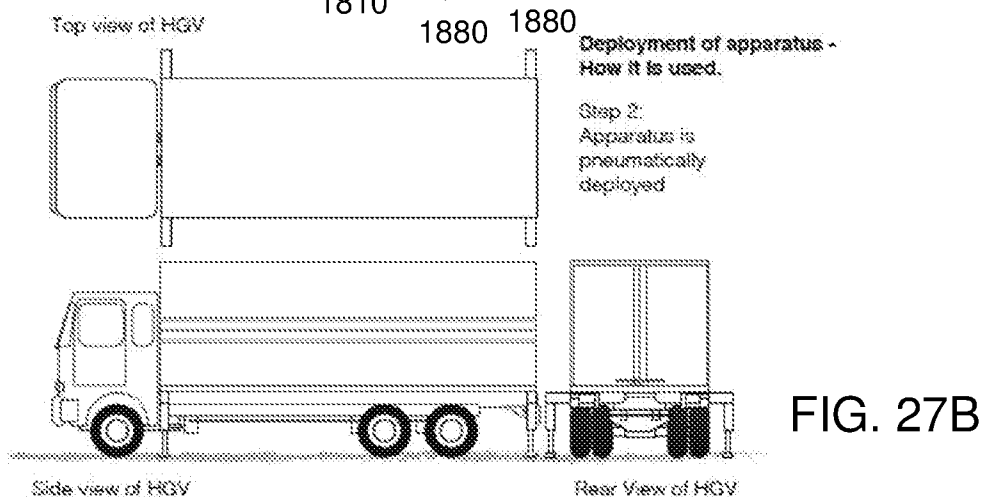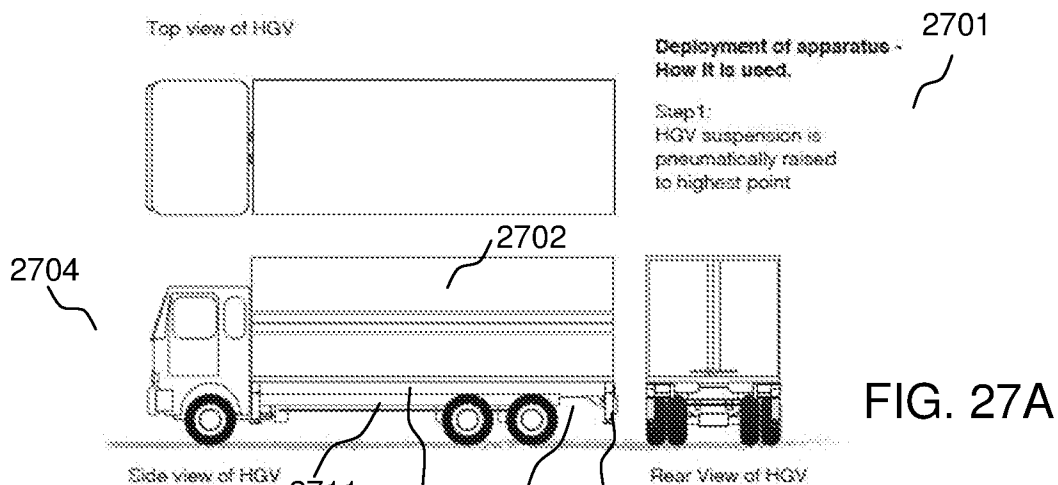

31 / 37

2701

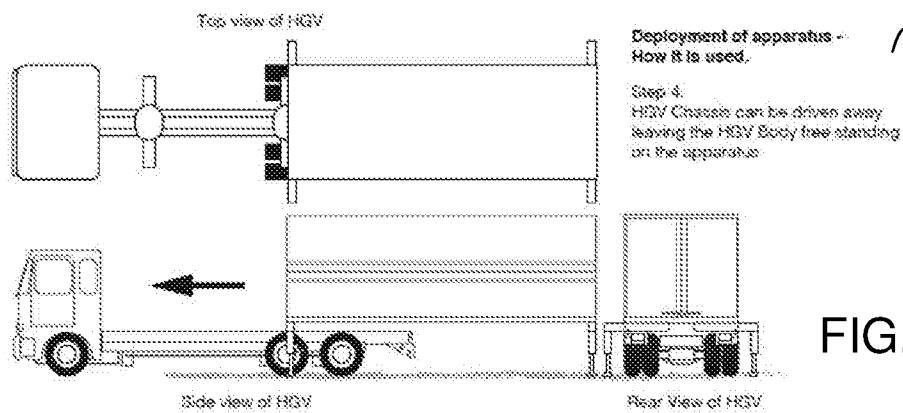 


FIG. 27D

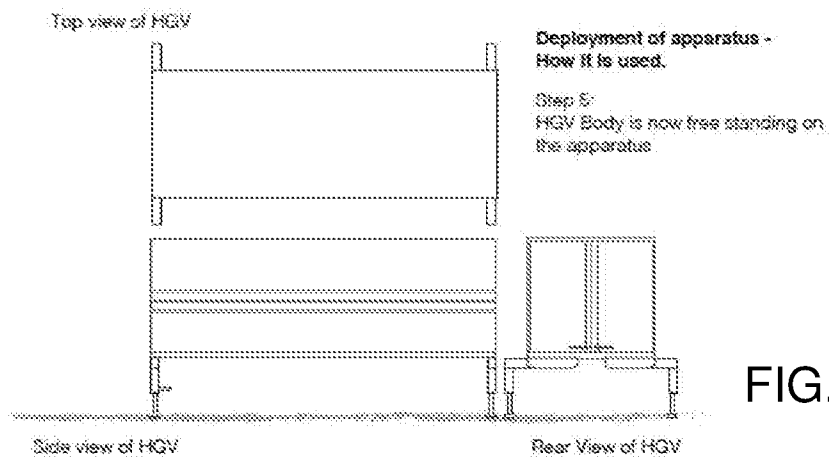 


FIG. 27E


 
 
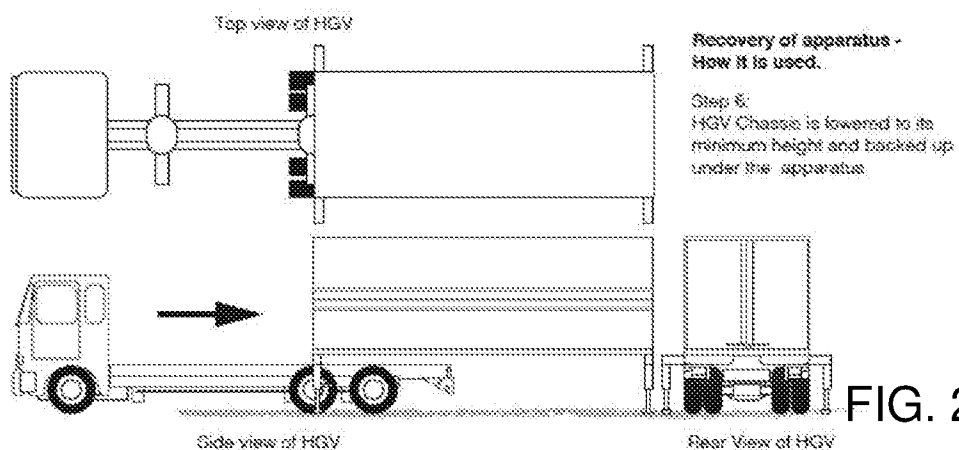 



FIG. 27F

32 / 37

 2701

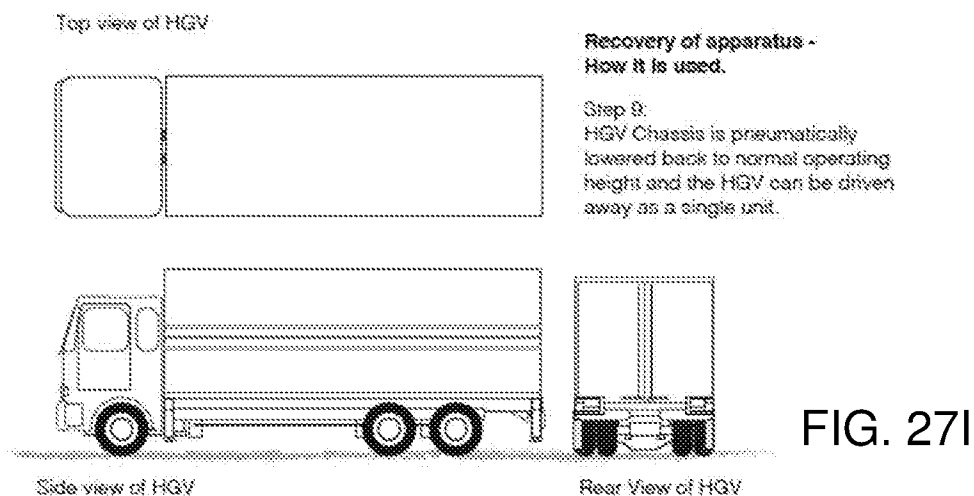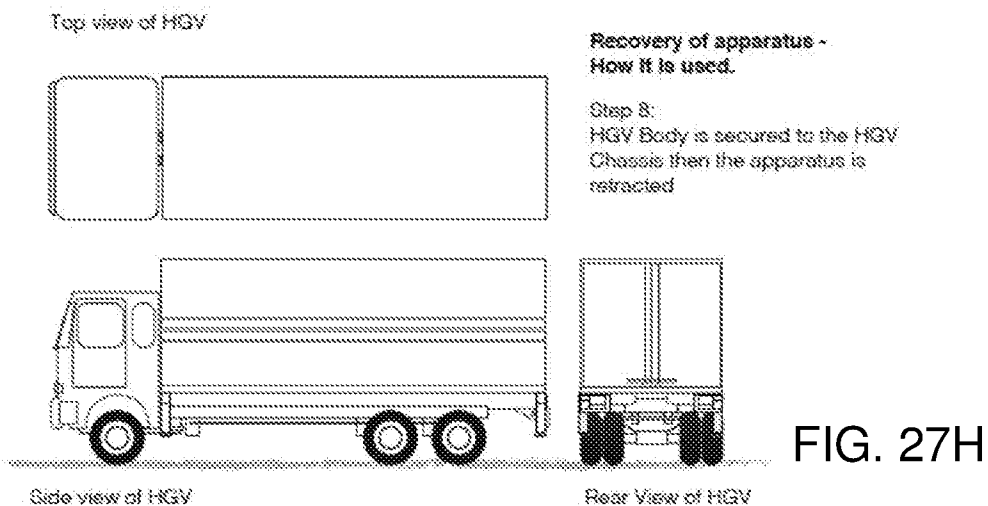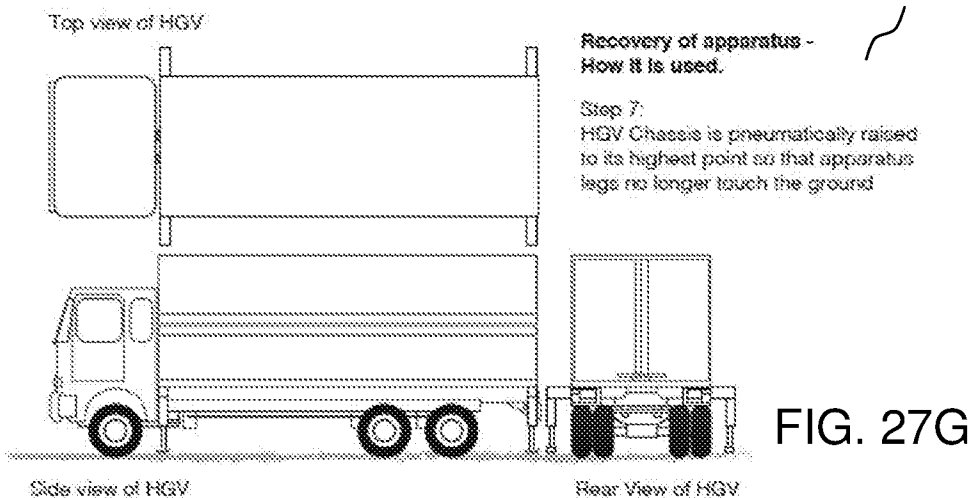

33 / 37

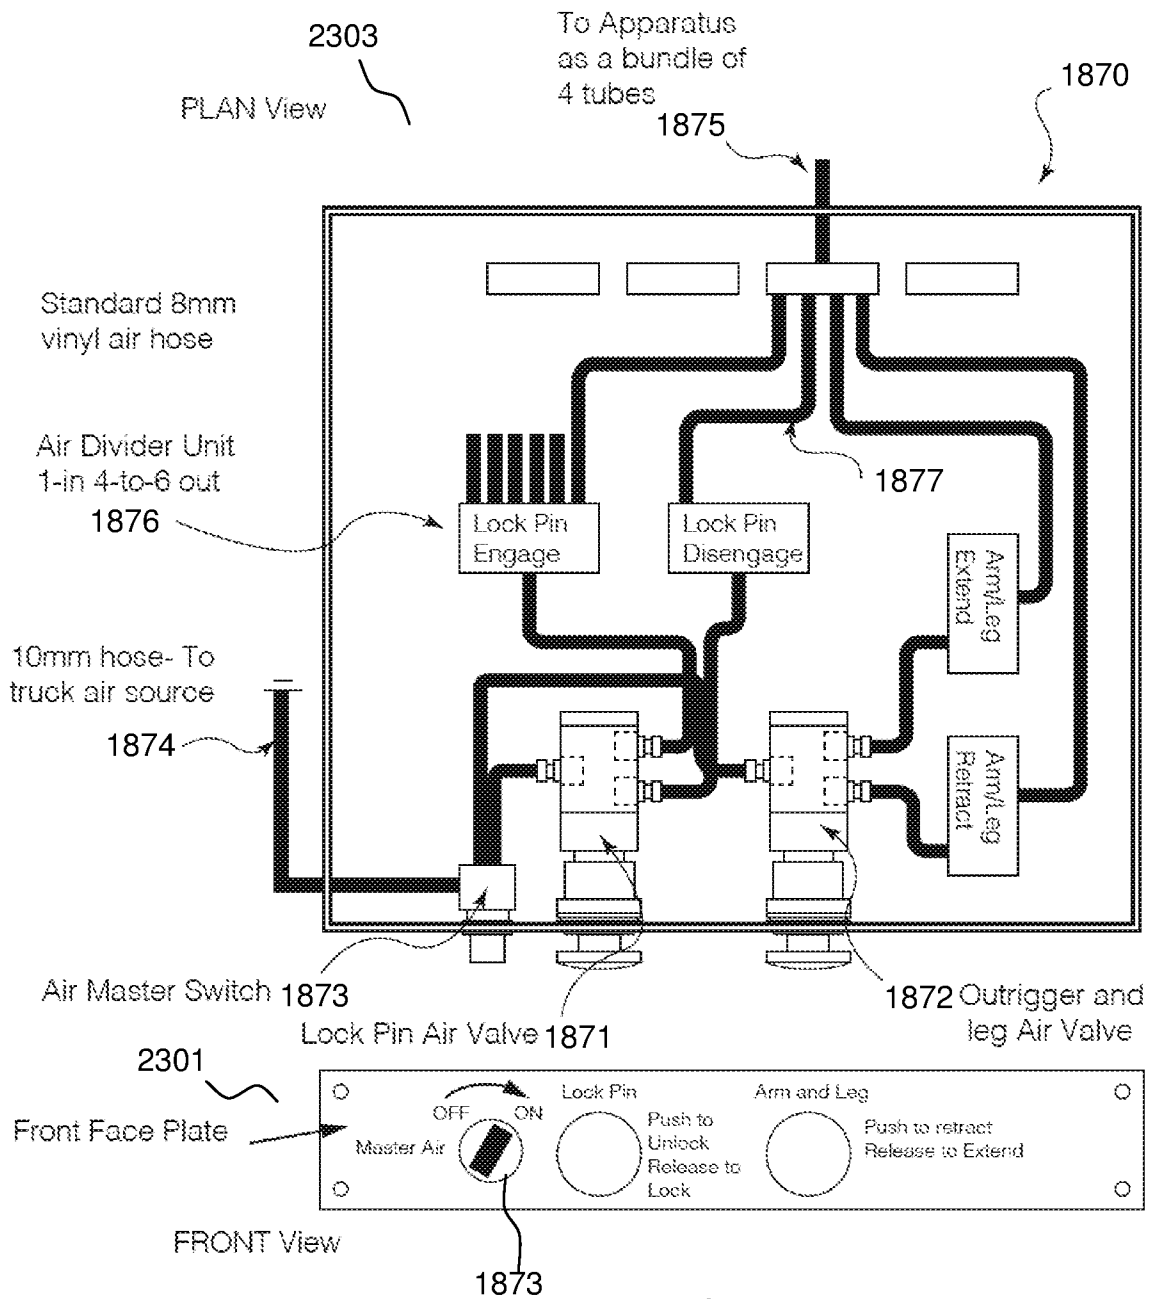 

34 / 37

Locking Pin Mechanism
viewed from above

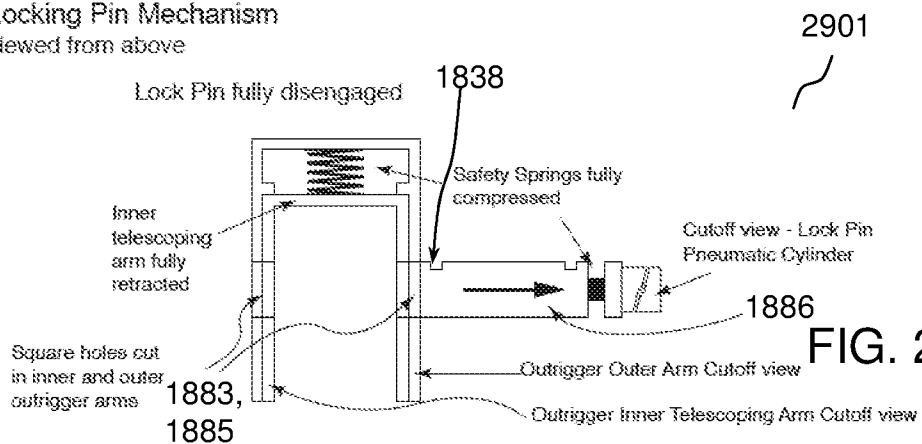 


FIG. 29A

Lock Pin Moving In and out of Square Holes

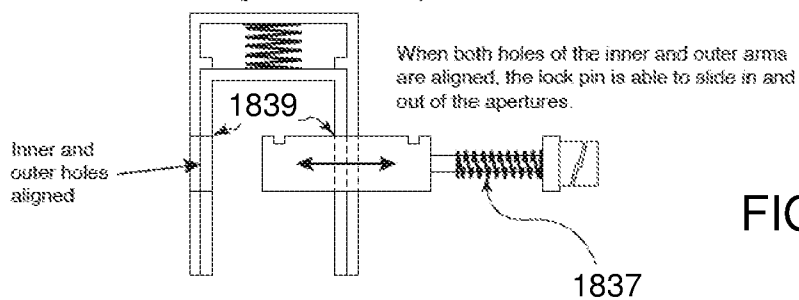 


FIG. 29B

Lock Pin pneumatic piston fully extended

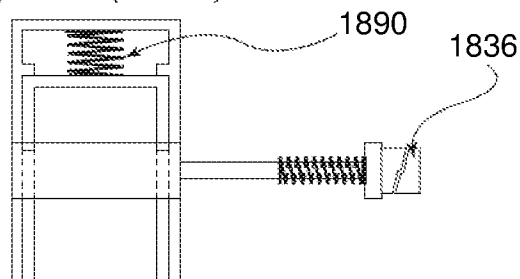 


FIG. 29C

Safety spring / pneumatic action causes the Lock-Pin to lock in place

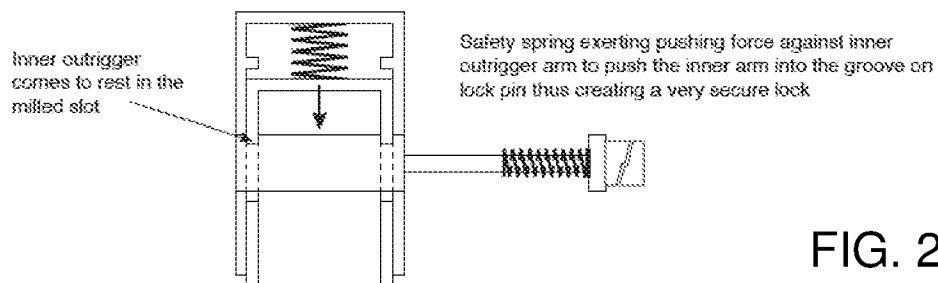 


FIG. 29D

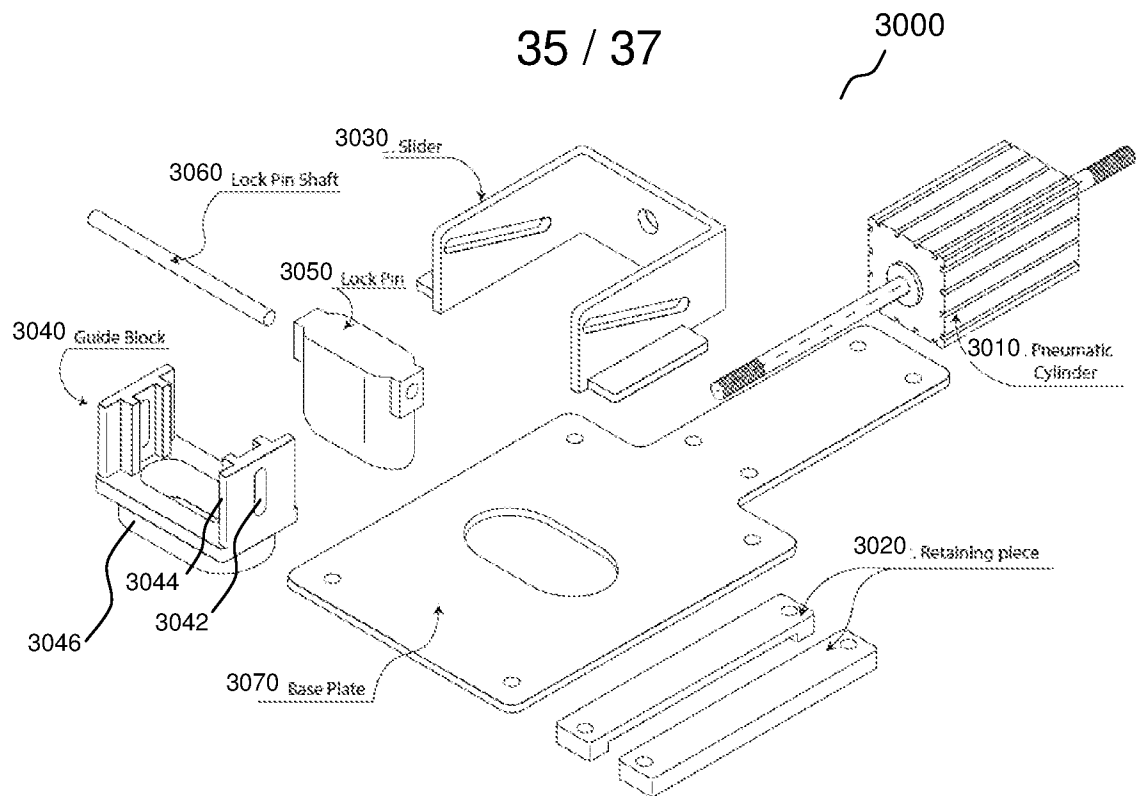 


FIG. 30A

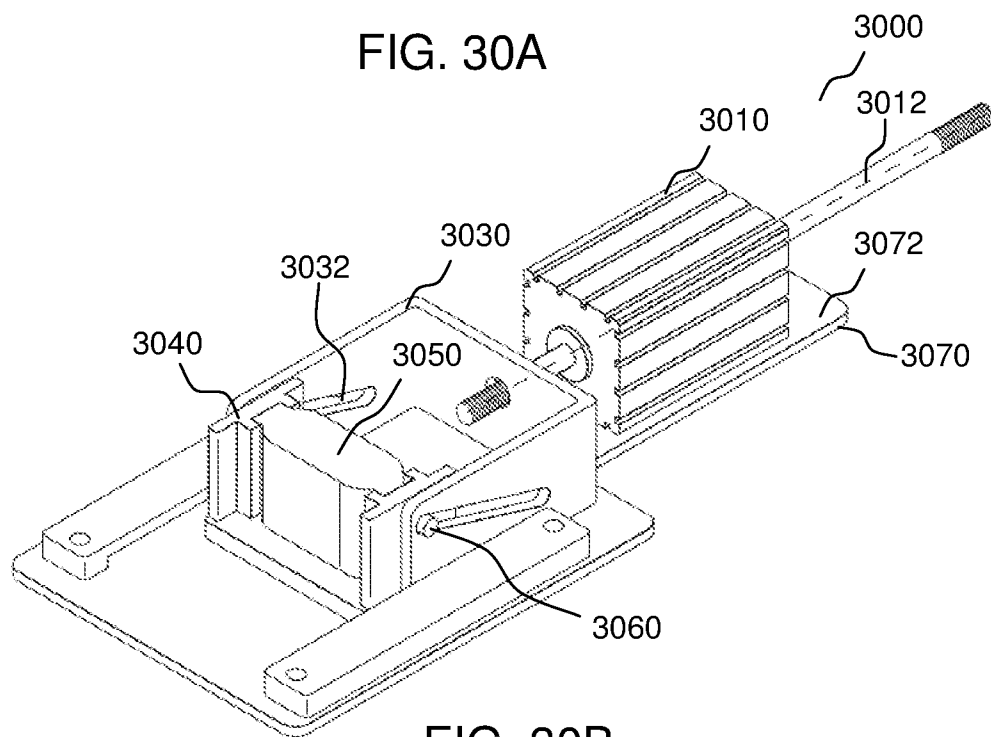 


FIG. 30B

36 / 37

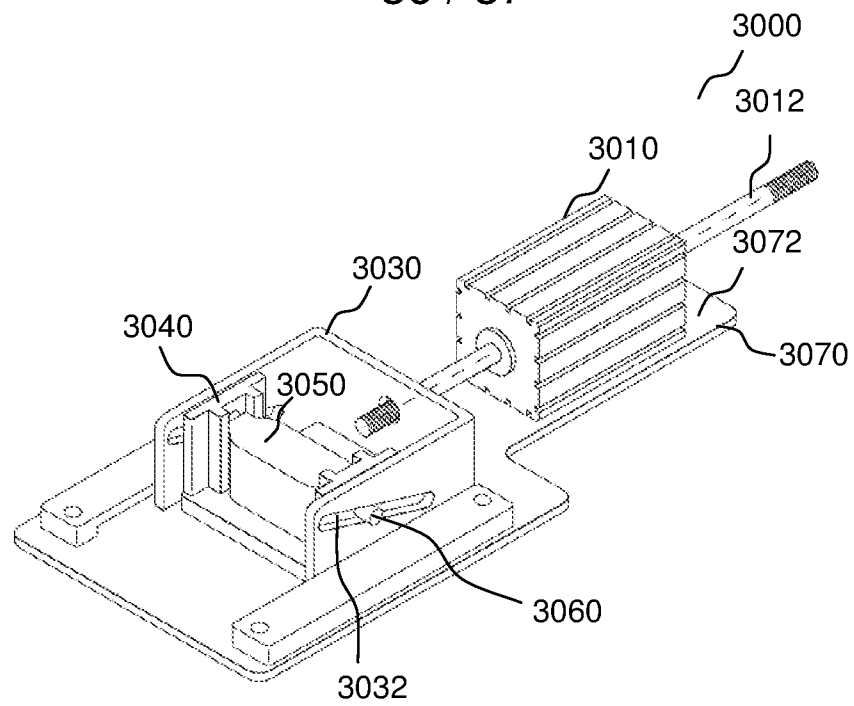 


FIG. 30C

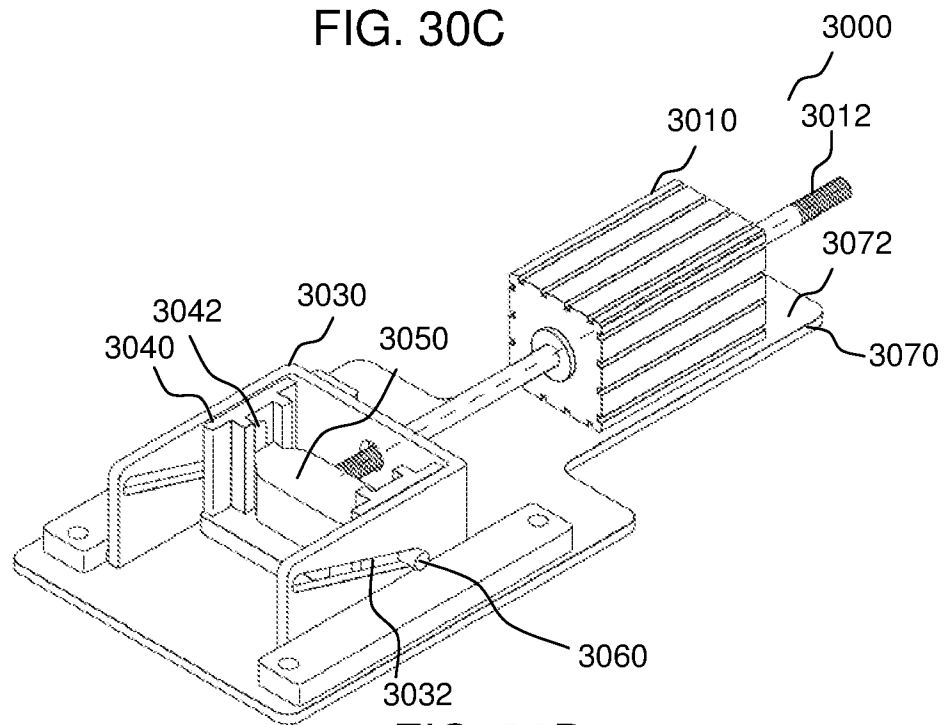 


FIG. 30D

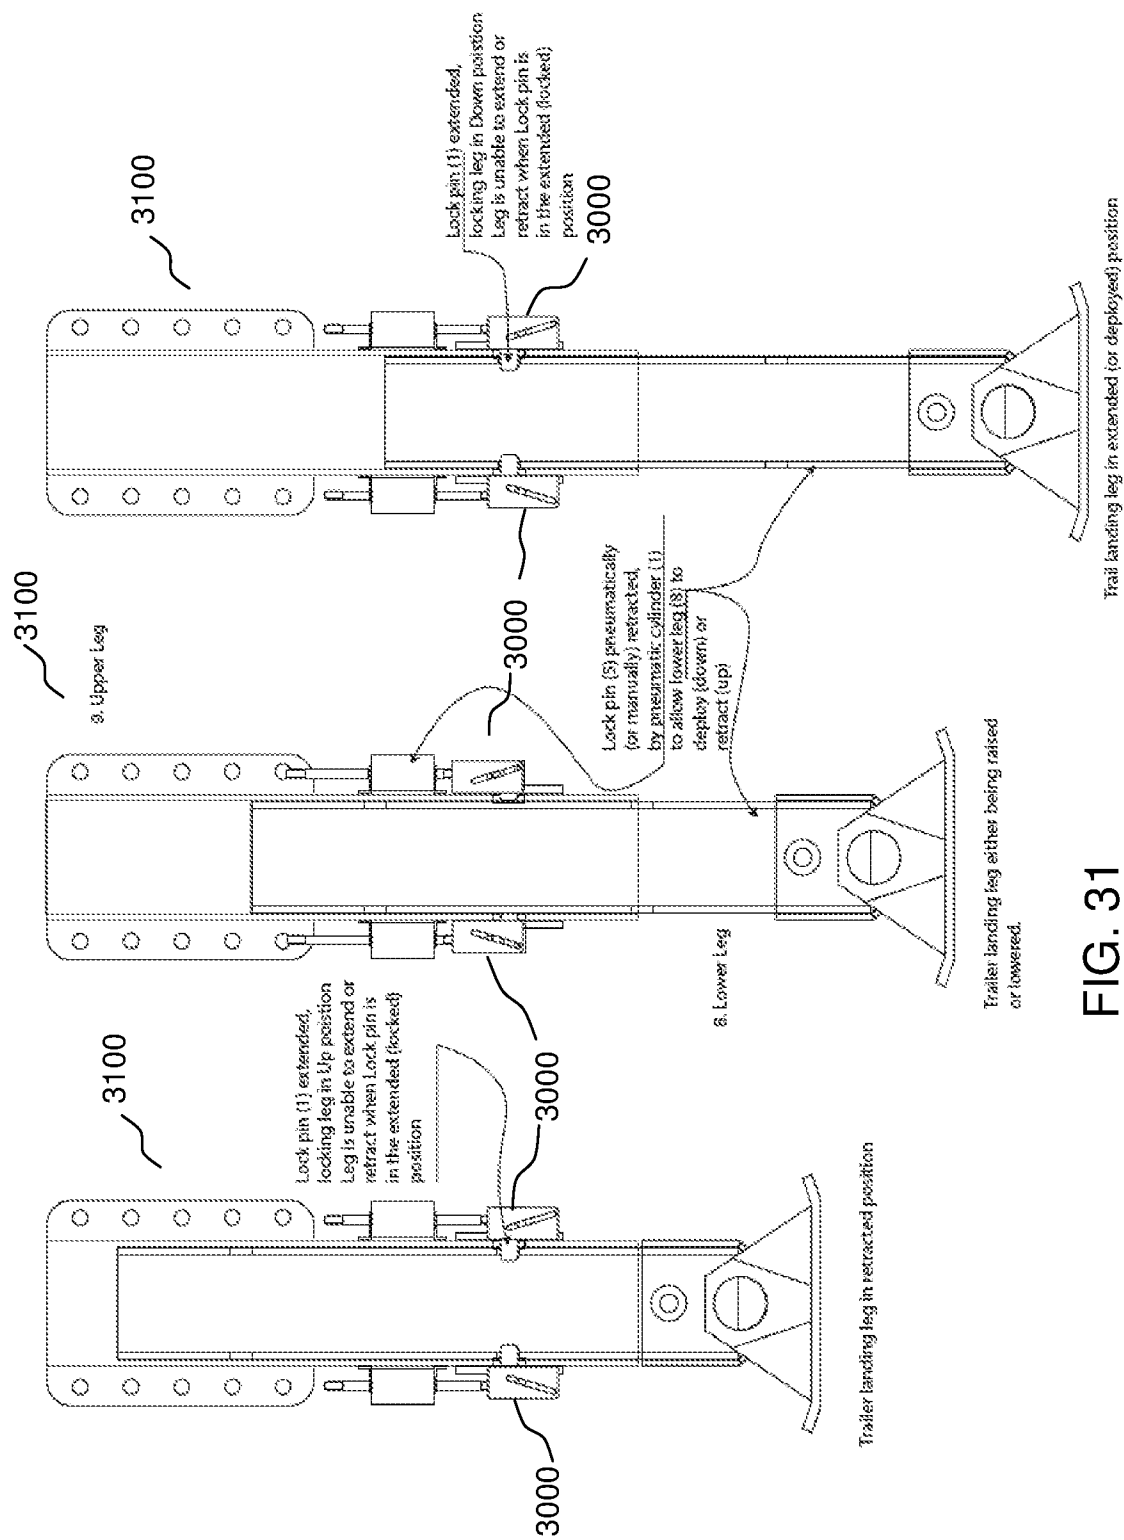 


FIG. 31