


FIG.1

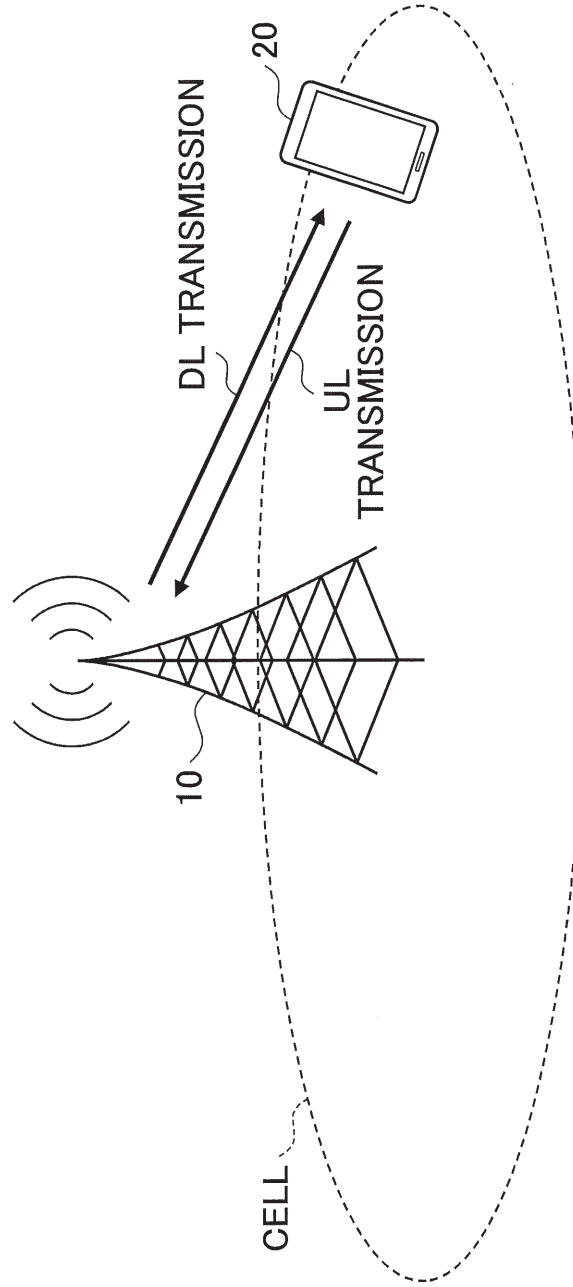

2/9
FIG.2


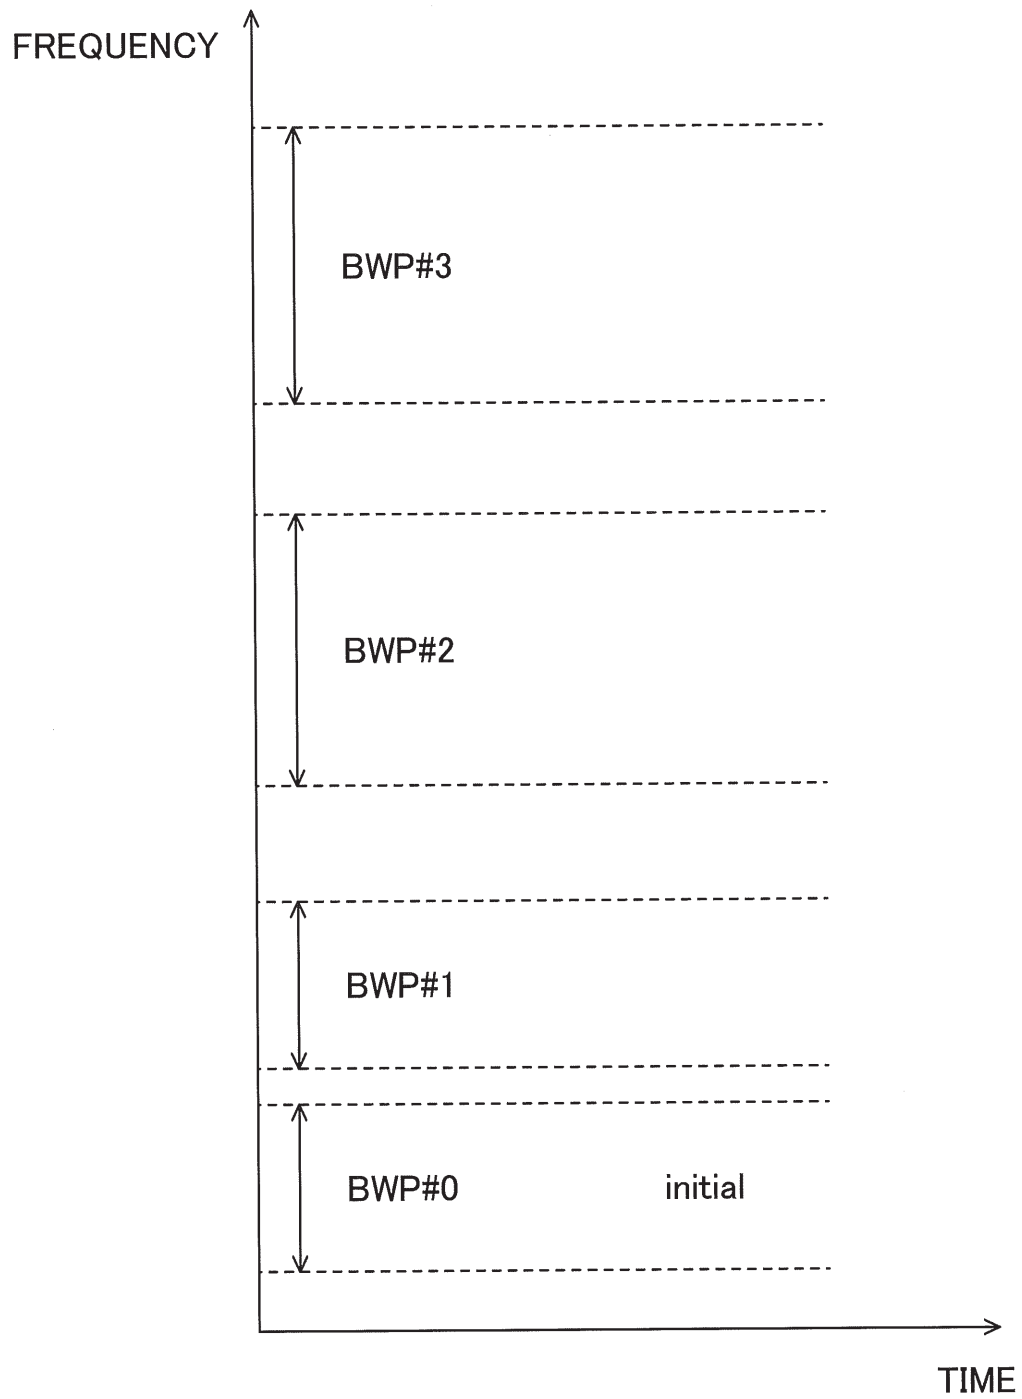


FIG.3

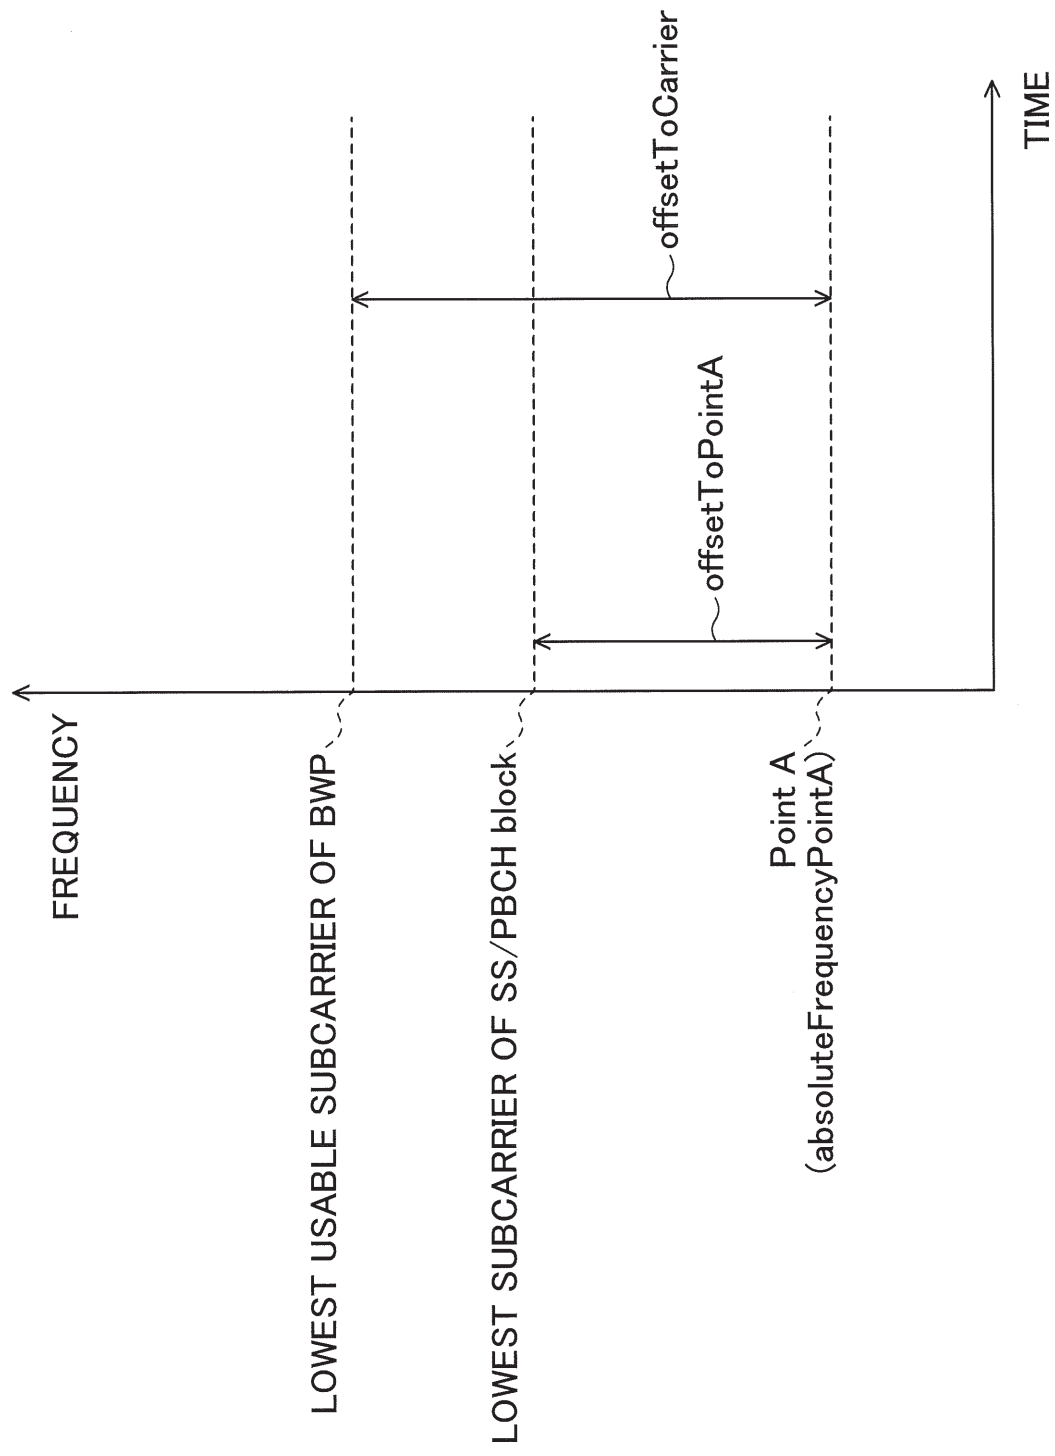

4/9
FIG.4

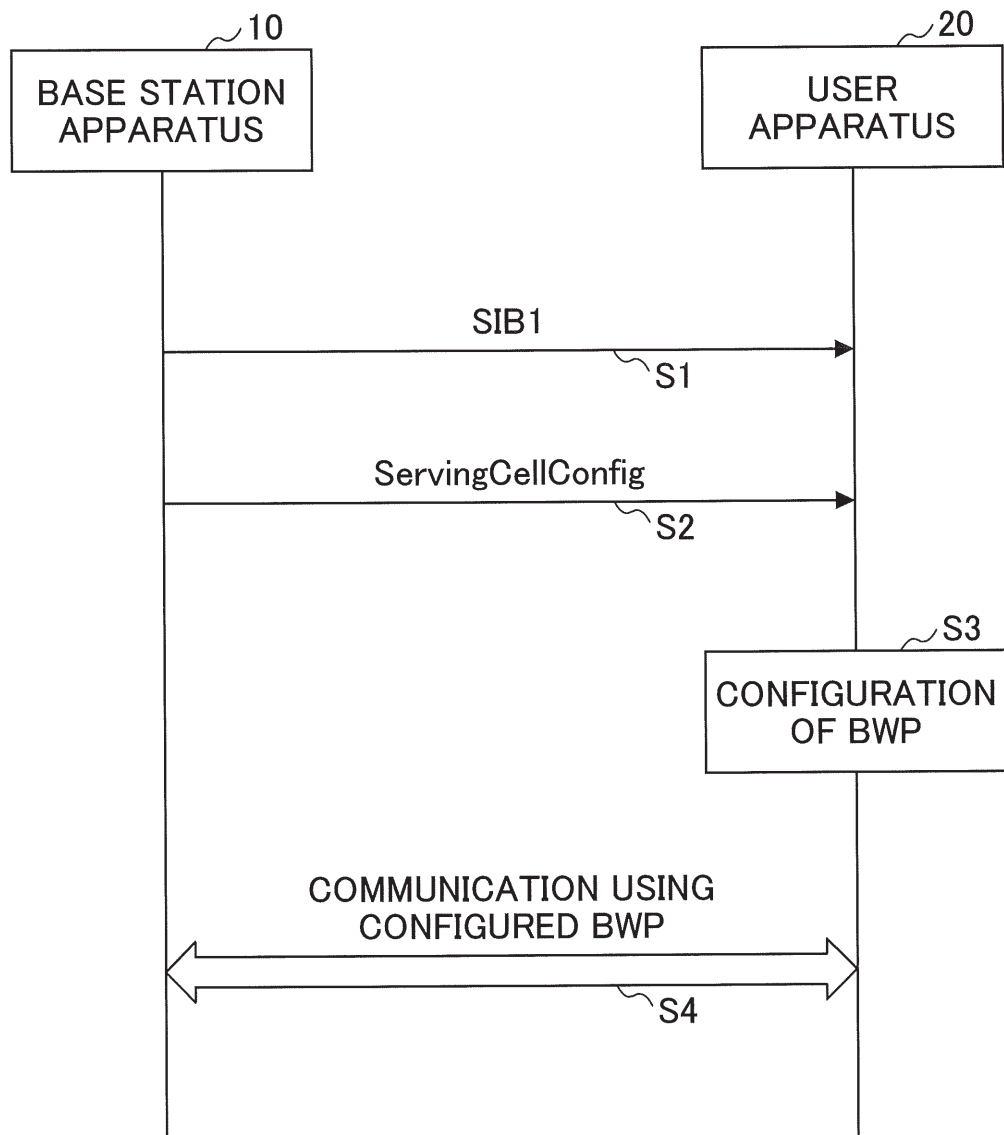


FIG.5

ServingCellConfig field descriptions	
downlinkChannelBW-PerSCS-List	A set of UE specific carrier configurations for different subcarrier spacings (numerologies). Defined in relation to Point A. Corresponds to L1 parameter 'offset-pointA-set' (see 38.211, clause FFS_clause). If absent, UE uses the configuration indicated in <i>scs-SpecificCarrierList</i> in <i>DownlinkConfigCommon / DownlinkConfigCommonSIB</i>. The UE ignores <i>offsetToCarrier</i> present in this list and uses <i>offsetToCarrier</i> indicated in <i>scs-SpecificCarrierList</i> in <i>DownlinkConfigCommon / DownlinkConfigCommonSIB</i>.

FIG.6

ServingCellConfig field descriptions	
downlinkChannelBW-PerSCS-List	A set of UE specific carrier configurations for different subcarrier spacings (numerologies). Defined in relation to Point A. Corresponds to L1 parameter 'offset-pointA-set' (see 38.211, clause FFS_clause). If absent, UE uses the configuration indicated in <i>scs-SpecificCarrierList</i> in <i>DownlinkConfigCommon</i> / <i>DownlinkConfigCommonSIB</i>. <i>offsetToCarrier</i> present in this list is not applicable. <i>offsetToCarrier</i> indicated in <i>scs-SpecificCarrierList</i> in <i>DownlinkConfigCommon</i> / <i>DownlinkConfigCommonSIB</i> is applicable.

FIG.7

ServingCellConfig field descriptions	
downlinkChannelBW-PerSCS-List	A set of UE specific carrier configurations for different subcarrier spacings (numerologies). Defined in relation to Point A. Corresponds to L1 parameter 'offset-pointA-set' (see 38.211, clause FFS_clause). If absent, UE uses the configuration indicated in <i>scs-SpecificCarrierList</i> in <i>DownlinkConfigCommon / DownlinkConfigCommonSIB</i>. The value of <i>offsetToCarrier</i> present in this list shall be the same as in <i>scs-SpecificCarrierList</i> in <i>DownlinkConfigCommon / DownlinkConfigCommonSIB</i>.

8/9
FIG.8


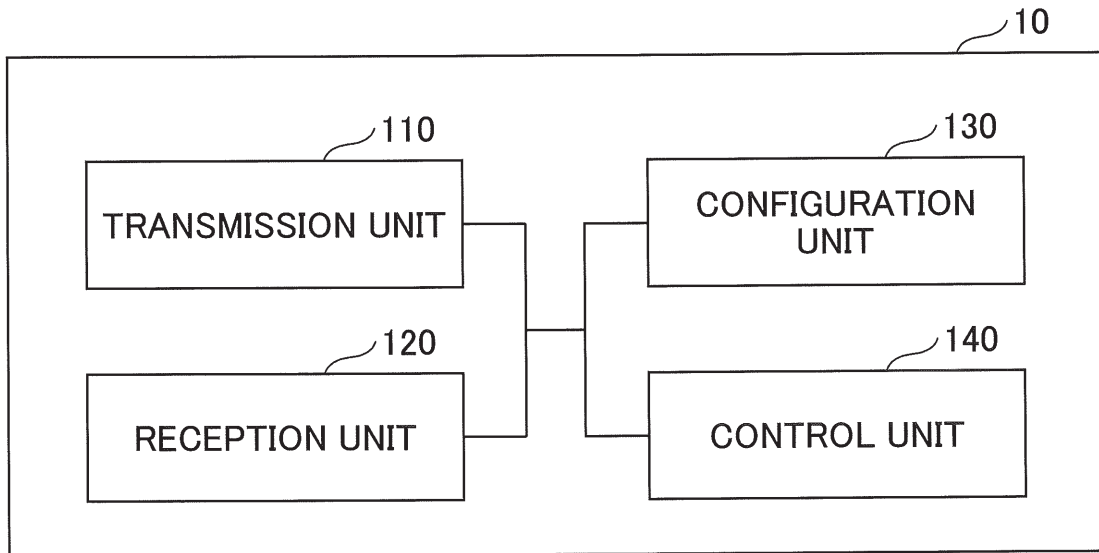


FIG.9



9/9
FIG.10

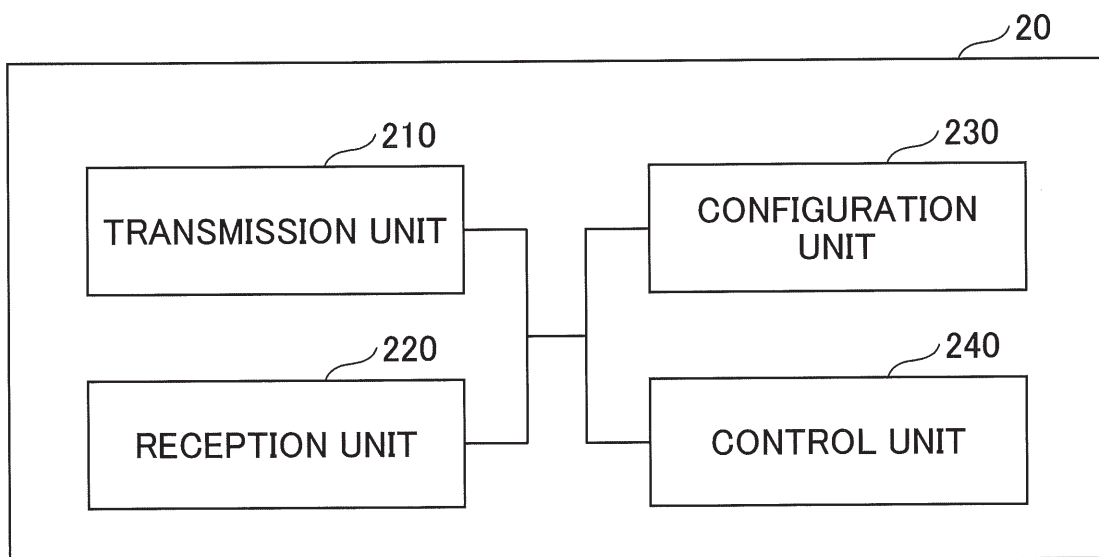