

FIG. 1

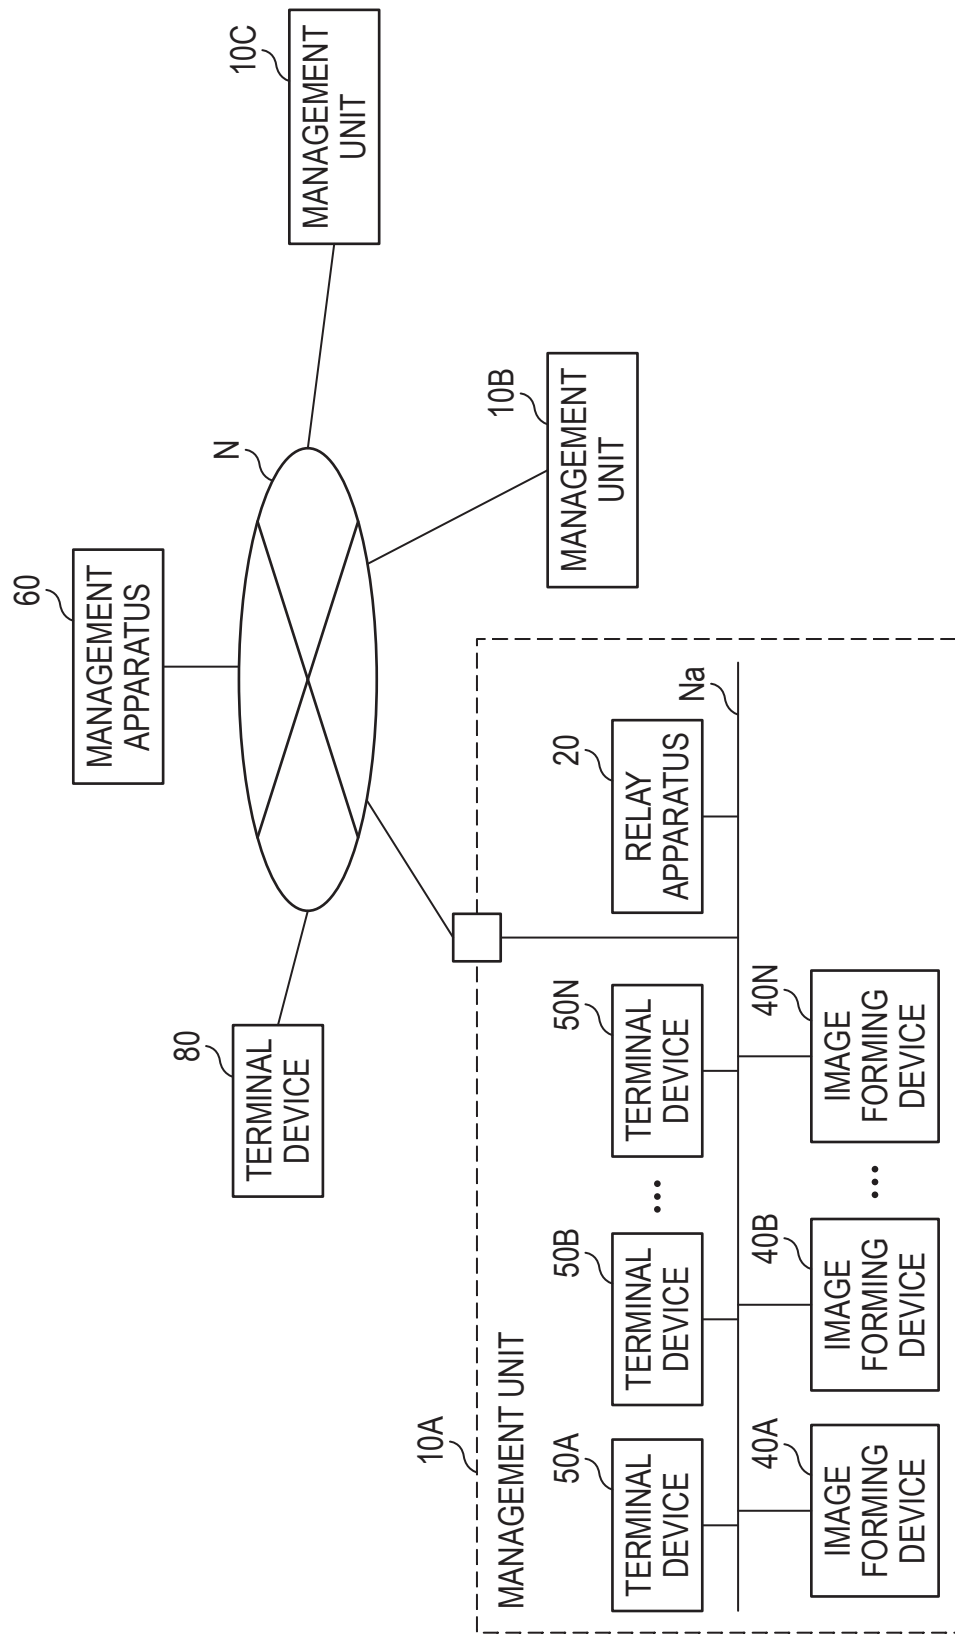


FIG. 2

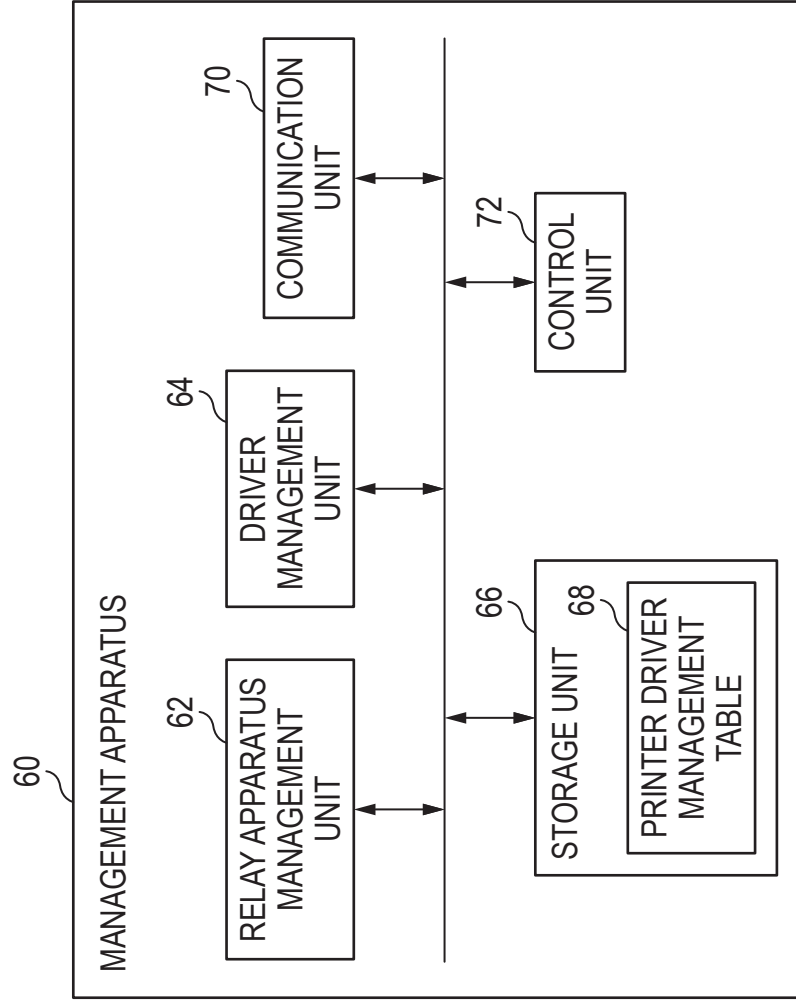


FIG. 3

< PRINTER DRIVER MANAGEMENT TABLE >

	Windows7 32bit	Windows7 64bit	...	OS X Yosemite
IMAGE FORMING DEVICE A	DRIVER A1	DRIVER A2	...	DRIVER An
IMAGE FORMING DEVICE B	DRIVER B1	DRIVER B2	...	DRIVER Bn
IMAGE FORMING DEVICE B	DRIVER C1	DRIVER C2	...	DRIVER Cn
...	...	...	...	...
IMAGE FORMING DEVICE N	DRIVER N1	DRIVER N2	...	DRIVER Nn

FIG. 4

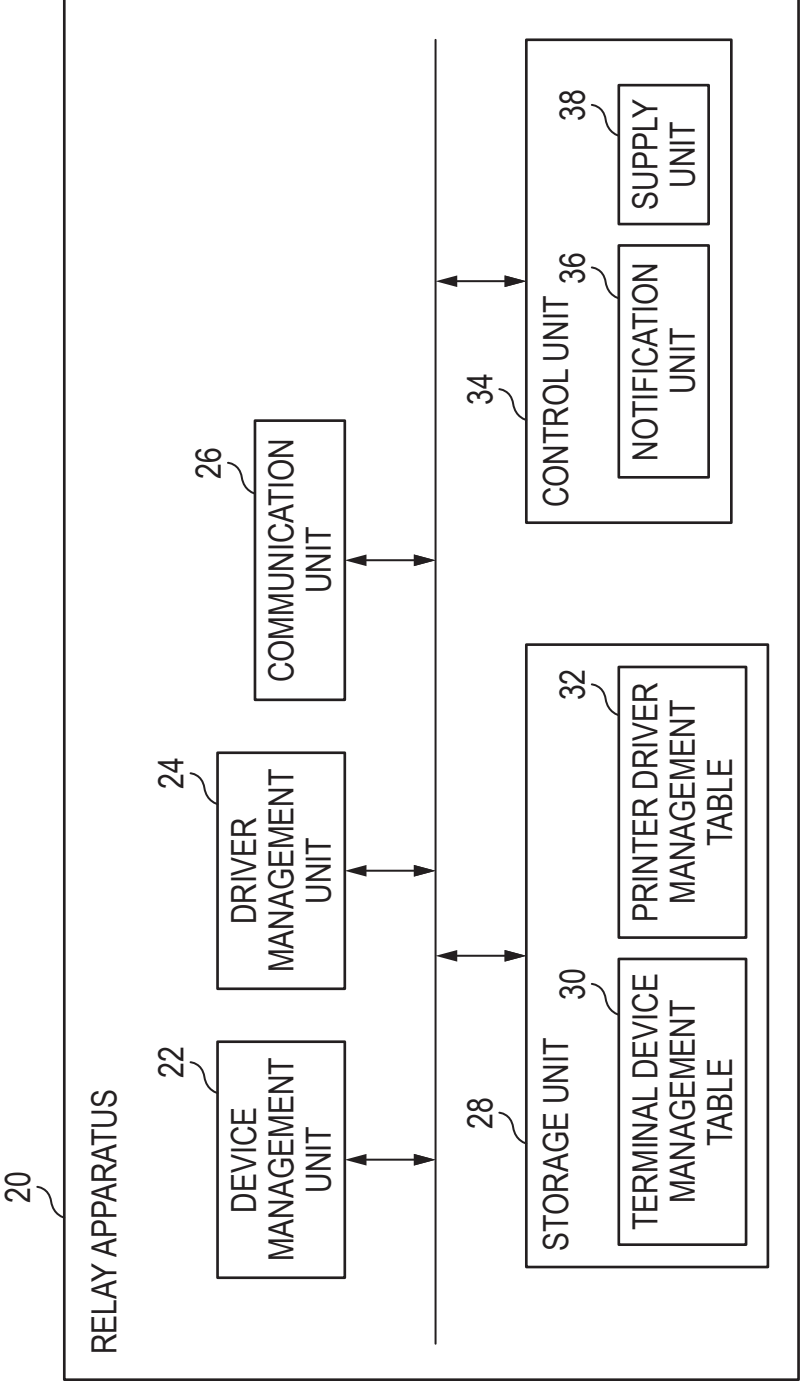


FIG. 5

< TERMINAL DEVICE MANAGEMENT TABLE >

	OS	IMAGE FORMING DEVICE 40A	IMAGE FORMING DEVICE 40B	...	IMAGE FORMING DEVICE 40N
TERMINAL DEVICE 50A	Windows7 32bit	AVAILABLE	AVAILABLE	...	AVAILABLE
TERMINAL DEVICE 50B	Windows8 64bit	AVAILABLE	UNAVAILABLE	...	UNAVAILABLE
...	...	...	...	...	...
TERMINAL DEVICE 50N	OS X Yosemite	UNAVAILABLE	AVAILABLE	...	AVAILABLE

FIG. 6

< PRINTER DRIVER MANAGEMENT TABLE >

	DRIVER A1	DRIVER A2	...	DRIVER N _n
IMAGE FORMING DEVICE 40A	NECESSARY	UNNECESSARY	...	UNNECESSARY
IMAGE FORMING DEVICE 40B	NECESSARY	UNNECESSARY	...	UNNECESSARY
...	...	...	...	...
IMAGE FORMING DEVICE 40N	UNNECESSARY	NECESSARY	...	UNNECESSARY

FIG. 7

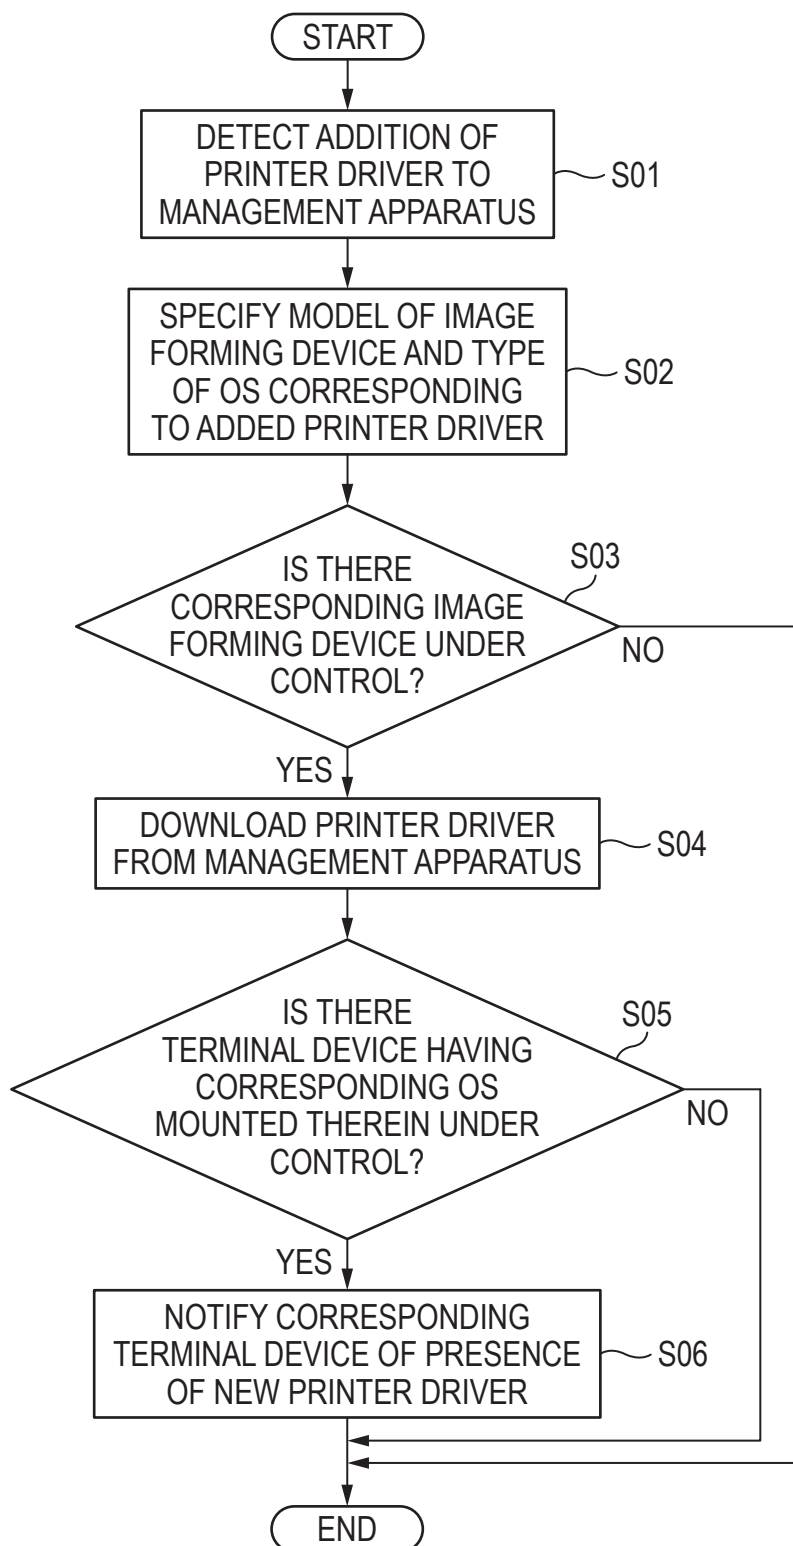


FIG. 8

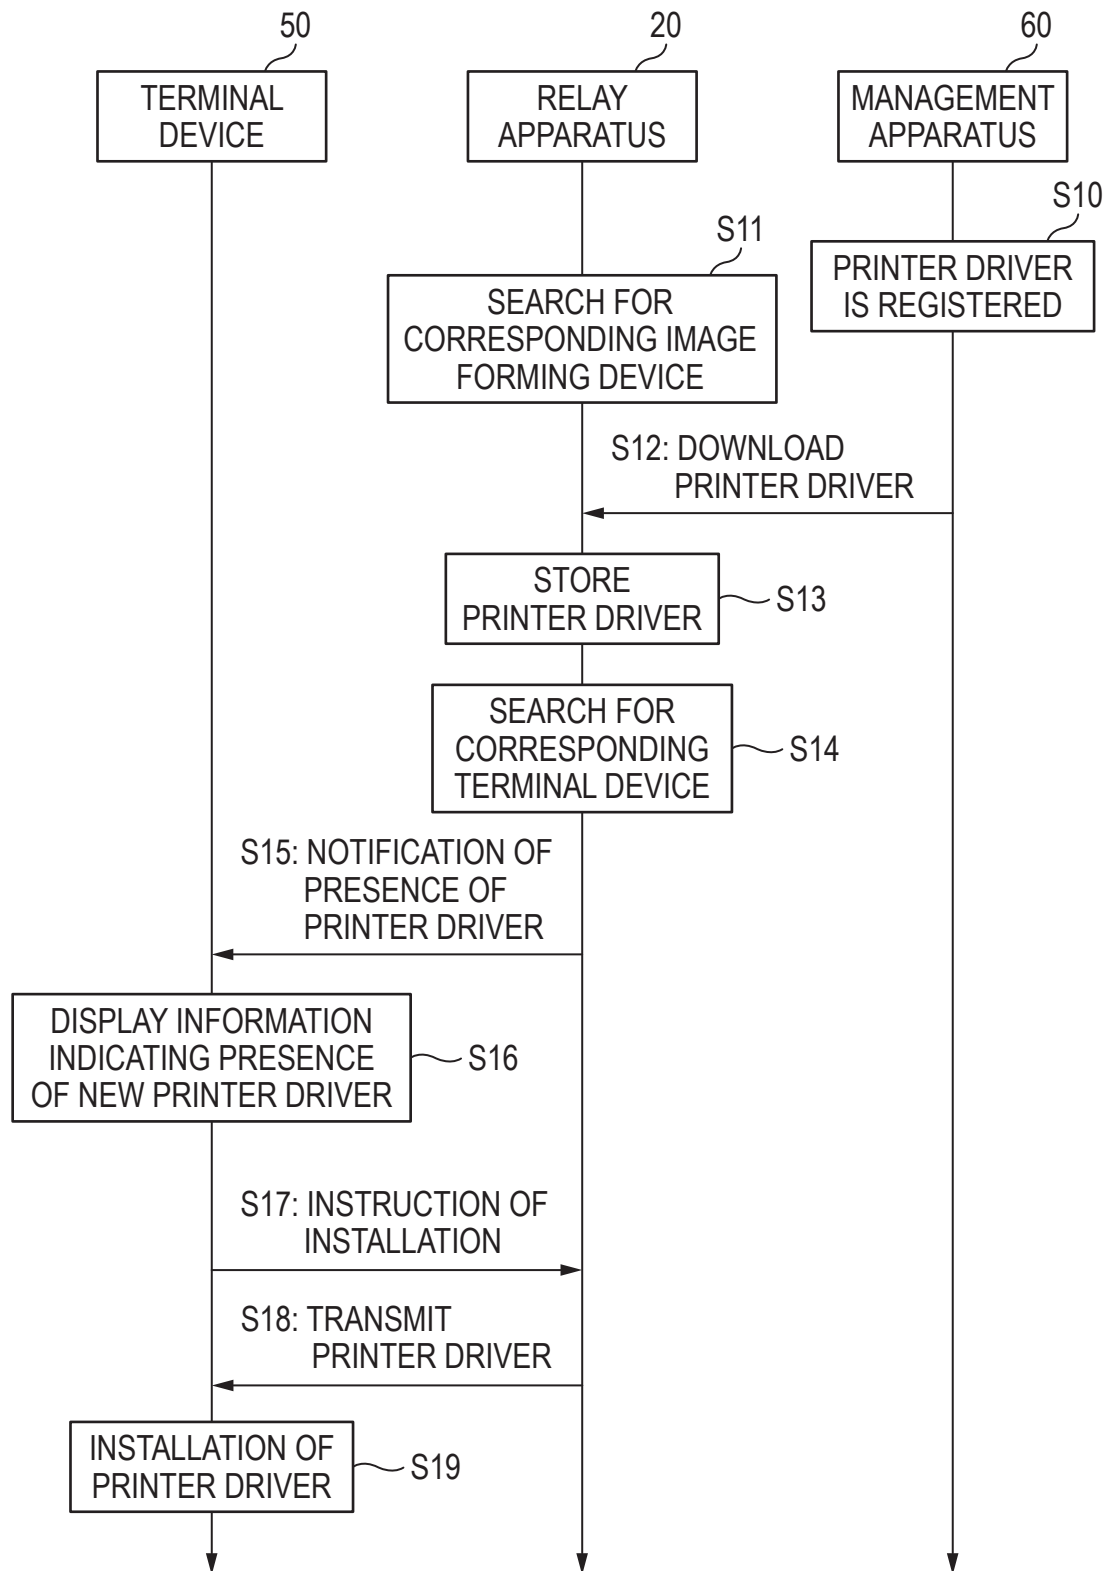


FIG. 9

90

PRINTER DRIVER FOR
IMAGE FORMING DEVICE
WHICH IS AVAILABLE AT PRESENT

☐ DRIVER FOR PRINTER X

☒ DRIVER FOR PRINTER Y

☐ DRIVER FOR PRINTER Z

INSTALL 92

Detailed description: The image shows a rectangular window with a thin black border. At the top center, the text 'PRINTER DRIVER FOR IMAGE FORMING DEVICE WHICH IS AVAILABLE AT PRESENT' is displayed in all caps. Below this text are three lines, each starting with a square checkbox followed by text. The first line has an empty checkbox and the text 'DRIVER FOR PRINTER X'. The second line has a checkbox with a checkmark inside and the text 'DRIVER FOR PRINTER Y'. The third line has an empty checkbox and the text 'DRIVER FOR PRINTER Z'. At the bottom right of the window is a rectangular button with the word 'INSTALL' in the center. A small curved line points from the number '90' above the window to its top border. Another small curved line points from the number '92' to the right side of the 'INSTALL' button.

FIG. 10

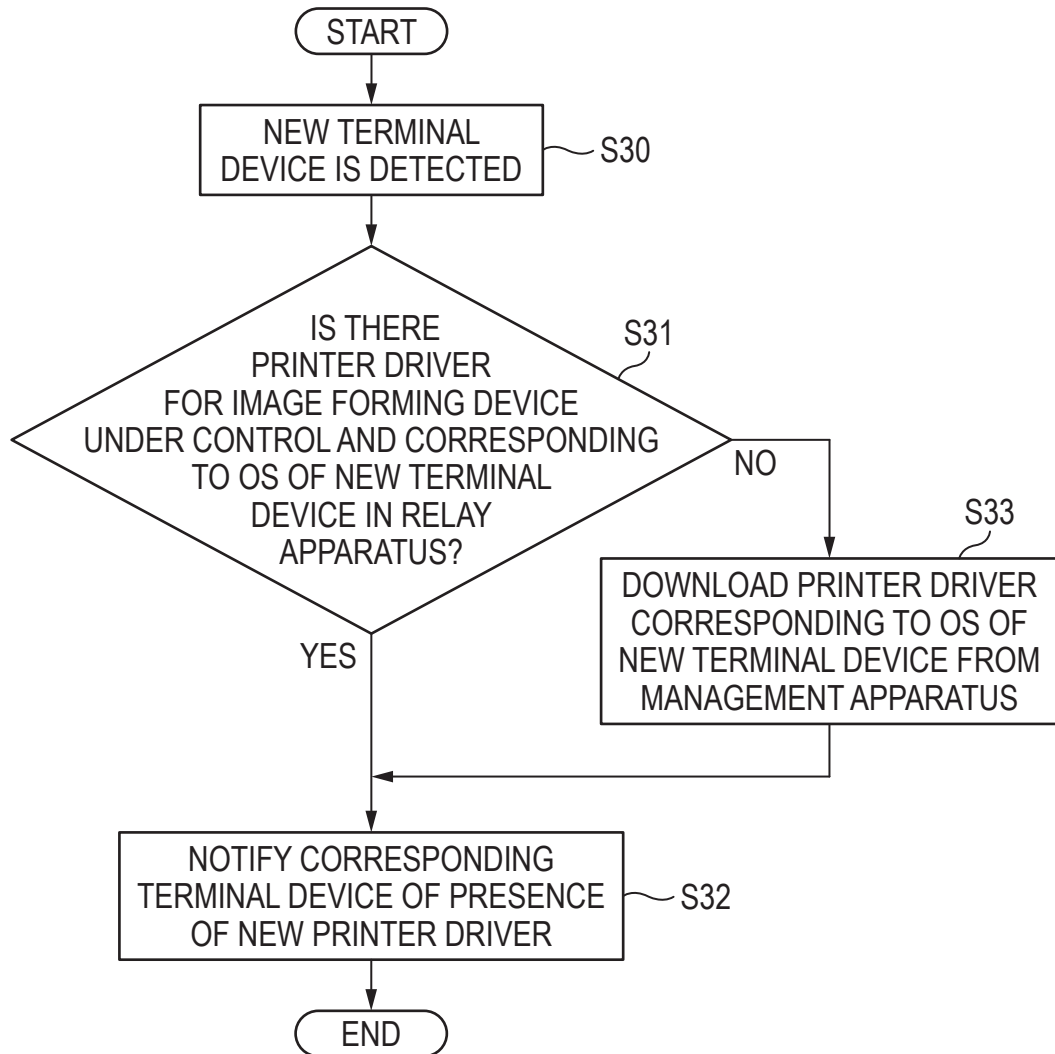


FIG. 11

< TERMINAL DEVICE MANAGEMENT TABLE >

	OS	DRIVER A1	DRIVER A2	...	DRIVER Nn	visitor	POSITION	COORDINATES
TERMINAL DEVICE 50A	Windows7 32bit	INSTALLED	INSTALLED	...	INSTALLED	—	N: 37.521 E: 138.43	X: 25.6 Y: 31.7 Z: 10.4
TERMINAL DEVICE 50B	Windows8 64bit	INSTALLED	NOT INSTALLED	...	NOT INSTALLED	—	N: 37.520 E: 138.44	X: 27.5 Y: 38.5 Z: 10.8
...	...	...	...	...	...	...	...	...
TERMINAL DEVICE 50N	OS X Yosemite	NOT INSTALLED	NOT INSTALLED	...	INSTALLED	INSTALLED	N: 37.998 E: 138.01	X: 40.1 Y: 63.9 Z: 3.31