

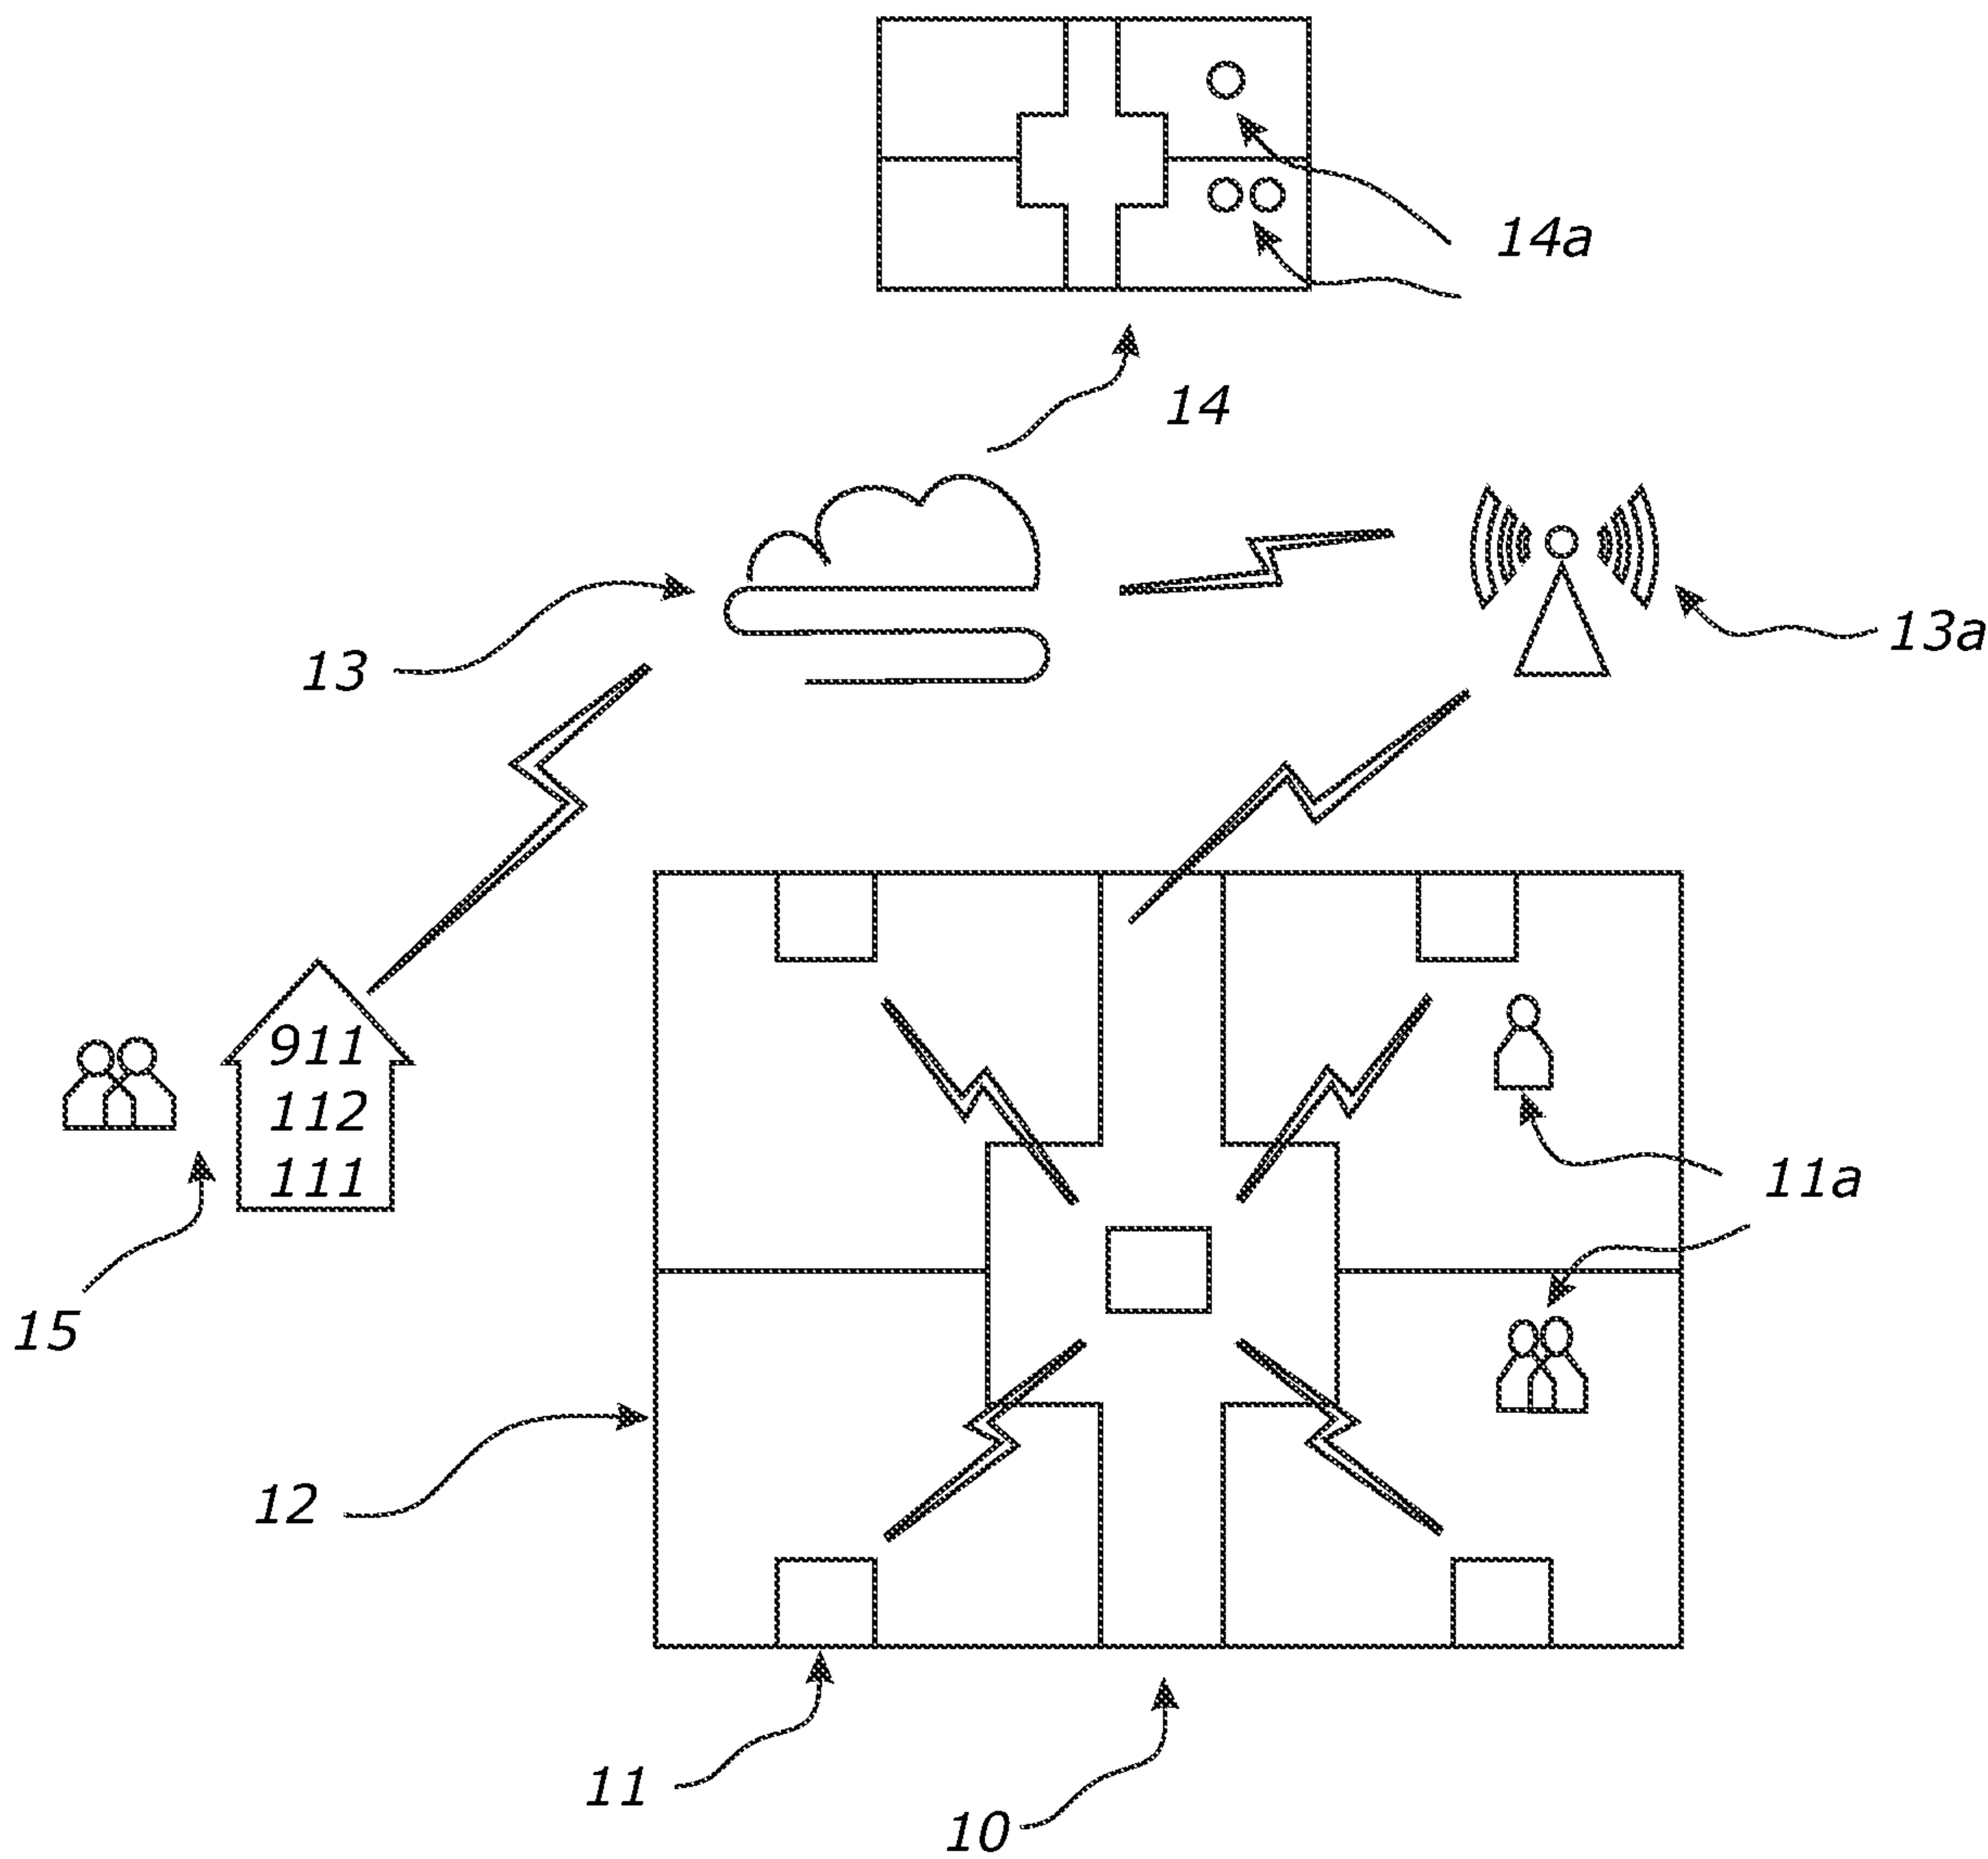 


FIG. 1

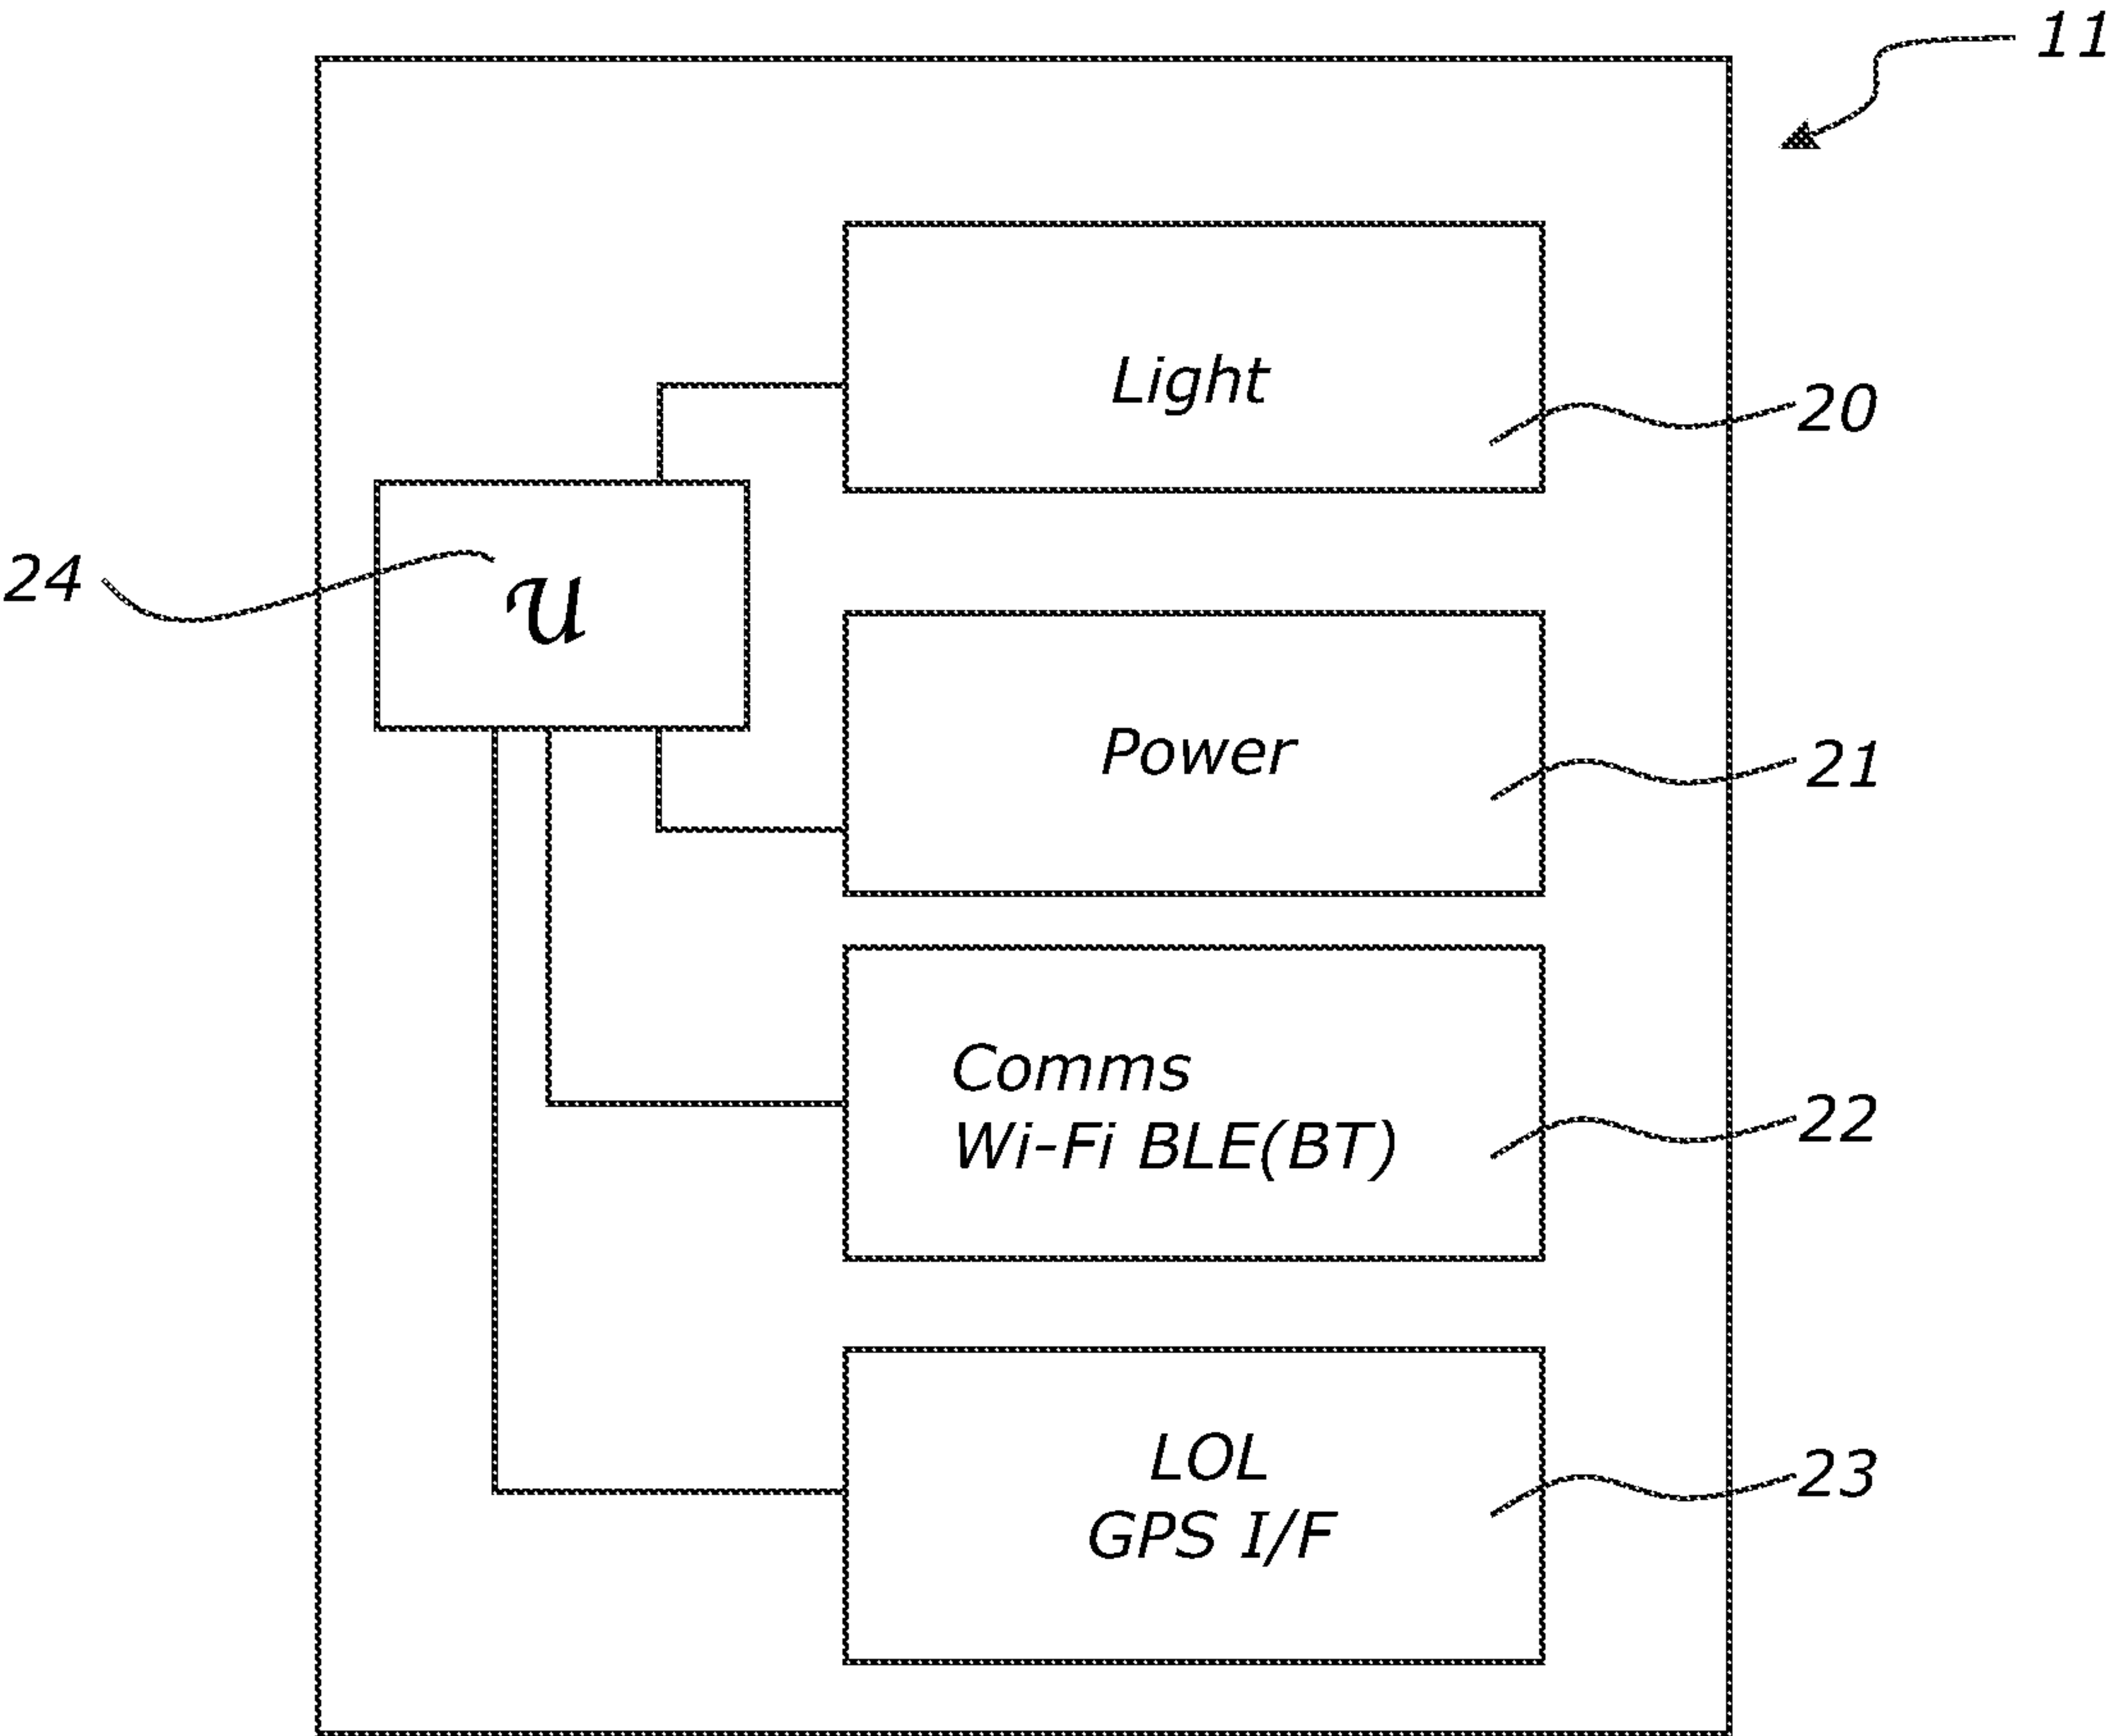 


FIG. 2

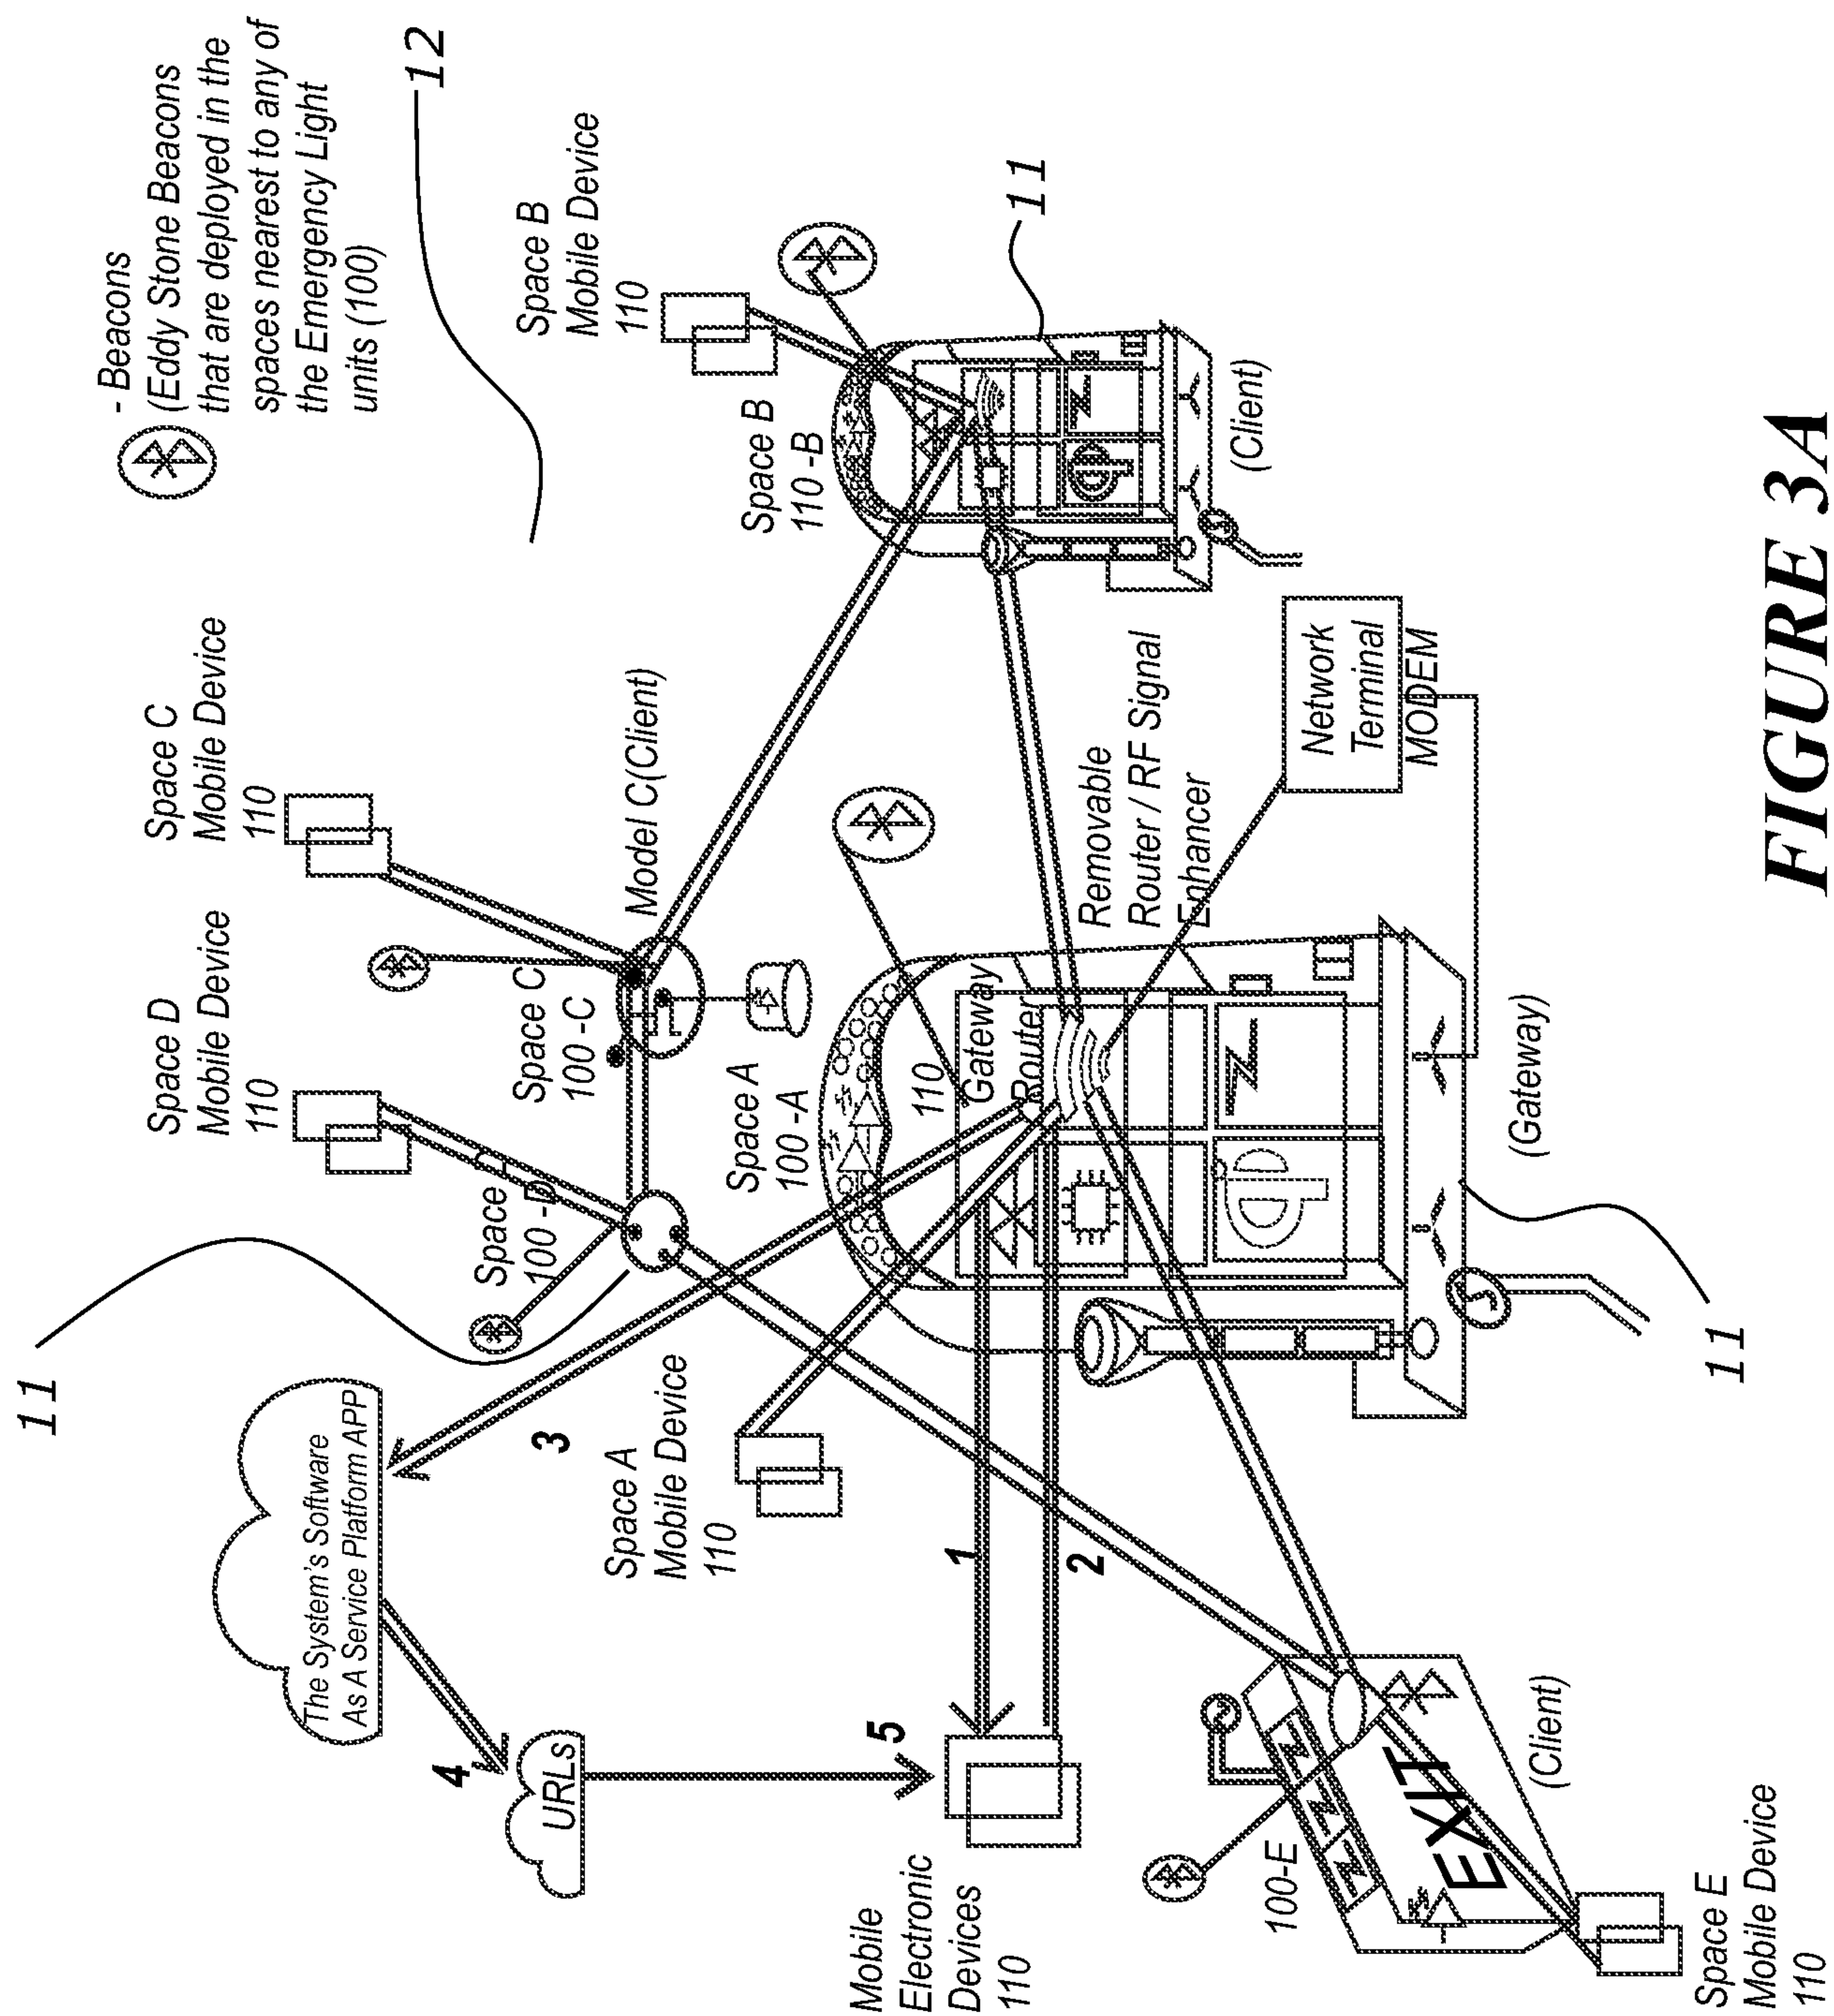 


FIGURE 3A

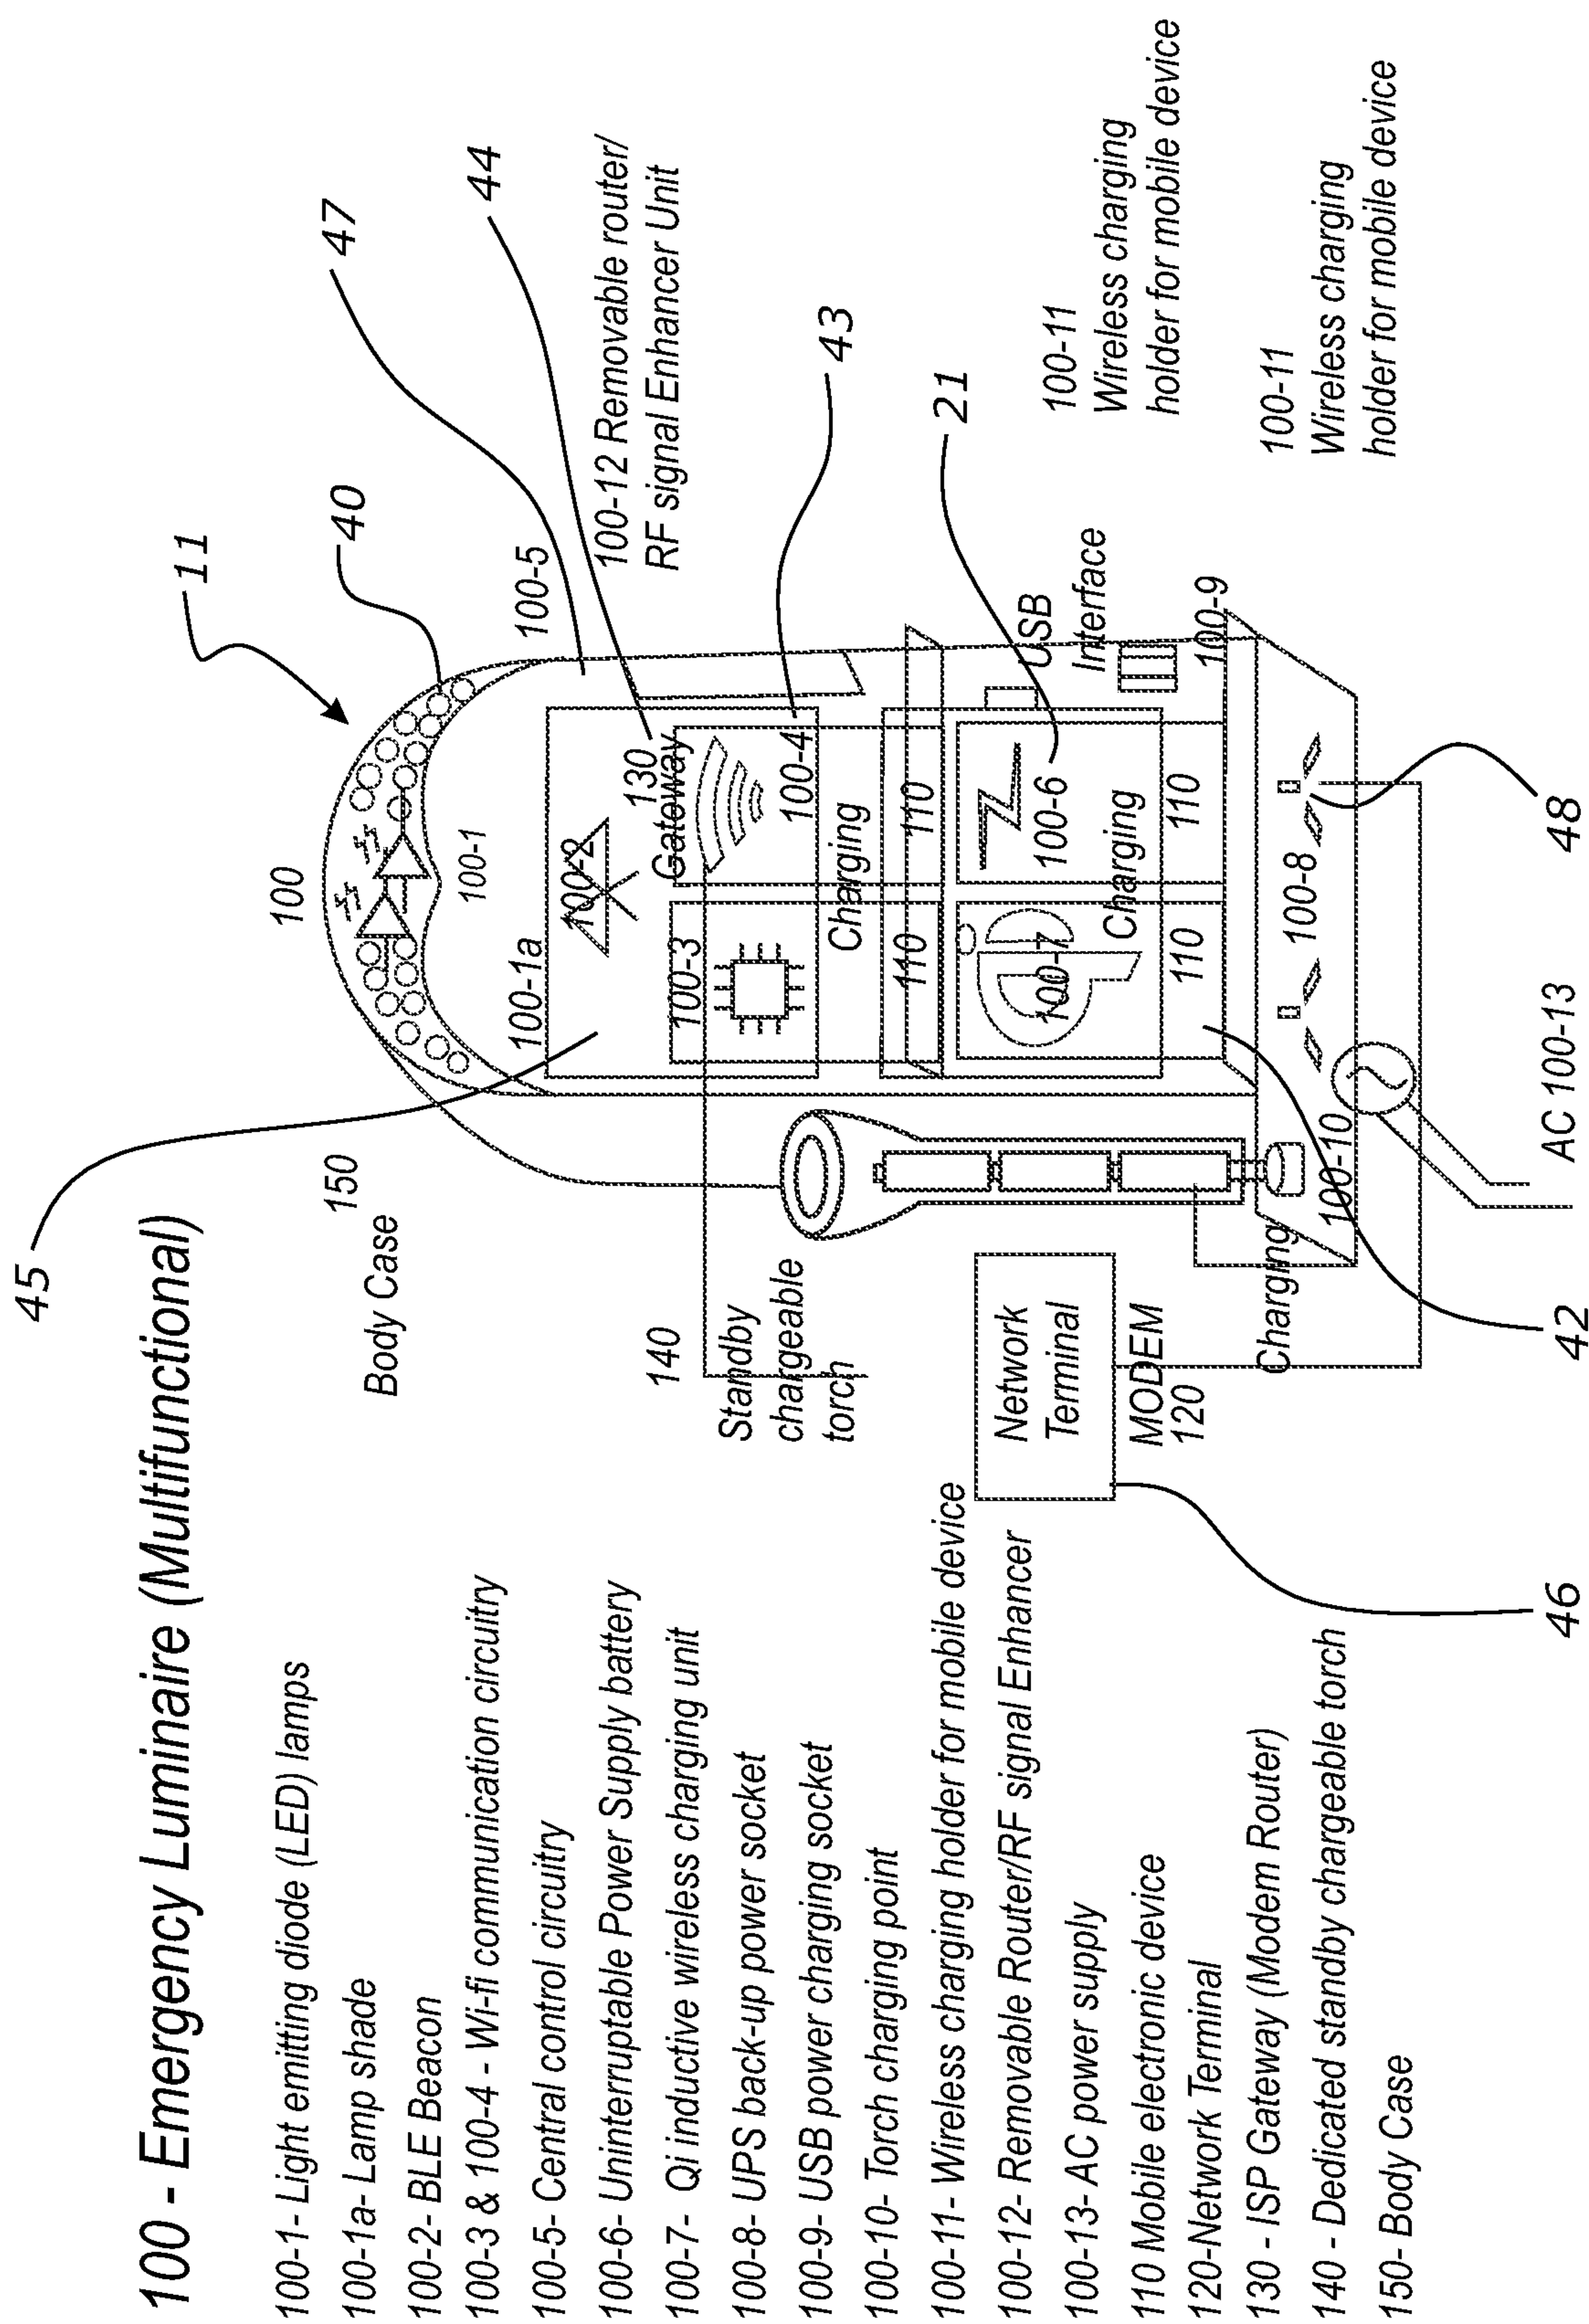 


FIGURE 3B

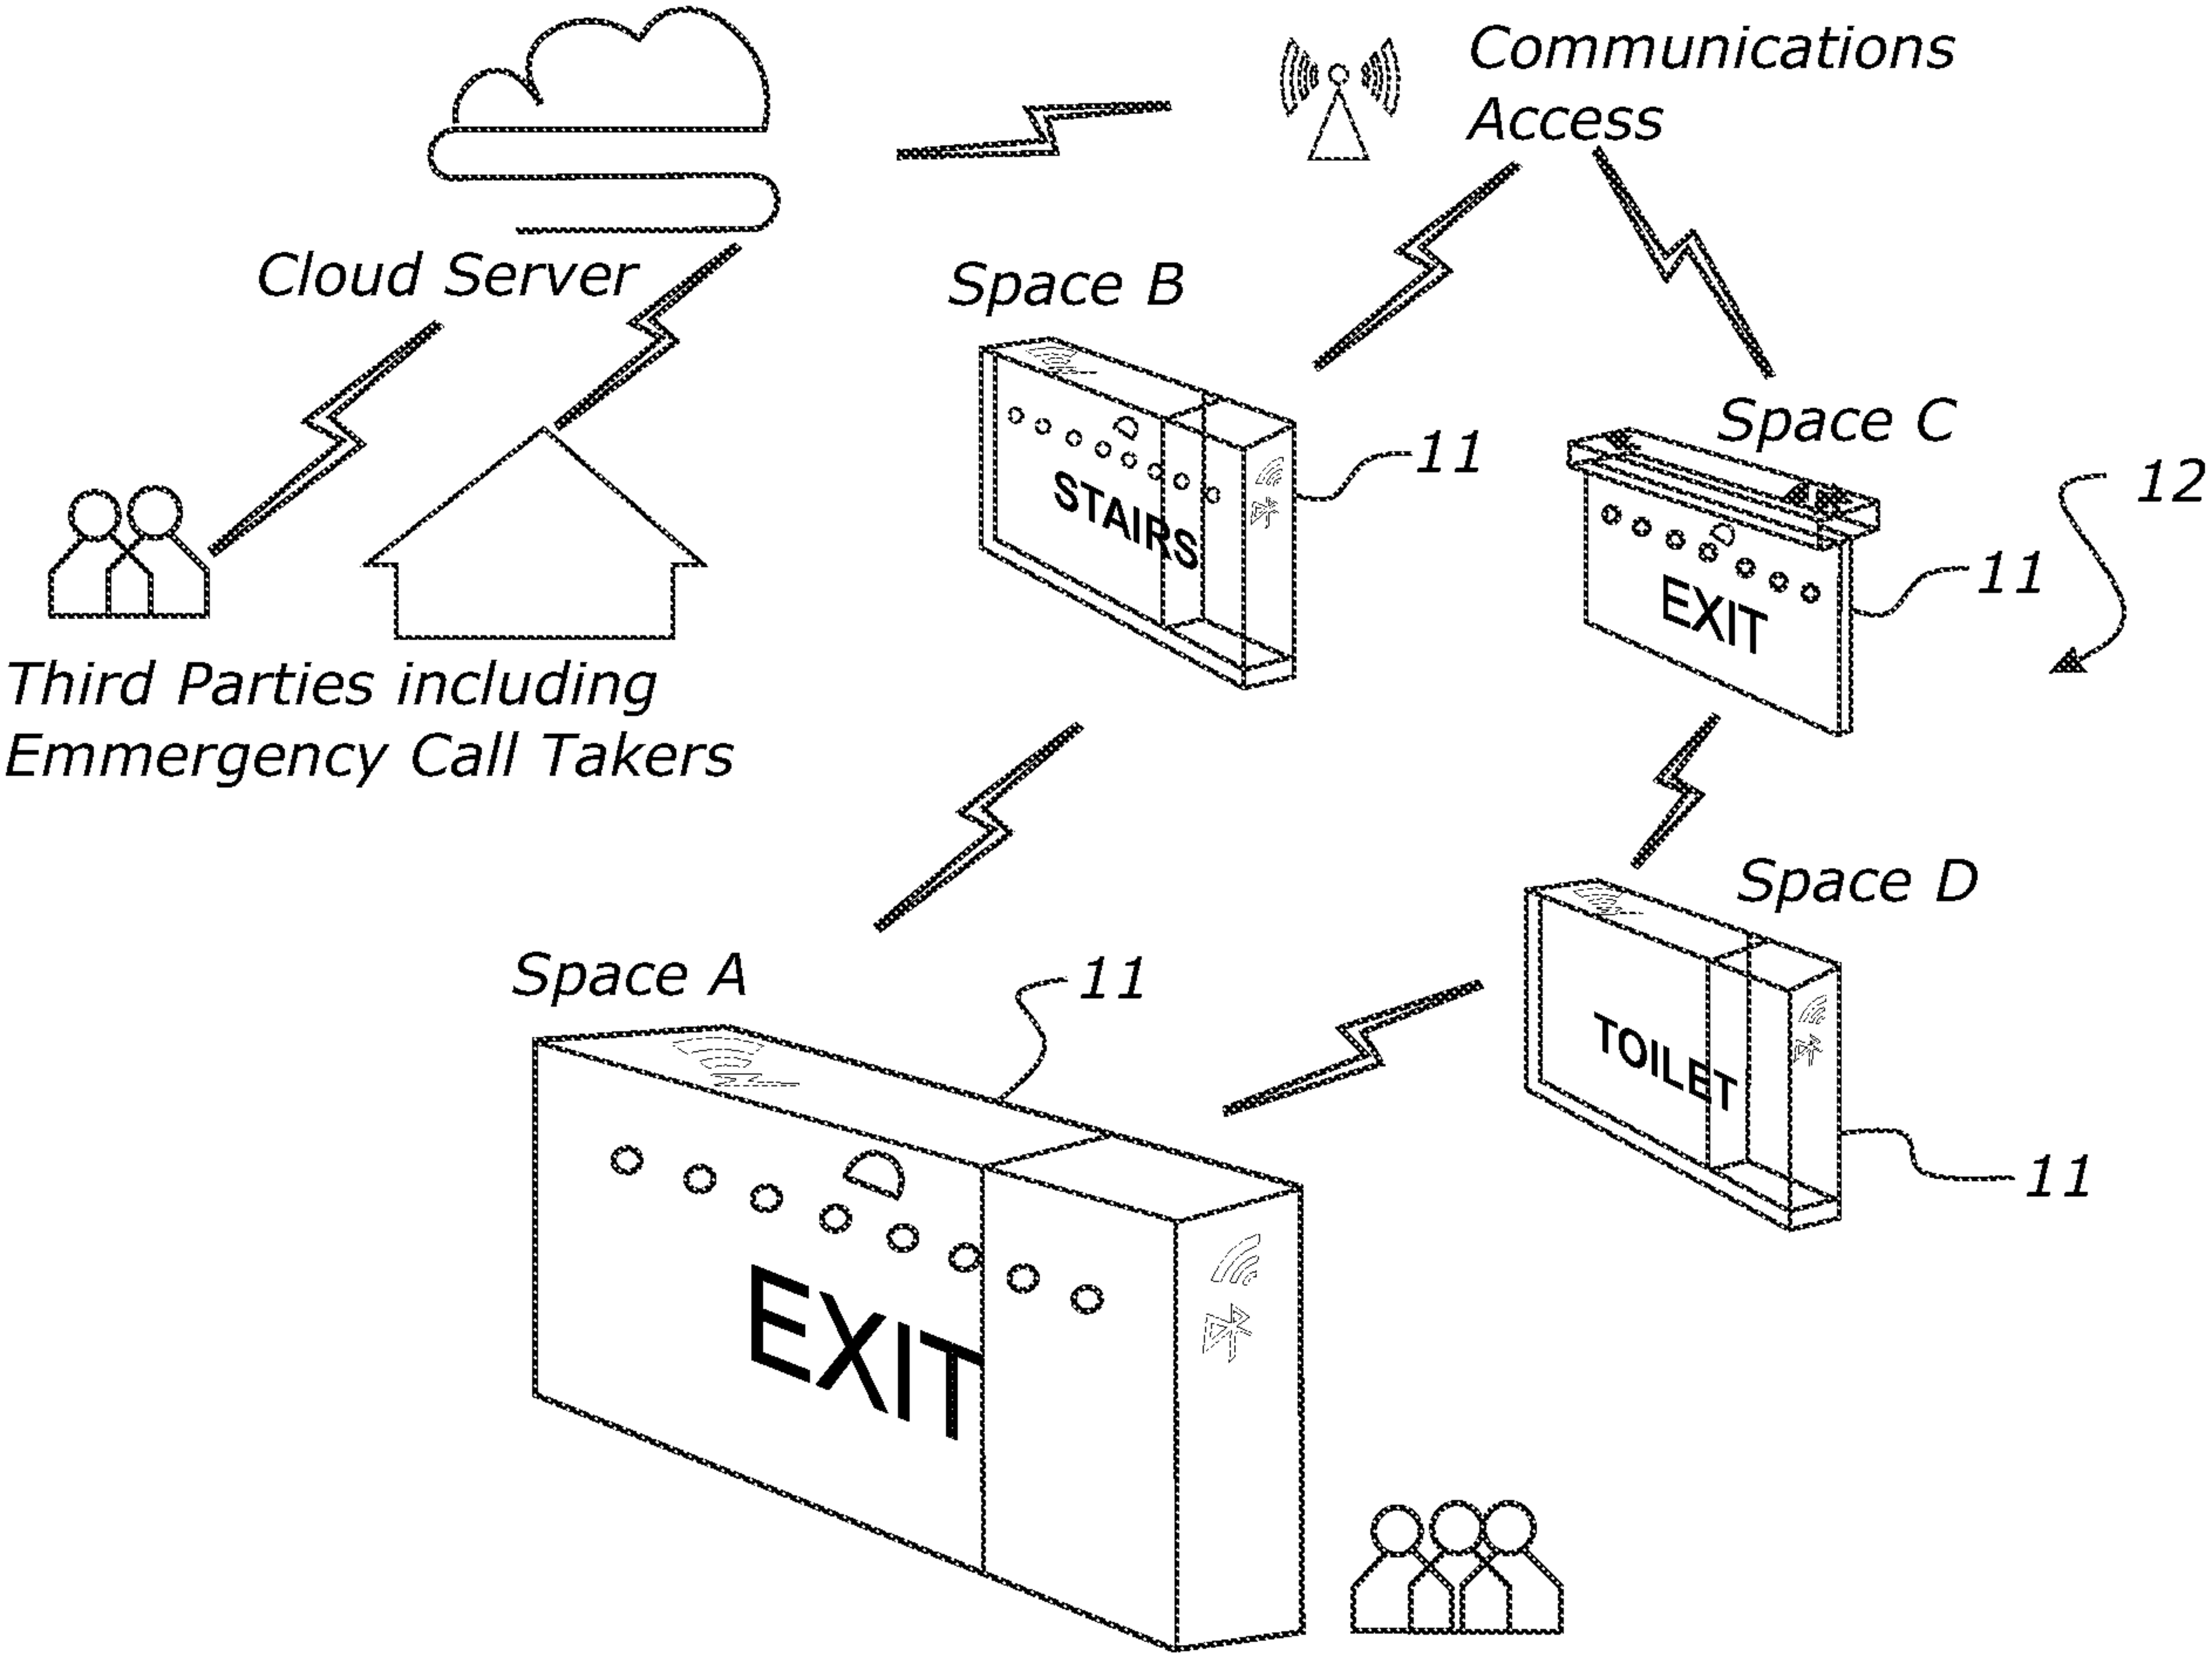 


FIGURE 4A

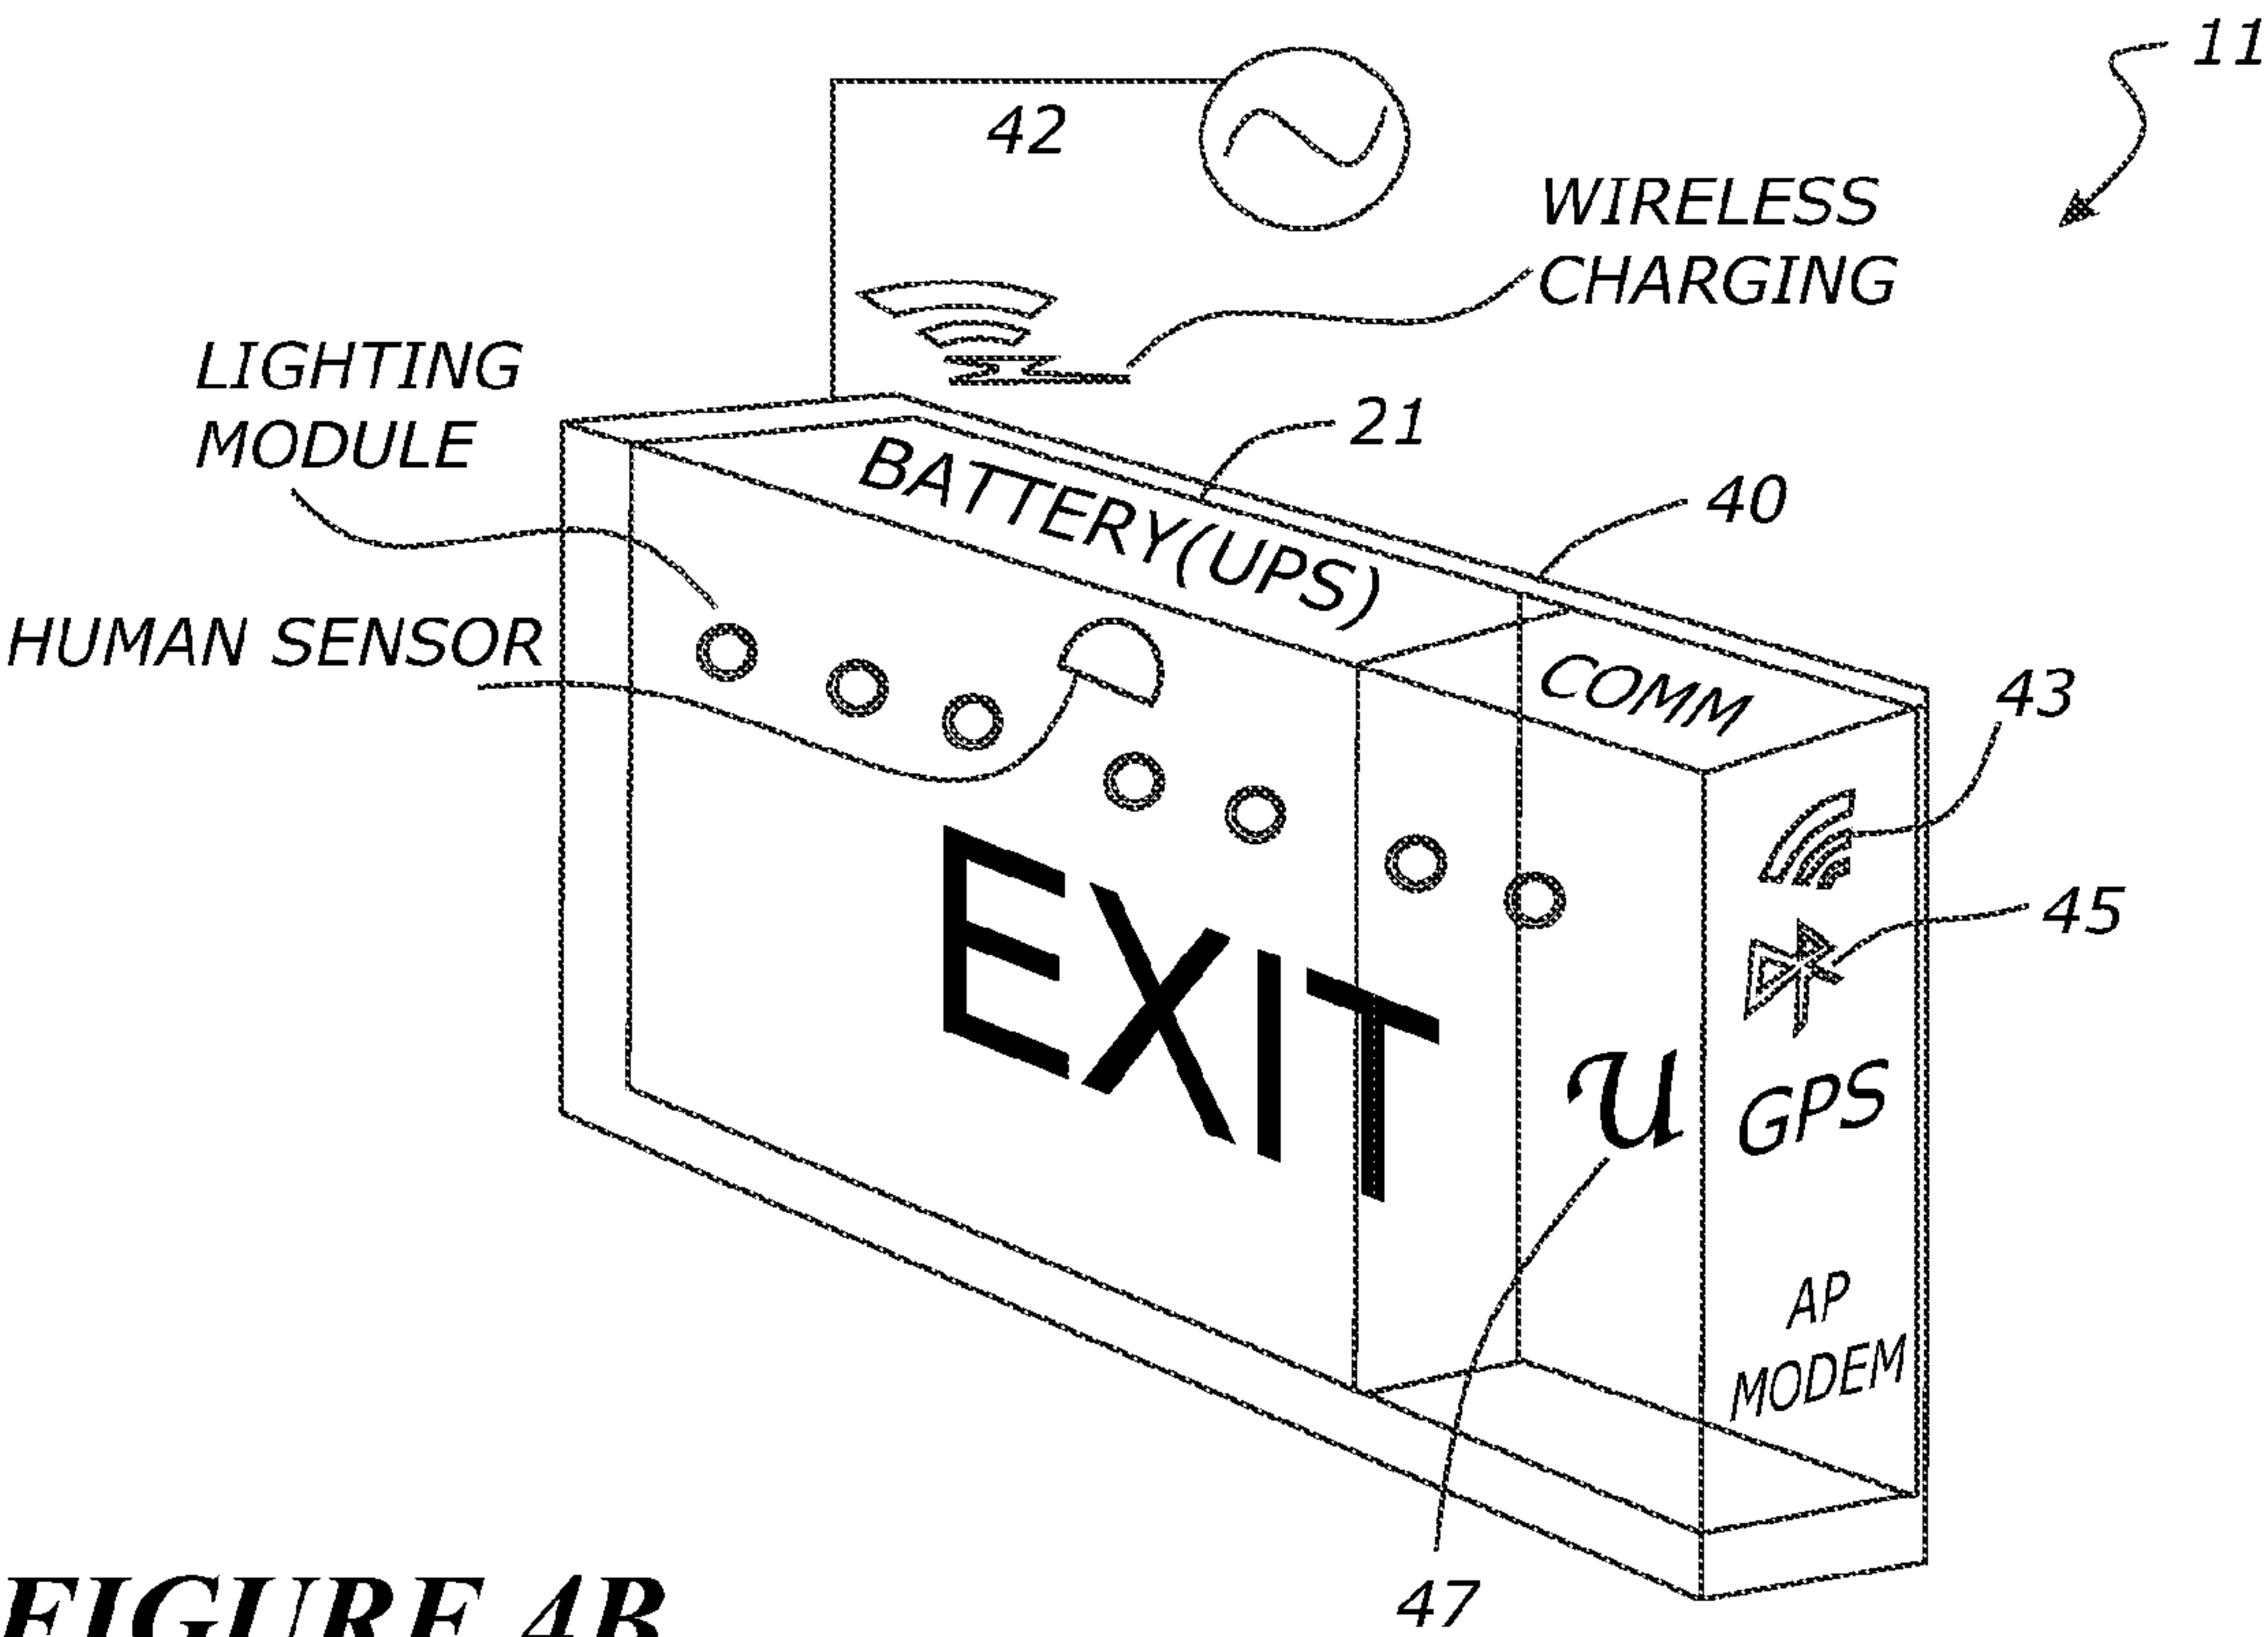 


FIGURE 4B

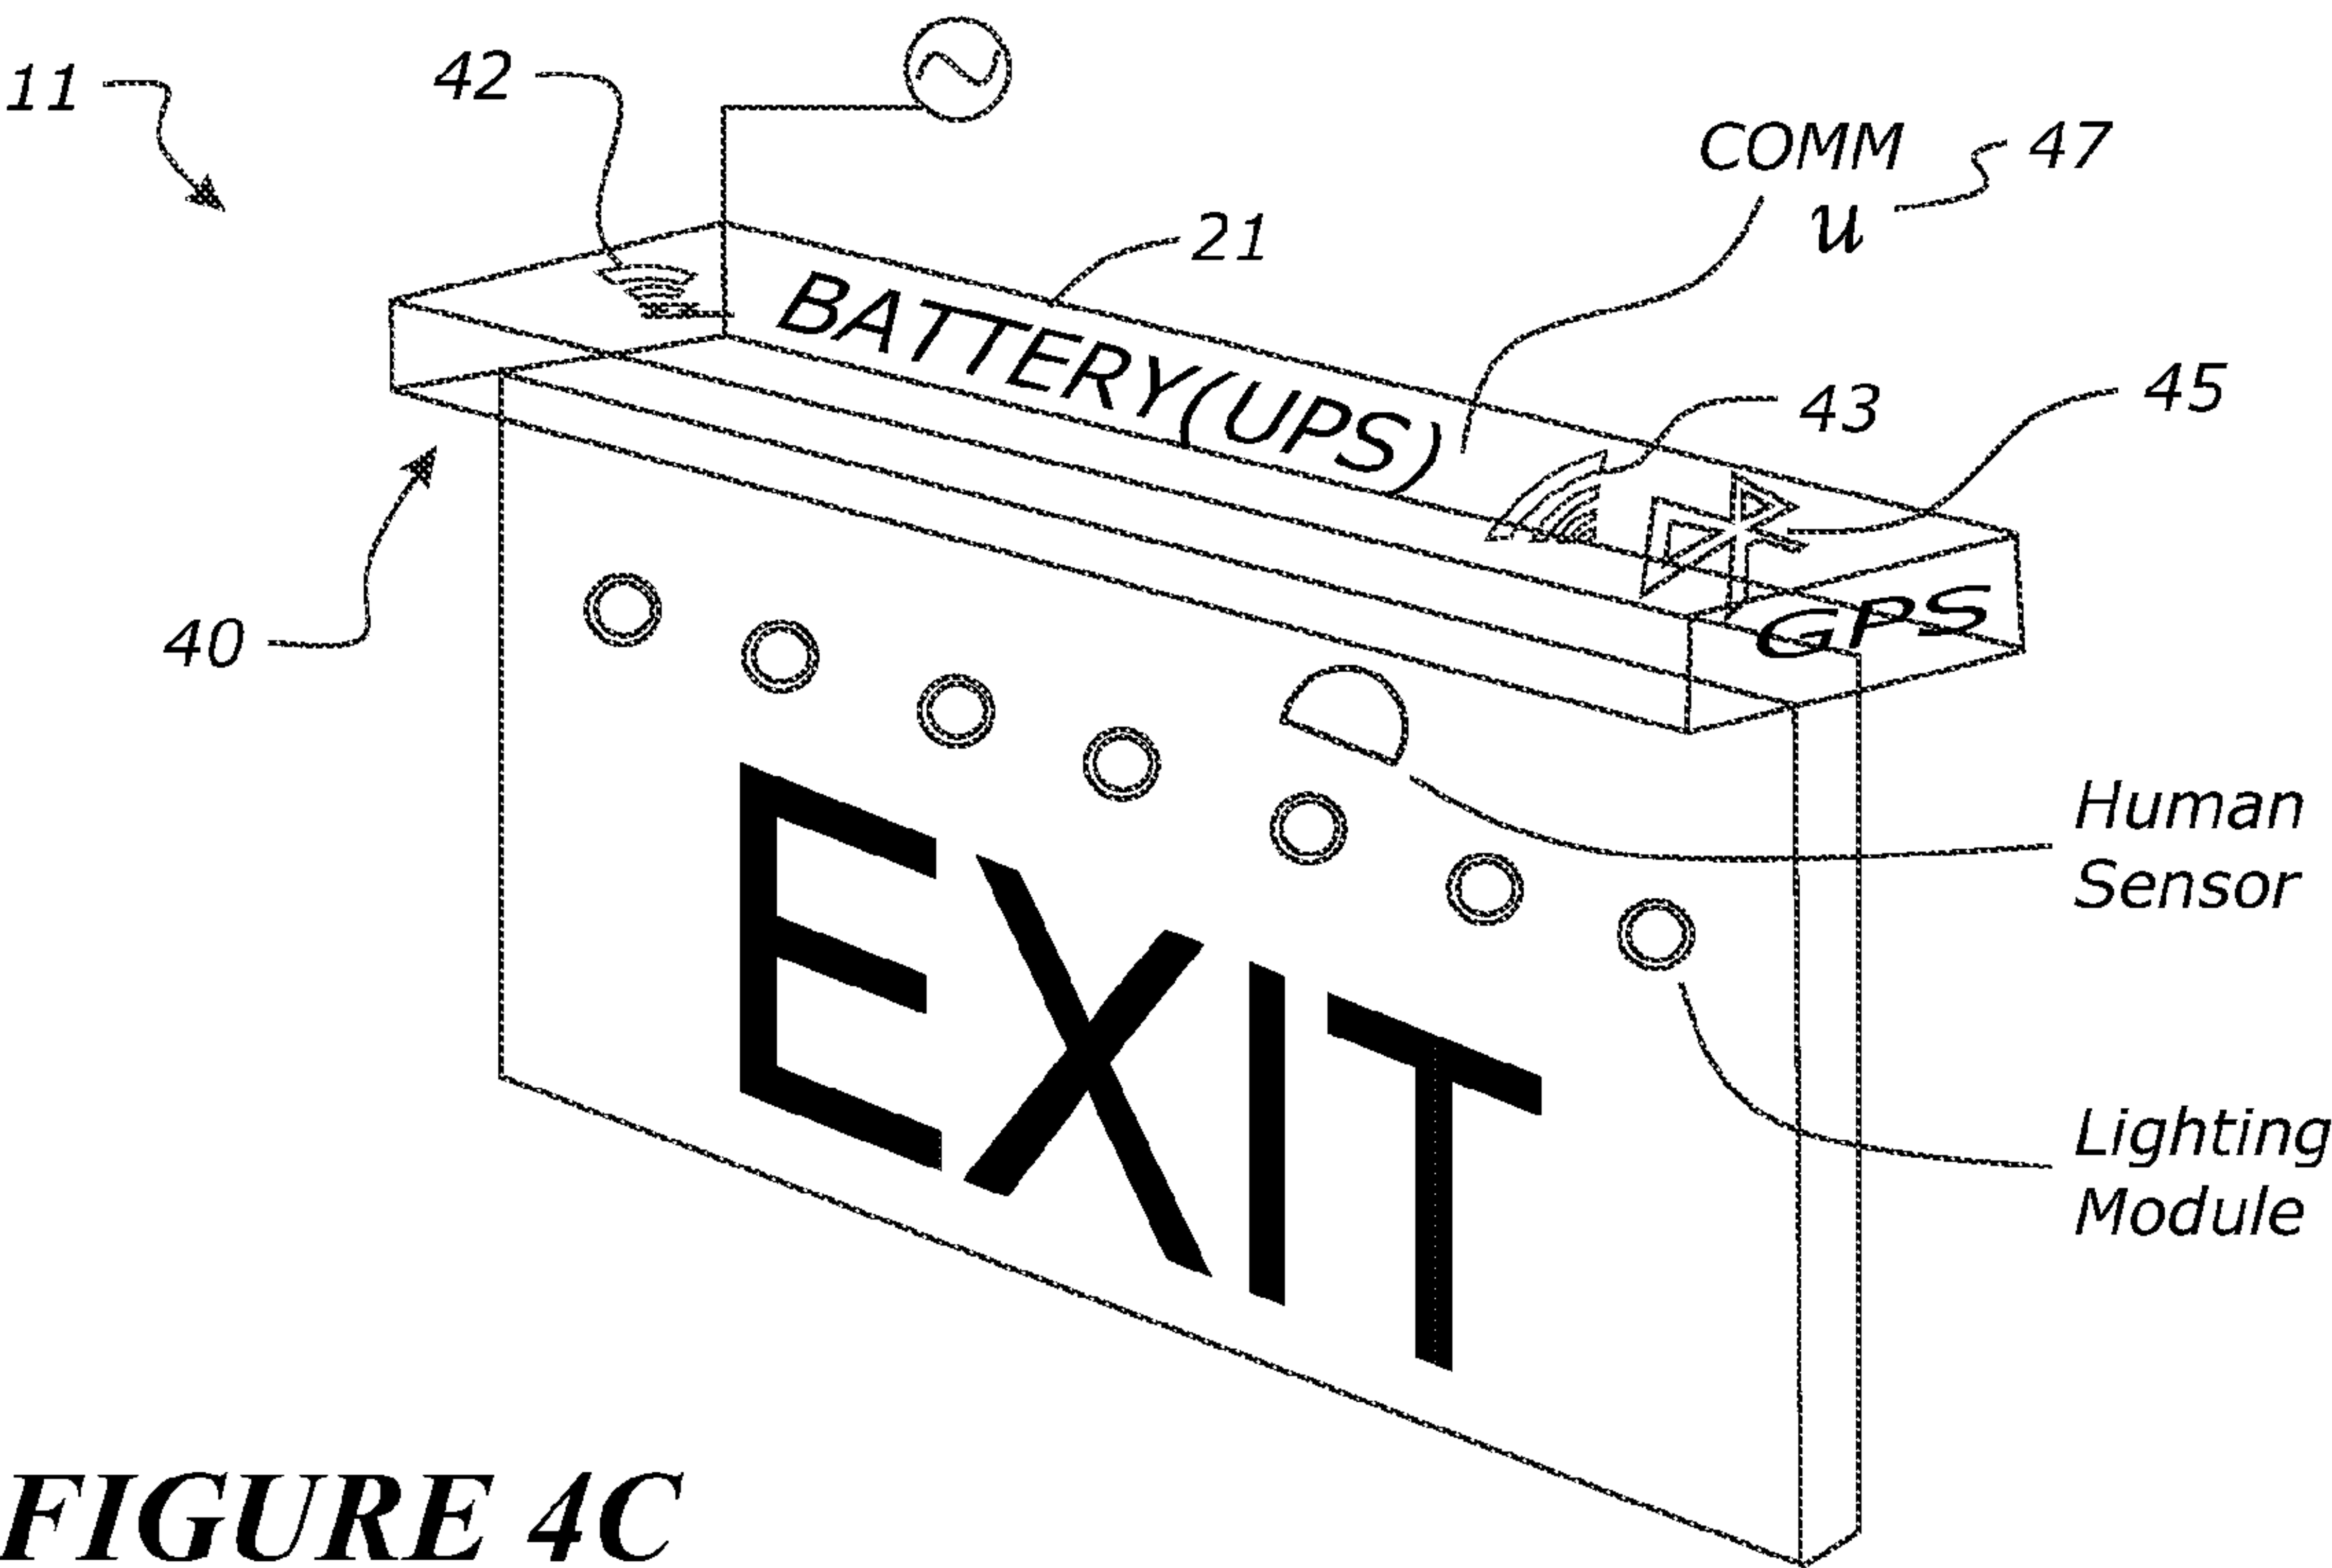 


FIGURE 4C

Potential Claims

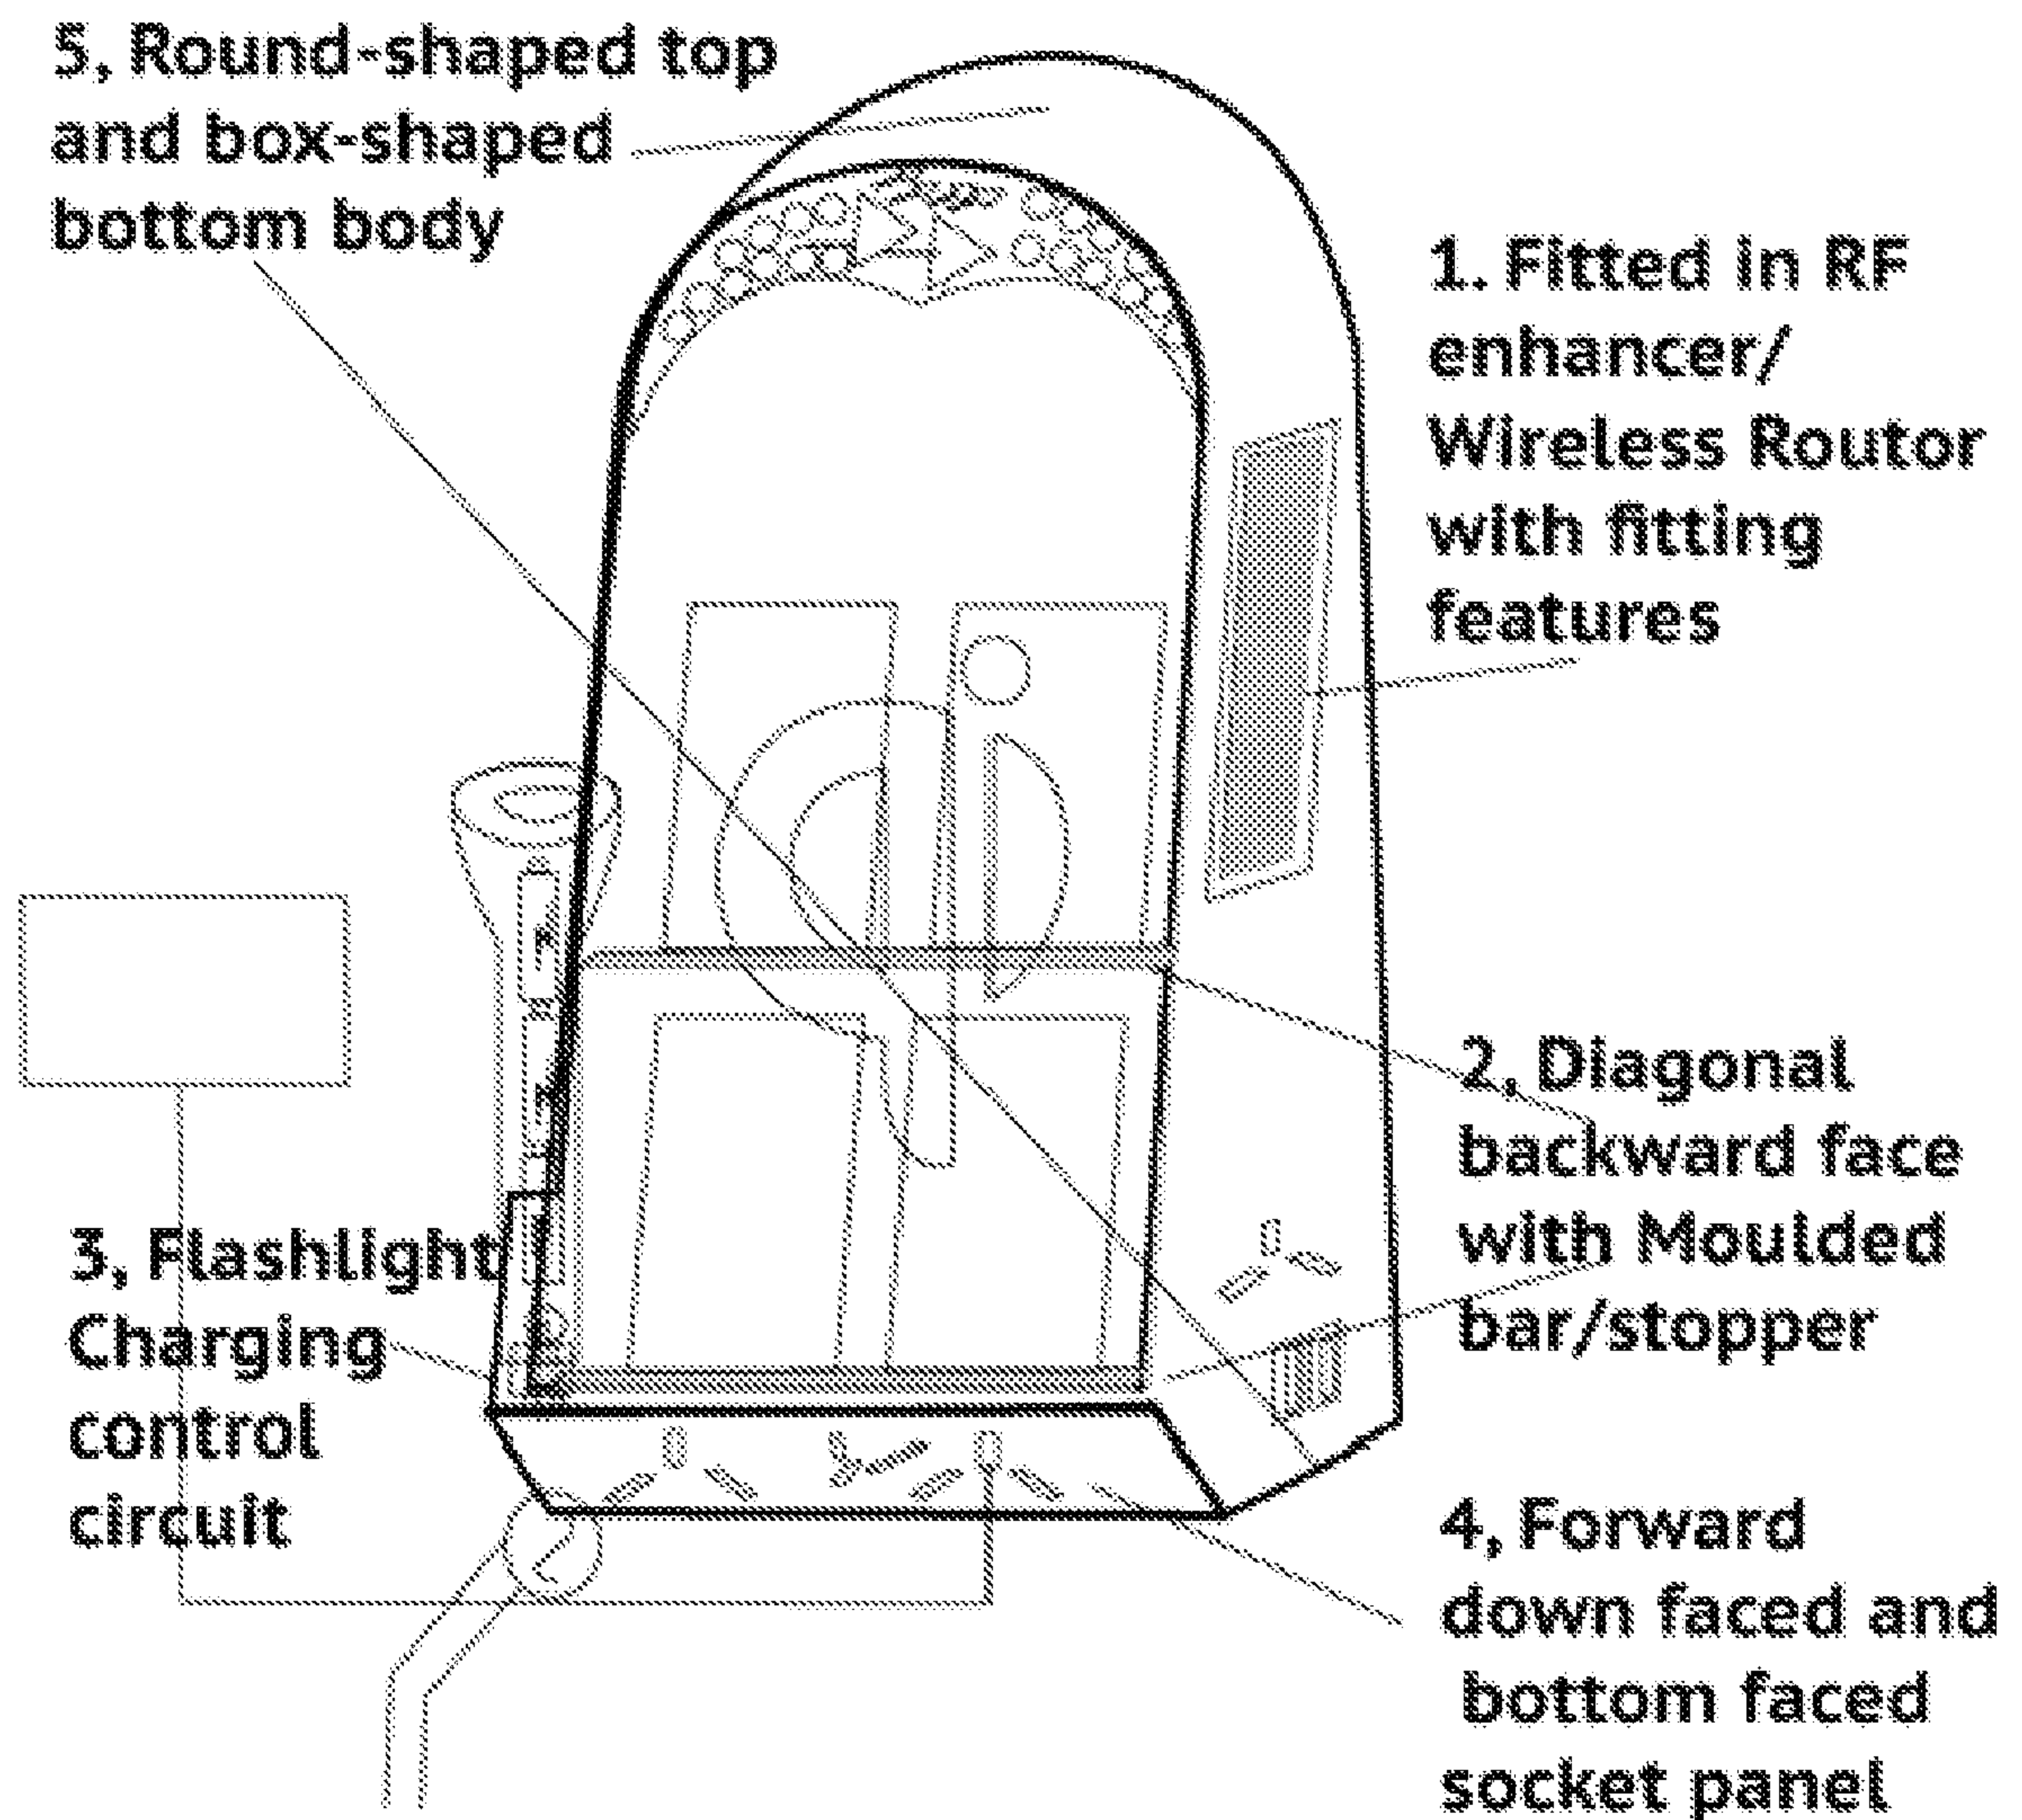


FIGURE 5

1), To install the removable unit by pressing 'Spring lock/stopper' upward before pushing the body inward against the spring 1 which pushes the body into the fit in notch, while the spring safety lock keeps the body in place:

2), Springs of 2,3 hold the removable unit in place in the notch;

3), To remove the unit, first unlock the 'Spring safety lock/stopper' before pushing the body against spring 1 and lift the body up before spring 1 bounces the body outward.

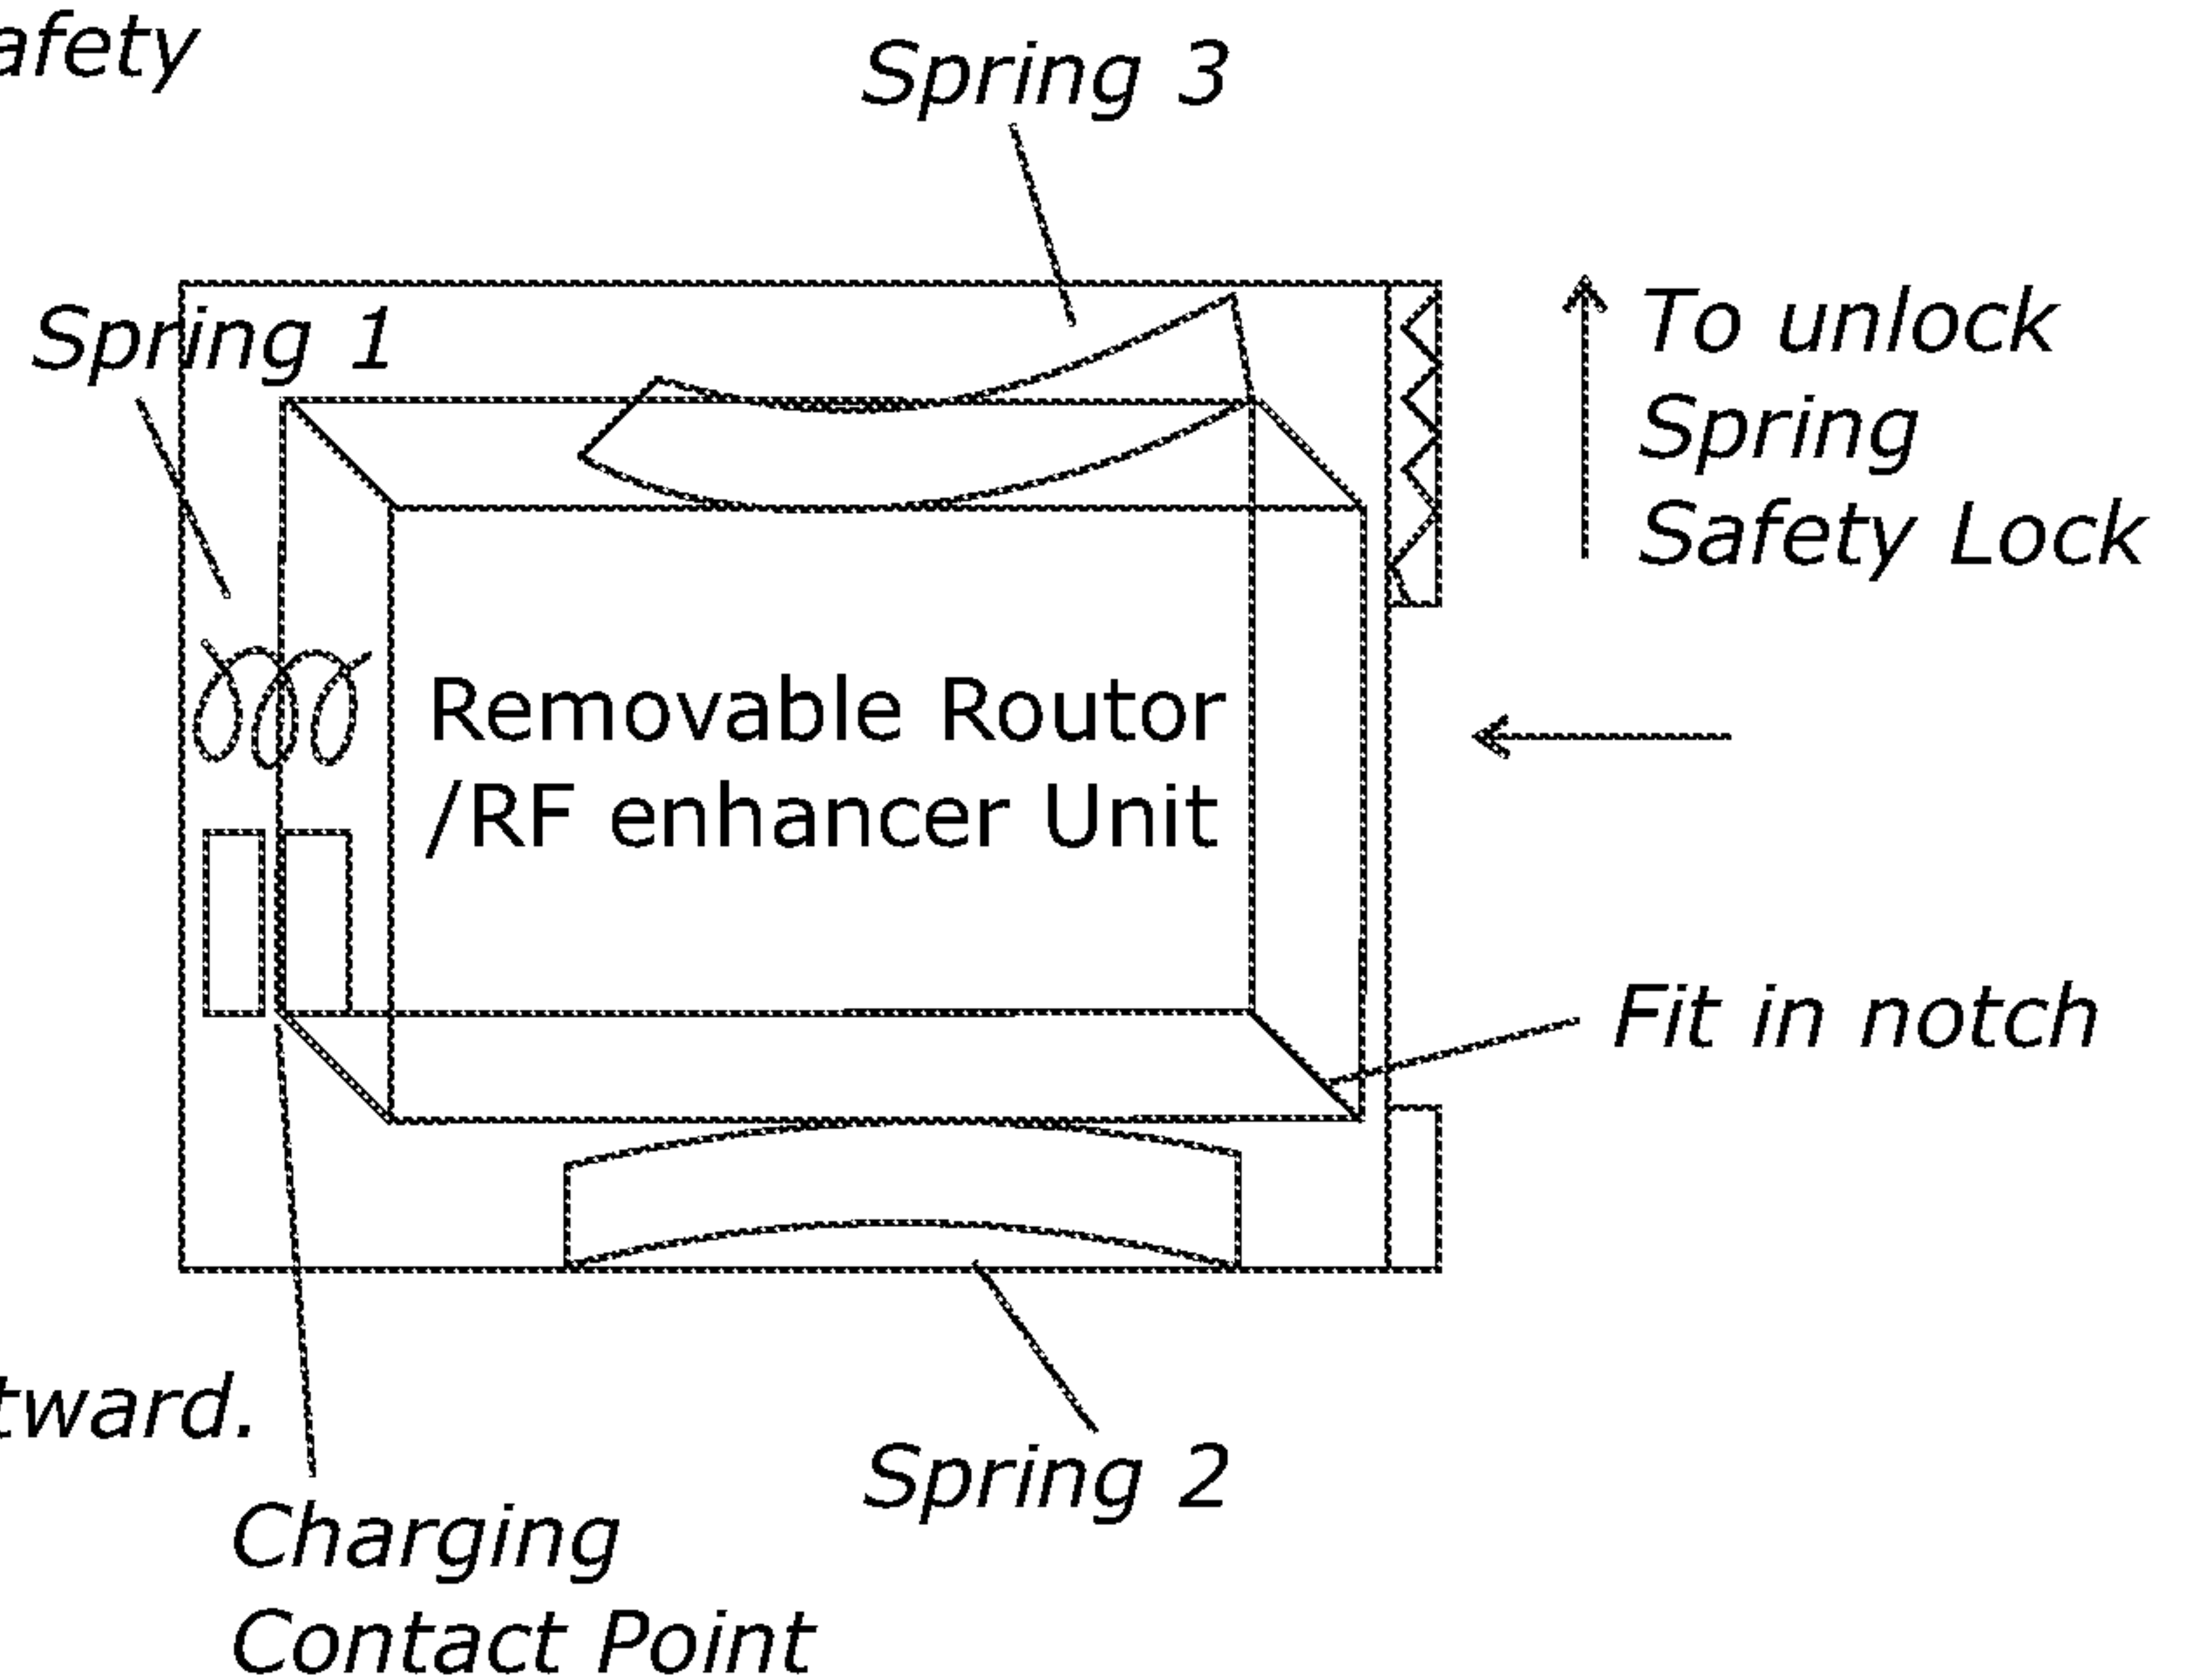 


FIGURE 6

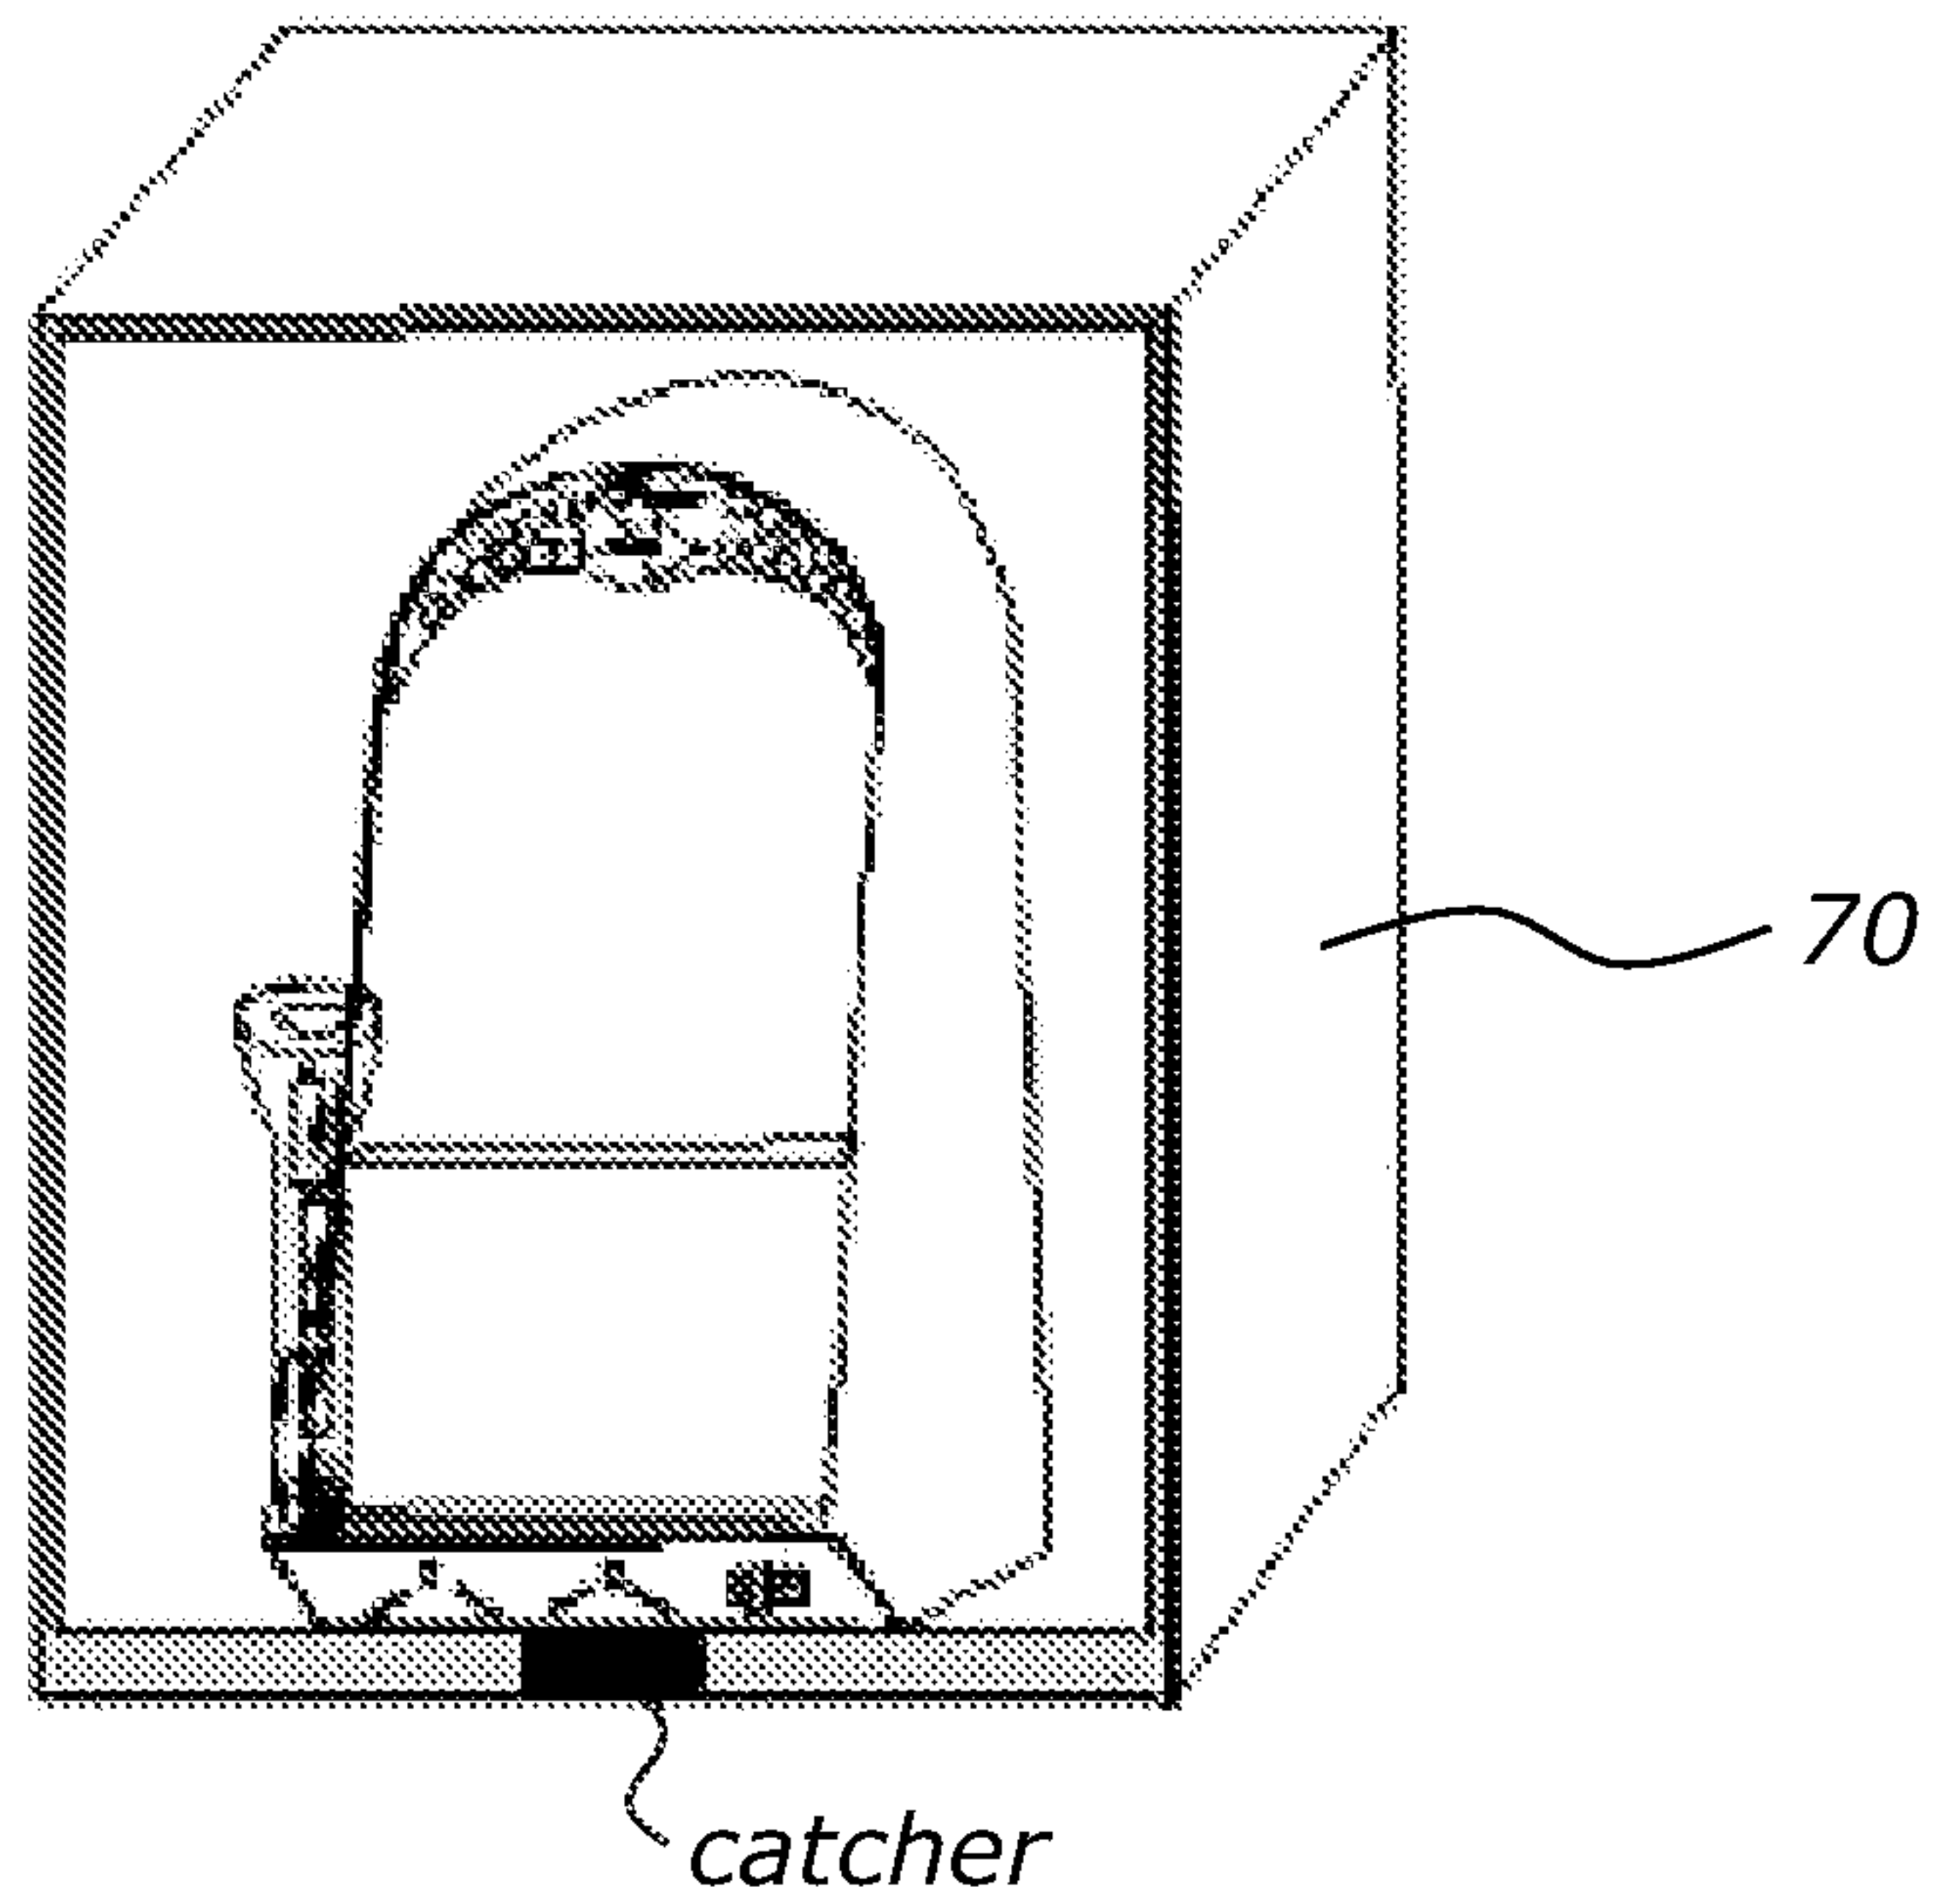 


FIGURE 7A

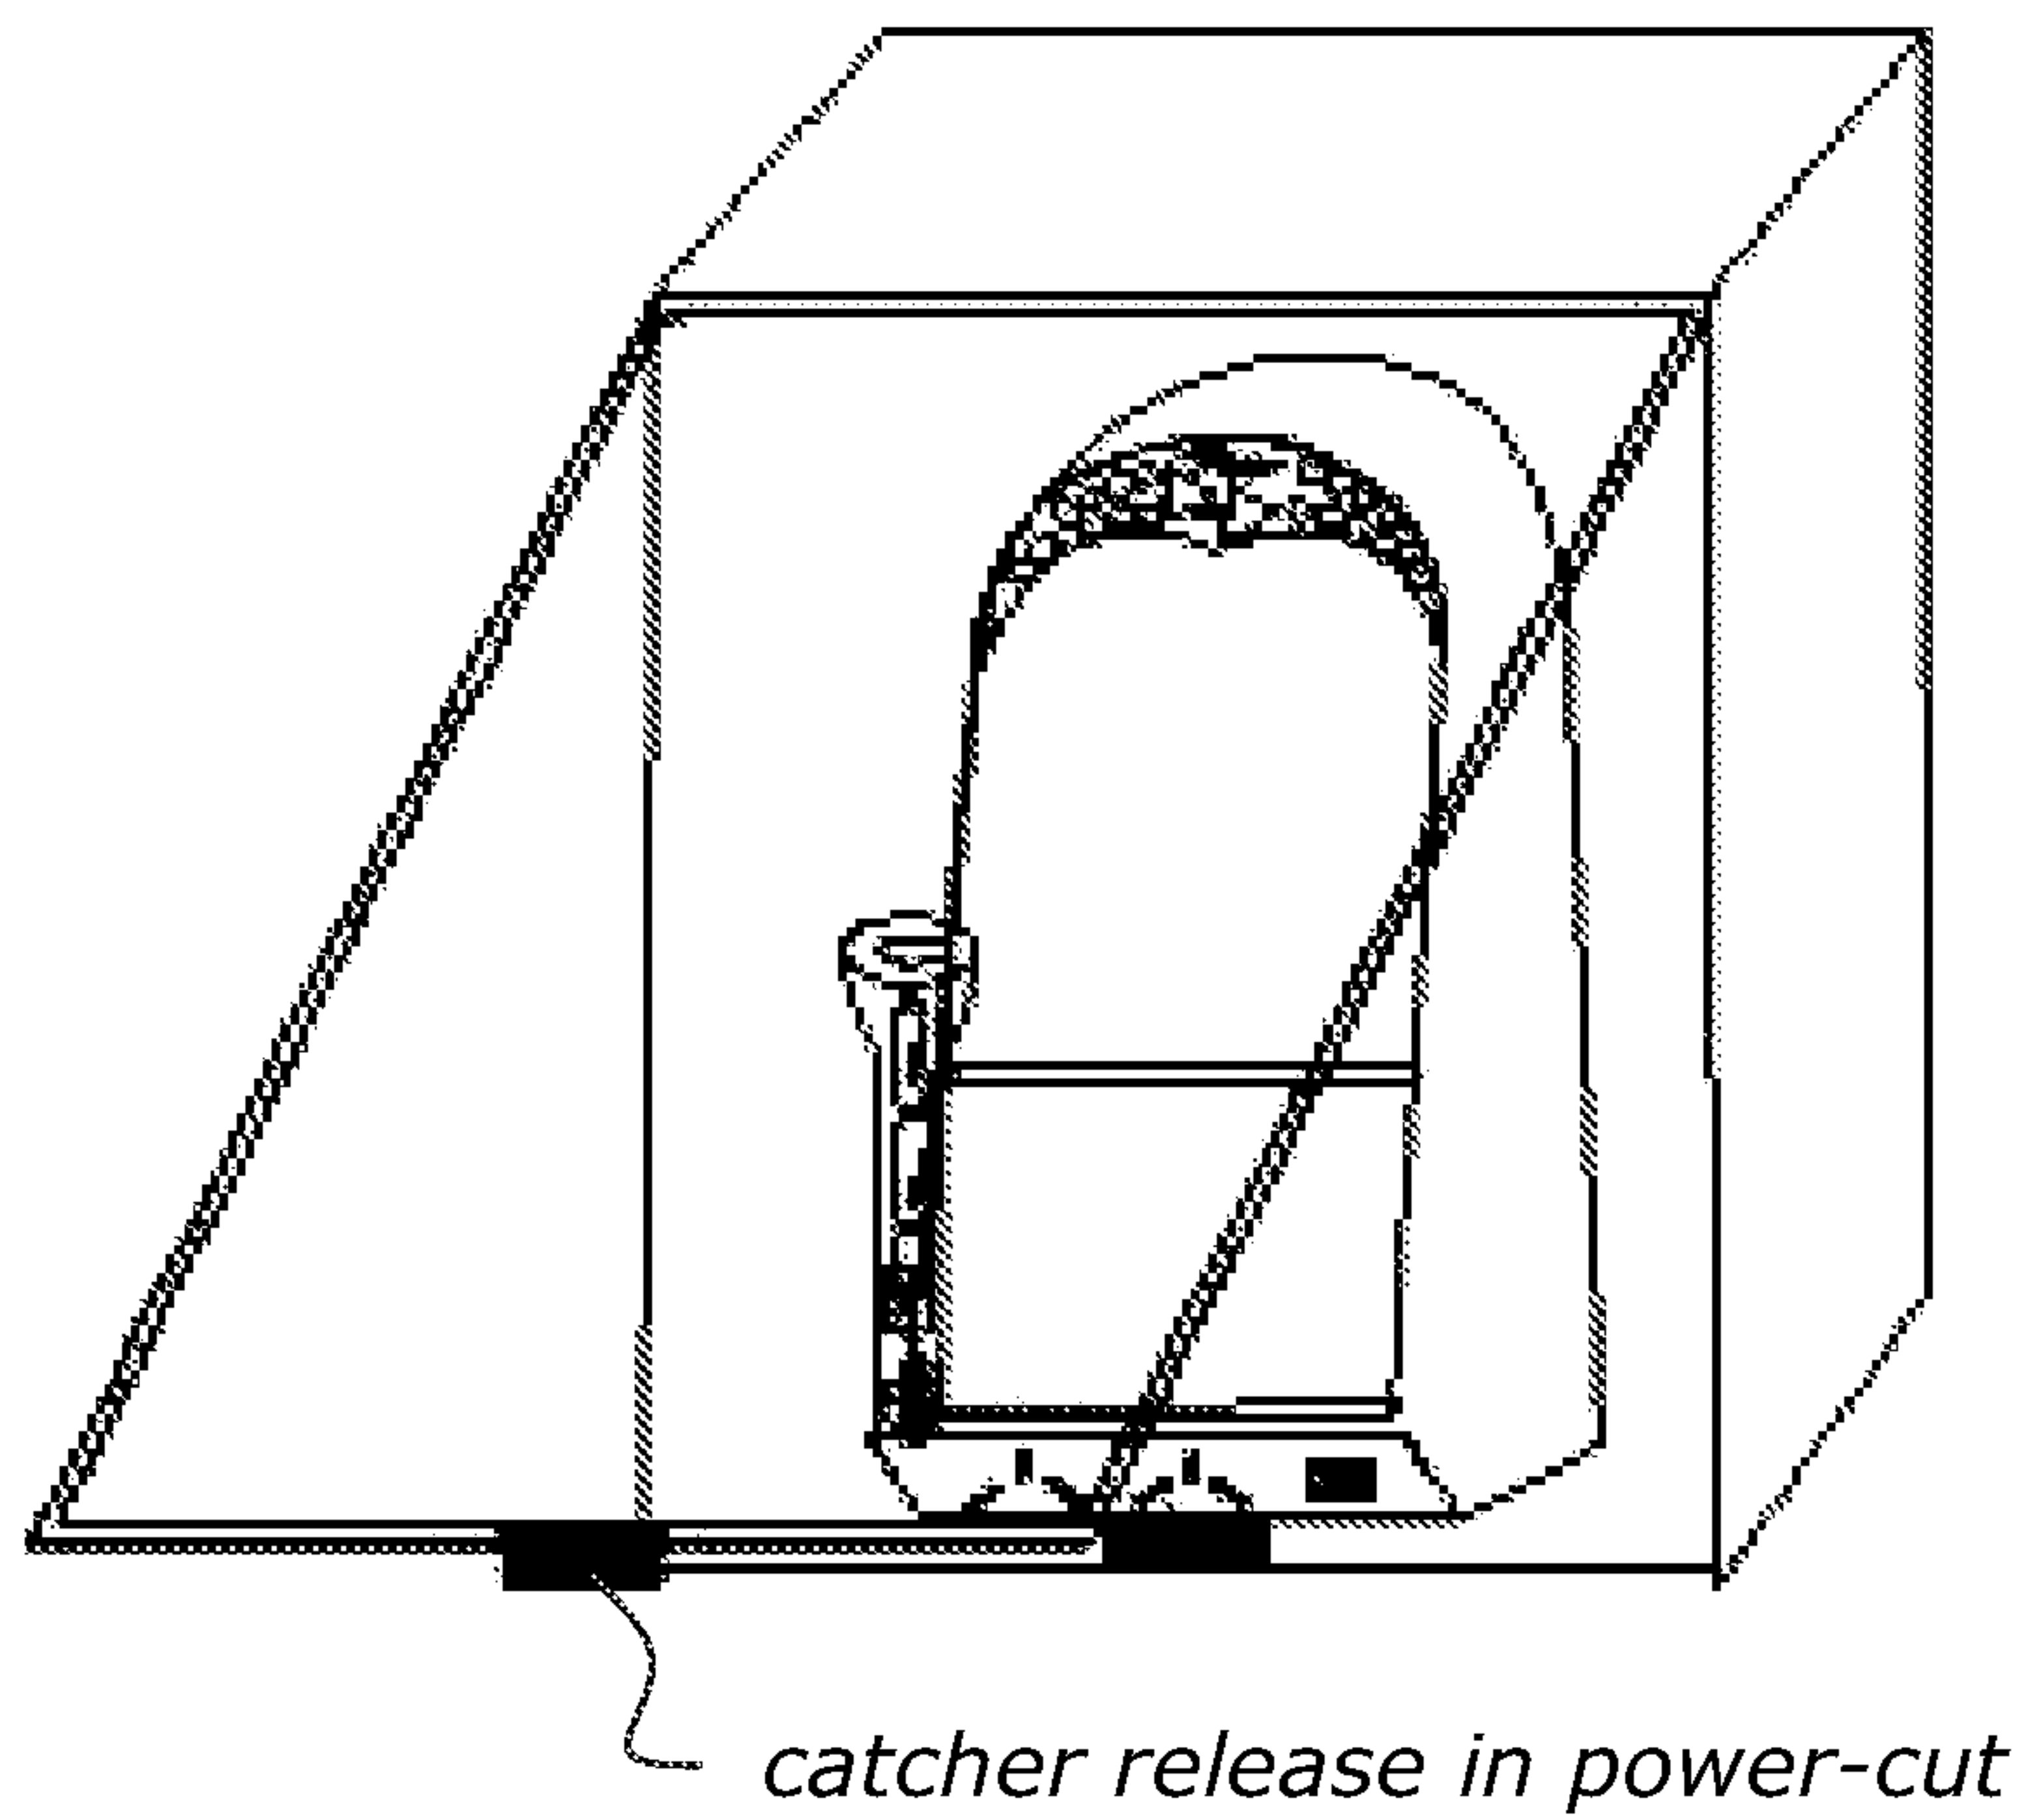 
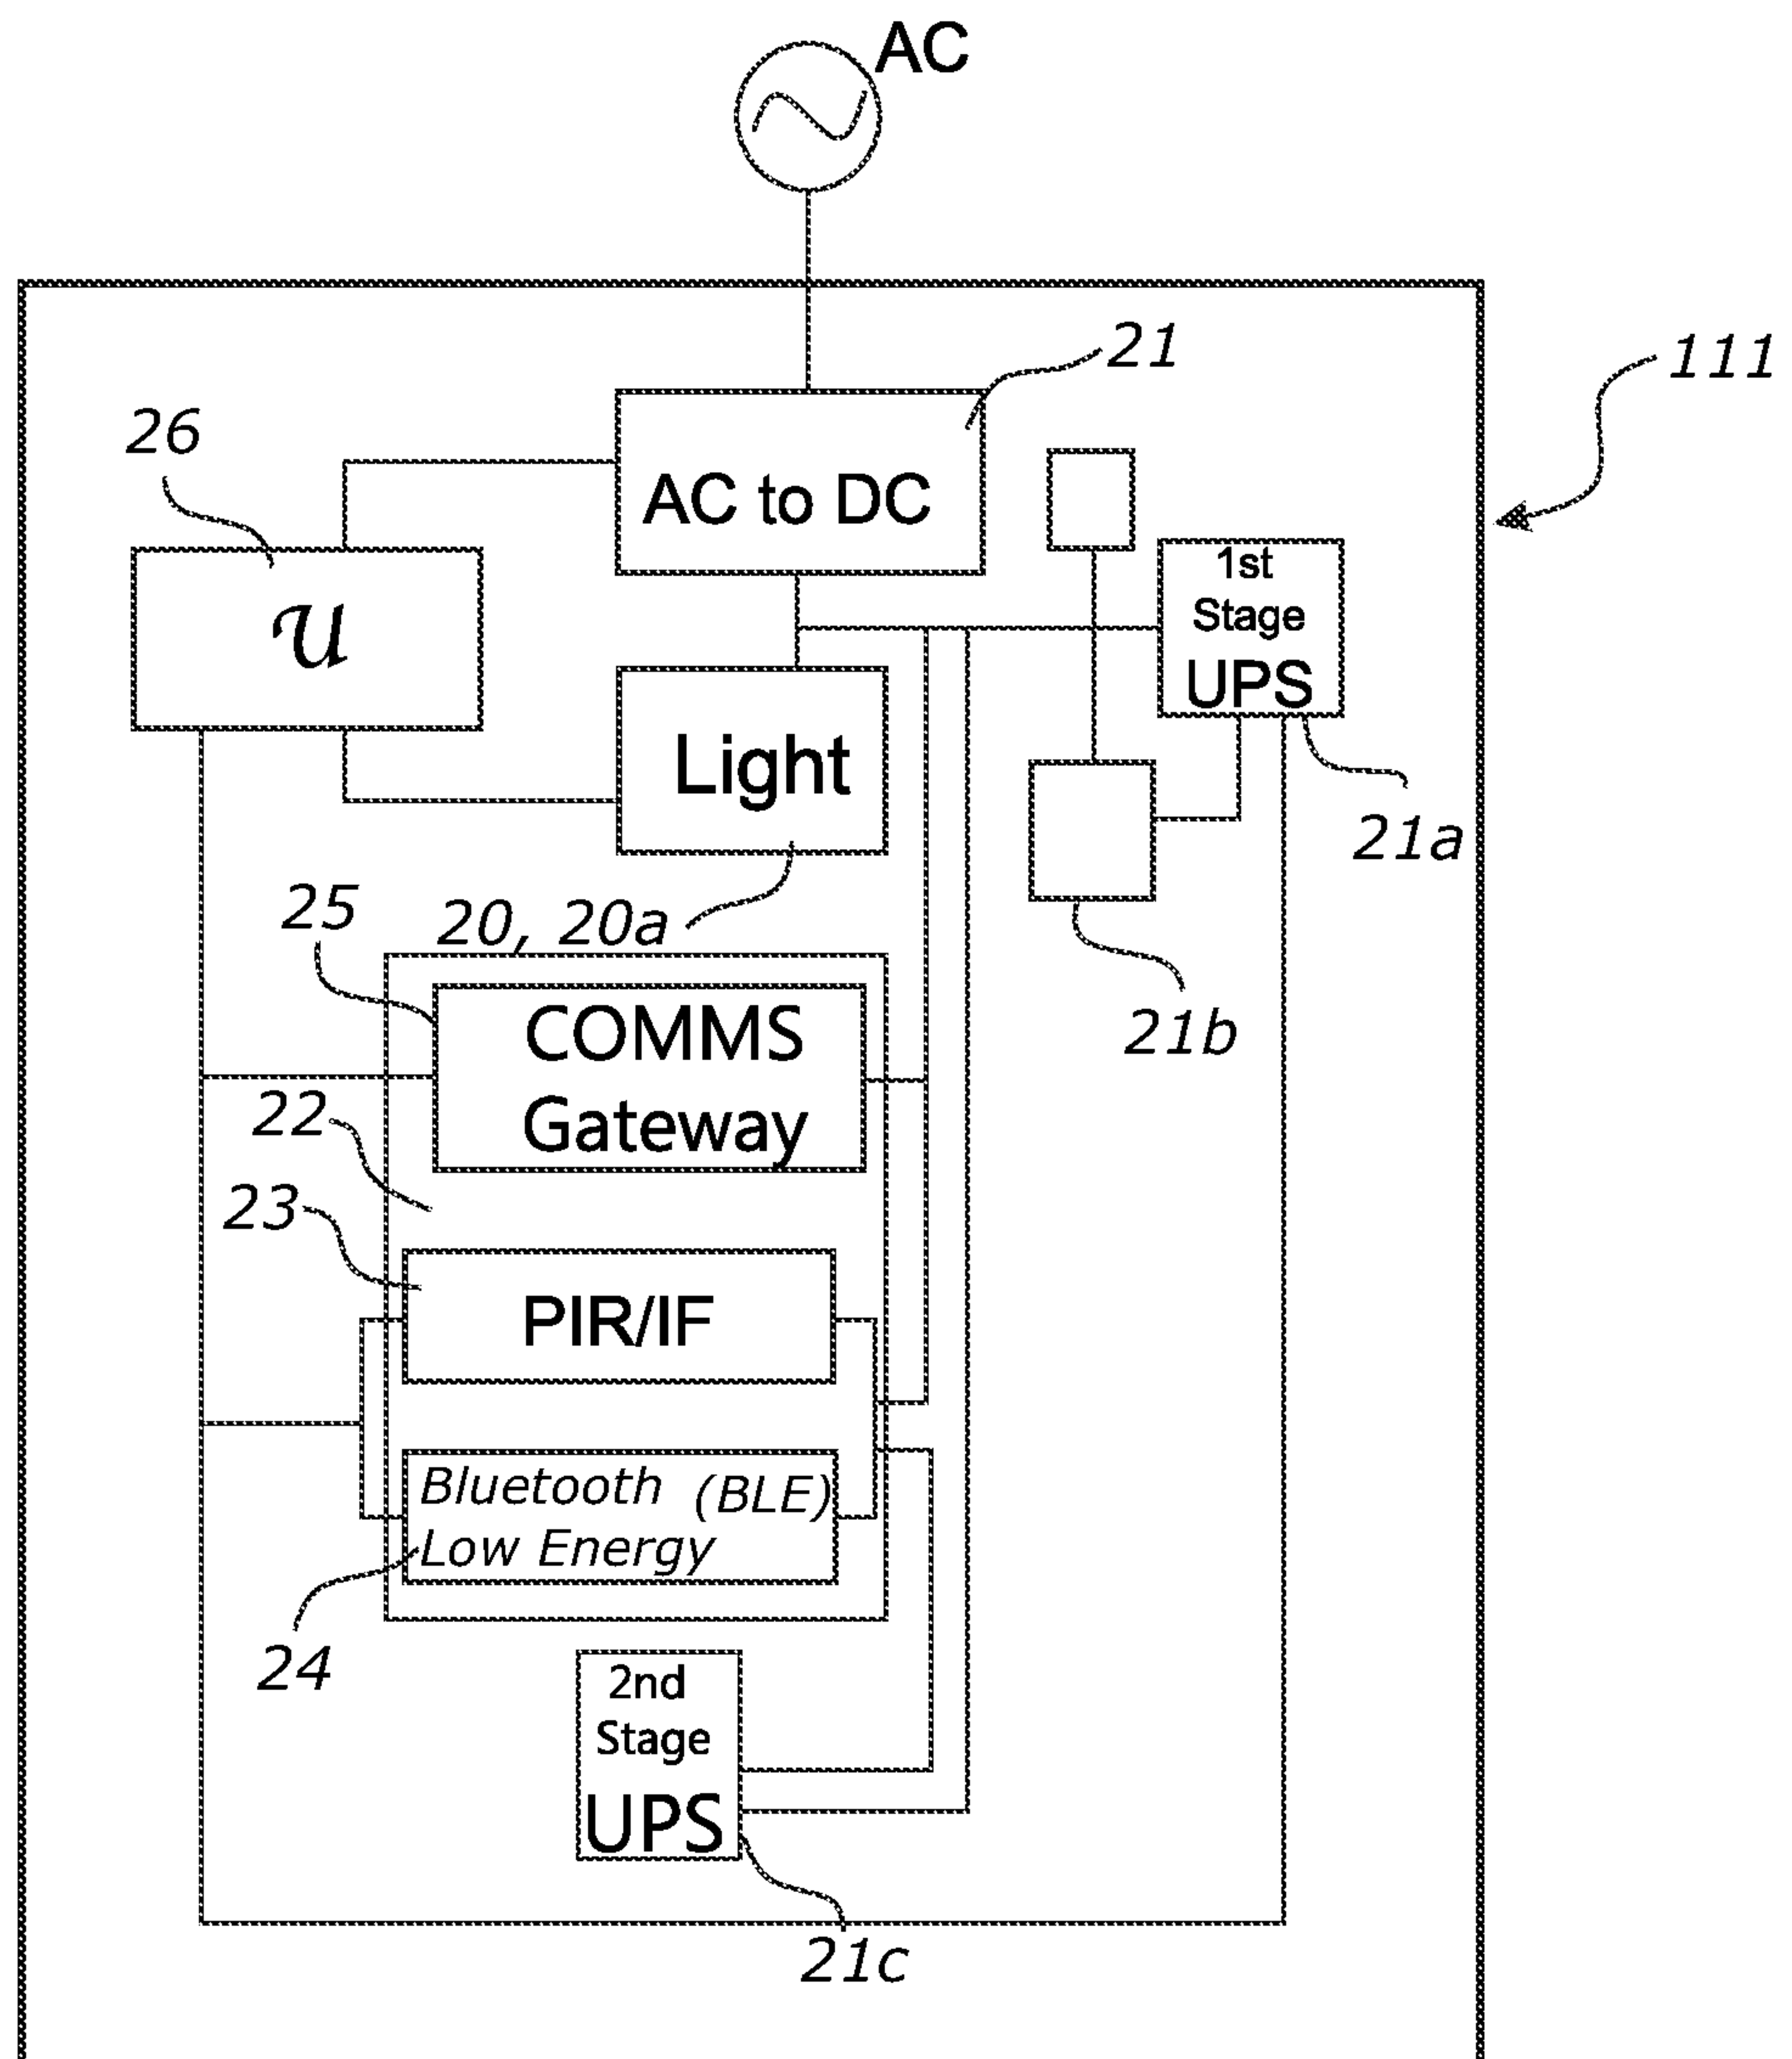 


FIGURE 7B

**FIG. 8**

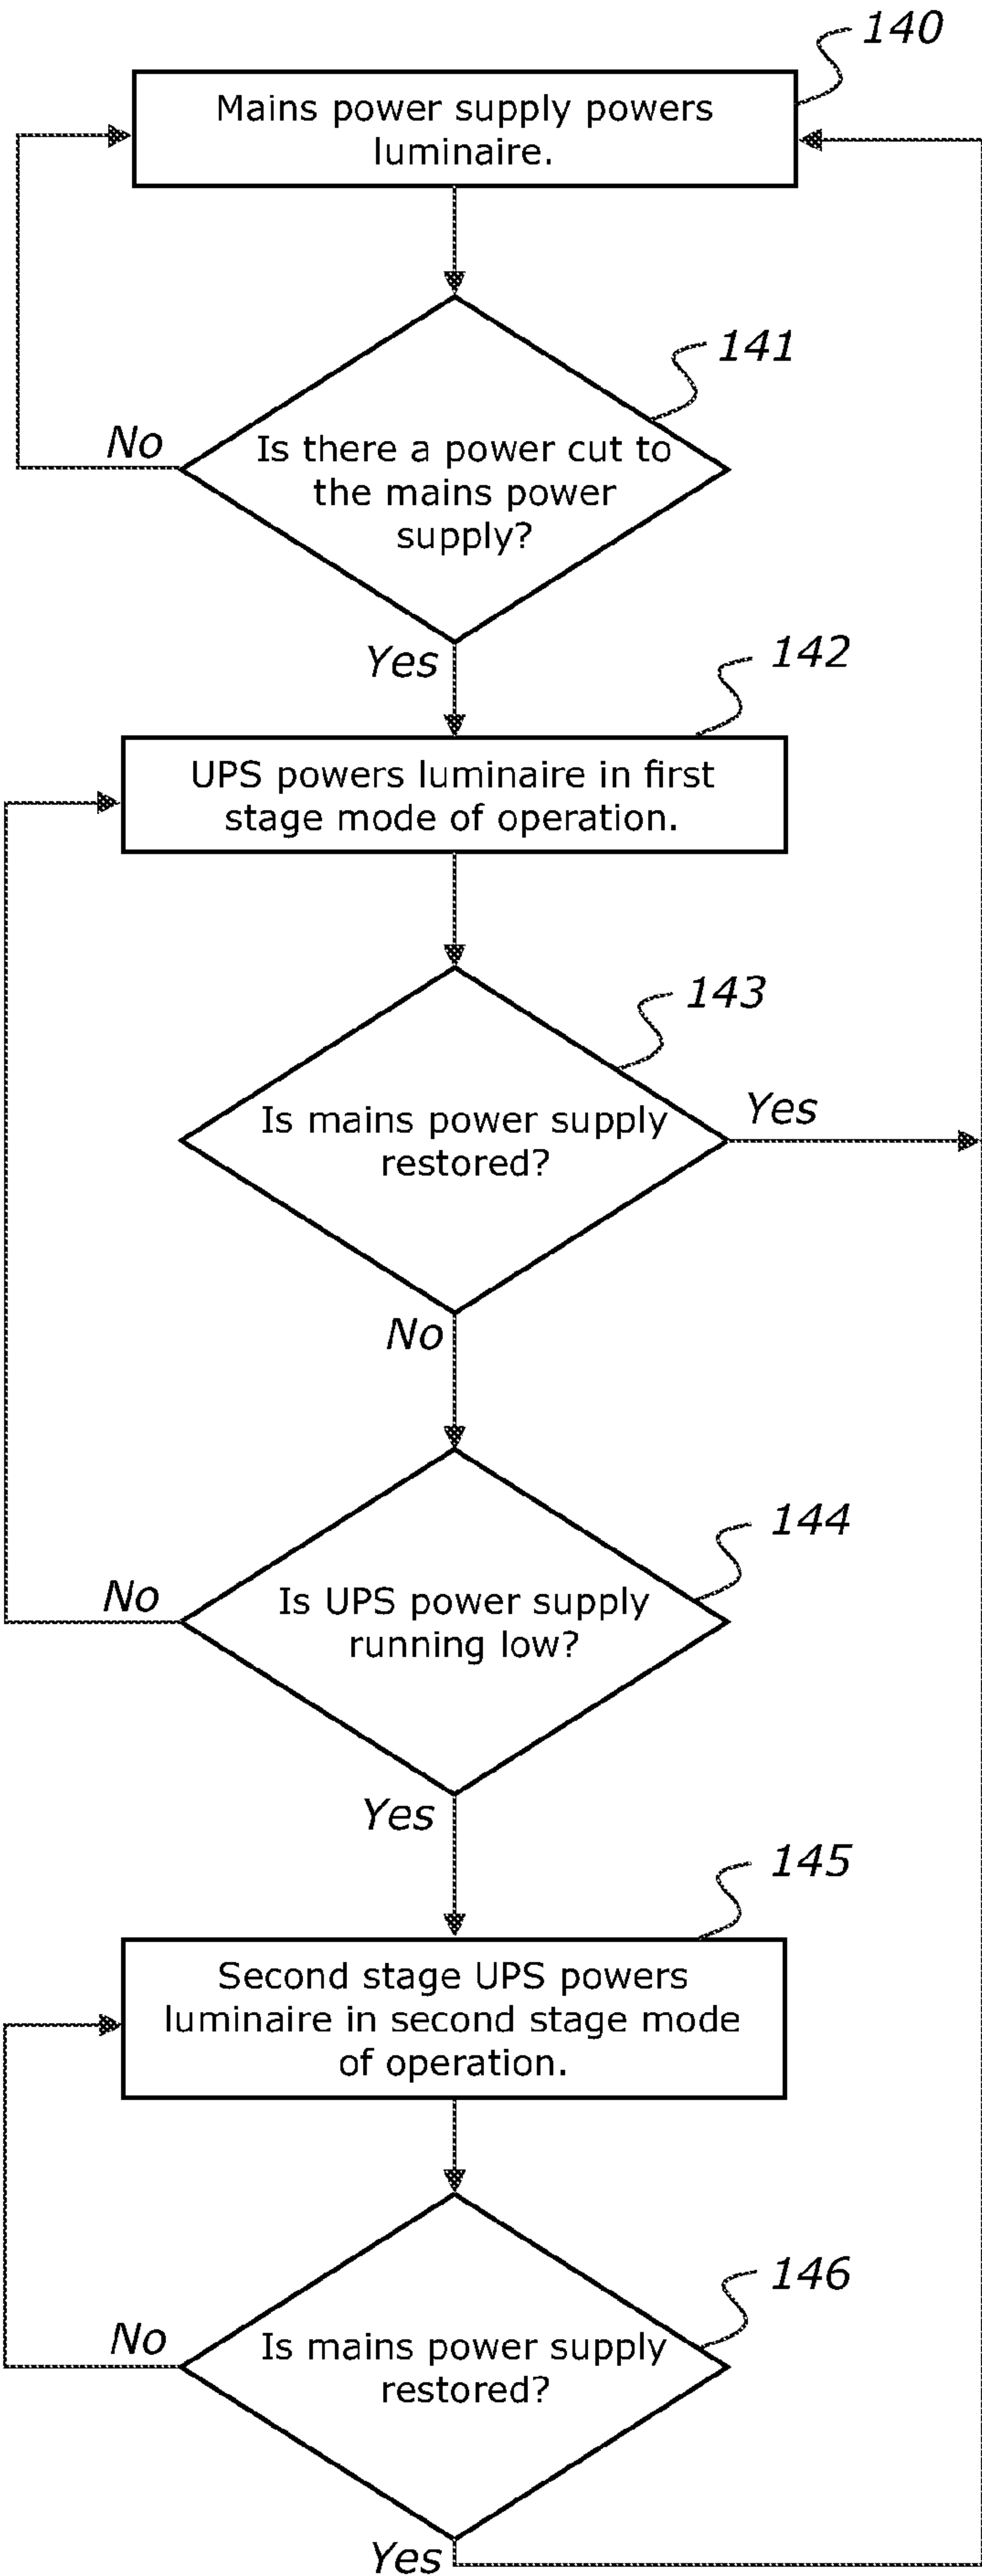 
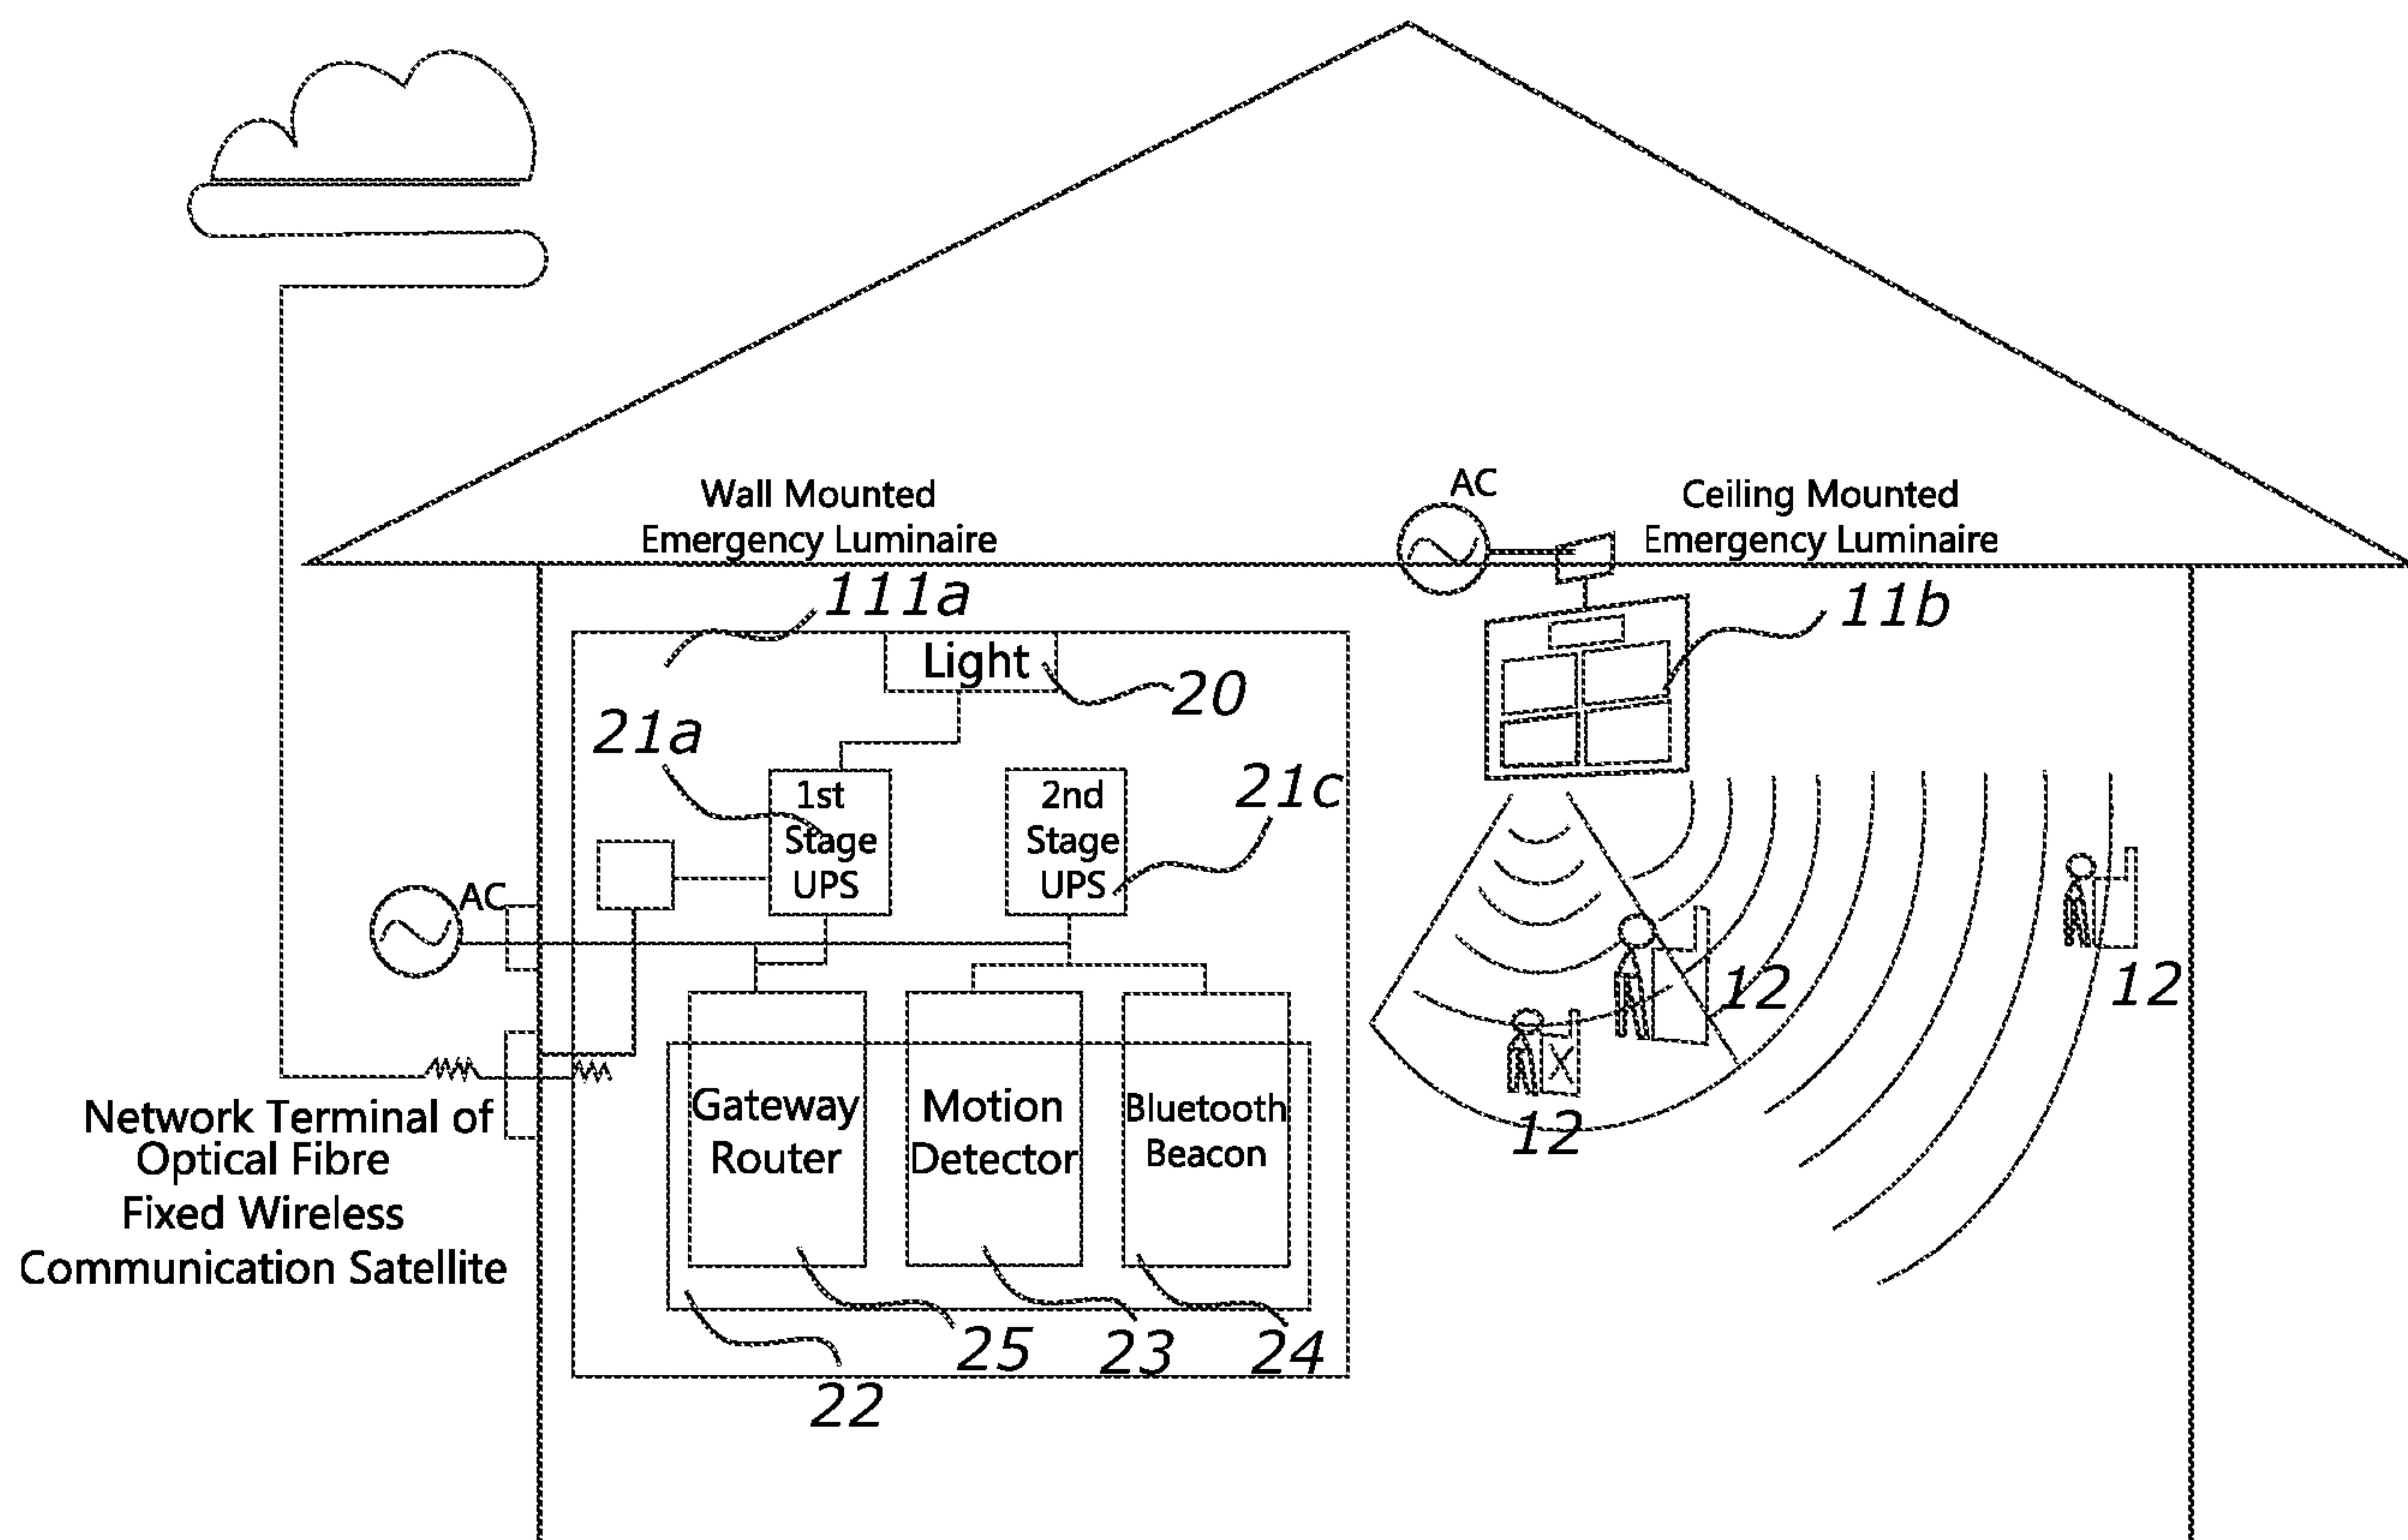 
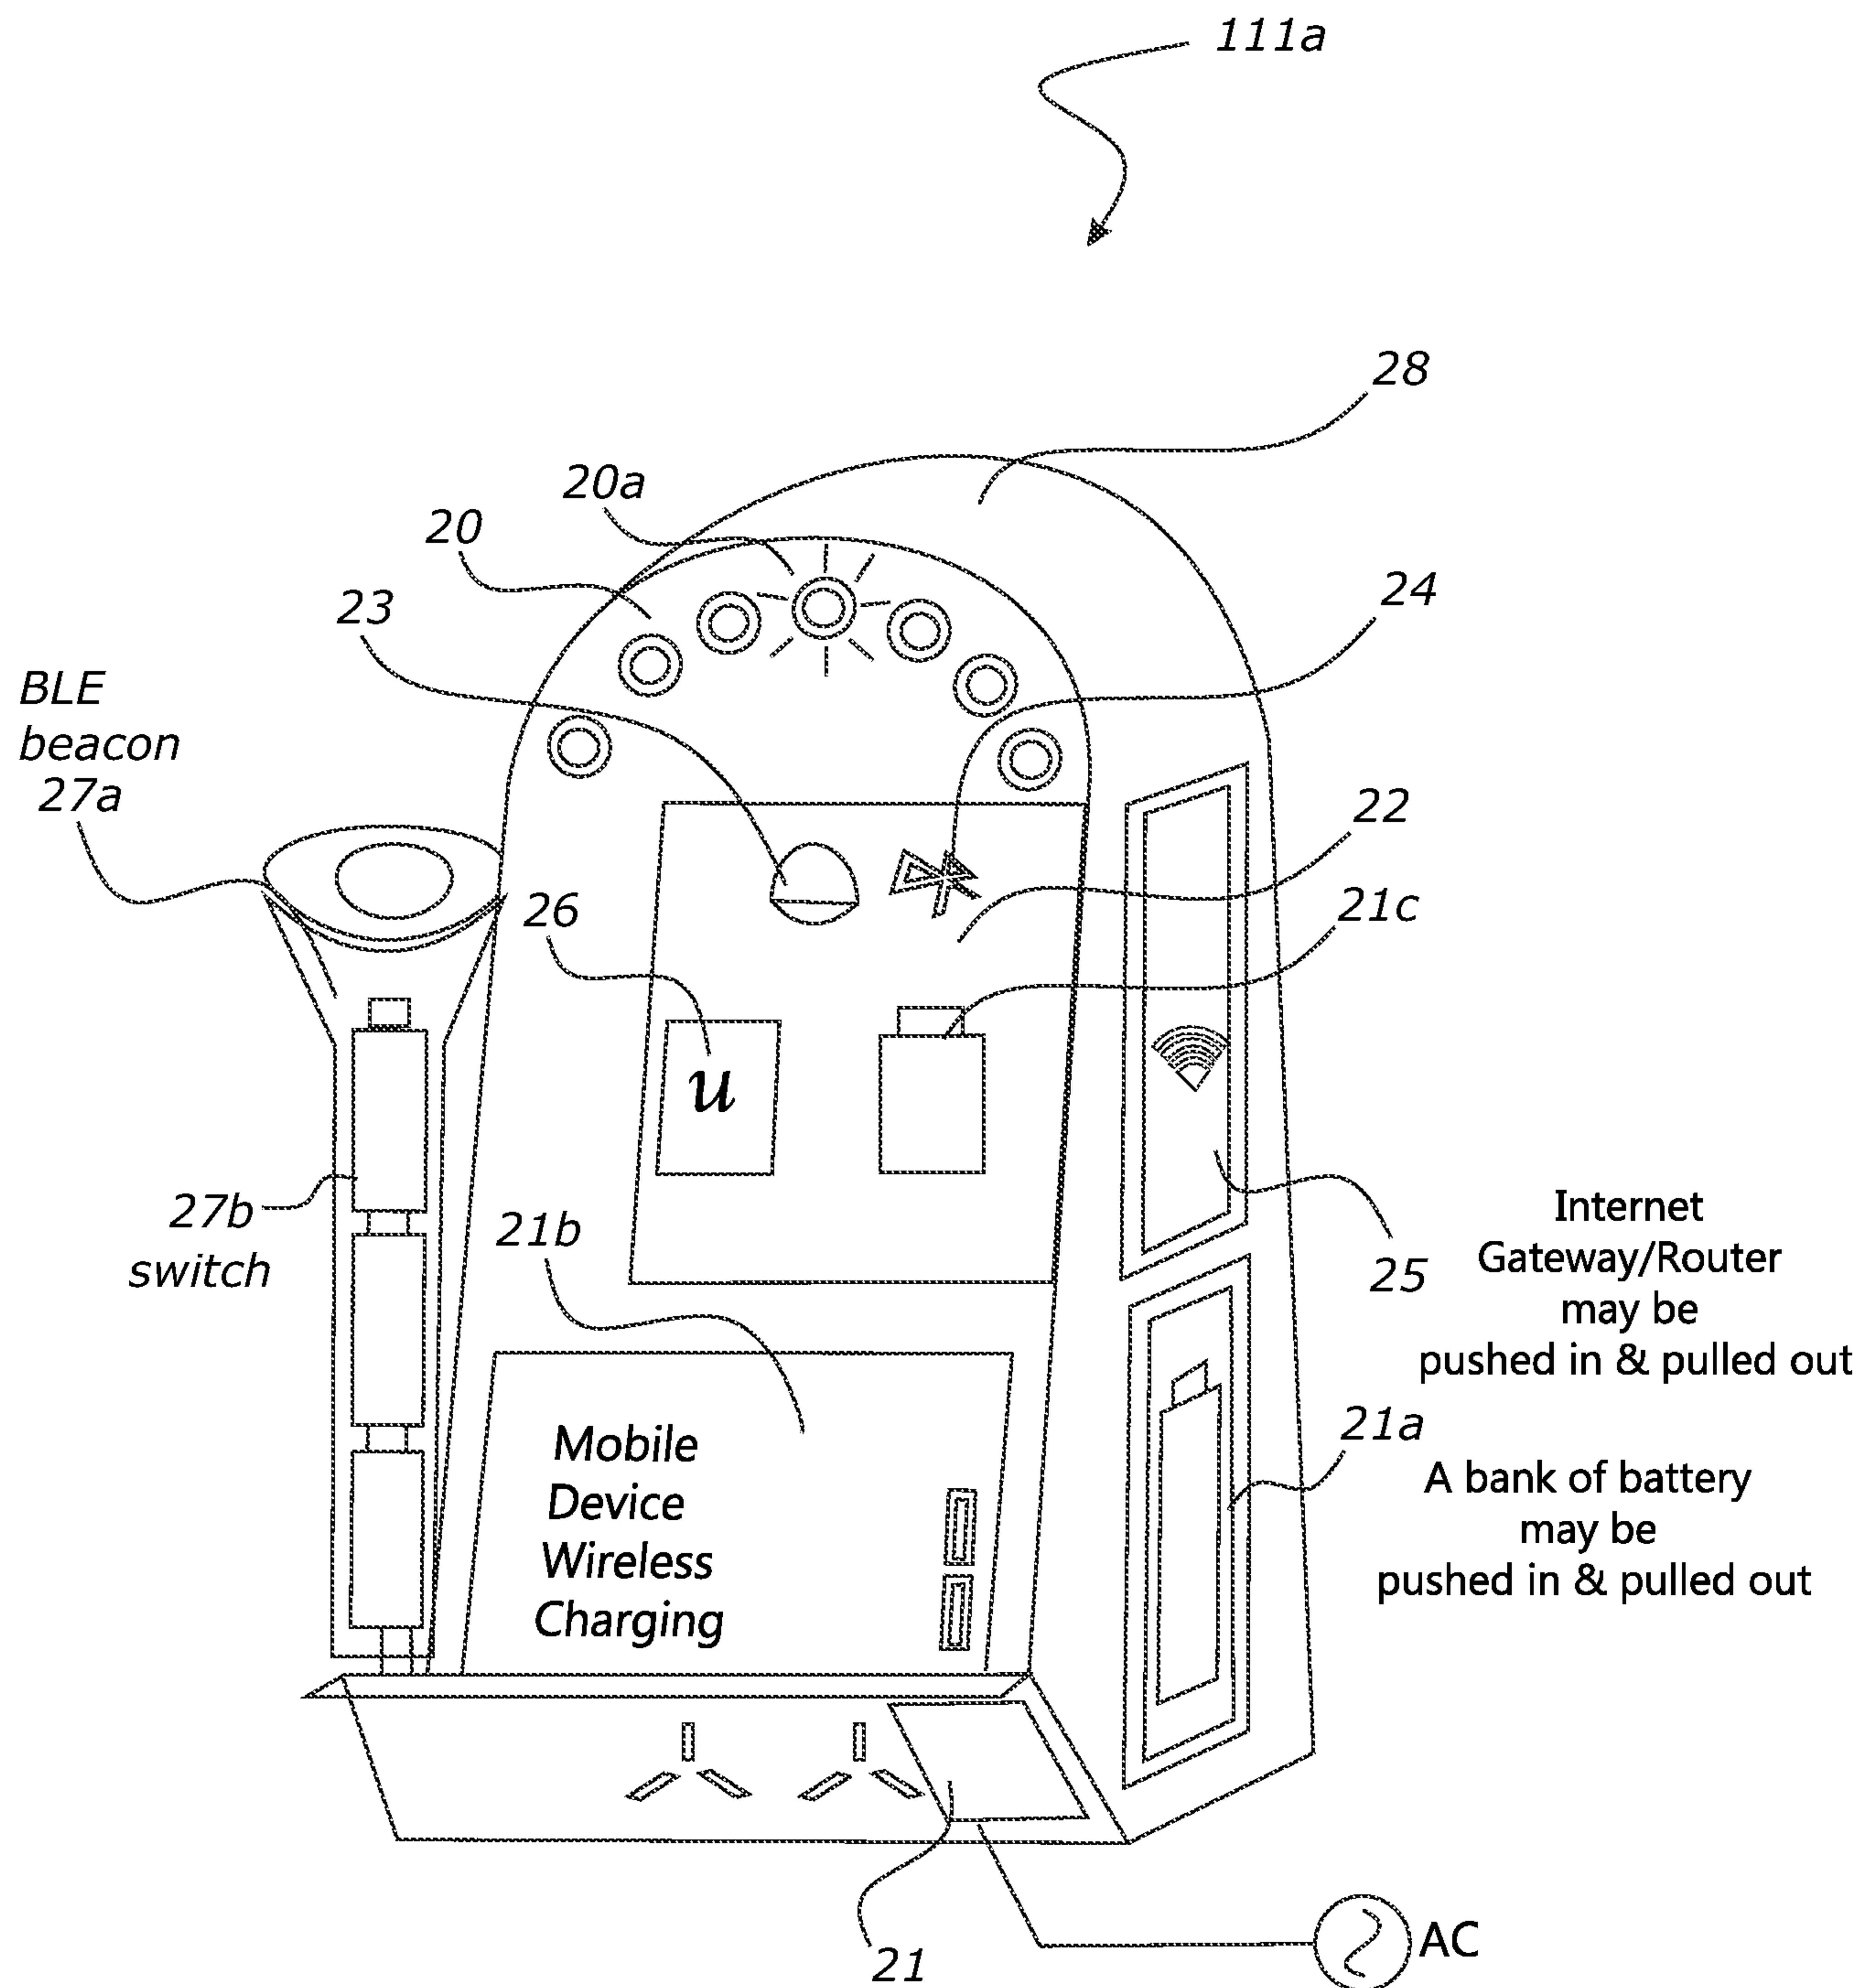 


FIG. 9

**FIG. 10**

**FIG. 11**

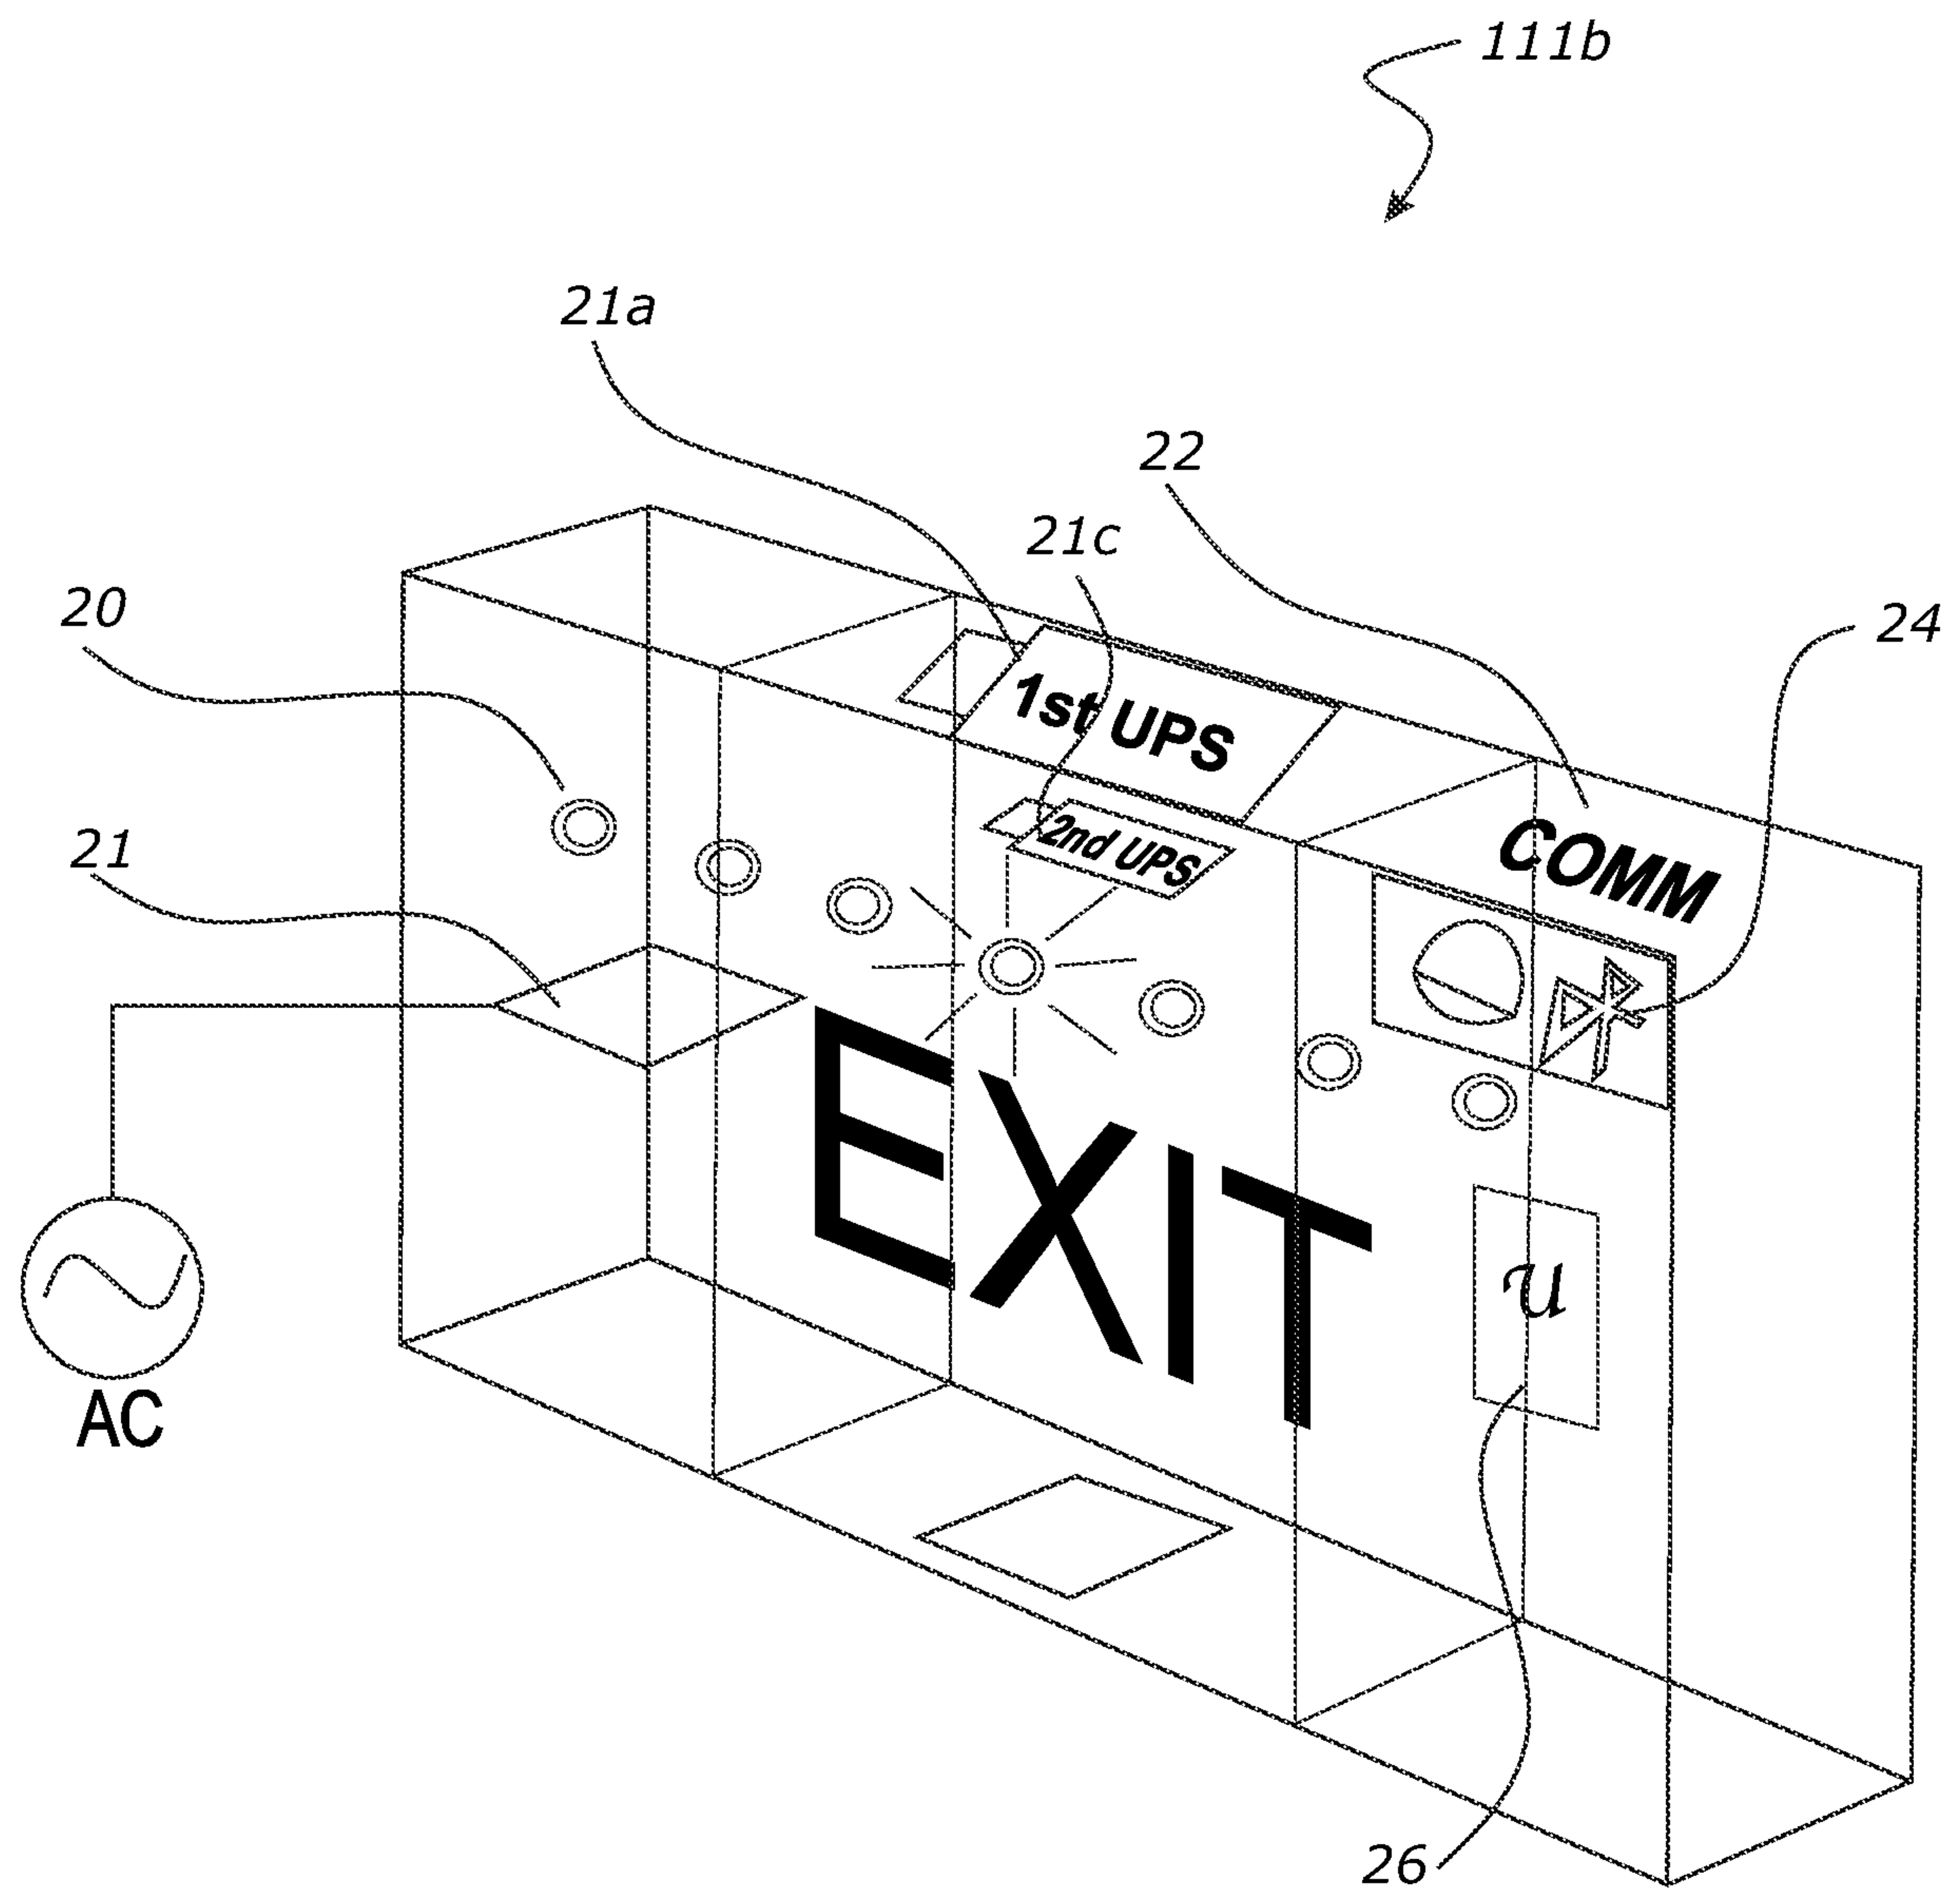 
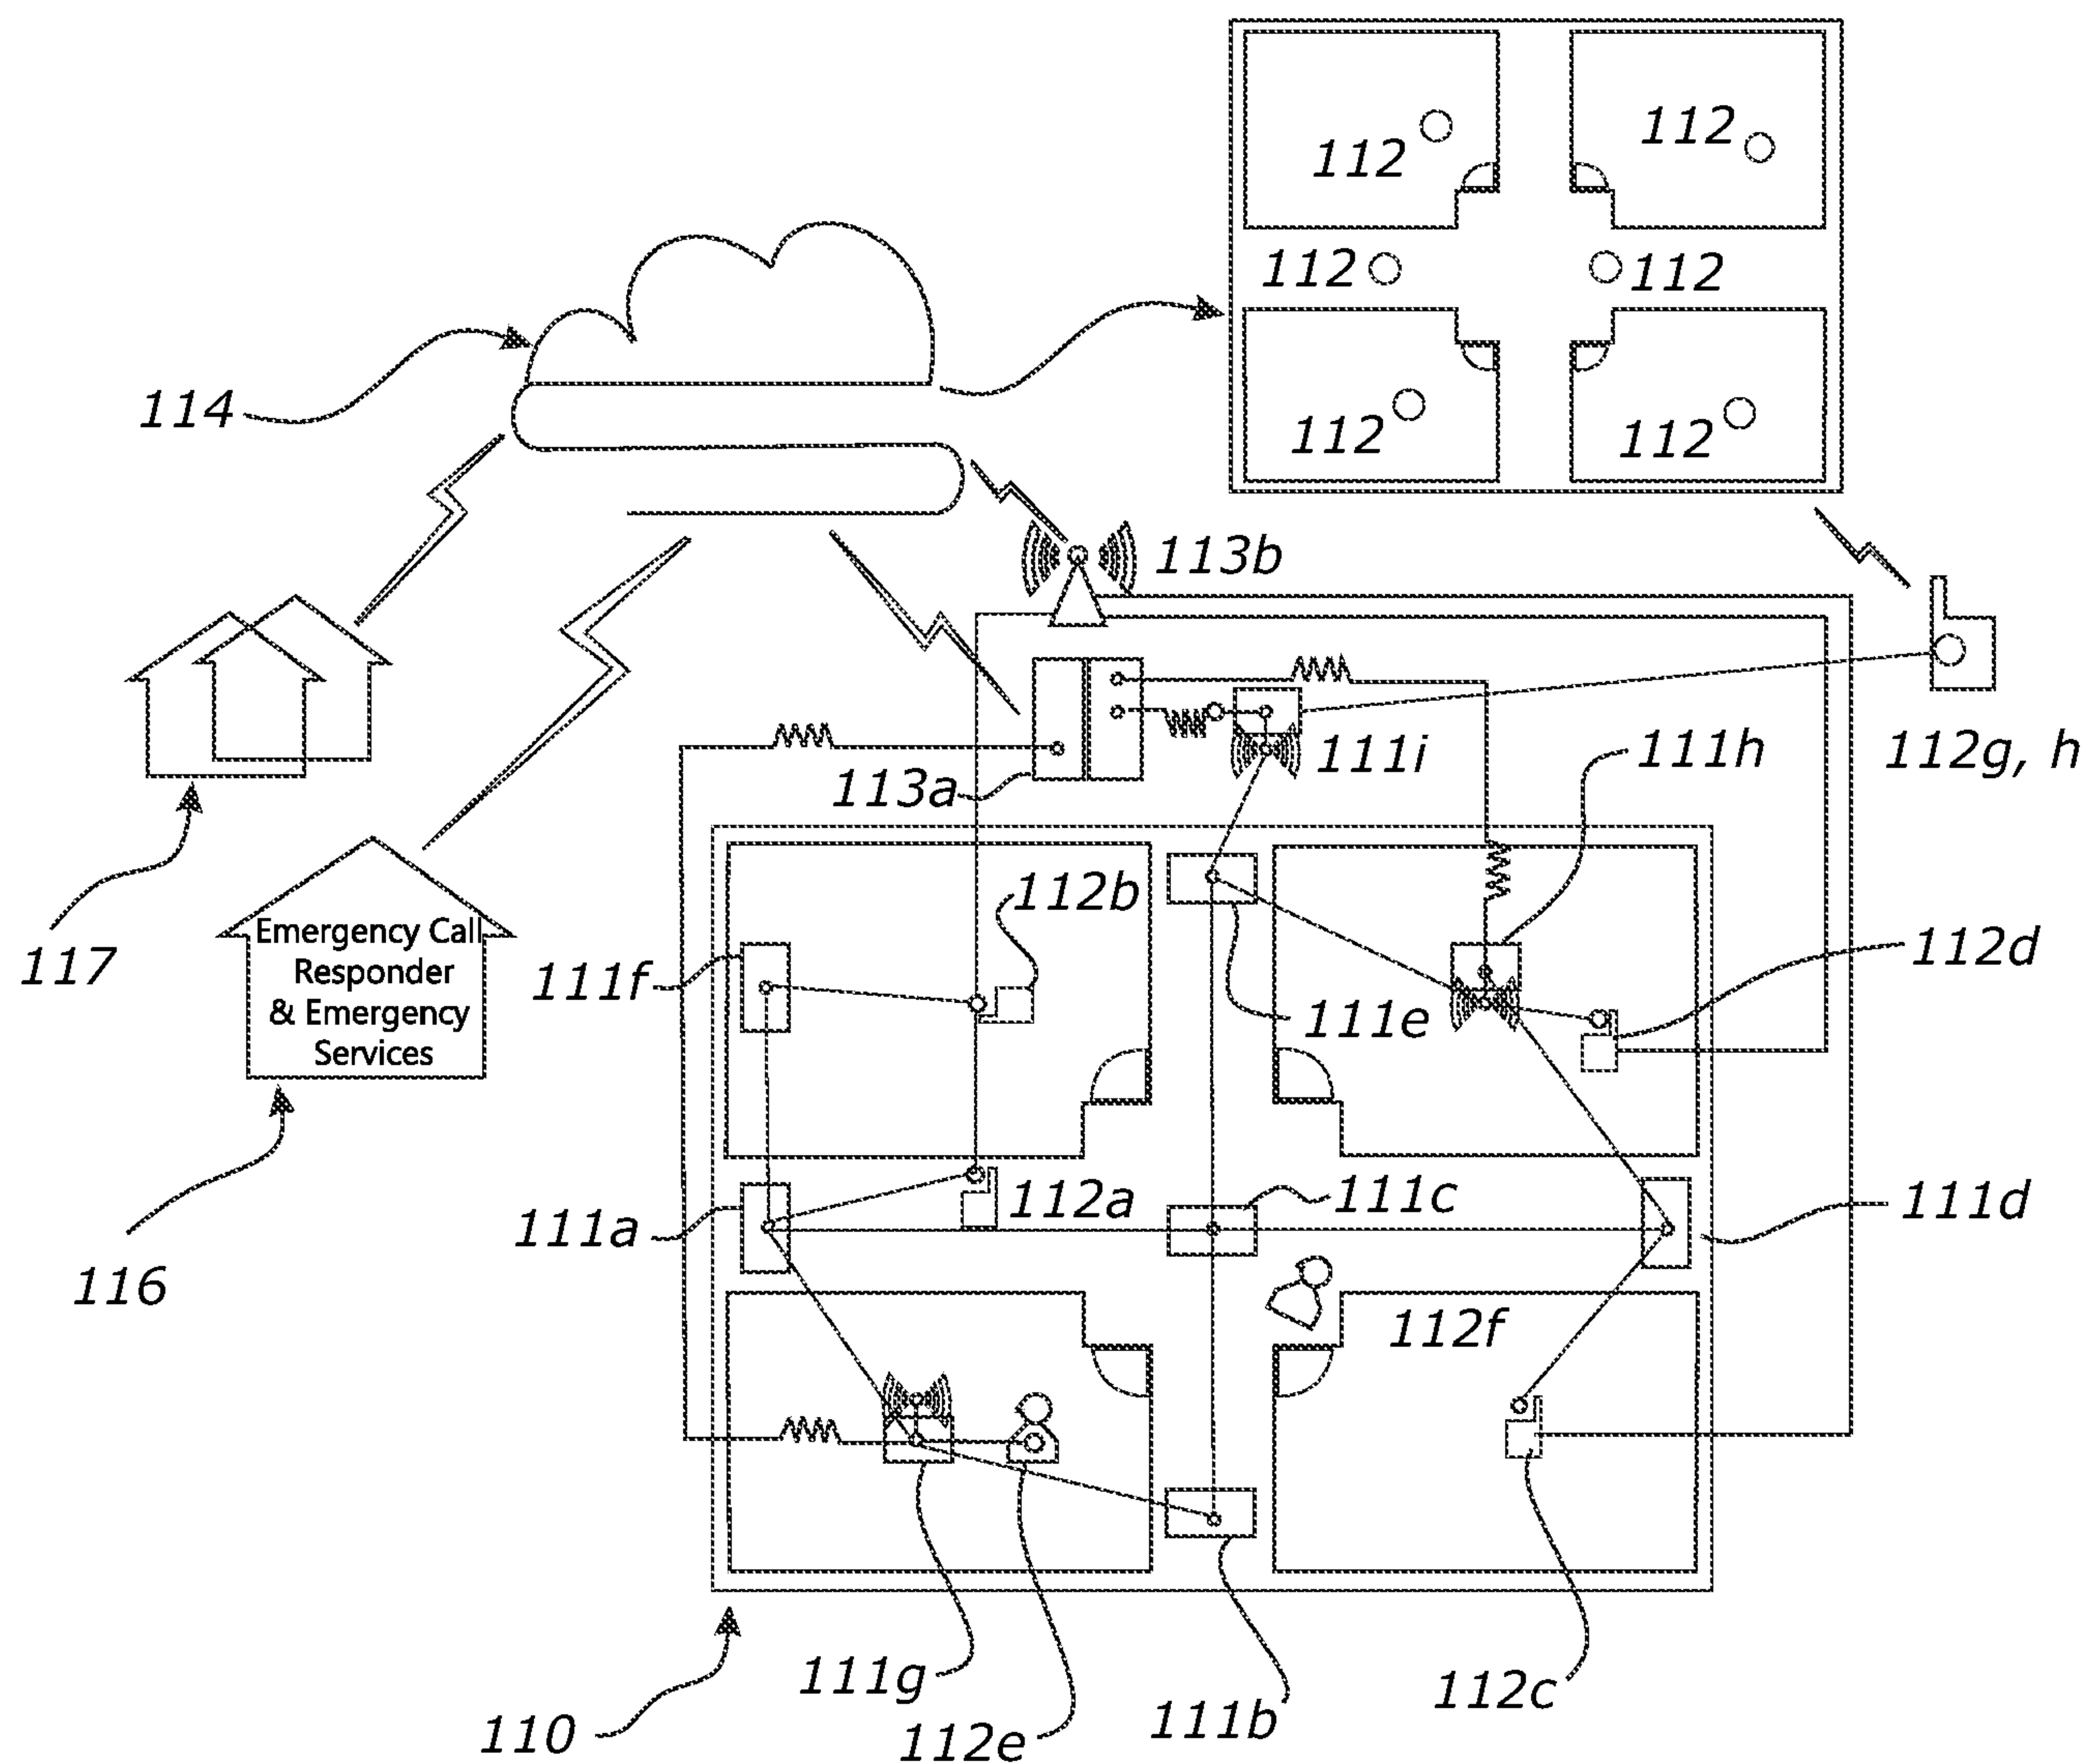 
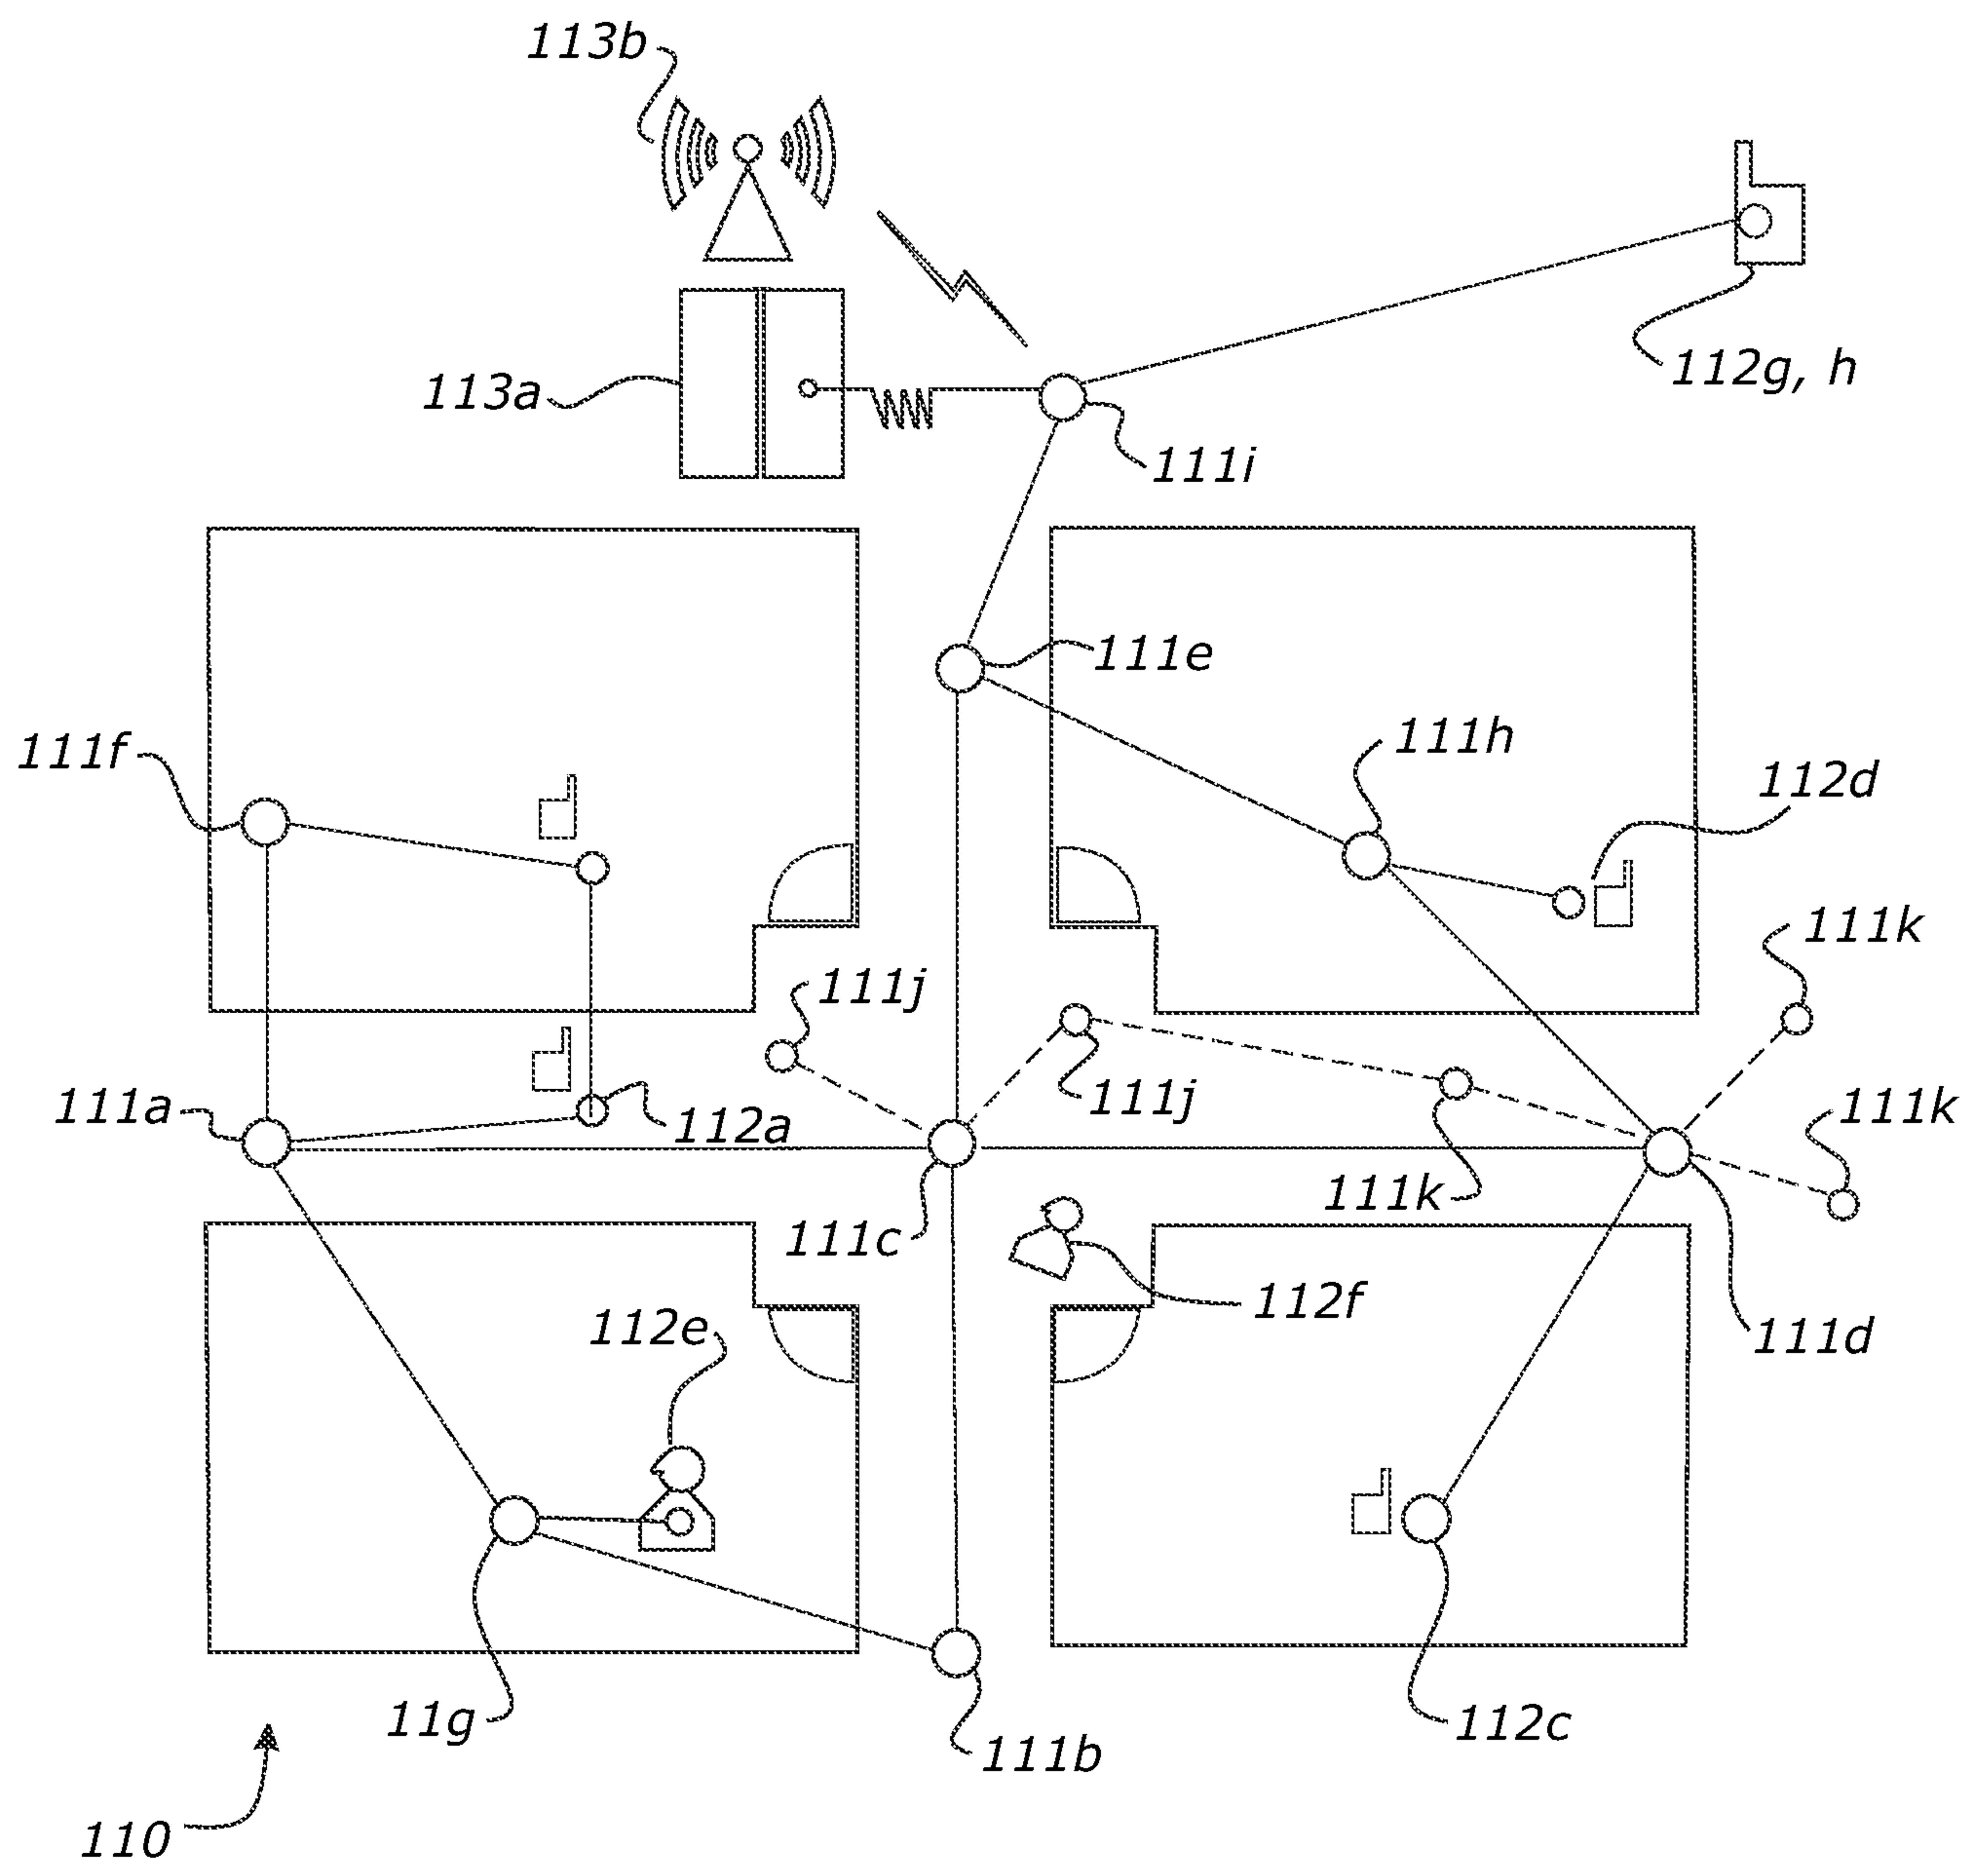 


FIG. 12

**FIG. 13**

**FIG. 14**

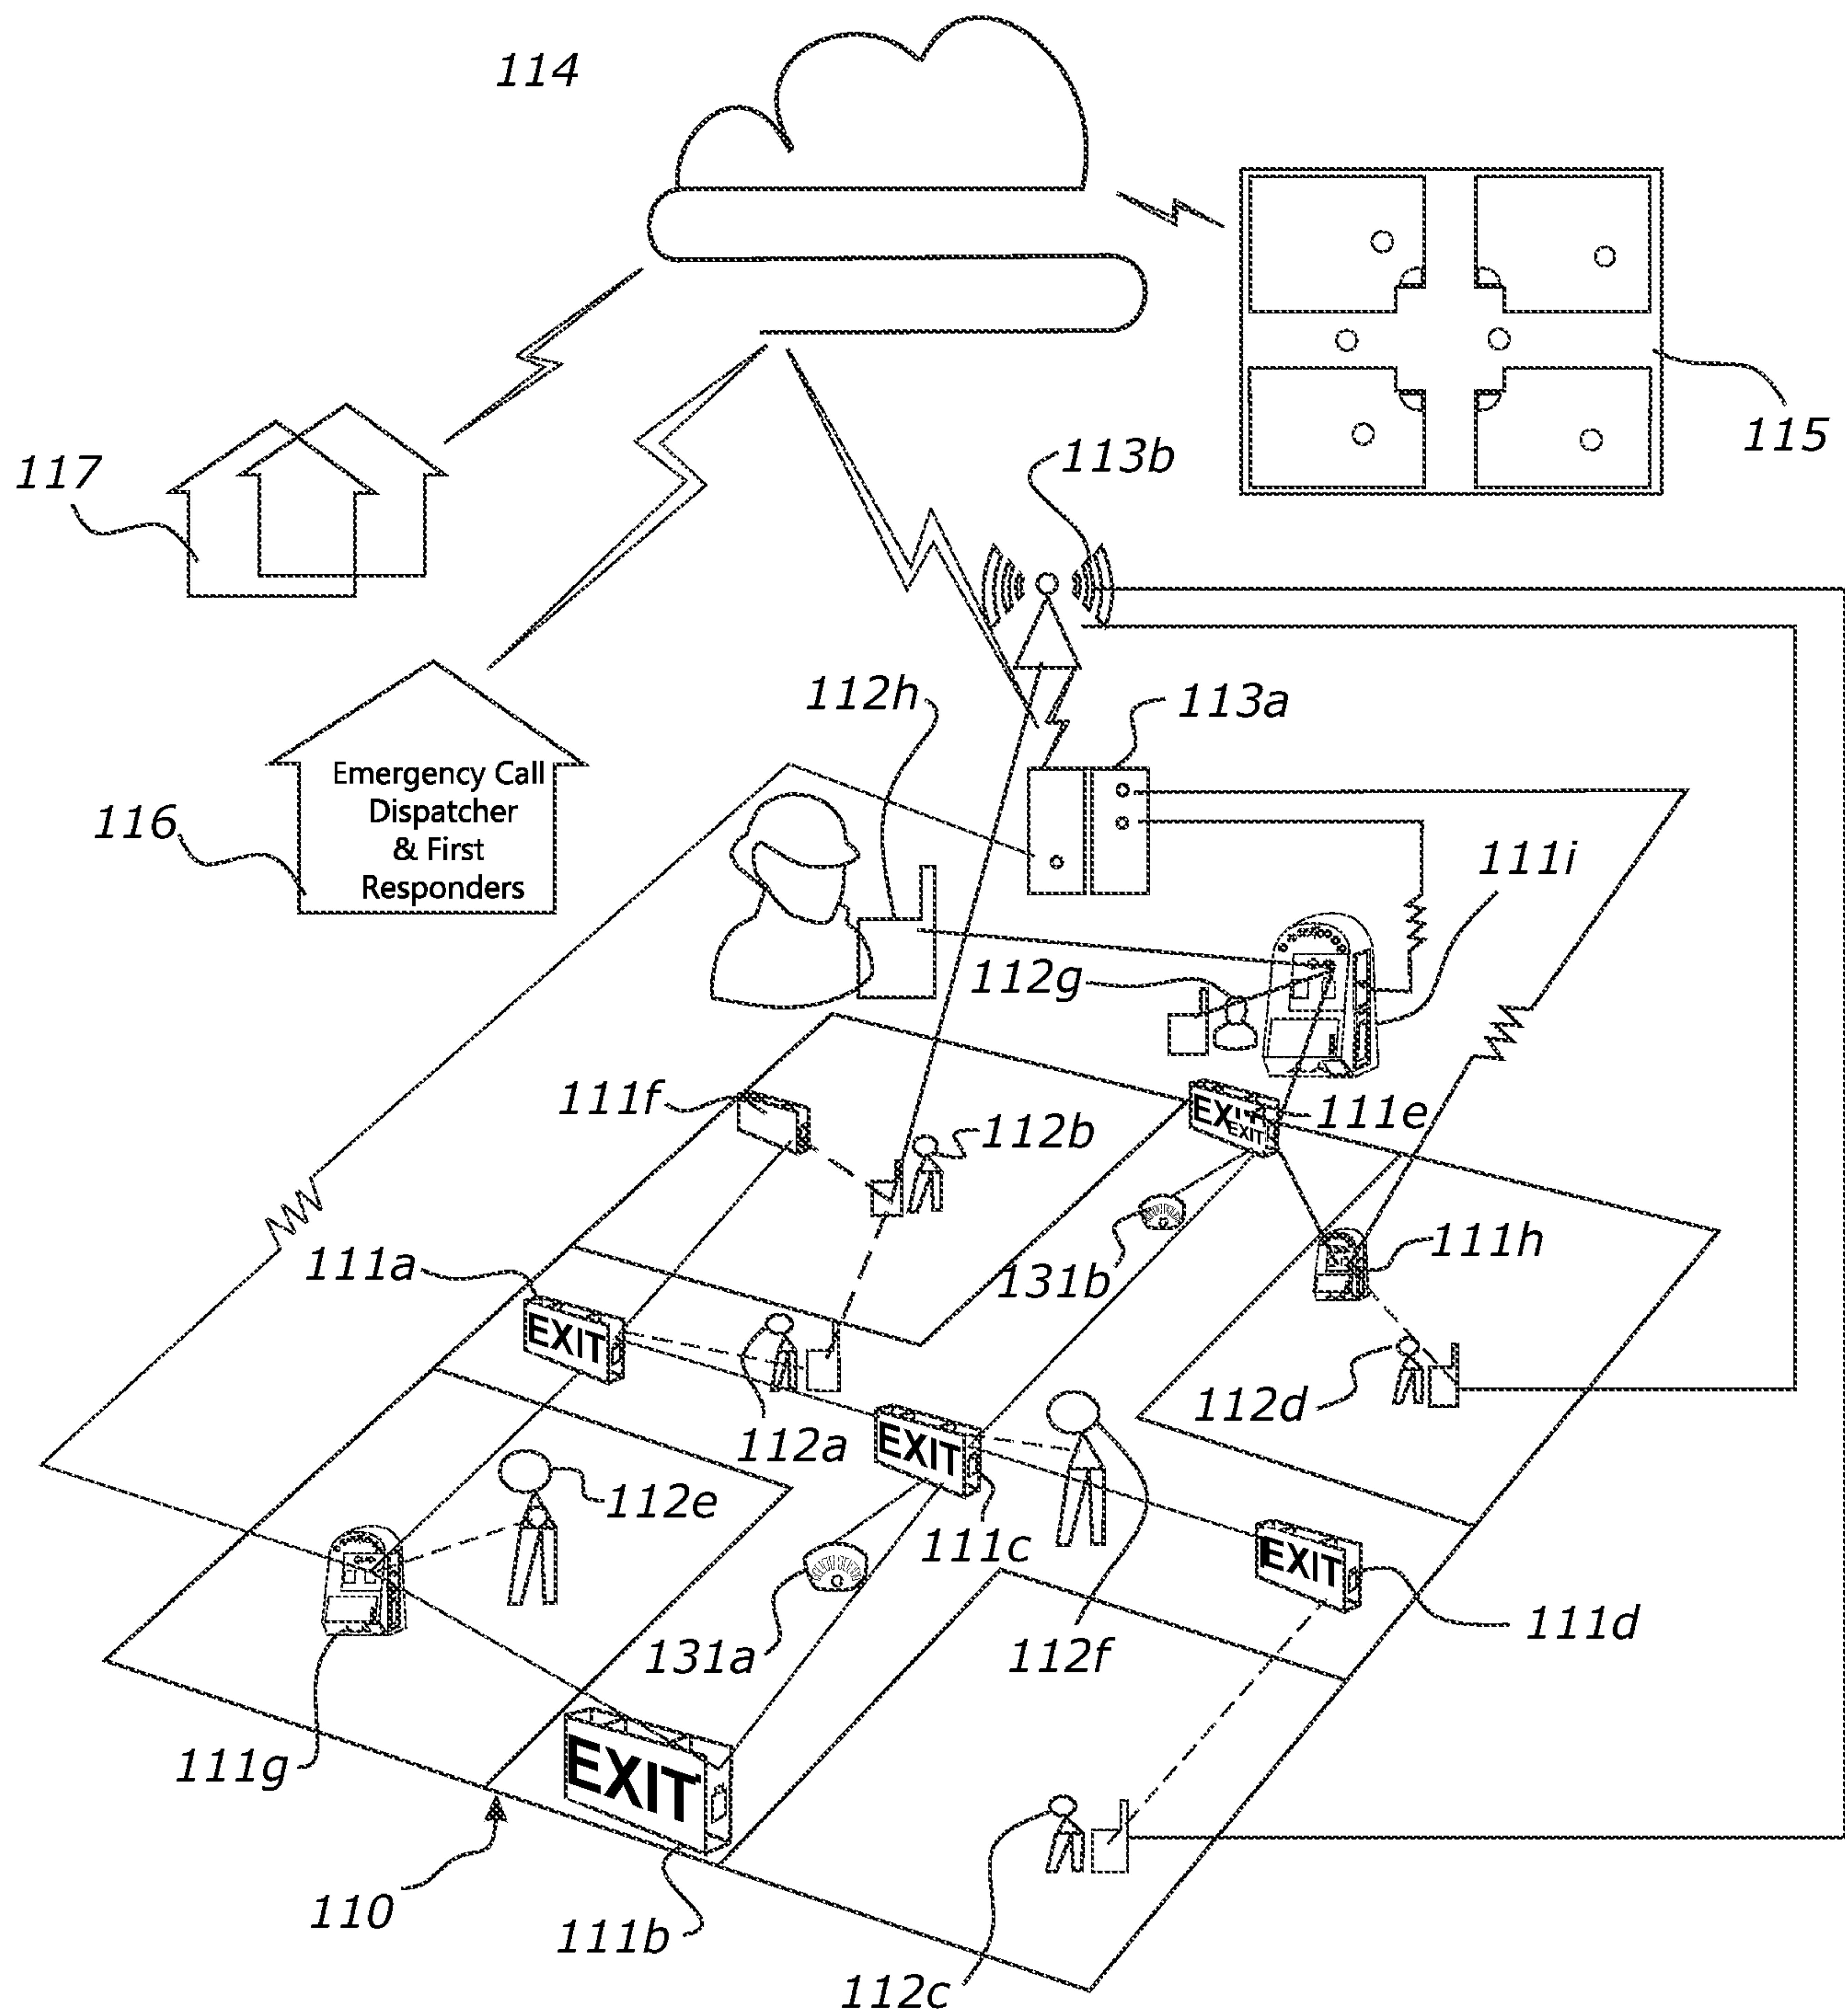 
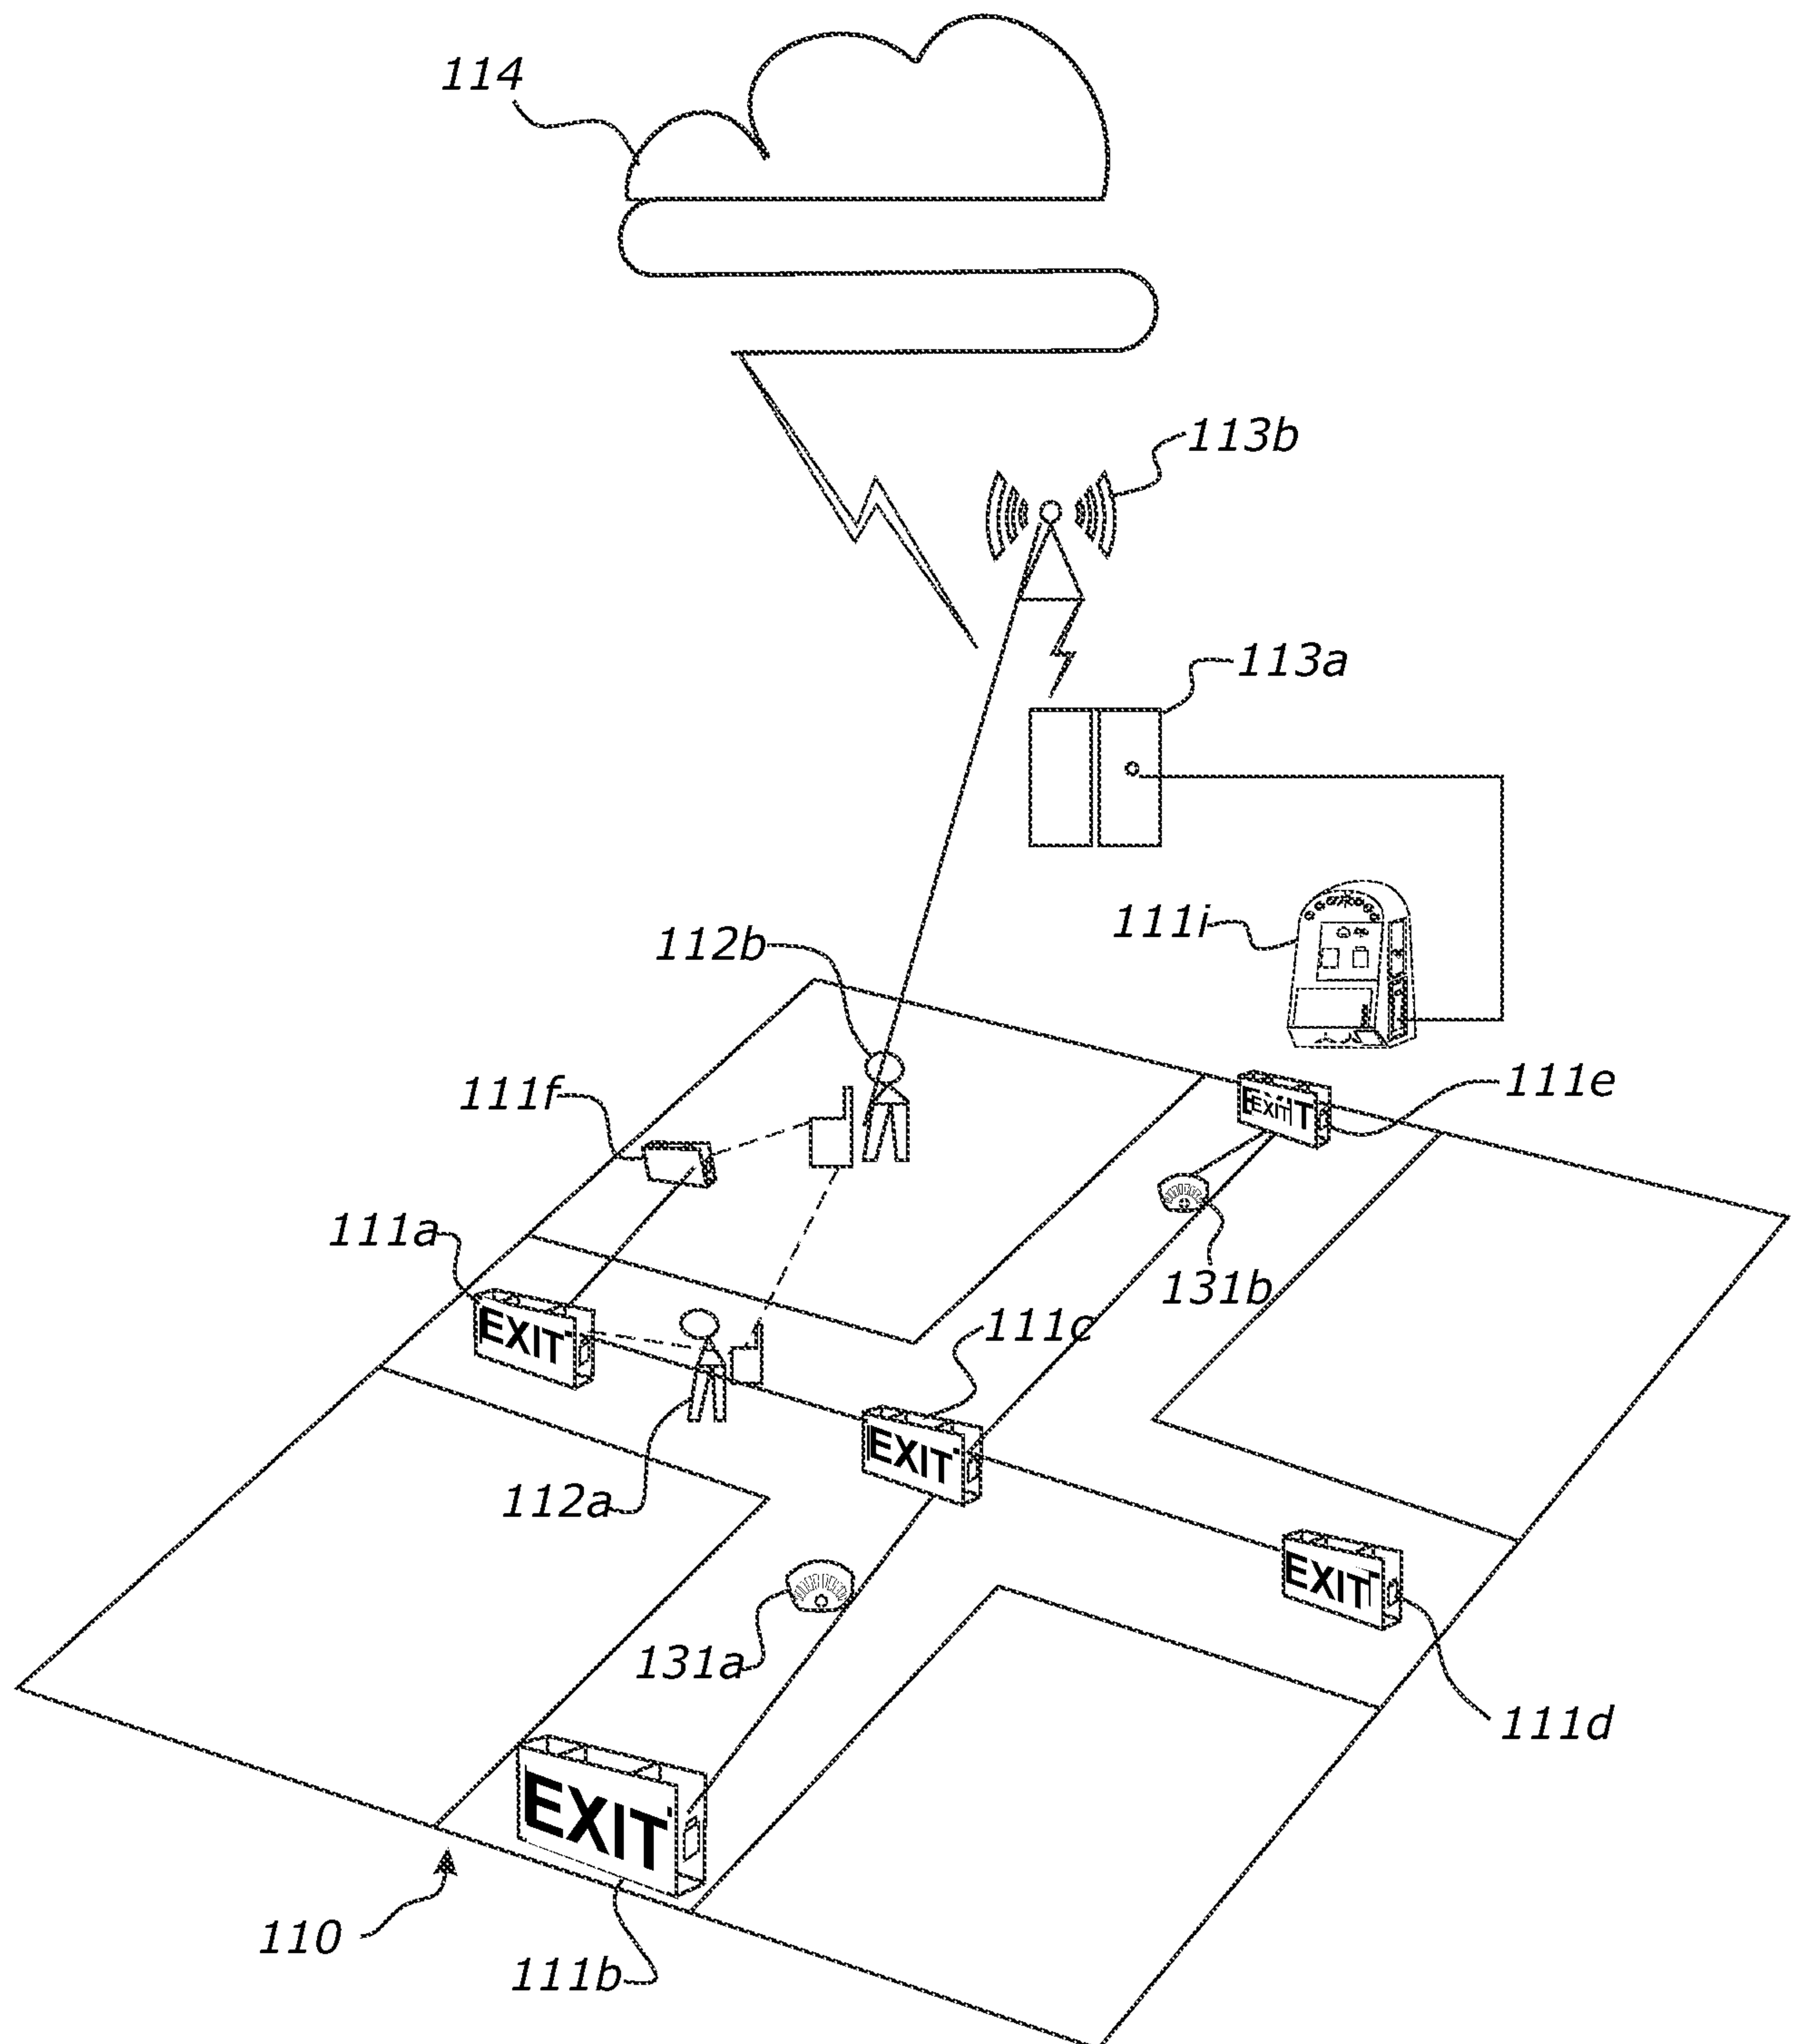 


FIG. 15

**FIG. 16**

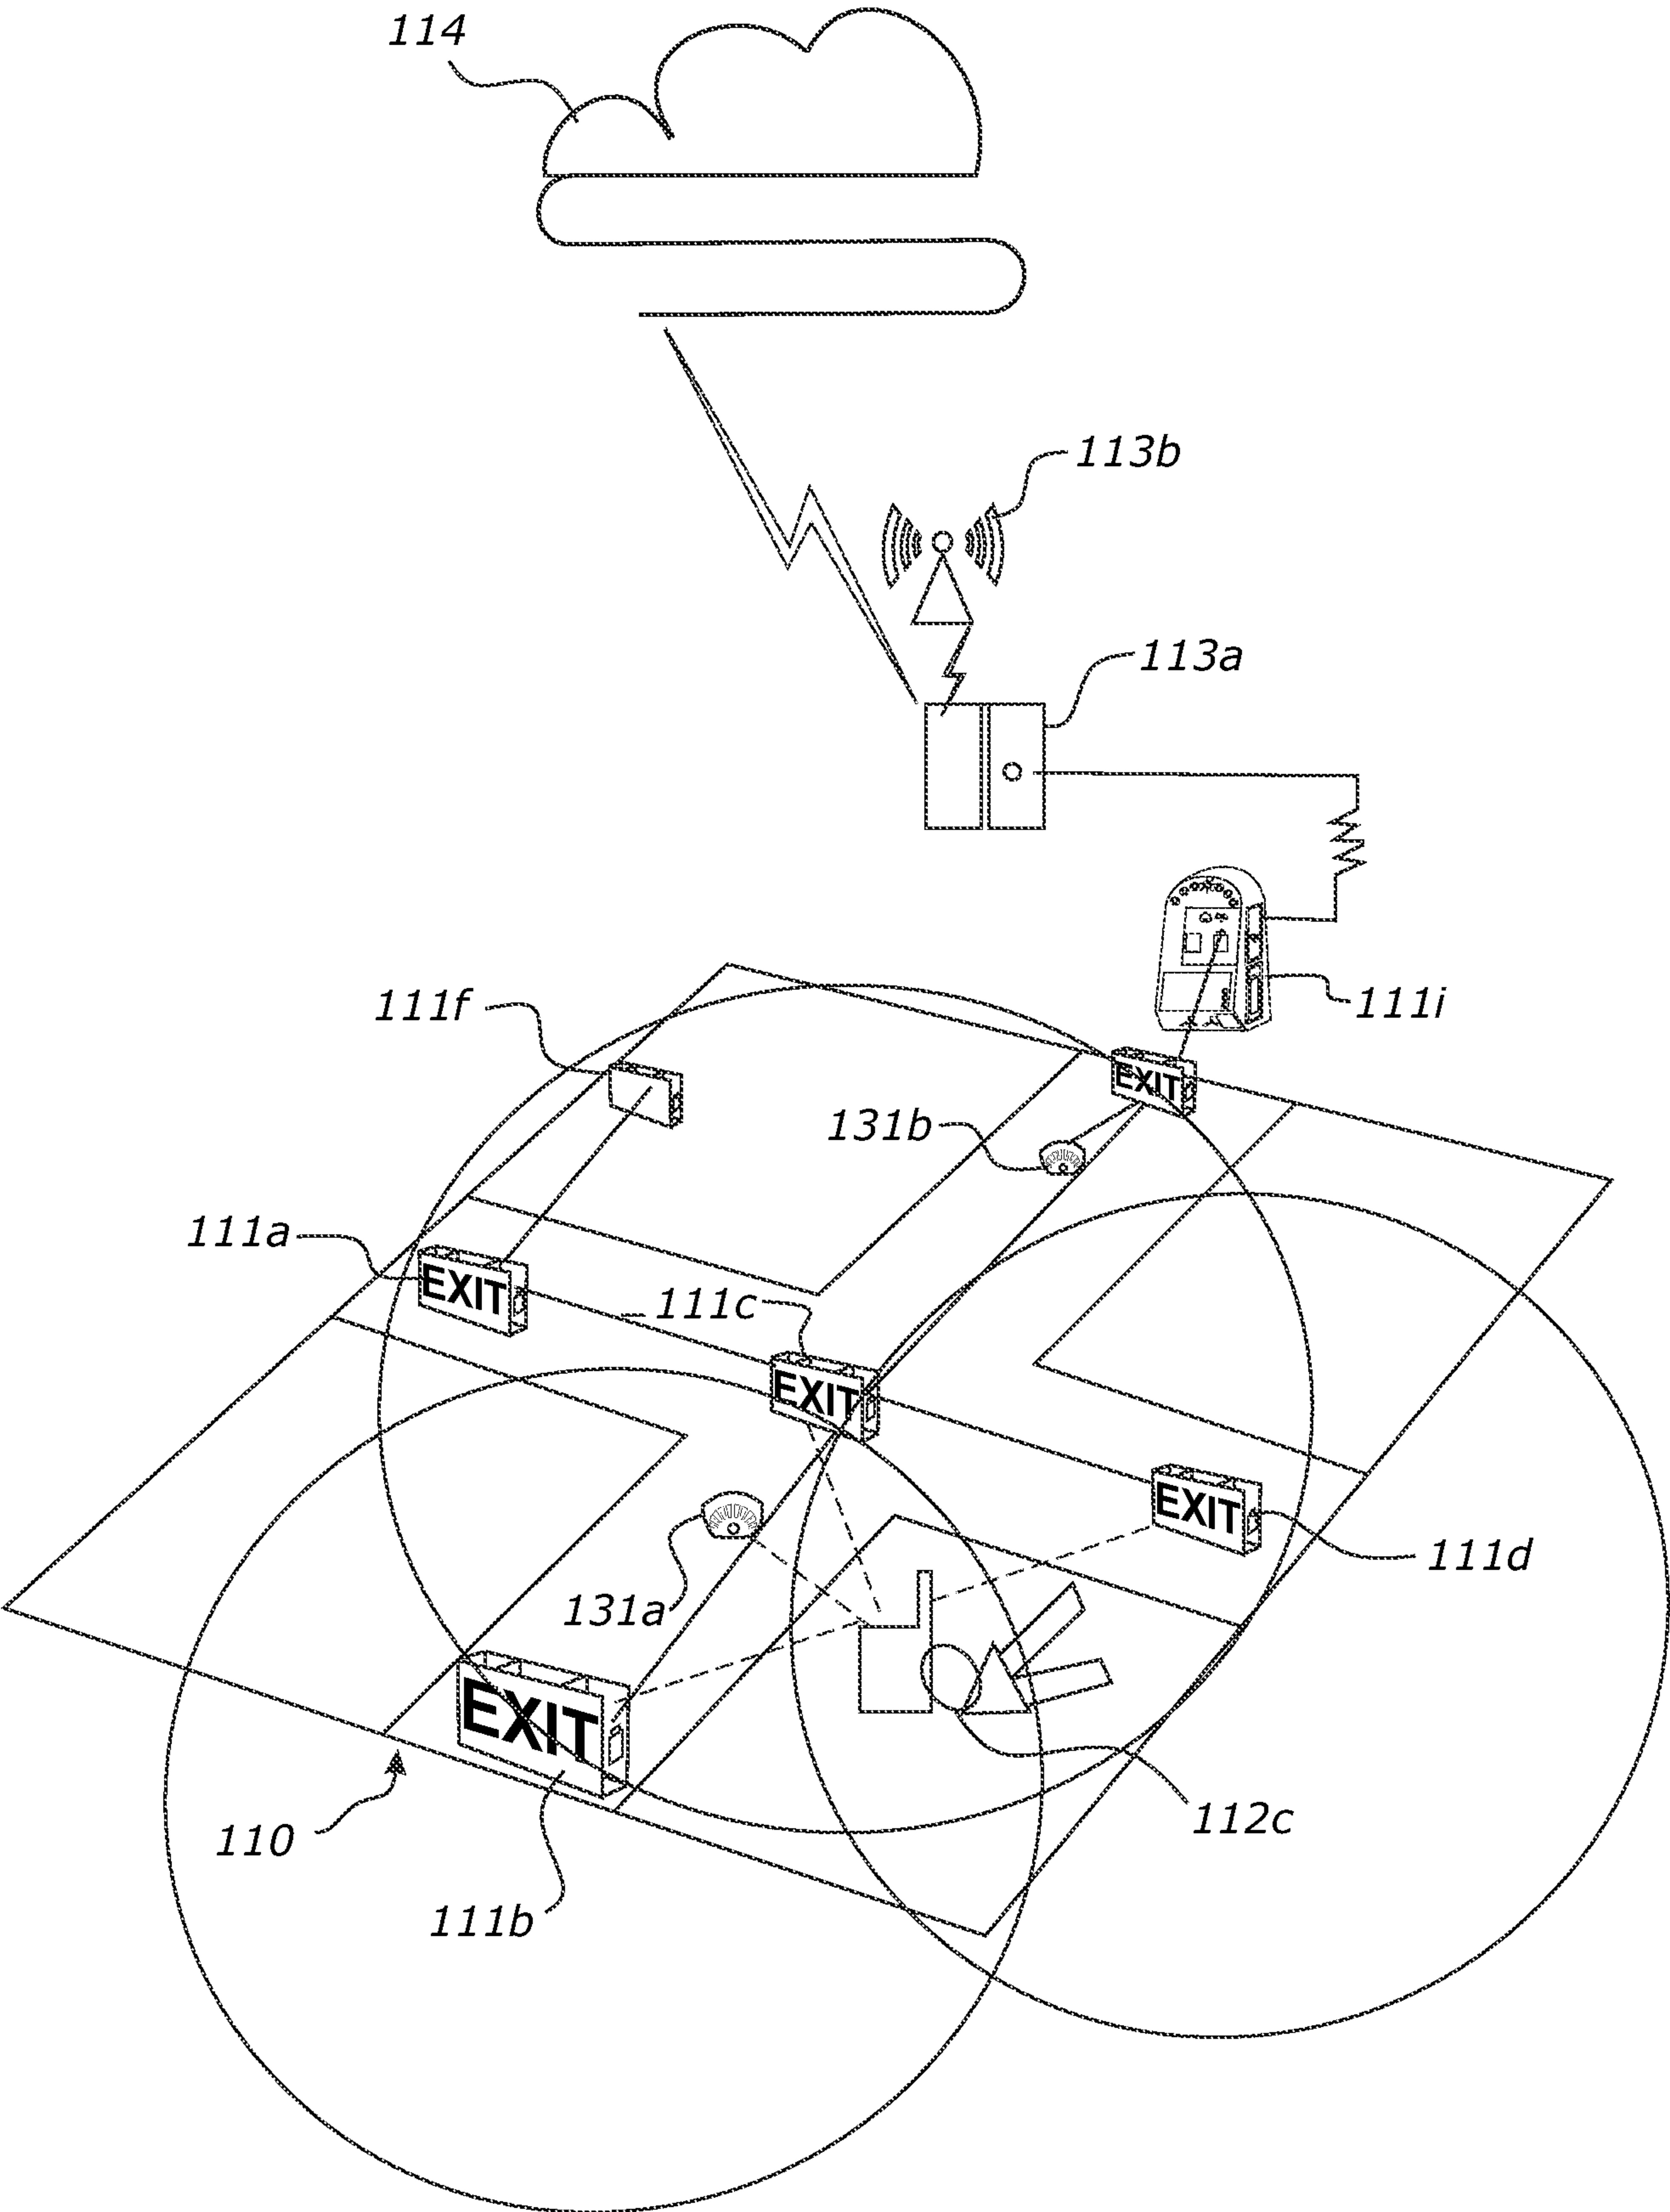 
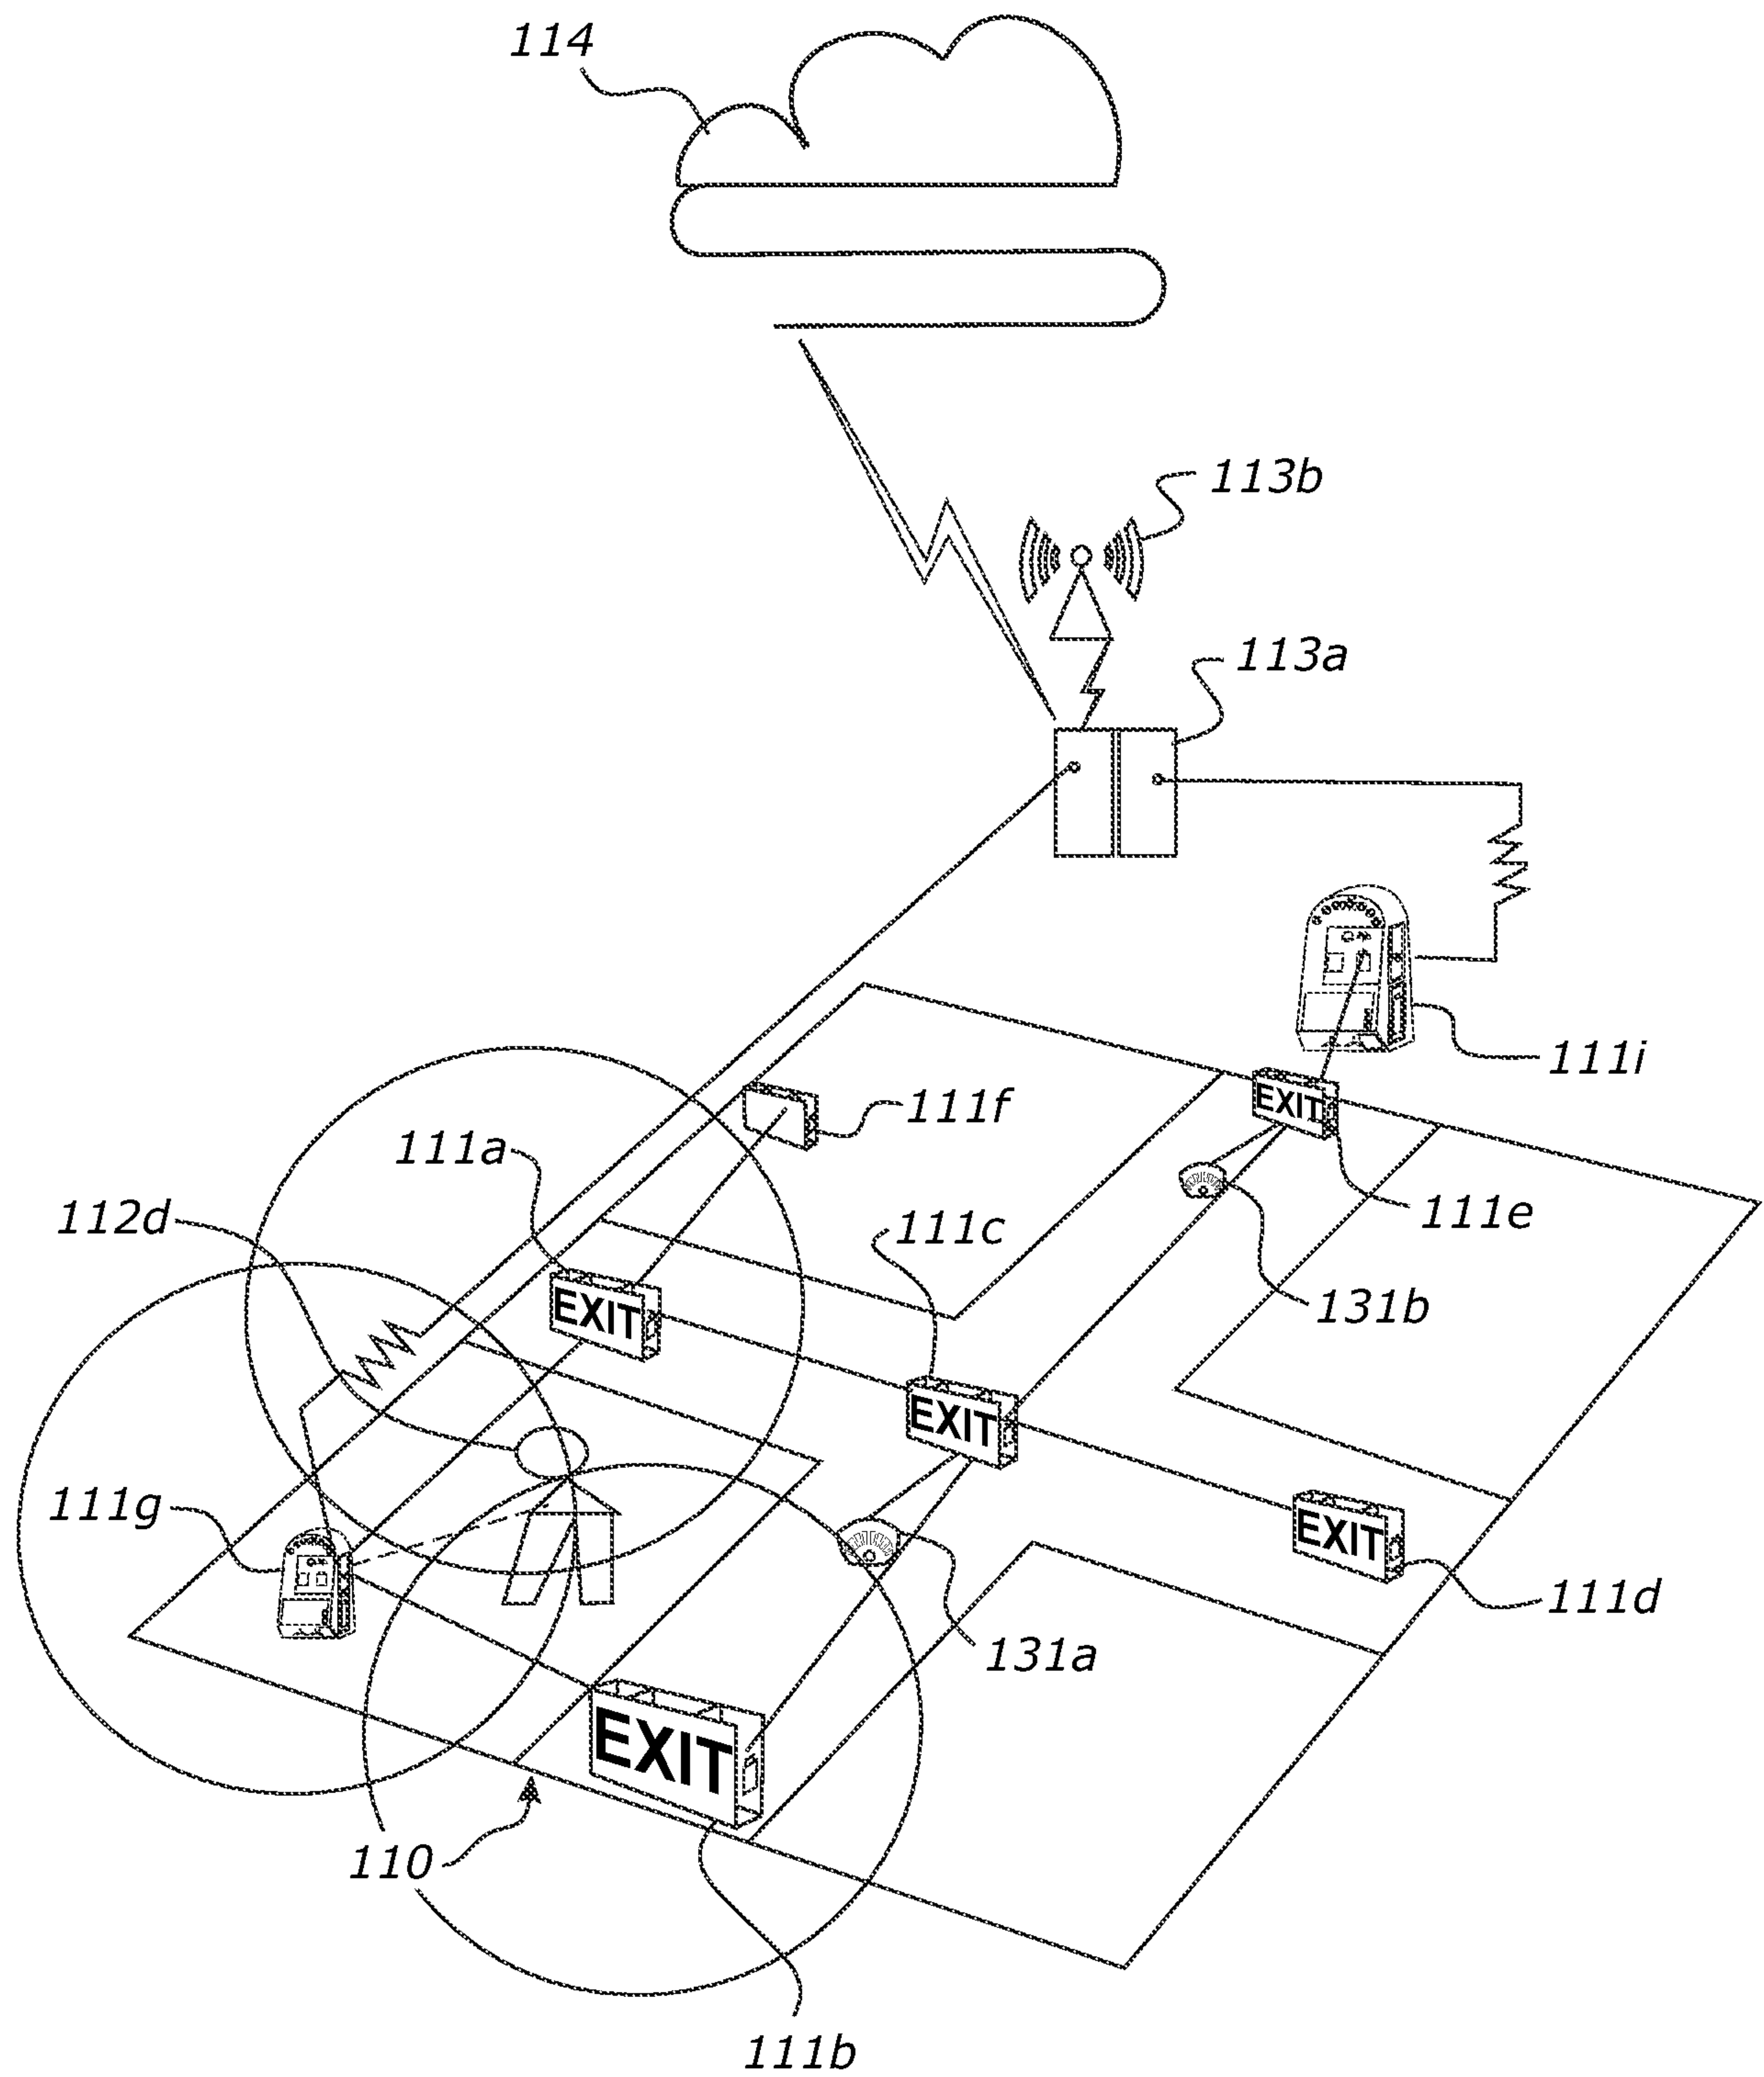 


FIG. 17

**FIG. 18**

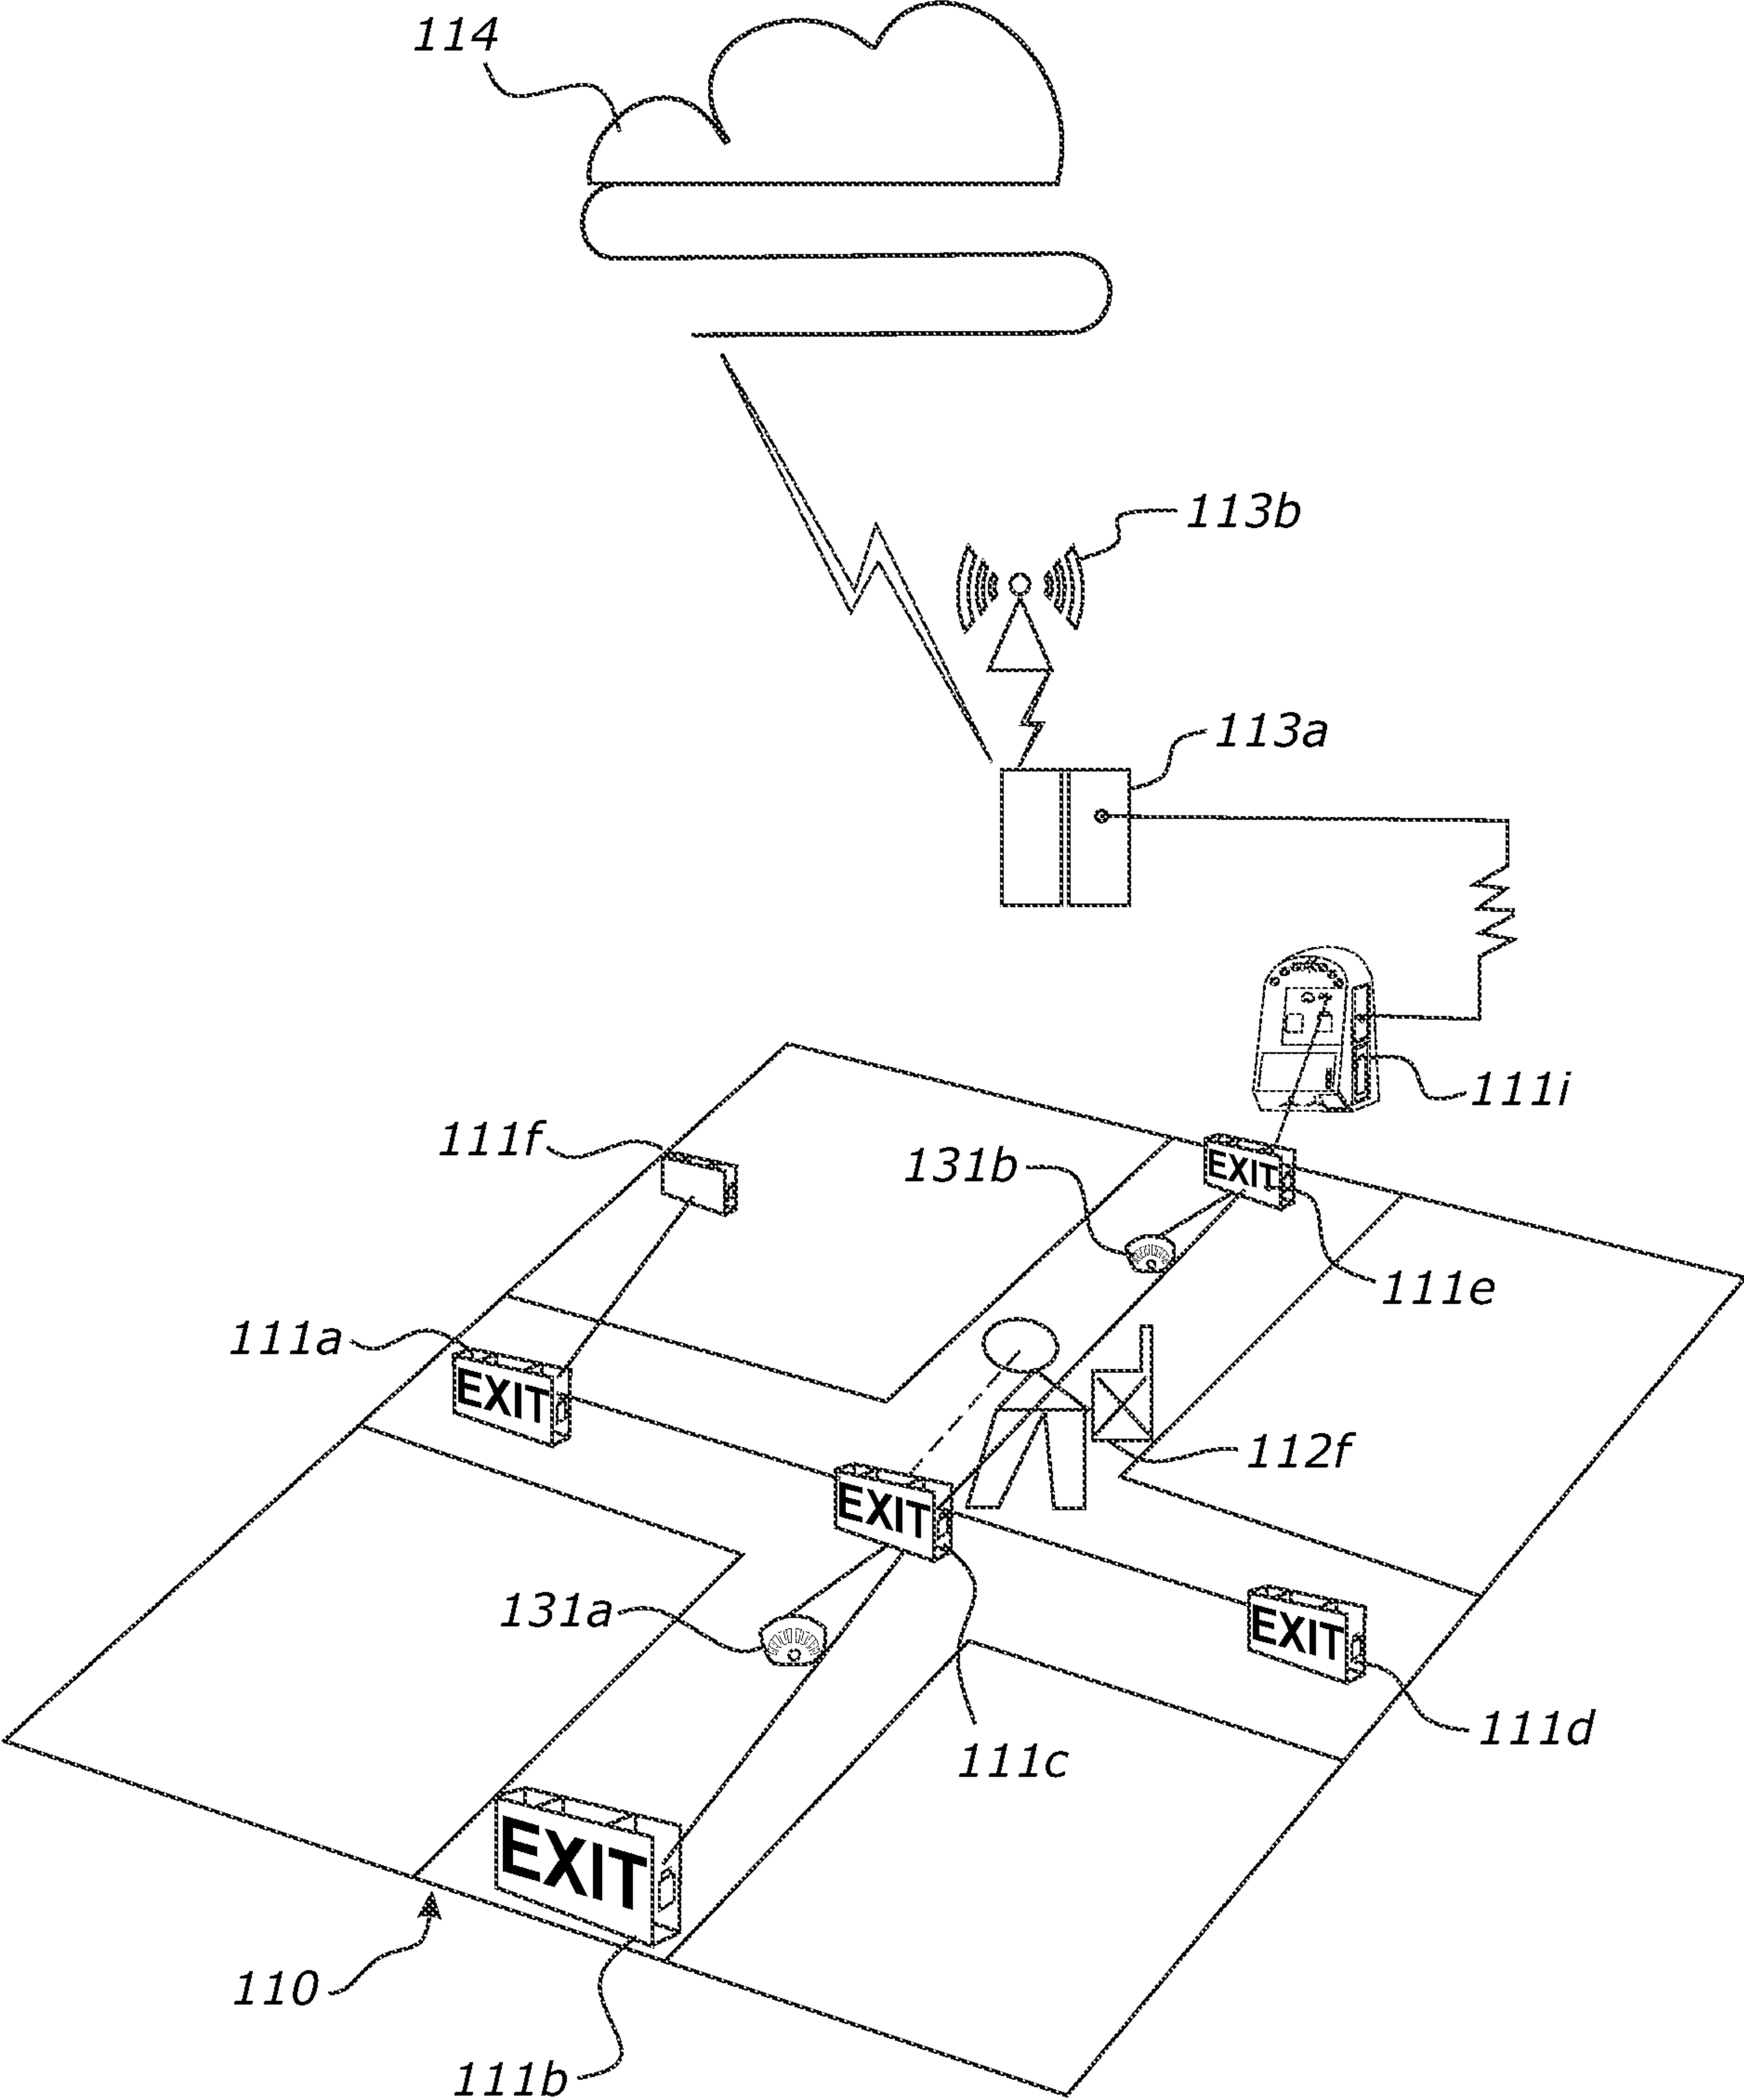 


FIG. 19

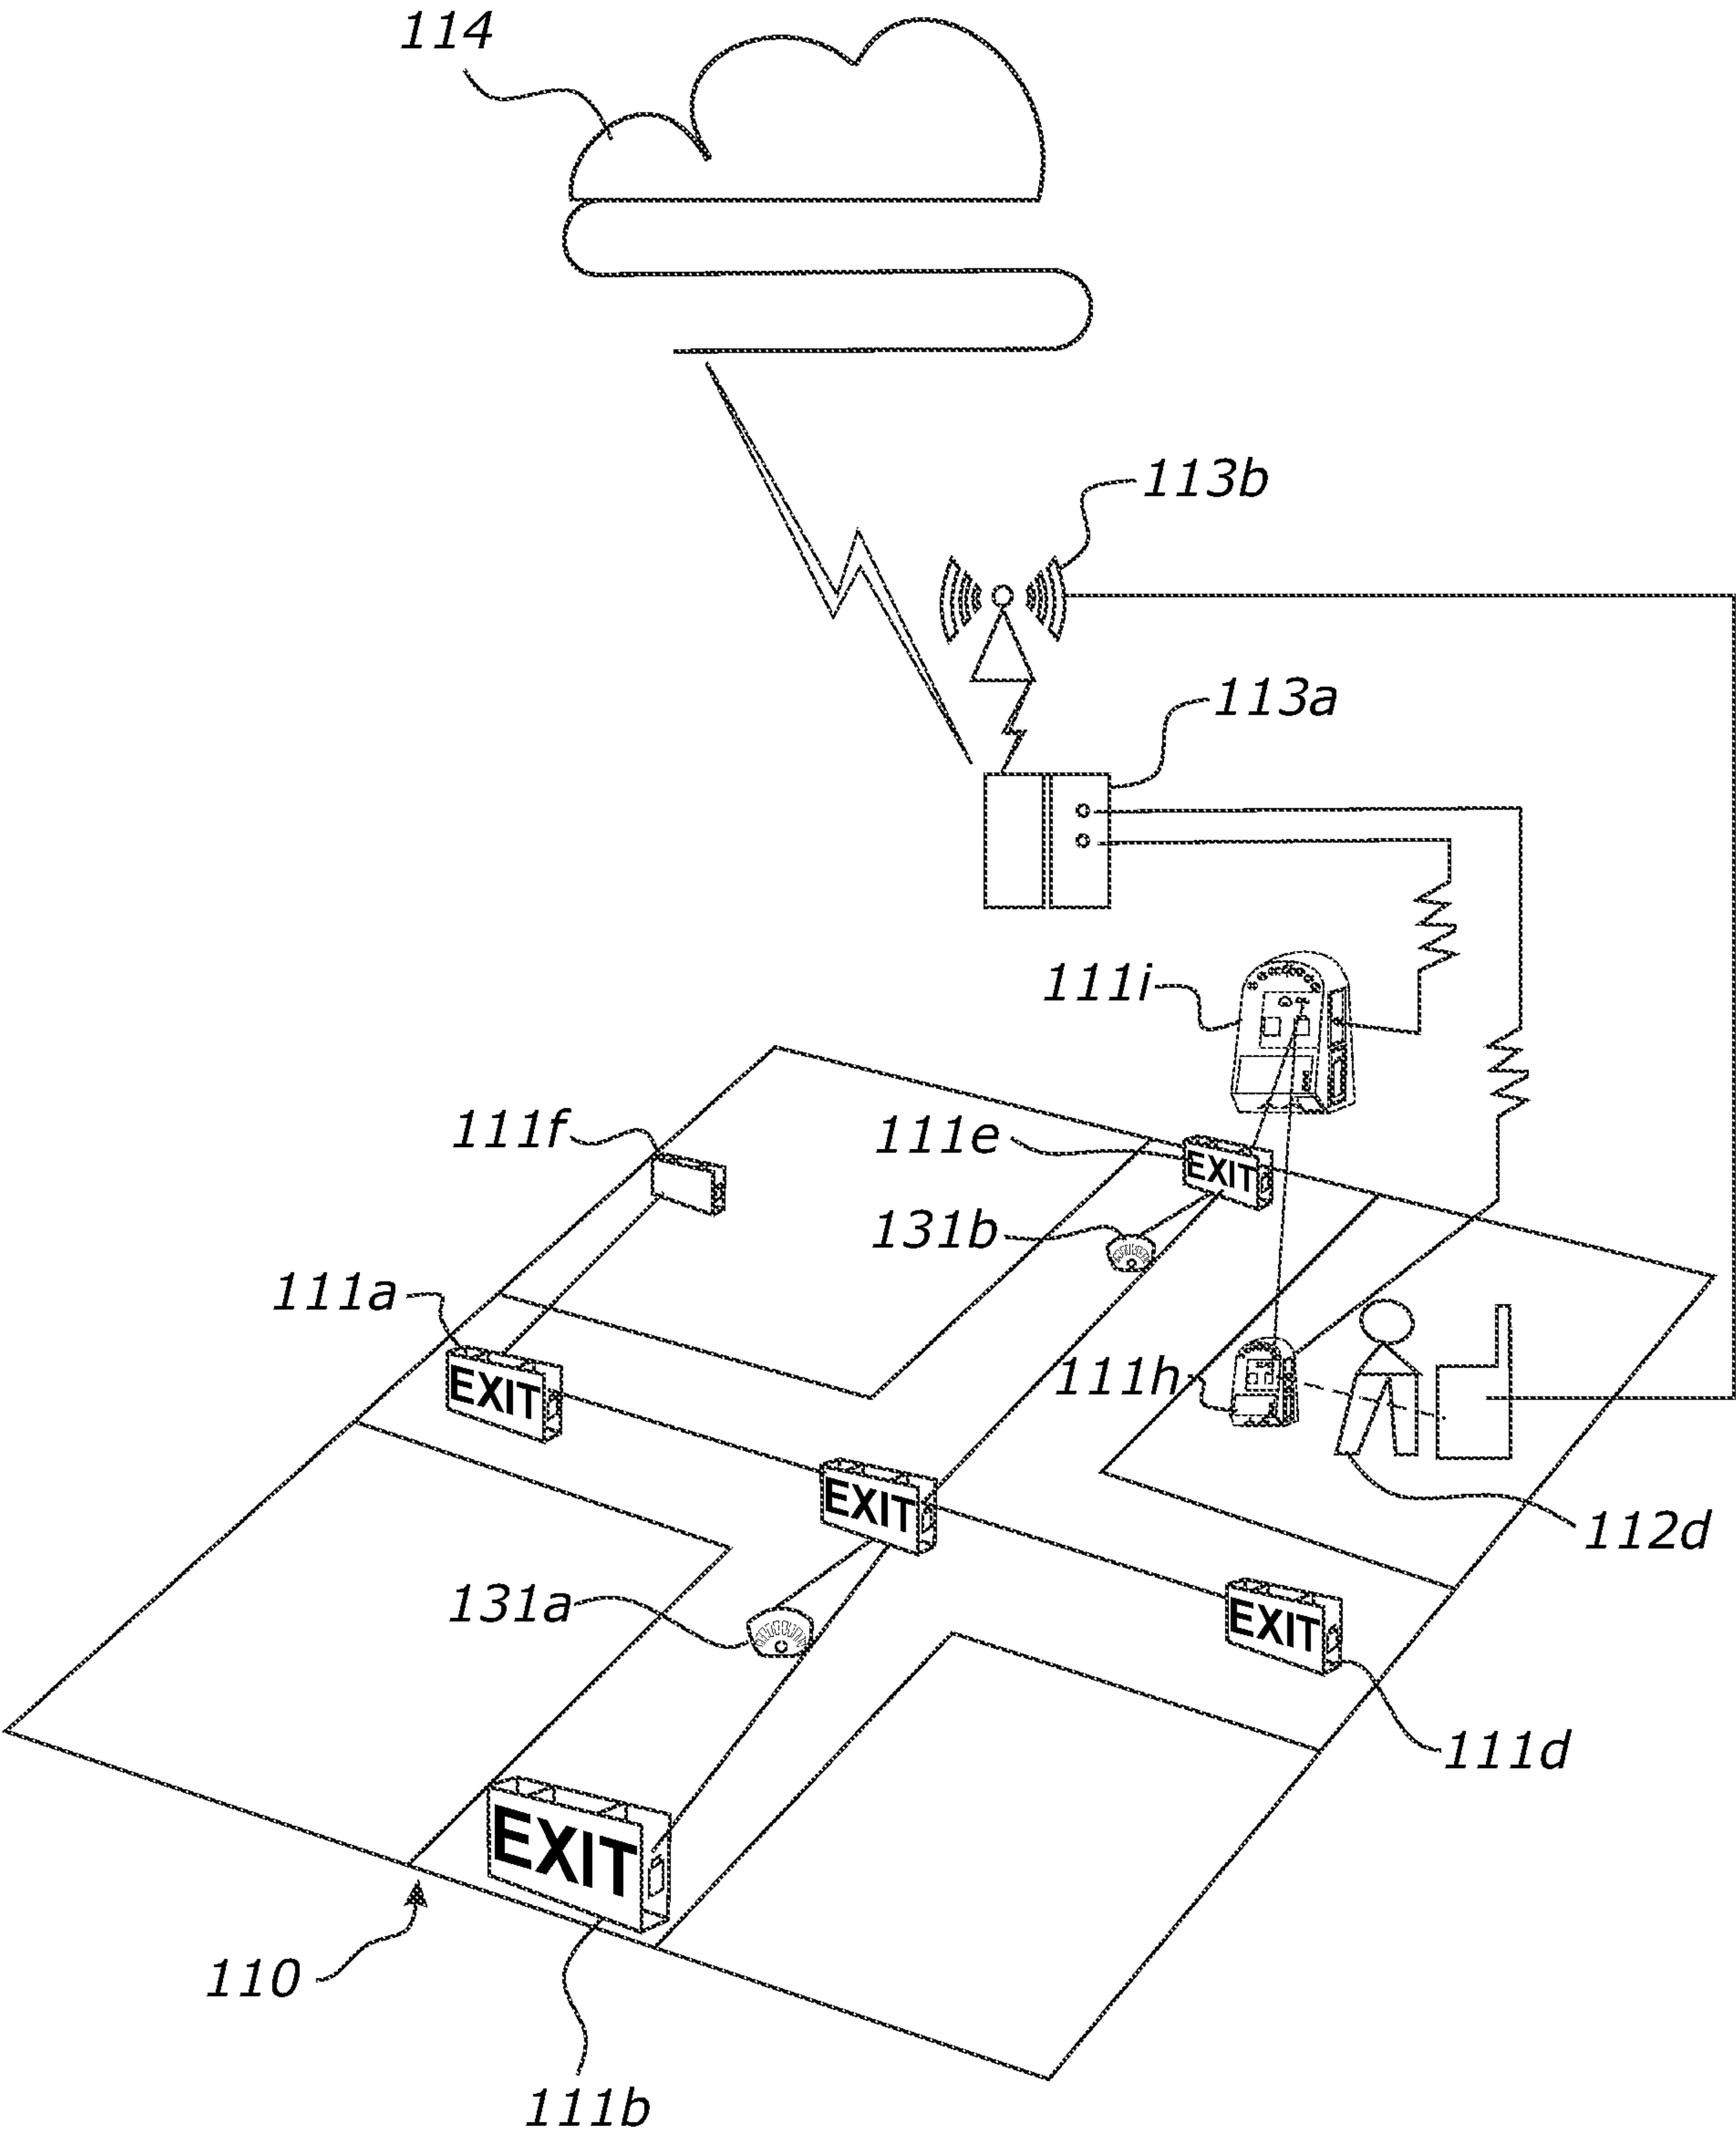 


FIG. 20

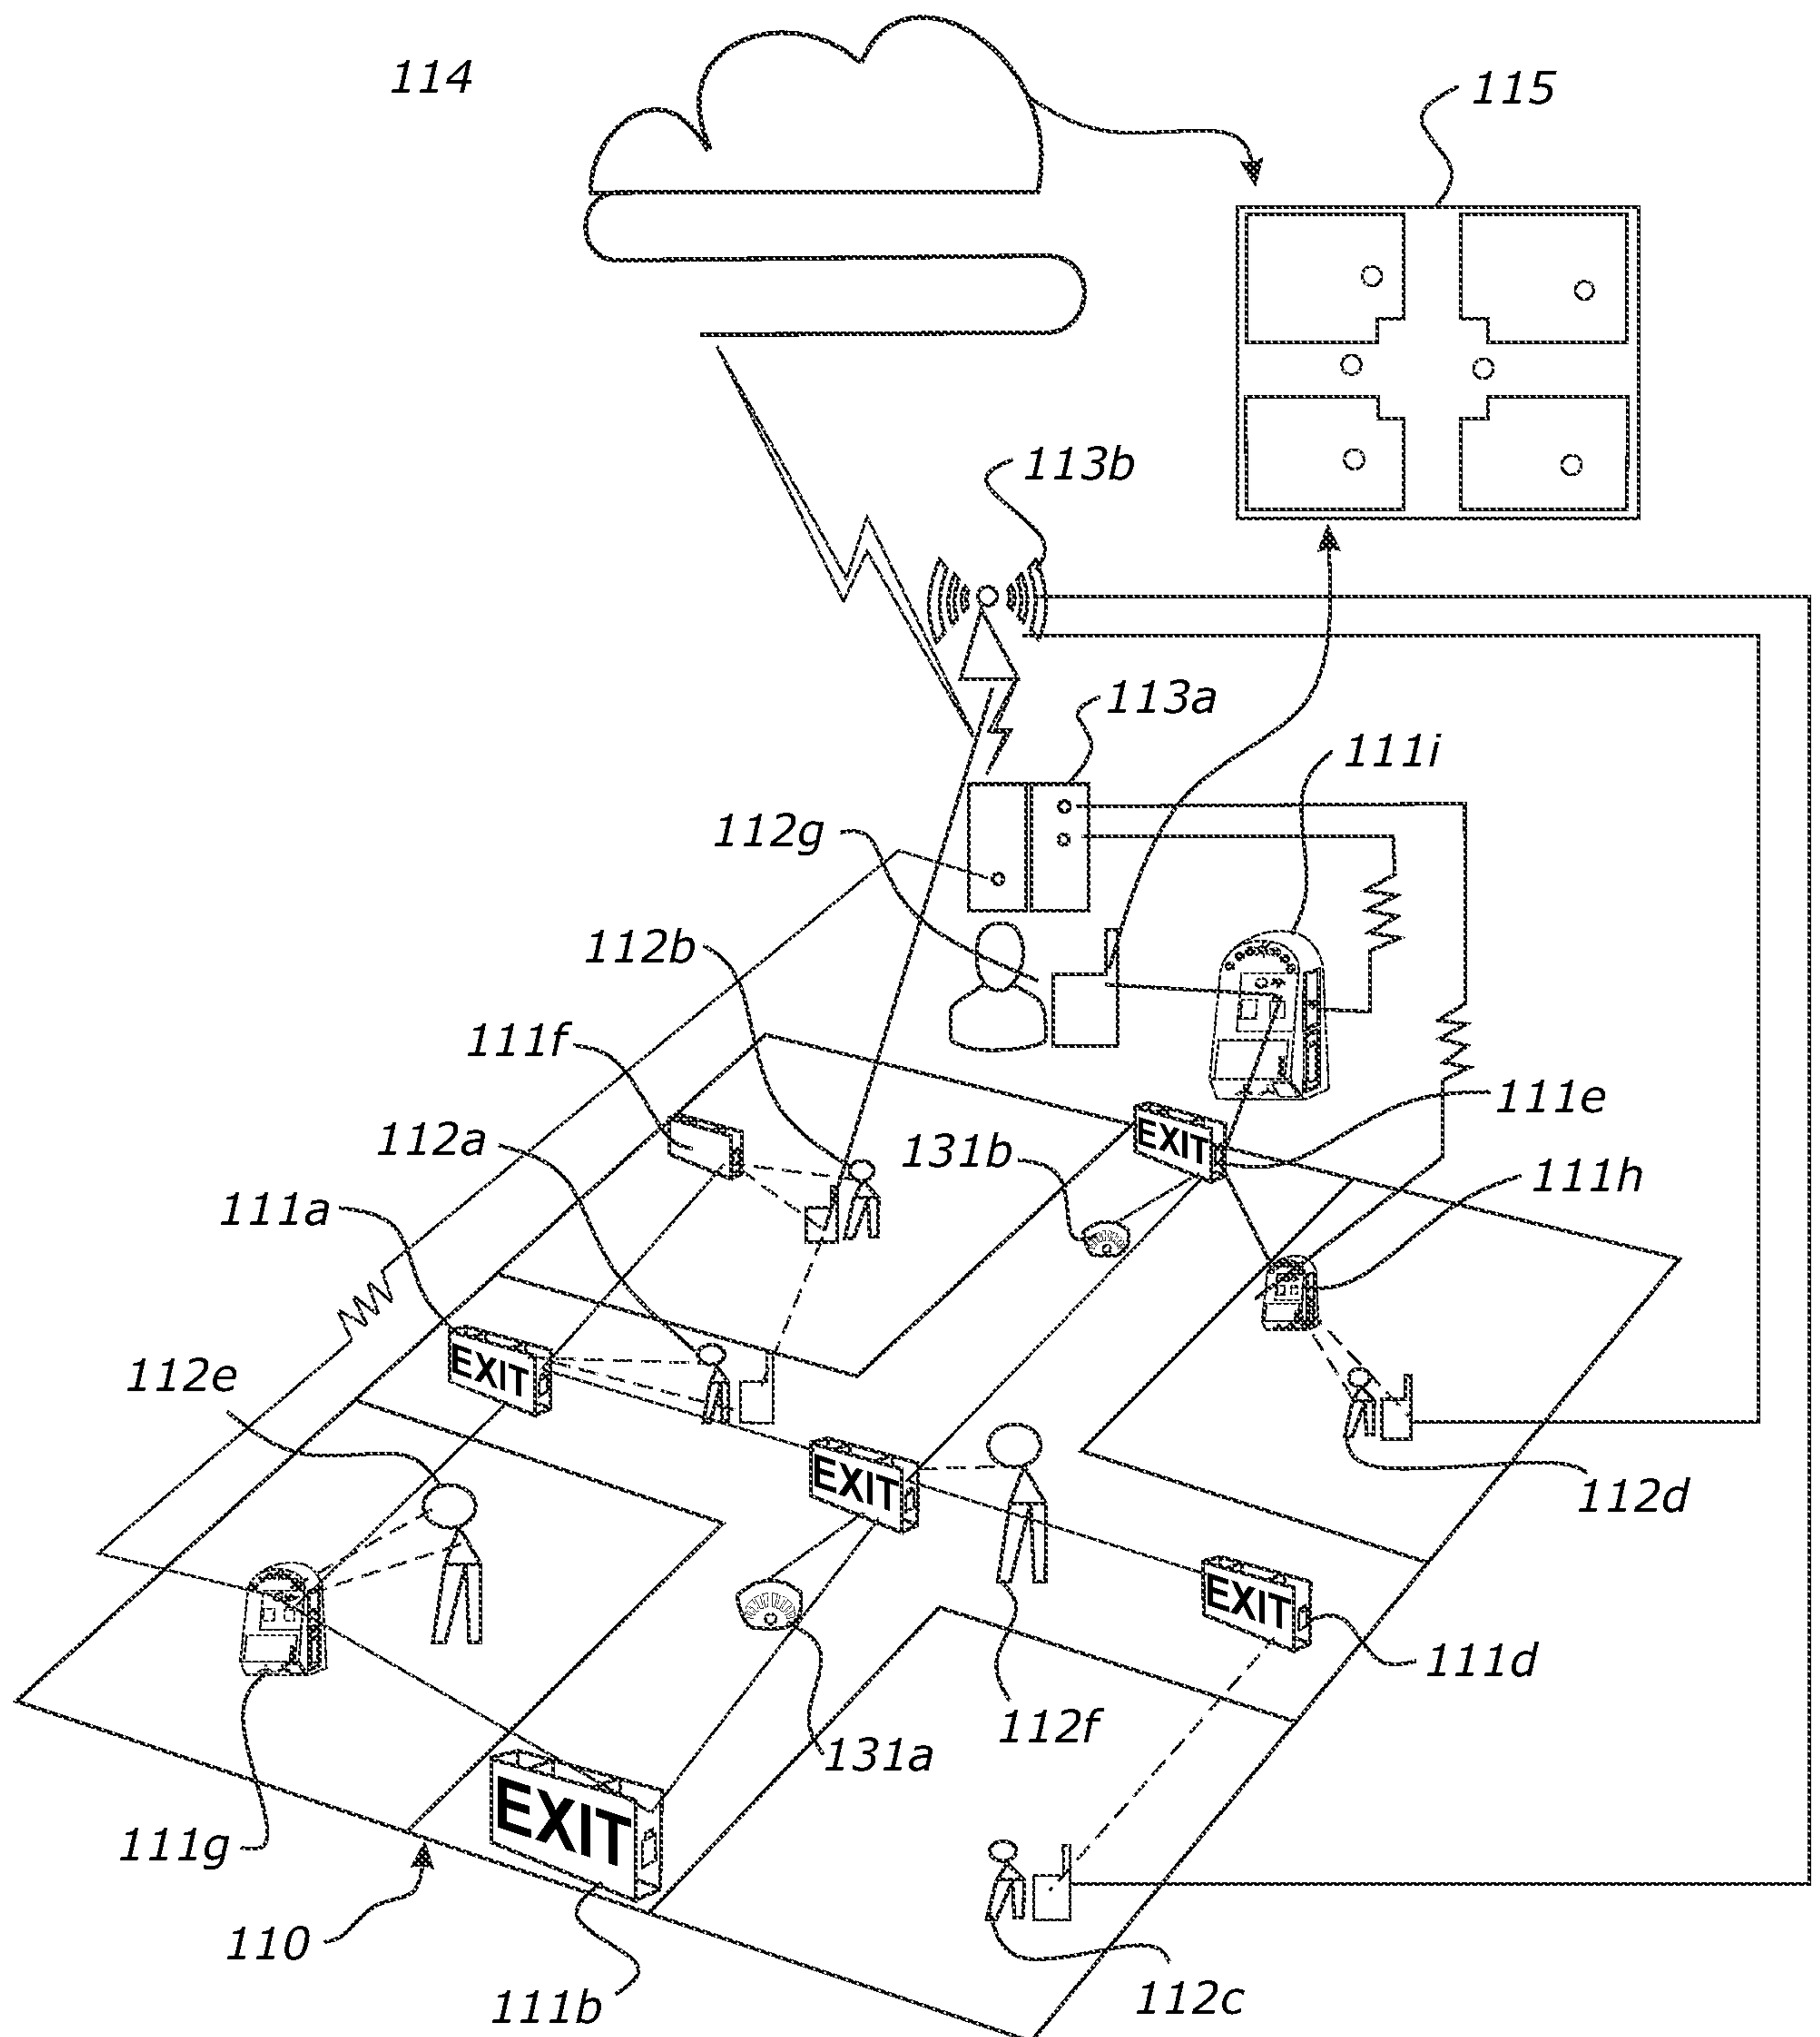 


FIG. 21

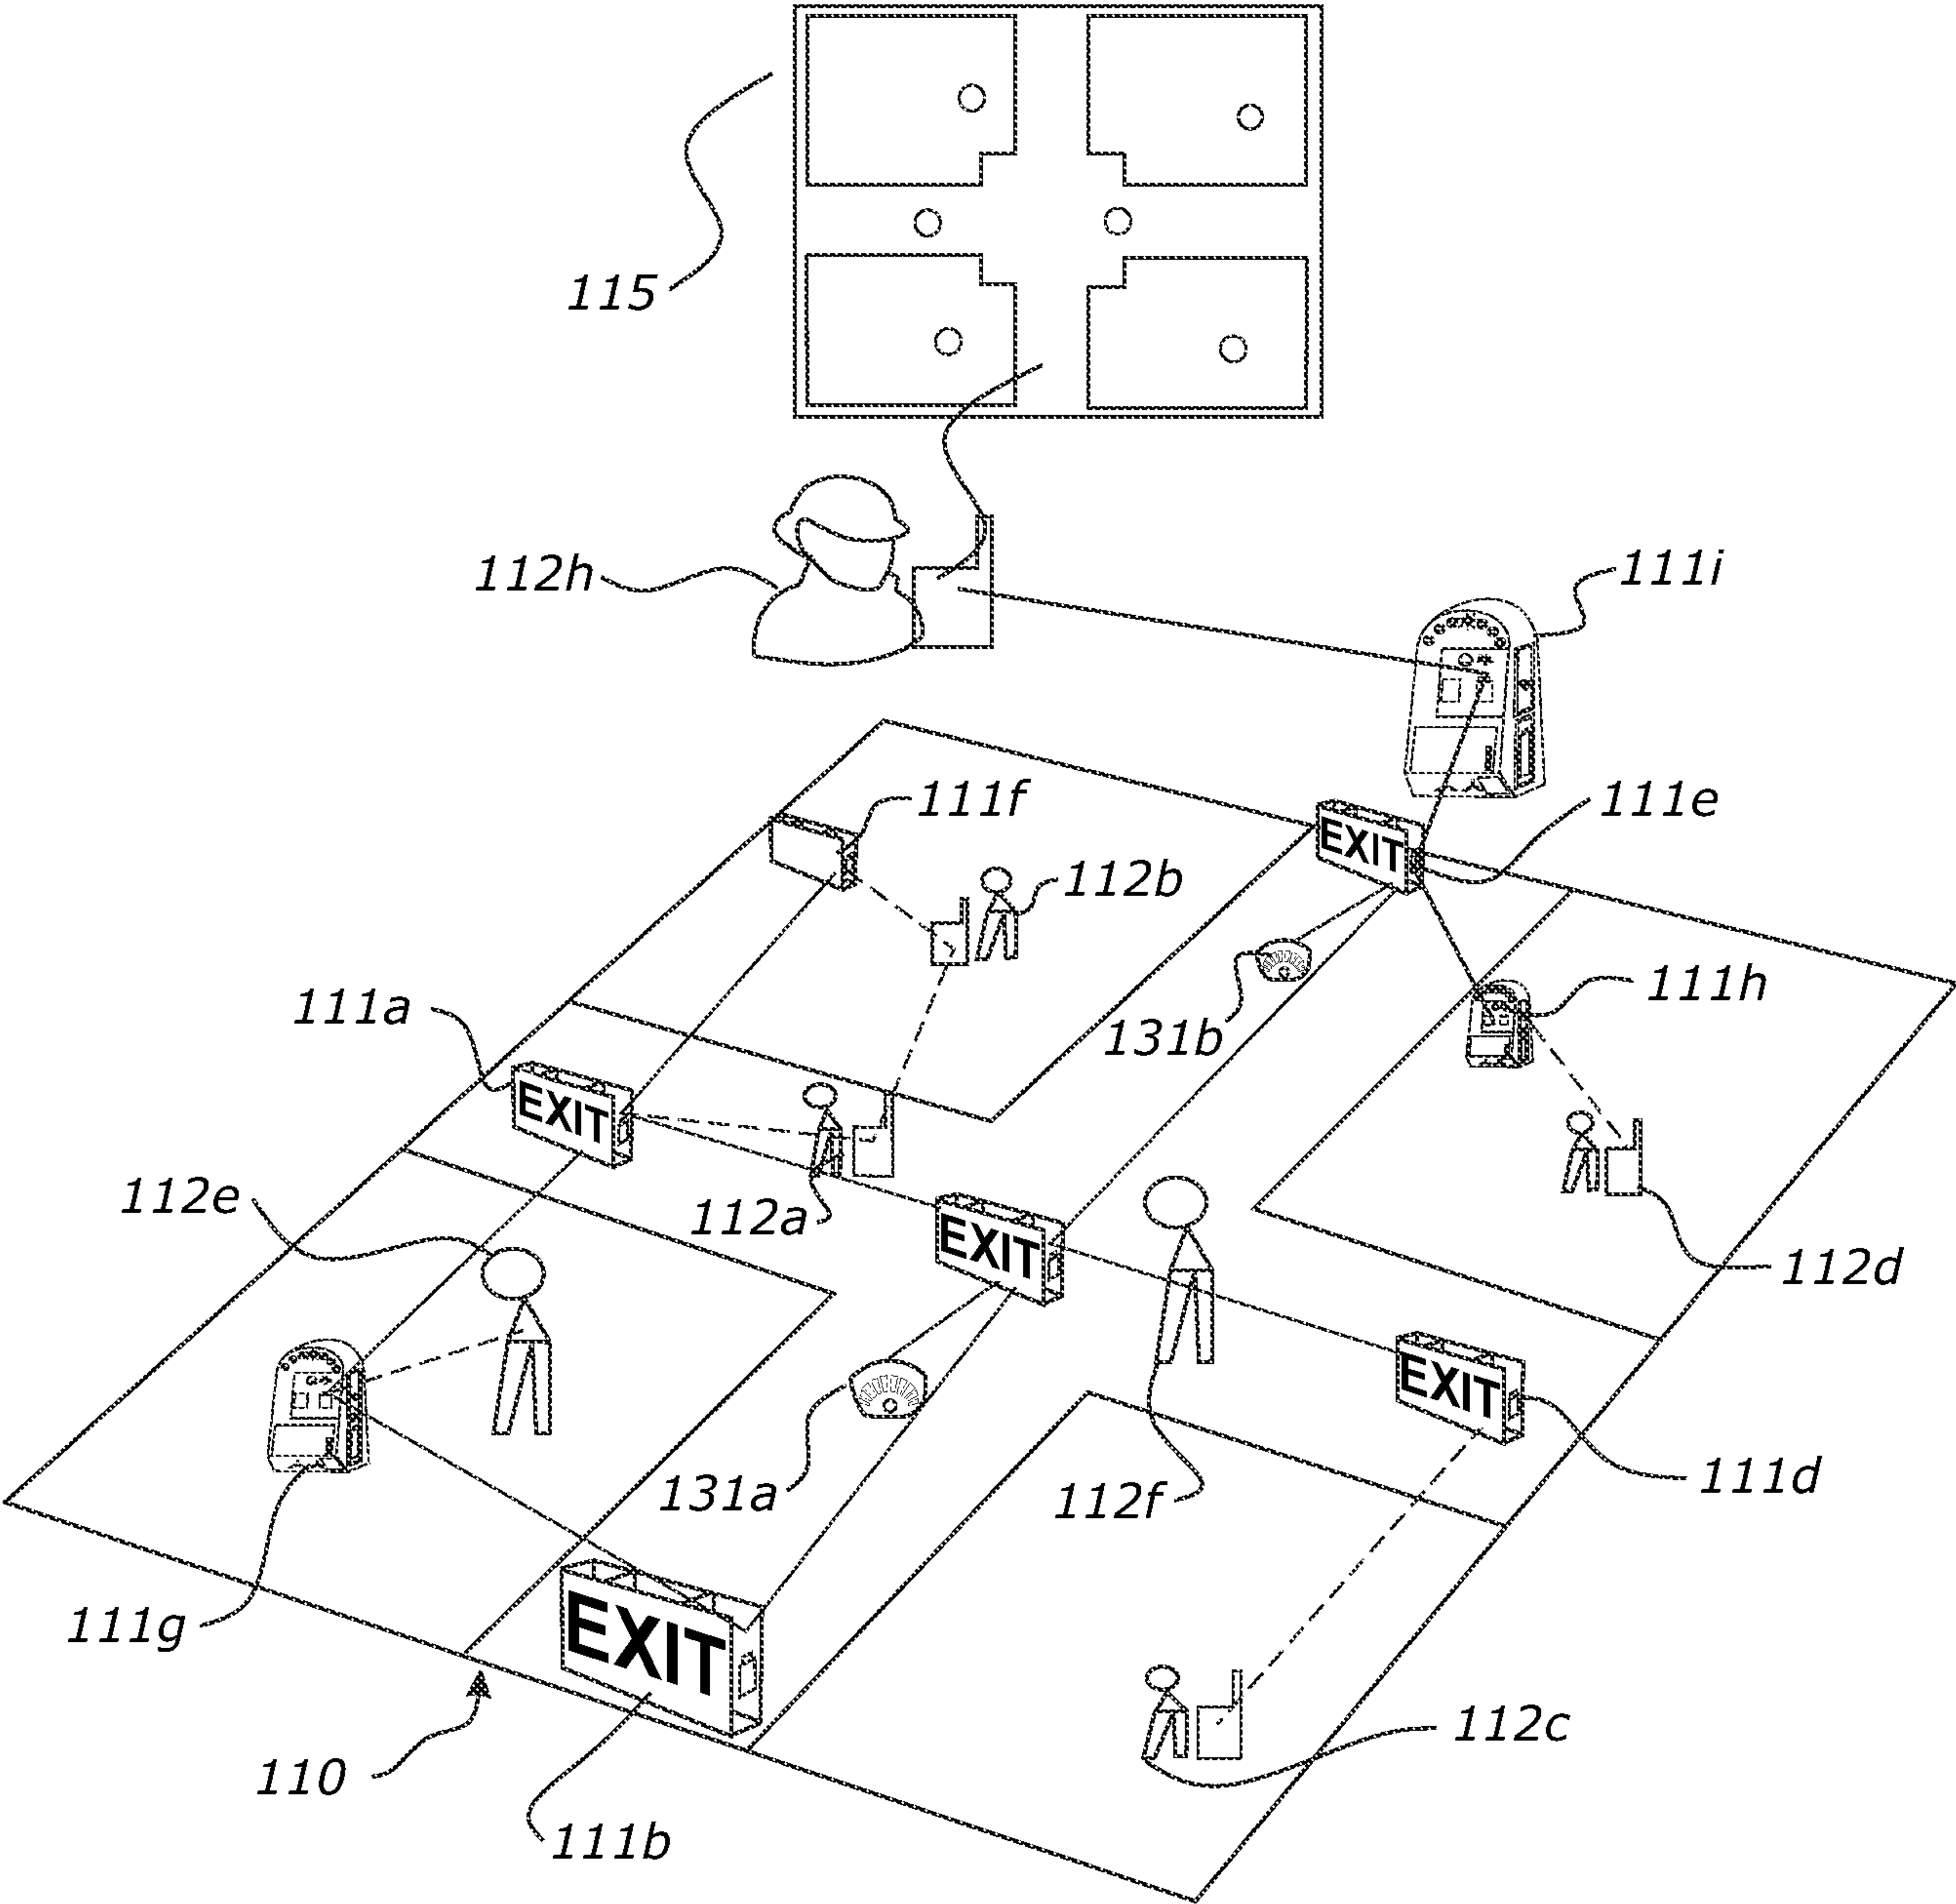 
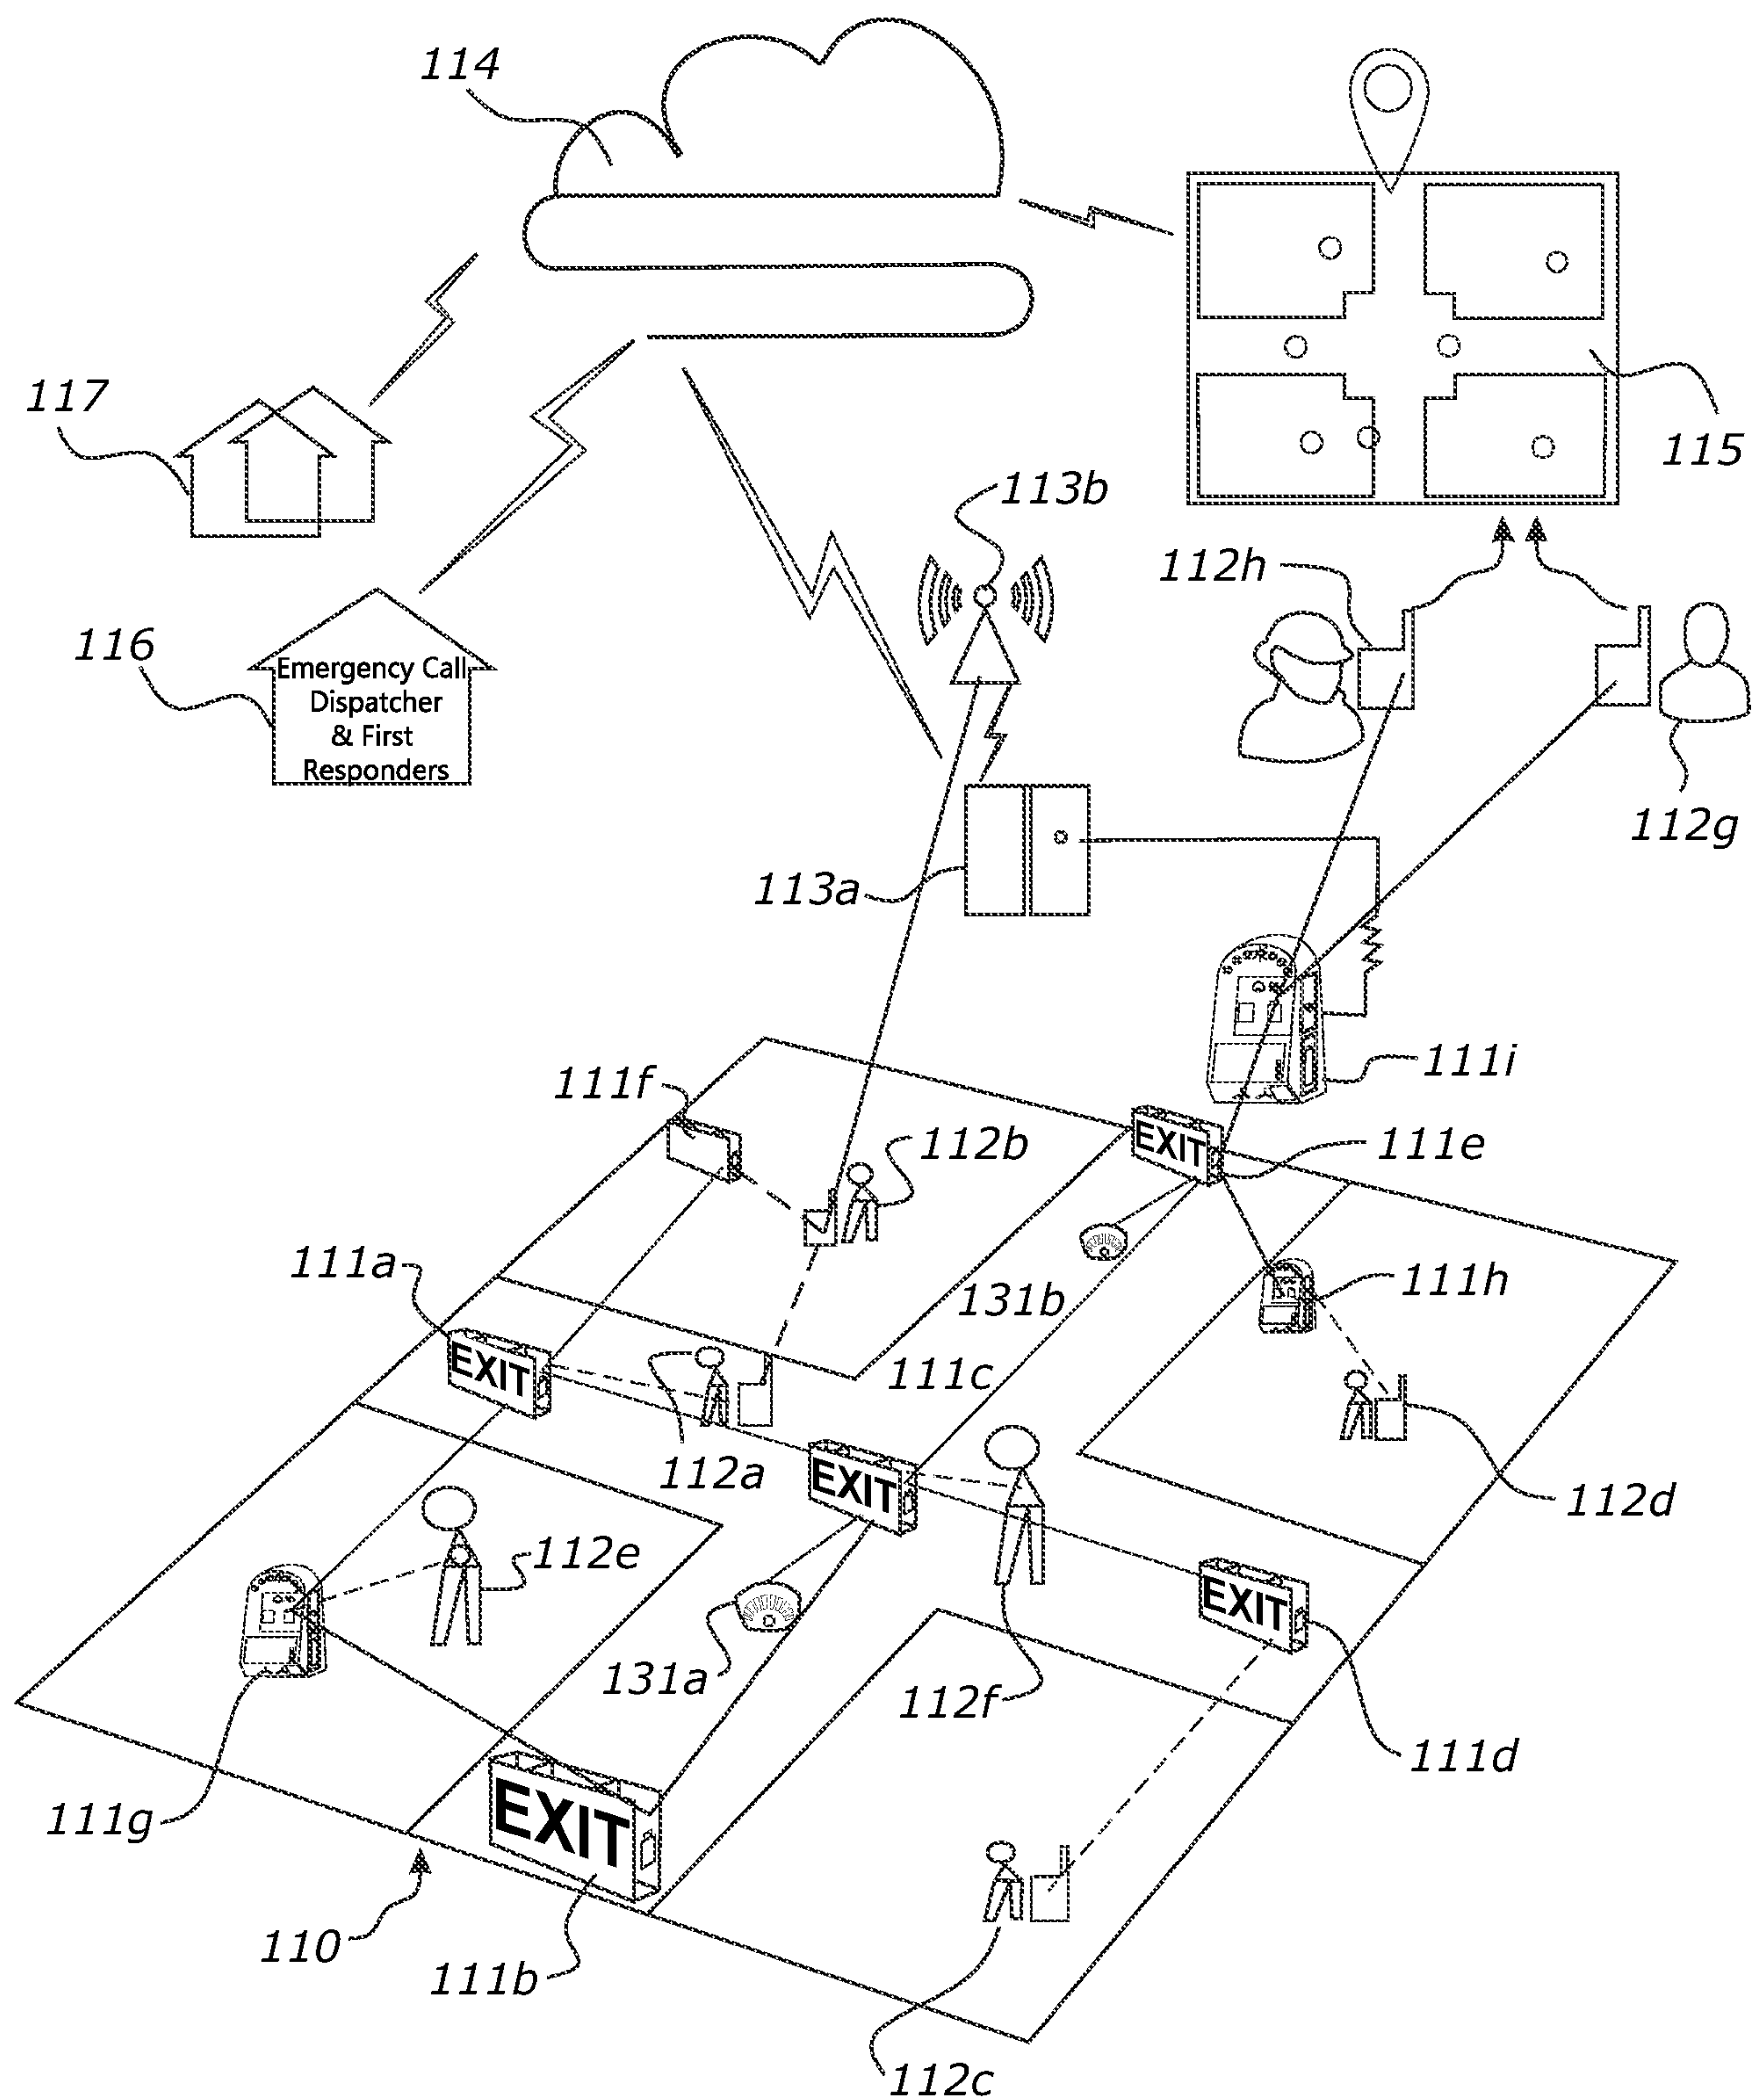 


FIG. 22

**FIG. 23**

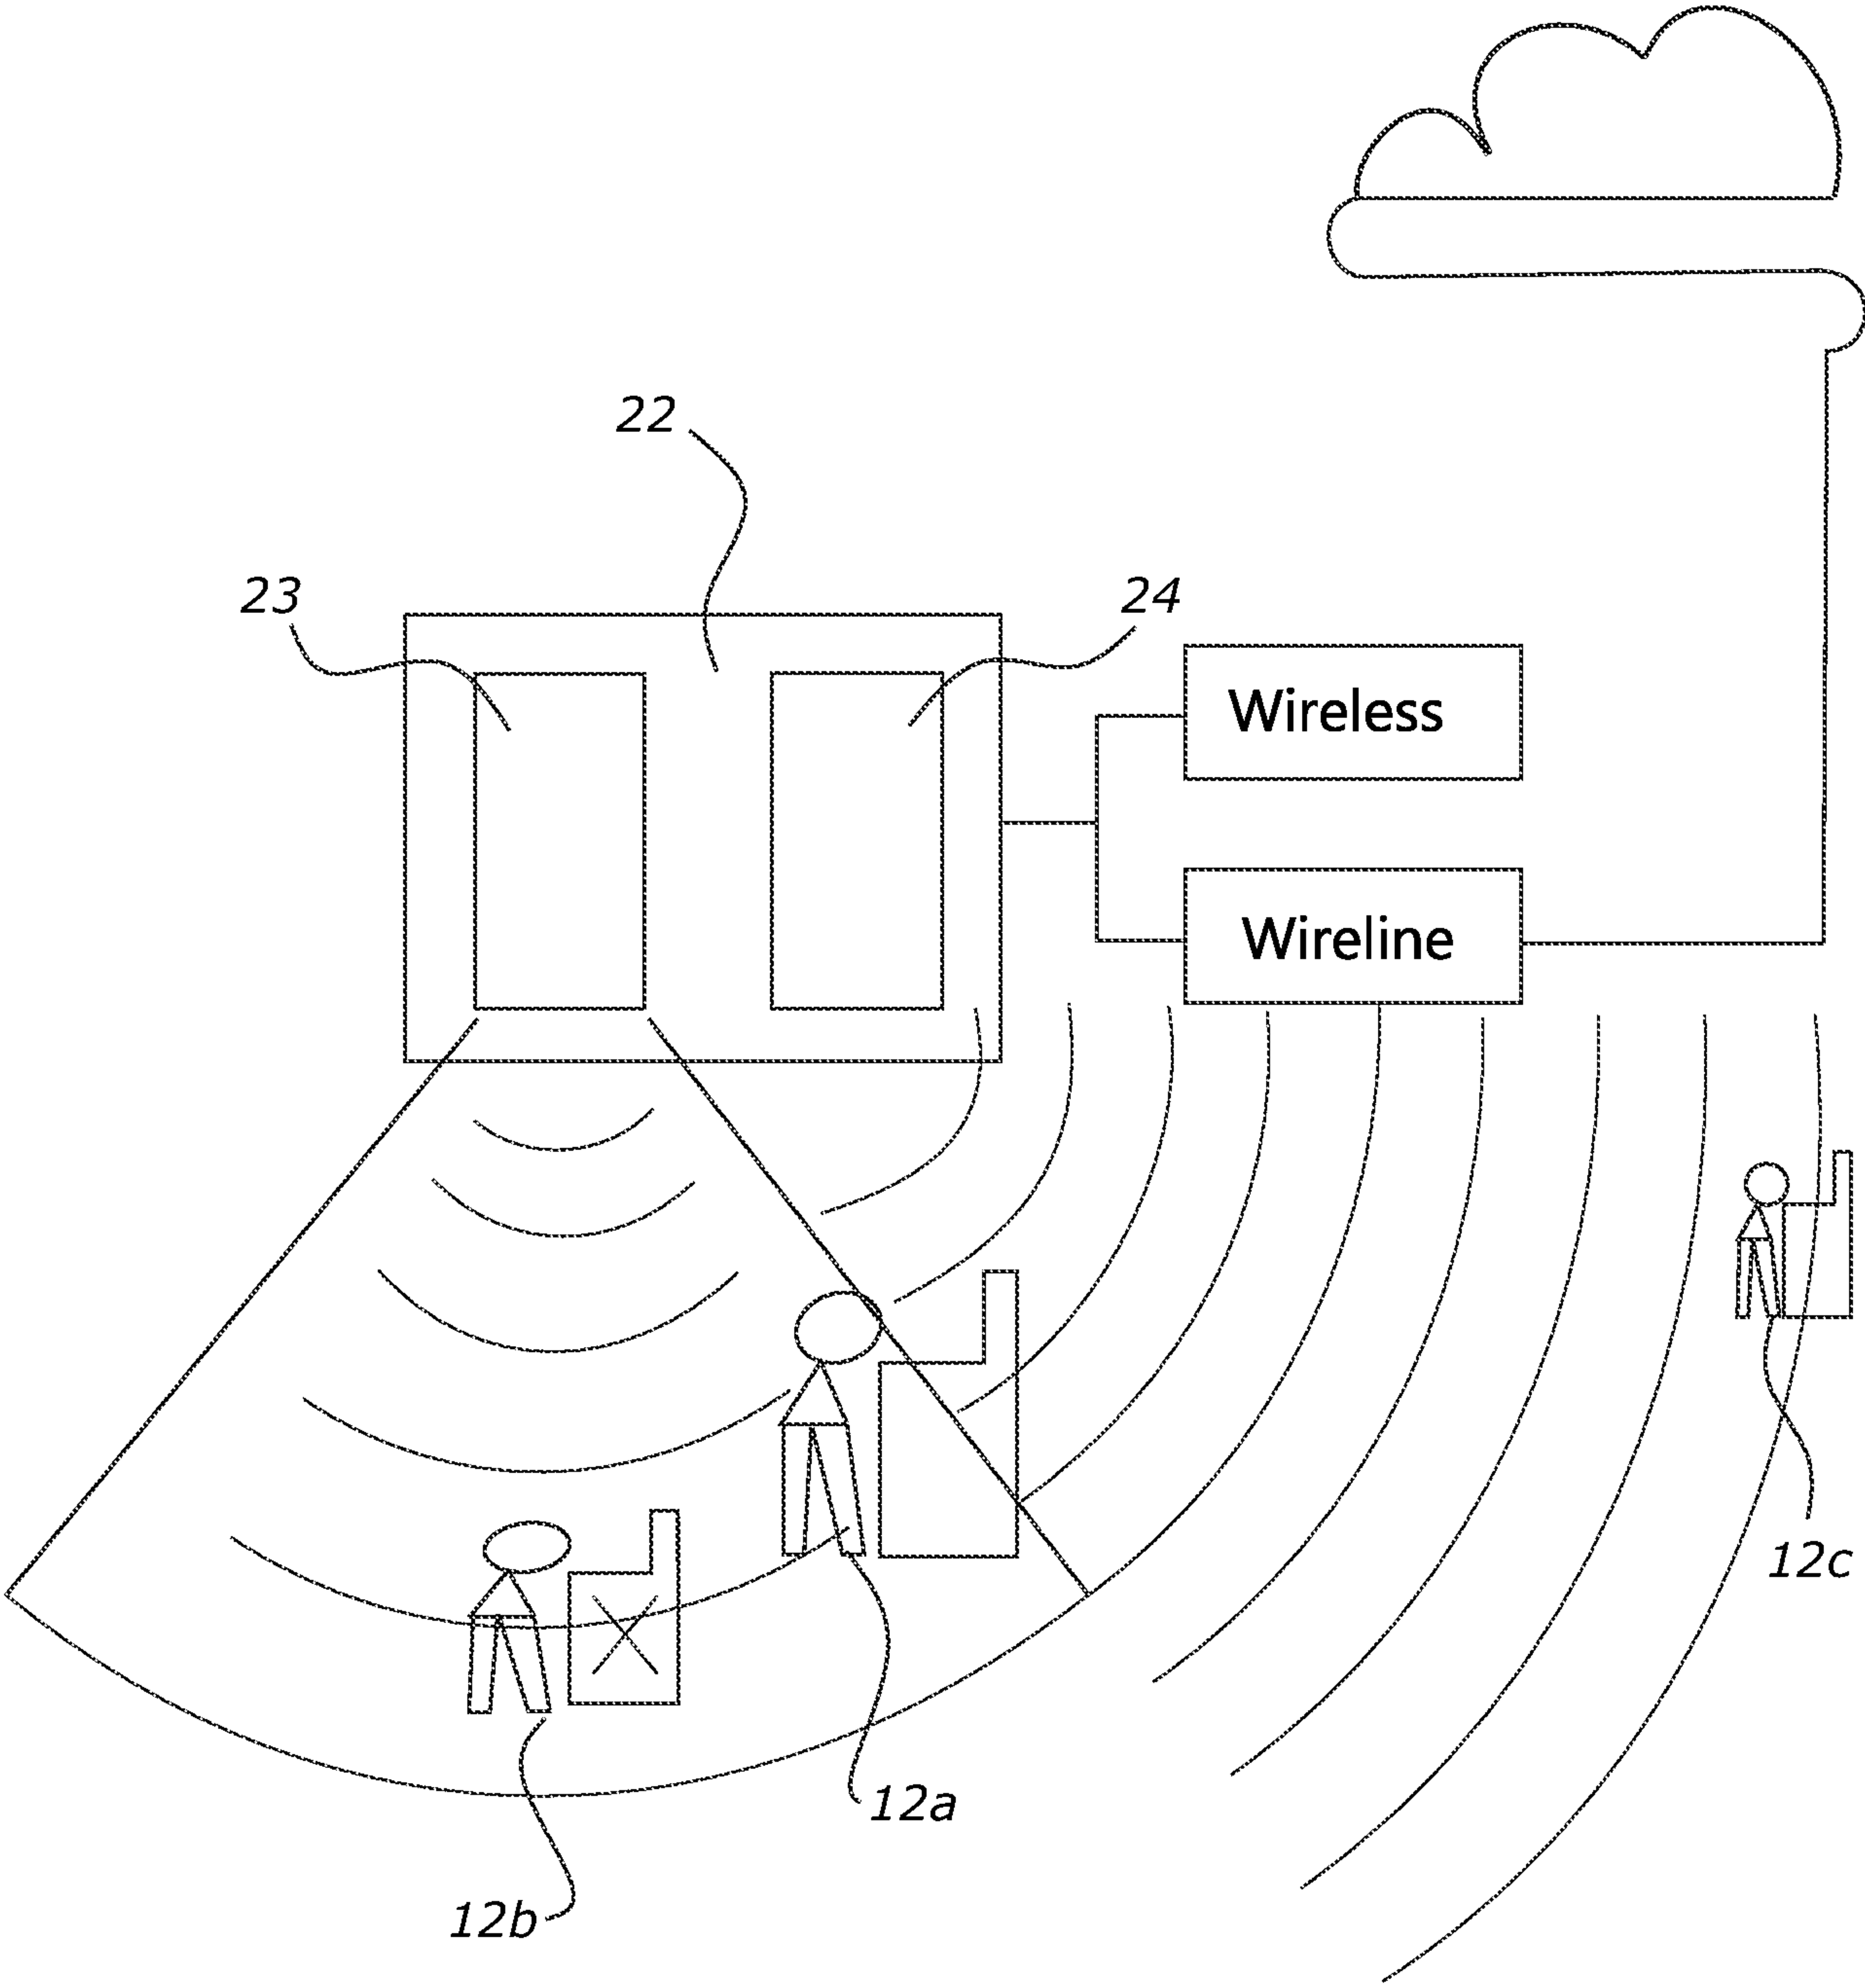 


FIG. 24

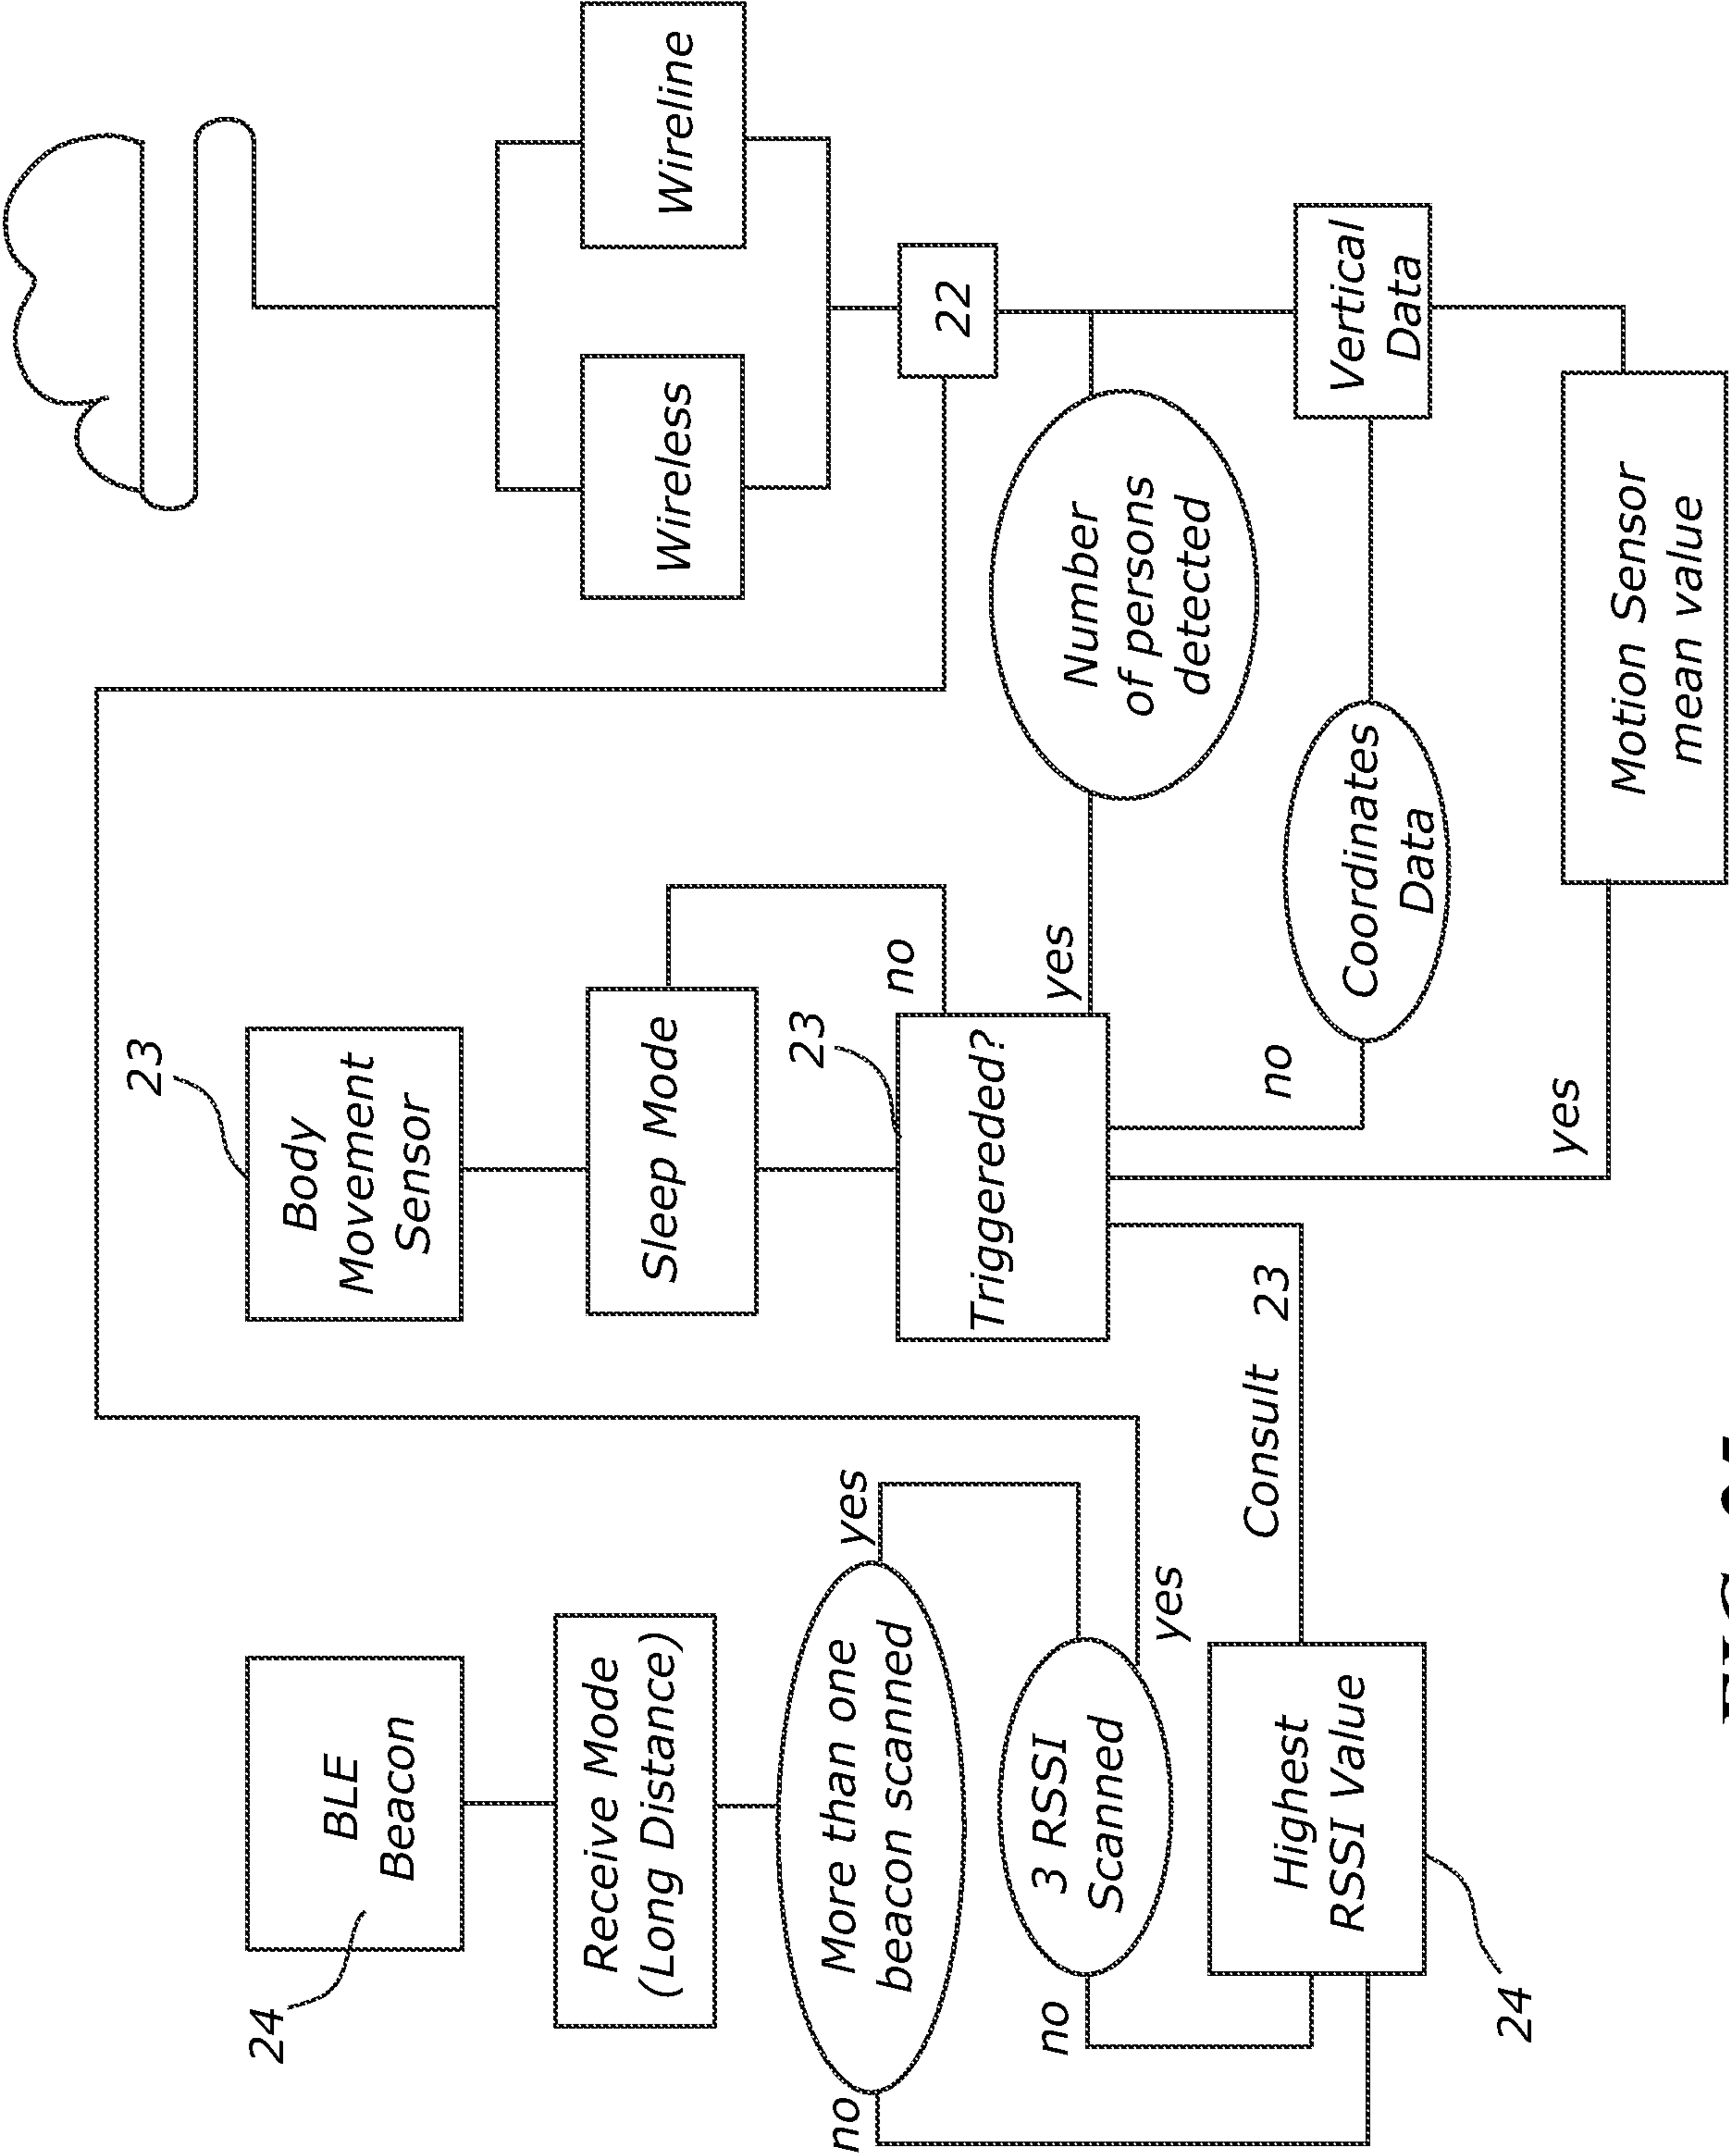 


FIG. 25