

FIG. 1



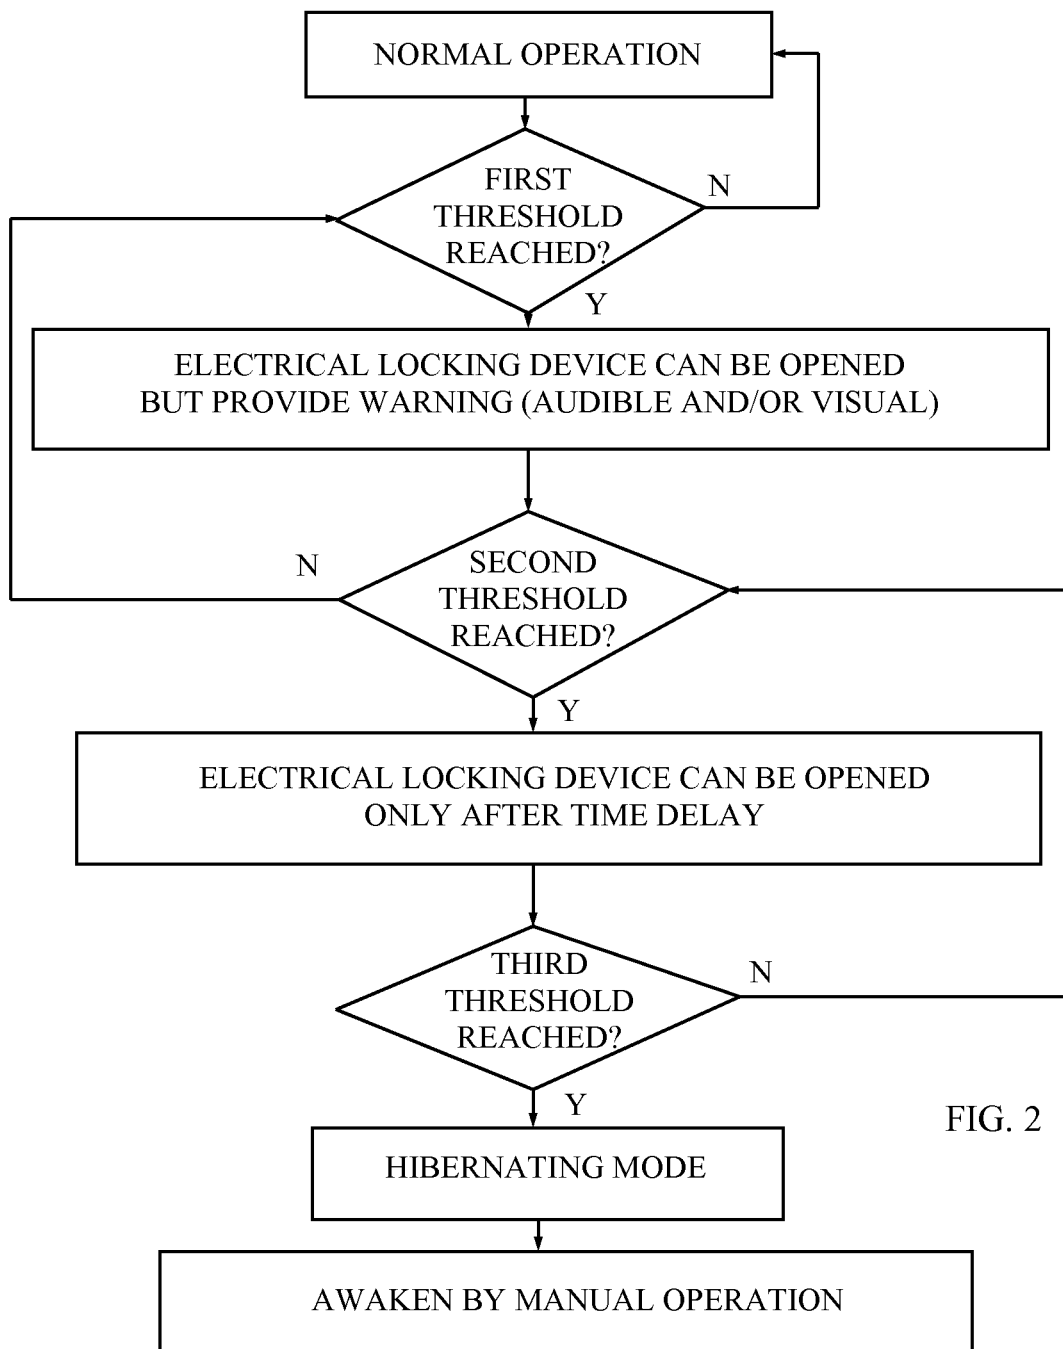


FIG. 2

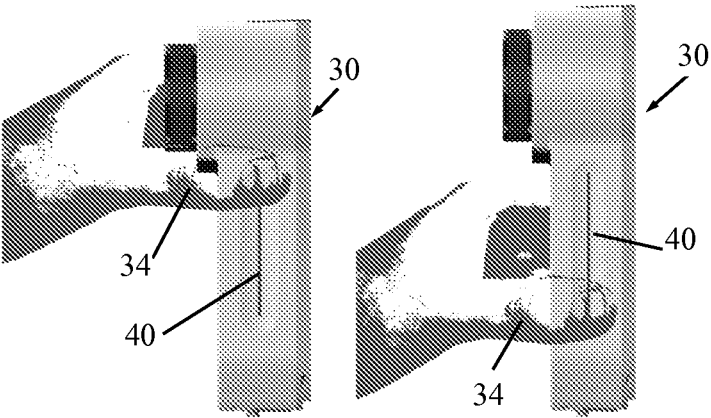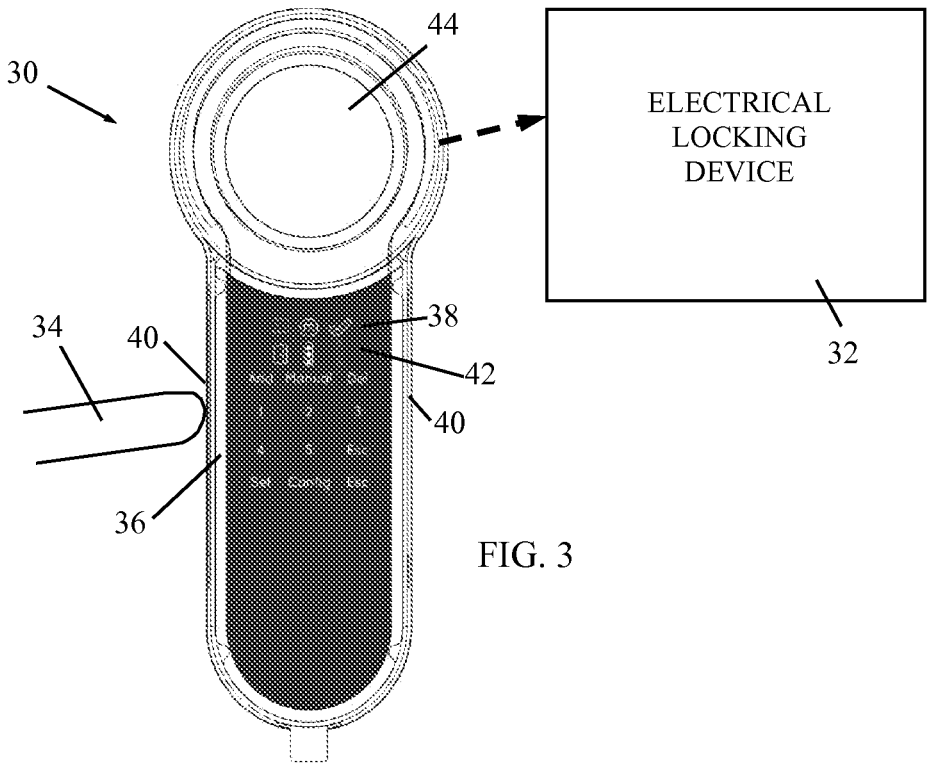

SIMULTANEOUSLY SLIDE FINGERS ON LEFT AND
RIGHT SIDES OF INTERFACE (DOWN OR UP);
INITIATES OPENING OPERATION OF LOCK

SLIDE FINGER ON ONE SIDE OF INTERFACE;
MUTES HAZARD BEEPS

SLIDE FINGER UP AND ONE DOWN ON EITHER
SIDE OF INTERFACE; THIS ENTERS
PROGRAMMING MODE

WHEN IN PROGRAMMING MODE, SLIDE
FINGER UP ON ONE SIDE; ADDS FEATURE OF
REMOTE CONTROL

WHEN IN PROGRAMMING MODE, SLIDE
FINGER DOWN ON ONE SIDE; DELETES
FEATURE OF REMOTE CONTROL

TAP FINGER ON SURFACE - RECOGNIZED
AND USED FOR SPECIFIC FUNCTION

FIG. 5