

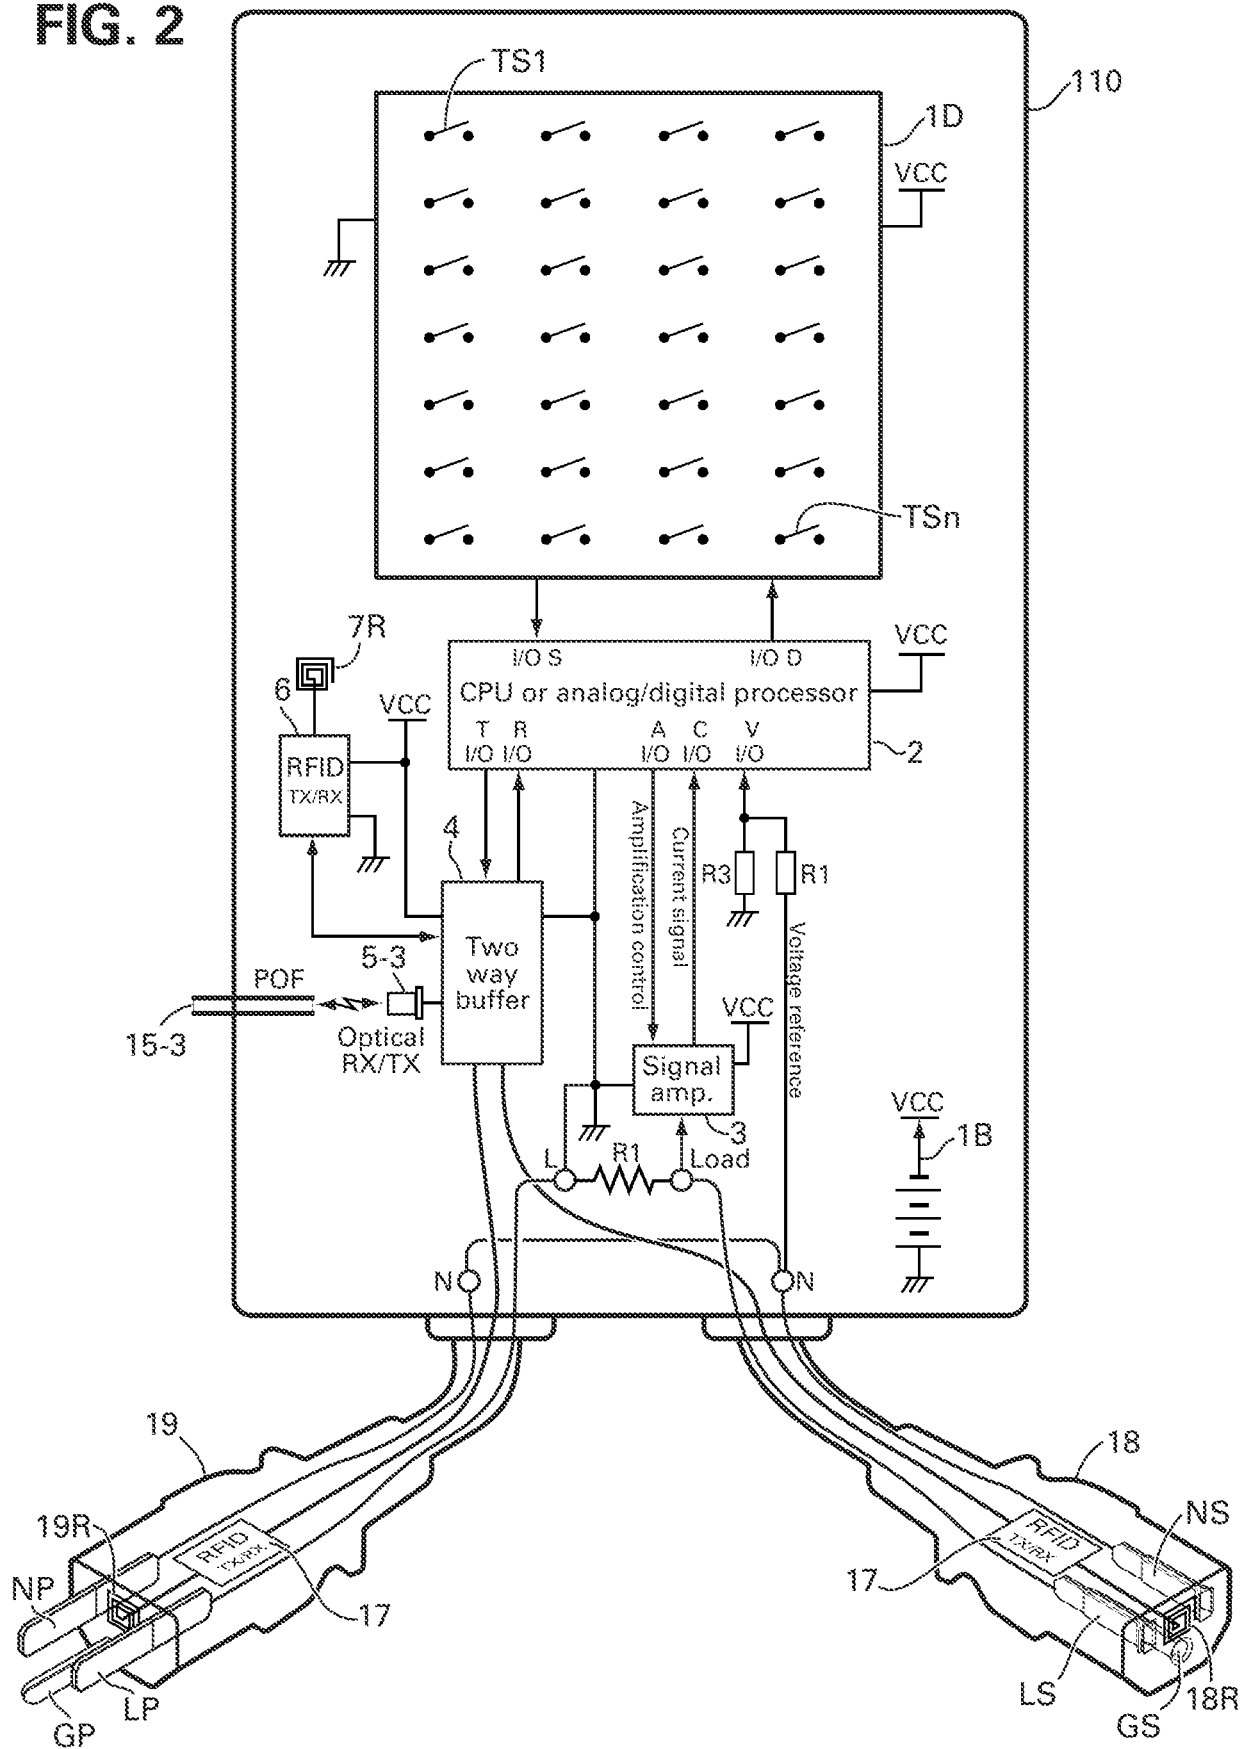
FIG. 2

FIG. 4

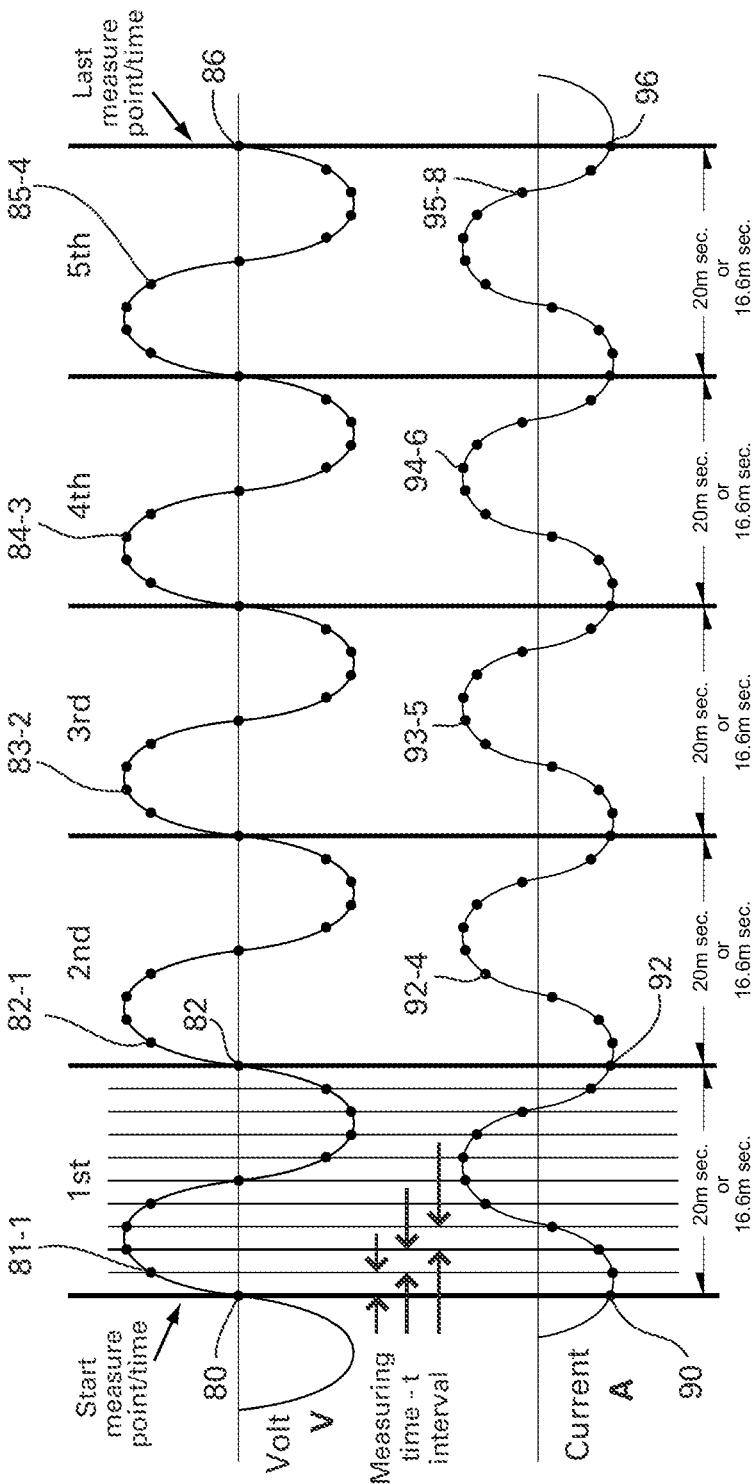


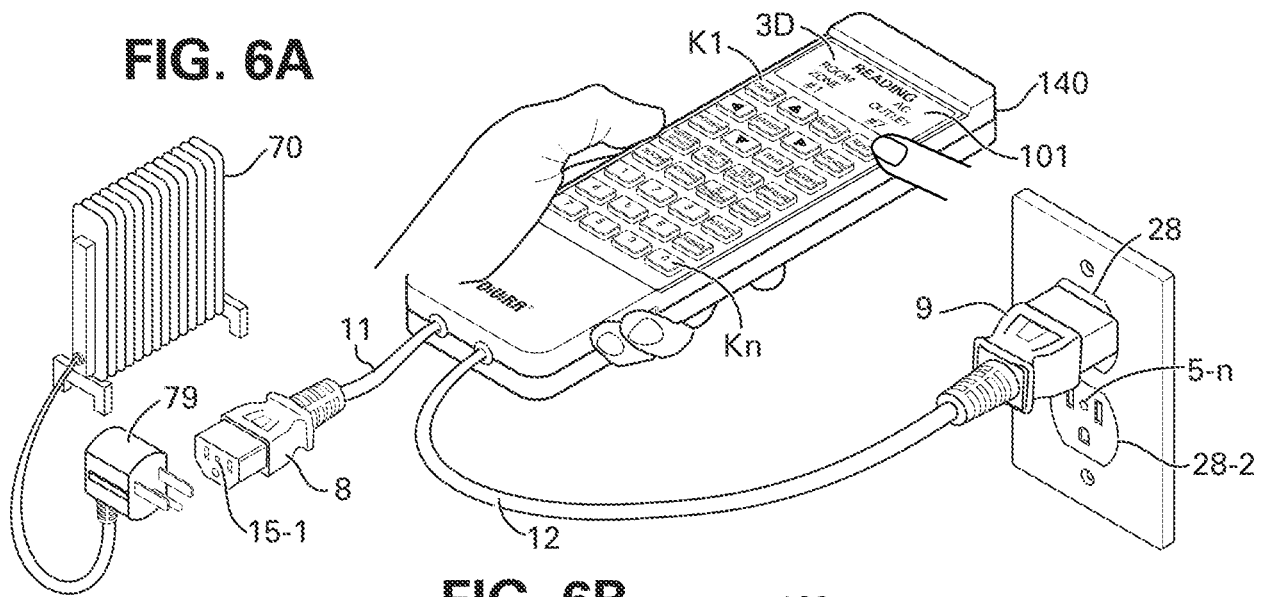
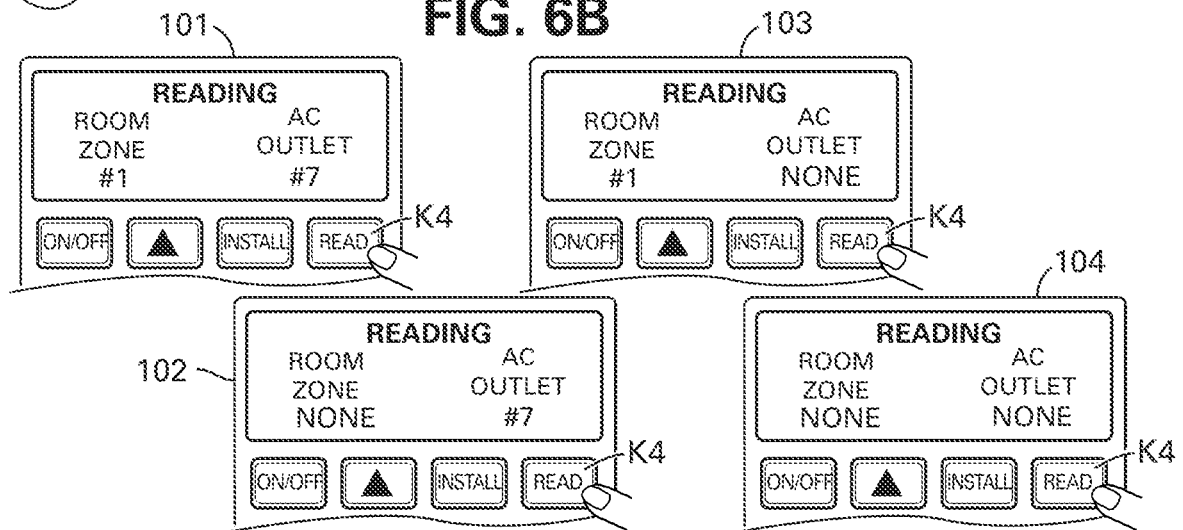
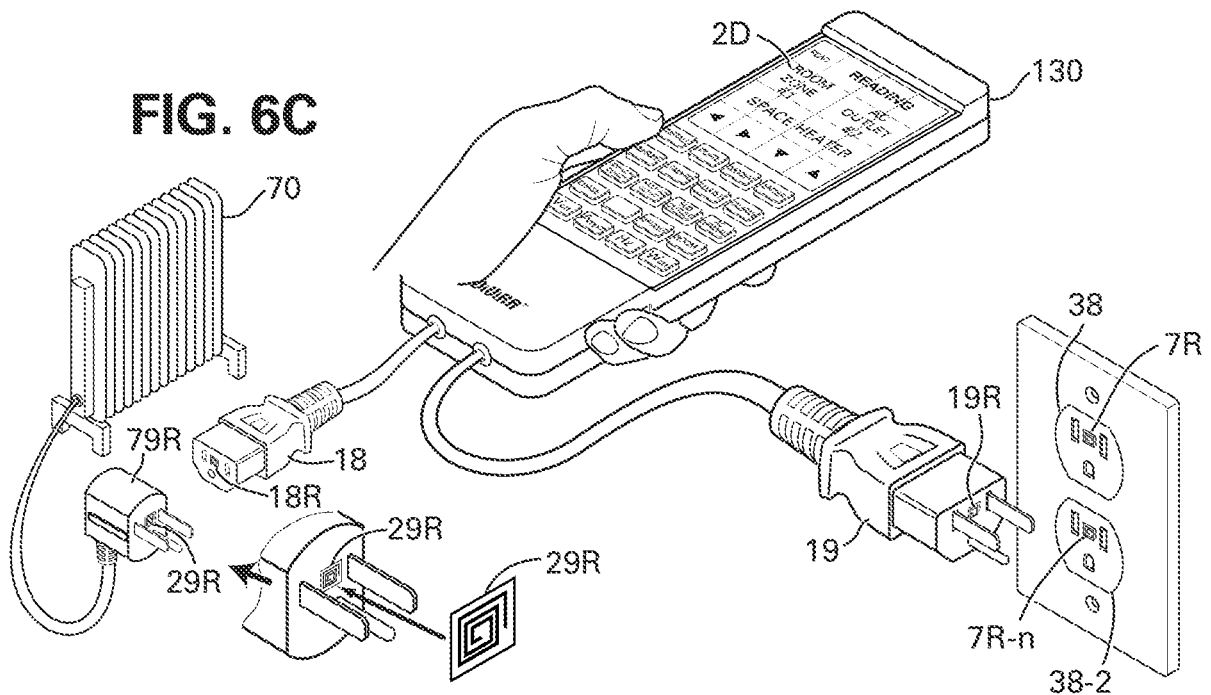
FIG. 6A**FIG. 6B****FIG. 6C**

FIG. 7A

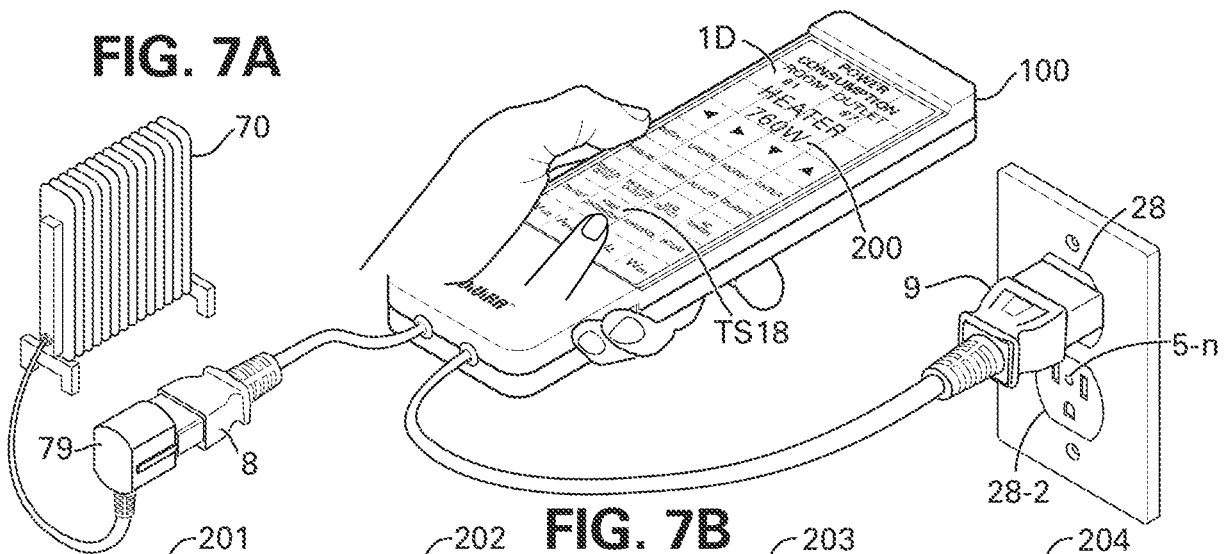


FIG. 7B

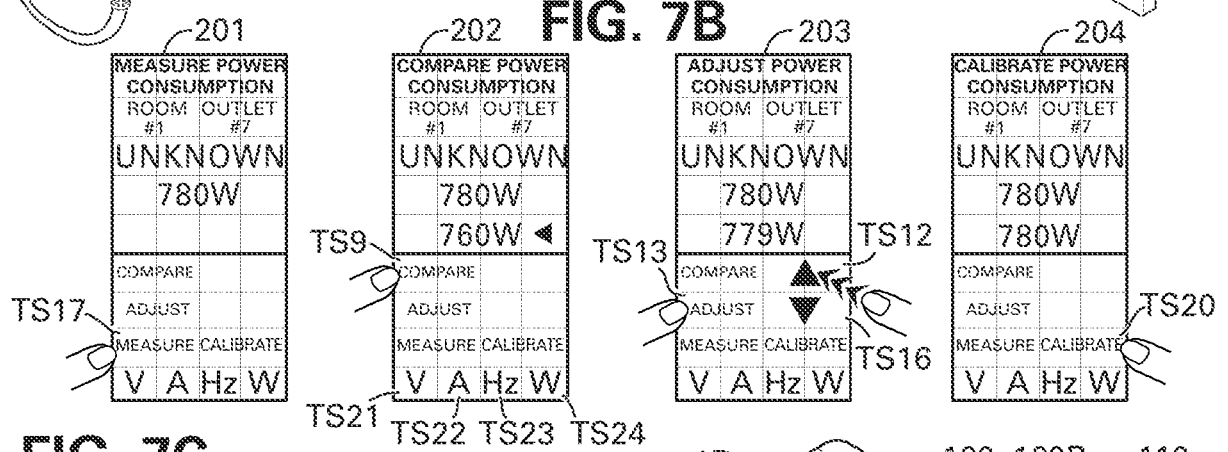


FIG. 7C

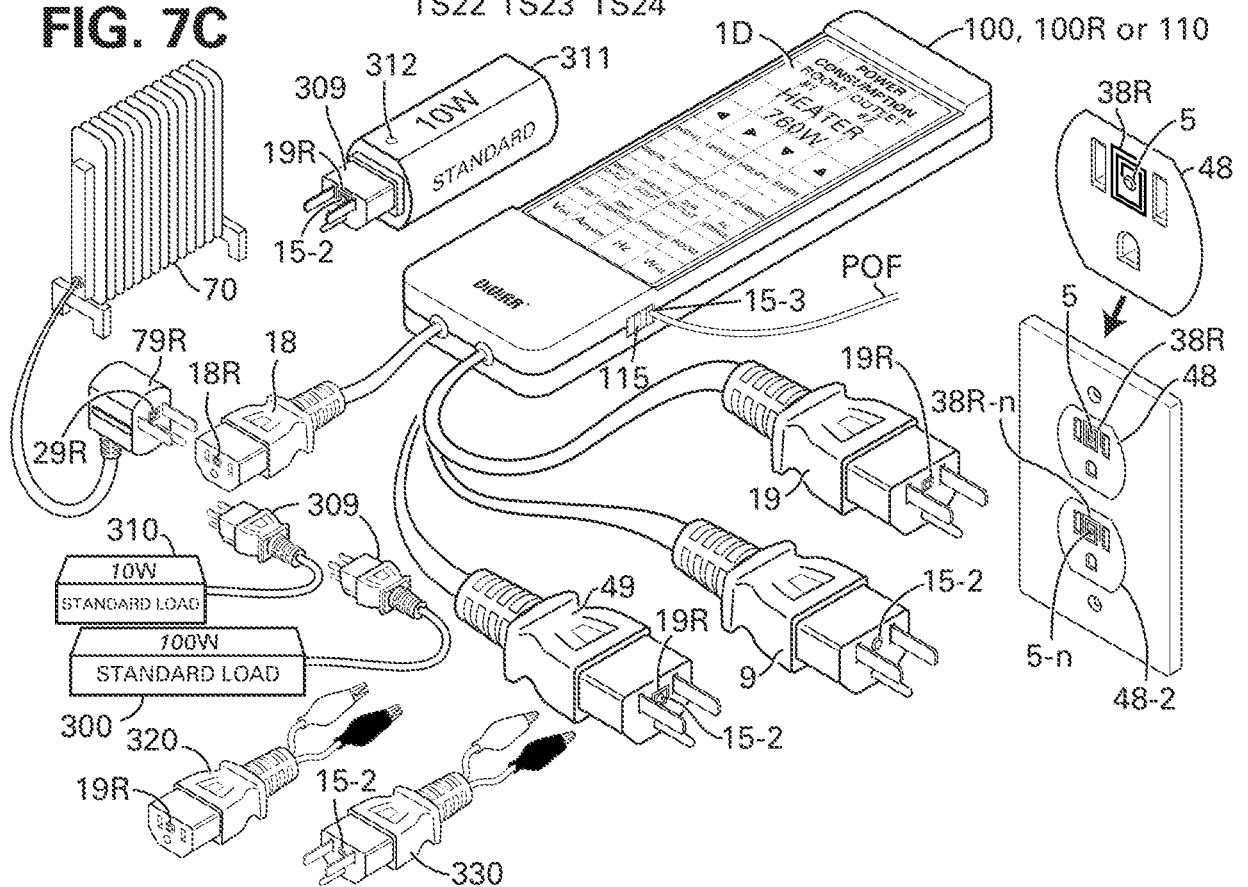


FIG. 8A

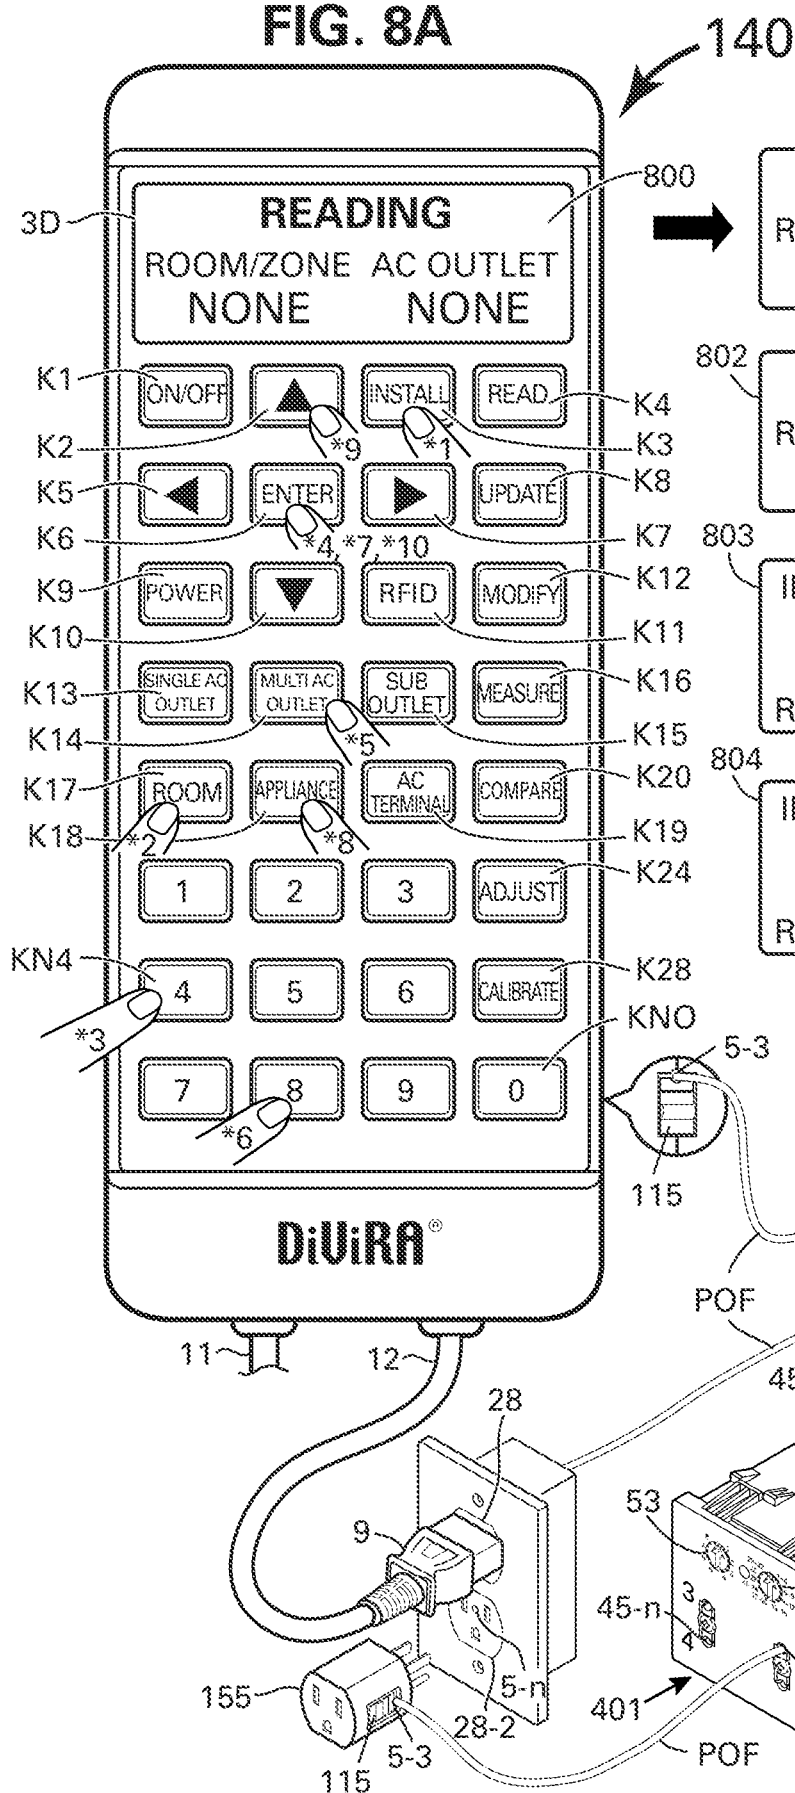


FIG. 8B

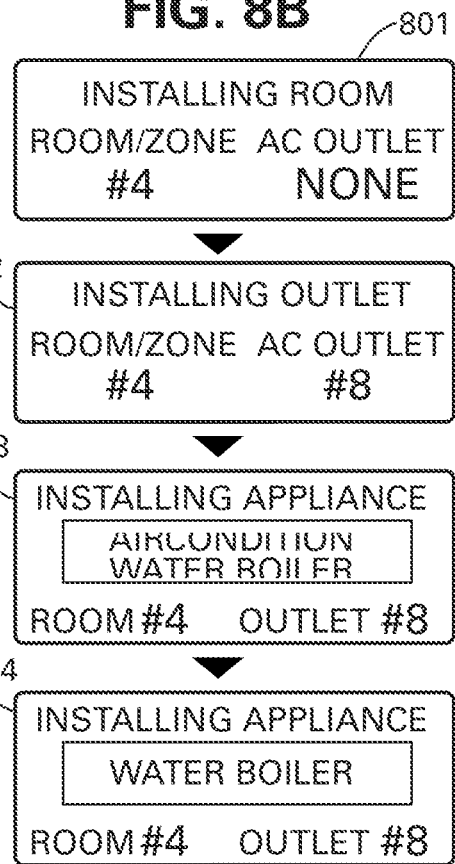


FIG. 8C

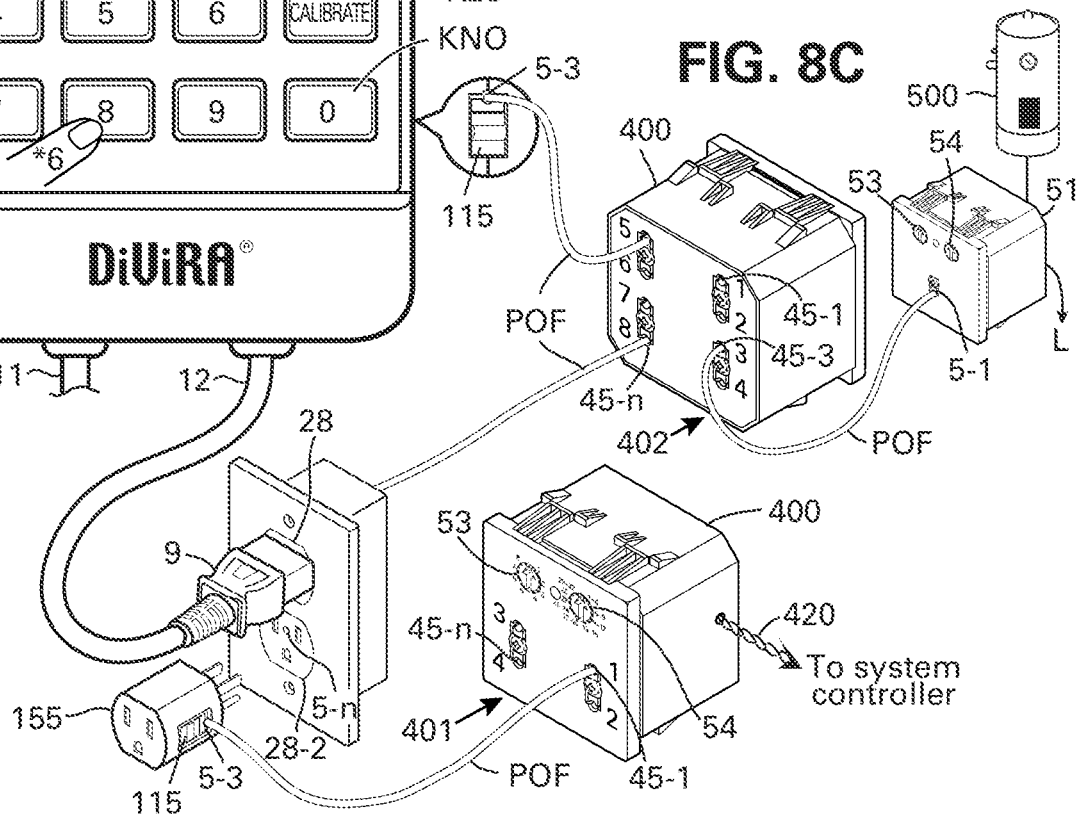


FIG. 9A

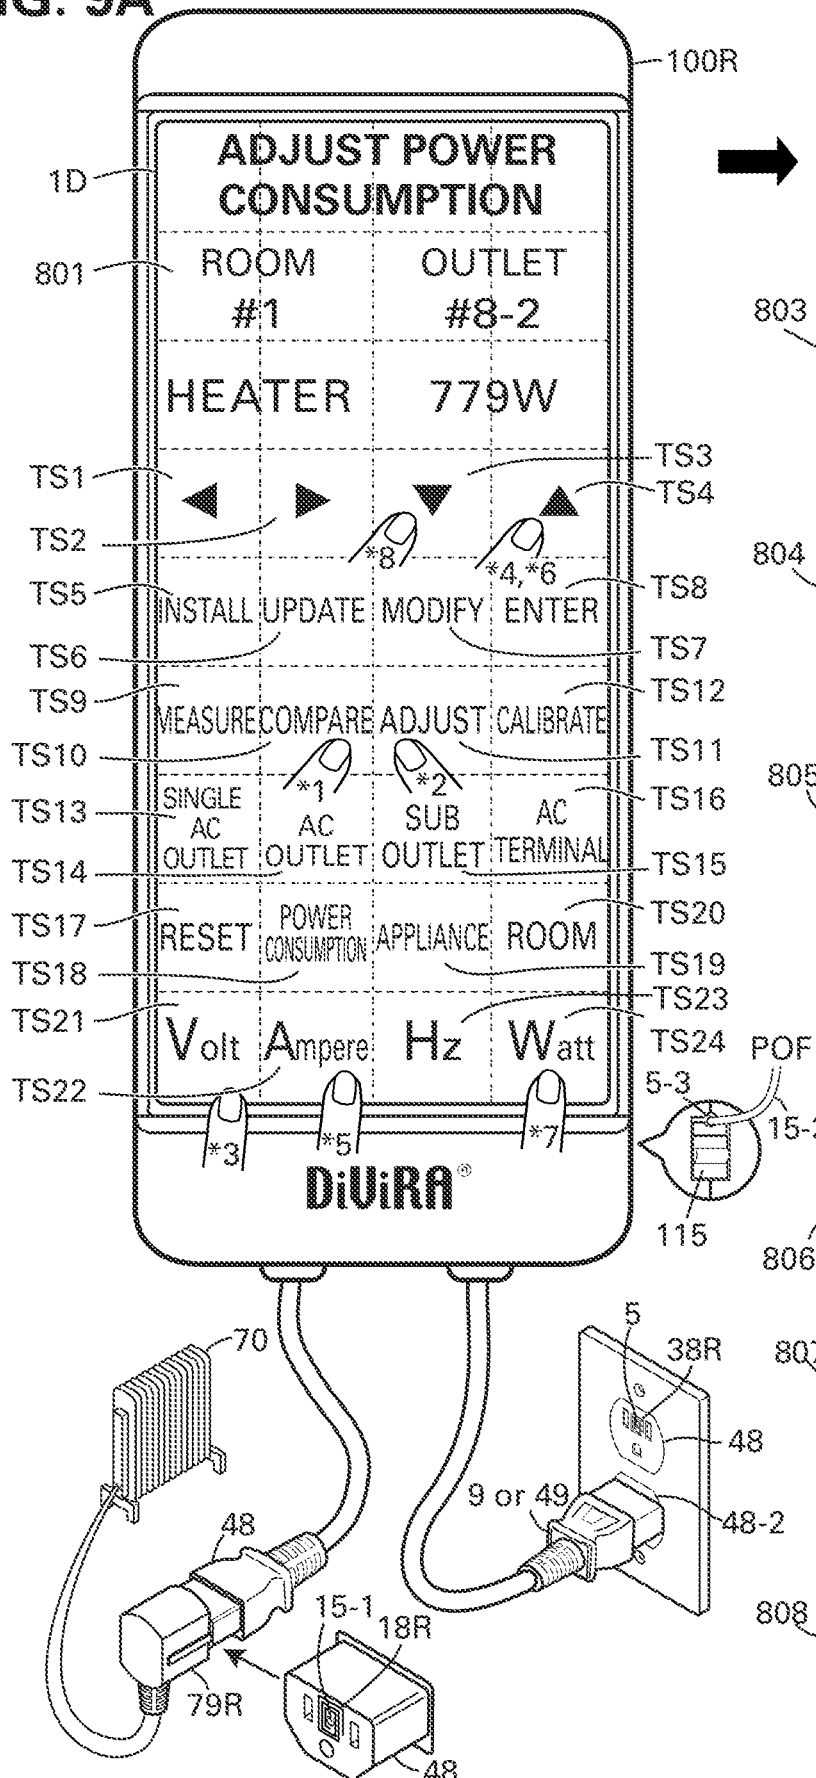


FIG. 9B

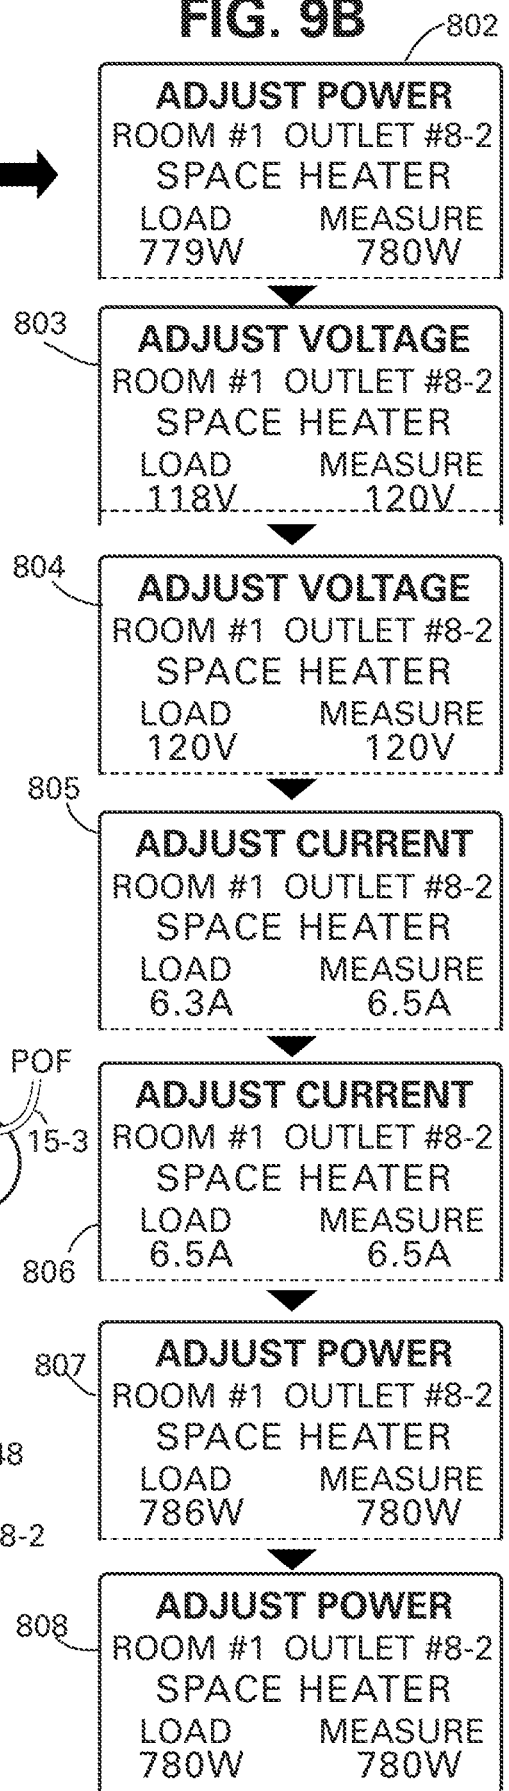
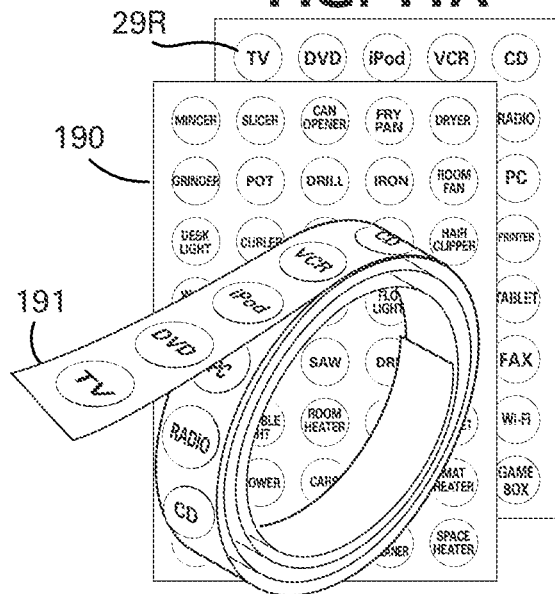
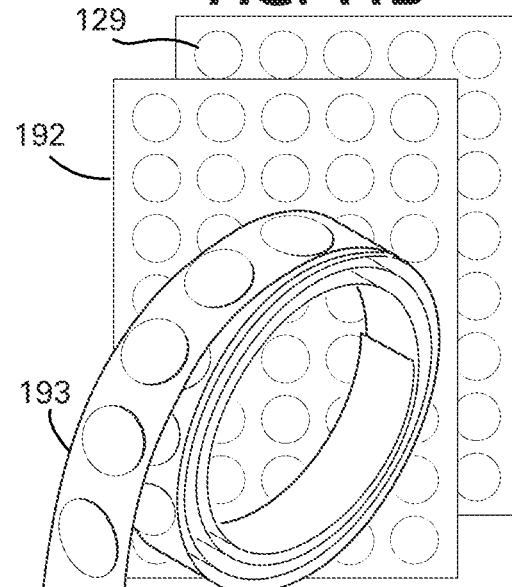


FIG. 10A

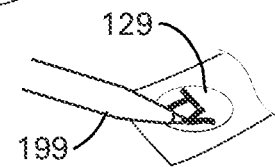
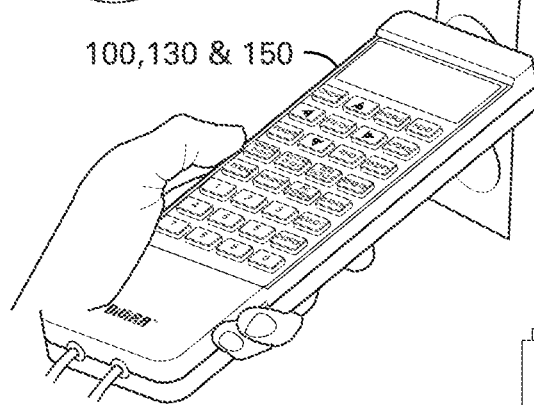
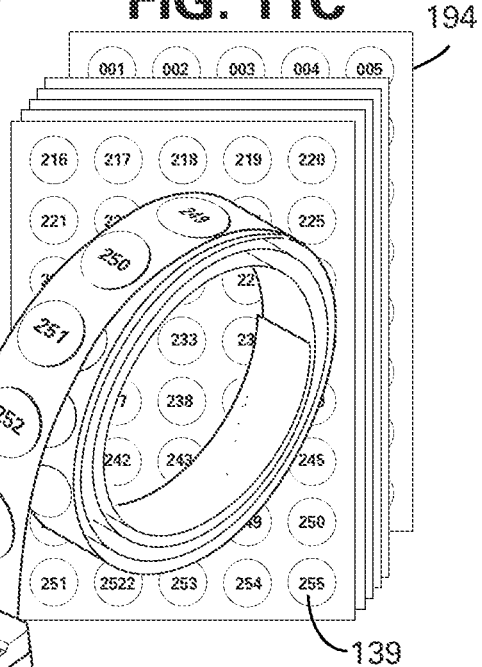
APPLIANCE CODES

700

KITCHEN/DINNING				AUDIO/VIDEO		PC, TEL & PHOTO	
	0x00	Meat chopper	0x23	Bluray	0x46	Battery charger	0x67
Bread slicer	0x01	Meat mincer	0x24		0x47		0x68
	0x02	Meat slicer	0x25	CD	0x48	Calculators	0x69
Can opener	0x03	Melter	0x26		0x49	Camera	0x6a
Cheese slicer	0x04	Microwave oven	0x27	Disk player	0x4a	Copy machine	0x6b
Coffee maker	0x05	Milk warmer	0x28	DVD	0x4b		0x6c
Coffee mill	0x06	Mixer	0x29		0x4c	Fax machine	0x6d
Cooking plate	0x07		0x2a	Game box	0x4d		0x6e
	0x08	Noodle maker	0x2b		0x4e	Interphone	0x6f
Deep fry pan	0x09		0x2c	Home theater	0x4f		0x70
Dish dryer	0x0a	Oven	0x2d		0x50	Mobile phone	0x71
Dishwasher	0x0b		0x2e	iPod cradle	0x51		0x72
	0x0c	Range	0x2f		0x52	Router/hub	0x73
Egg cooker	0x0d	Refrigerator	0x30	MP3	0x53		0x74
Espresso	0x0e	Rice cake maker	0x31	Music box	0x54	PC	0x75
	0x0f	Rice cooker	0x32		0x55	PC Printer	0x76
Fish roaster	0x10	Rice jar	0x33	Portable player	0x56	Power supply	0x77
Food processor	0x11	Rice washer	0x34		0x57	Photo Printer	0x78
Freezer	0x12	Roaster	0x35	Radio	0x58		0x79
Fryer	0x13		0x36		0x59		0x7a
	0x14	Steamer	0x37	Stereo pre amp.	0x5a	Scanner	0x7b
Grinder	0x15	Stirrer	0x38	Stereo amp.	0x5b	Smartphone	0x7c
Garbage disposal	0x16	Stove	0x39		0x5c		0x7d
	0x17		0x3a	TV set top box	0x5d	Tablet PC	0x7e
Ice flaker	0x18	Tea server	0x3b	Television	0x5e	Telephone	0x7f
Ice maker	0x19	Toaster	0x3c		0x5f		0x80
Induction cooker	0x1a	Tumblers dryer	0x3d	Video Camera	0x60		0x81
Instant water heater	0x1b		0x3e	VCR	0x61	Wi-Fi router	0x82
	0x1c	Vegetable washer	0x3f		0x62		0x83
Juice blender	0x1d		0x40	MUSIC		CONTROLLERS	
Juice squeezer	0x1e	Waffle iron	0x41				
	0x1f	Warm tray	0x42	Juke box	0x63	Heating Regulators	0x84
Kettle/pot	0x20	Warming board	0x43		0x64		0x85
	0x21	Water cooler	0x44	Musical instrument	0x65	Smoke Detector	0x86
	0x22		0x45		0x66	Thermostats	0x87

FIG. 11A**FIG. 11B**

100,130 & 150

**FIG. 11C****FIG. 11D**