


1/6
FIG. 1

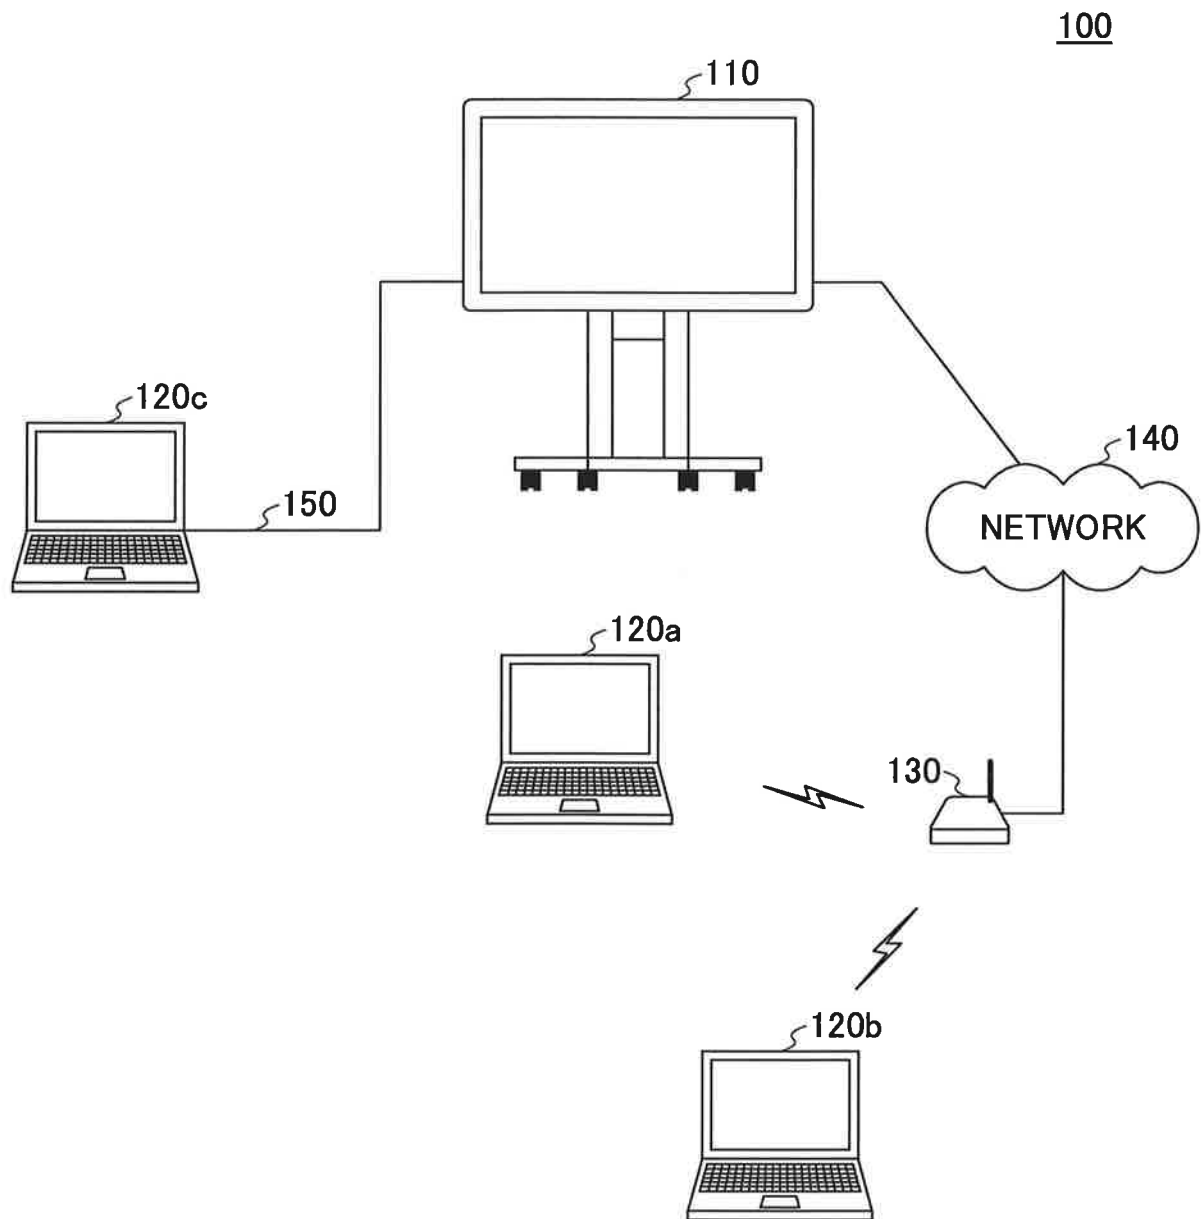

2/6
FIG.2

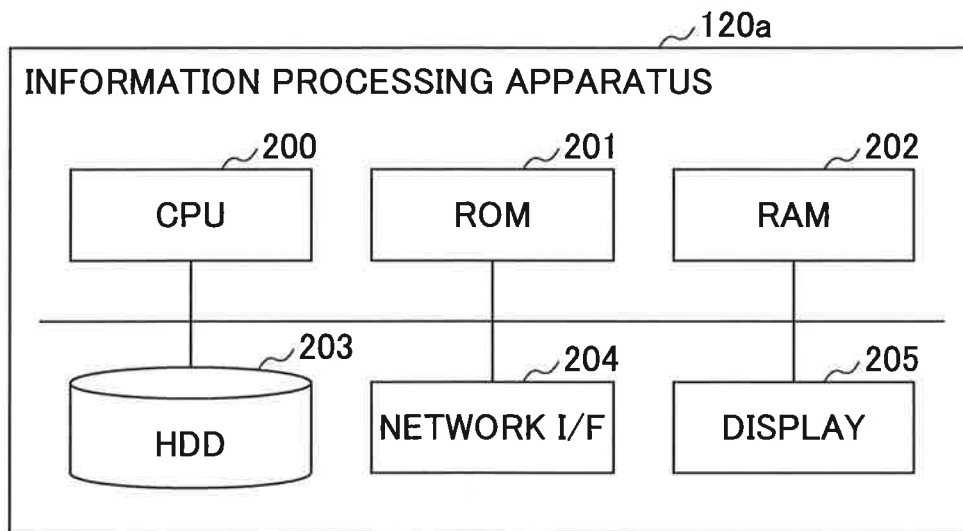


FIG.3


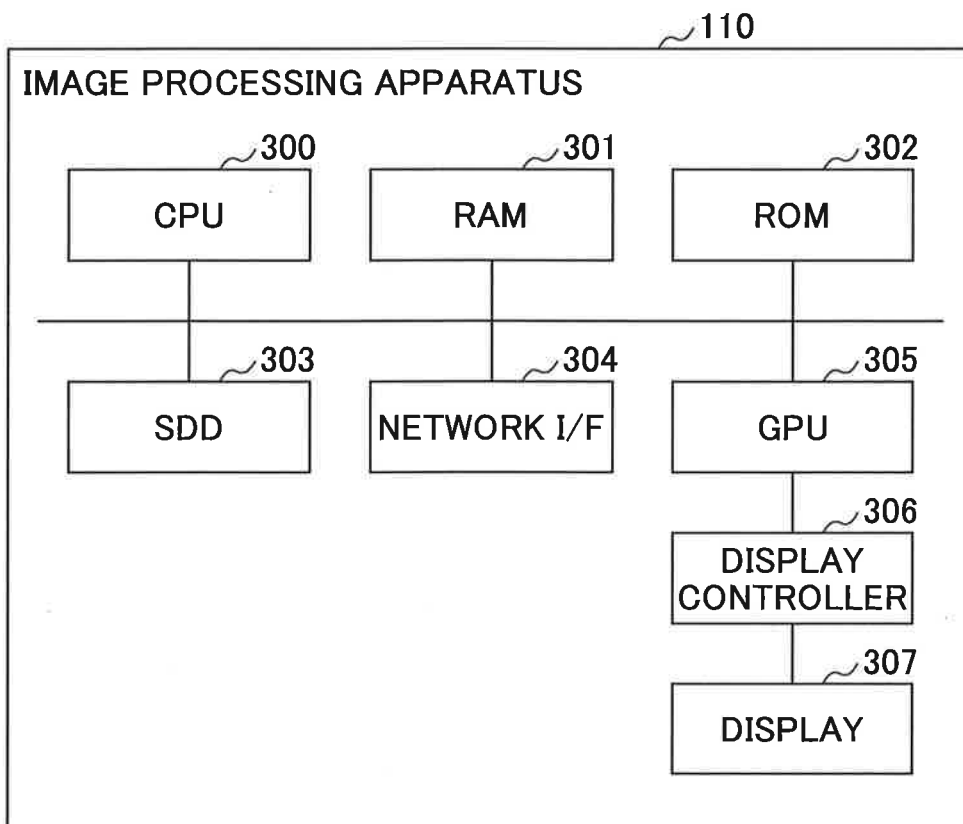


FIG.4

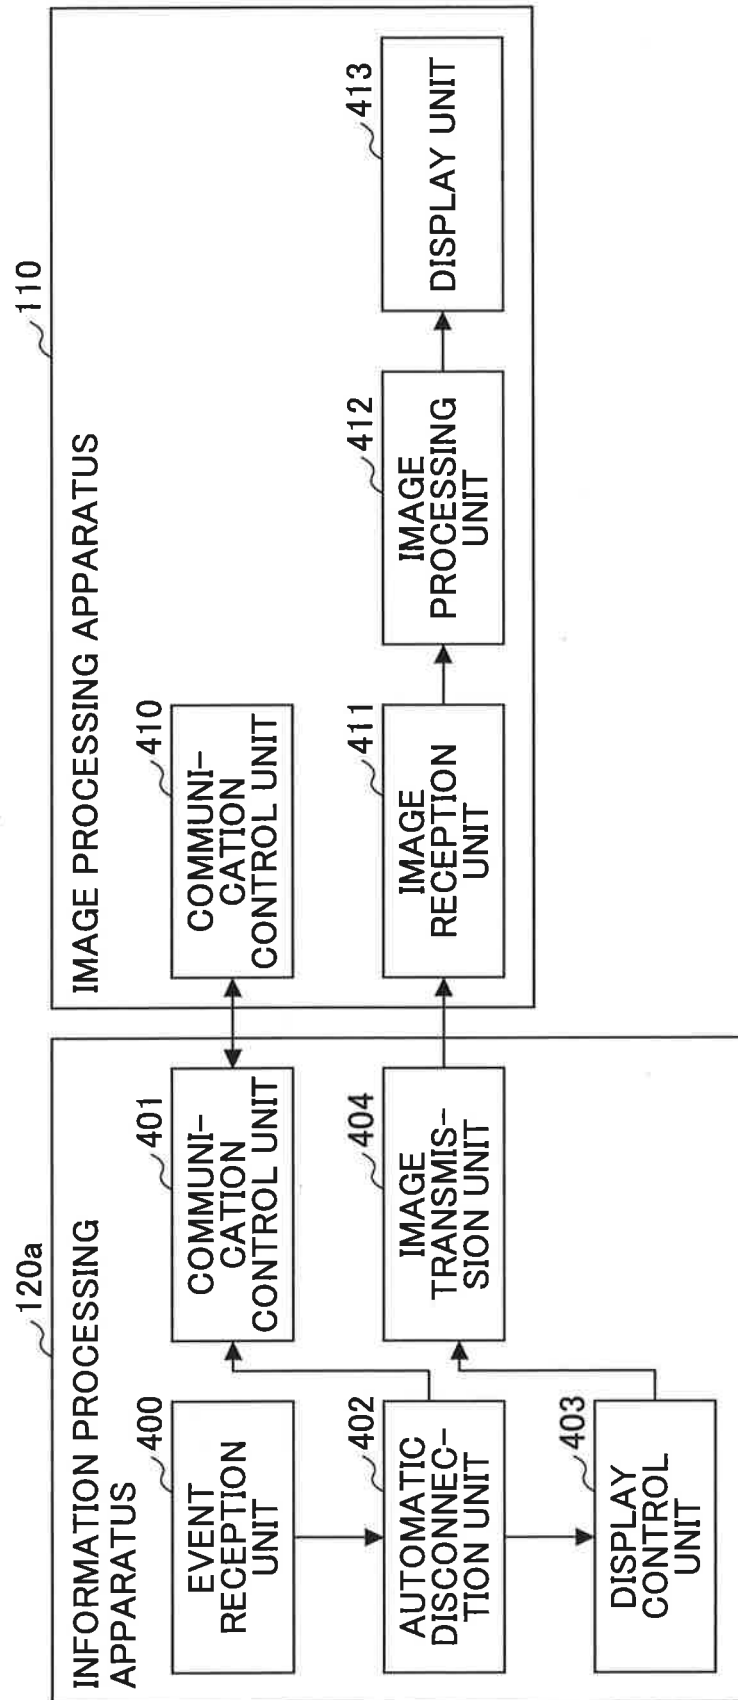

4/6
FIG.5

500

SCREEN FOR SETTING AUTOMATIC DISCONNECTION

ENTER IP ADDRESS AND PASSCODE, AND CLICK "CONNECT".

IP ADDRESS: PASSCODE:

501 ☒ DISCONNECT AUTOMATICALLY

TIME INTERVAL FOR
DISPLAYING WARNING DIALOGUE
BEFORE DISCONNECTION:

502

EVERY 30 MIN. ▼
EVERY 1 MIN.
EVERY 5 MIN.
EVERY 10 MIN.
EVERY 15 MIN.
EVERY 20 MIN.
EVERY 25 MIN.
EVERY 30 MIN.

HELP CONNECT END

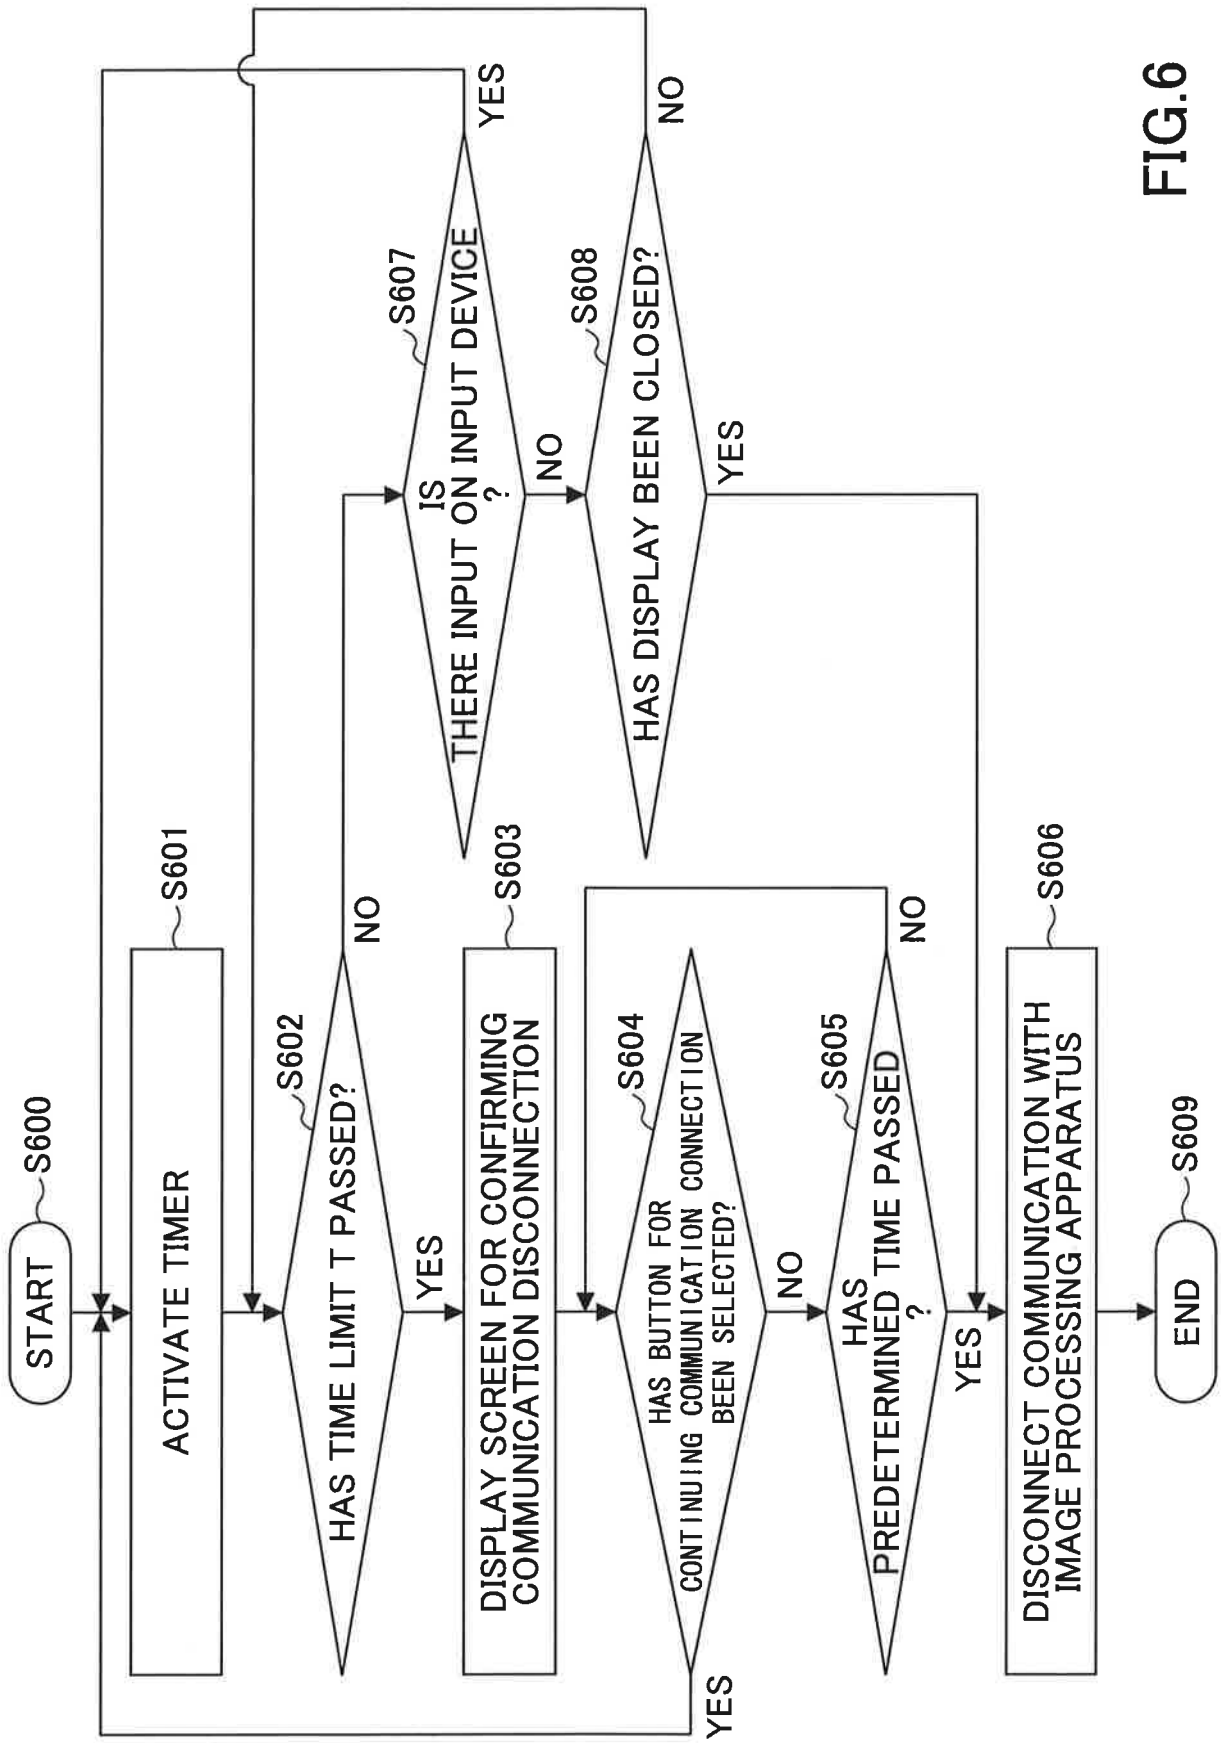


FIG.6

6/6
FIG.7

