

1/7

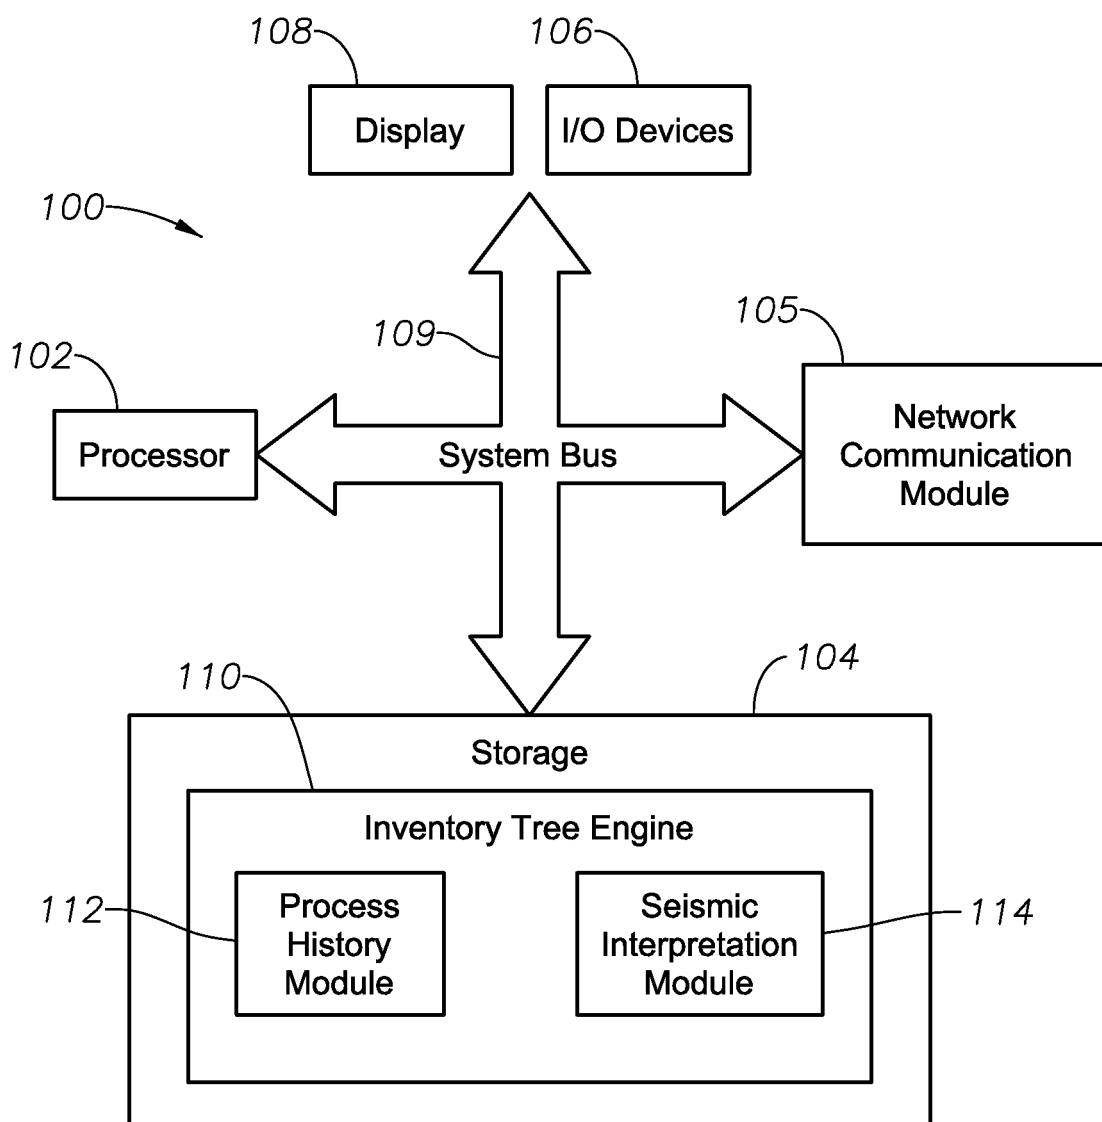


FIG. 1

2/7


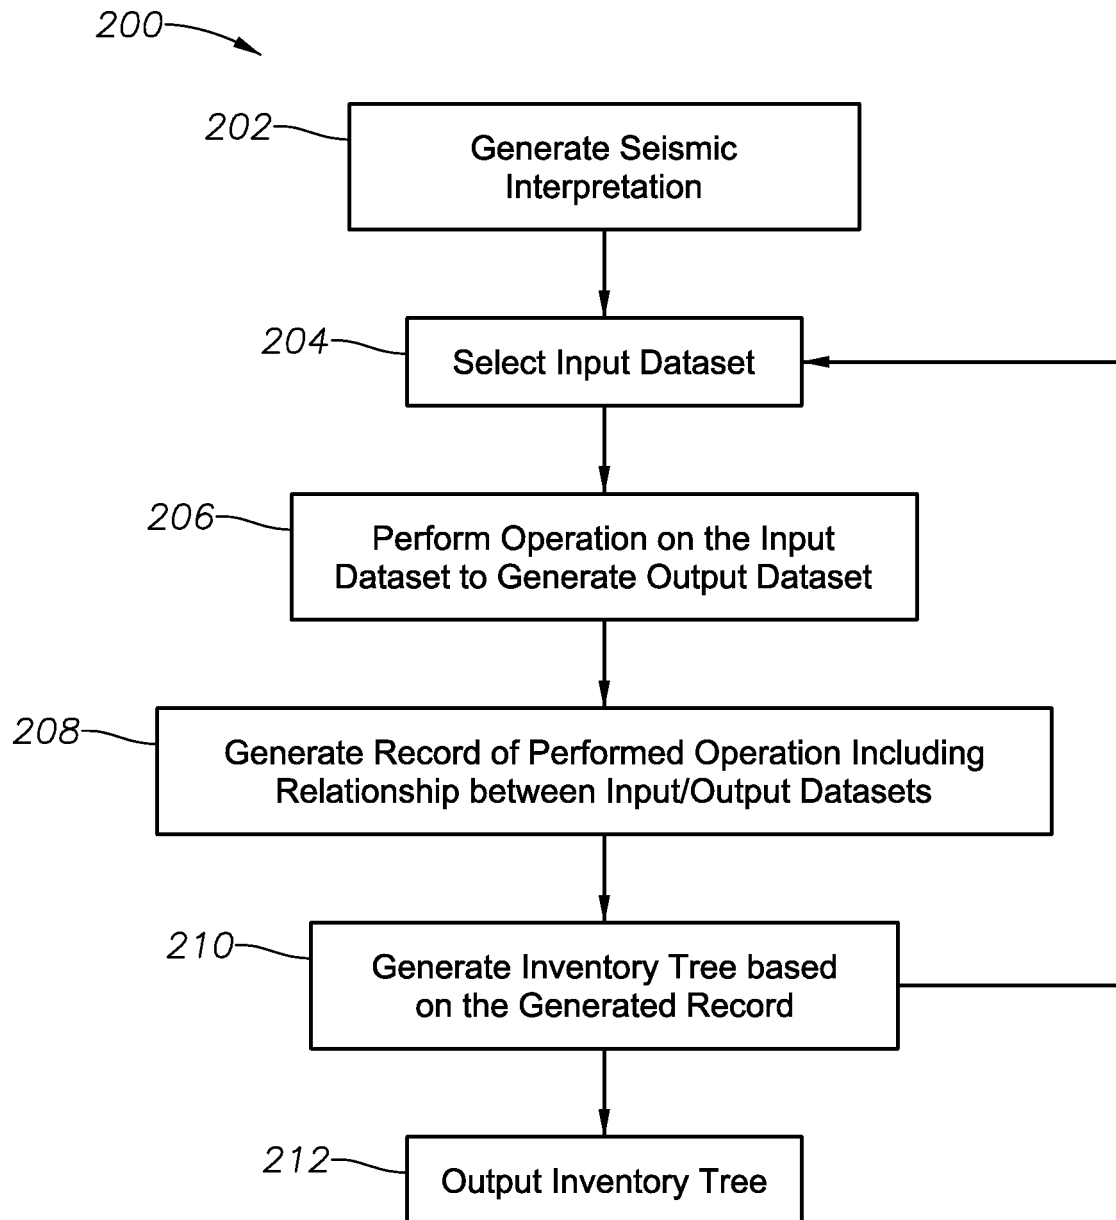


FIG. 2A

3/7

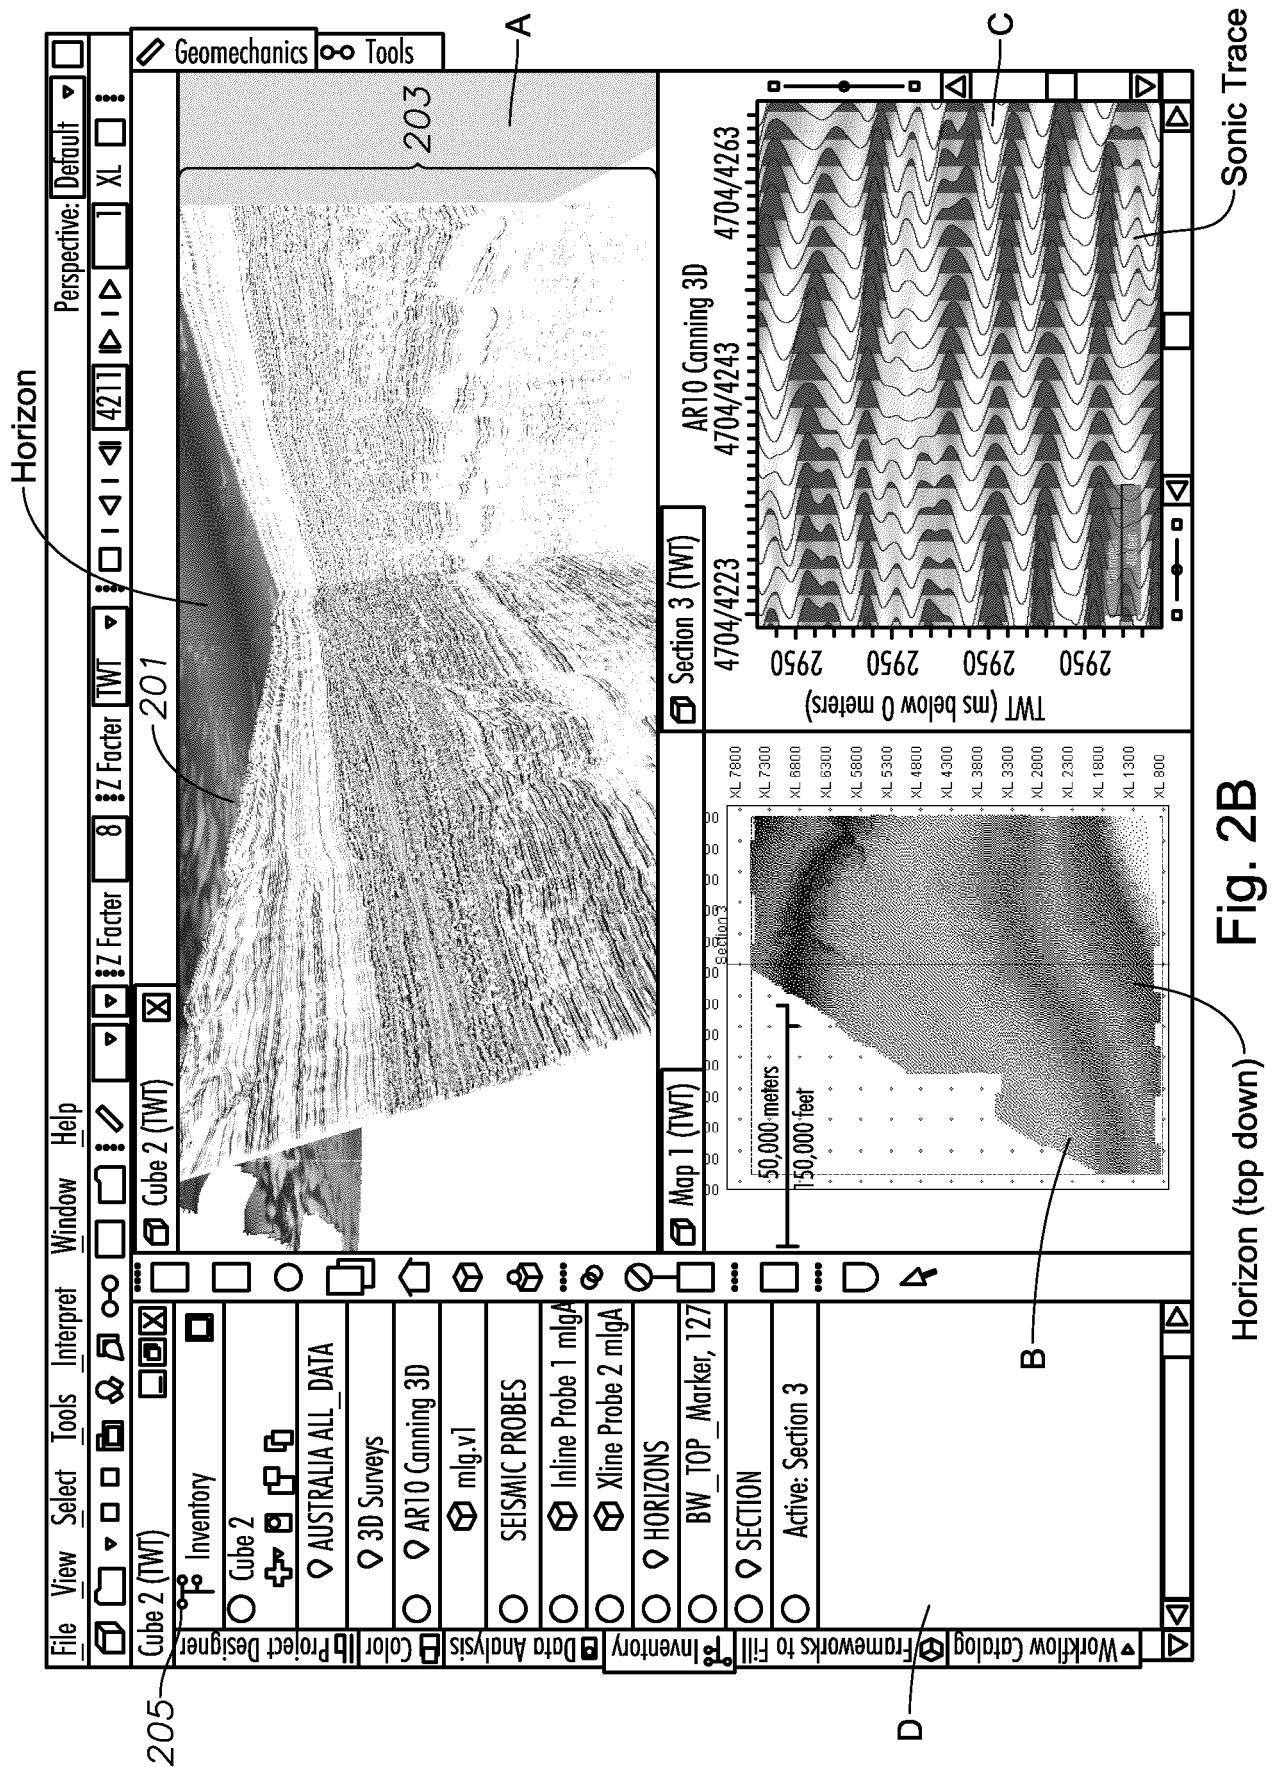

4/7

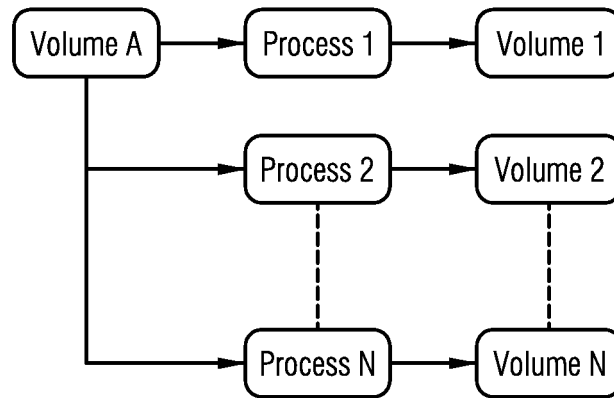


FIG. 2C

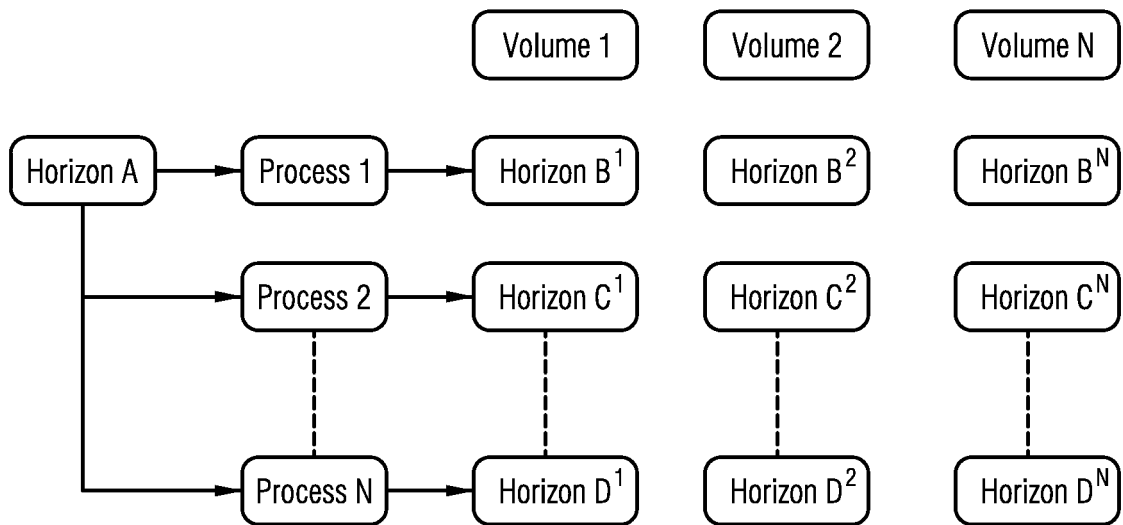


FIG. 2D

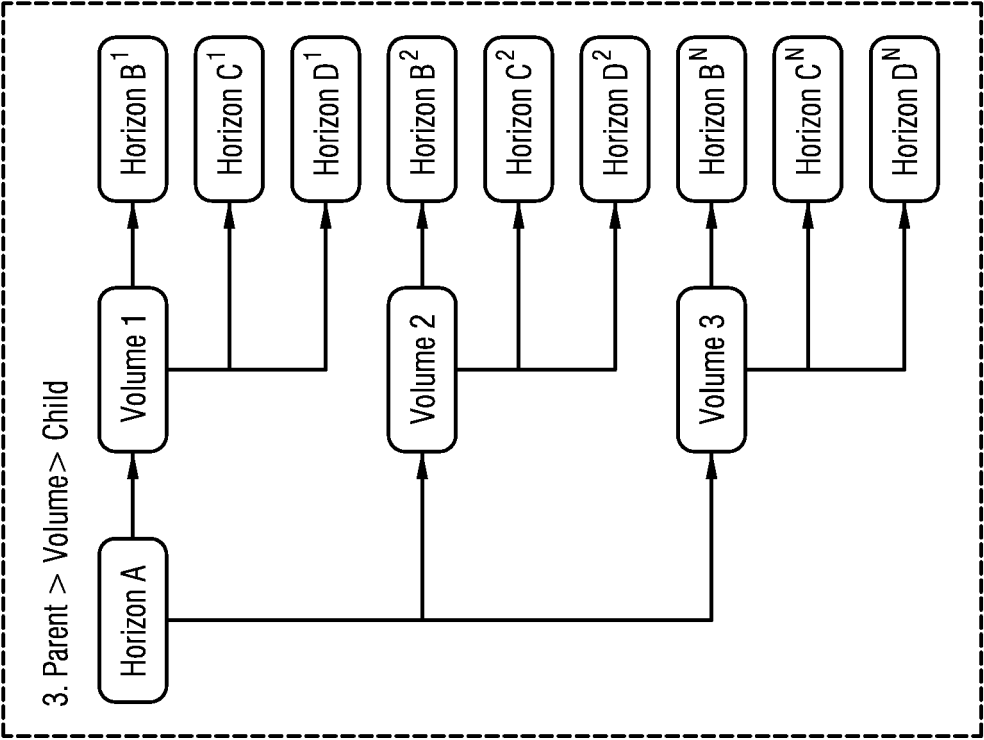


FIG. 2F

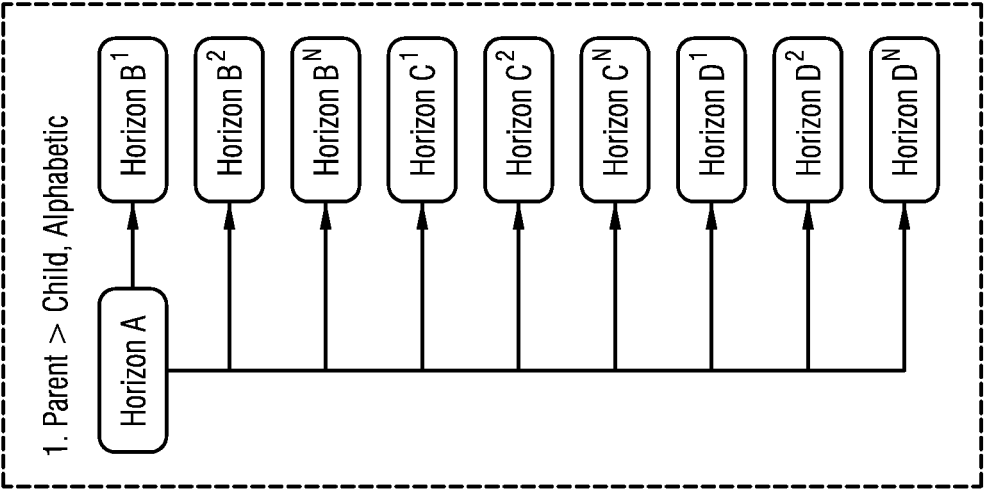


FIG. 2E

6/7

300

The dialog box is titled "Seismic Attribute Generation" and contains the following sections:

- Input/Output-mlg** (302):
 - Input: ☐ 3dv
 - Output: ☐ Shared Memory ☒ bri ☐ cmp
 - Buttons:
- Area of Interest** (304):
 - Input:

	Minimum	Maximum
Input:	4,303	4,303
Crossline:	816	7,605
Z:	0	6,000
 - Buttons:
- Operations** (306):
 - Attributes: ▾
 - Tabs:
 - Average Frequency: ▾
 - Samples: ☐
- Scaling** (308):
 - Minimum: ☐
 - Maximum: ☐

Buttons:

FIG. 3

7/7

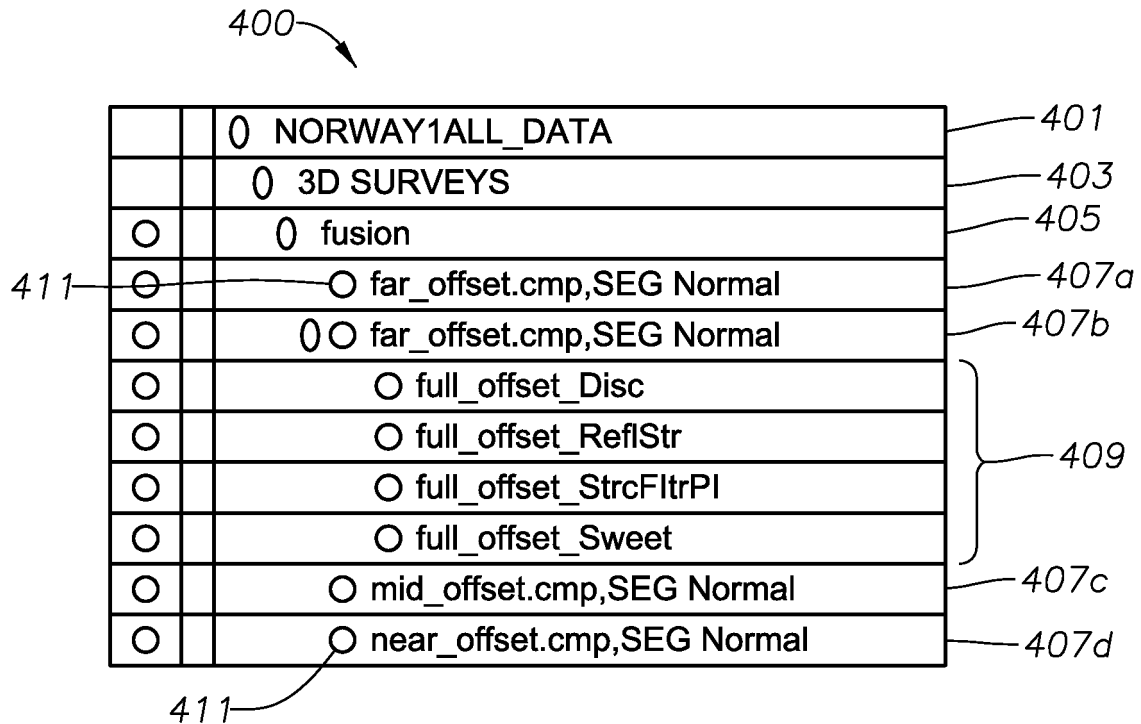


FIG. 4A

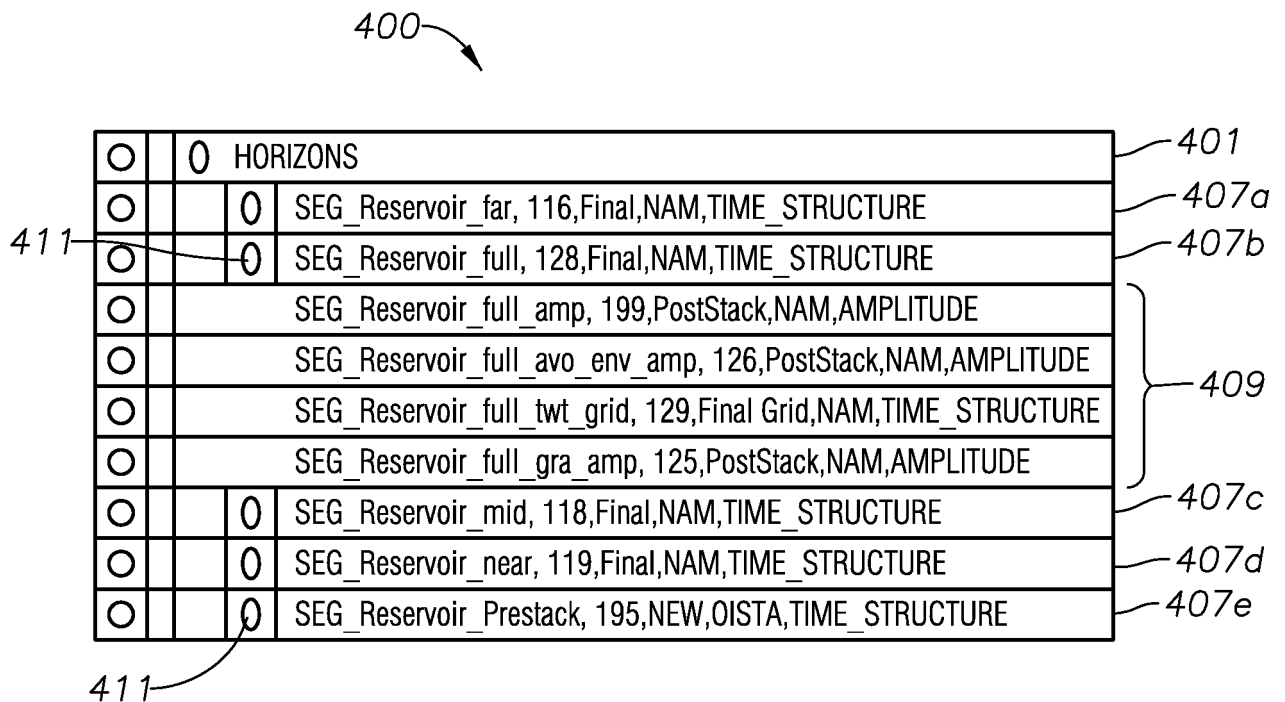


FIG. 4B