

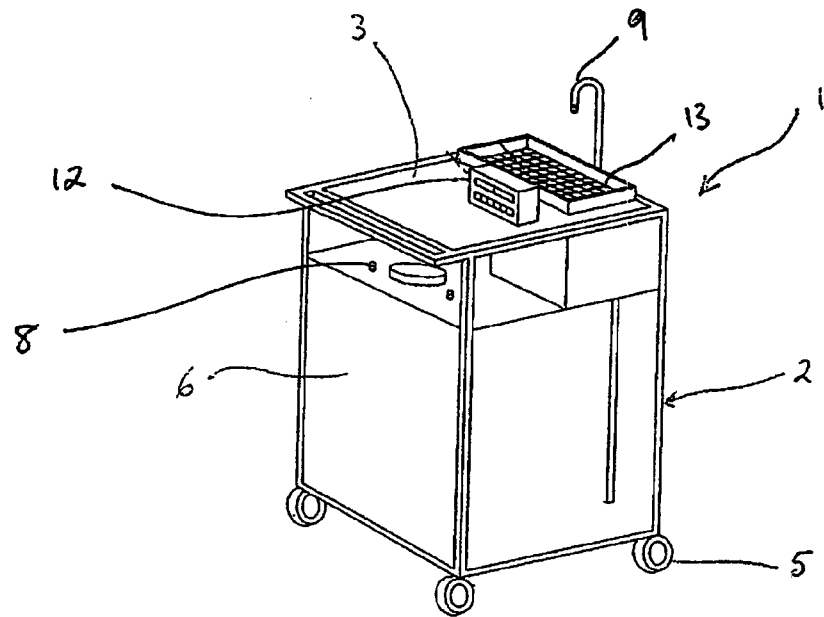


FIG 1

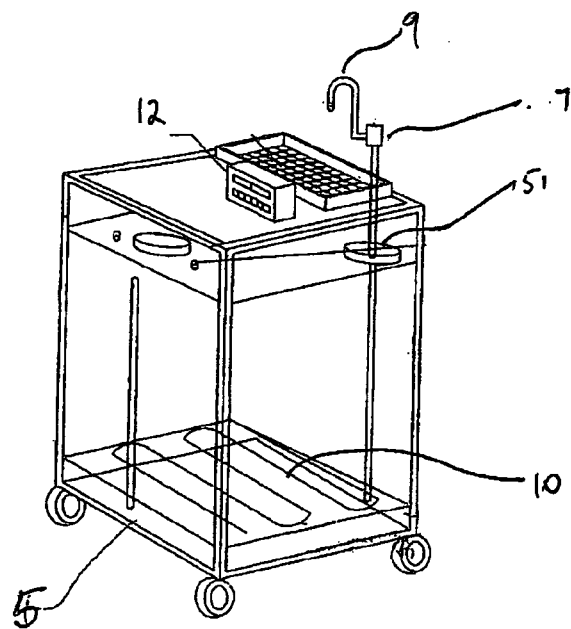


FIG 2

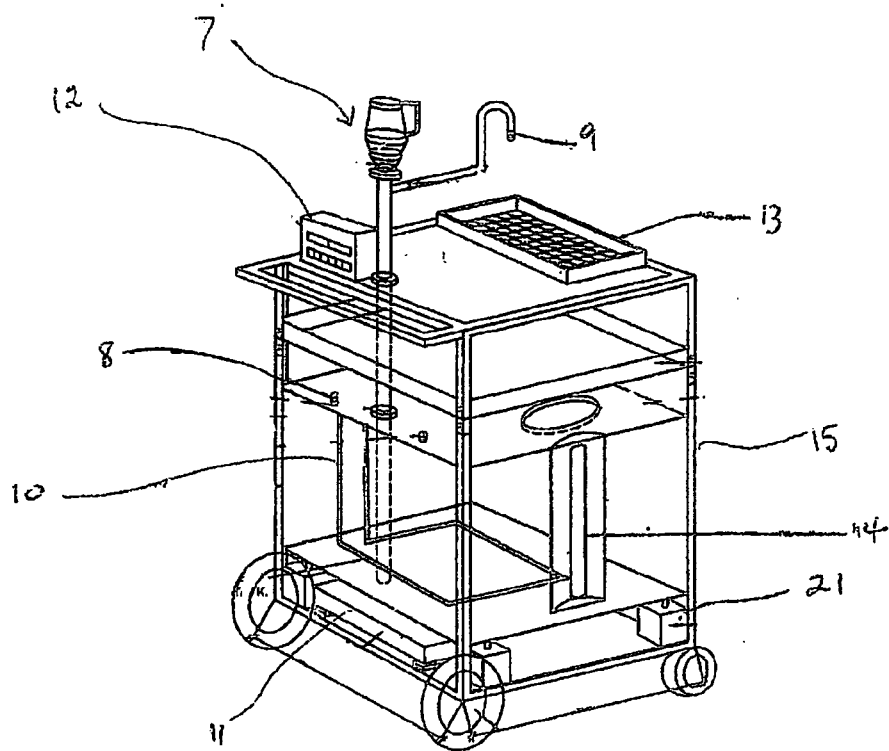


Fig 3

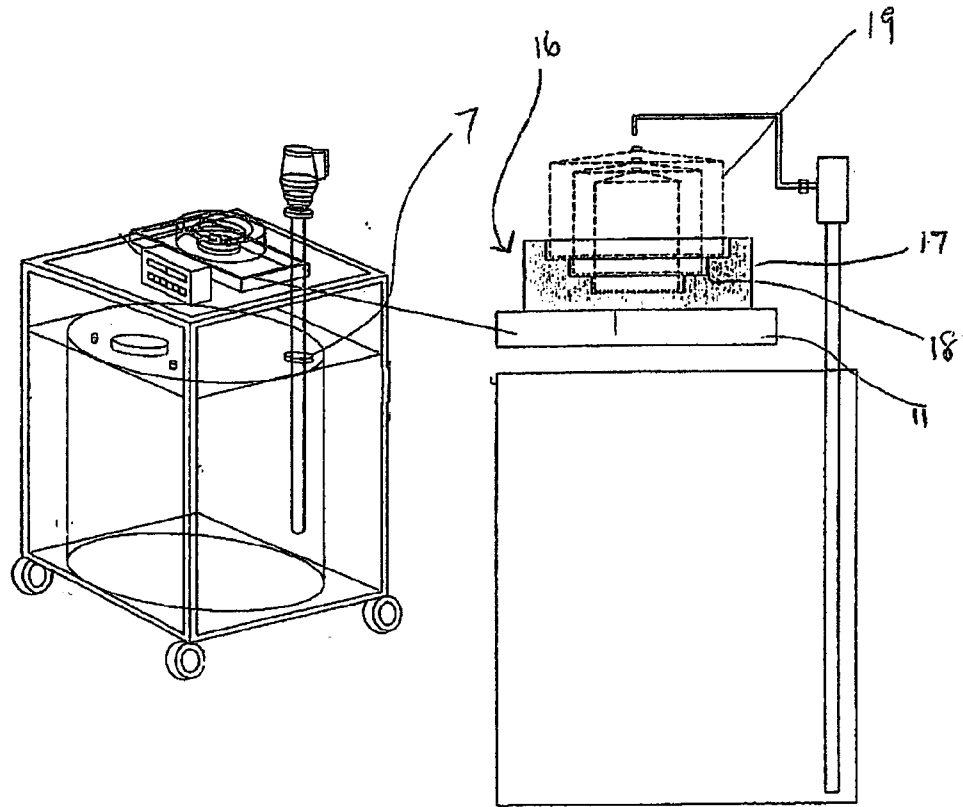


FIG 4 A

FIG 4

FIG 4B

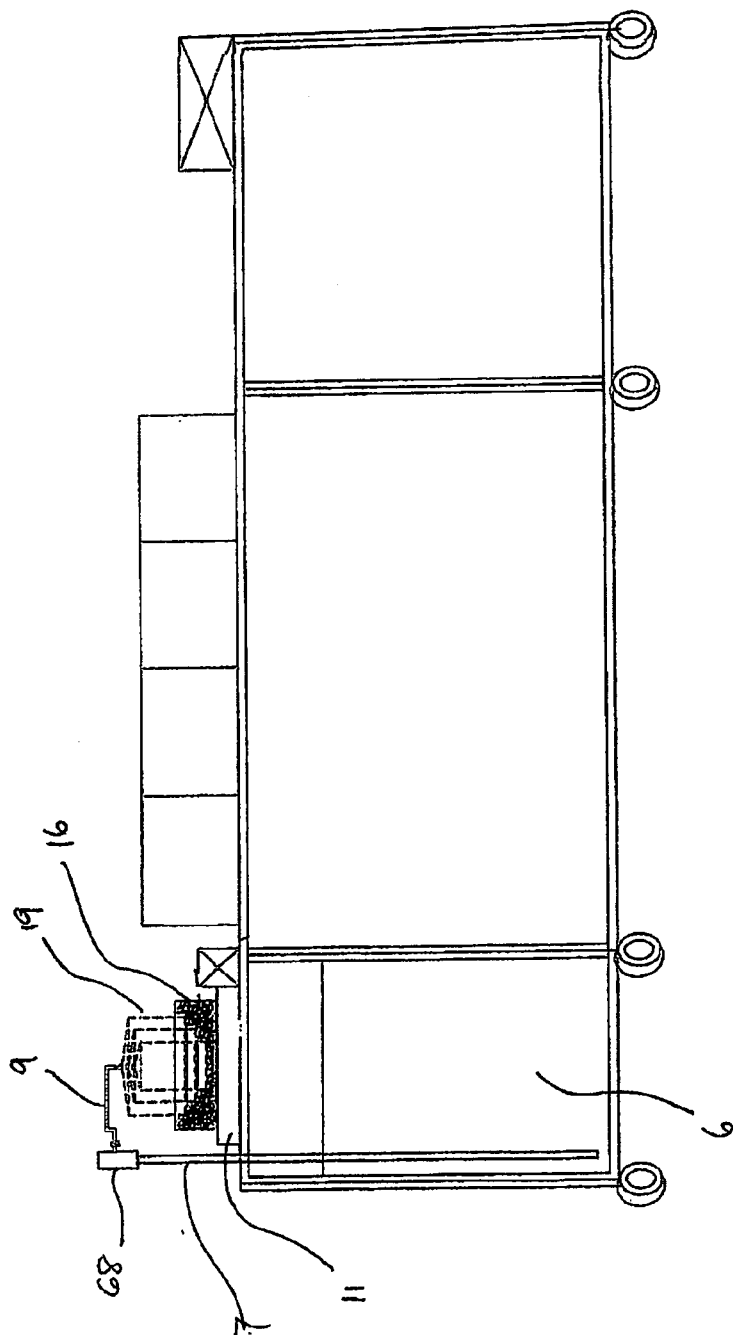


FIG 5

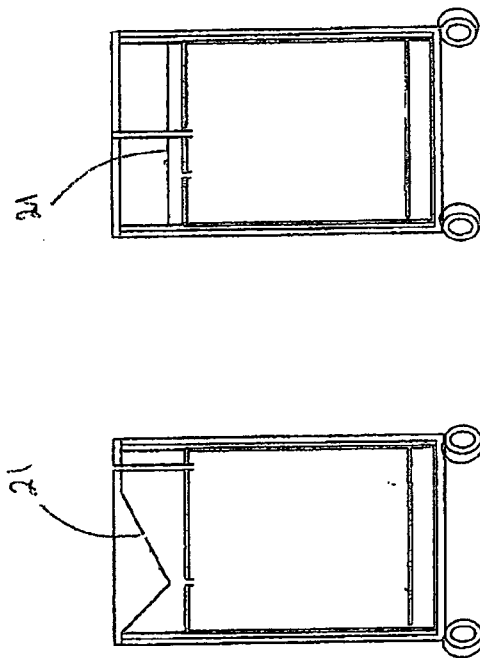


FIG 6B

FIG 6A






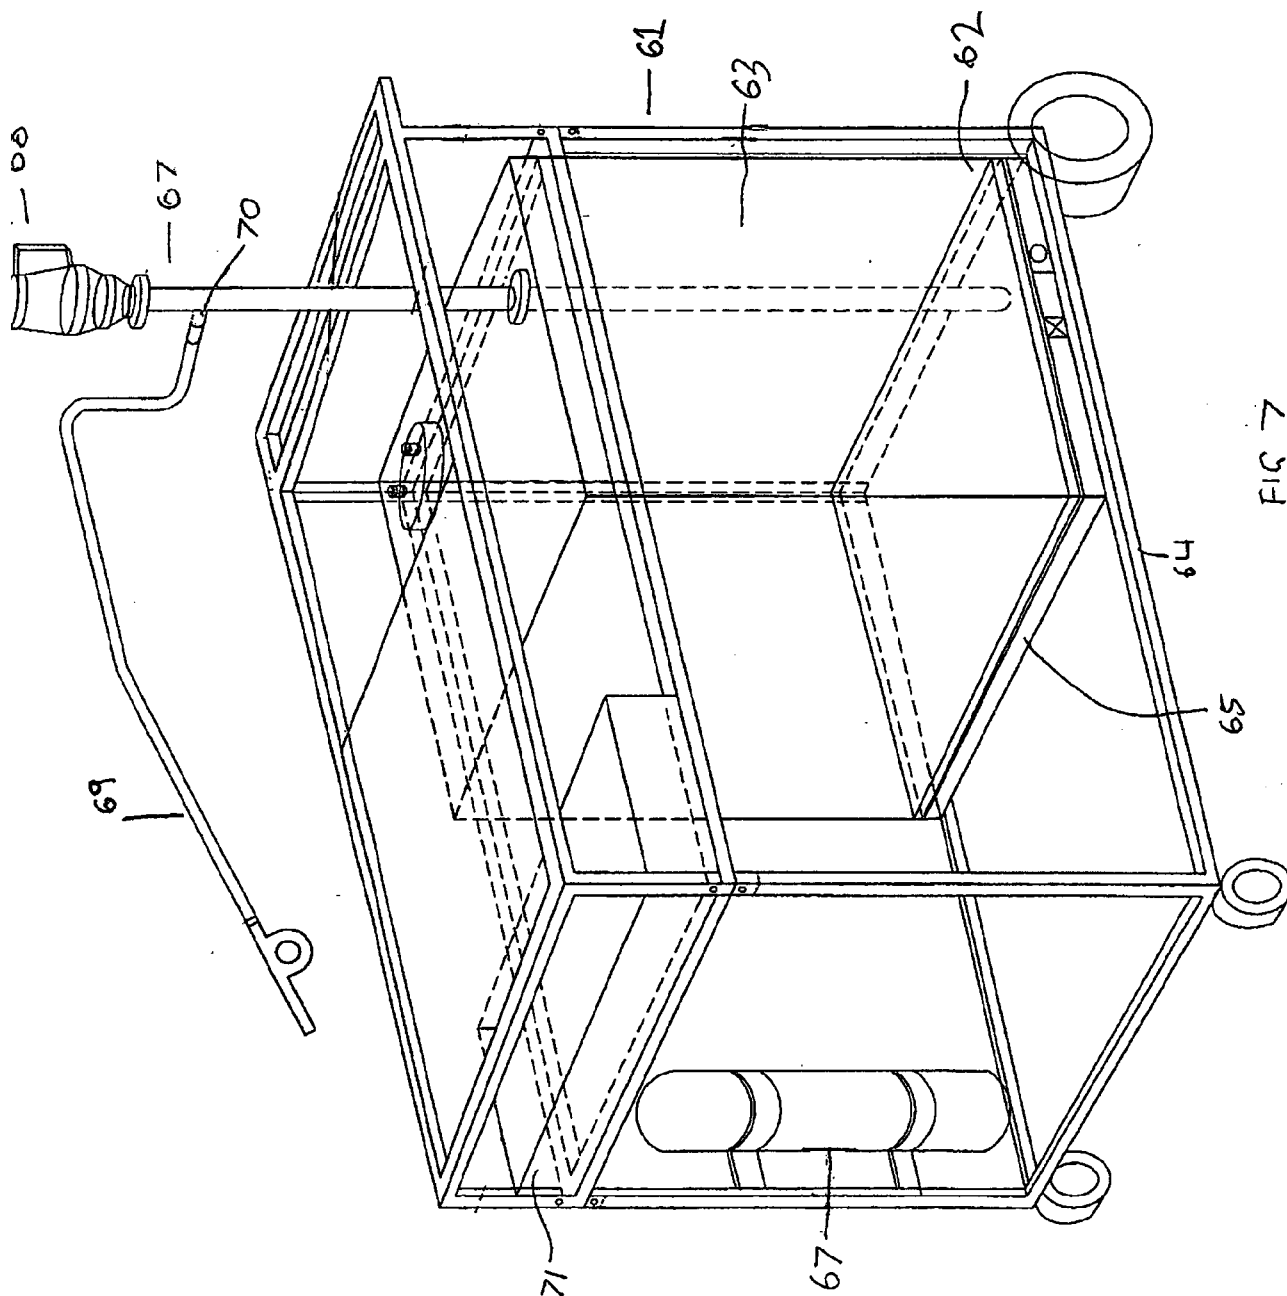




FIG 7

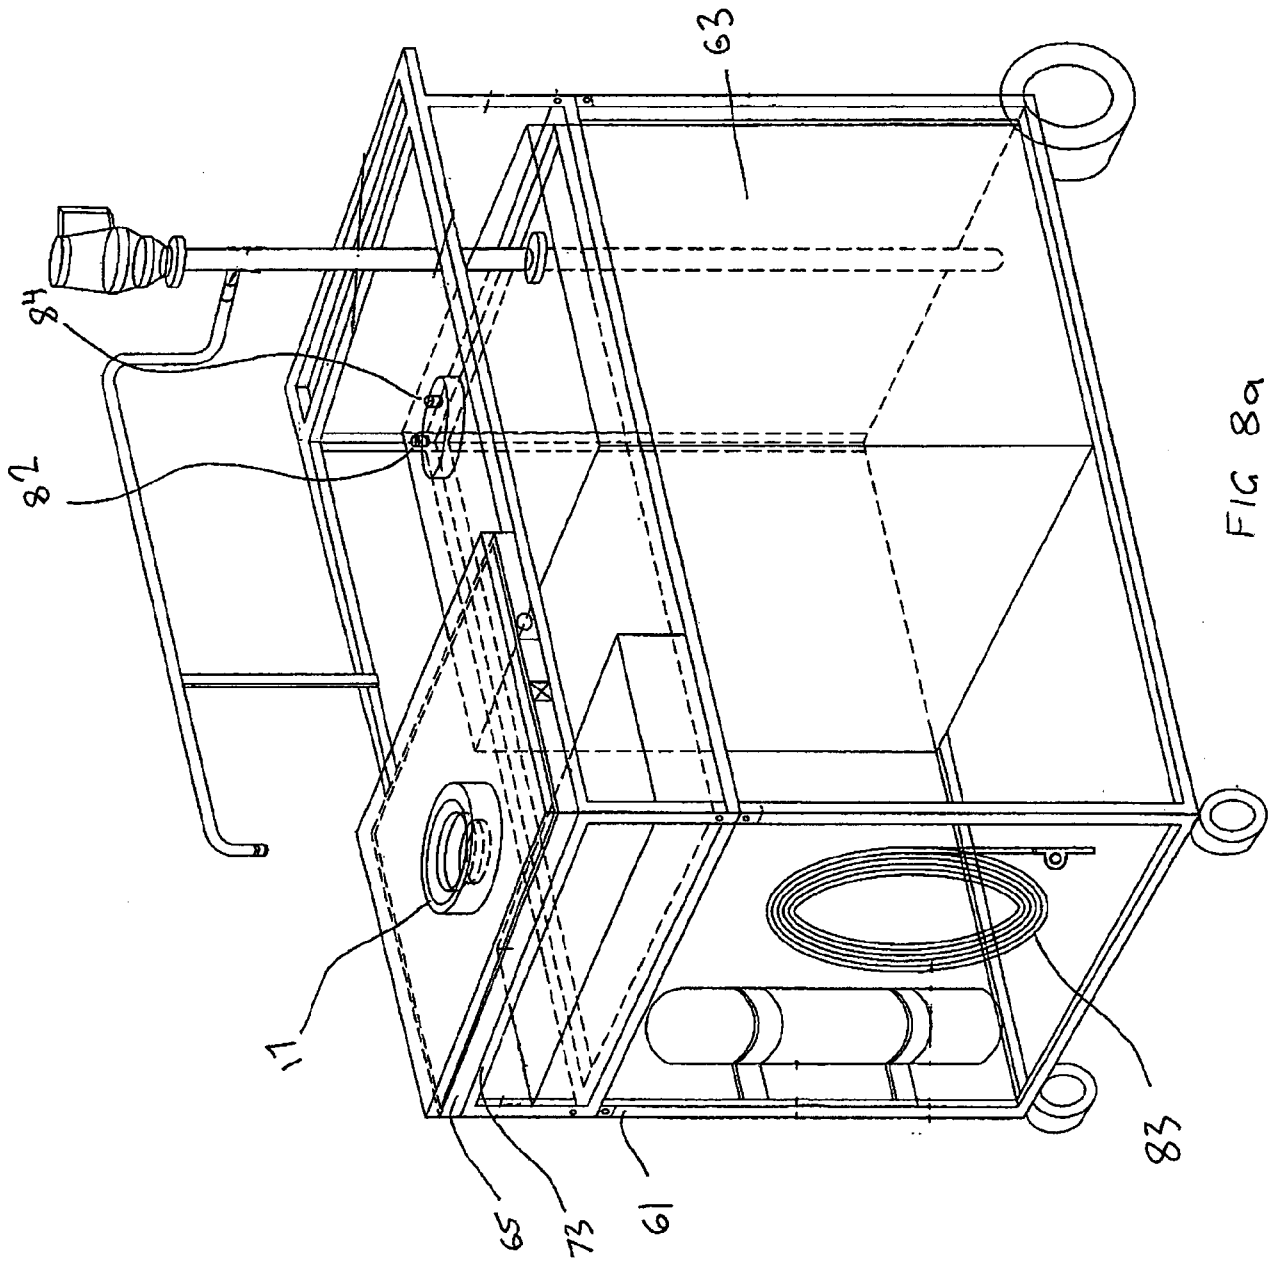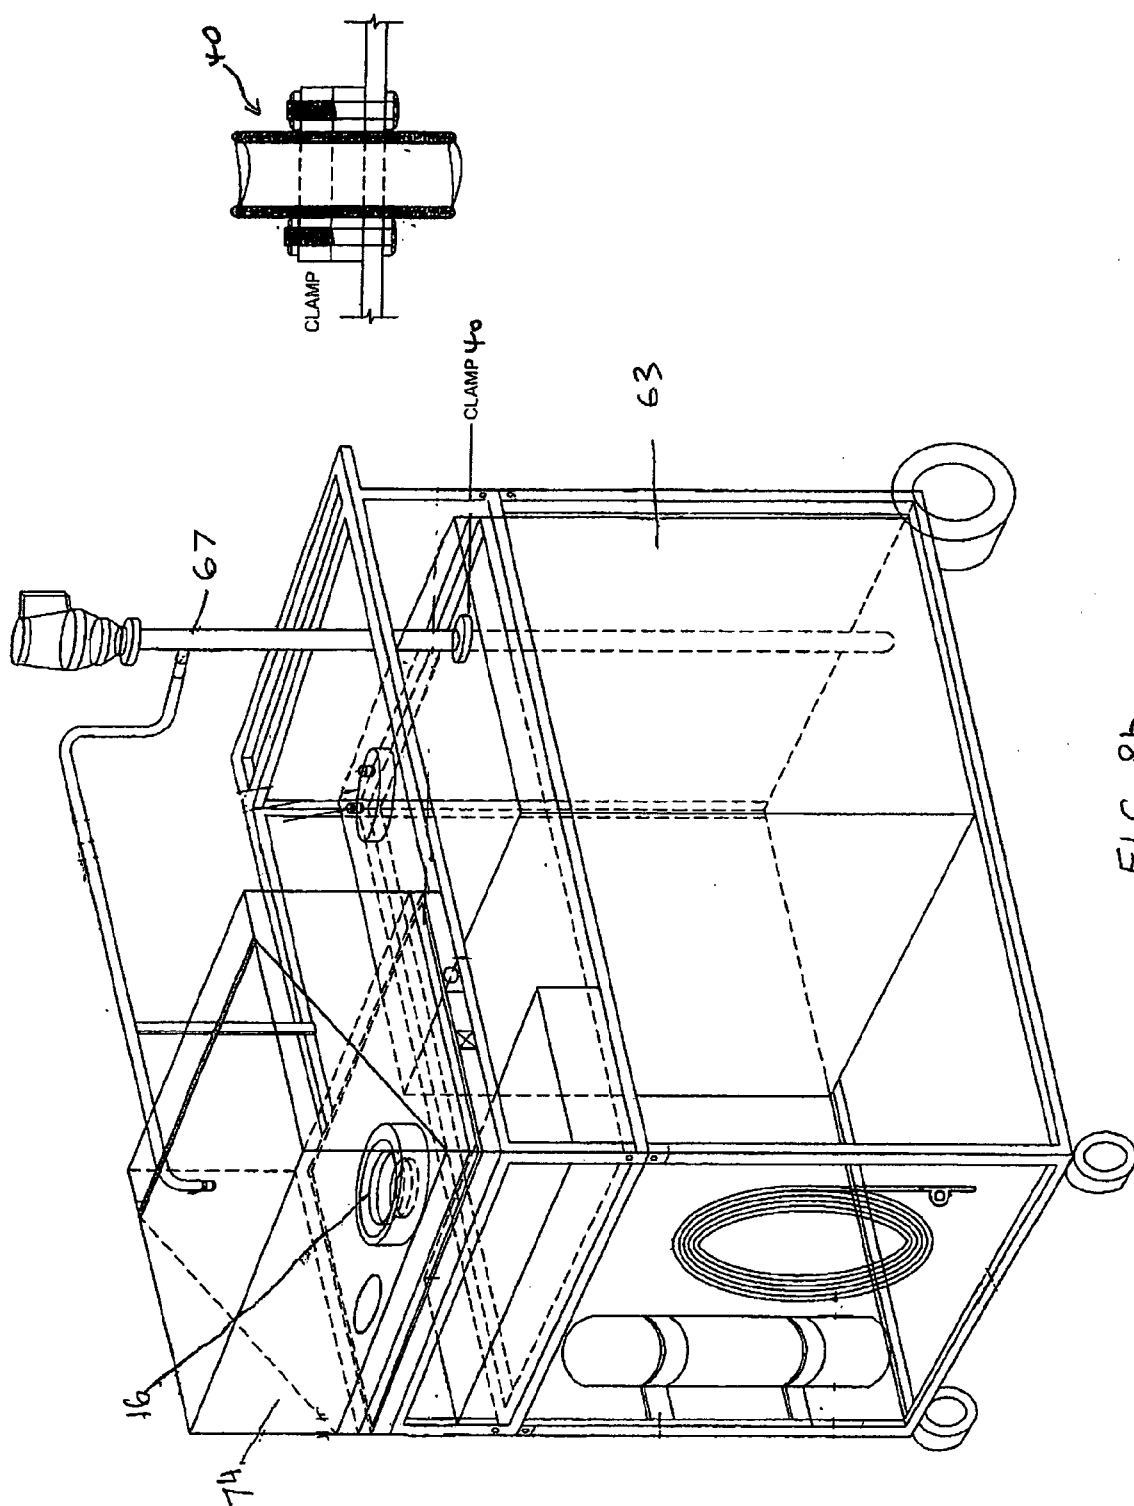

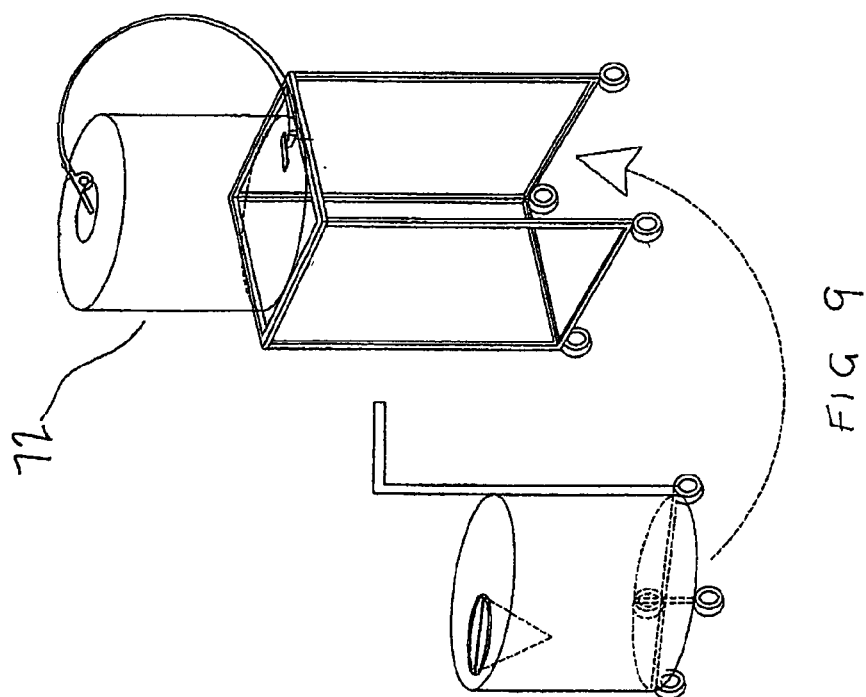

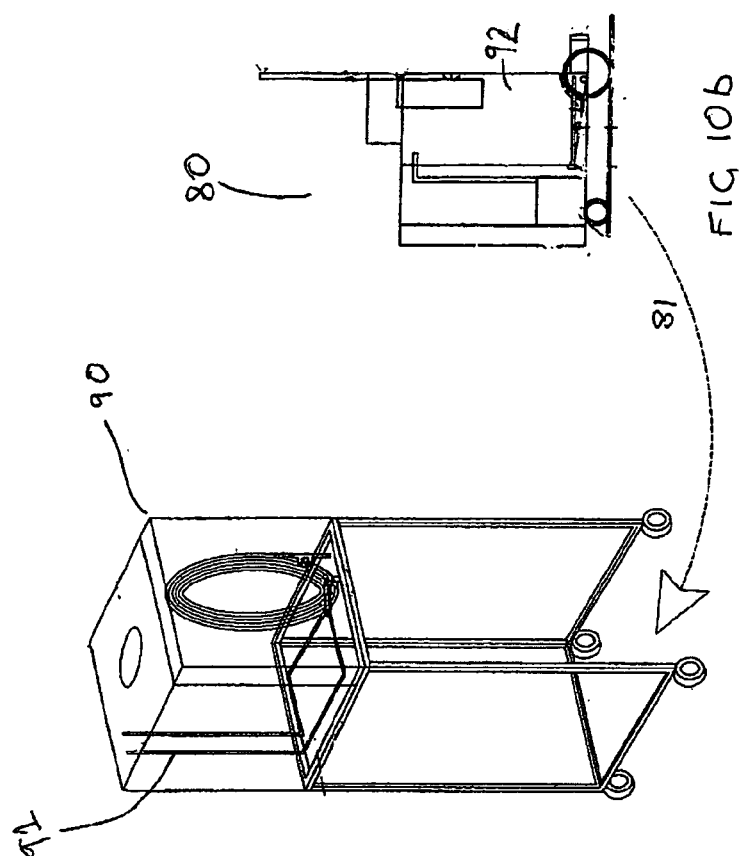

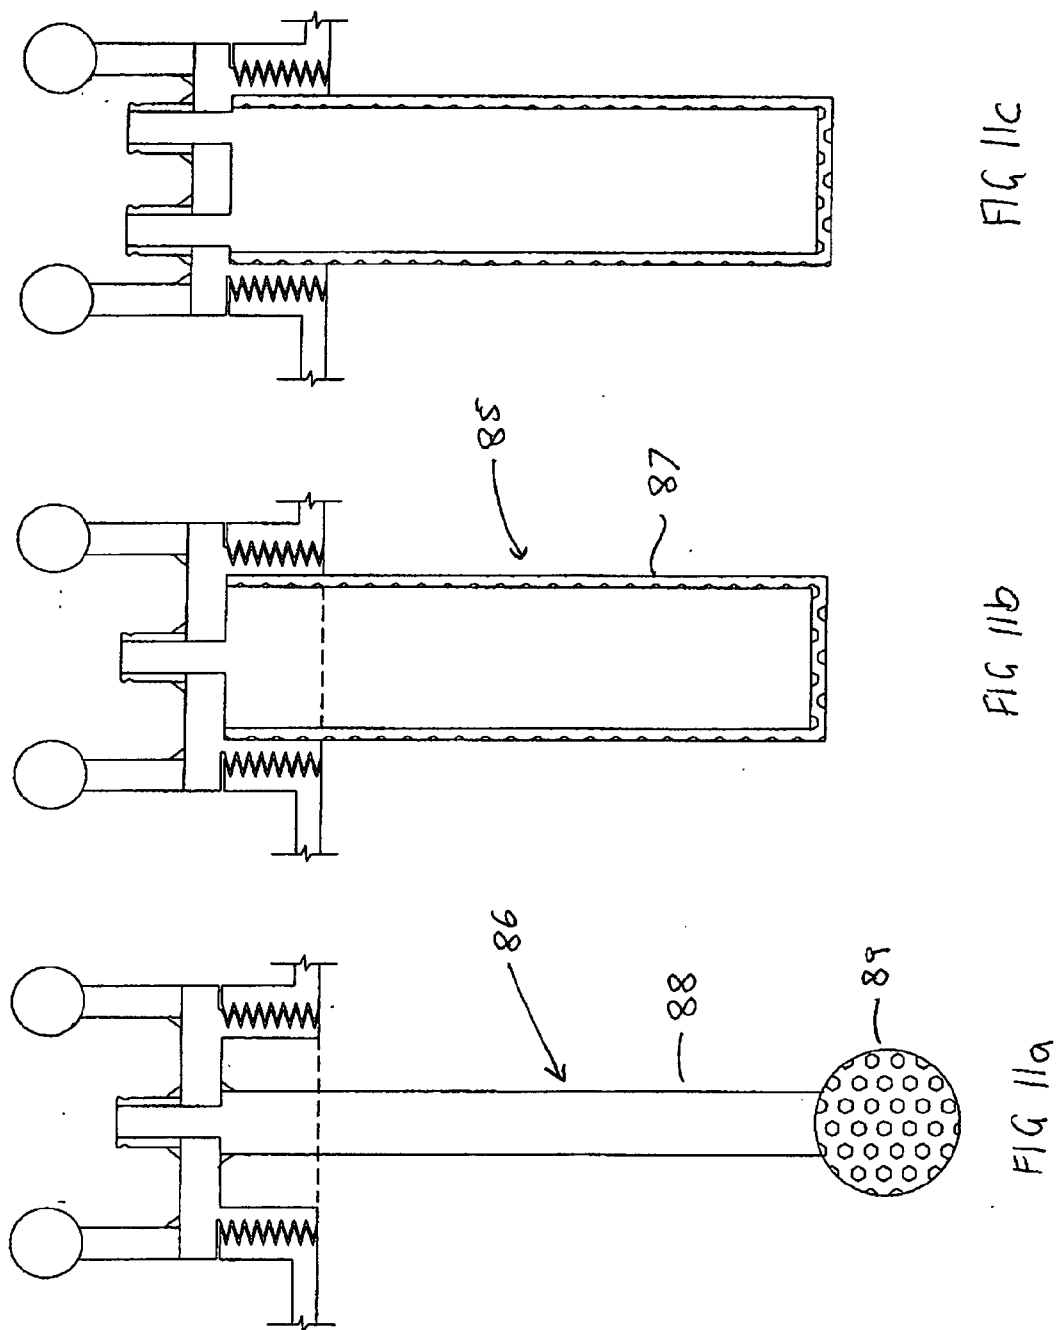

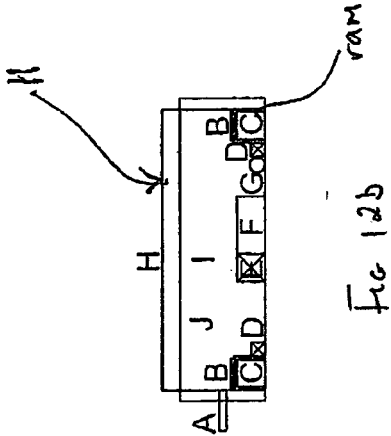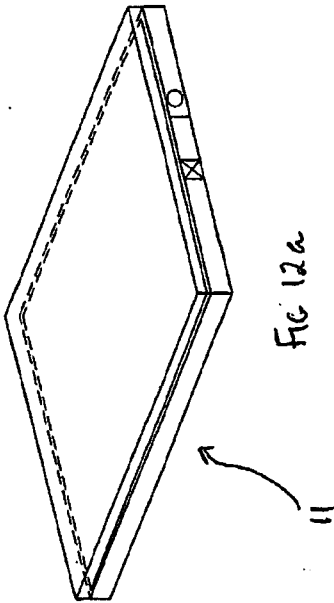

KEY

A

SPIRIT BUBBLE

B

ADJUSTMENT SCREW

C

AIR RAM (FITTED TO FRAME OF SCALE LOAD CELL)

D

LOCKING DEVICE

E

SWITCH

F

AIR MANIFOLD

G

AIR FITTING

H

SCALE PLATFORM

I

SCALE LOAD CELL

J

HOUSING

K

SCALE

L

AIR LINES TO AIR RAMS FROM MANIFOLD

