

FIG. 1

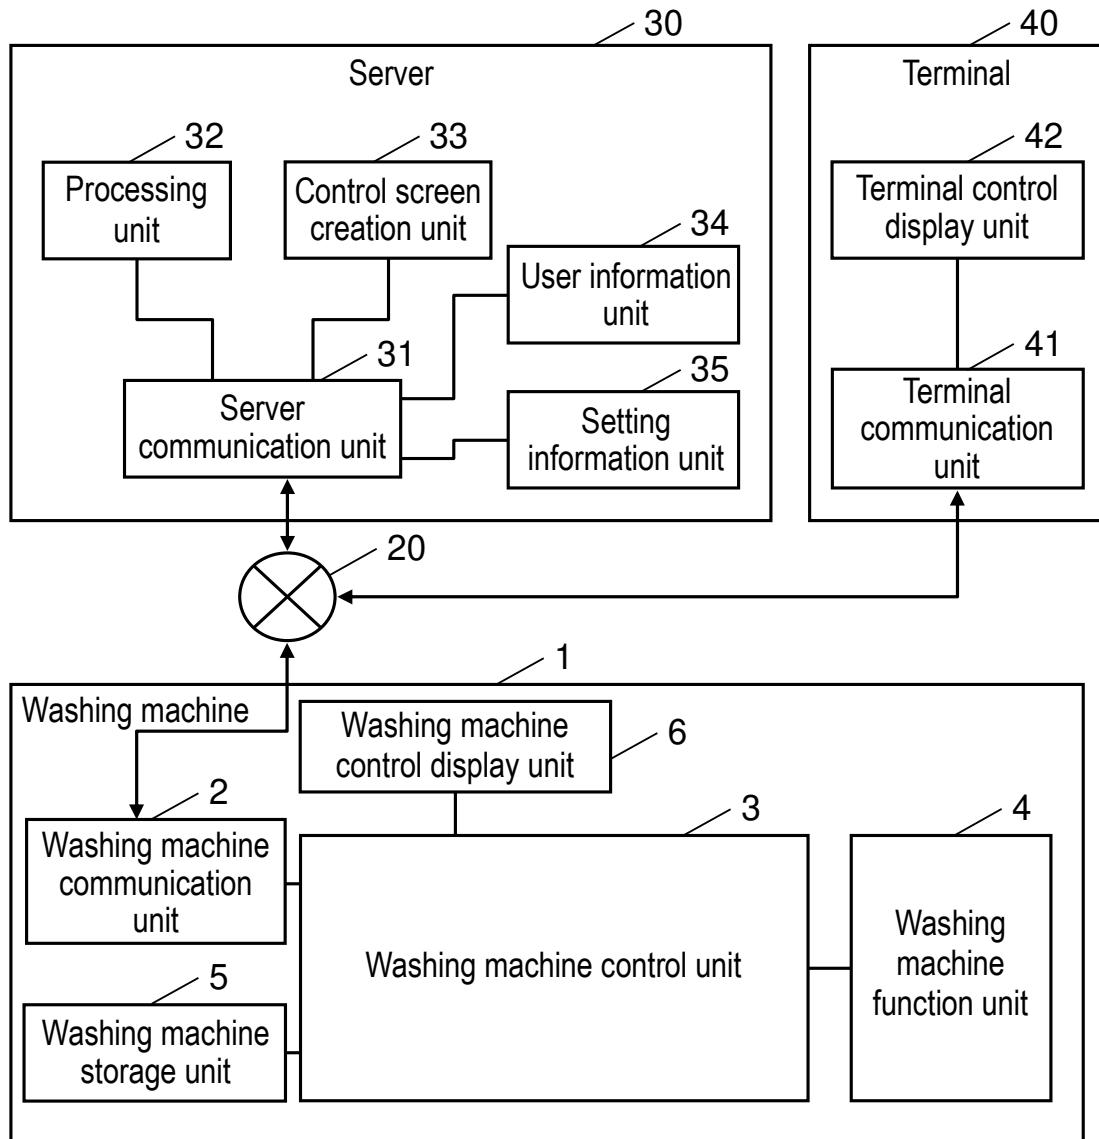 


FIG. 2

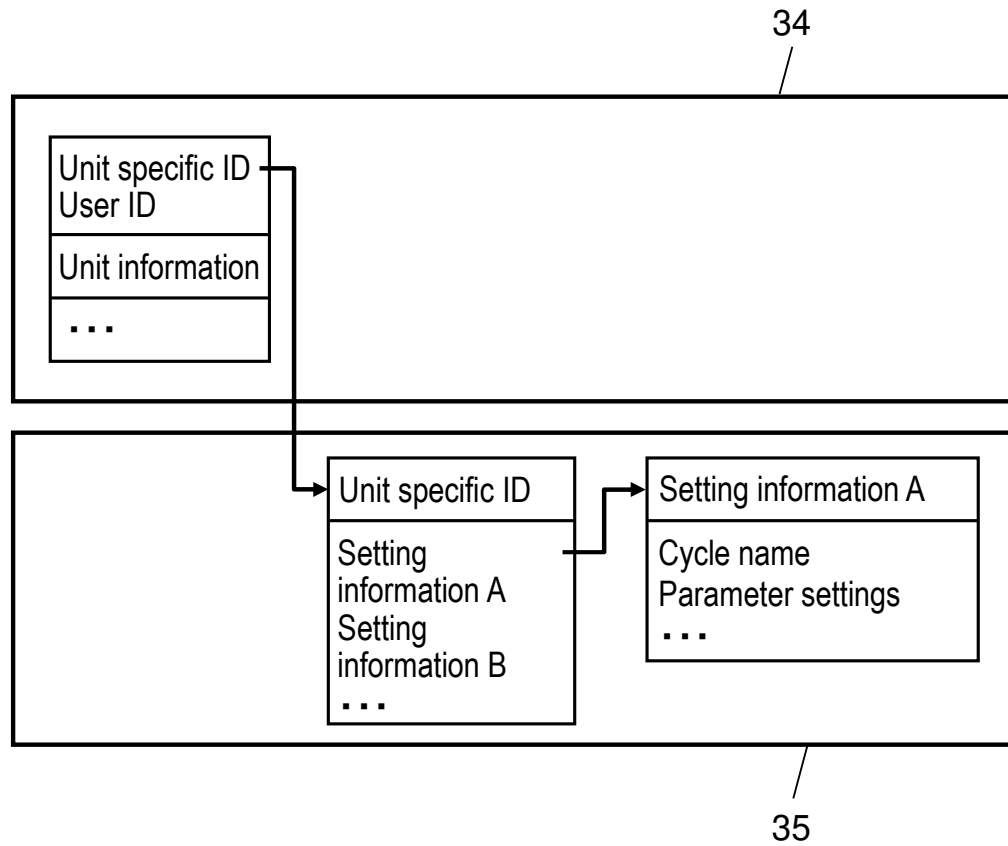 


FIG. 3

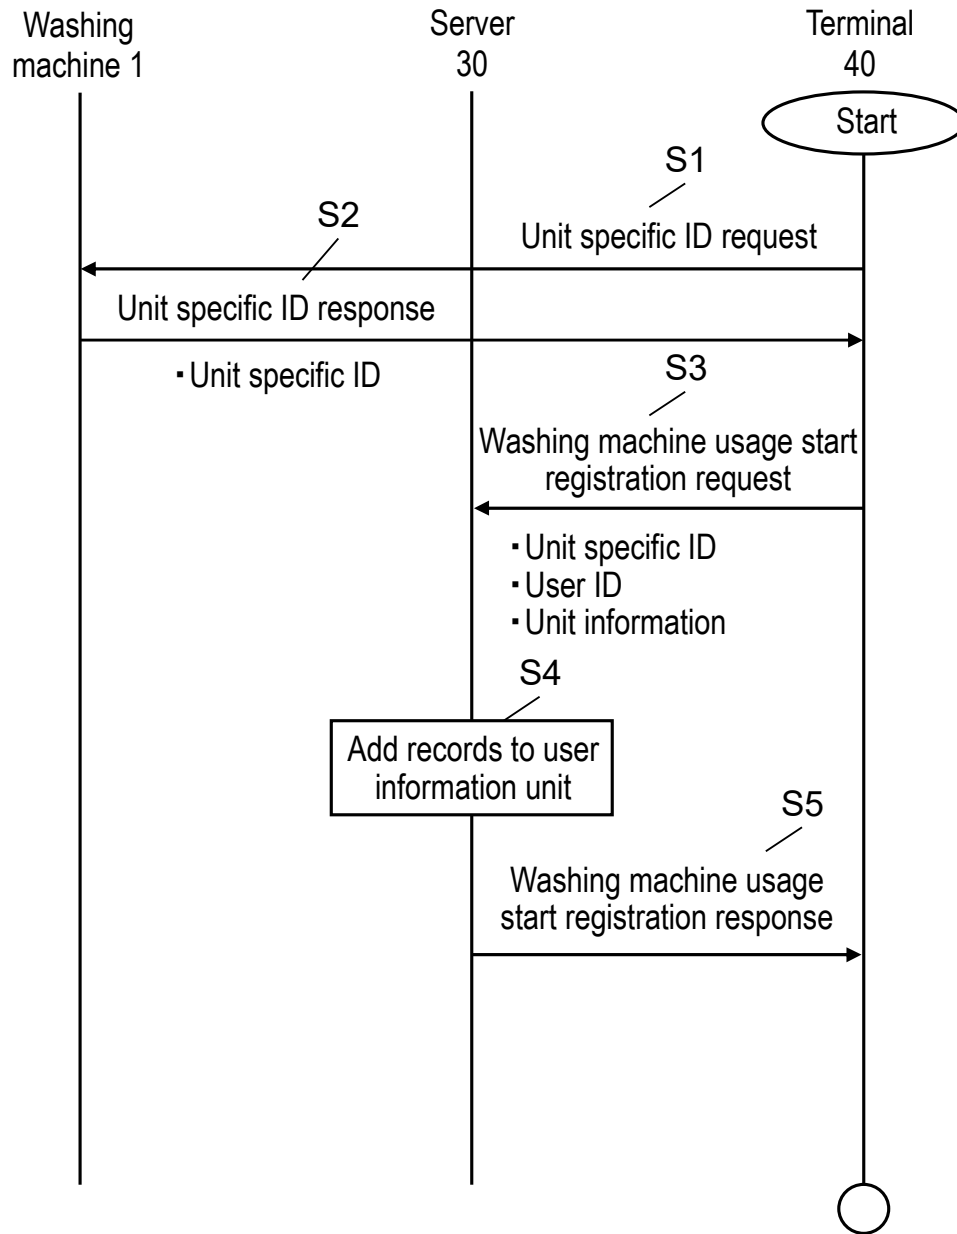 


FIG. 4

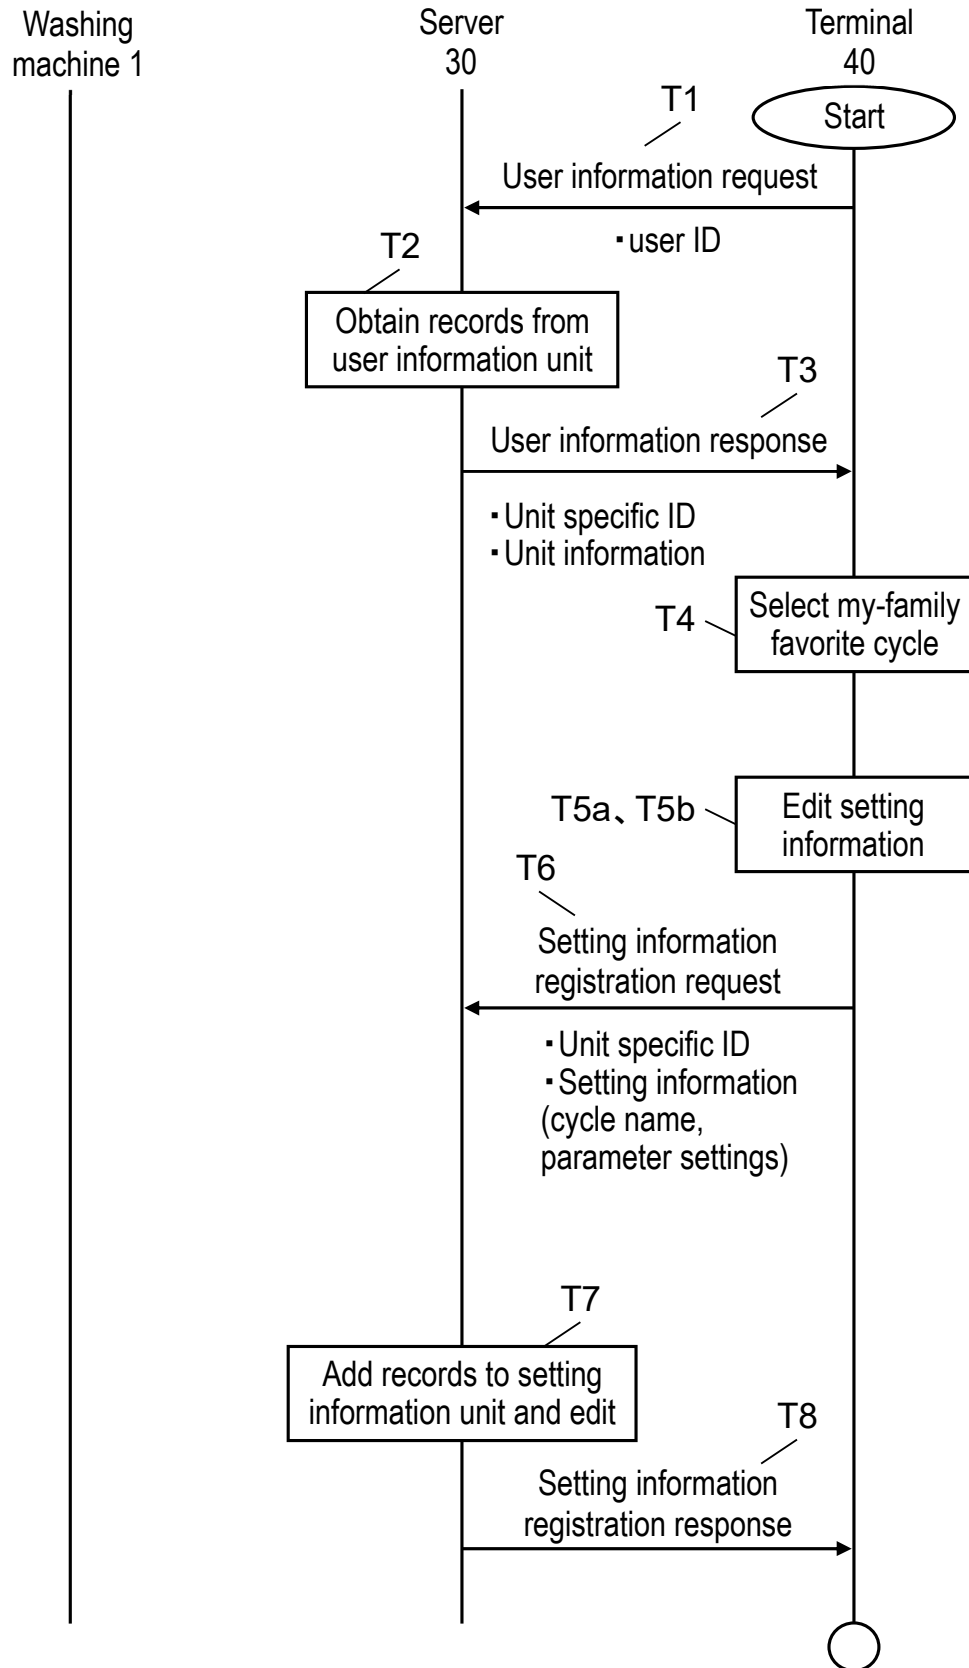 


FIG. 5

Cycle selection screen 101

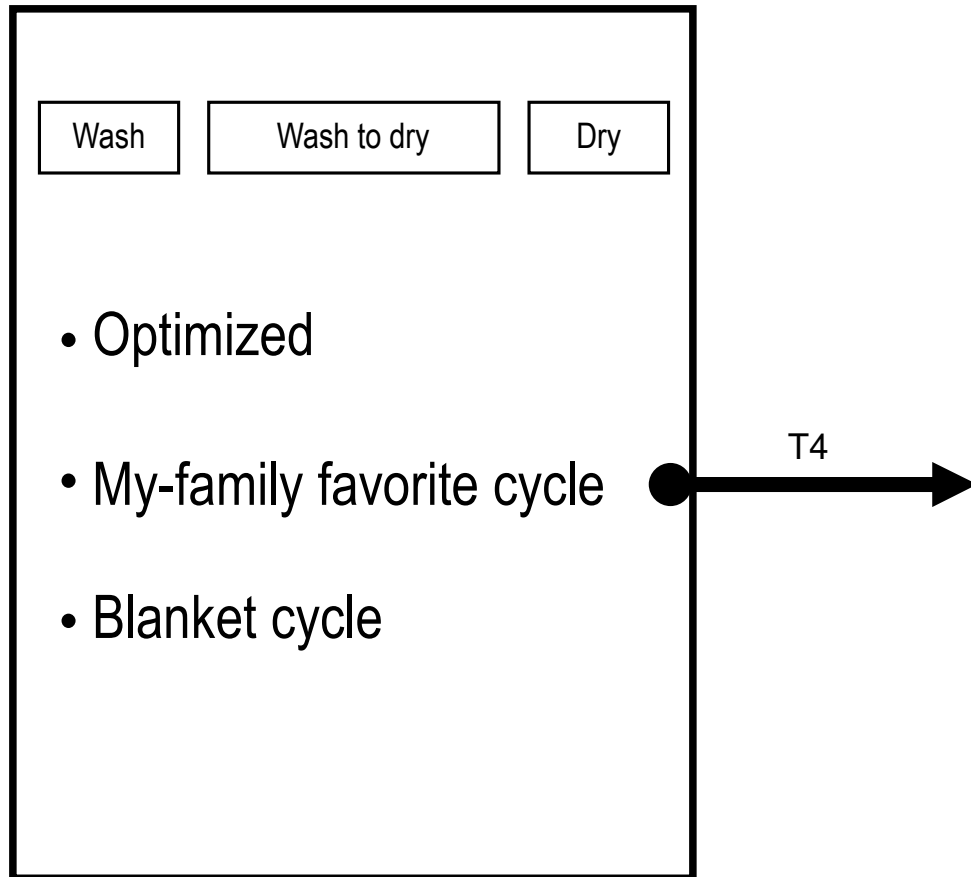 


FIG. 6

My-family favorite cycle selection screen 102

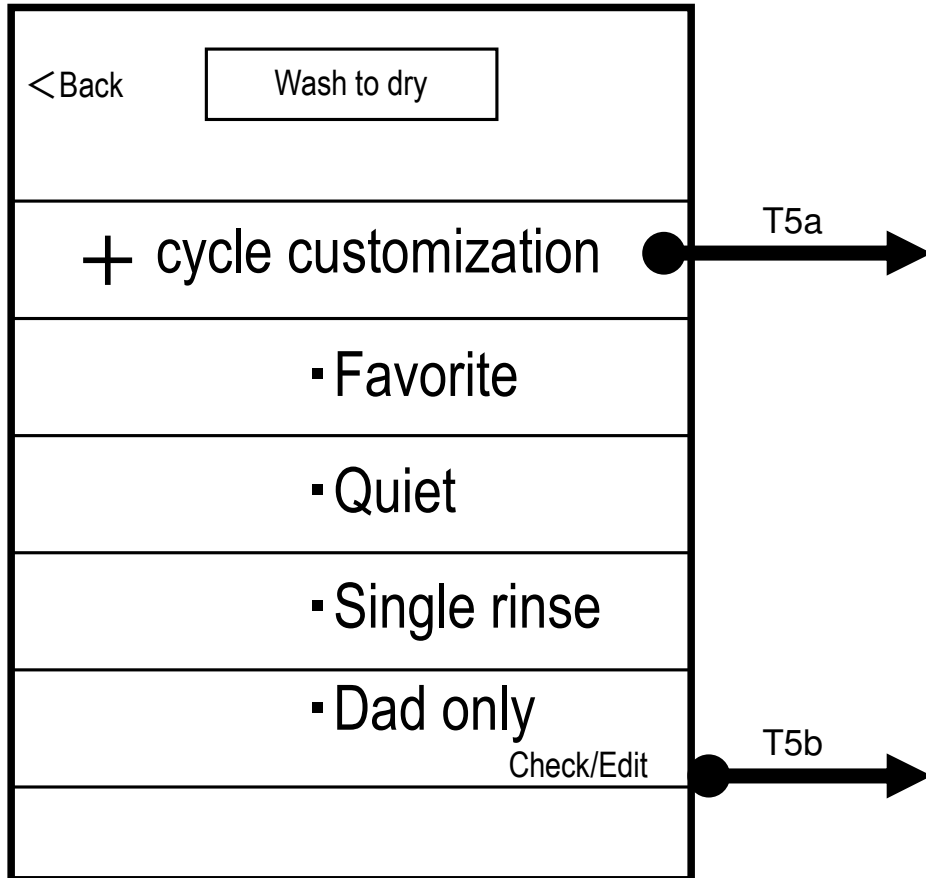 


FIG. 7

Setting information input screen 103A

 
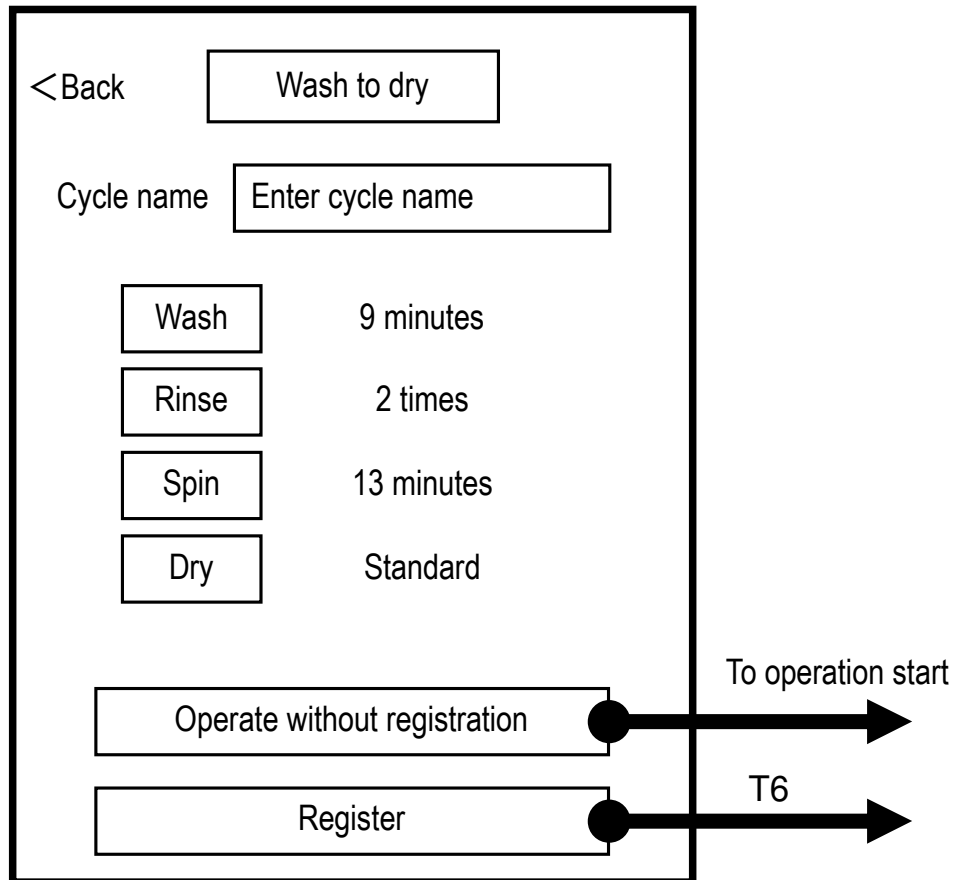 


FIG. 8

Setting information editing screen 103B

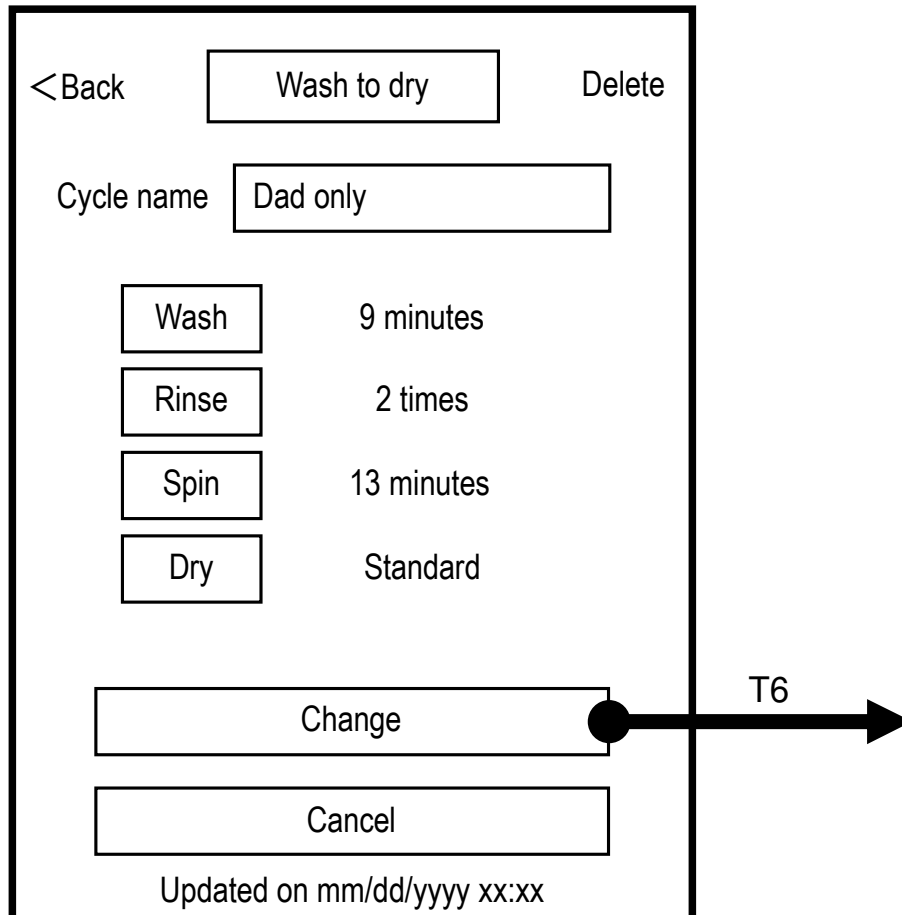

The diagram illustrates the 'Setting information editing screen 103B'. It features a header bar with three elements: a '<Back' button on the left, a 'Wash to dry' button in the center, and a 'Delete' button on the right. Below the header, there is a 'Cycle name' label followed by a text input field containing 'Dad only'. Underneath this, four settings are listed vertically, each with a button on the left and a value on the right: 'Wash' (9 minutes), 'Rinse' (2 times), 'Spin' (13 minutes), and 'Dry' (Standard). At the bottom of the screen, there are two large buttons: 'Change' and 'Cancel'. A thick black arrow points from the right side of the 'Change' button, passing through a black circle, and is labeled 'T6'.

<Back Wash to dry Delete

Cycle name Dad only

Wash	9 minutes
Rinse	2 times
Spin	13 minutes
Dry	Standard

Change T6 →

Cancel

Updated on mm/dd/yyyy xx:xx

FIG. 9

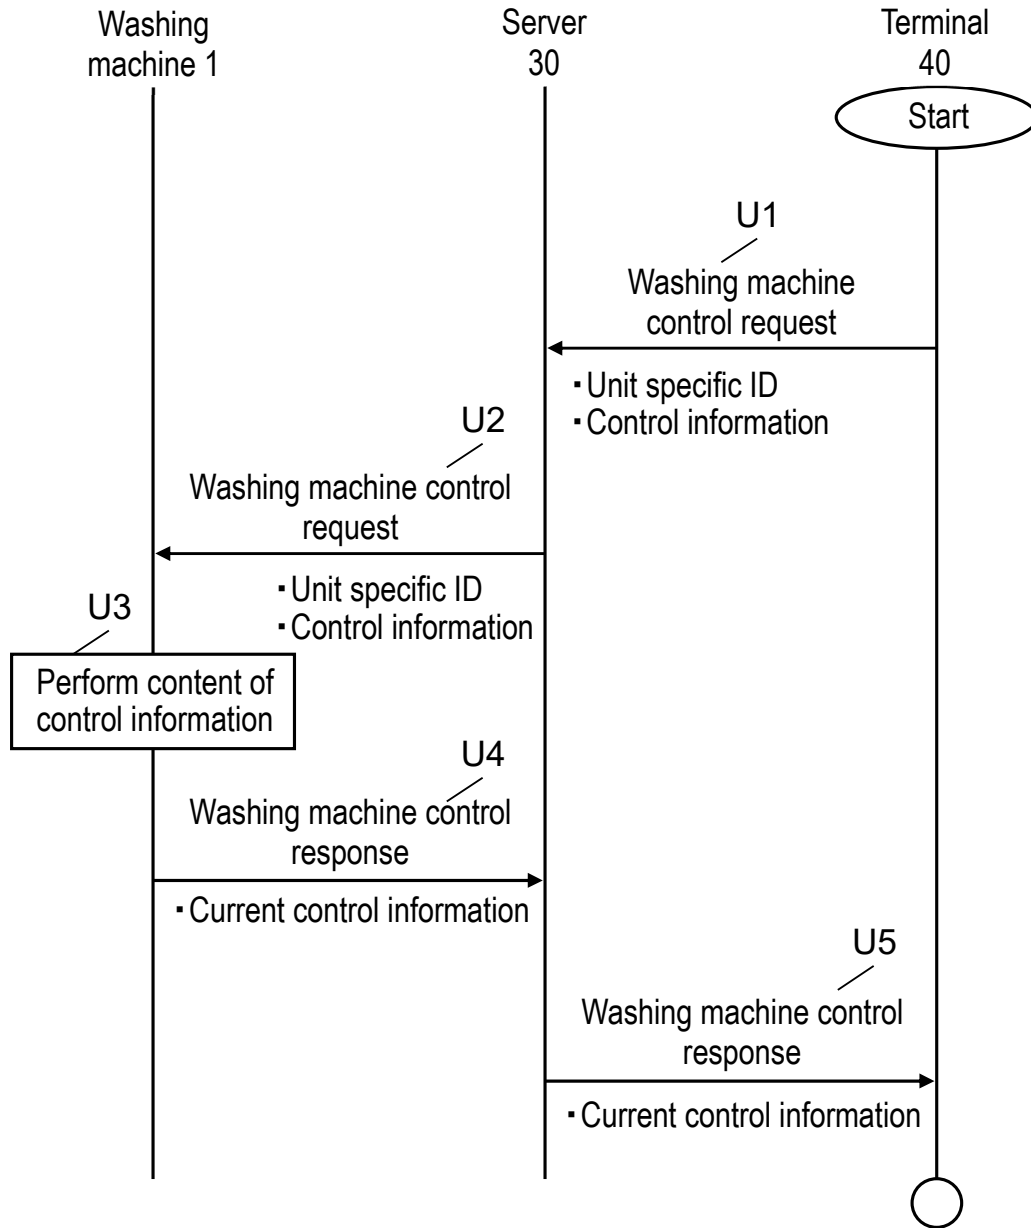 


FIG. 10

Operation start screen 104A

 
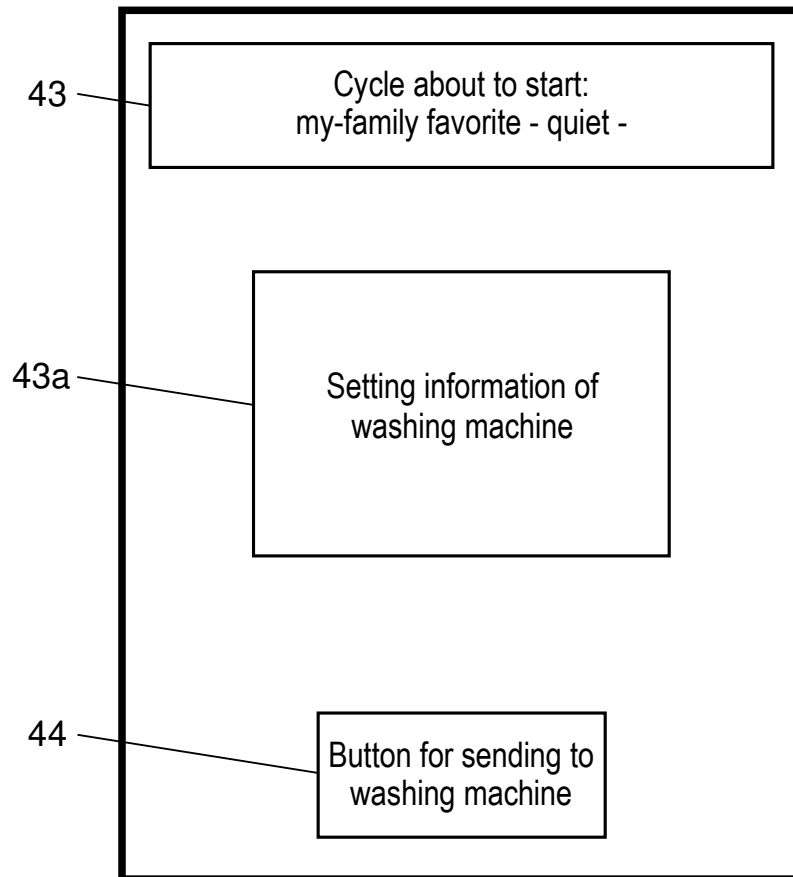 


FIG. 11

Washing machine operation display screen 201A

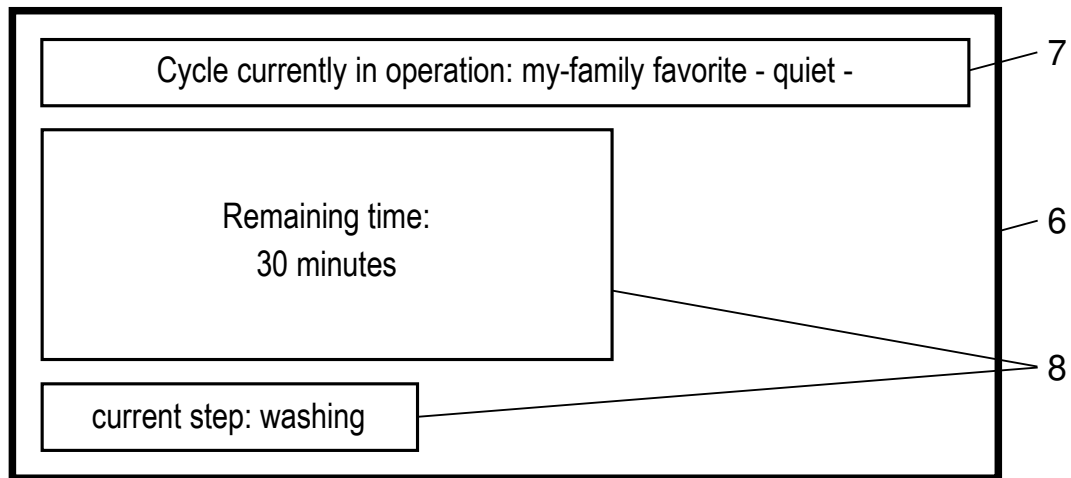

12/20
FIG. 12

Terminal operation display screen 105A

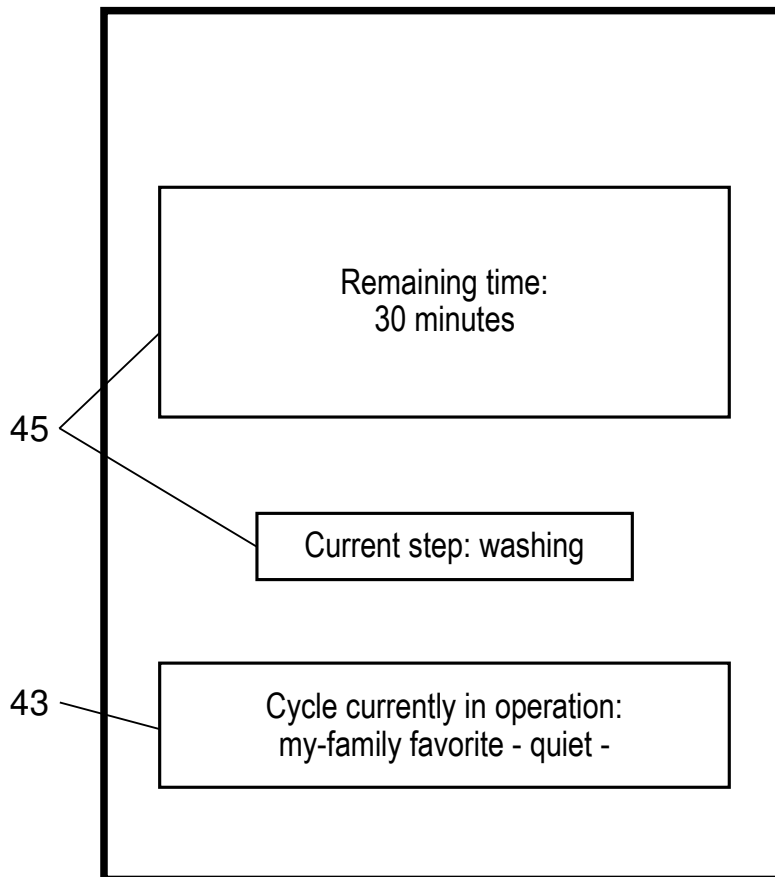 


FIG. 13

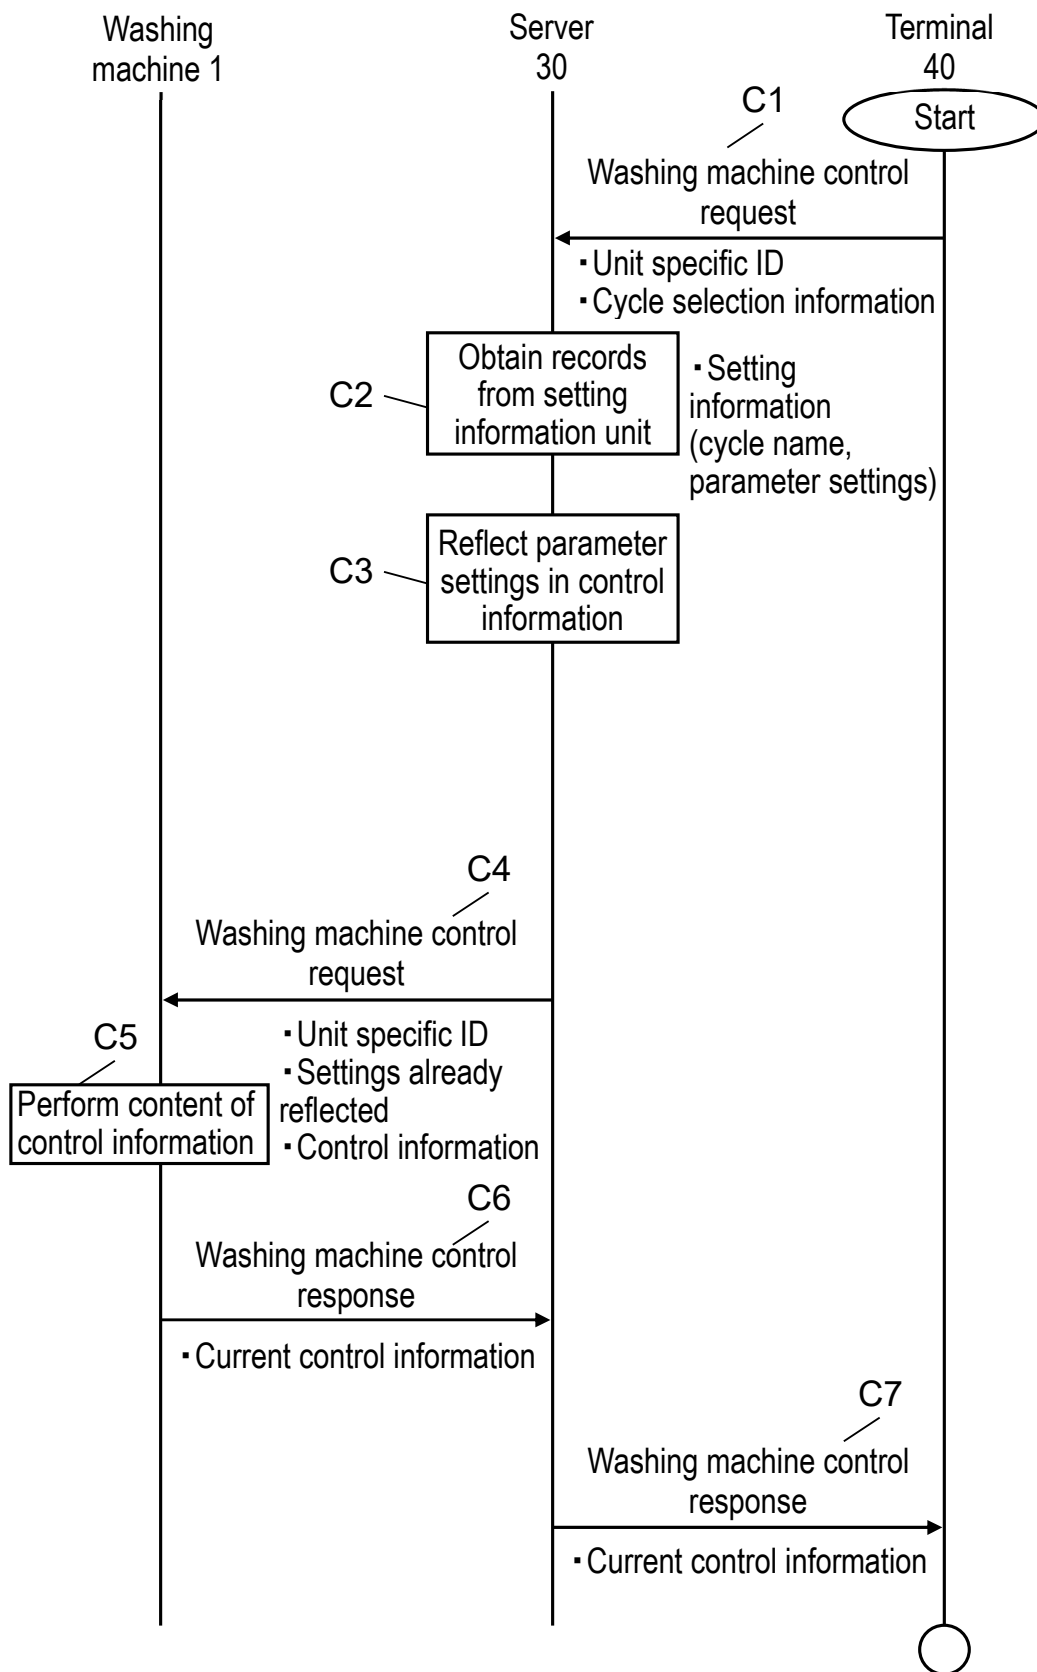 


FIG. 14

Operation start screen 104B

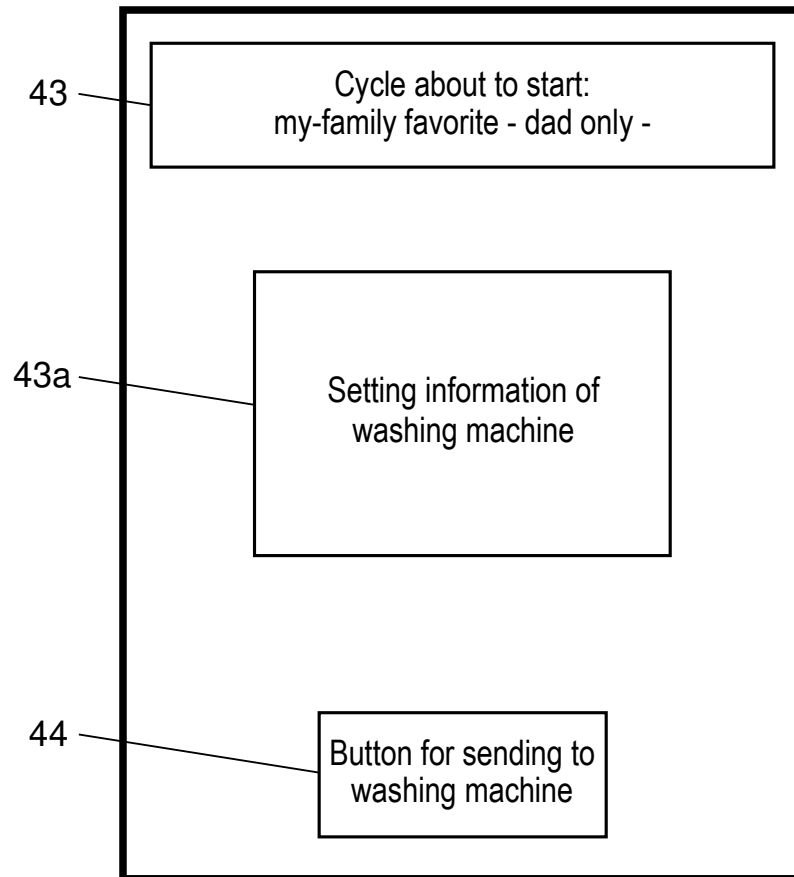 


FIG. 15

Washing machine operation display screen 201B

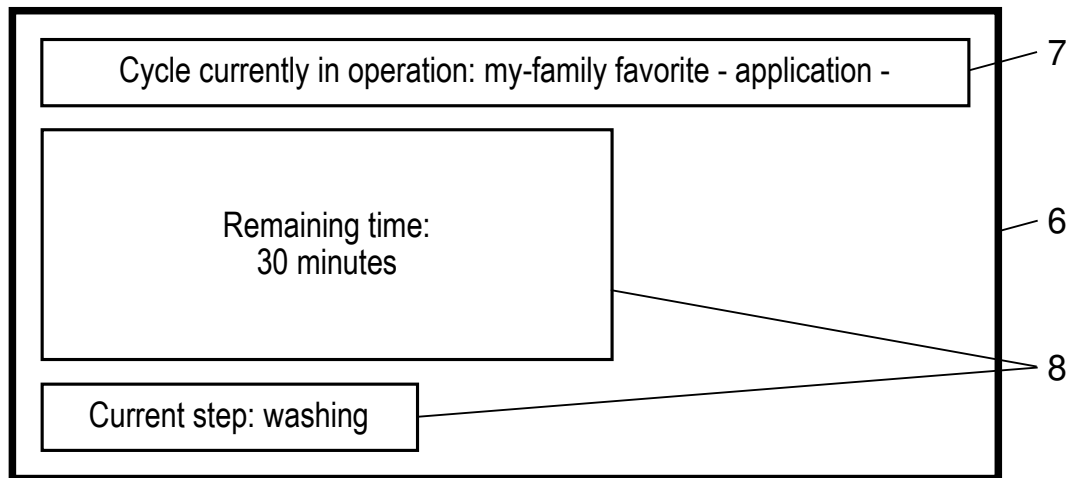 


FIG. 16

Terminal operation display screen 105B

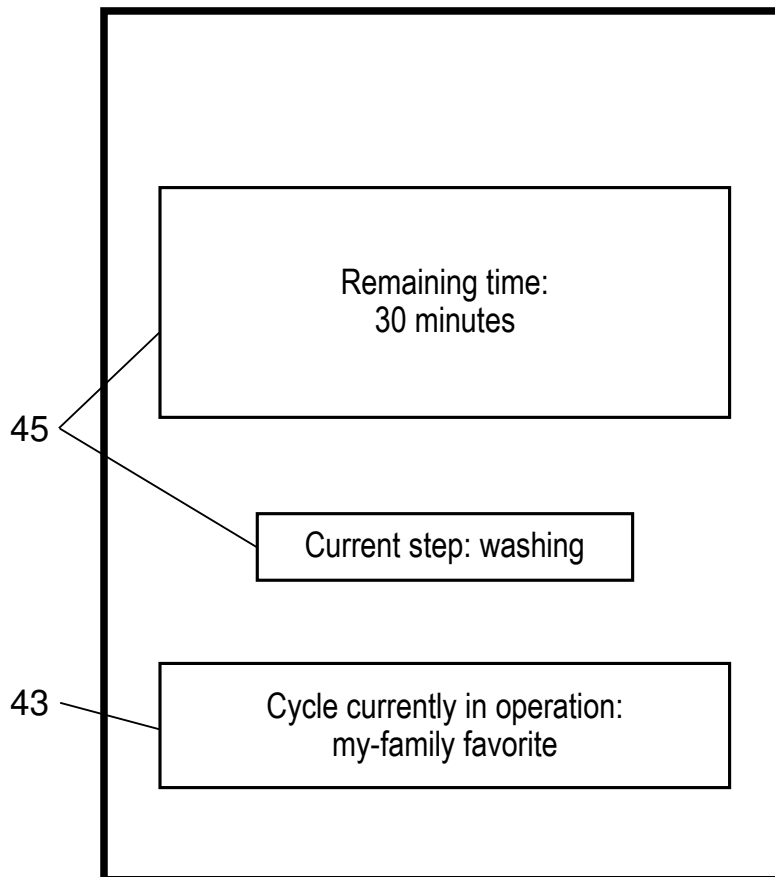 


FIG. 17

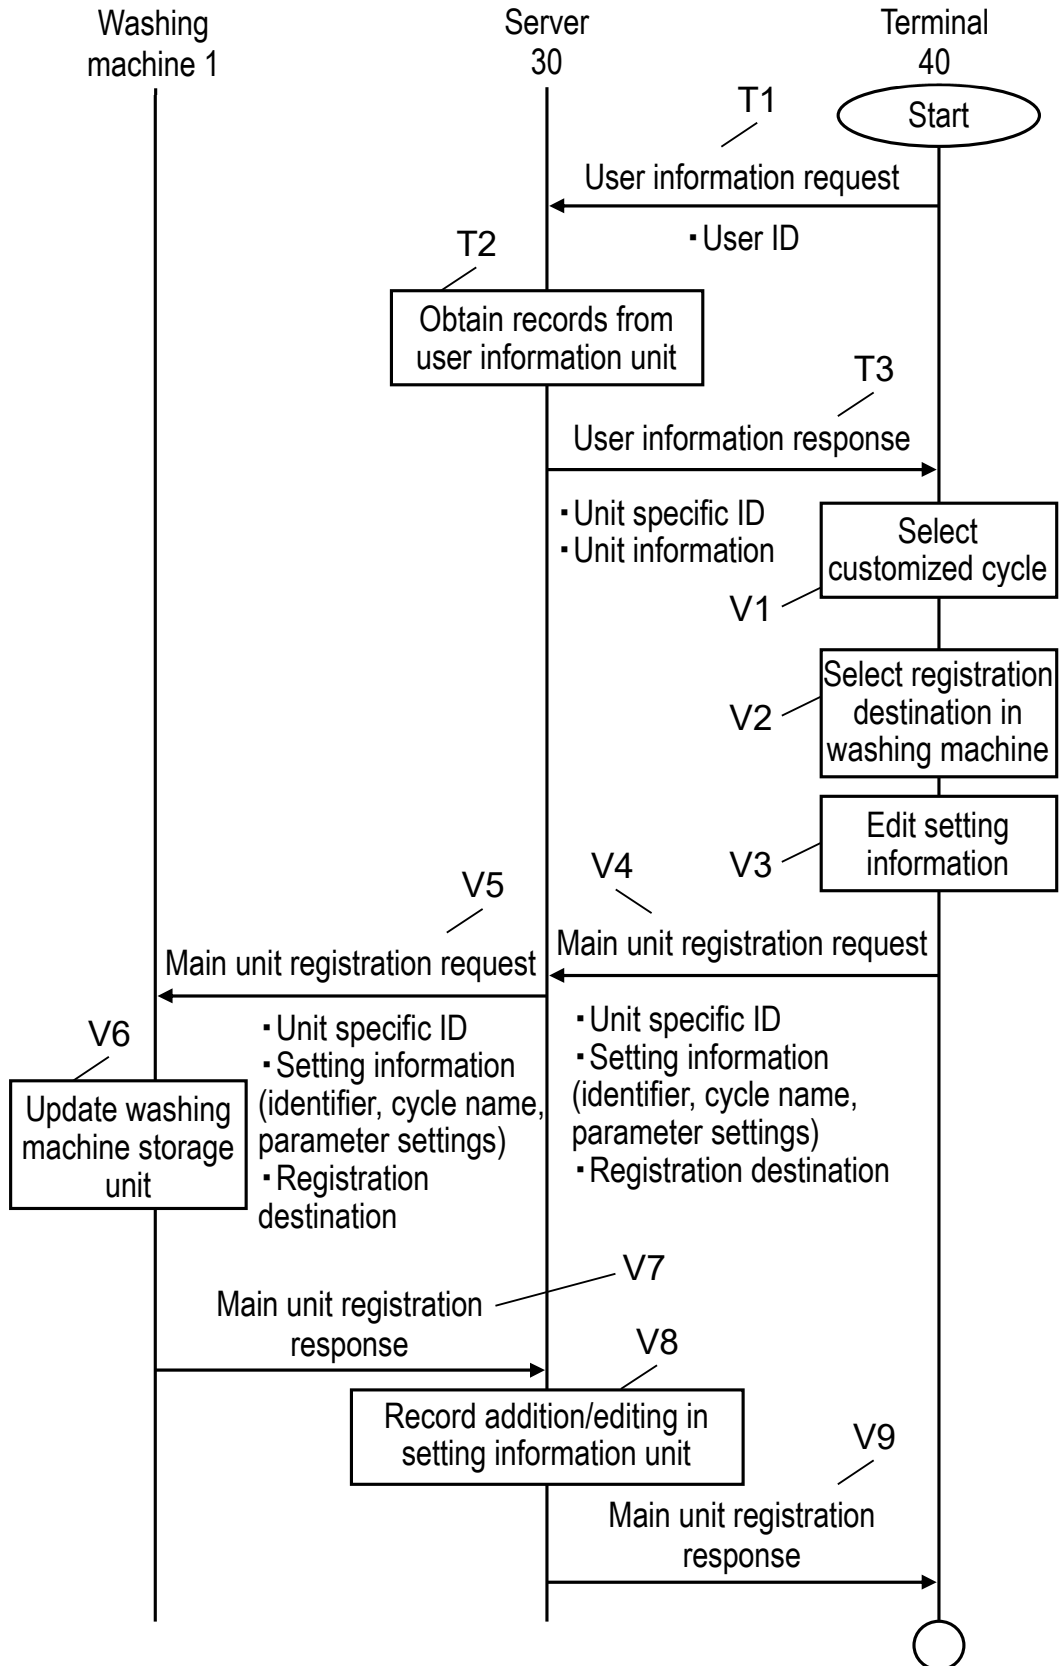 


FIG. 18

My-family favorite cycle selection screen 106

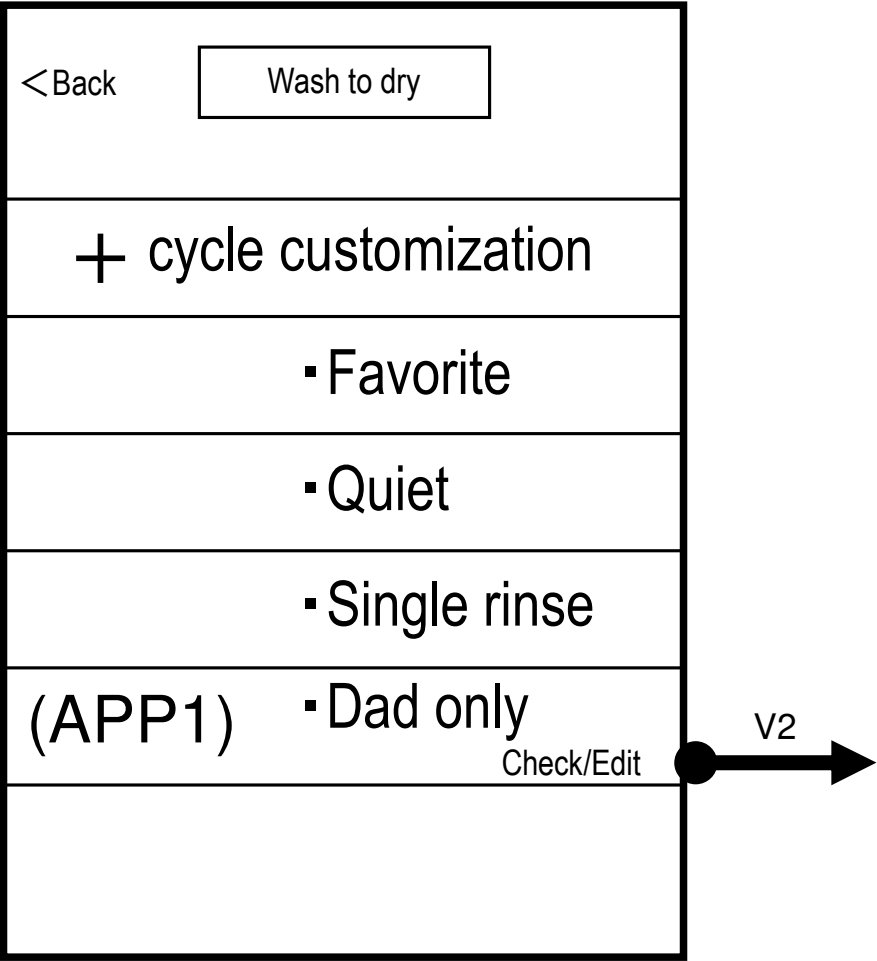 


FIG. 19

Registration destination selection screen 107

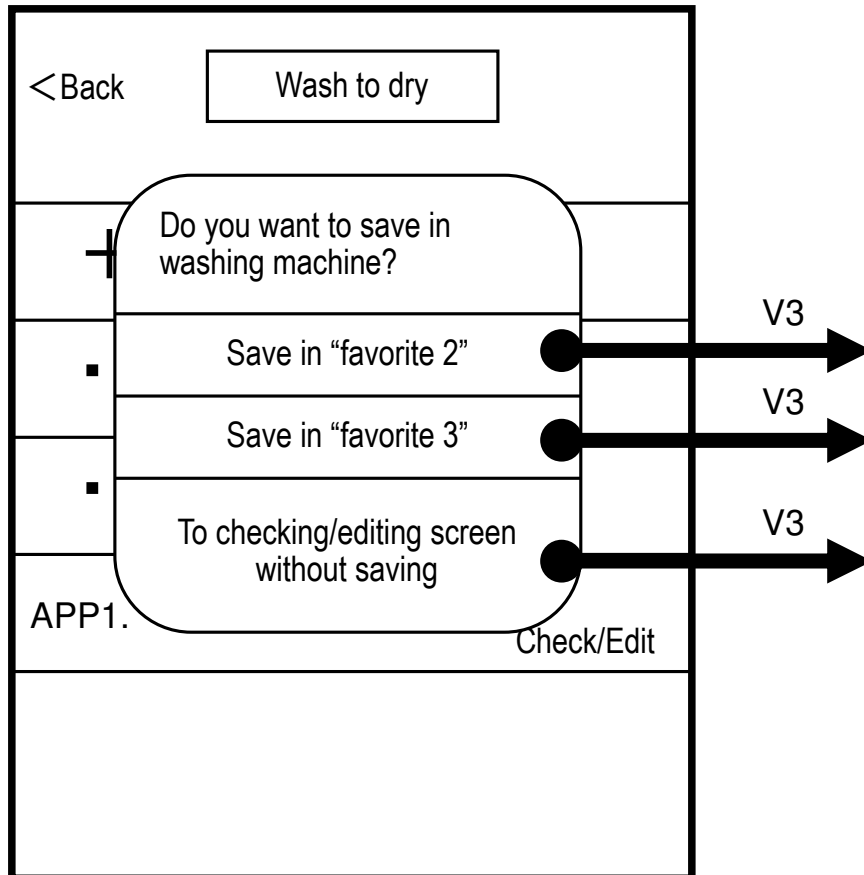 


FIG. 20

My-family favorite cycle selection screen 202

