

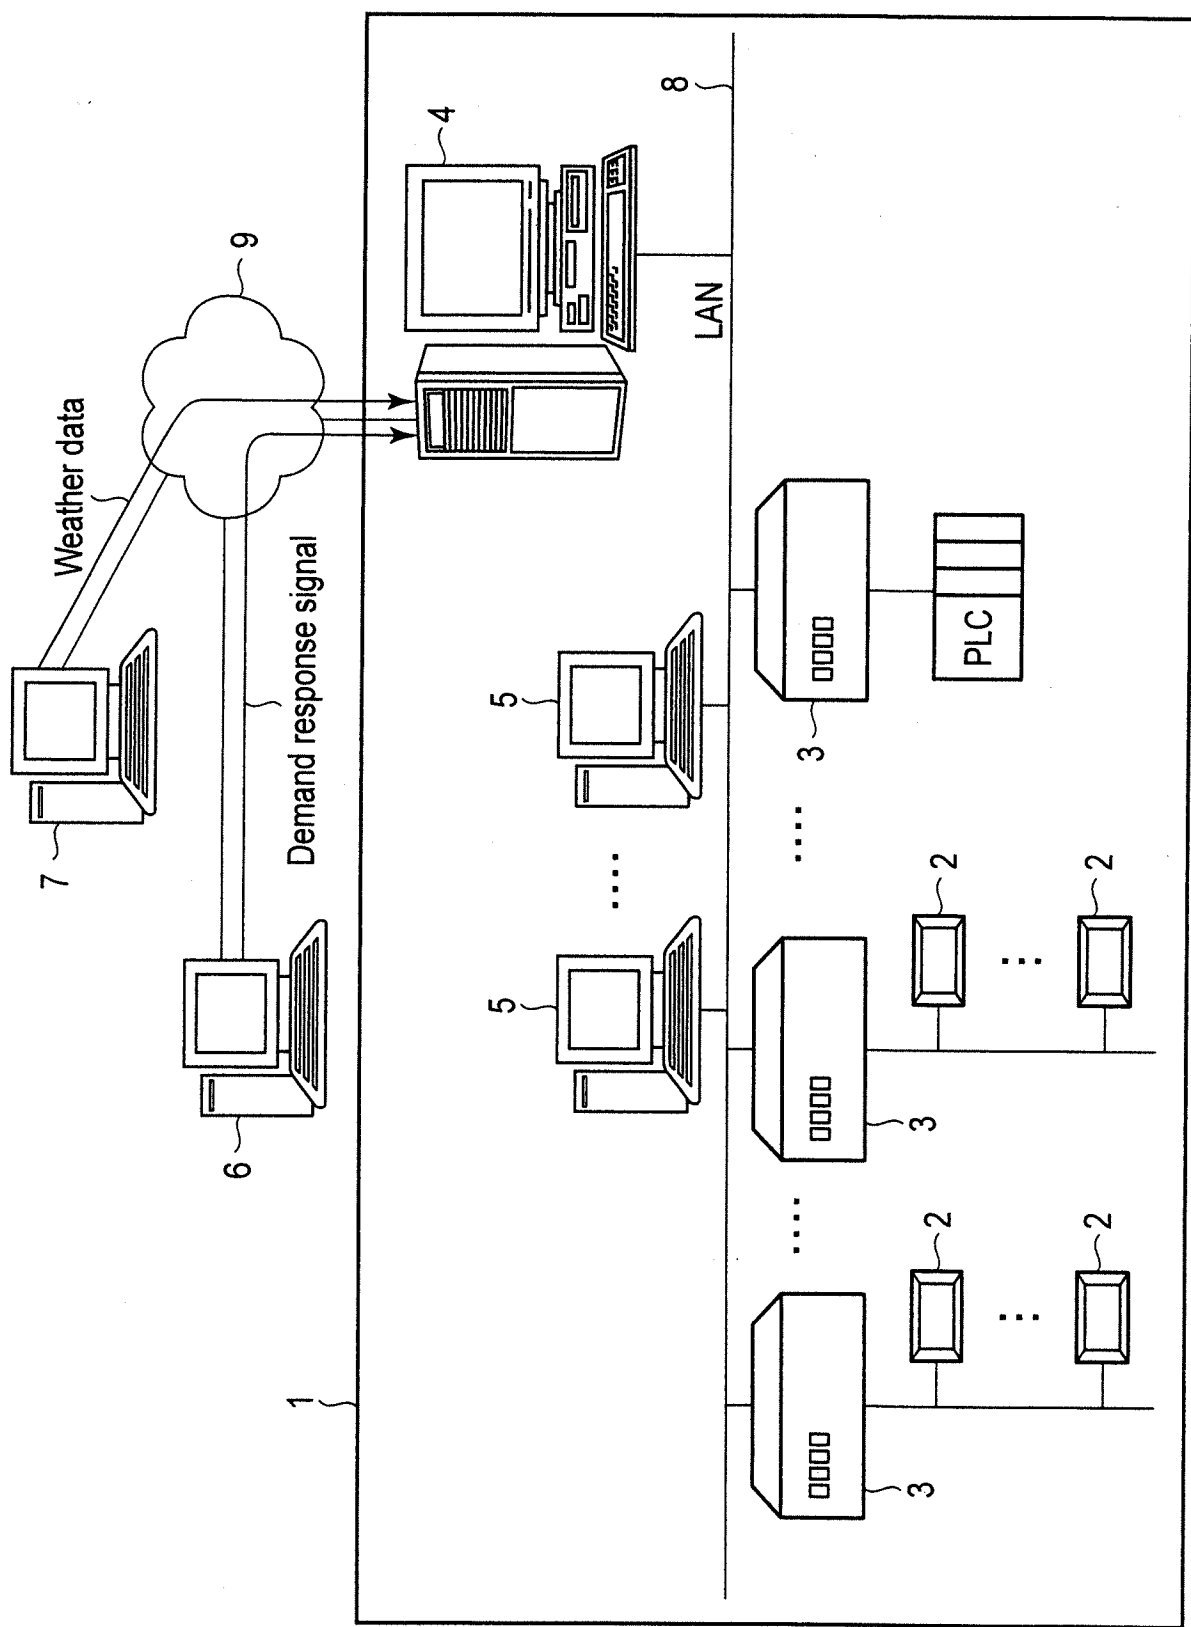


FIG. 1

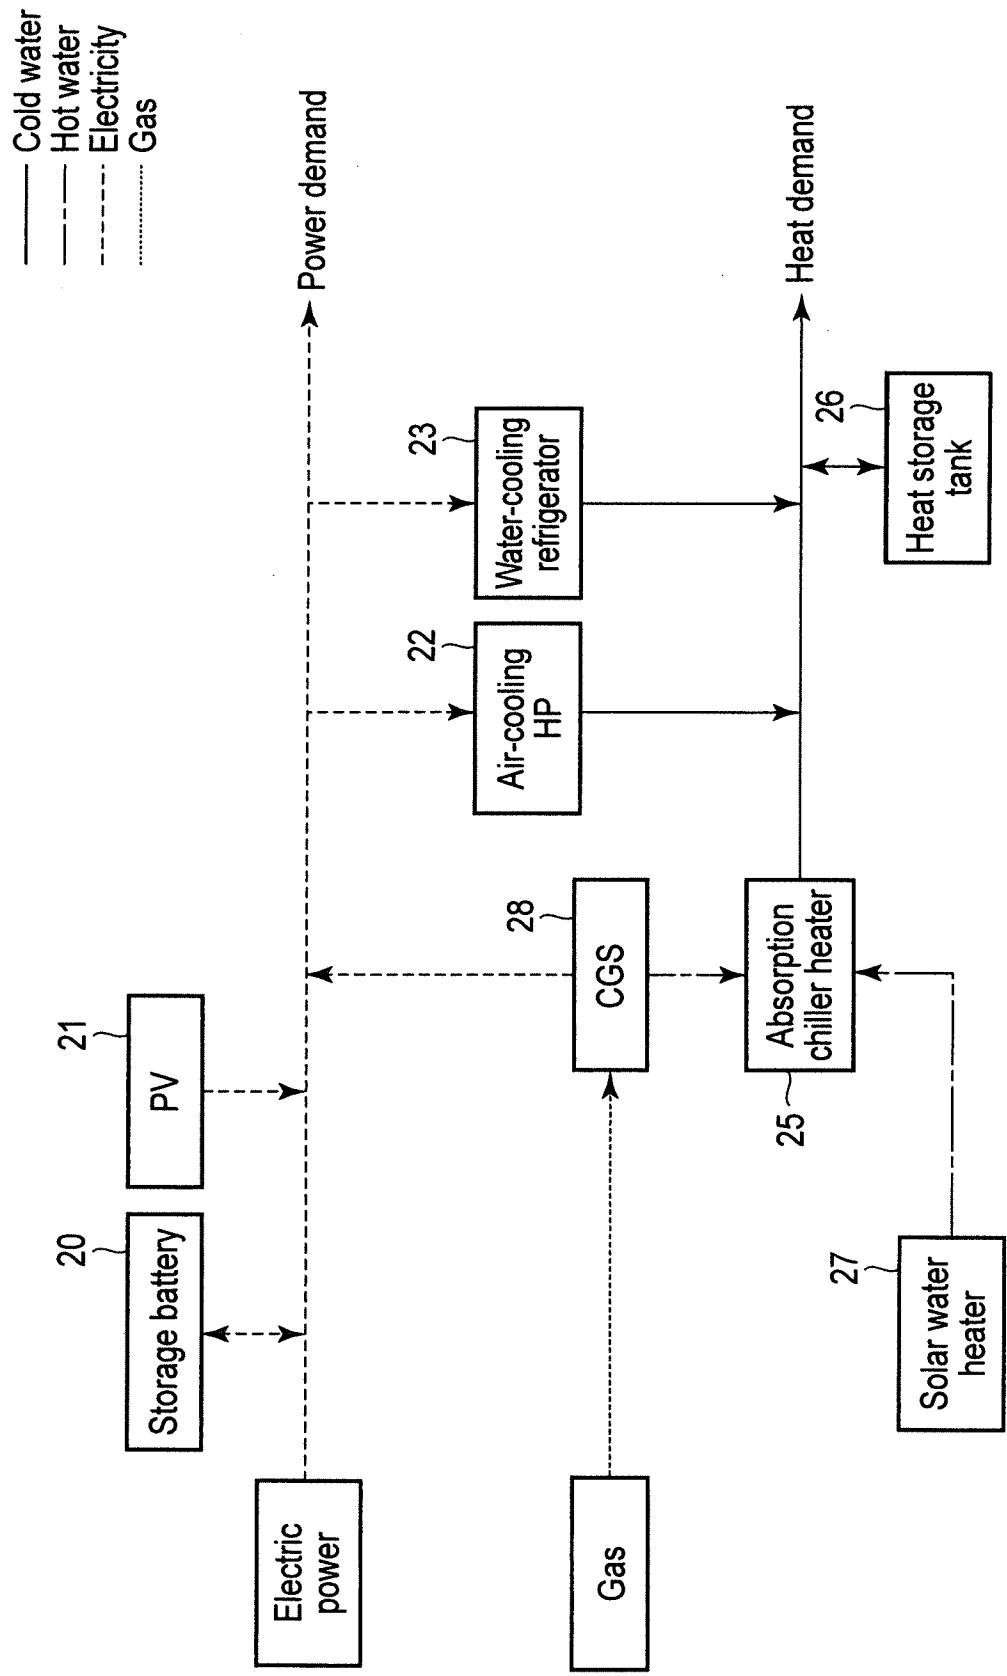


FIG. 2

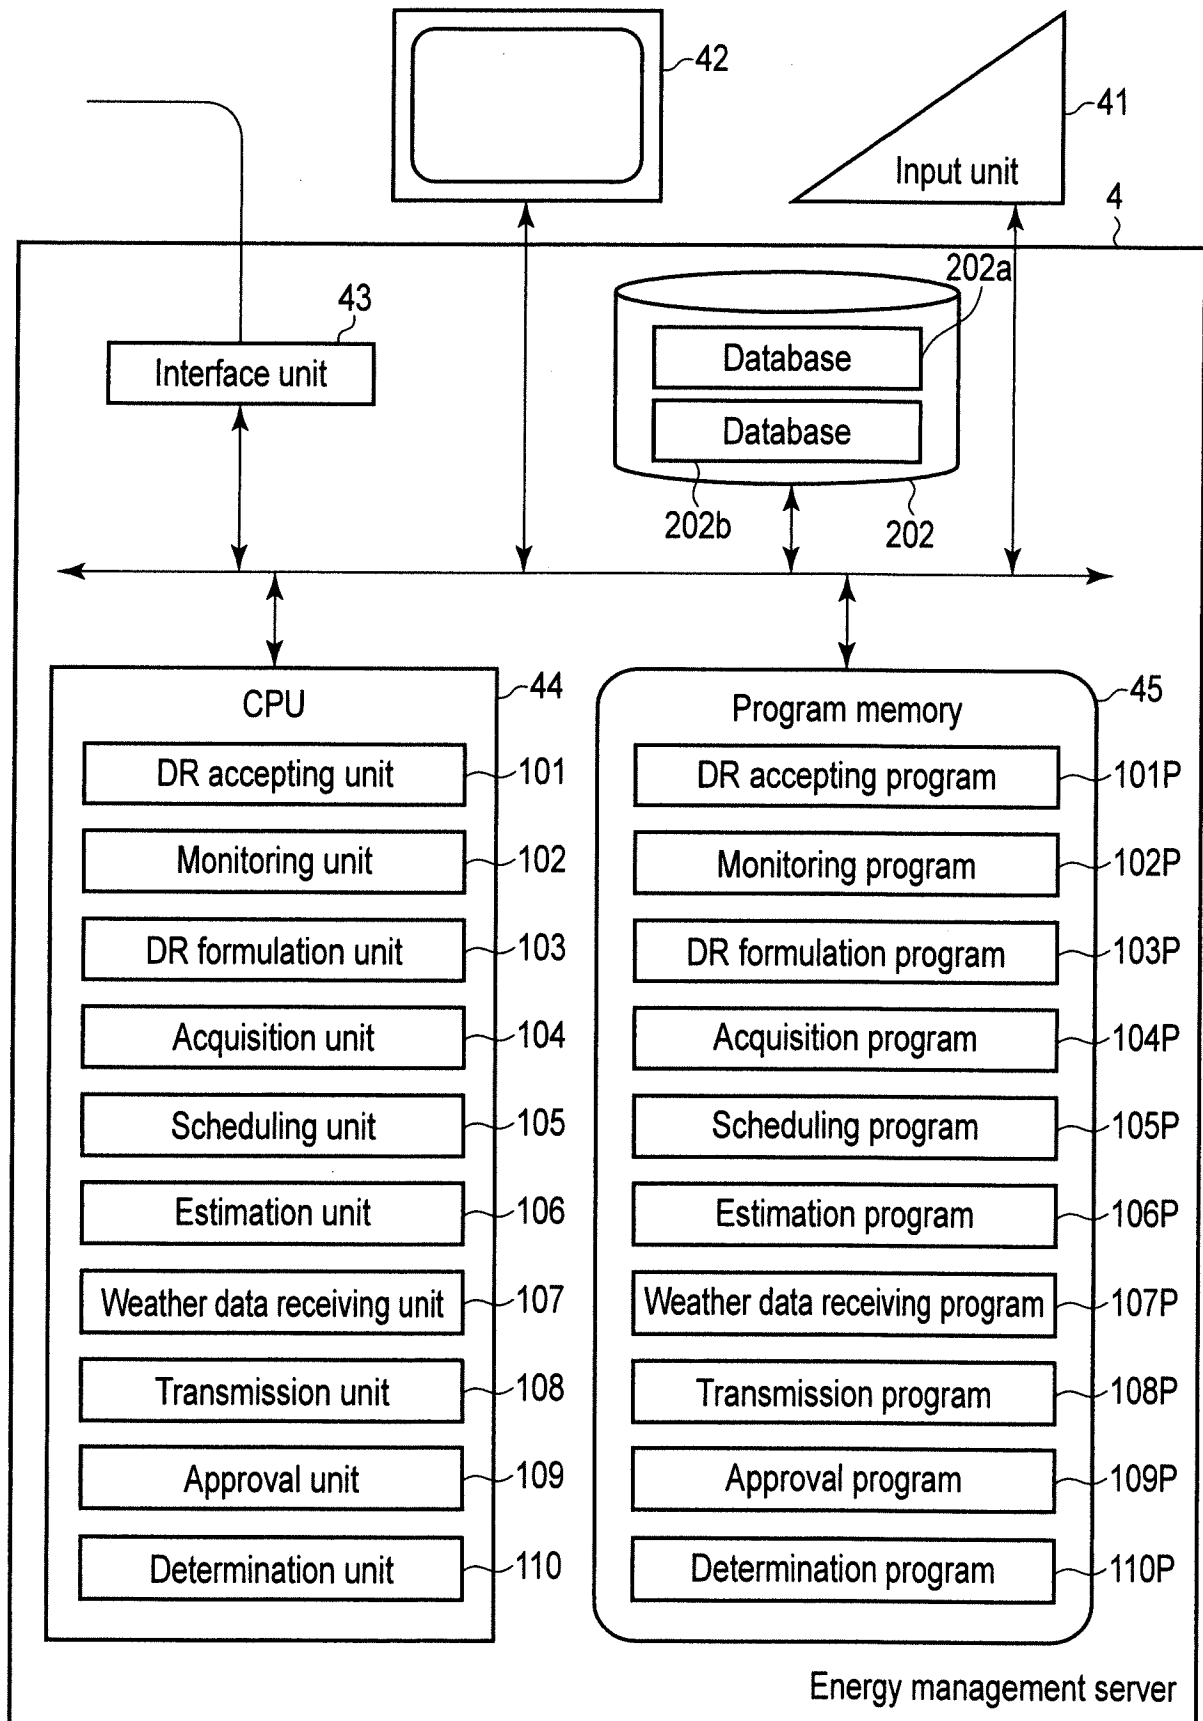


FIG. 3

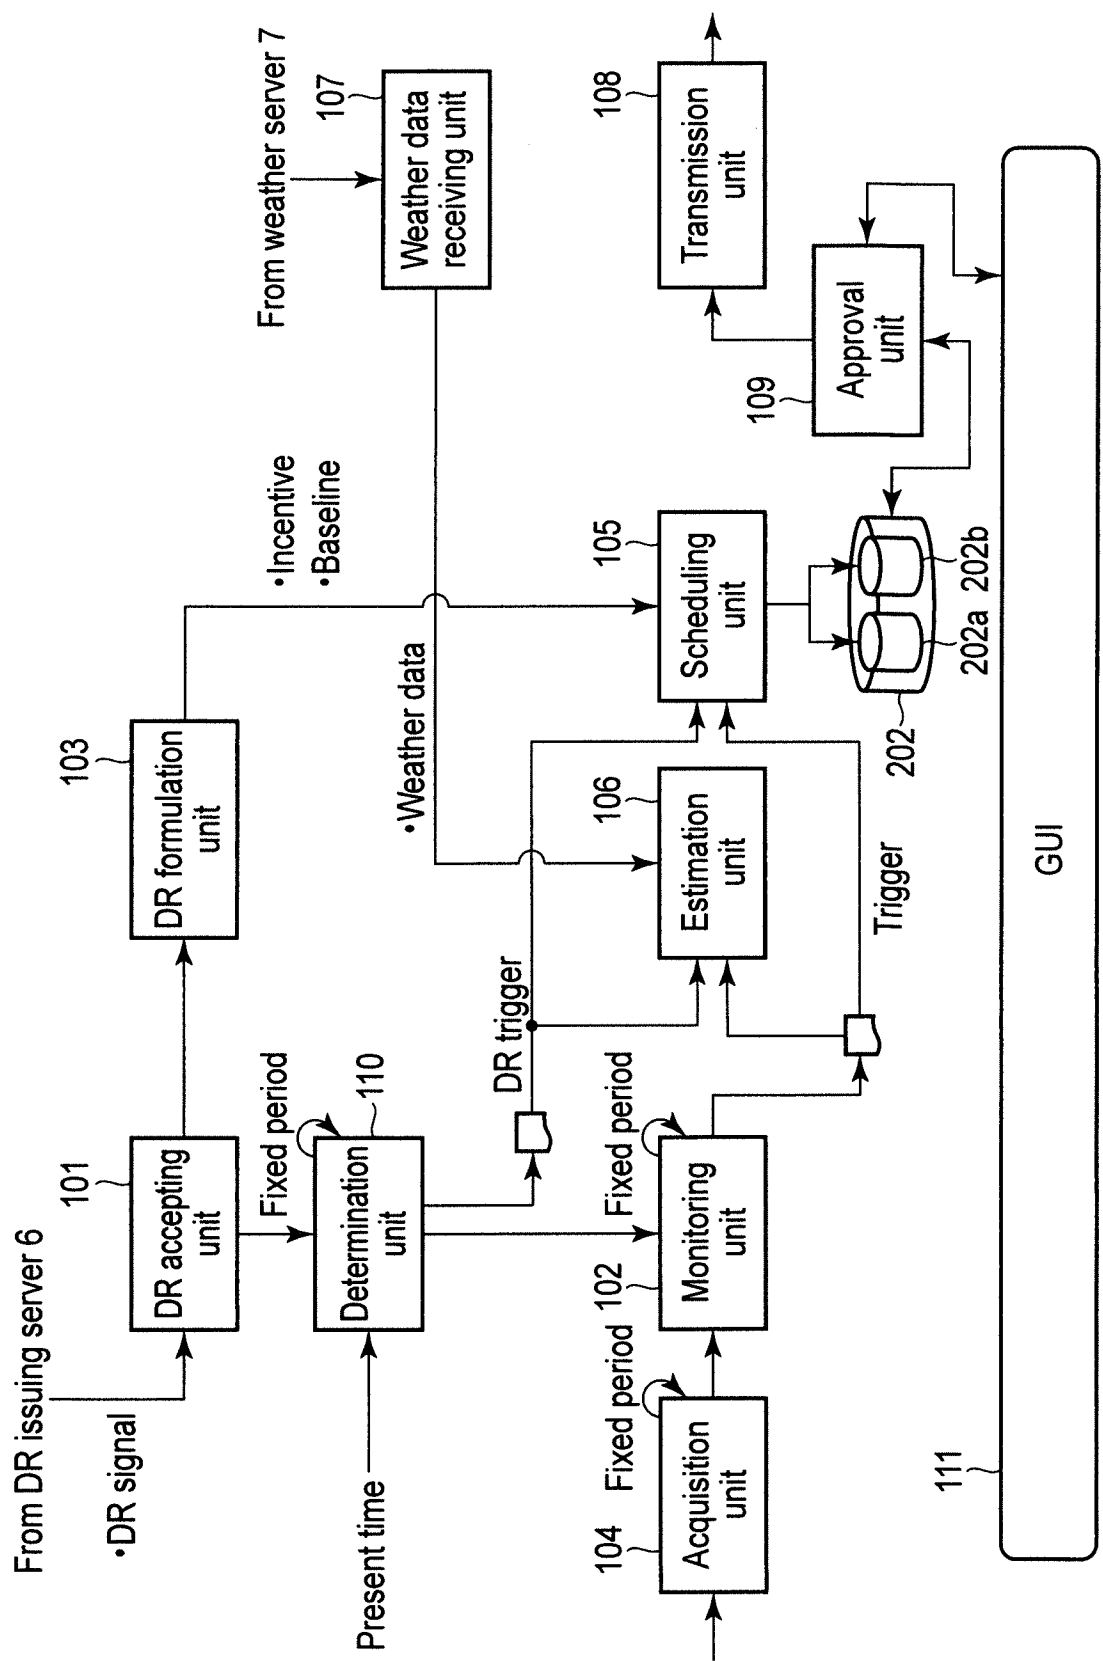


FIG. 4

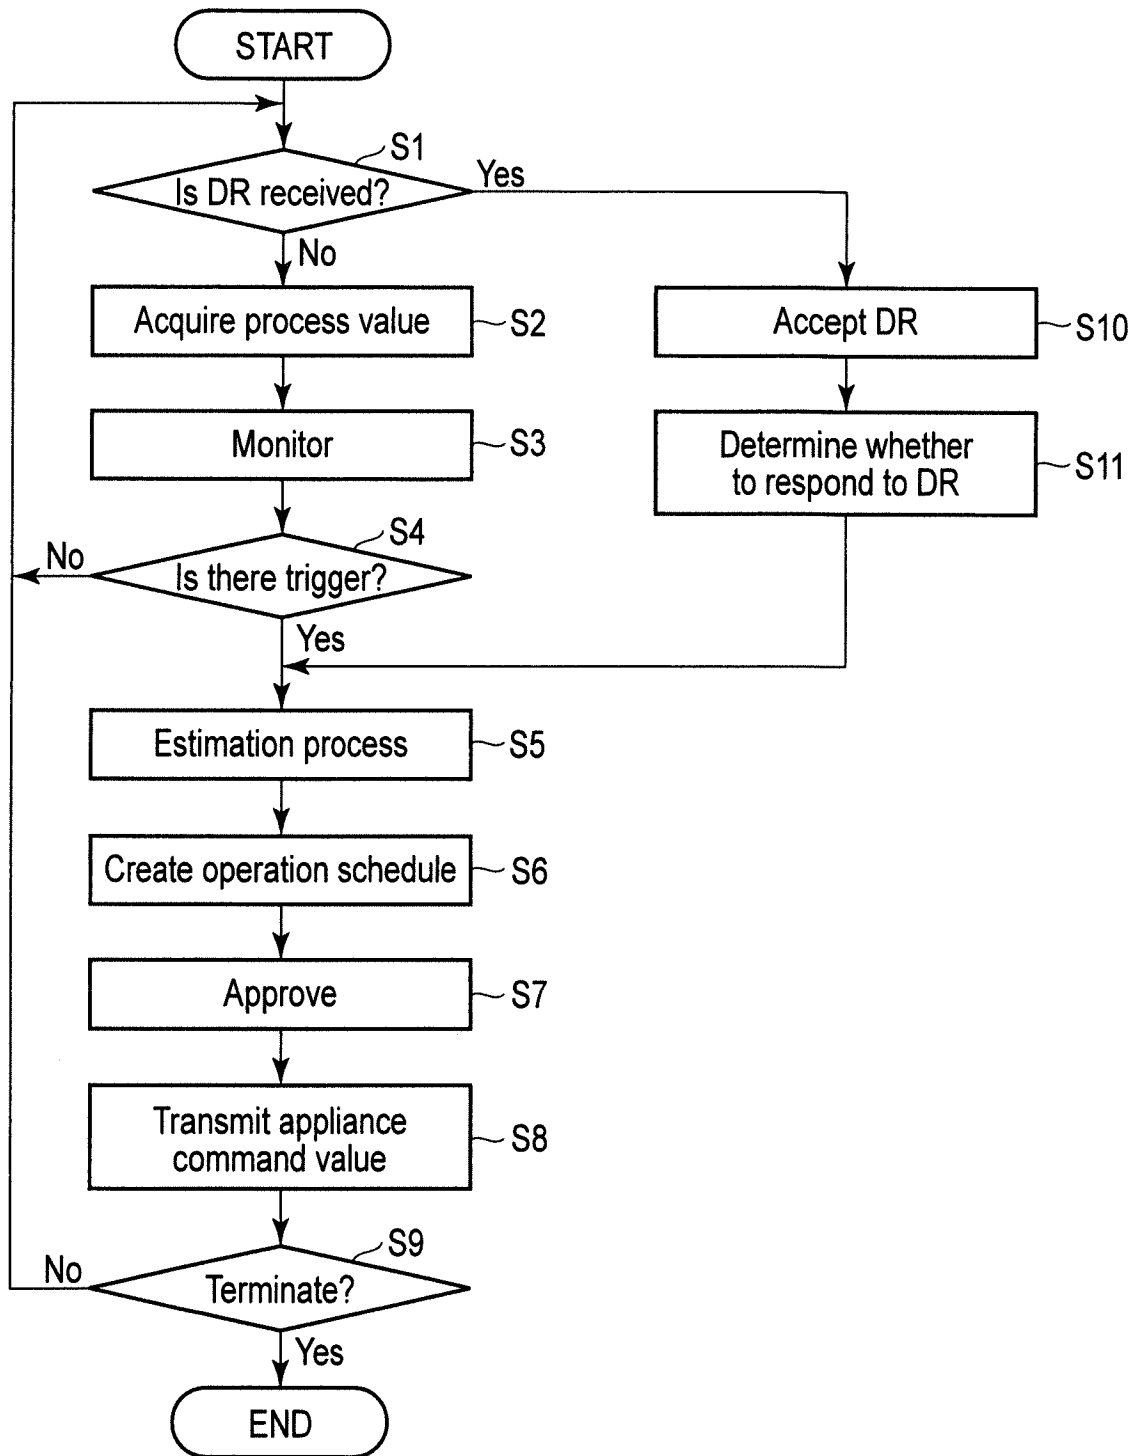


FIG. 5

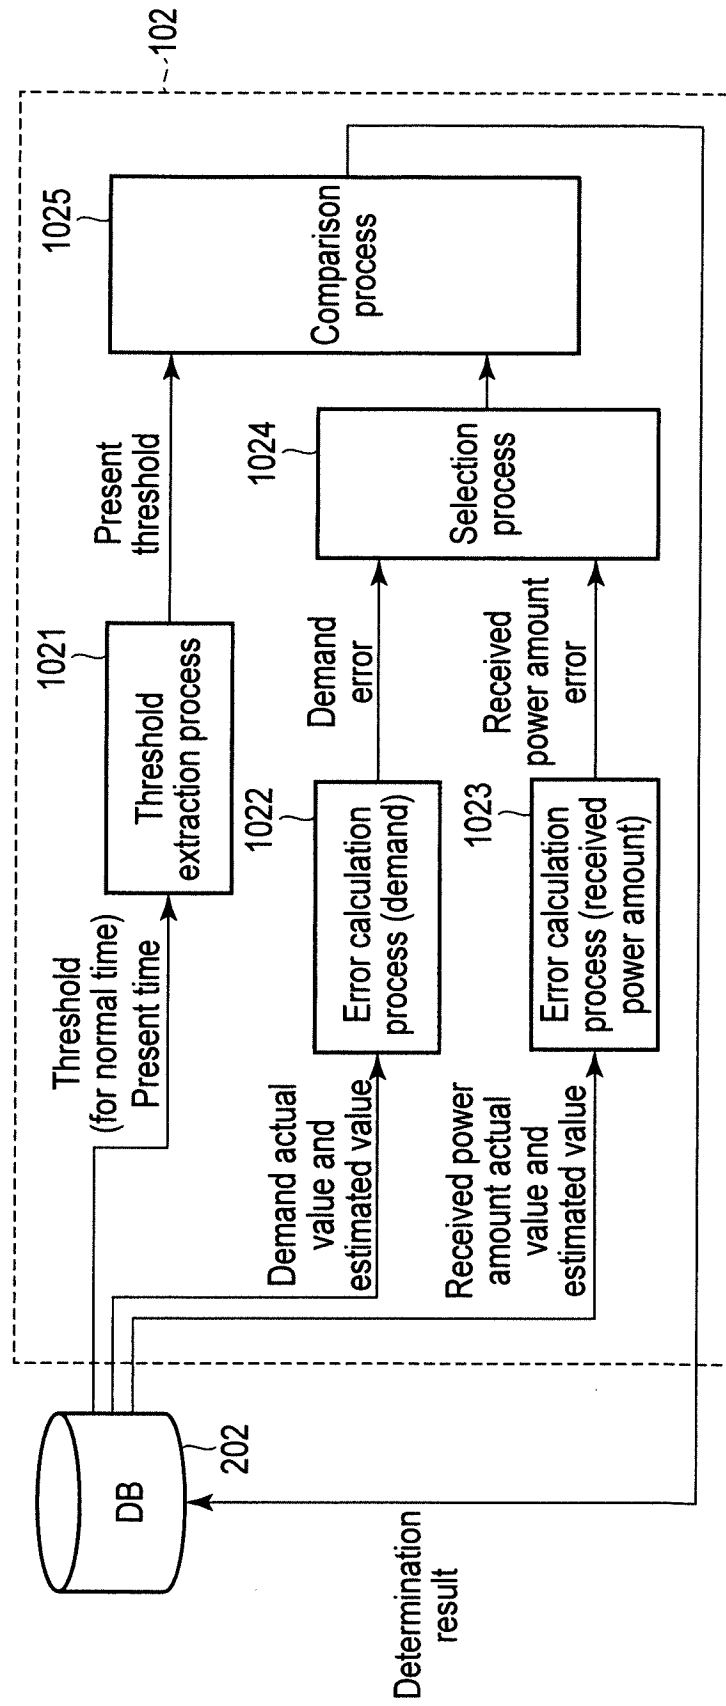


FIG. 6

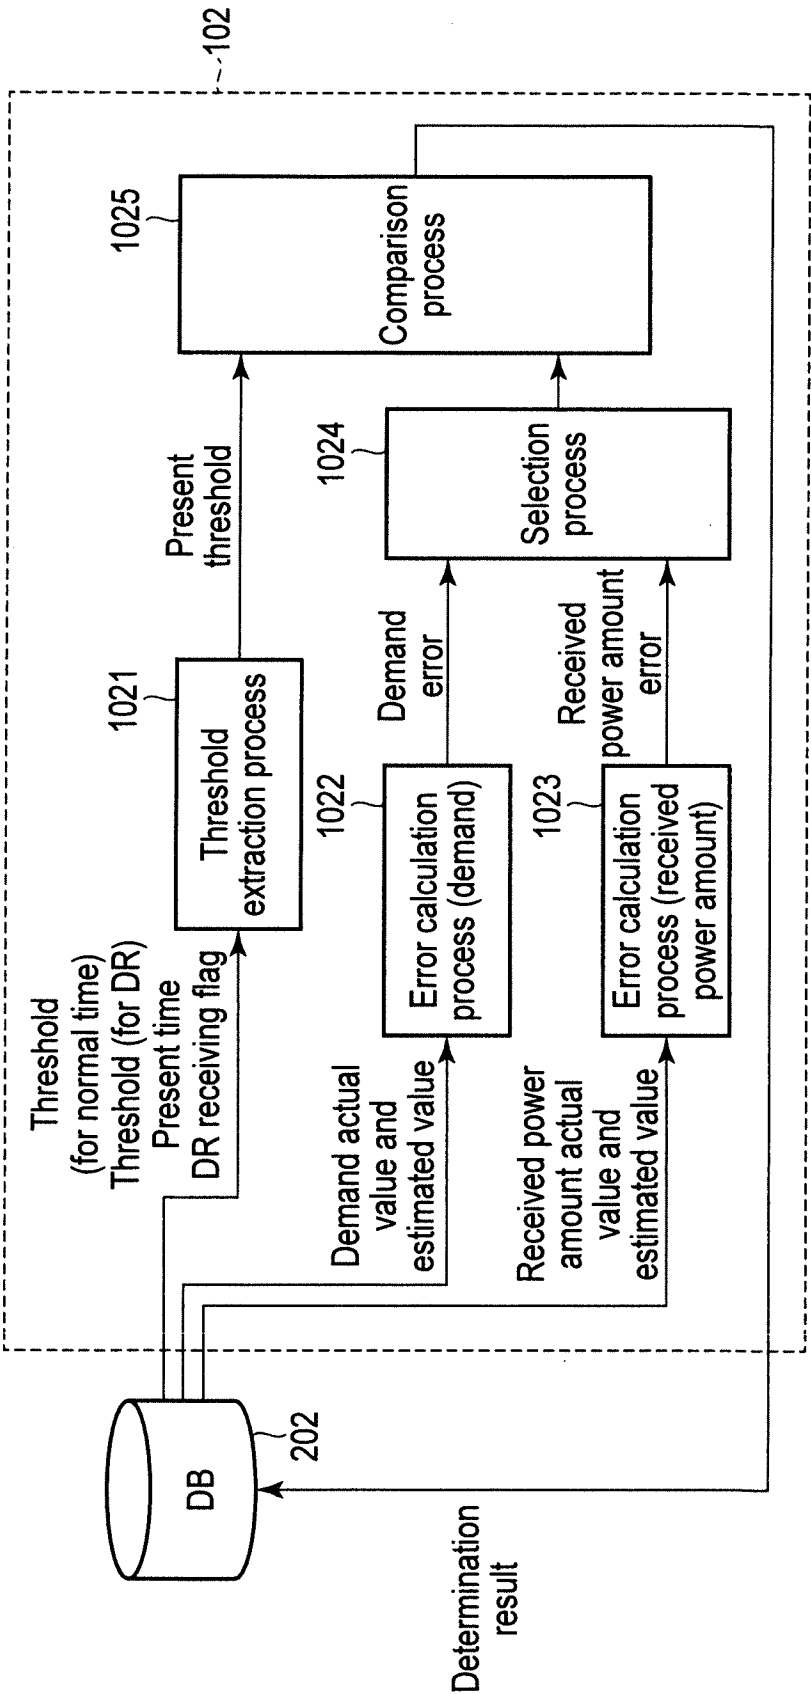


FIG. 7

Estimated Error Determination Threshold Setting Window

■ Threshold (for normal time) Unit [kW]

0:00	0:30	1:00	...	11:00	...	21:30	22:00	22:30	23:00	23:30
100	100	100	...	20	...	100	100	100	100	100

Set

■ Threshold (when DR signal exists) Unit [kW]

0:00	0:30	1:00	...	11:00	...	12:30	13:00	...	23:00	23:30
100	100	100	...	20	...	40	40	...	100	100

Set

■ Determination target

☒ Received power amount error

☐ Demand

※Set threshold for each period and press button

FIG. 8

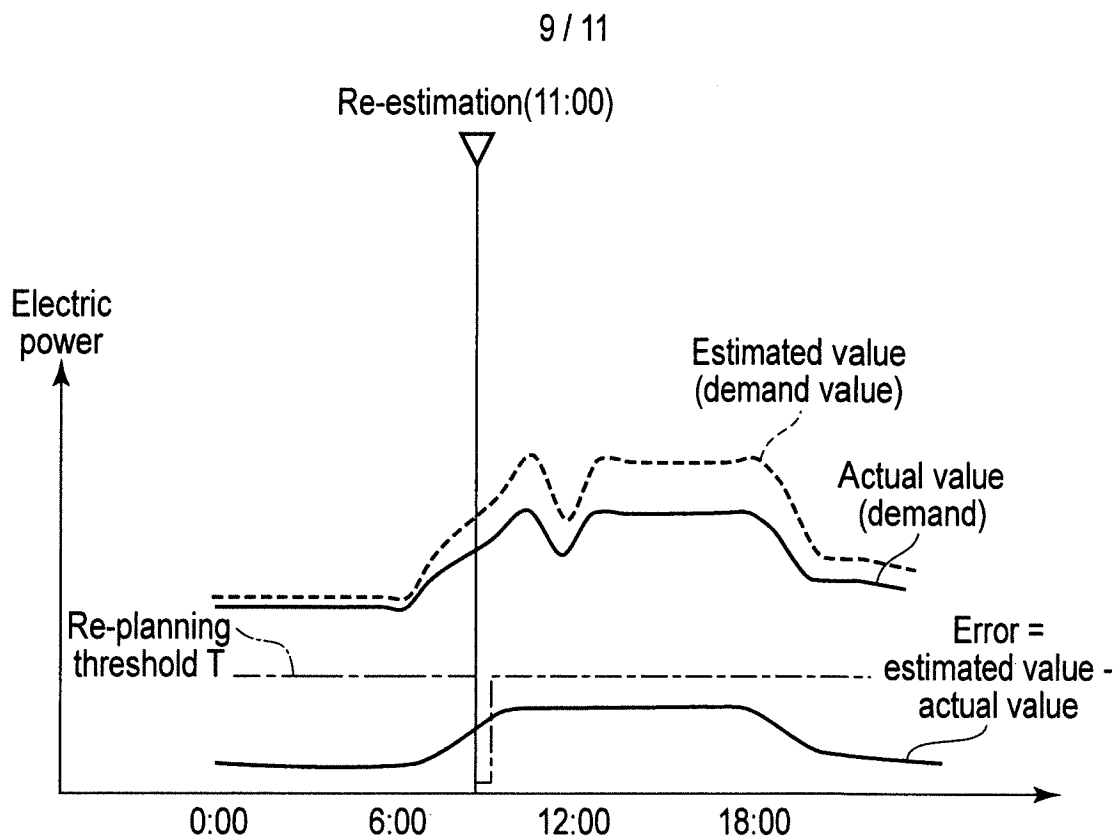


FIG. 9

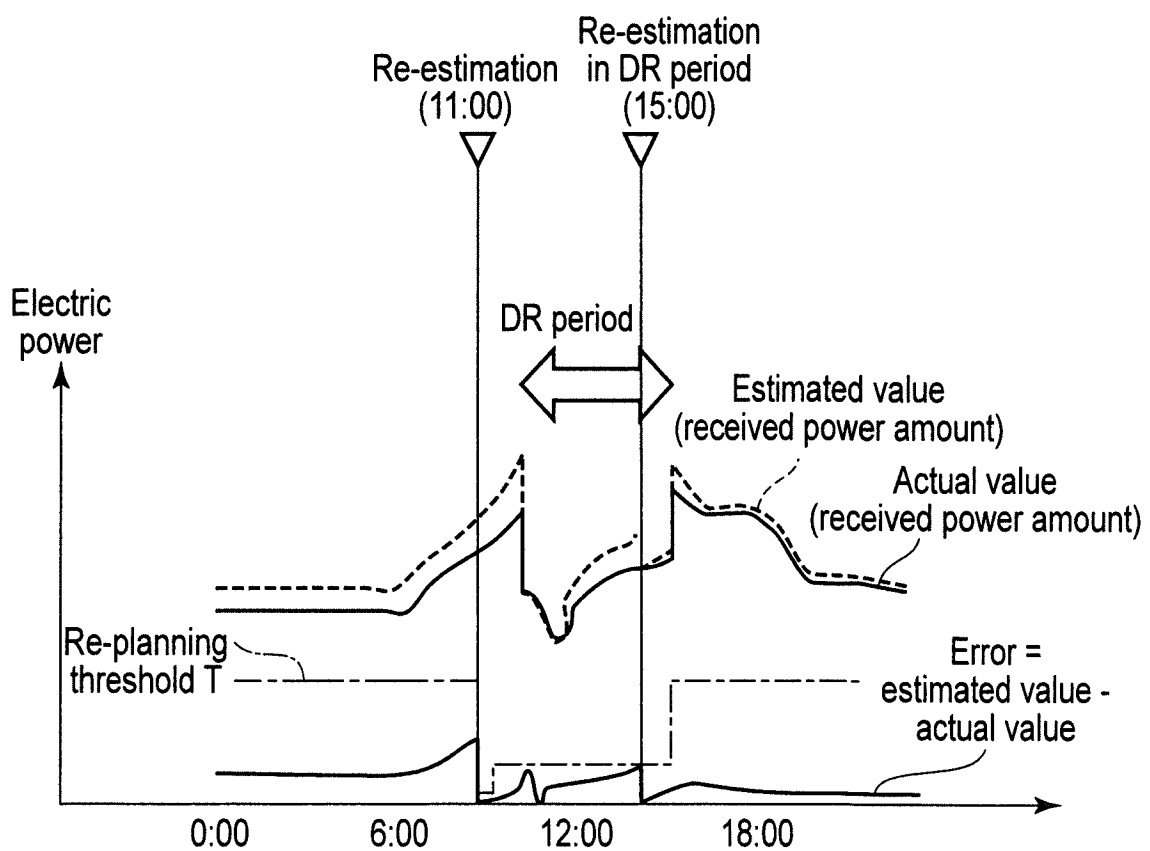


FIG. 10

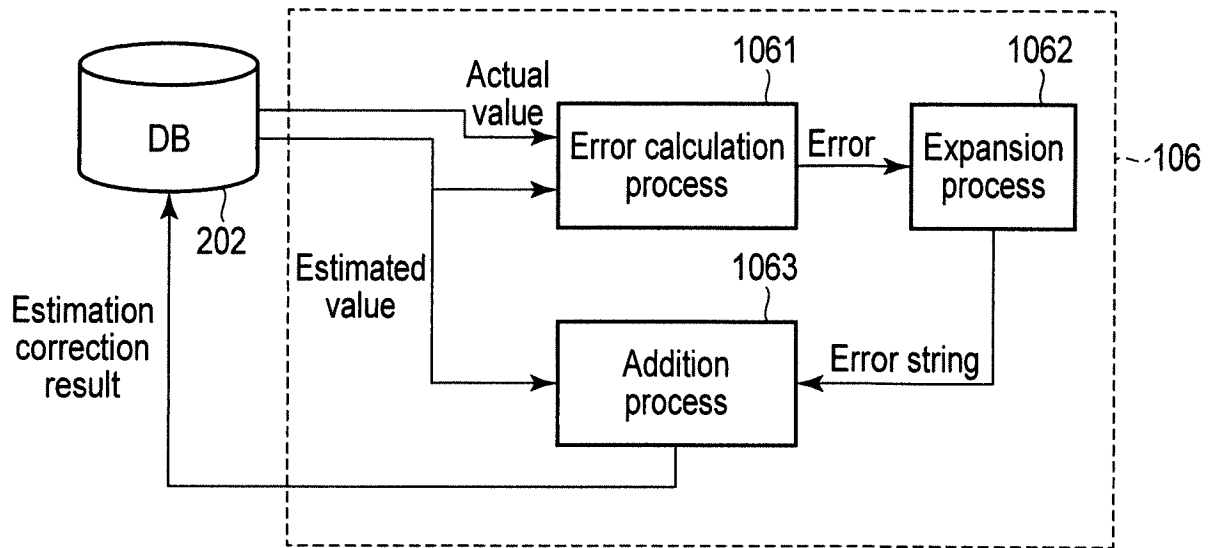


FIG. 11

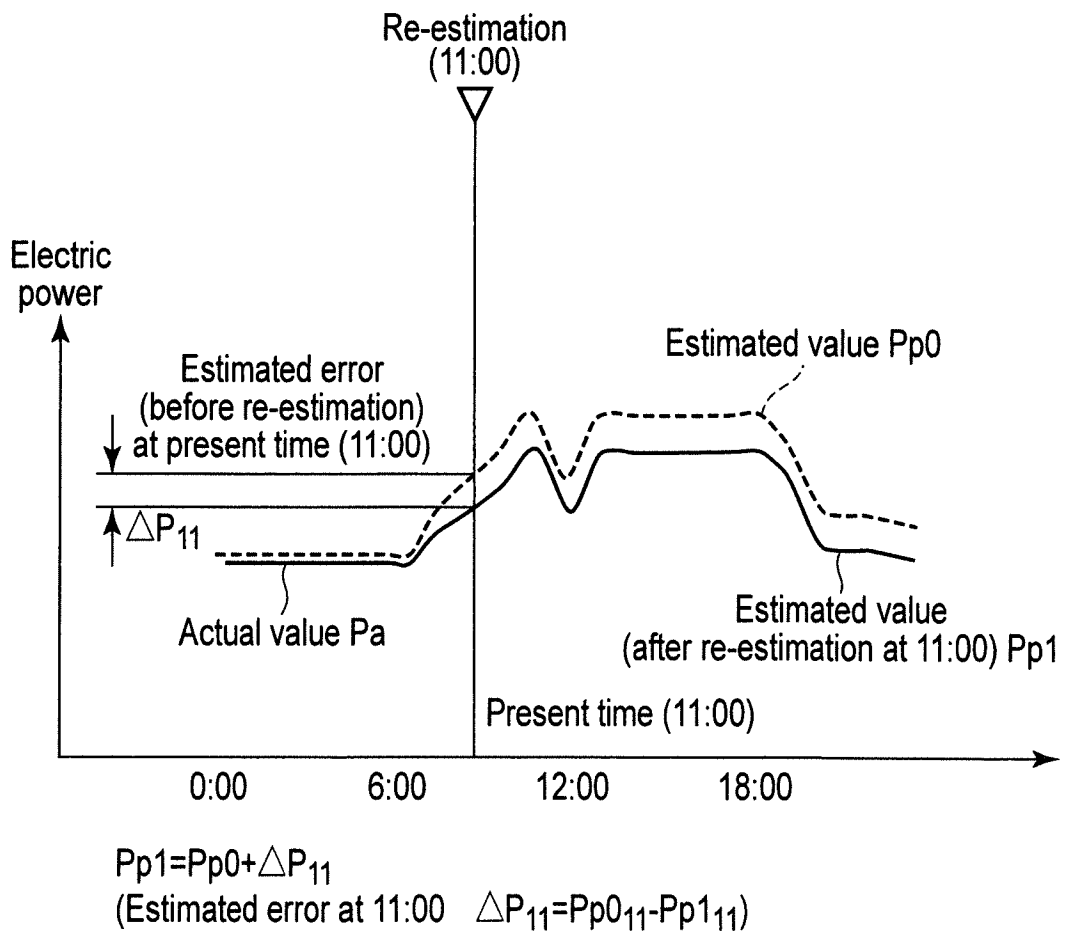


FIG. 12

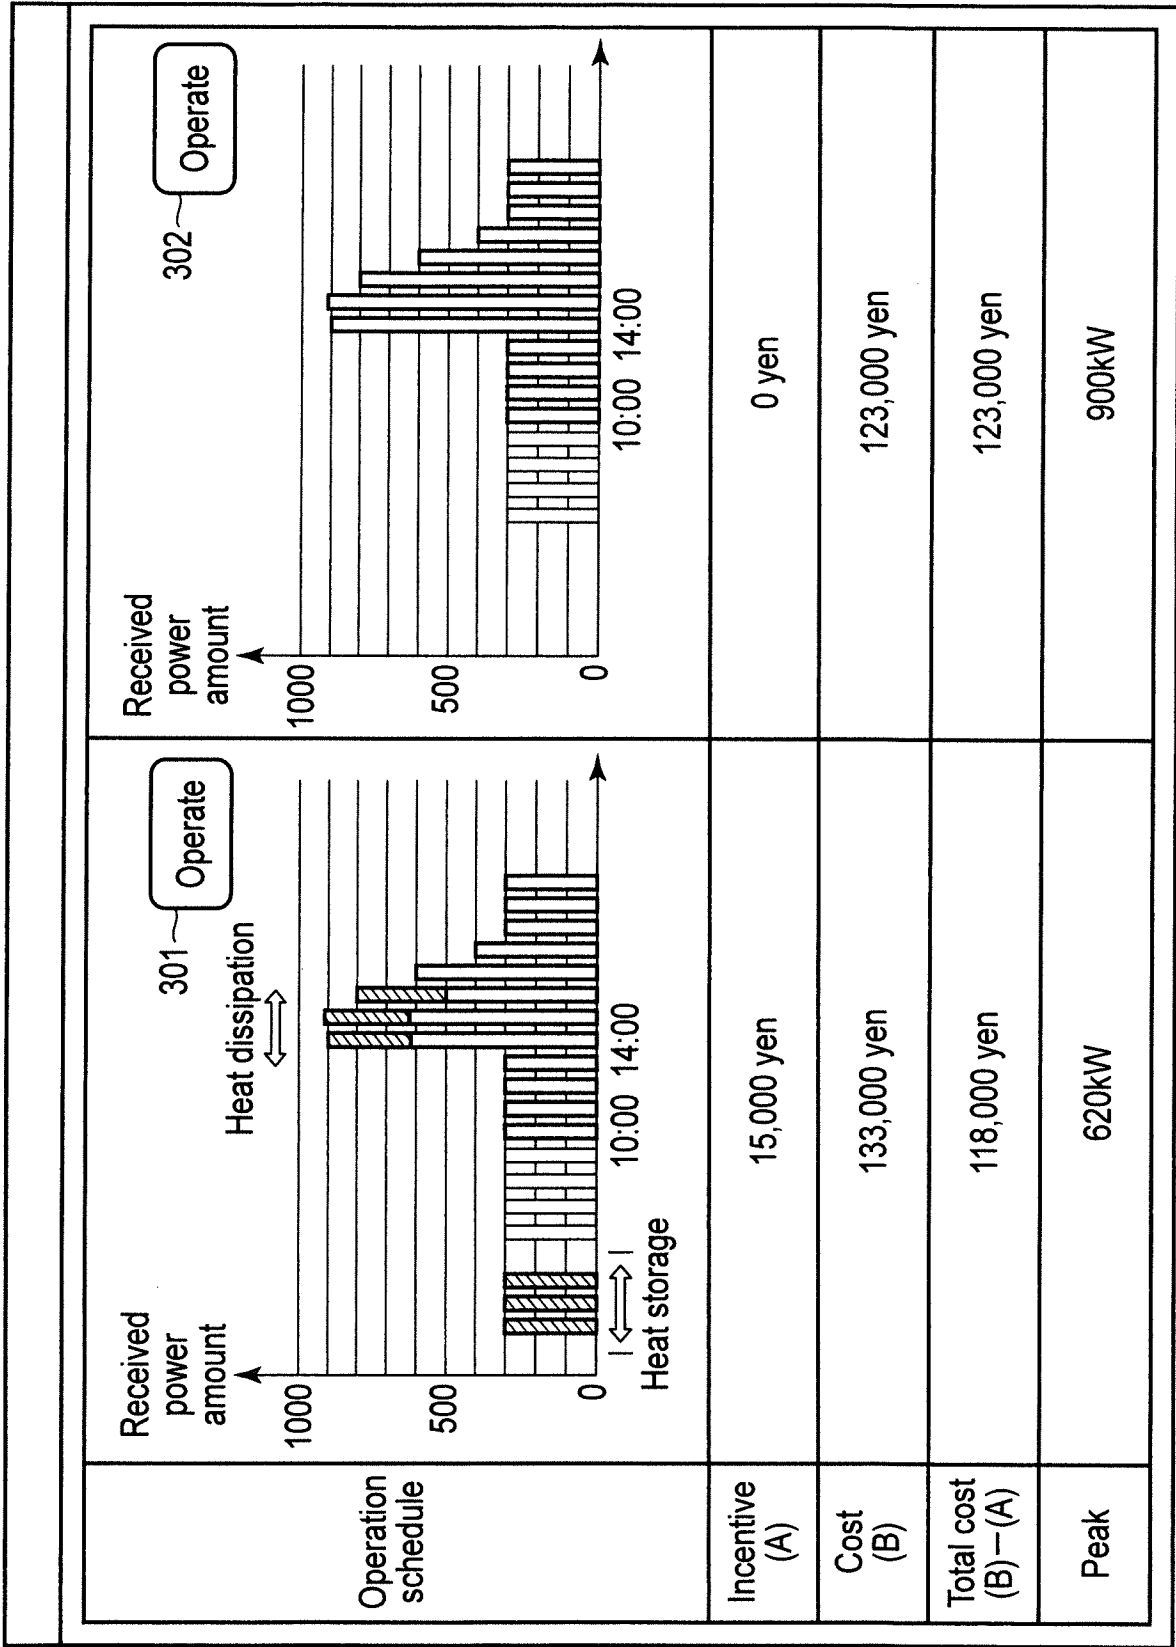


FIG. 13