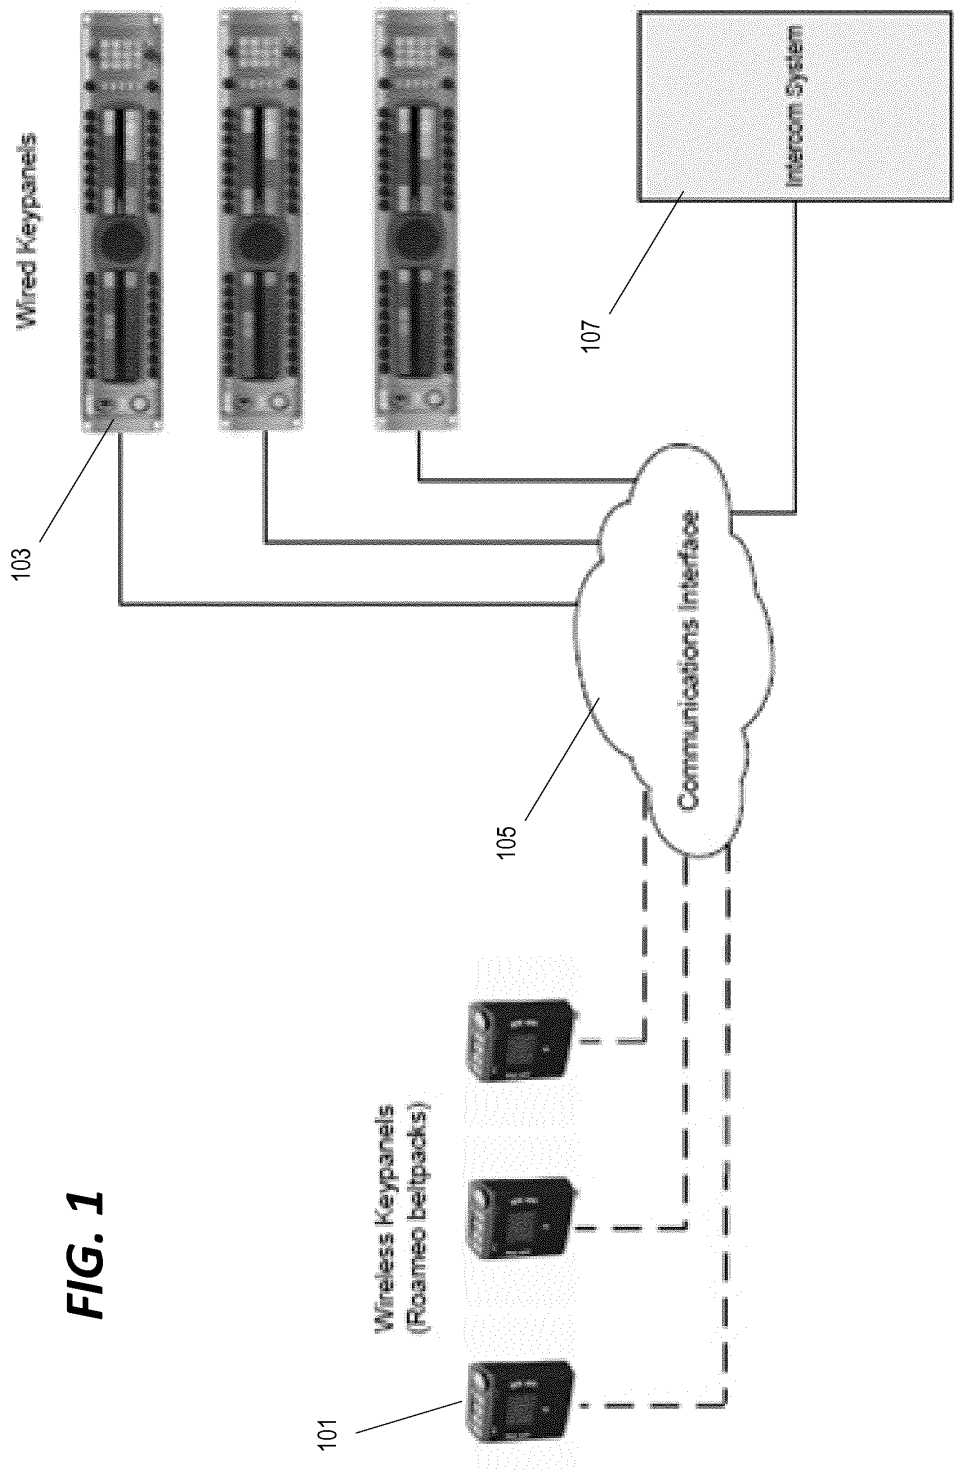




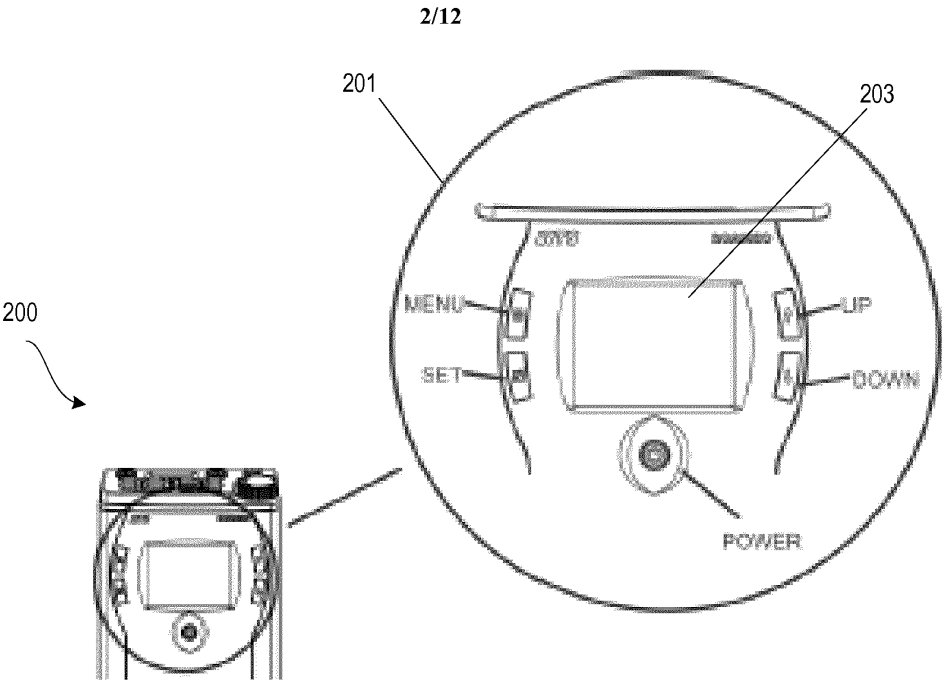


FIG. 2A

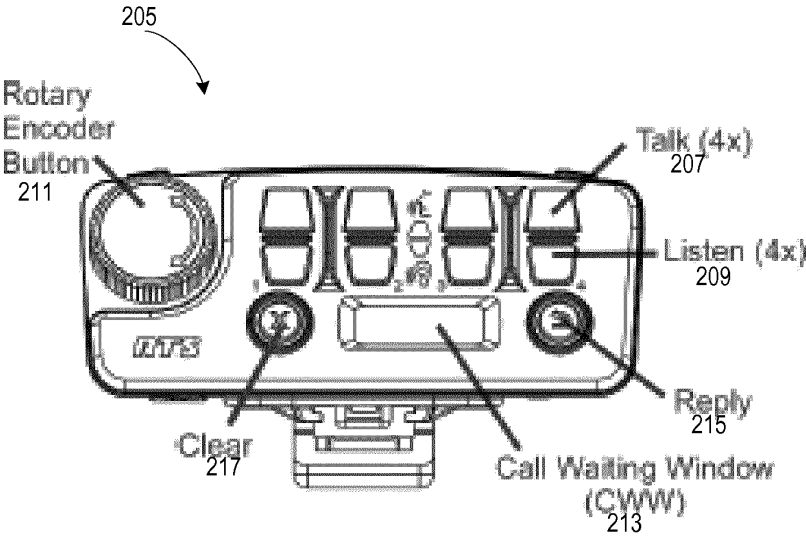
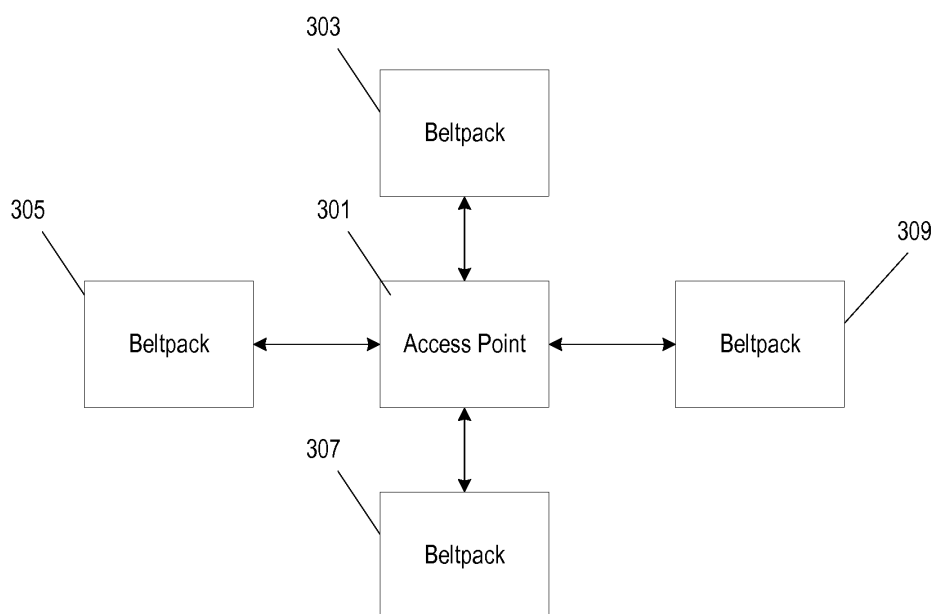


FIG. 2B

**FIG. 3**

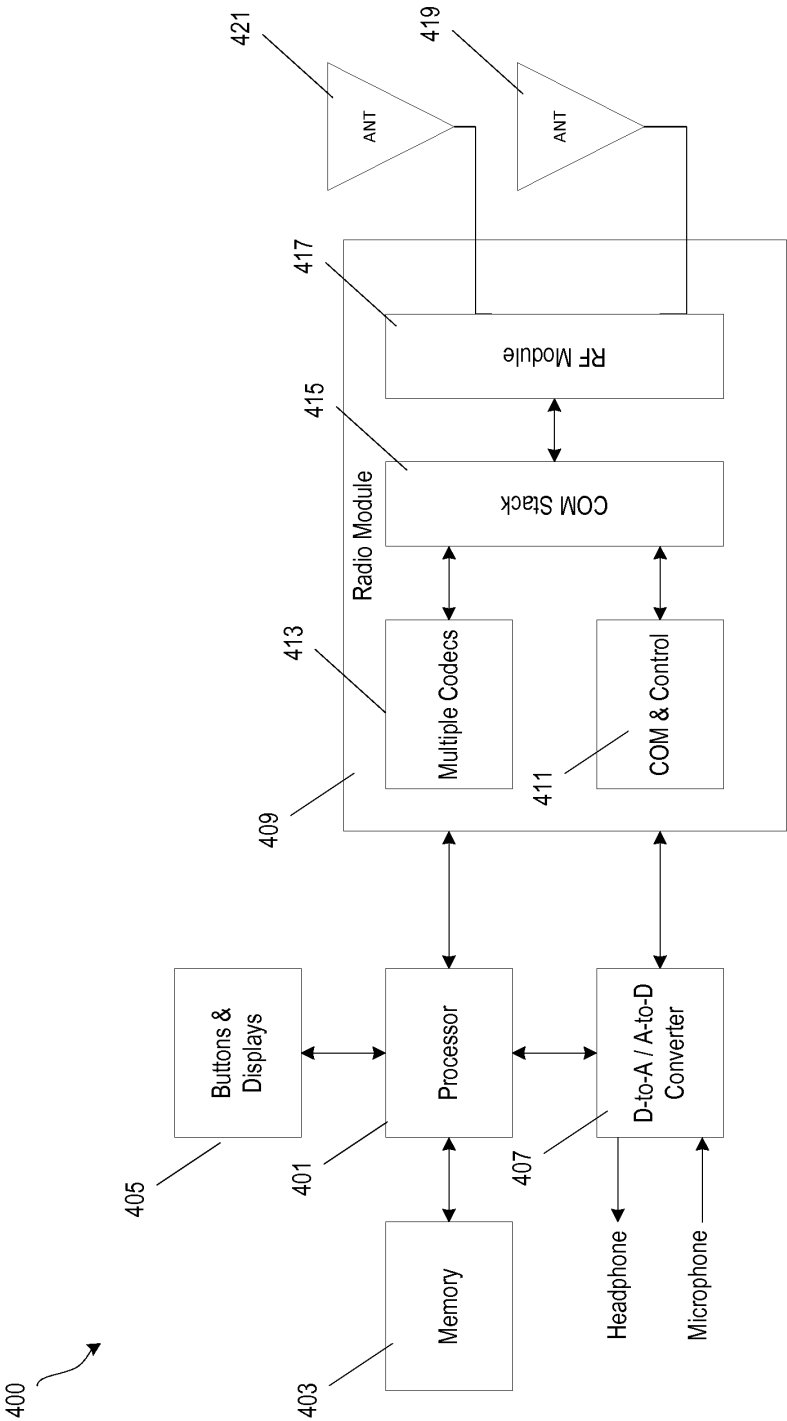
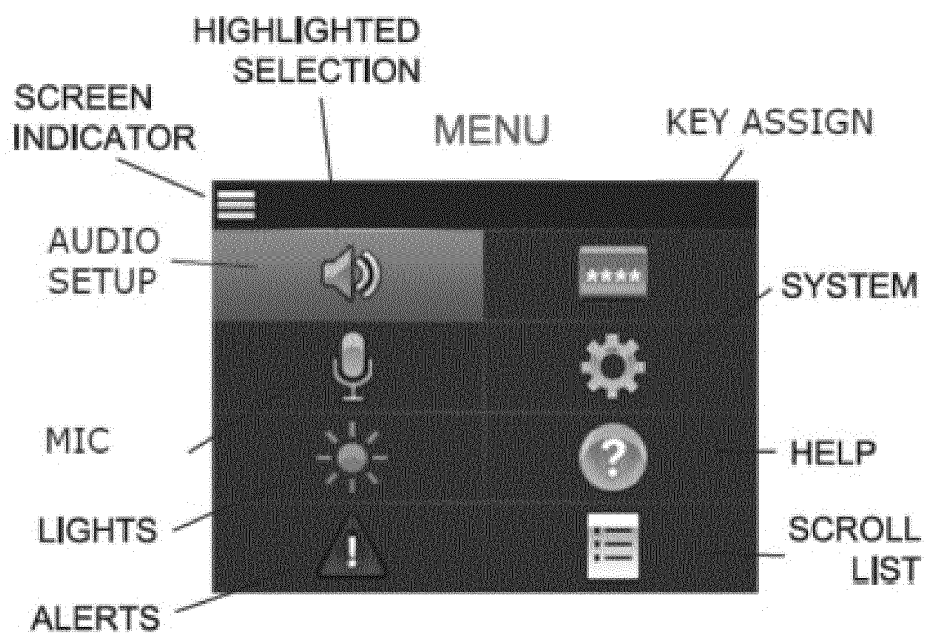
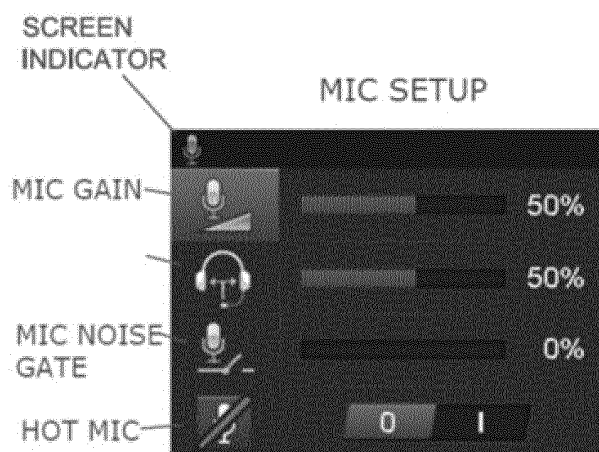
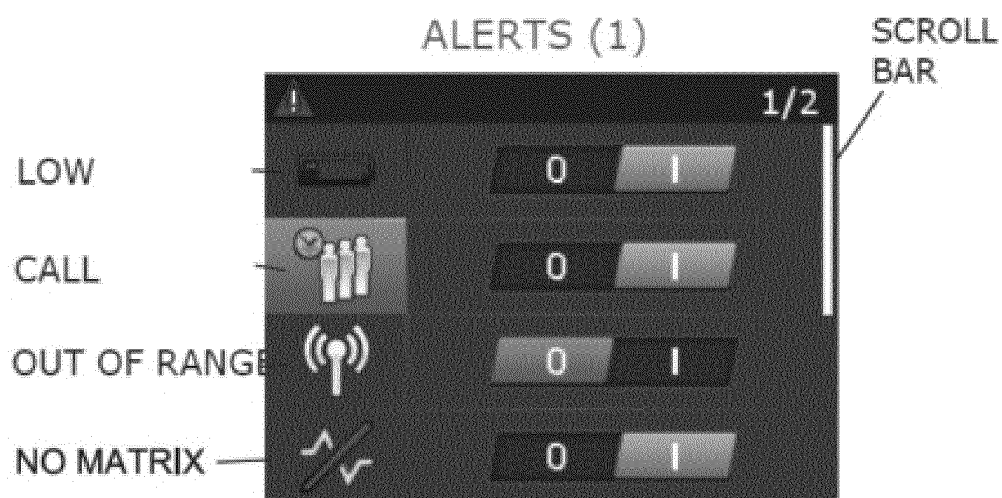
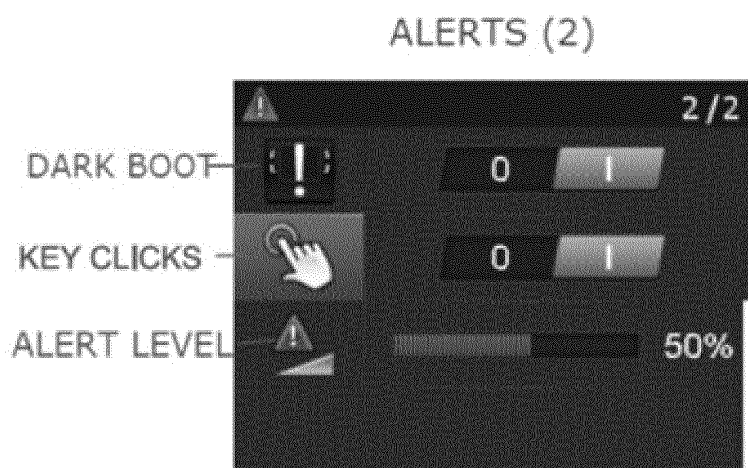


FIG. 4

5/12

**FIG. 5****FIG. 6**

6/12

**FIG. 7****FIG. 8**

7/12

 
	4	Home	Main operating screen
	14	Audio Settings	Audio Settings
	19	Microphone Settings	Mic Settings
	10	Brightness	Display backlight and LED intensity
	6	Alerts	Audio alerts
	15	Key Assignments	Menu to set up talk / listen key assignments
	12	System Setup	System setup menu
	4	Help	Multi-language icon descriptions
	11	Scroll List	Use to make calls to anyone in matrix scroll list
	7	Battery	Battery State of Charge
	7	Hot Mic	Mic is always on
	14	DECT Connected	Beltpack has a DECT RF connection with an AP

FIG. 9

	17	DECT Disconnected	Belpack has NO DECT RF connection with an AP
	18	Matrix Connected	Belpack has an Ethernet link to the matrix
	19	Matrix Disconnected	Belpack has NO Ethernet link to the matrix
	6	Locked	Locks user out of critical setup functions.
	15	Signal Strength	DECT signal Strength
	18	Scroll List Loaded	Belpack has received a scroll list from the Matrix
	14	No Scroll List	Belpack has not received a scroll list from the Matrix
	4	Page	Indicates active key assignment page
	16	Aux Input Level	Aux input level adjust

FIG. 10

	20	Aux Diminished Level	Aux level reduced when communicating with Matrix
	16	Max Volume Limit	Maximum audio level limit
	14	Headset Select	Headset can be plugged into XLR or Aux connector
	11	XLR Headset	Headset active on XLR
	11	AUX Headset	Headset active on Aux (Aux input disabled)
	8	Mic Gain	Microphone preamp gain
	14	Sidetone Level	Headset sidetone level
	14	Mic Noise Gate	Mute mic below this threshold level
	10	Hot Mic On	Mic always on (even if no talk / listen active)
	11	Hot Mic Off	Mic is on when 1 or more talk switches are active
	17	Button Brightness	Talk / Listen LED intensity

FIG. 11

	20	Front LCD Brightness	Front panel backlight adjust
	18	Top LCD Brightness	Top panel backlight adjust
	17	Front LCD Timeout	Front panel display timeout
	11	Low Battery	Low battery alert at 10%
	12	Call Waiting	Alert tone when call comes in on CWW
	17	DECT Disconnected	Alert tone when DECT RF connection is lost
	19	Matrix Disconnected	Alert tone when Matrix connection is lost
	20	Dark Mode Boot Alert	Power on / off tone when running in dark mode
	9	Key Click	Key click sound in headset
	11	Alert Level	Level setting for all alert tones
	14	Assigned Alpha	Key assignment alpha for Talk Level 1

FIG. 12

	12	Apply Change	Press SET to apply change and exit
	13	Listen Button	Listen key
 Lvl 1	12	Talk Level 1	Talk level 1
 Lvl 2	12	Talk Level 2	Talk level 2
 +AF	11	Auto Follow	Listen key = Talk key
 +AL	11	Auto Listen	Listen key =Talk key and activates with Talk key
 +AM	9	Auto Mute	Listen key = Talk key and mutes when Talk active
 +AR	15	Auto Reciprocal	Listen key = Talk key and listen is always on
 +AT	10	Auto Table	Reserve listen key name for use with IFB Talk key
 AC	17	All-Call (Talk 1)	Activates talk paths for all talk keys to the left
 DIM	12	DIM (Talk 2)	Used with interpanel DIM tables

FIG. 13

	9	Page 1..4	Active Setup Page
	12	System Setup	Register a beltpack with a DECT access point.
	12	Set Language	Language for help screens
	11	Site Survey	Screen to assist with system planning
	11	Diagnostics	Screen to troubleshoot RF issues.
	19	USB Software Update	Software Update
	19	Matrix Disconnected	Matrix connection is down
	30	Press SET to Register Beltpack	Begins DECT AP/BP registration process
	9	DECT Scan	Waiting for DECT registration

FIG. 14