

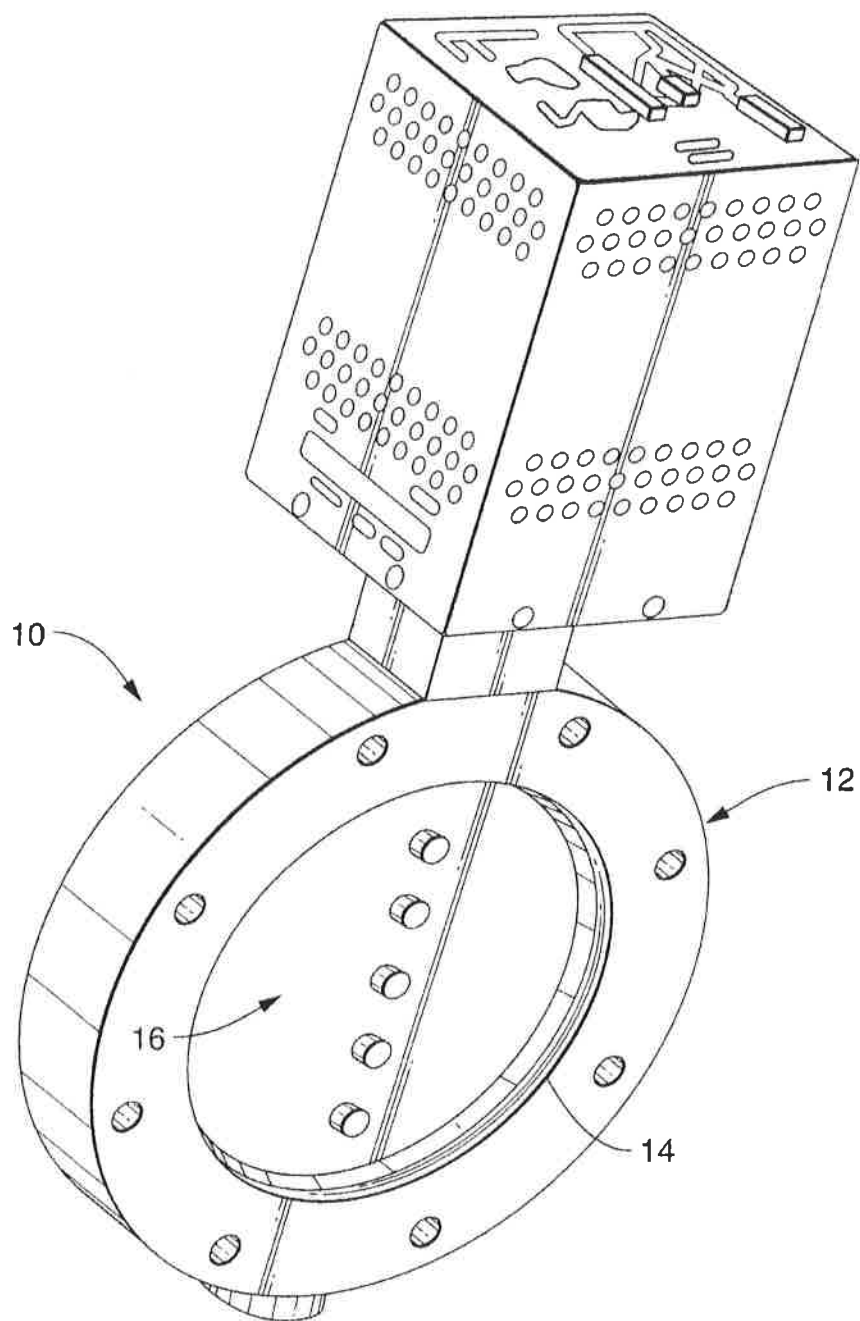


FIG. 1

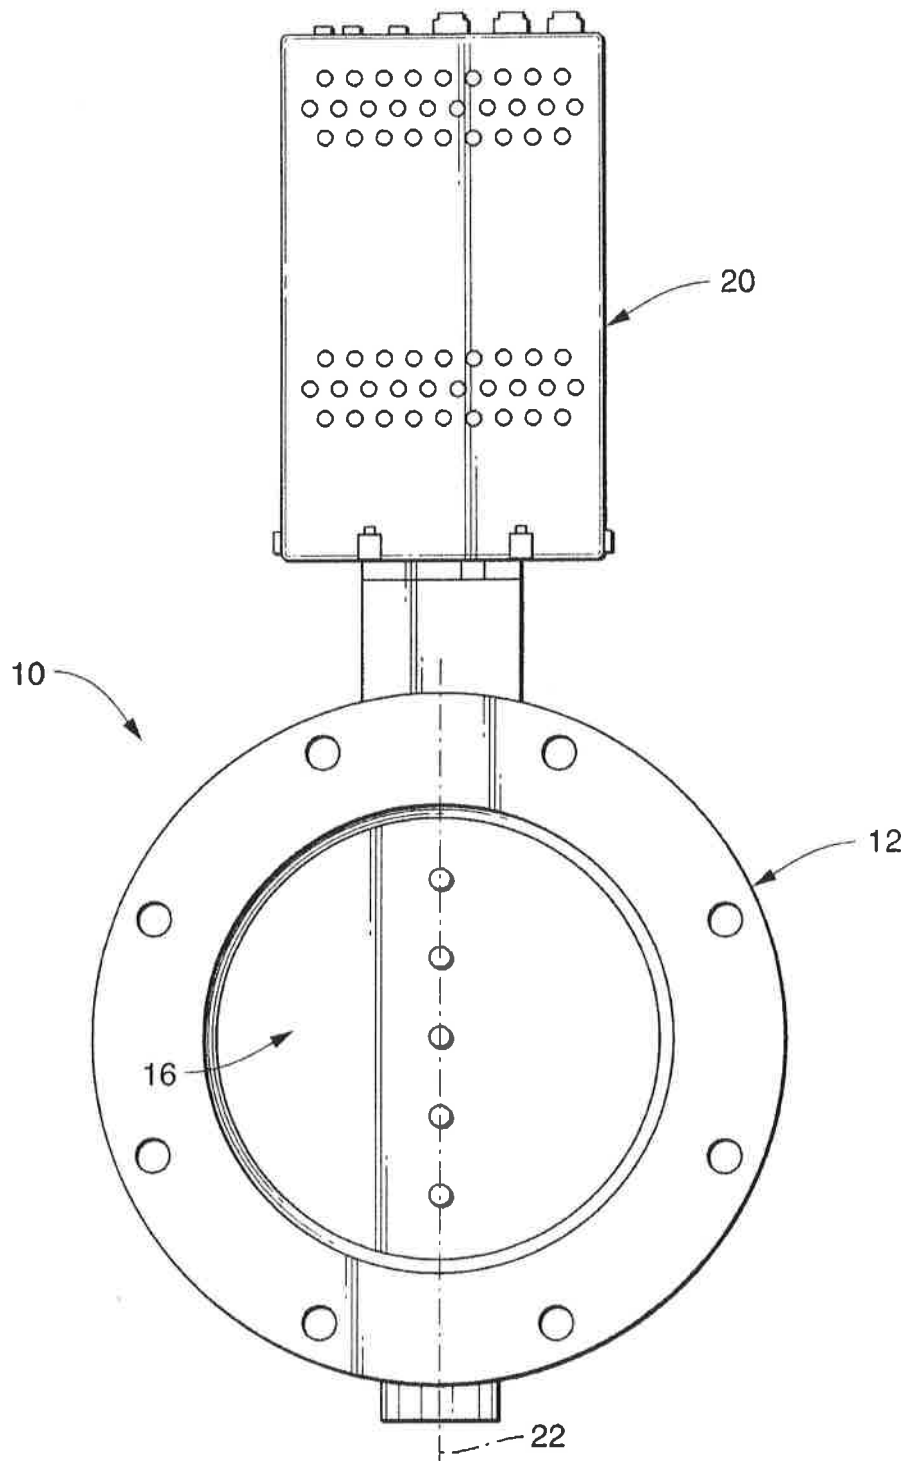


FIG. 2

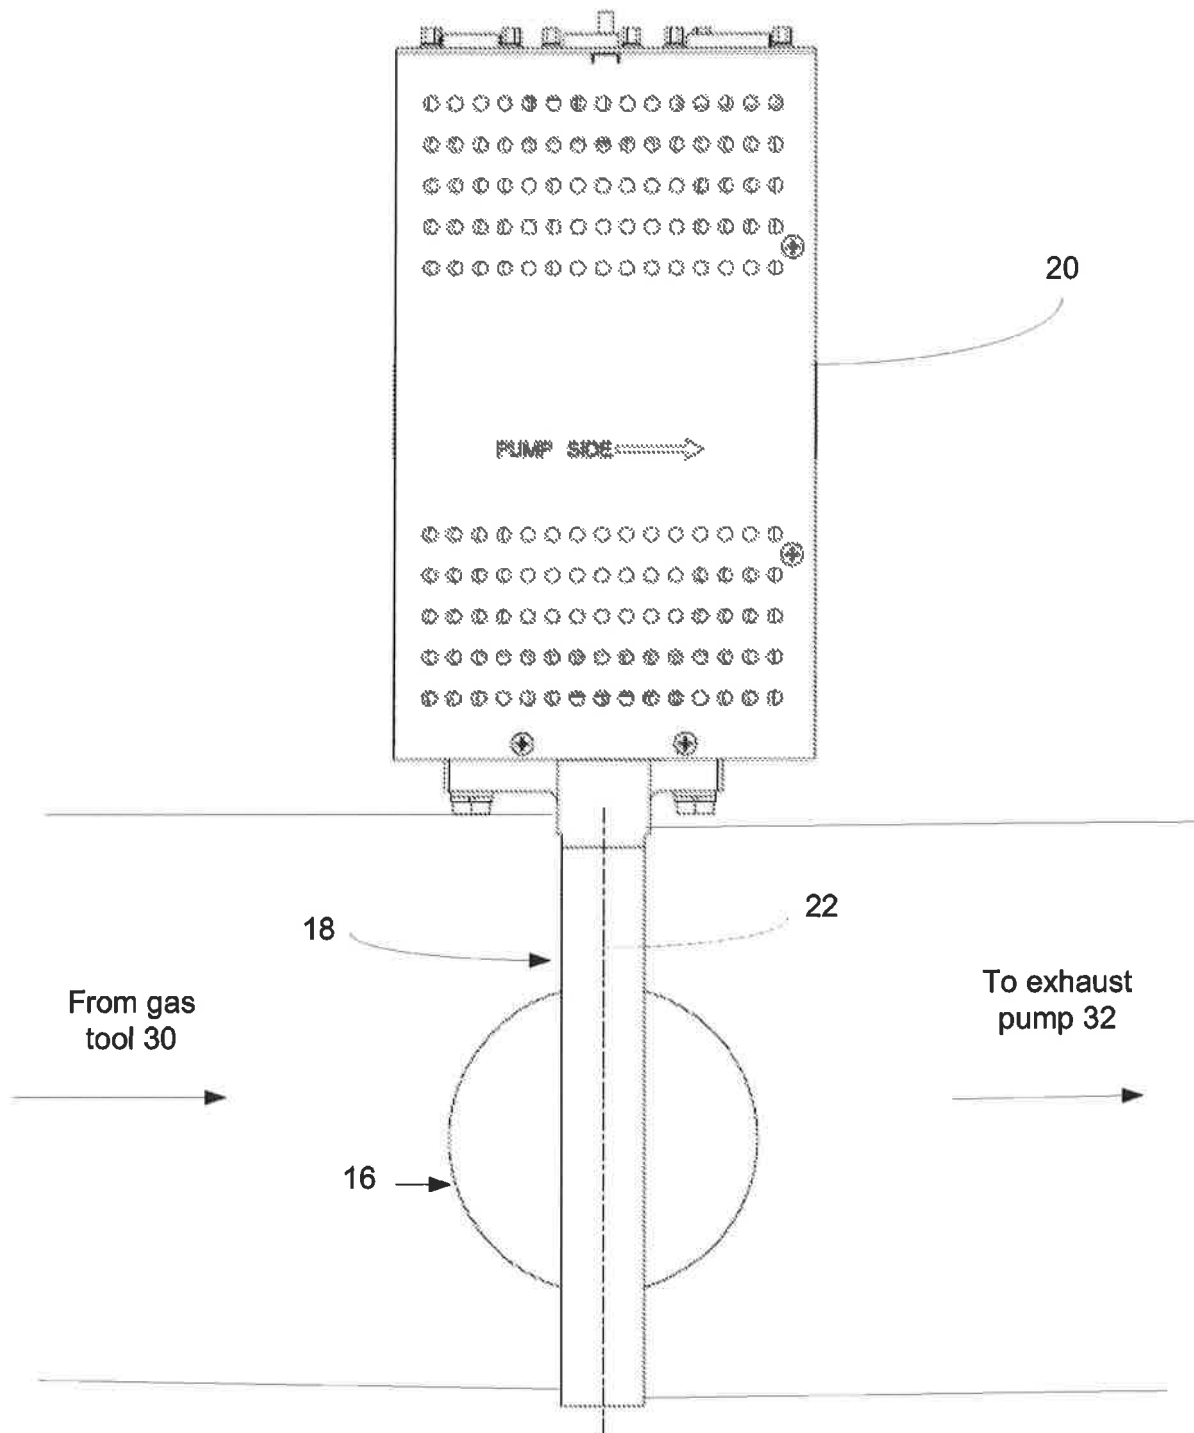


Fig. 3

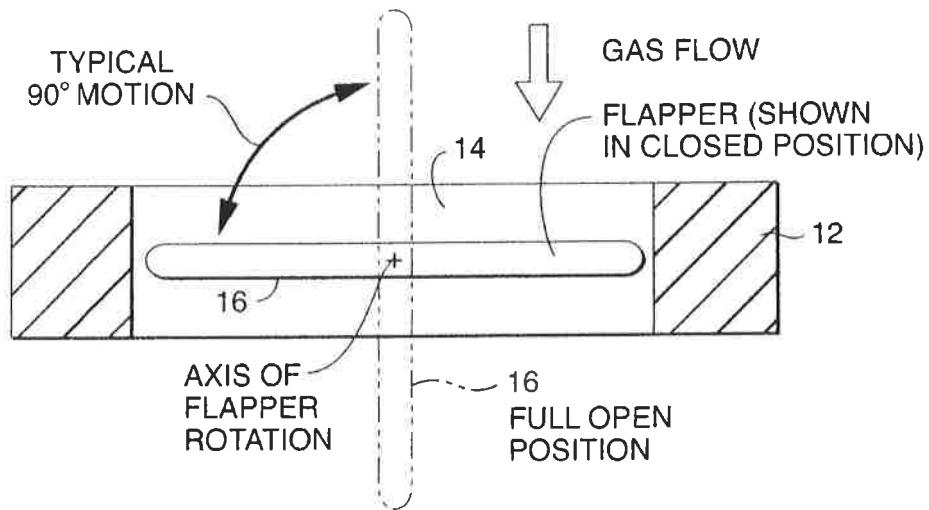


FIG. 4

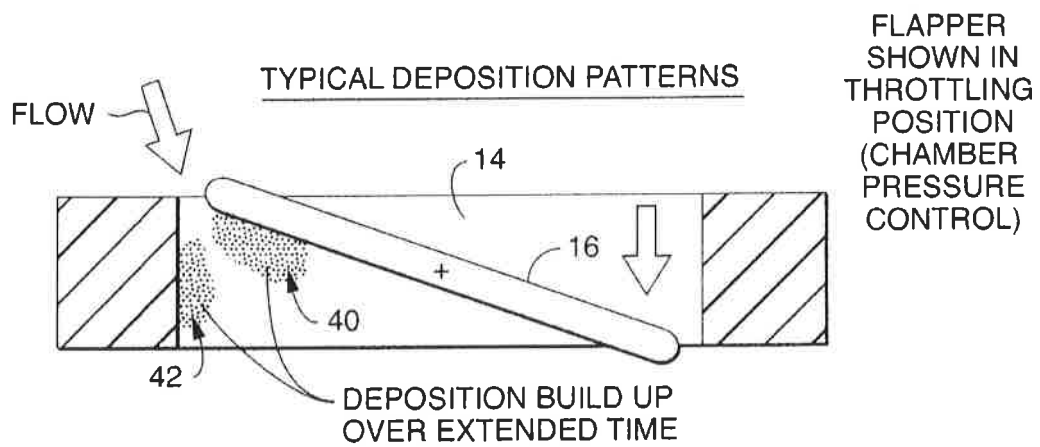


FIG. 5

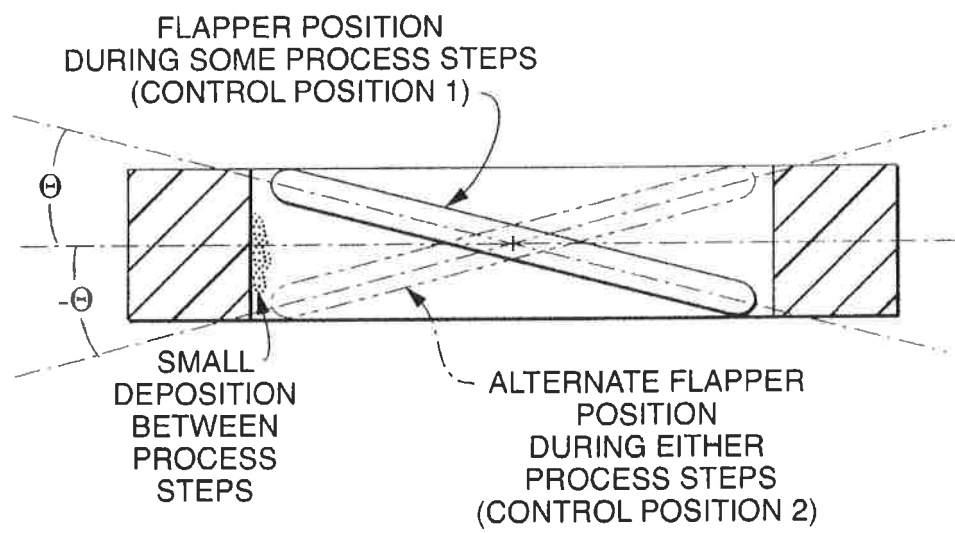


FIG. 6

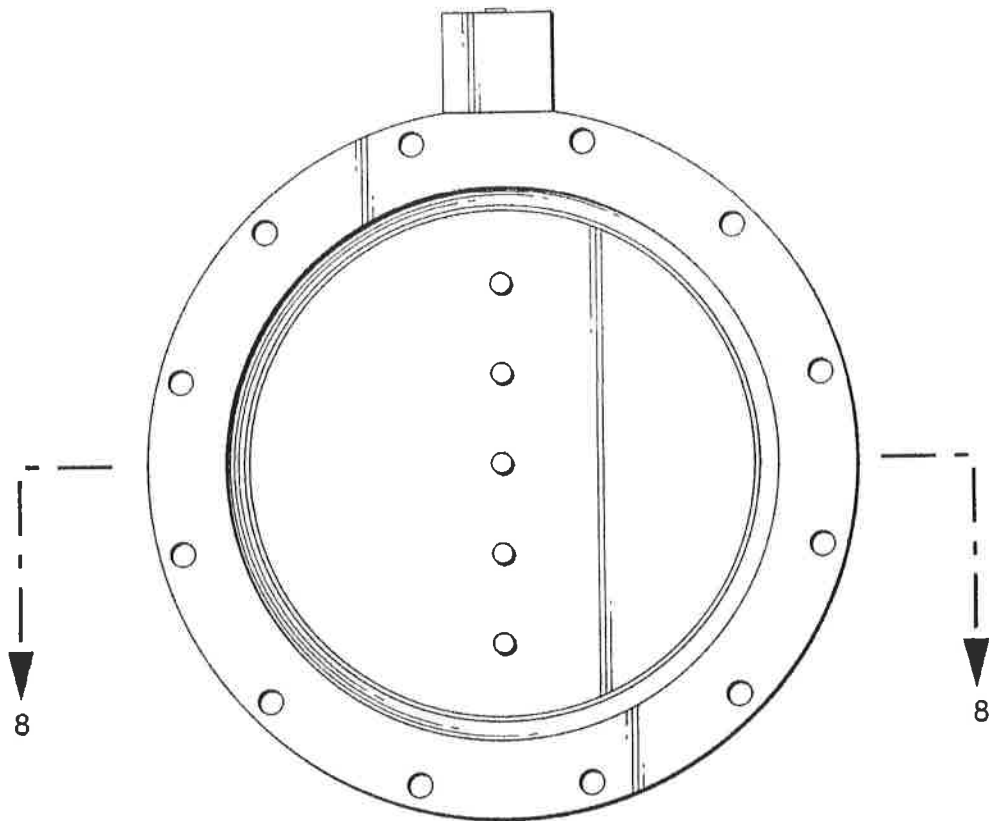


FIG. 7

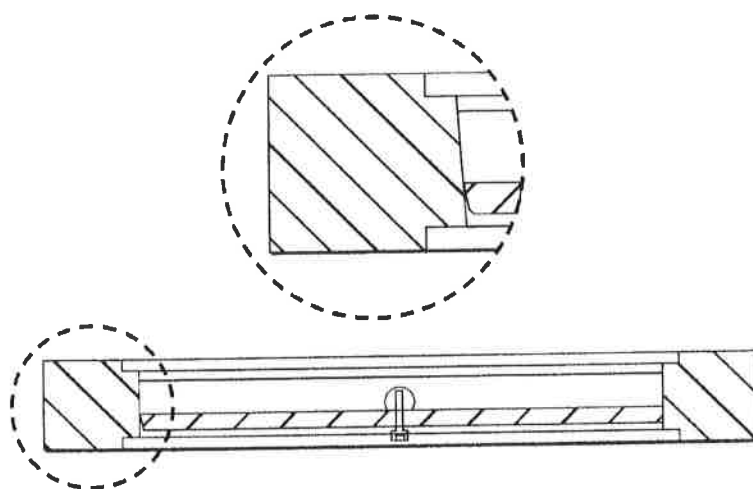


FIG. 8

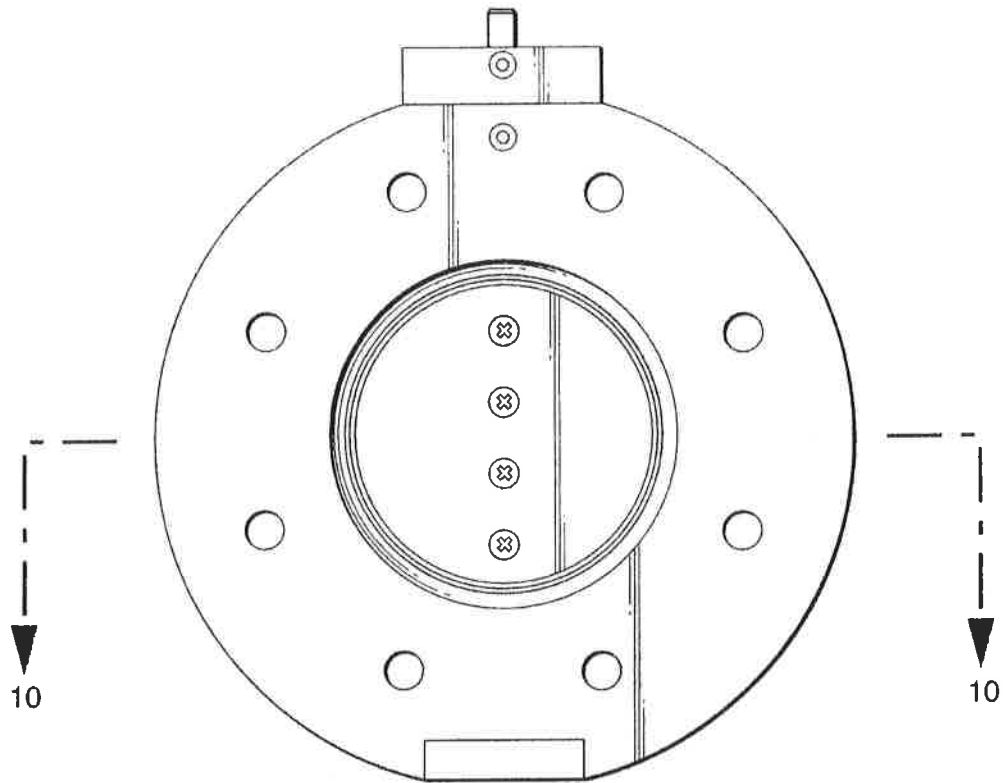


FIG. 9

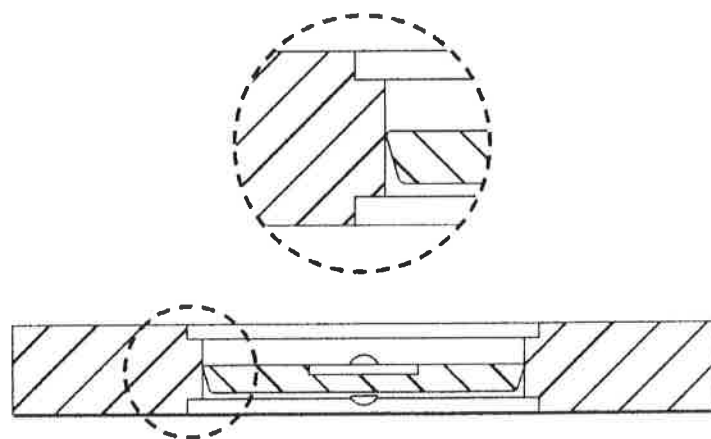


FIG. 10

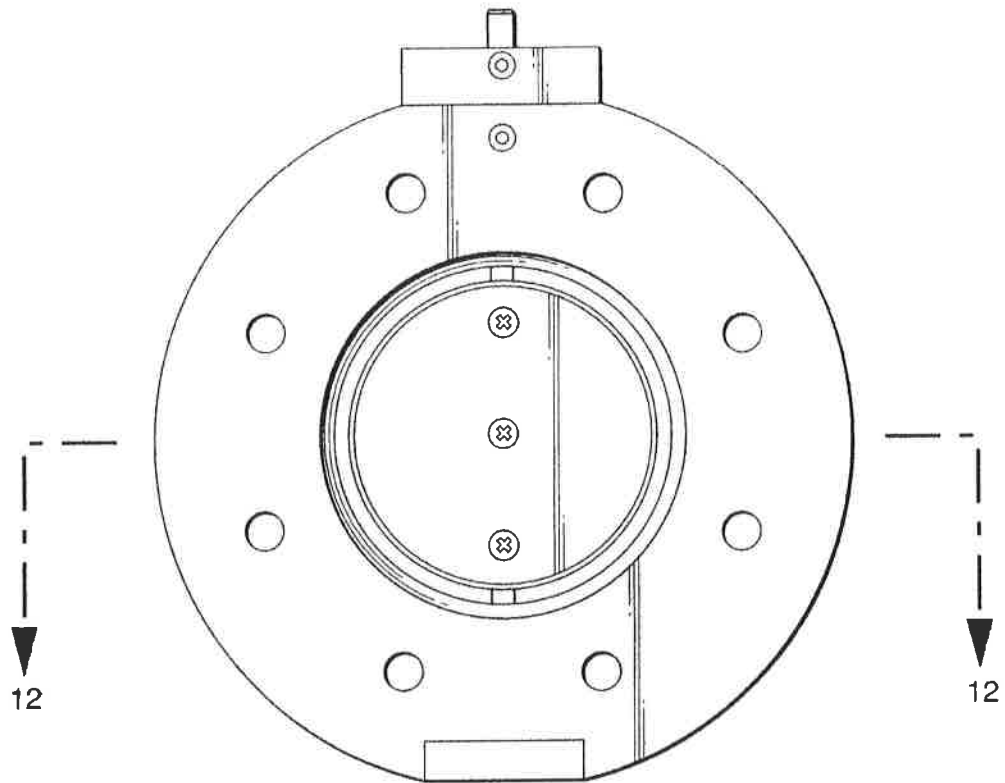


FIG. 11

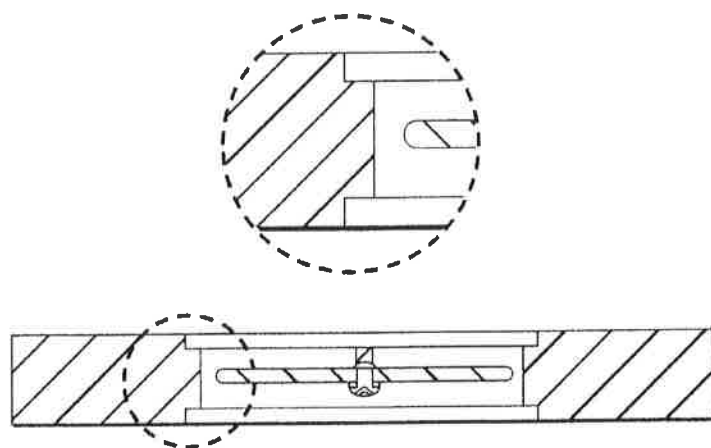


FIG. 12

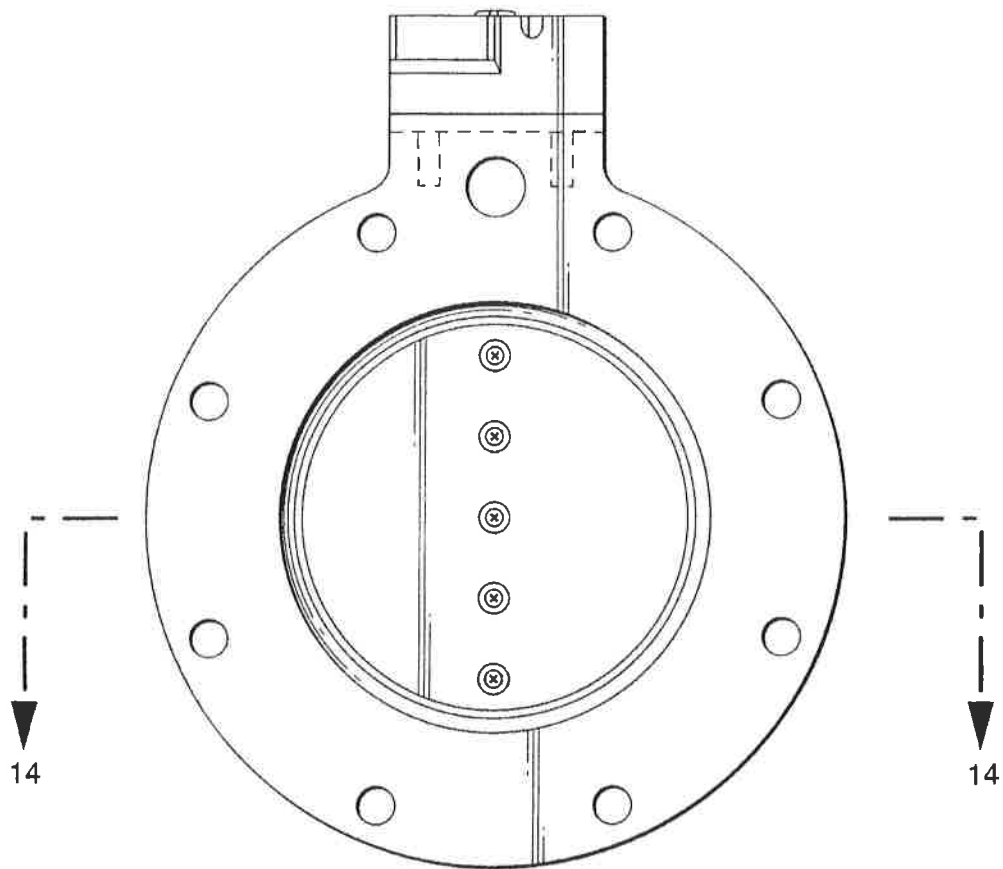


FIG. 13

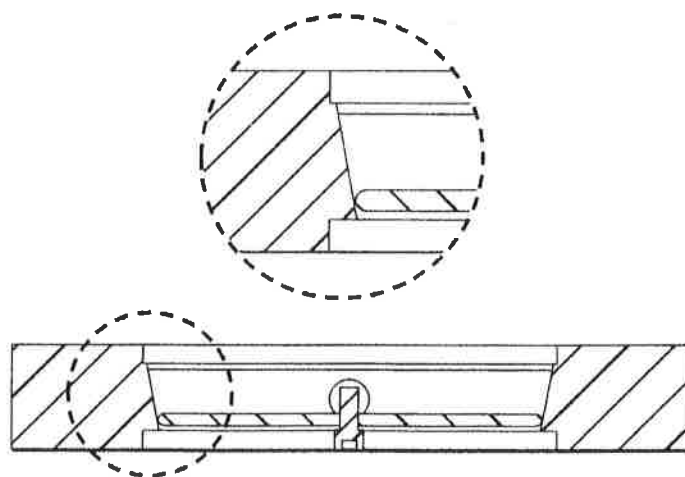


FIG. 14

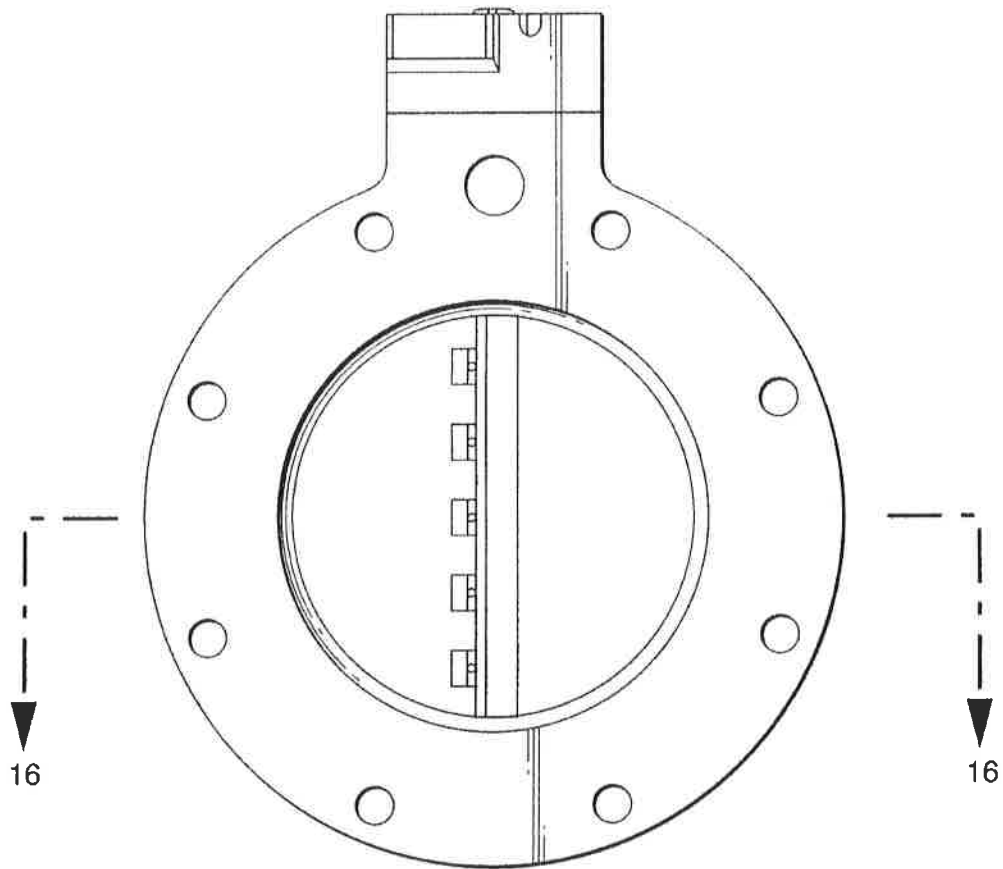


FIG. 15

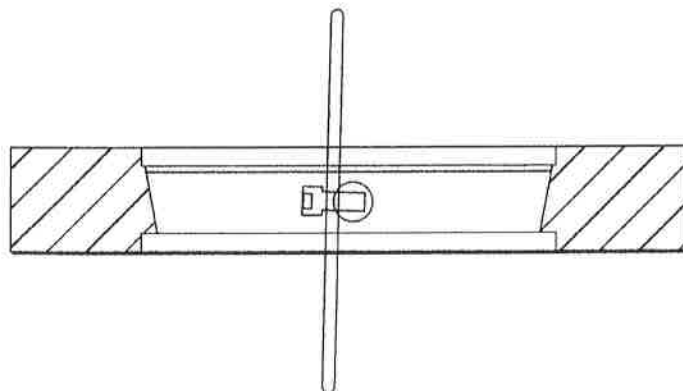
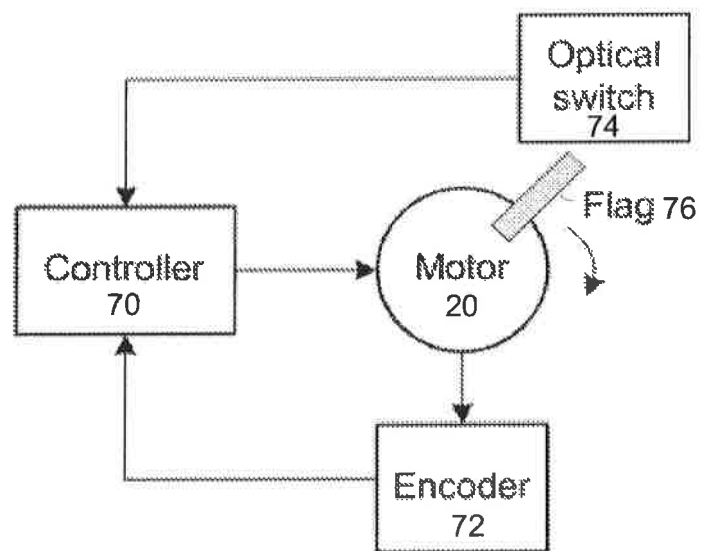


FIG. 16

**Fig. 17**


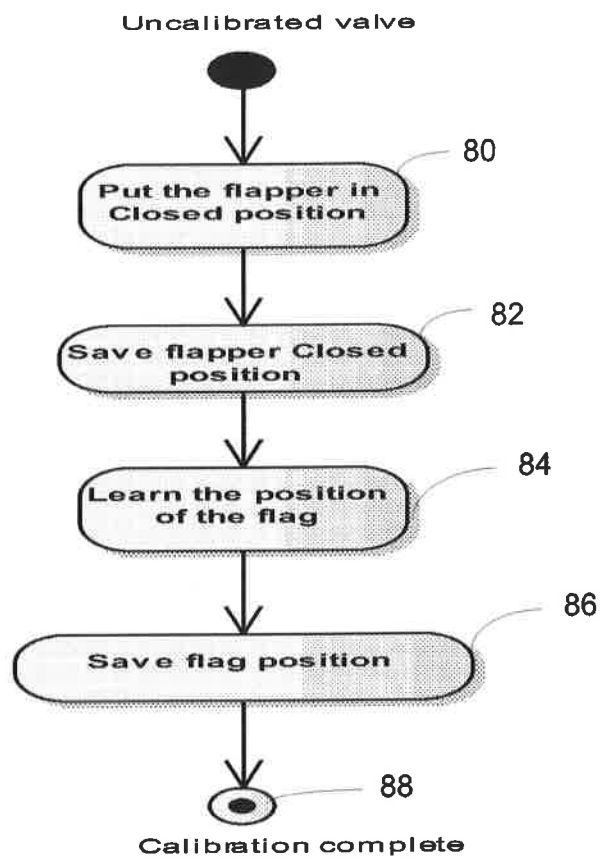


Fig. 18

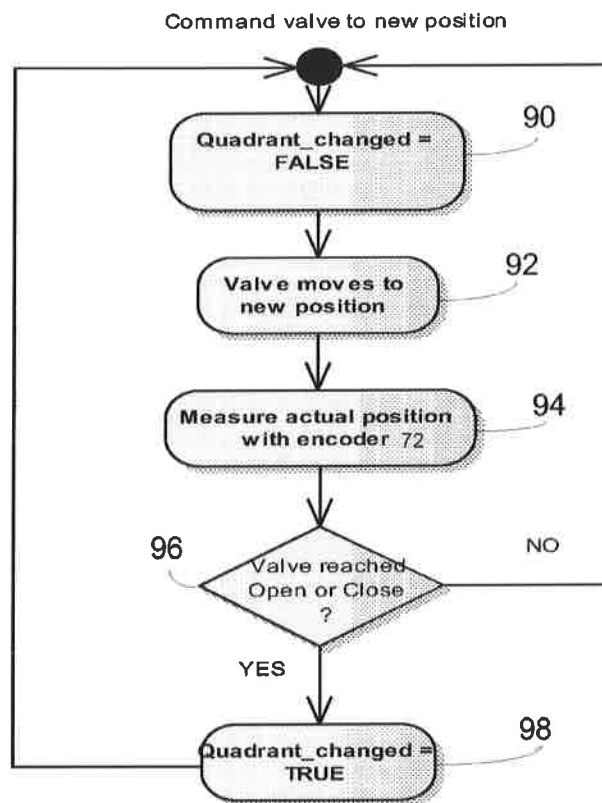

When Quadrant_changed is TRUE, the valve will switch to the other control quadrant.

Fig. 19

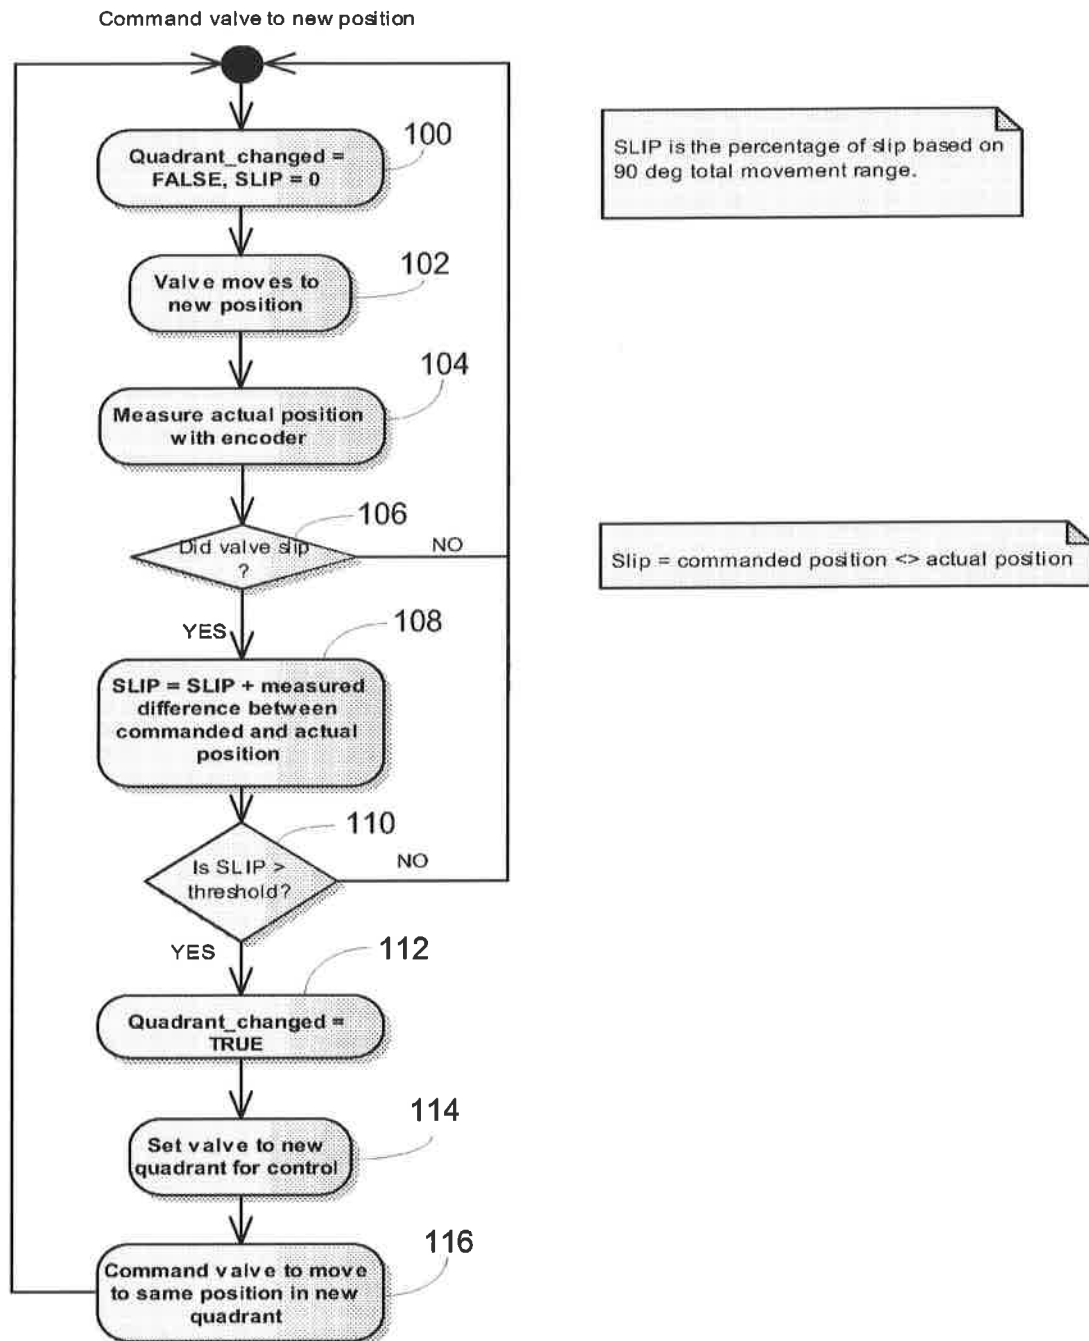


Fig. 20

COMMAND VALVE TO NEW POSITION

