

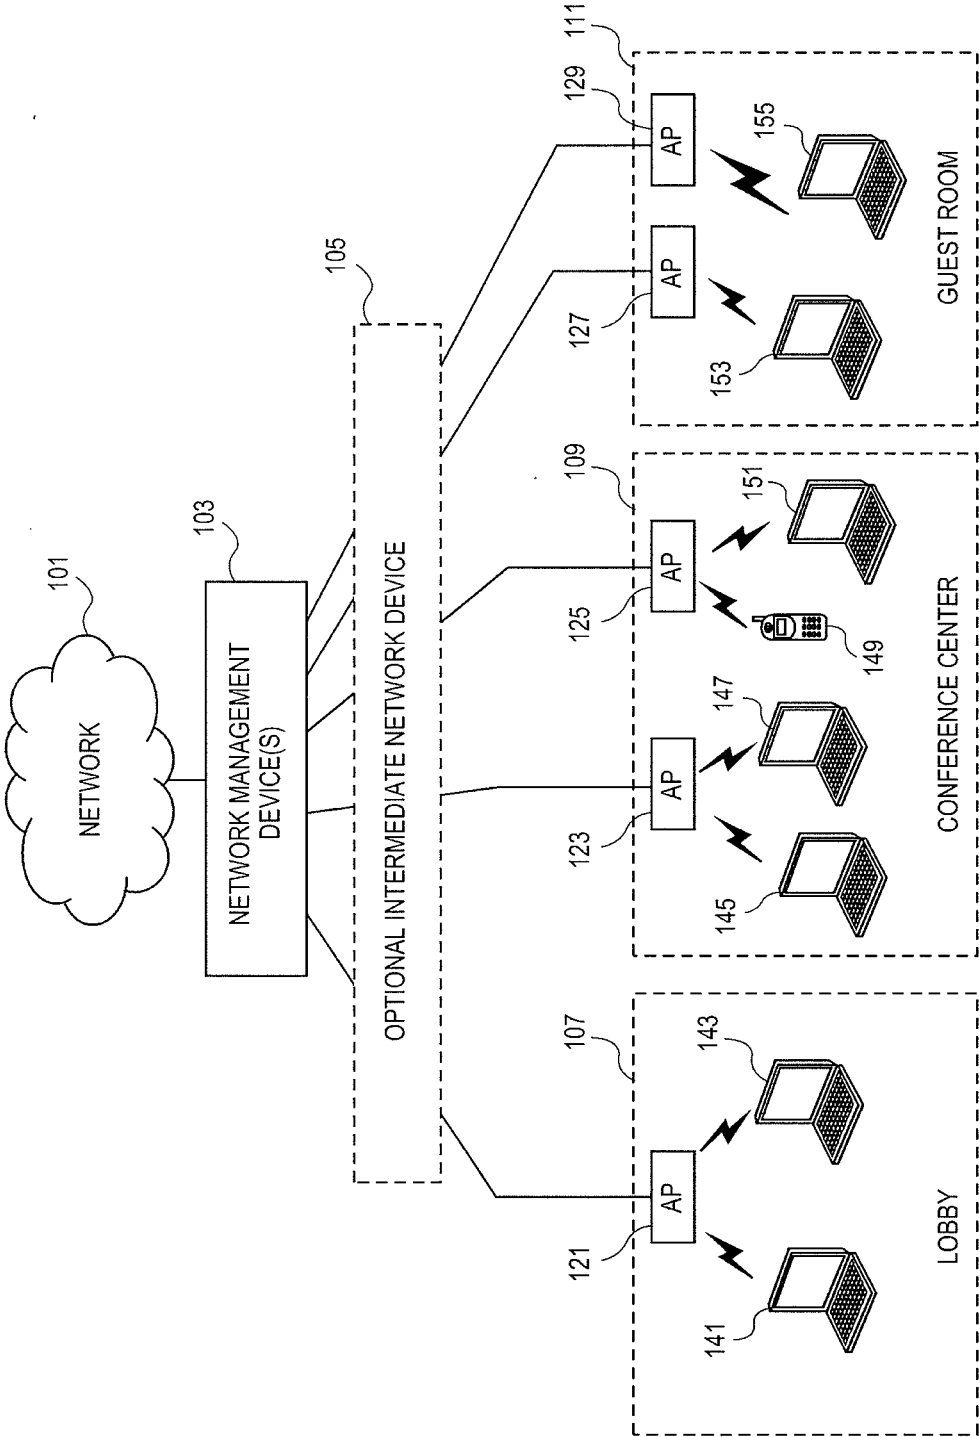


FIG. 1

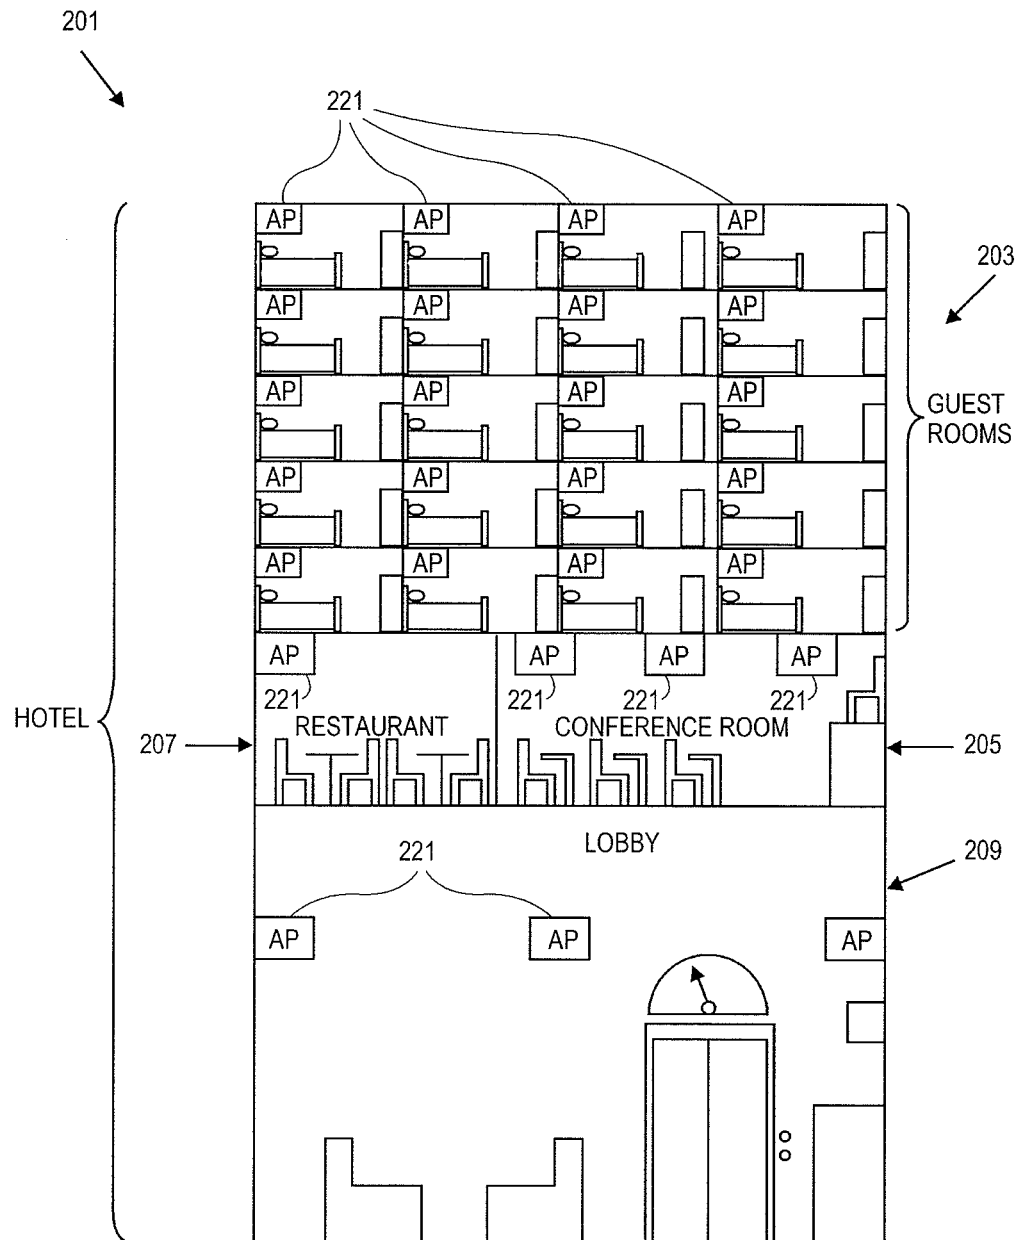


FIG. 2

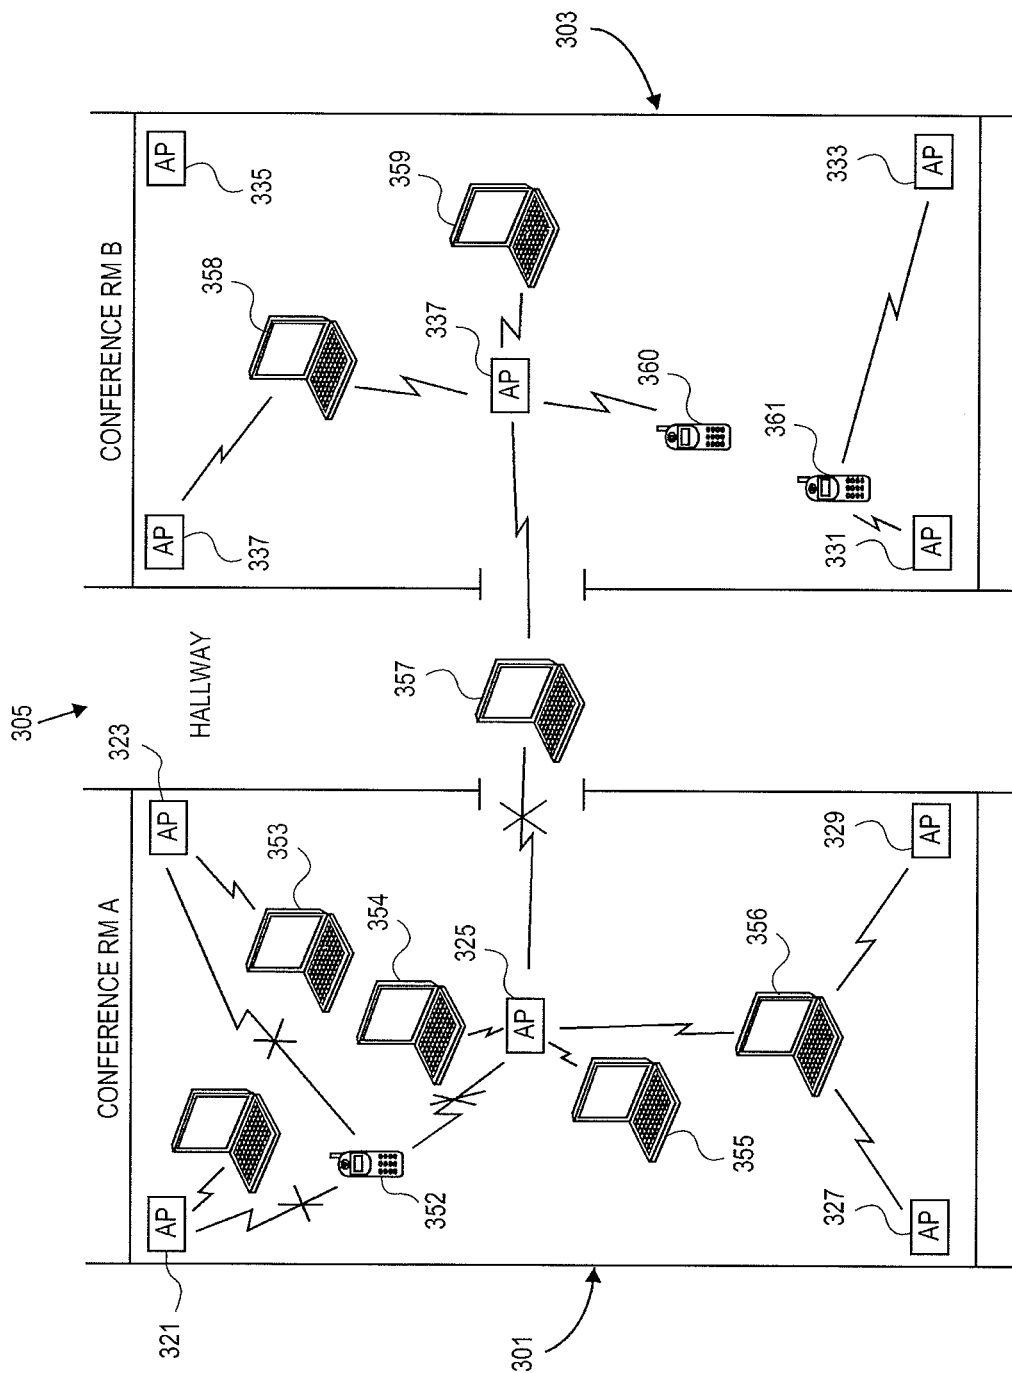


FIG. 3

Zone Migration Settings

Relogin after migration ☒ Enable

Submit

Zone-Based Migration

Add a new Zone:

Zone Name:

Port-Locations:

(Example: 212-299,301,400-499)

Description:

Relogin within Zone: ☒ Disabled ☐ Enabled

Add Zone


Reset

Existing Zones:

Zone Name	Port-Locations	Relogin within Zone	Actions
Guest Wired	201-700	Enabled	Edit Delete
Guest Wireless	801-1500	Disabled	Edit Delete
Lobby	100-150	Disabled	Edit Delete
Meeting Room A	1601-1700	Disabled	Edit Delete

4 Zones are defined

FIG. 4

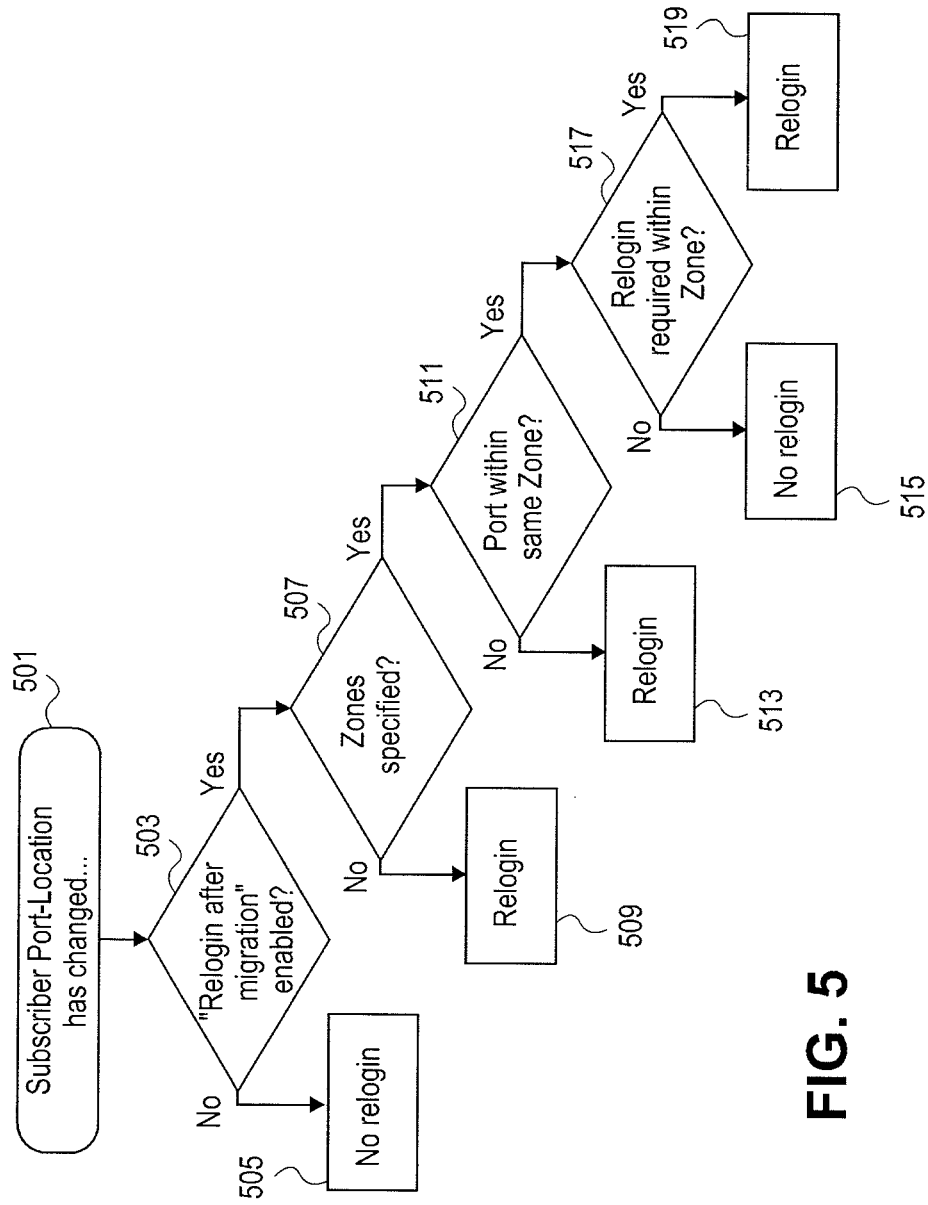**FIG. 5**

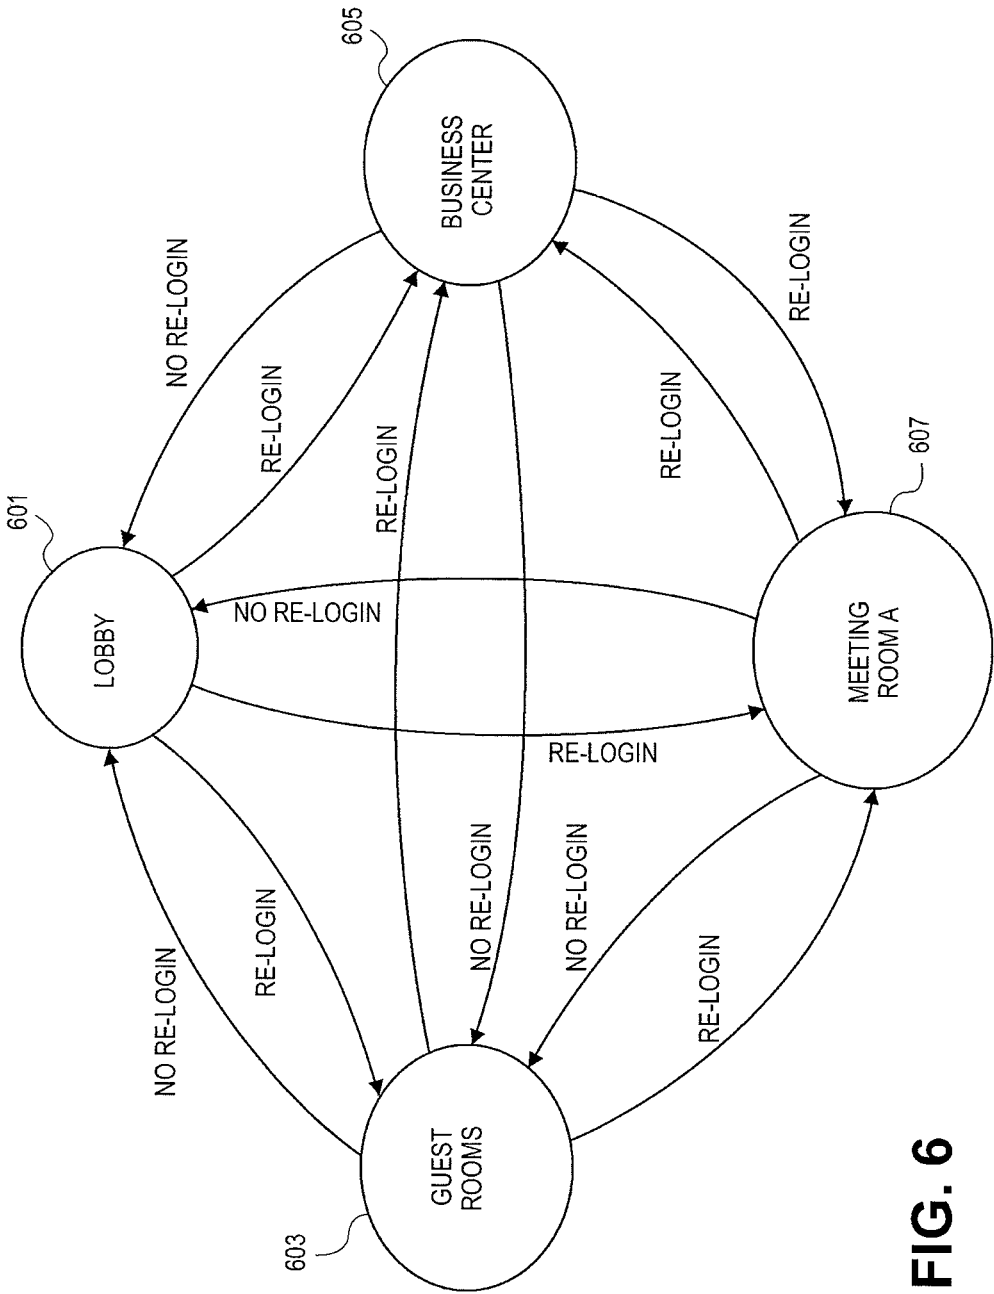


FIG. 6

