

FIG. 1

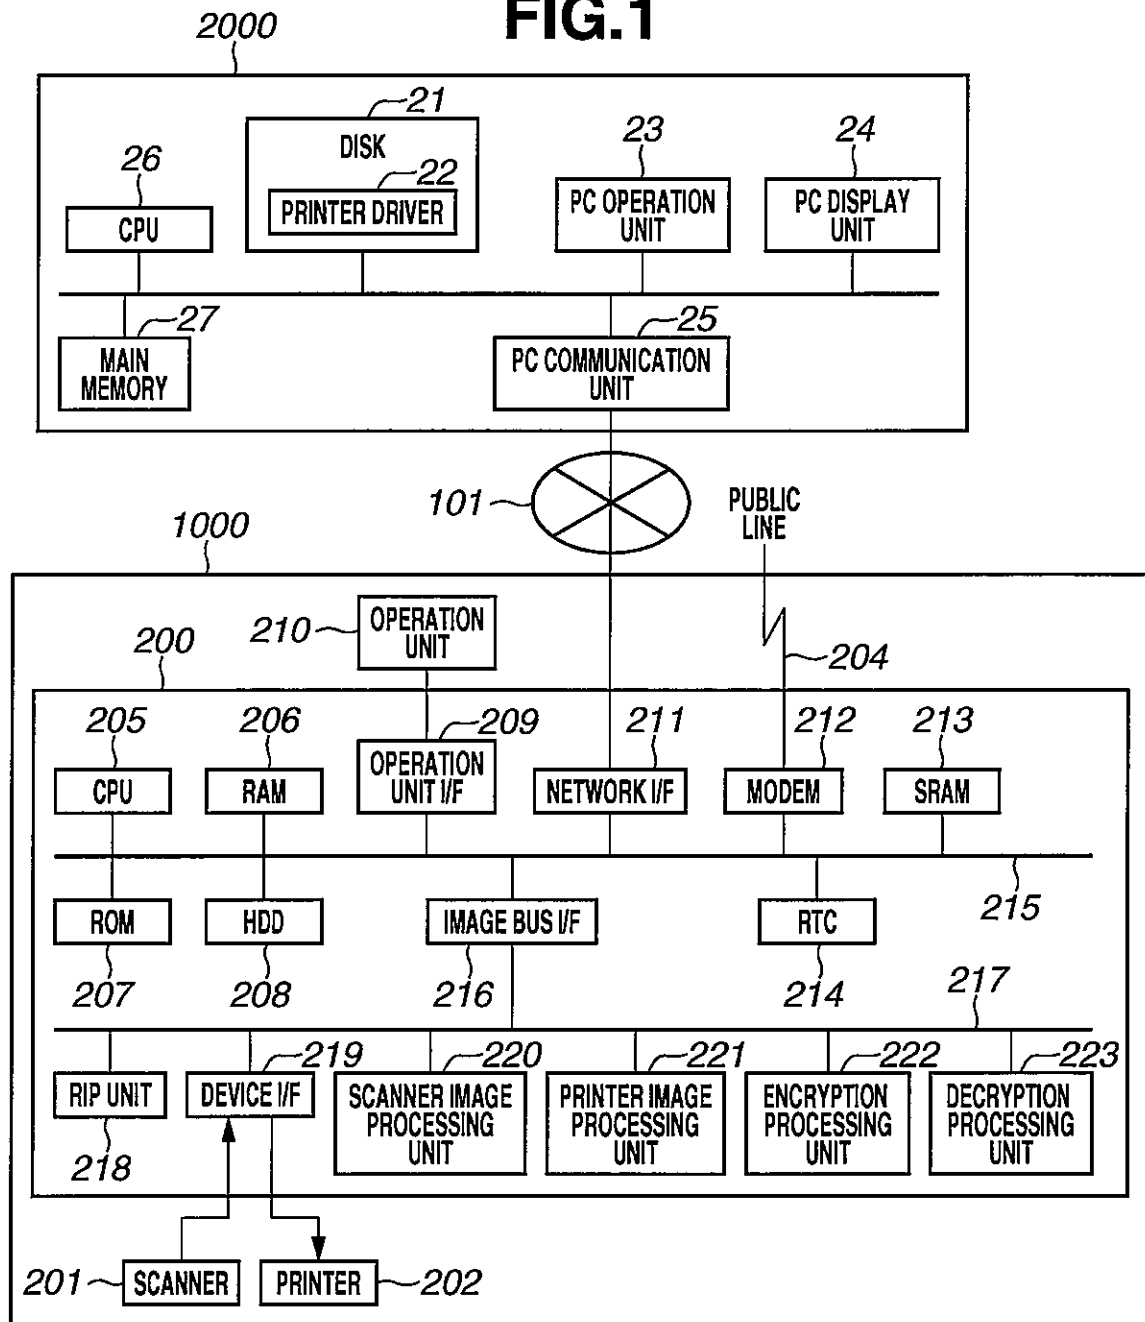


FIG.2

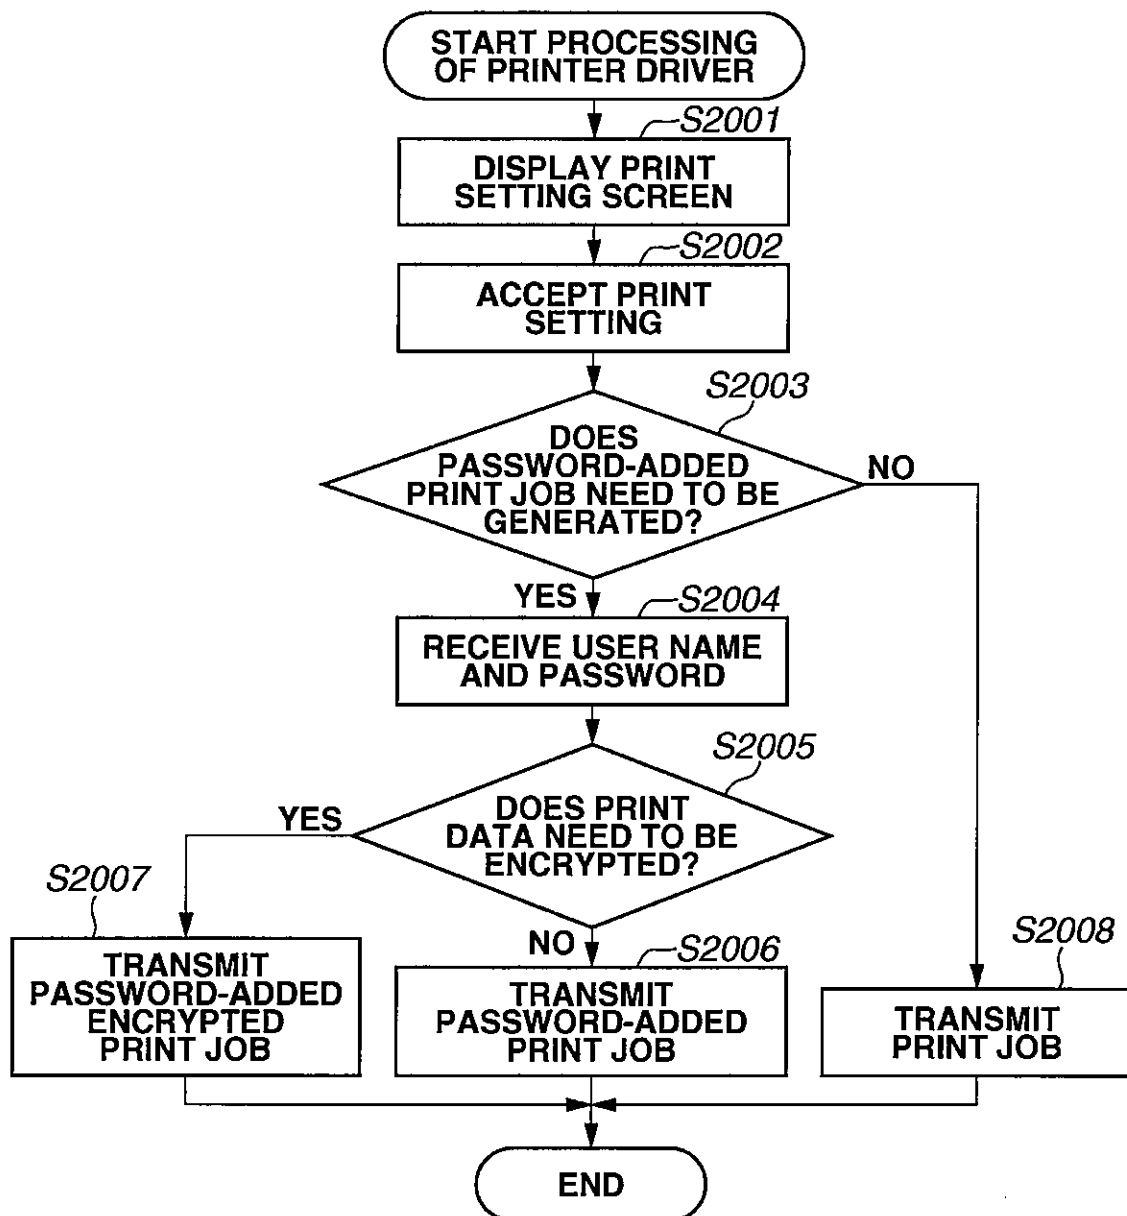


FIG.3A

0301

PRINT SETTING SCREEN

PAPER SIZE: A4
NUMBER OF COPIES: 1
STAMP: NONE

0302 ☒ PASSWORD-ADDED PRINT JOB

0303 ☐ ENCRYPT DATA

OK

0304

CANCEL

0305

FIG.3B

0321

USER NAME AND JOB PASSWORD ENTRY SCREEN

USER NAME

USER A

0322

JOB PASSWORD

0323

OK

0324

CANCEL

0325

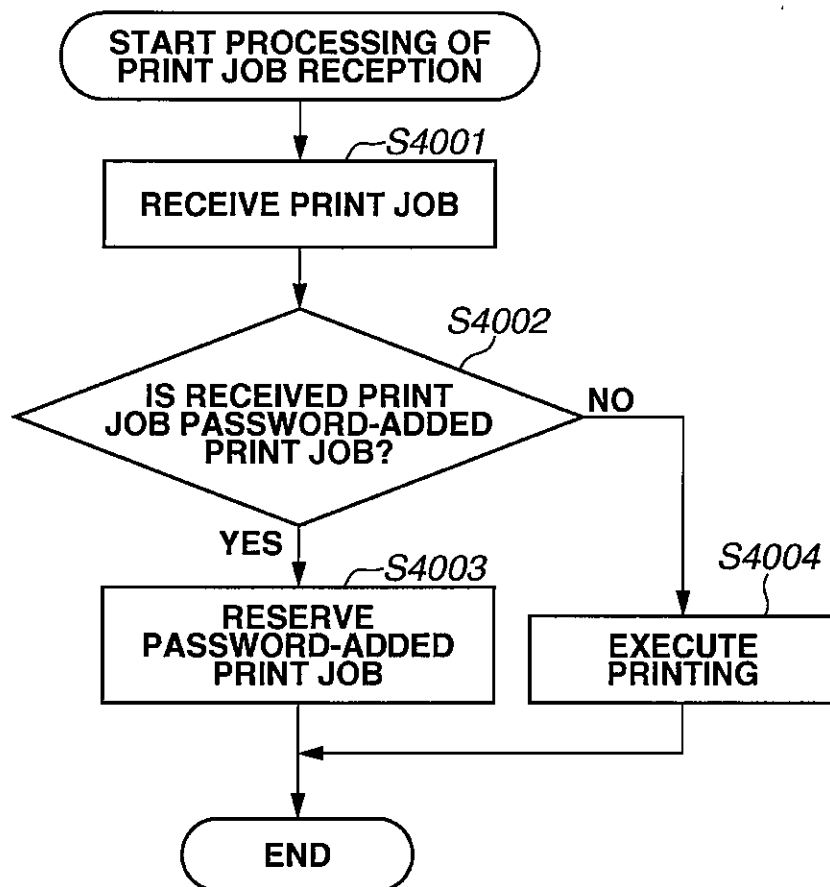
FIG.4

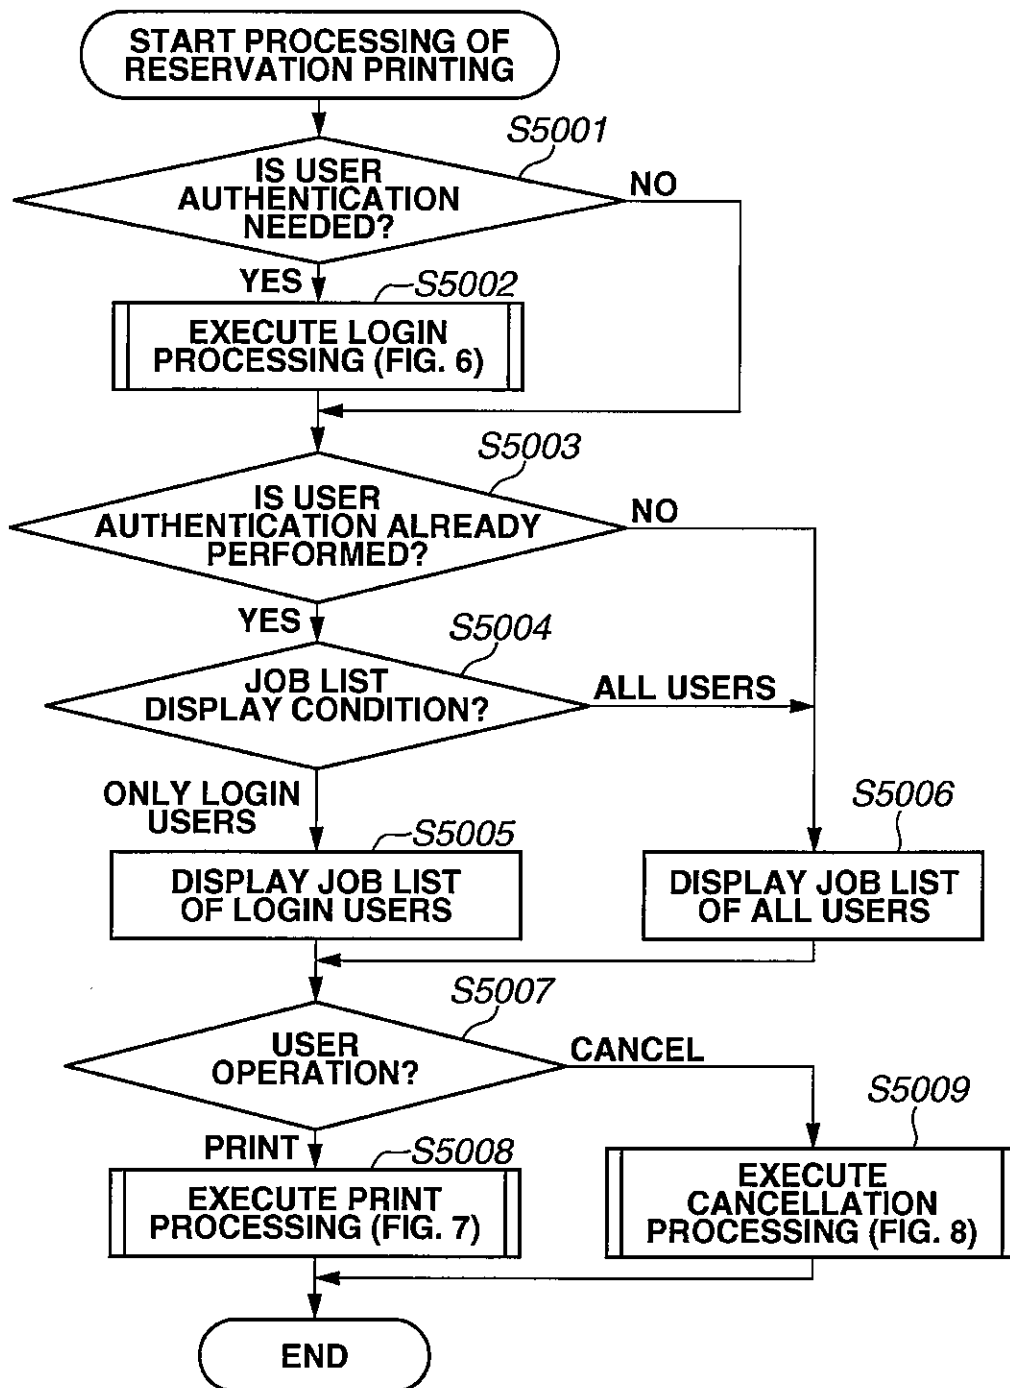
FIG.5

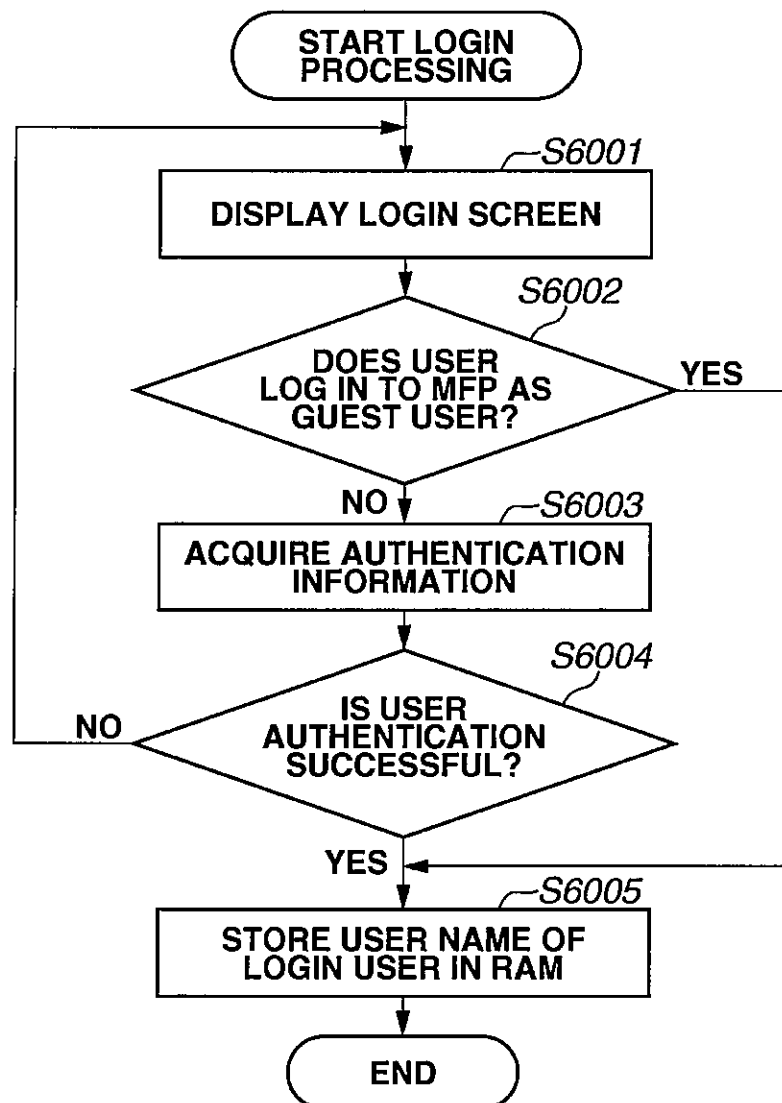
FIG.6

FIG.7

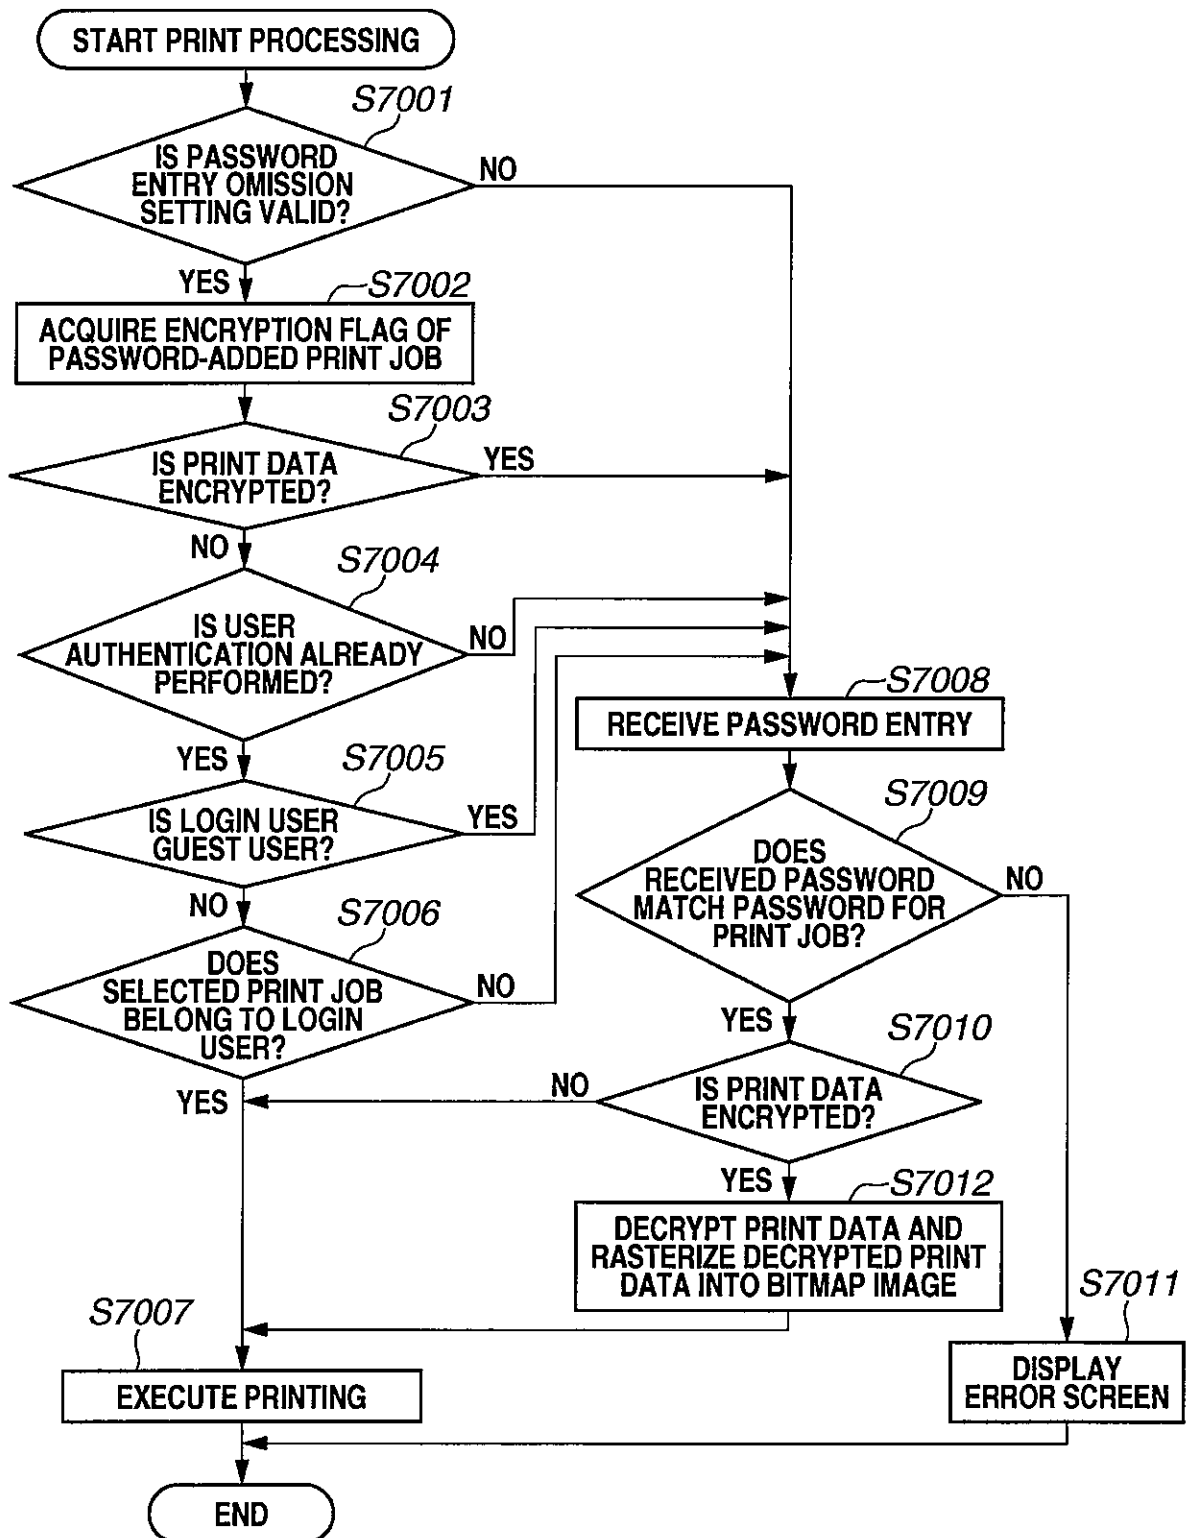


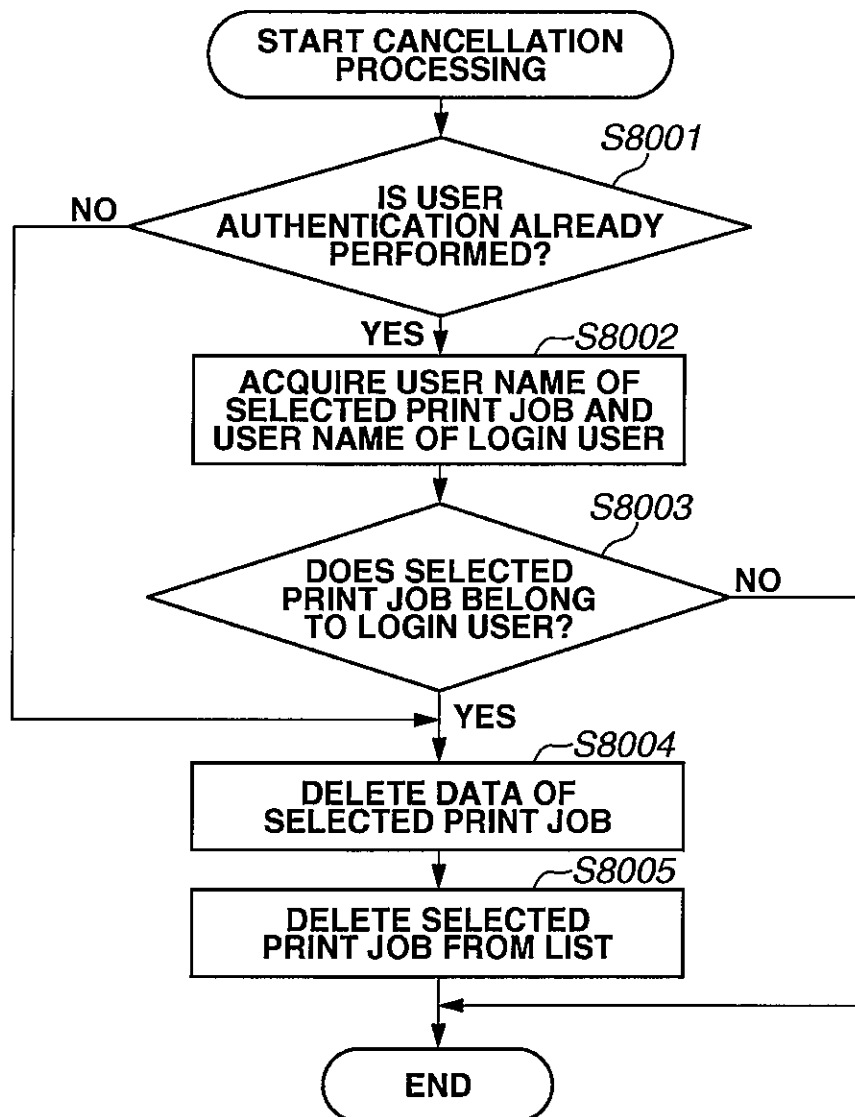
FIG.8

FIG.9

9001

9005

9002

SELECT	RECEPTION NUMBER	TIME	JOB NAME	USER NAME	STATUS
☒	0001	16:10	Document1	User1	WAITING FOR PASSWORD ENTRY
☐	0002	16:20	Document2	User1	WAITING FOR PASSWORD ENTRY
☐	0003	16:30	Document3	User1	WAITING FOR PASSWORD ENTRY
☐	0004	16:40	Document4	User1	WAITING FOR PASSWORD ENTRY
☐	0005	16:50	Document5	User1	WAITING FOR PASSWORD ENTRY

9006

9004

9003

CANCEL

PRINT

FIG.10

10001

PASSWORD ENTRY OMISSION SETTING

10002☒ VALID

10003☐ INVALID

OK

CANCEL

10004

10005

FIG.11

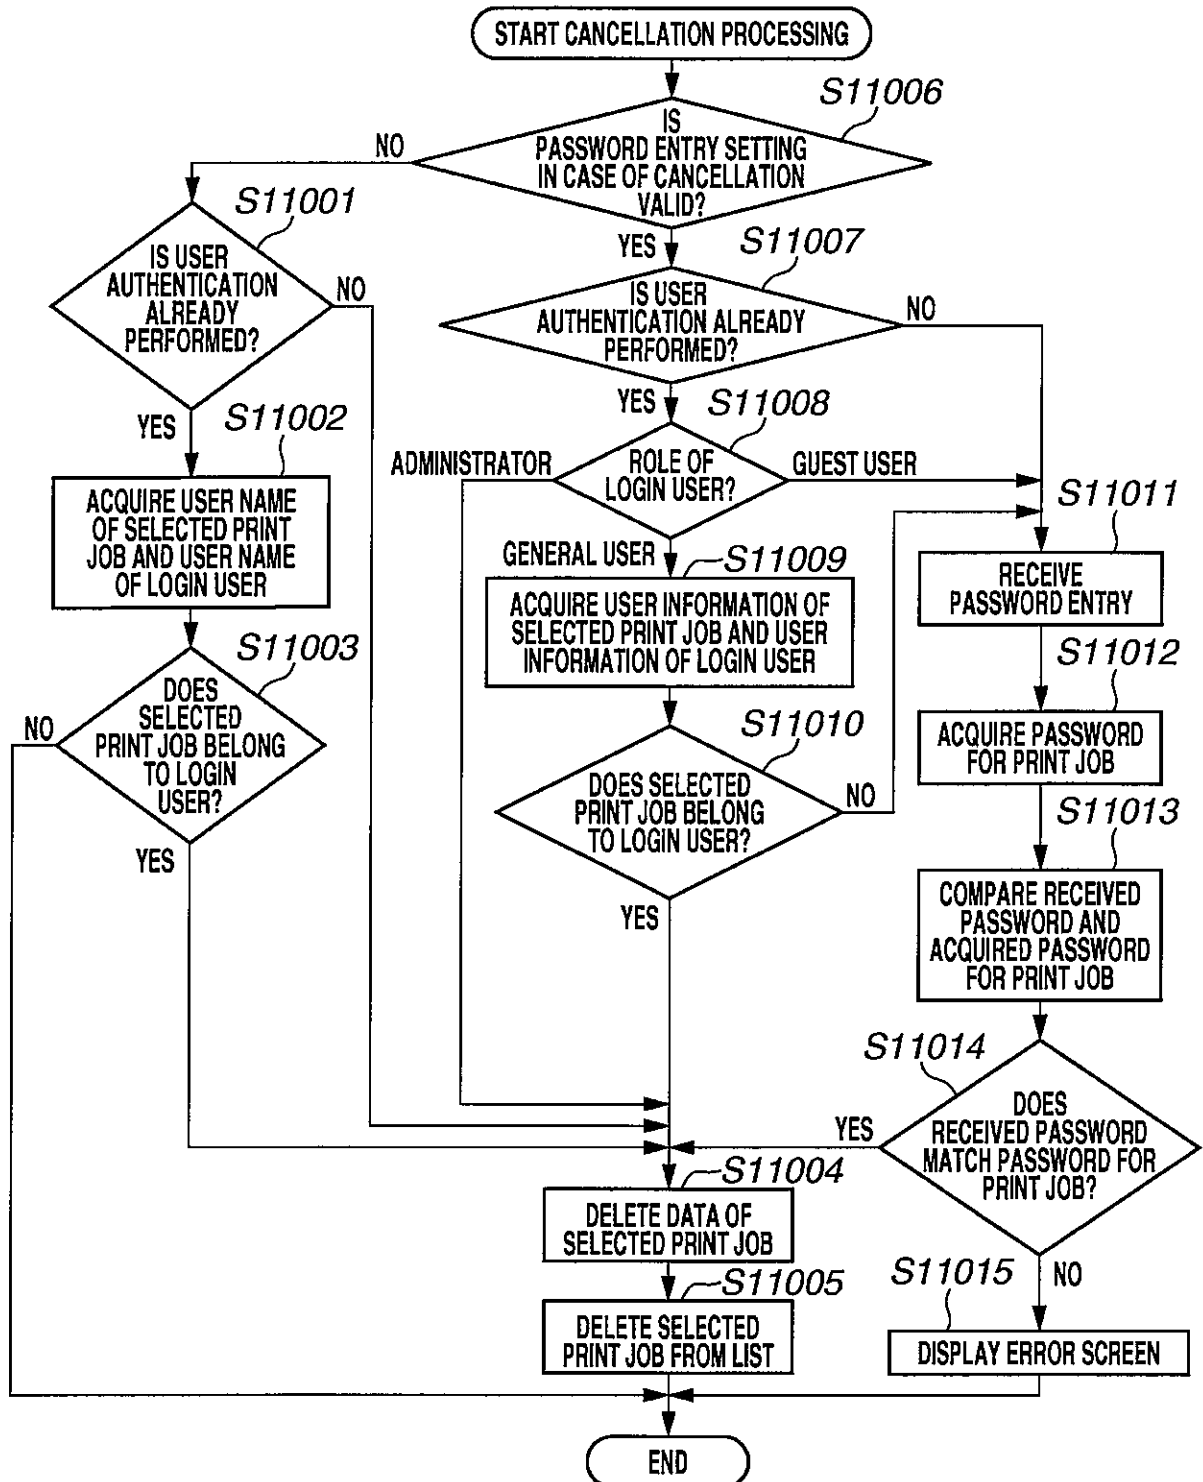


FIG.12

12001

PASSWORD ENTRY OMISSION SETTING

IN CASE OF PRINTING

12002 ☒ VALID 12003 ☐ INVALID

IN CASE OF CANCELLATION

12006 ☒ VALID 12007 ☐ INVALID

12004 12005

FIG.13

1300

PLEASE ENTER USER NAME AND PASSWORD,
AND PRESS "LOGIN" OR "Guest LOGIN".

USER NAME

1301

PASSWORD

1302

■ LOGIN DESTINATION

THIS DEVICE

1303

LOGIN

Guest FUNCTION

COPY

SECURED PRINT

1/1

◀

▶

1304

Guest LOGIN