

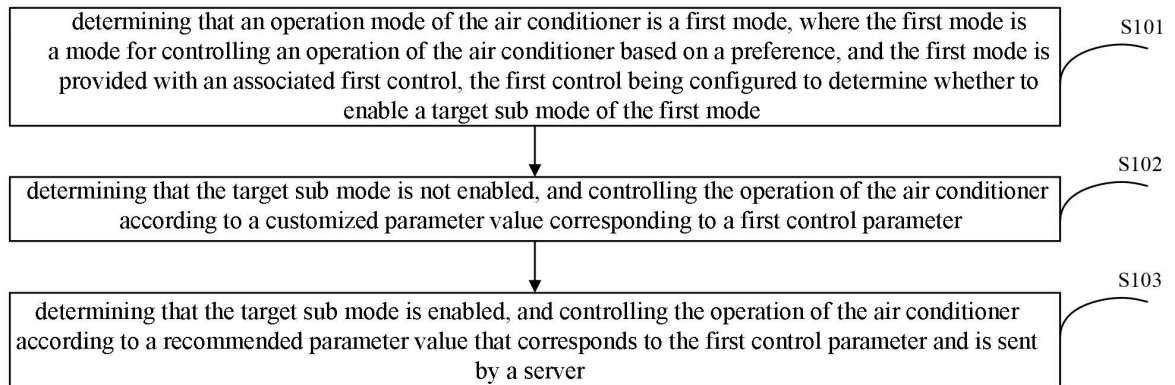


FIG.1



Preference Mode

Recommended Preferences

Automatically set the parameters for each time period based on your historical usage patterns. When not enabled, use the [Customized Preferences] mode



Mode Setting

Mode



Wind Speed Setting

Wind Speed

Auto >

Swing

Vertical Swing >

Position Setting

Upper Fixed, Left Fixed >

Wind Feel

Straight Blow >

Fresh Air

Fresh Air



Fresh Air Speed

Auto >

Temperature Range Adjustment

Temperature Curve

Swipe left and right on the screen to adjust the time interval, and swipe up and down on the temperature point to adjust the temperature


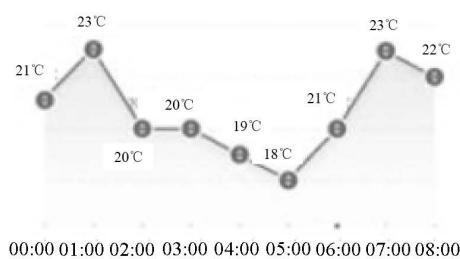


FIG.2A

← Preference Mode ✓

Preference Mode

 Dynamically adjust the settings for each time period based on historical usage patterns and parameters such as the indoor-outdoor temperature difference



NFC Tag



Mode Type Recommended Preferences >


In the [Recommended Preferences] mode, automatically set the parameters for each time period based on your historical usage patterns

Mode Cooling

Wind Speed Level 3

Temperature Curve

Dynamically calculate the temperature setting for the corresponding time point based on the indoor-outdoor temperature difference and historical usage patterns

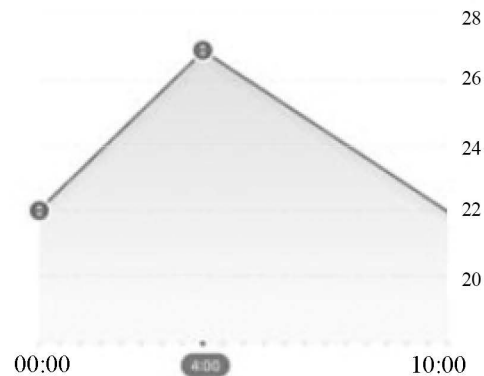

Fresh Air



Fresh Air Speed Level 2

Wind Feel Canopy Wind

FIG.2B

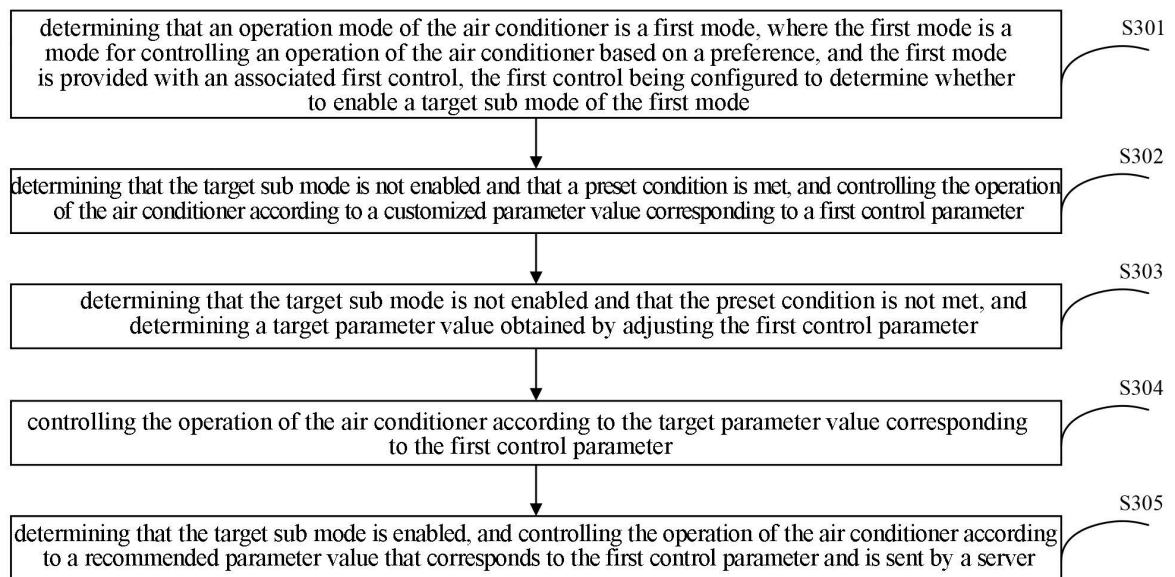


FIG.3

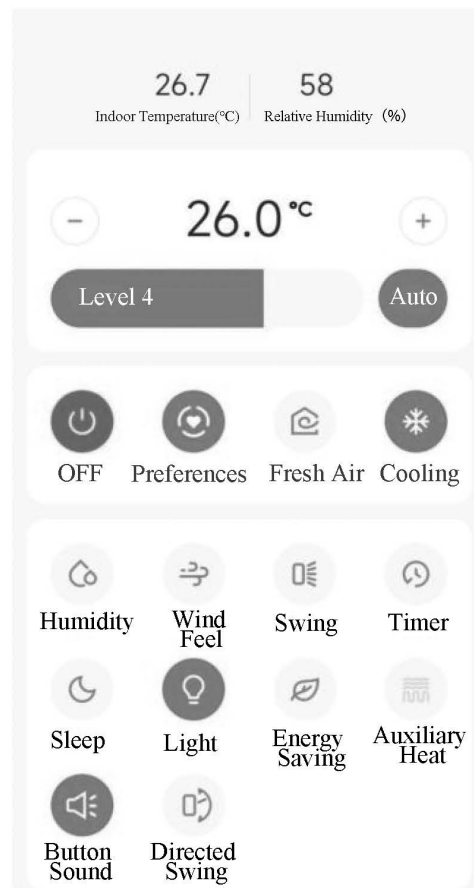


FIG.4

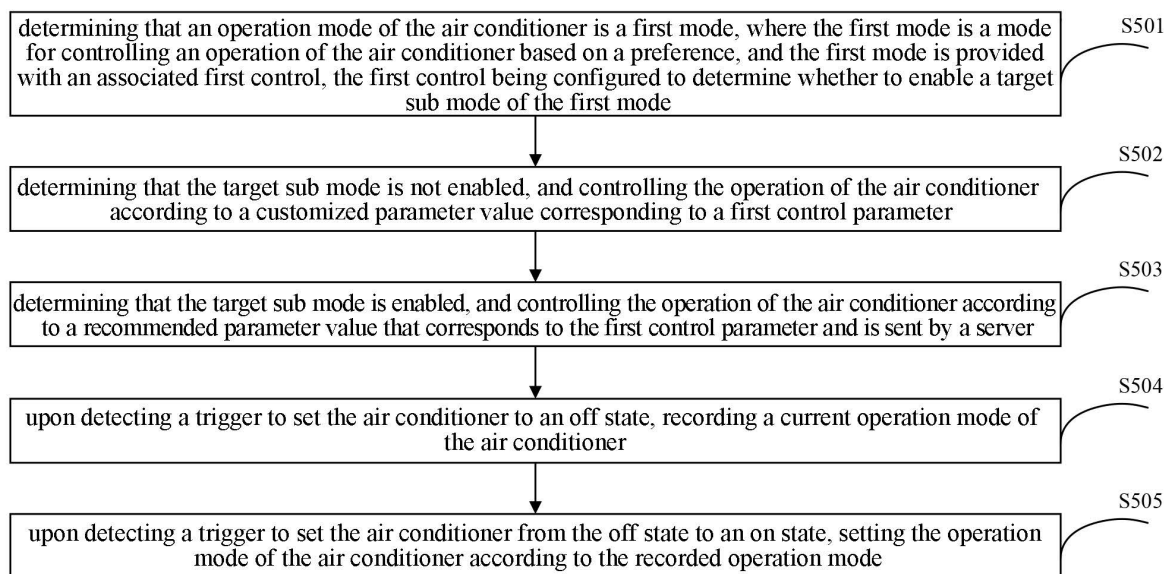


FIG.5

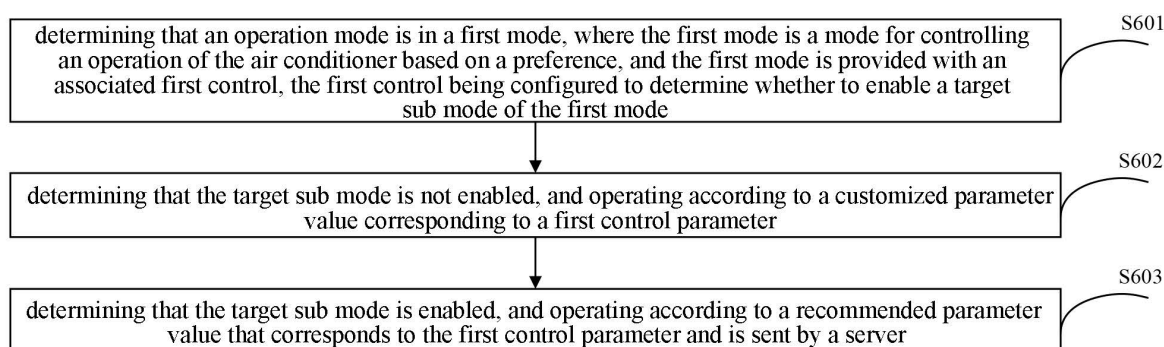


FIG.6

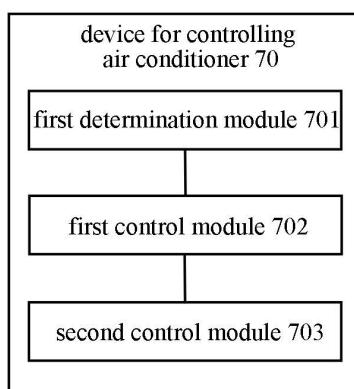


FIG.7

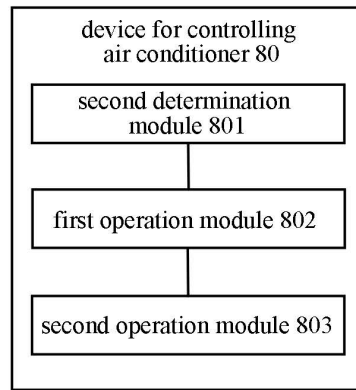


FIG.8

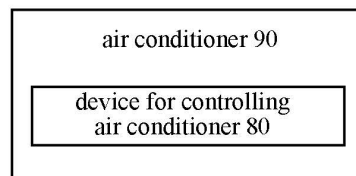


FIG.9

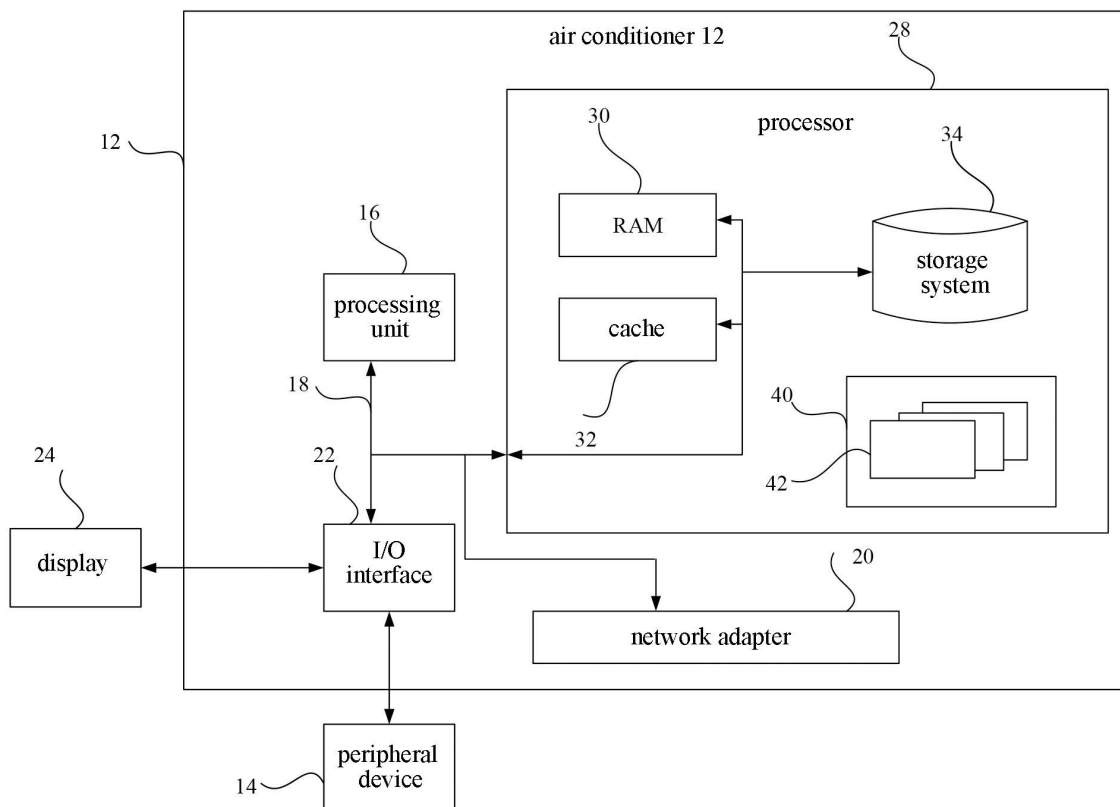


FIG.10