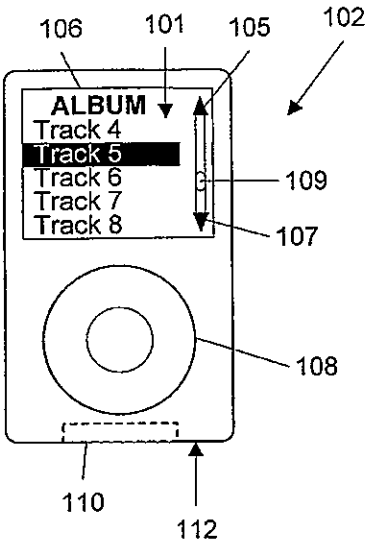


FIG. 1A

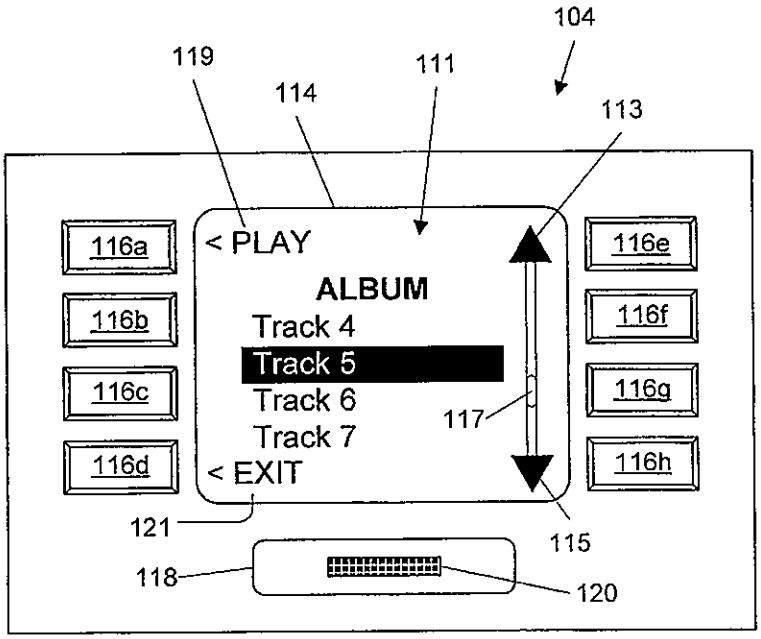


FIG. 1B

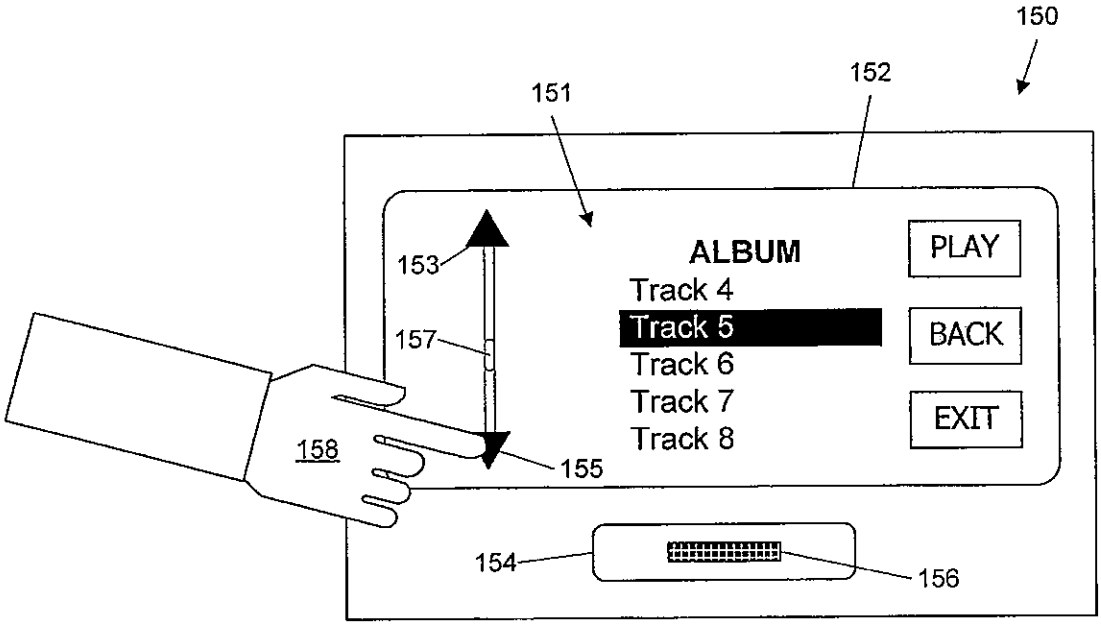


FIG. 1C

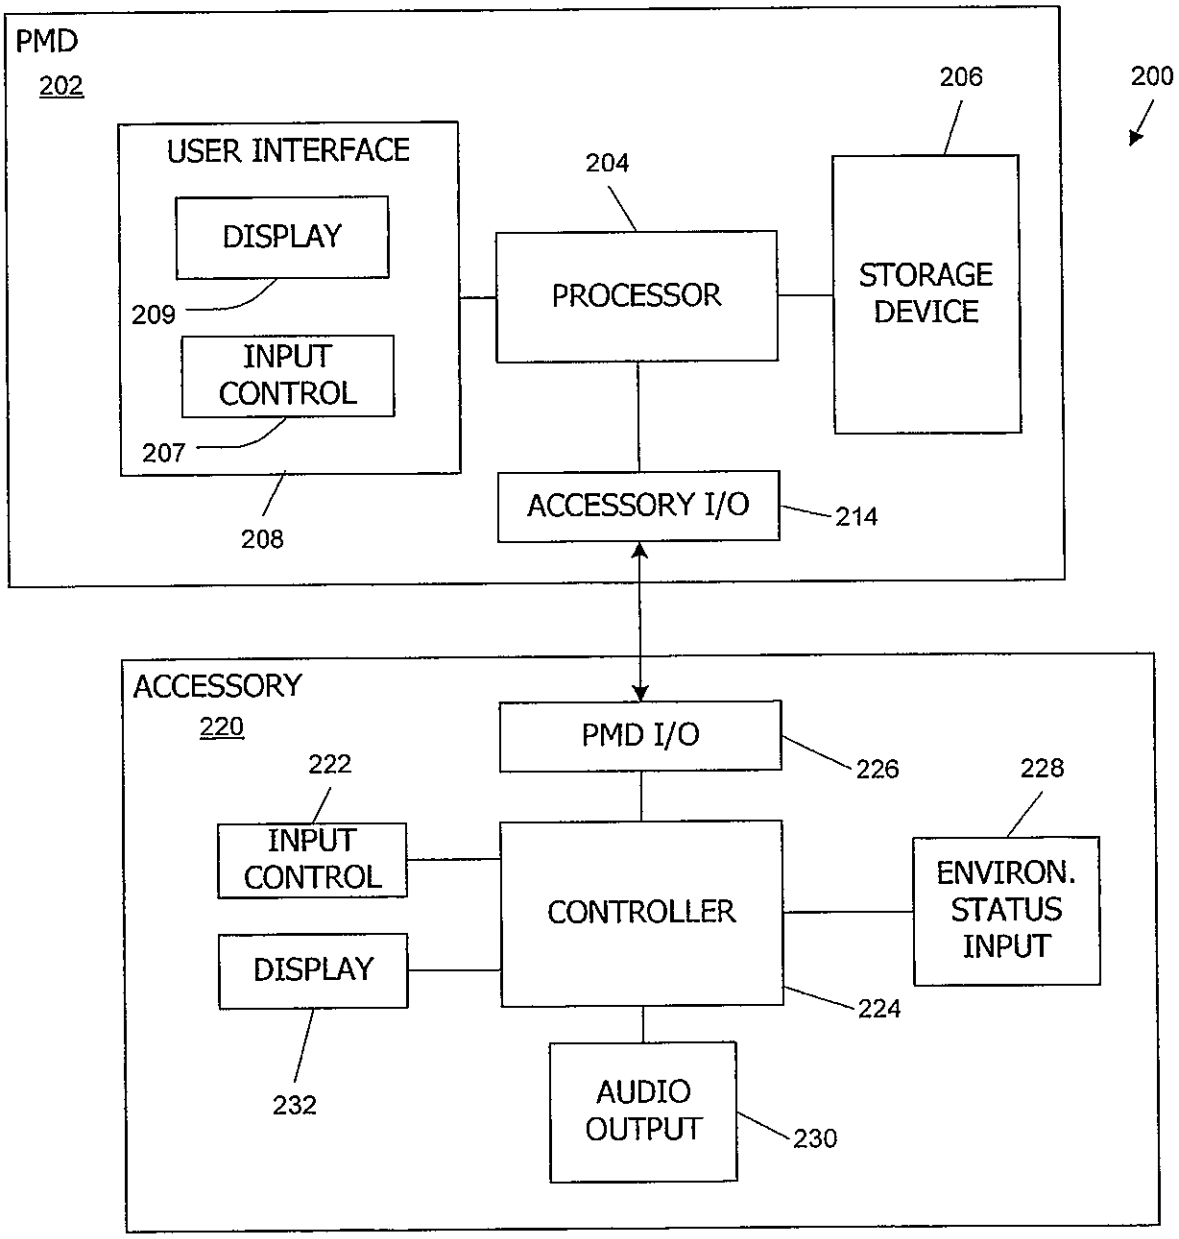

PMD
202
200
206
USER INTERFACE
DISPLAY
209
INPUT CONTROL
207
208
204
PROCESSOR
STORAGE DEVICE
ACCESSORY I/O
214
ACCESSORY
220
PMD I/O
226
222
228
INPUT CONTROL
DISPLAY
232
CONTROLLER
224
ENVIRON. STATUS INPUT
AUDIO OUTPUT
230

FIG. 2

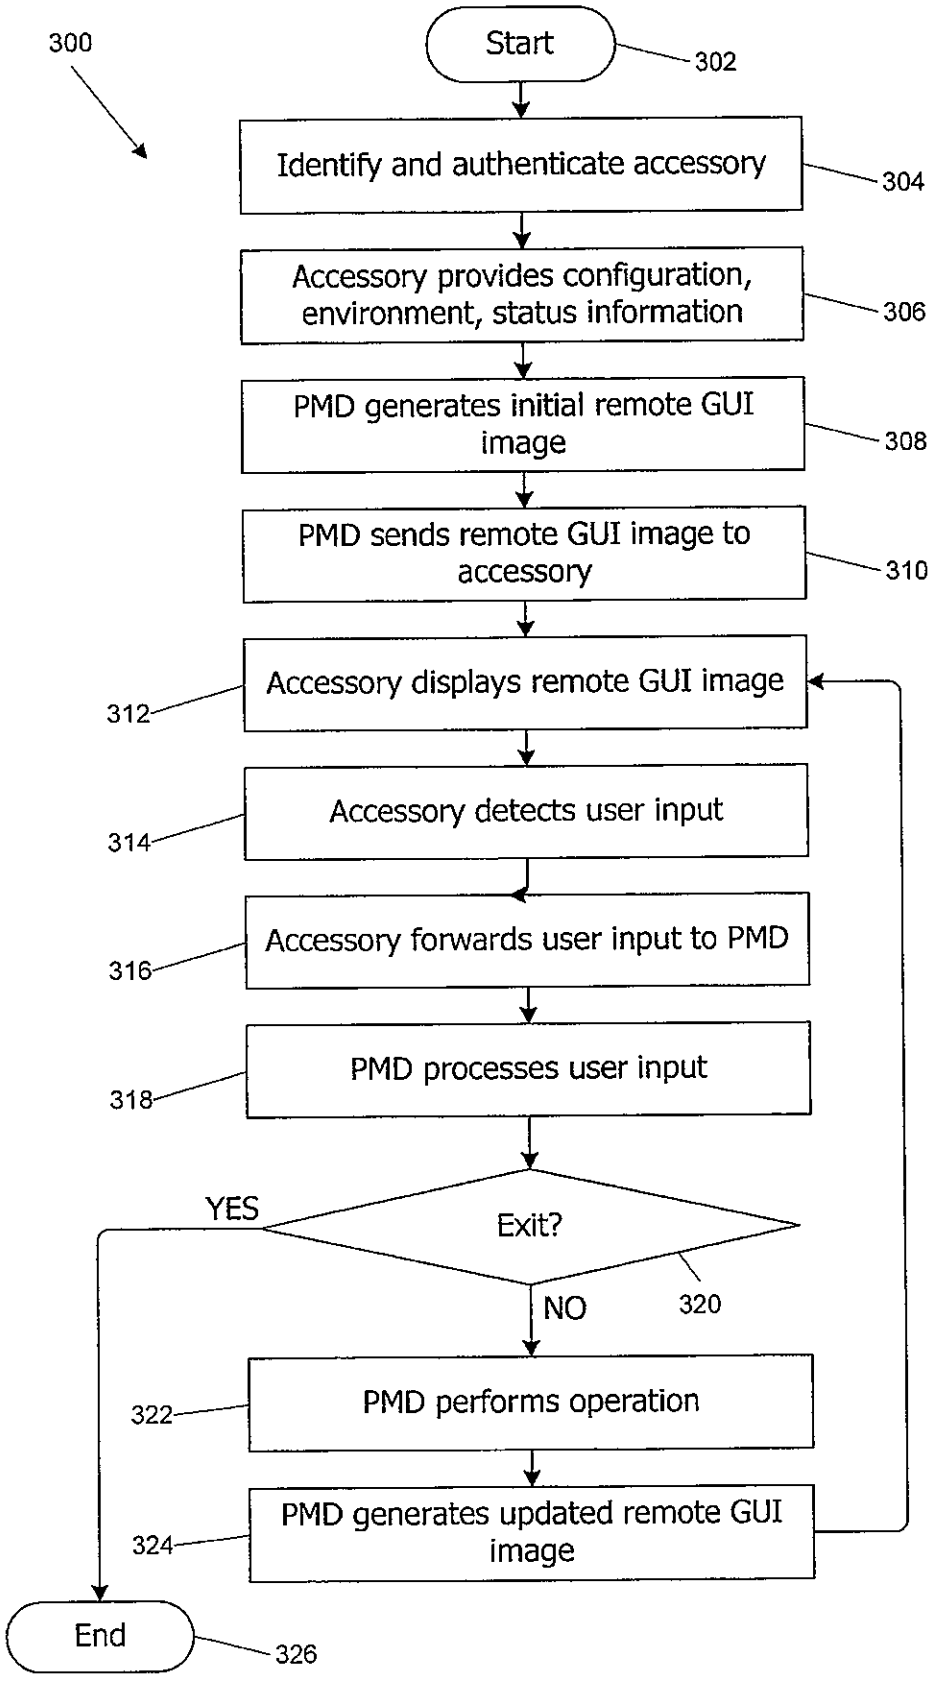

300
Start
302
Identify and authenticate accessory
304
Accessory provides configuration, environment, status information
306
PMD generates initial remote GUI image
308
PMD sends remote GUI image to accessory
310
Accessory displays remote GUI image
312
Accessory detects user input
314
Accessory forwards user input to PMD
316
PMD processes user input
318
YES
Exit?
320
NO
PMD performs operation
322
PMD generates updated remote GUI image
324
End
326

FIG. 3