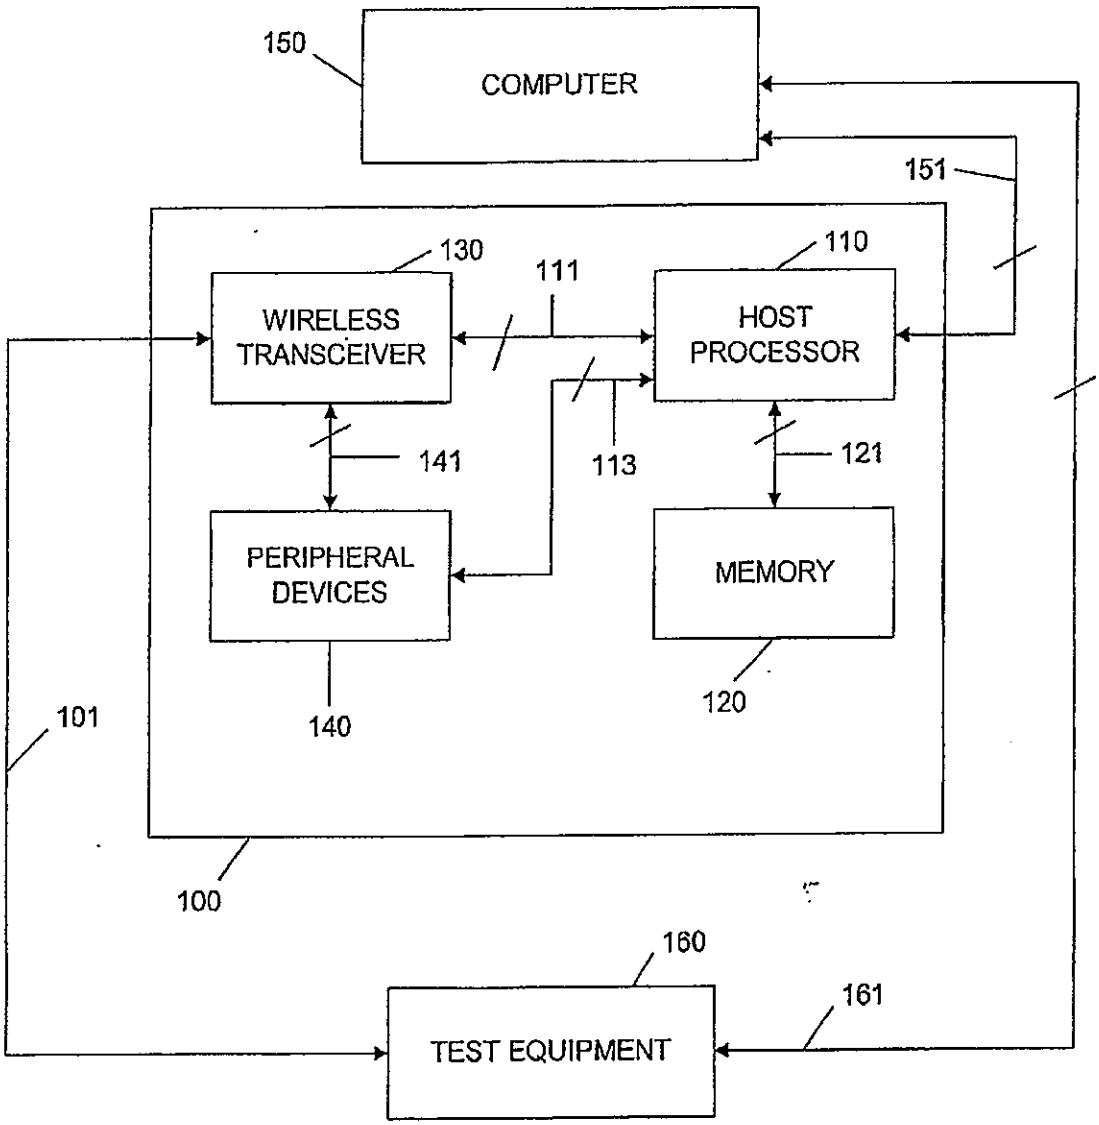

150
COMPUTER
151
130
111
110
WIRELESS TRANSCEIVER
HOST PROCESSOR
141
113
121
PERIPHERAL DEVICES
MEMORY
140
120
101
100
160
161
TEST EQUIPMENT

FIG. 1

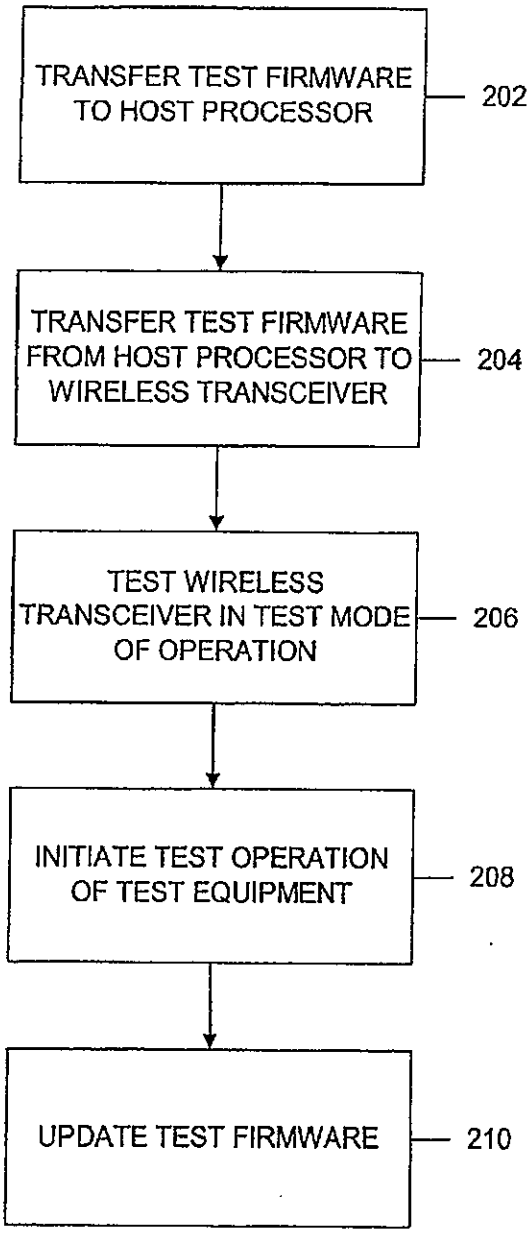

TRANSFER TEST FIRMWARE TO HOST PROCESSOR
202
TRANSFER TEST FIRMWARE FROM HOST PROCESSOR TO WIRELESS TRANSCEIVER
204
TEST WIRELESS TRANSCEIVER IN TEST MODE OF OPERATION
206
INITIATE TEST OPERATION OF TEST EQUIPMENT
208
UPDATE TEST FIRMWARE
210

FIG. 2

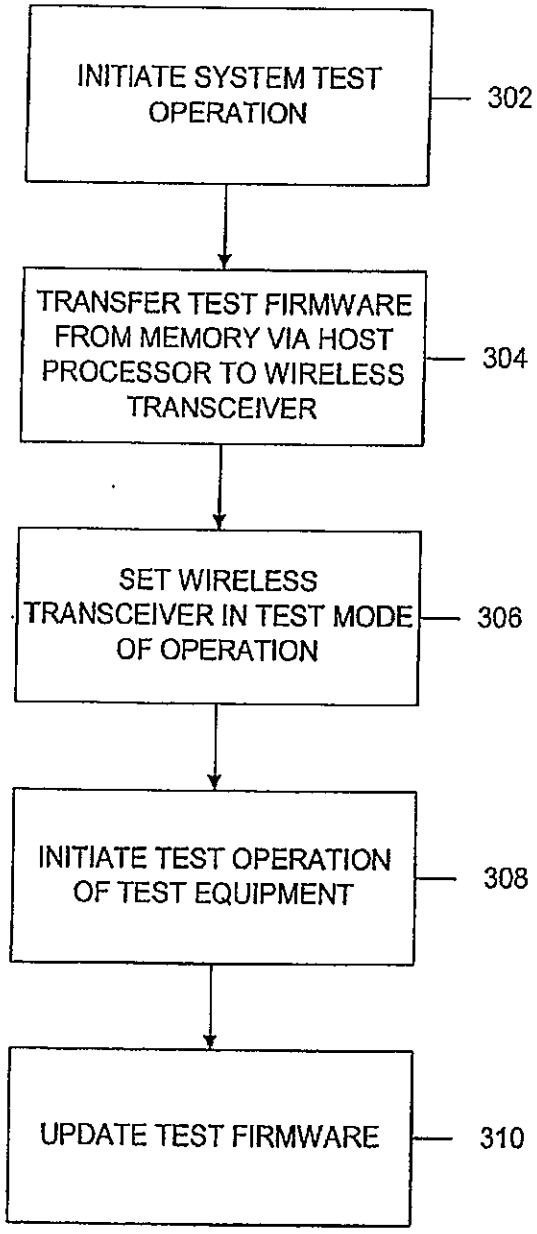

INITIATE SYSTEM TEST OPERATION
302
TRANSFER TEST FIRMWARE FROM MEMORY VIA HOST PROCESSOR TO WIRELESS TRANSCEIVER
304
SET WIRELESS TRANSCEIVER IN TEST MODE OF OPERATION
306
INITIATE TEST OPERATION OF TEST EQUIPMENT
308
UPDATE TEST FIRMWARE
310

FIG. 3

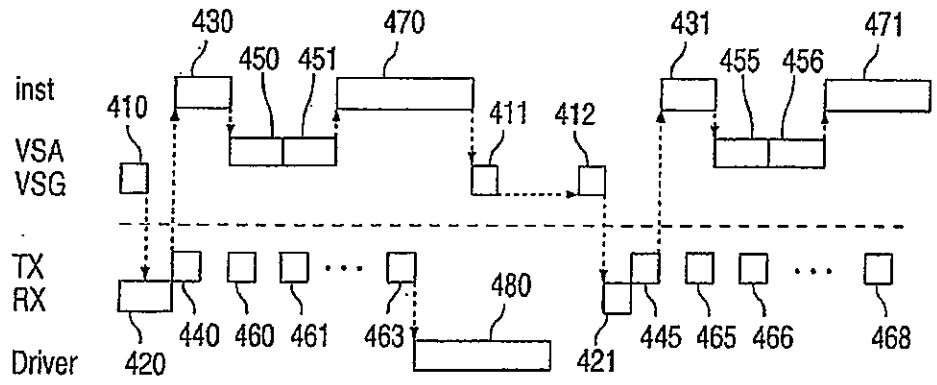


FIG. 4

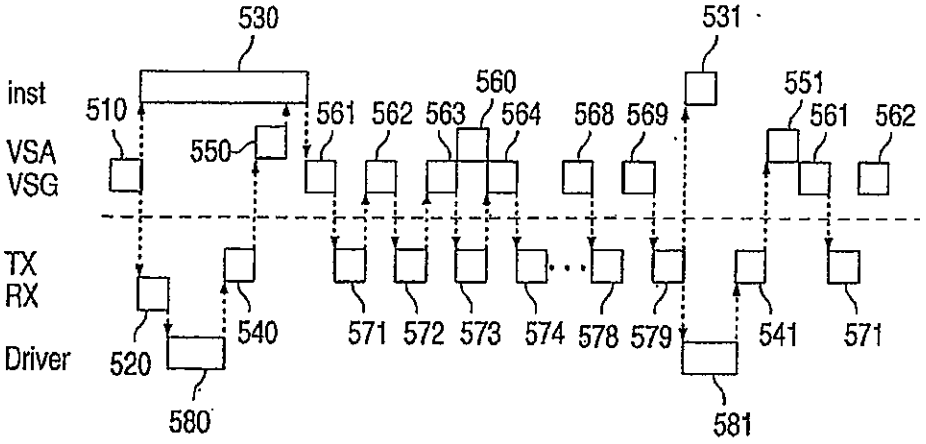


FIG. 5

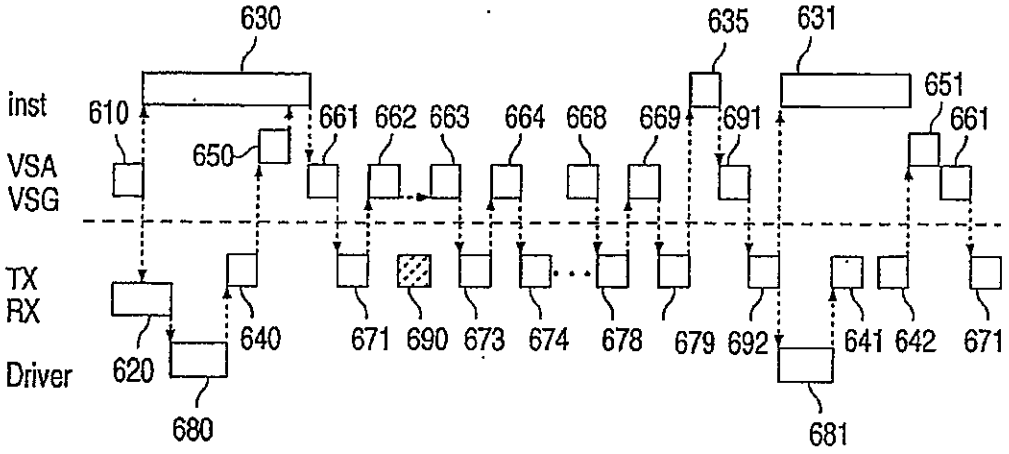


FIG. 6