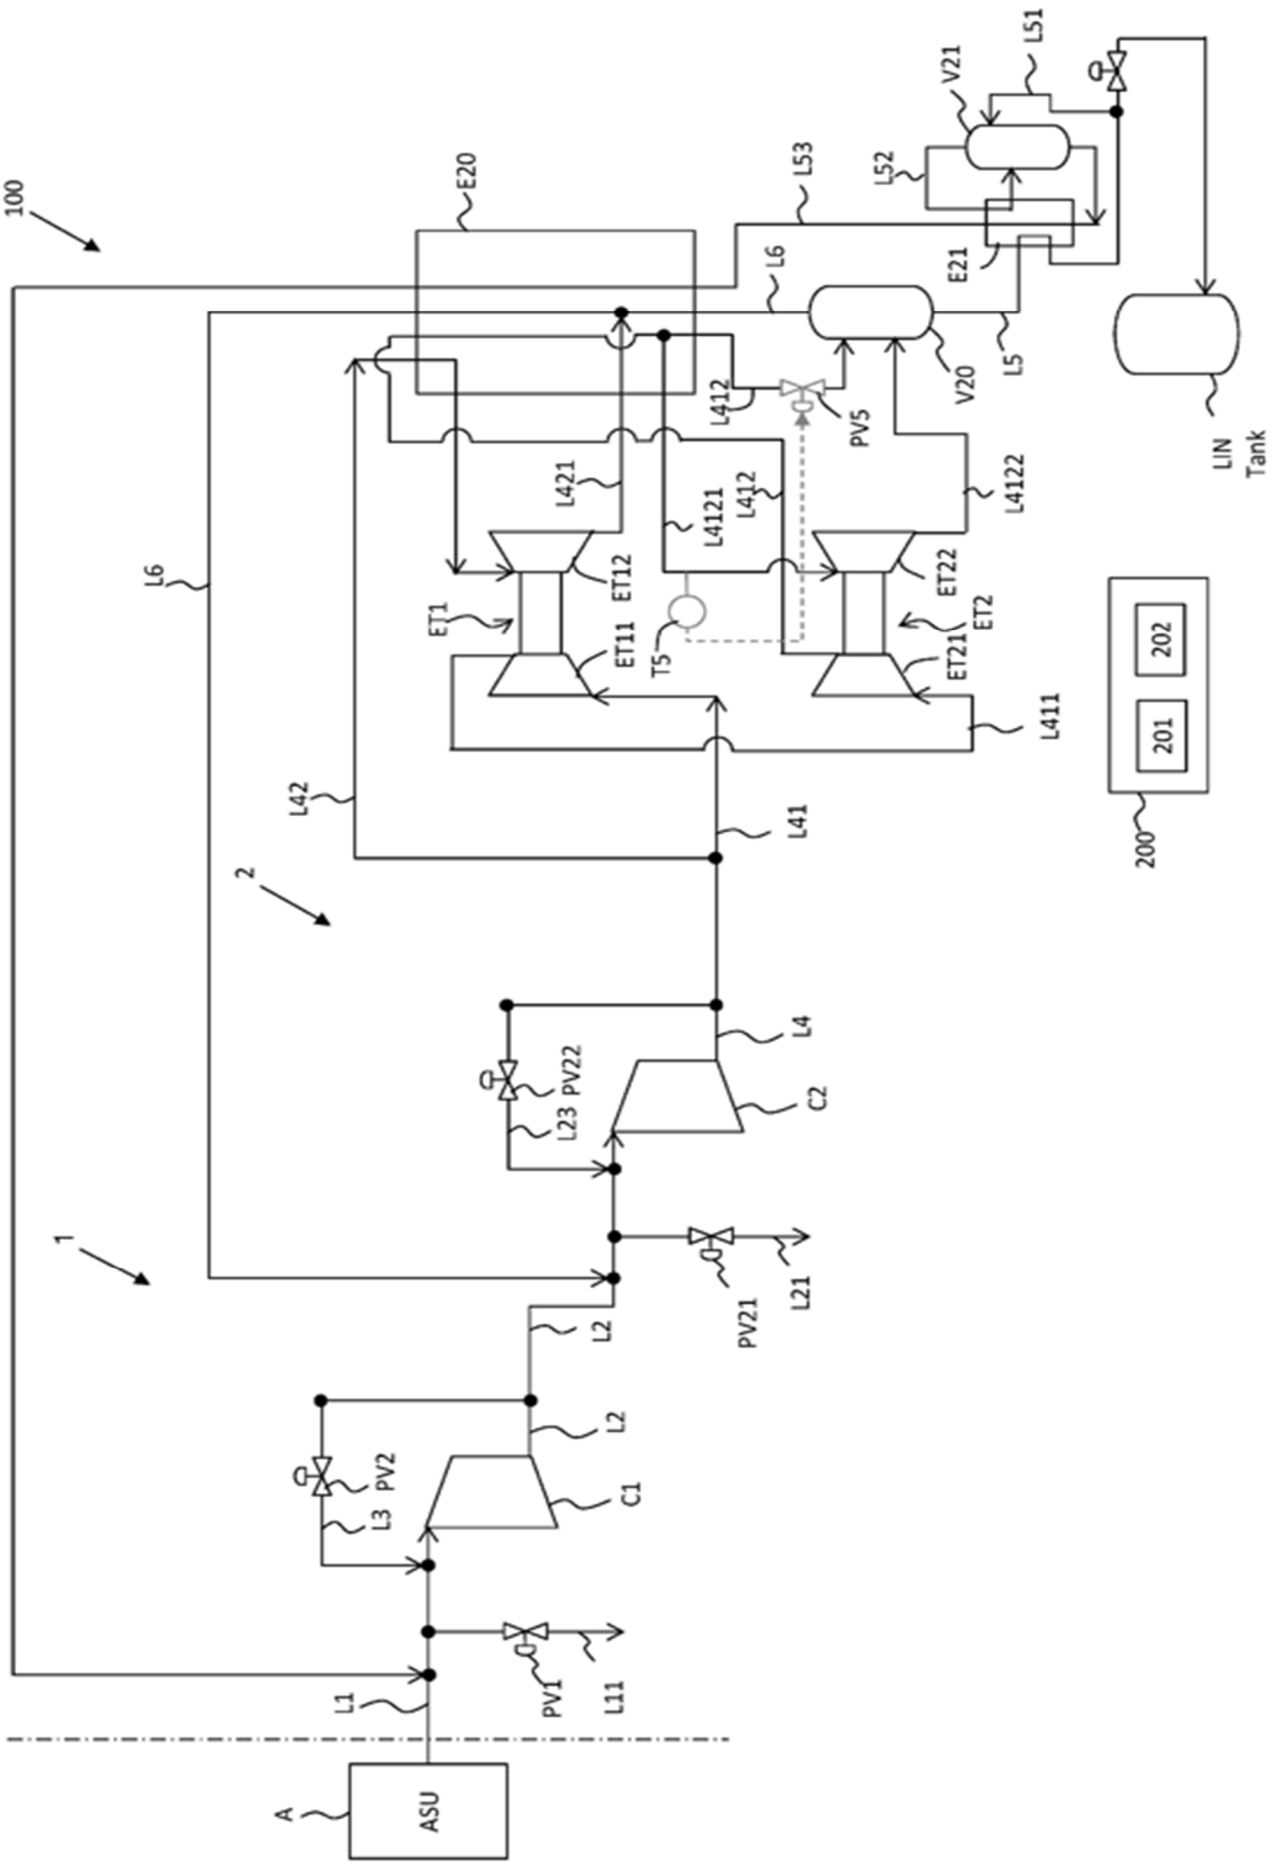
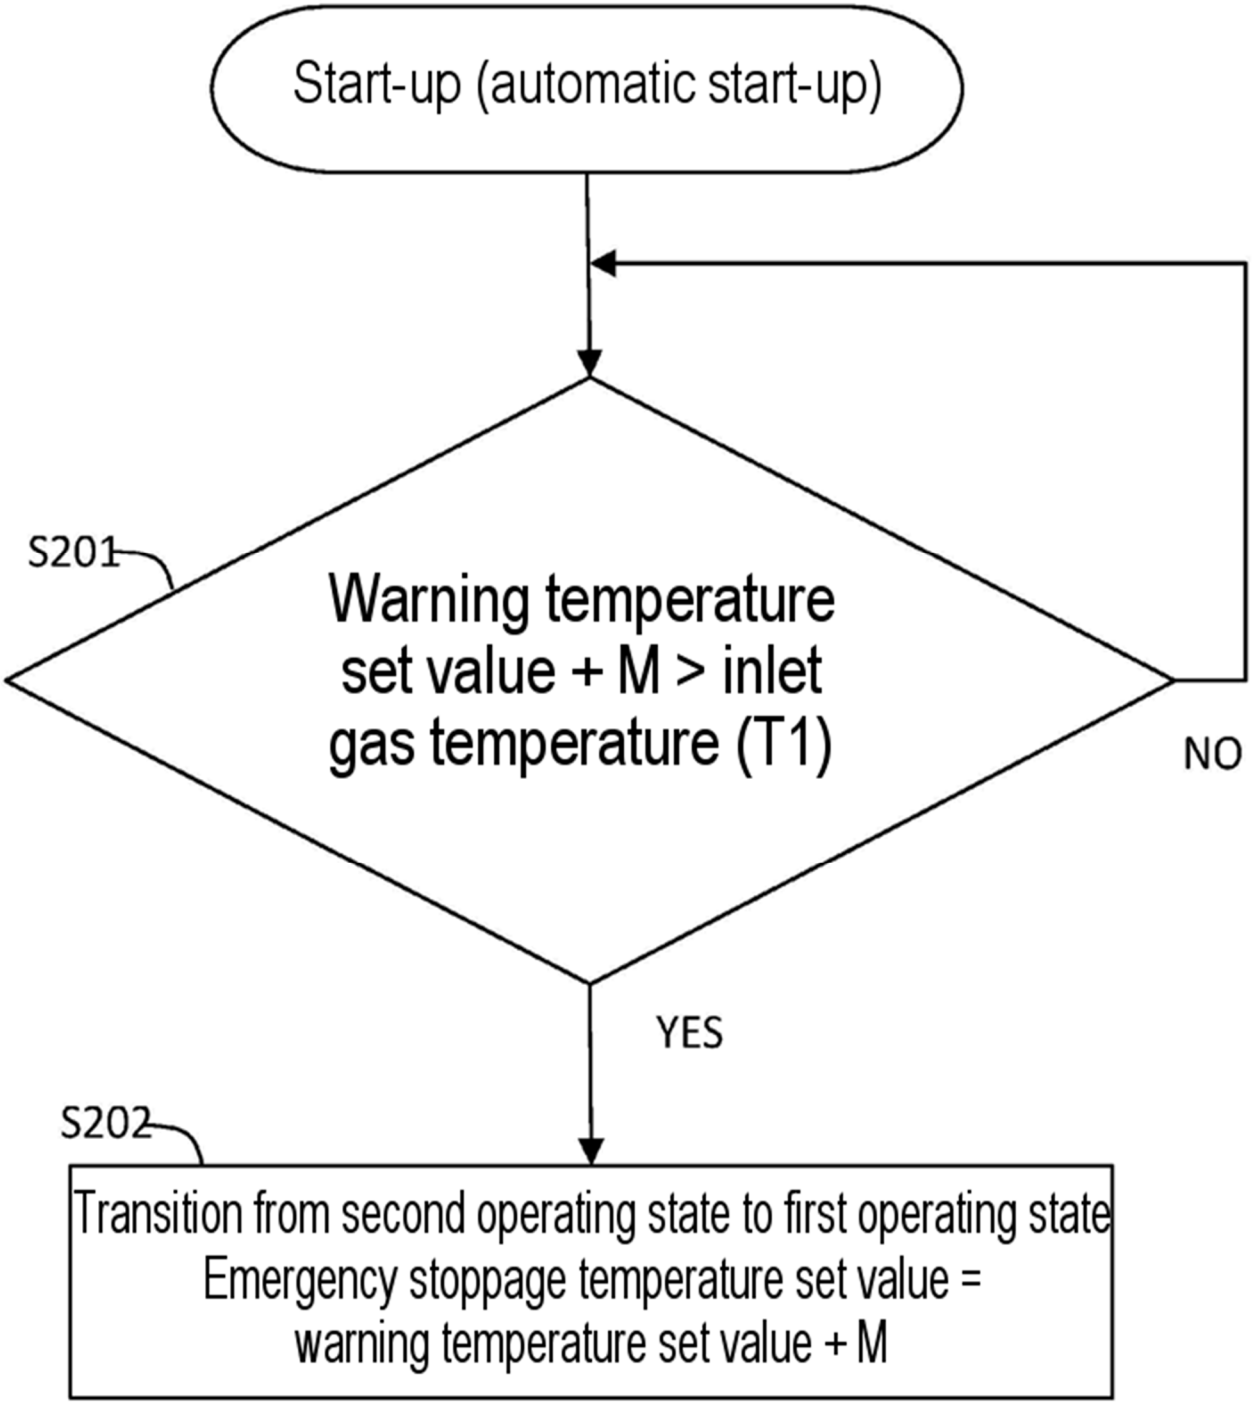

100
E20
L53
L52
V21
L51
L6
E21
V20
L5
LIN Tank
L412
PV5
L421
L4121
L412
L4122
L6
ET1
ET12
ET11
T5
ET22
ET2
ET21
L411
200
202
201
L42
L41
2
L4
L23
PV22
C2
1
L21
PV21
L2
L2
L3
PV2
C1
L1
PV1
L11
A
ASU


Start-up (automatic start-up)
S201
Warning temperature set value + M > inlet gas temperature (T1)
NO
YES
S202
Transition from second operating state to first operating state
Emergency stoppage temperature set value = warning temperature set value + M