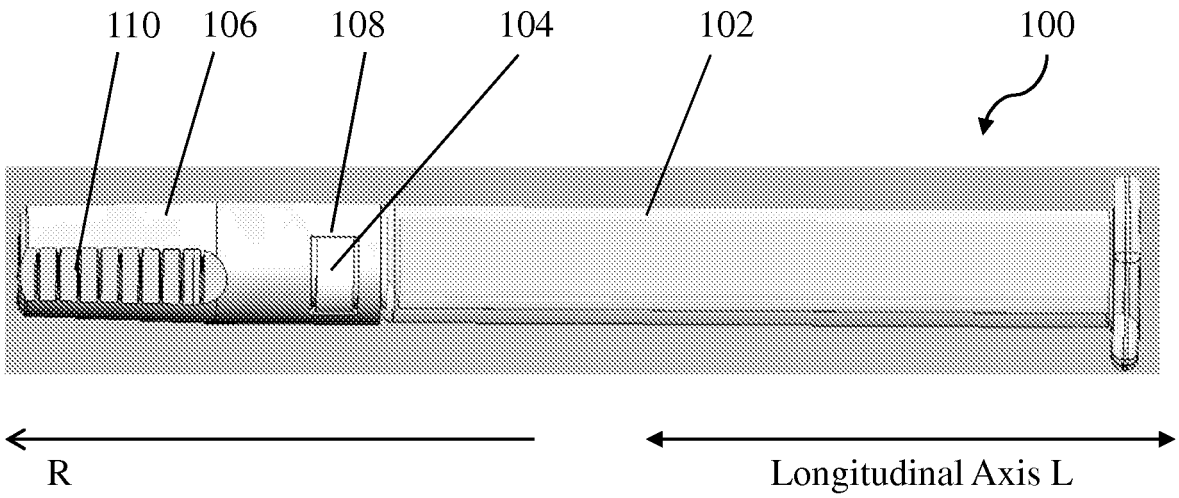


Figure 1A

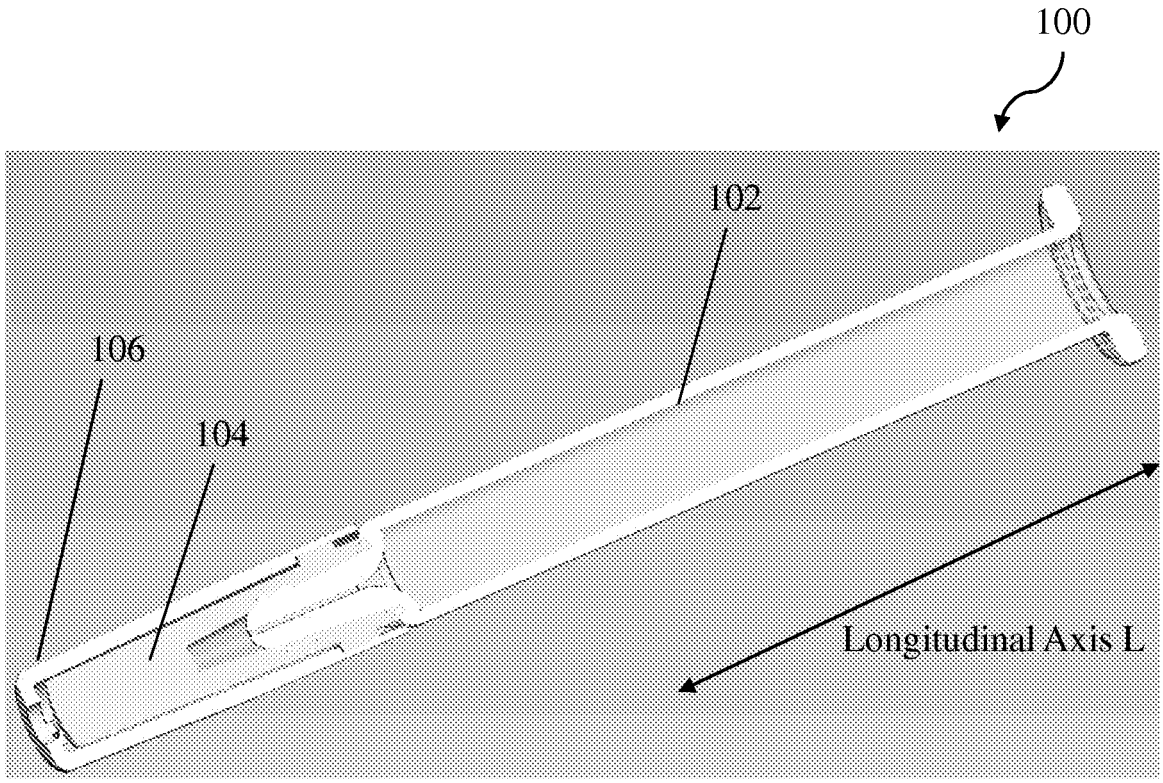


Figure 1B

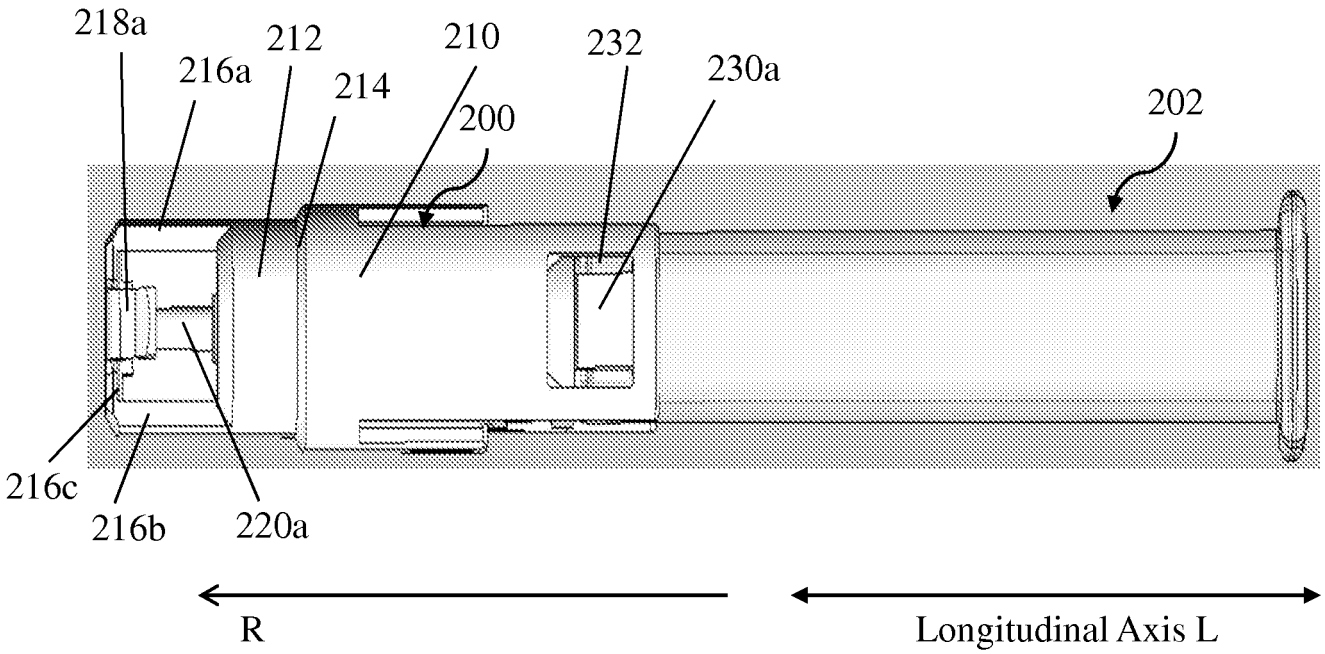


Figure 2A

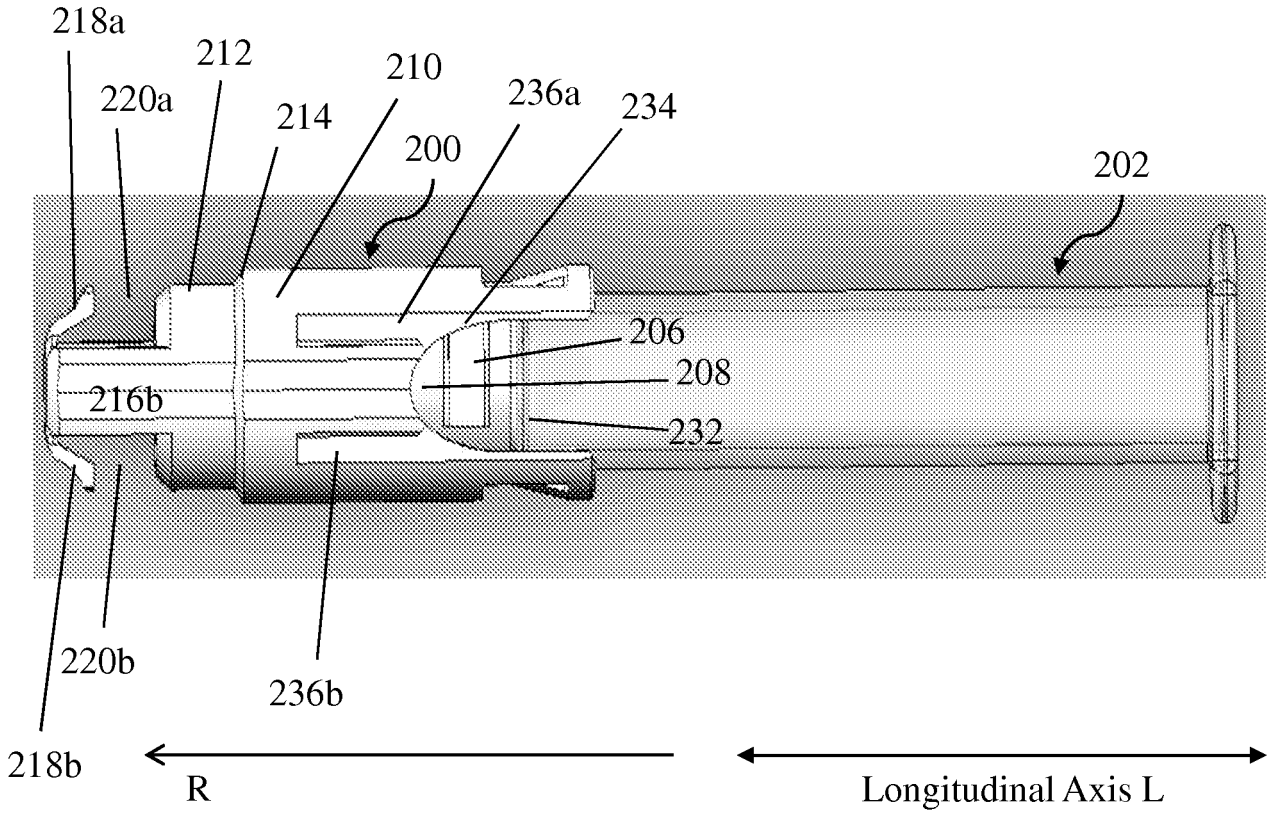


Figure 2B

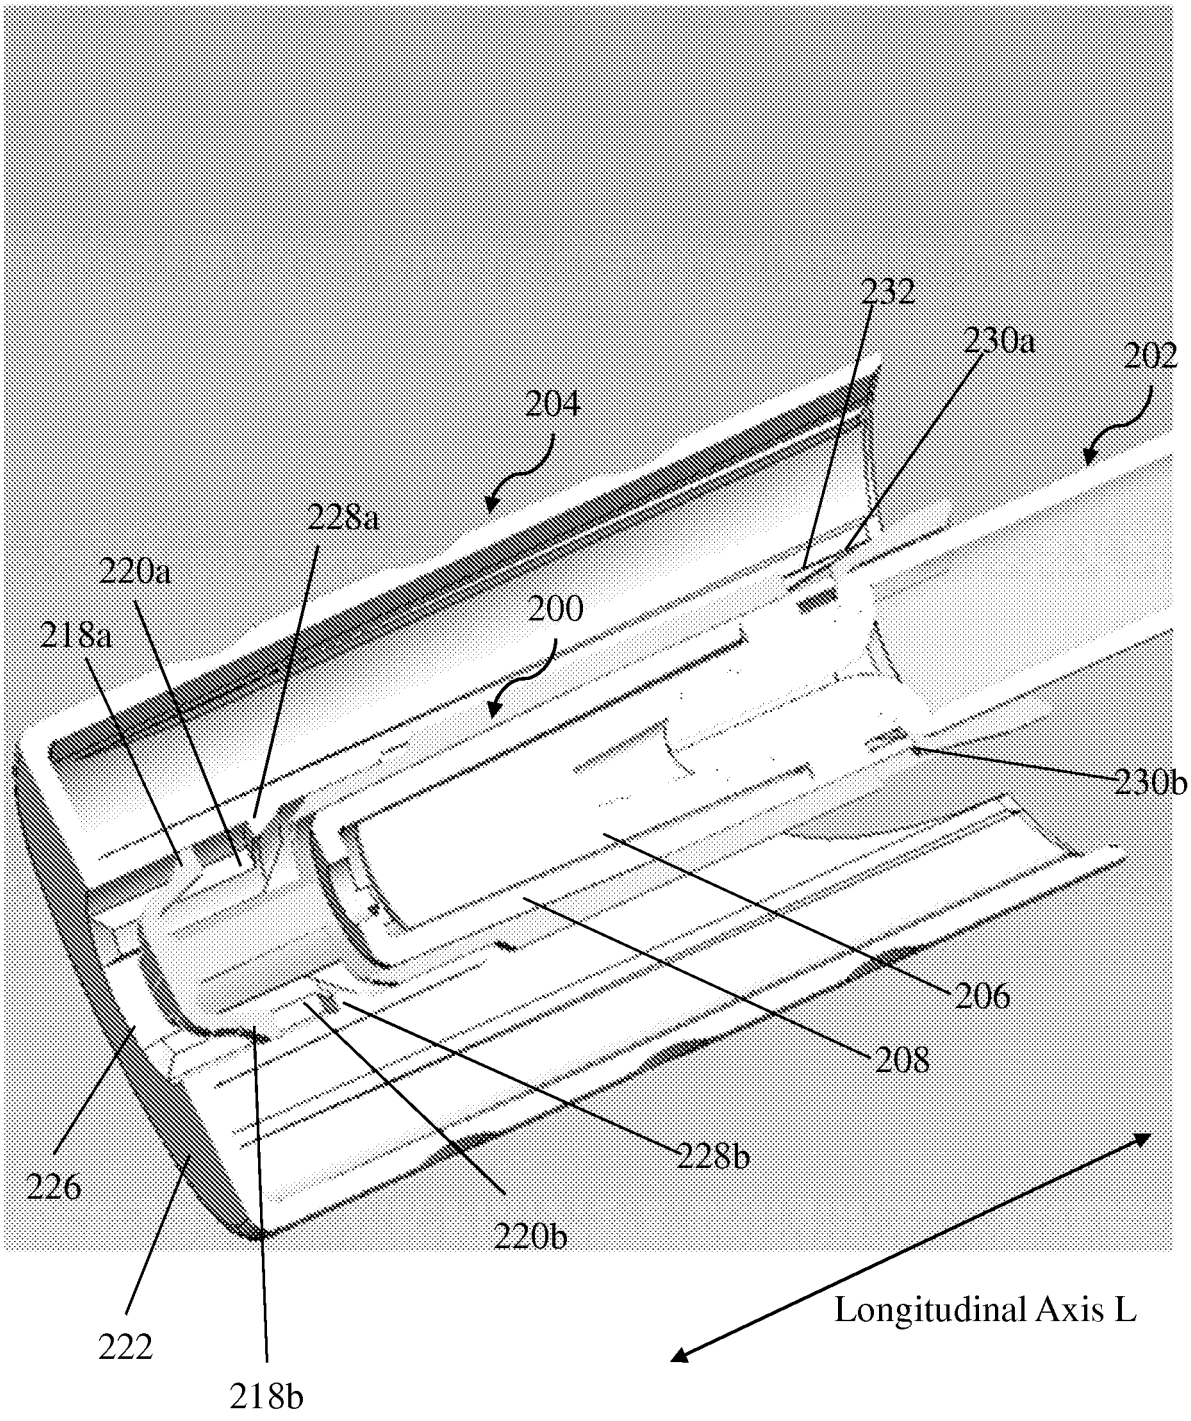

232
230a
202
204
228a
220a
218a
200
230b
206
208
228b
226
220b
222
218b
Longitudinal Axis L

Figure 2C

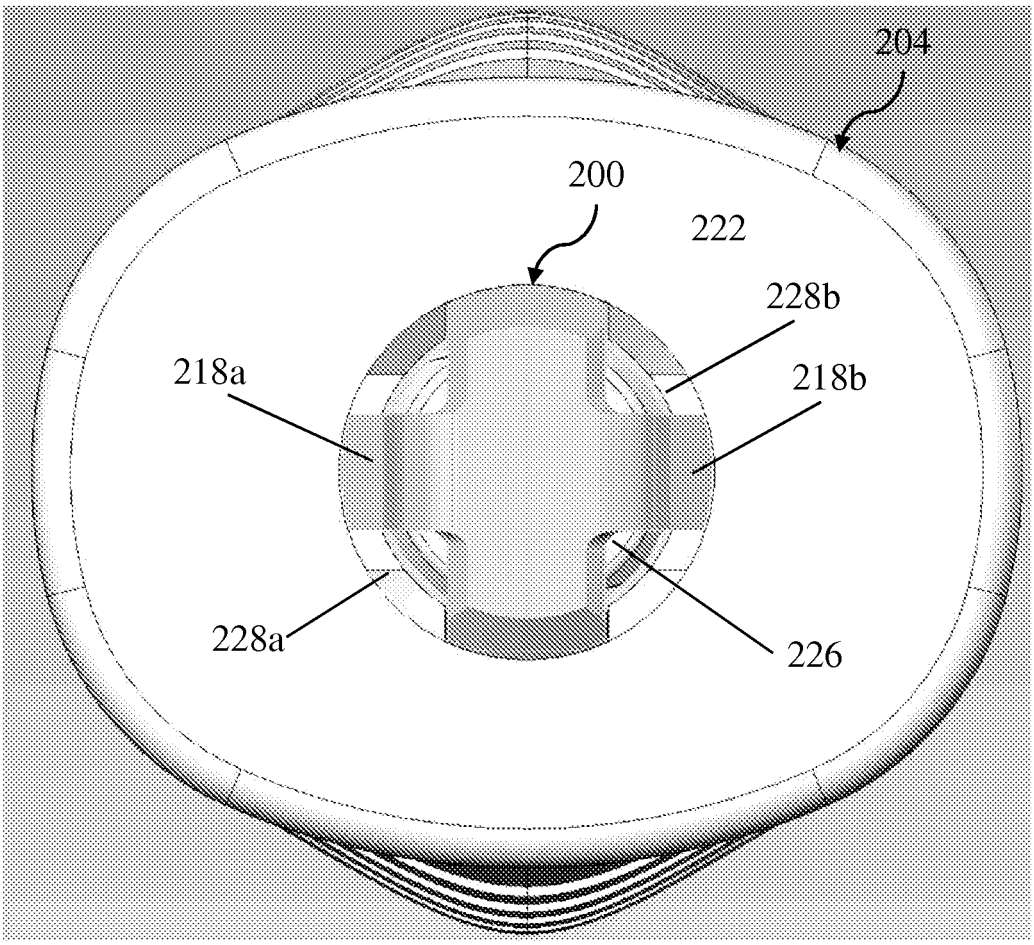


Figure 2D

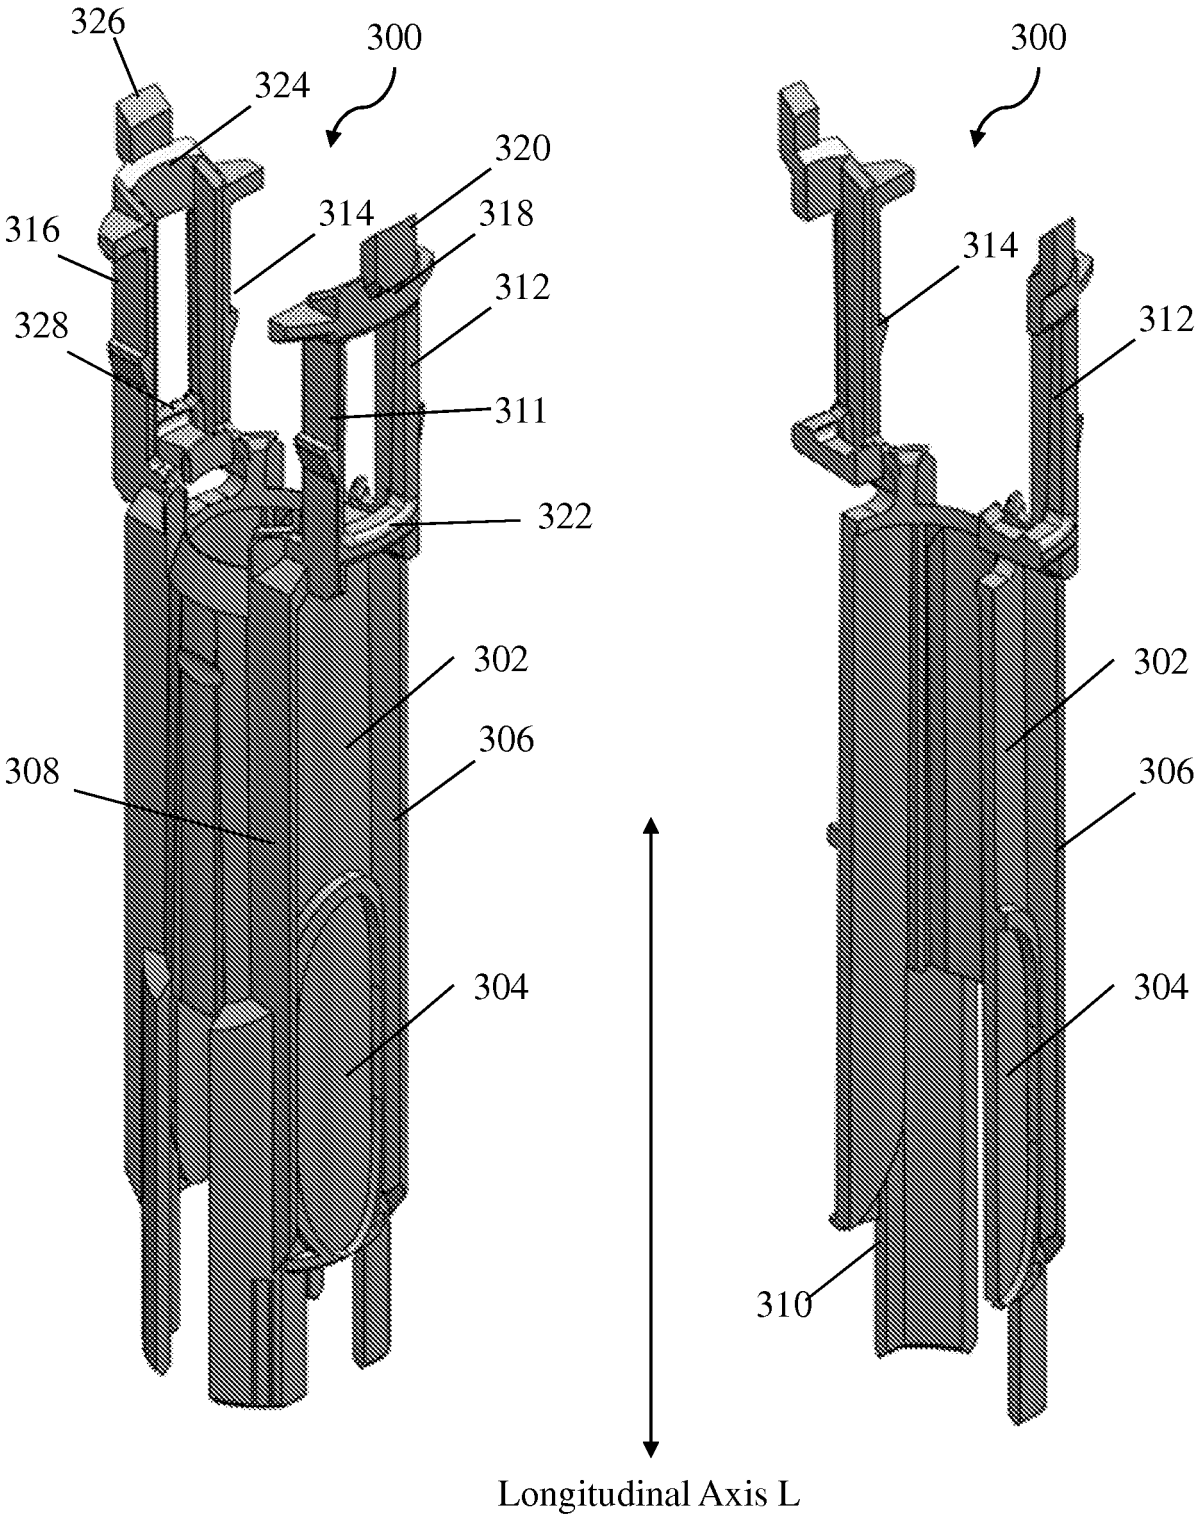


Figure 3A *Figure 3B*

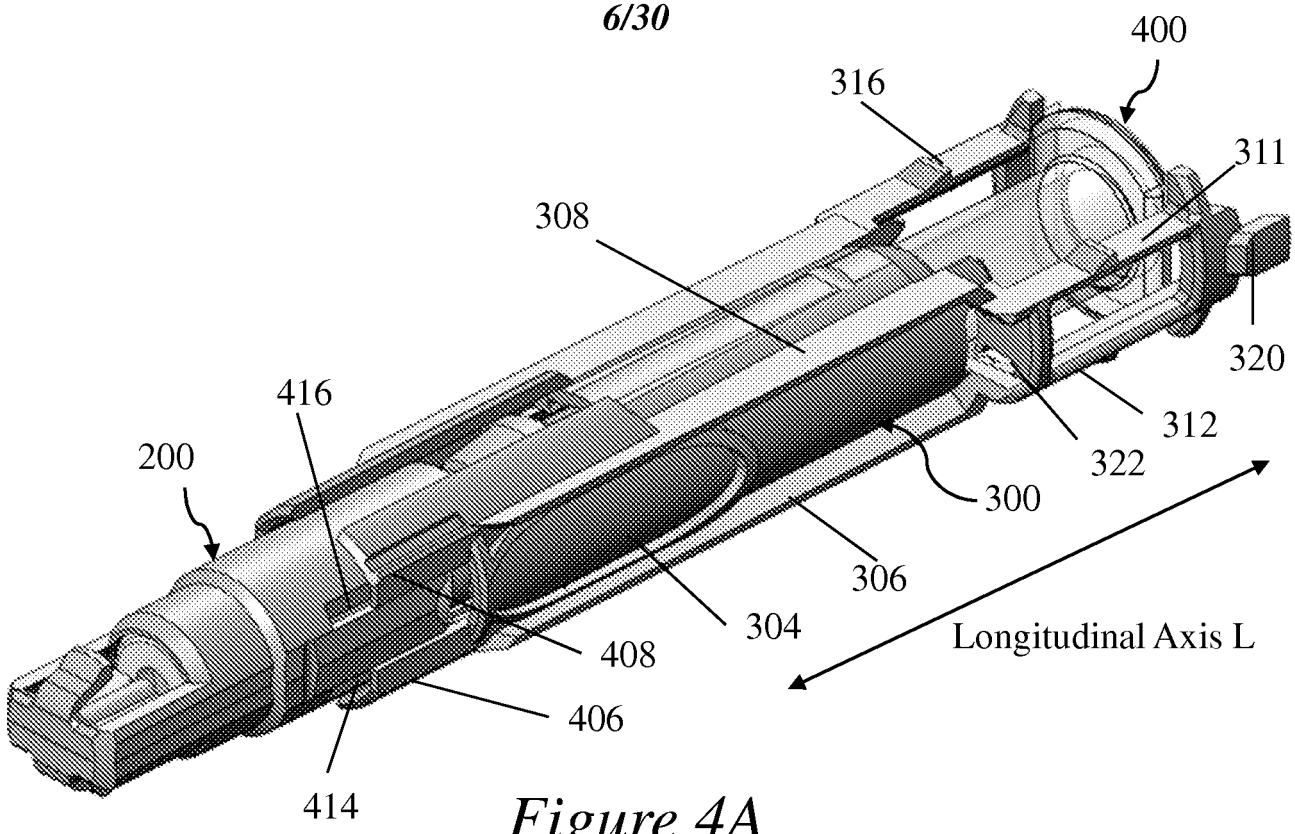


Figure 4A

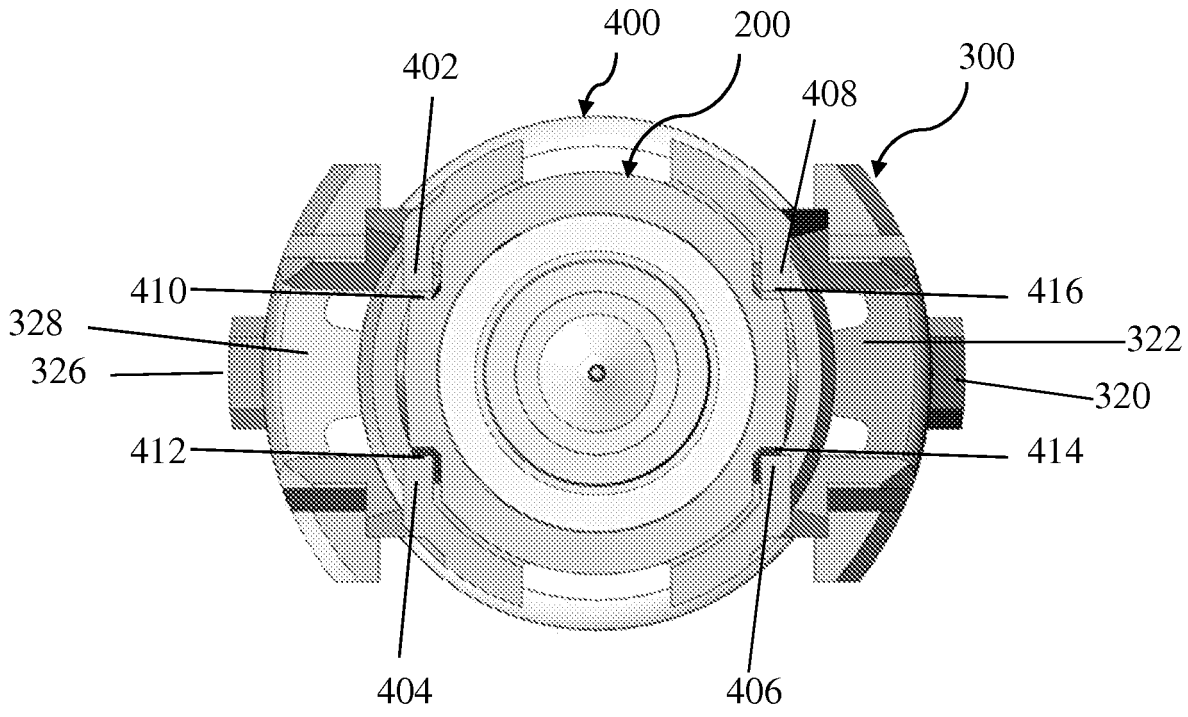


Figure 4B

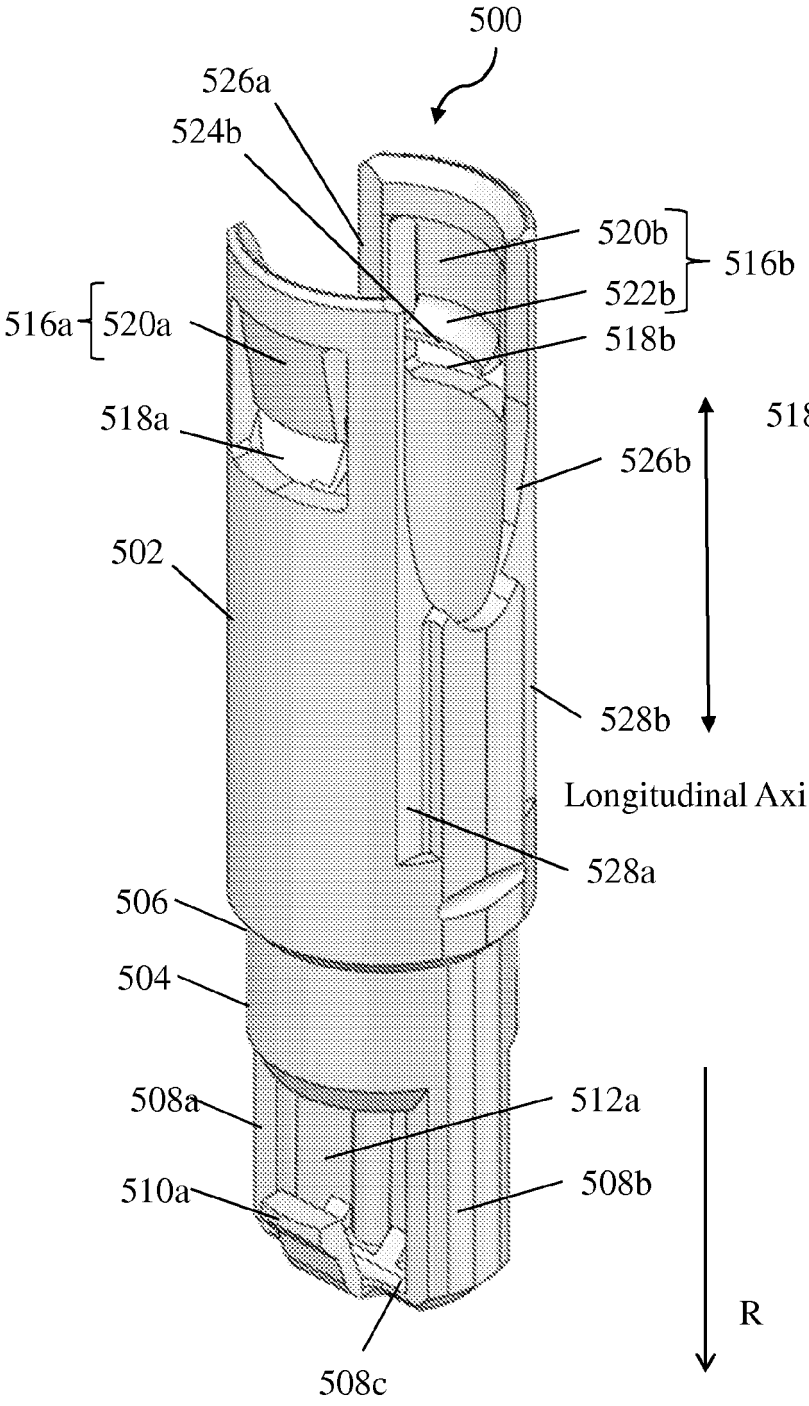


Figure 5A

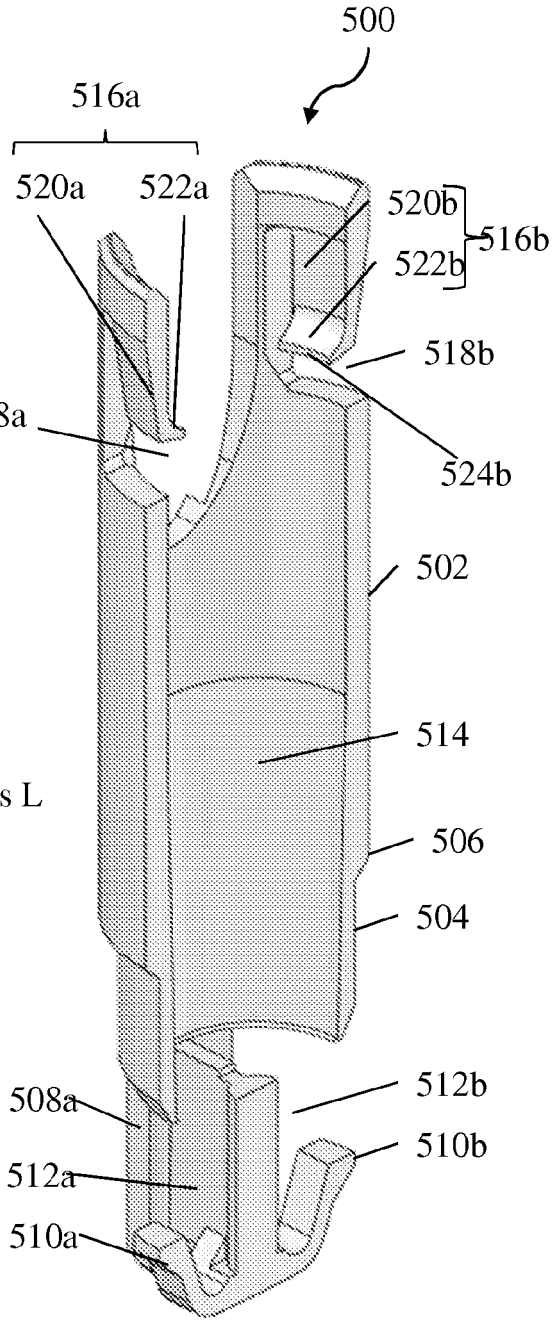


Figure 5B

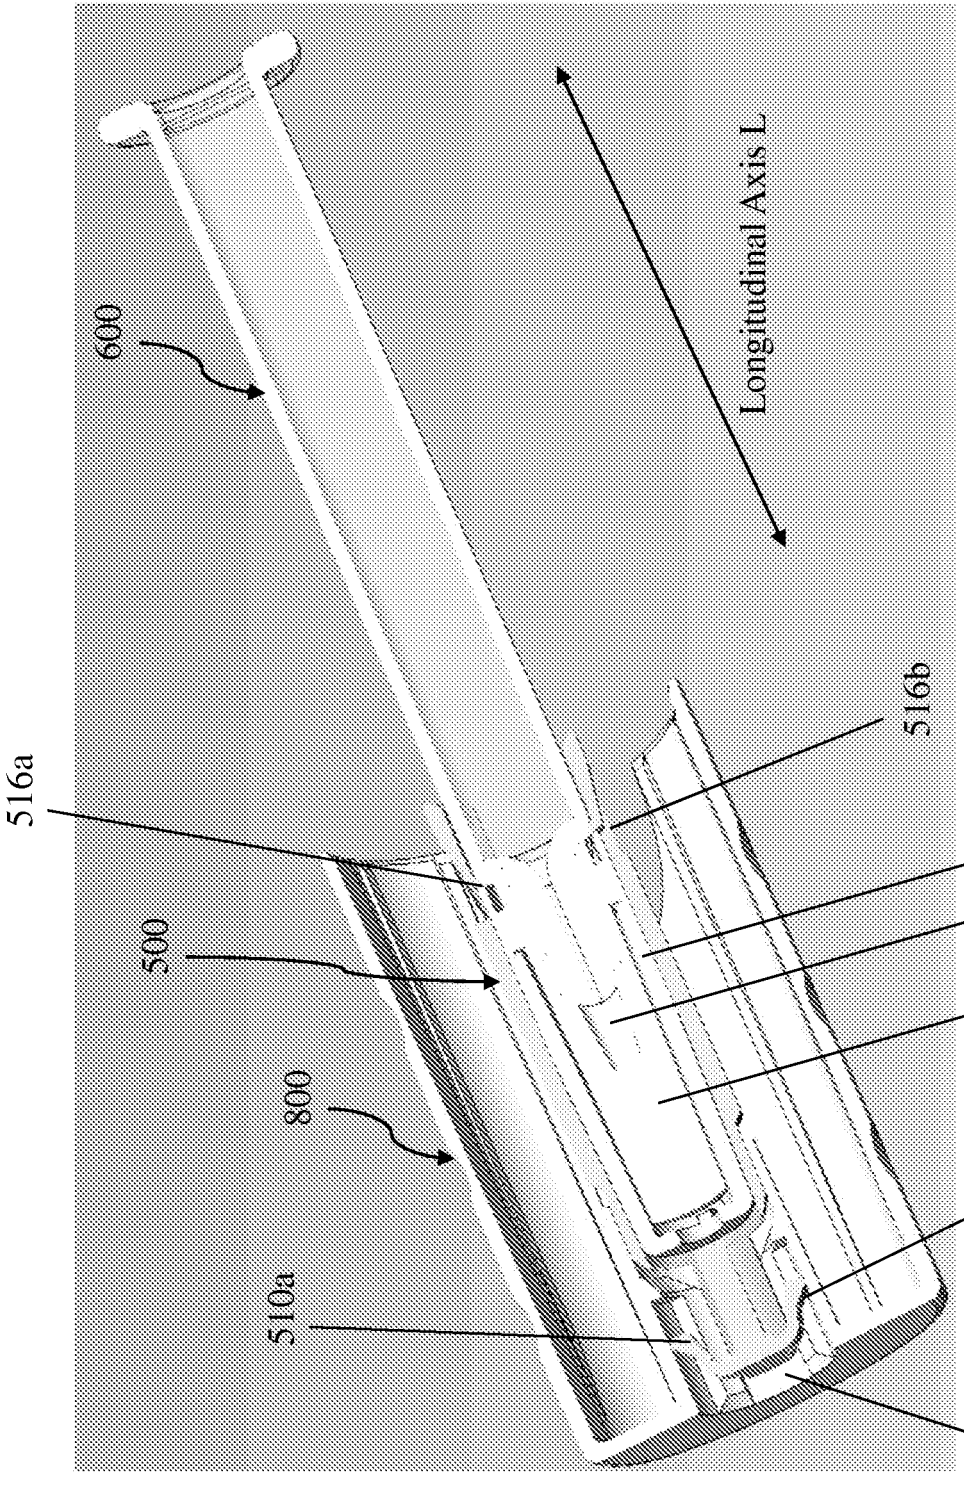

600
Longitudinal Axis L
516a
516b
500
612
604
610
800
510b
510a
802

Figure 6

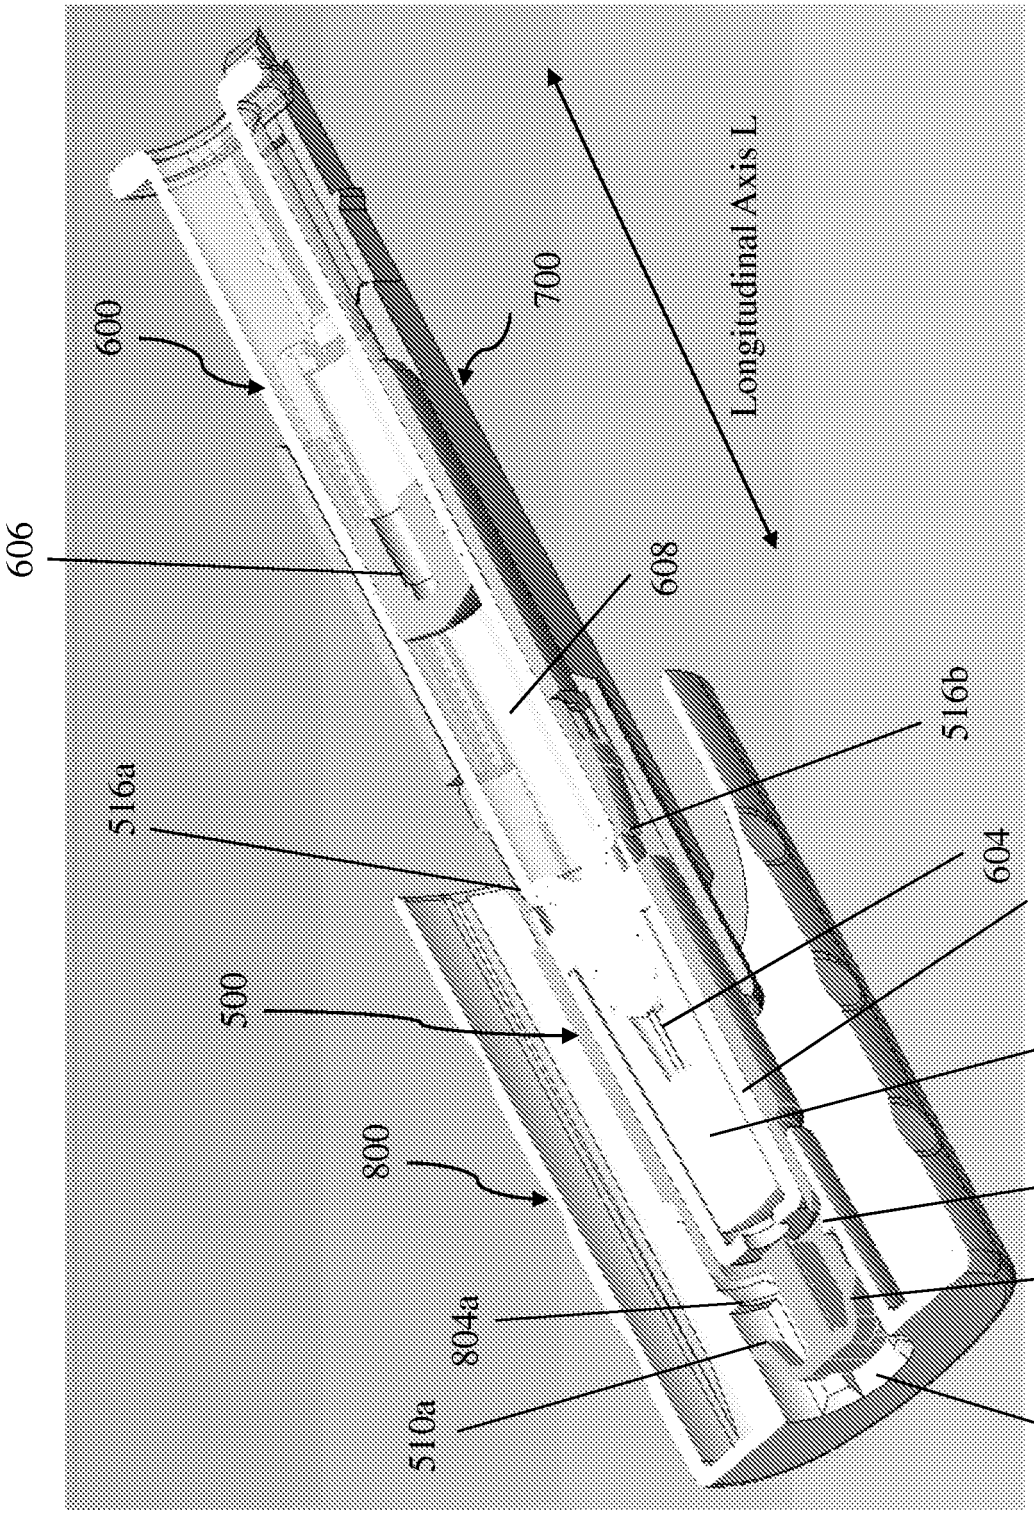

606
600
700
Longitudinal Axis L
608
516b
516a
612
604
500
610
800
804b
804a
510b
510a
802

Figure 7

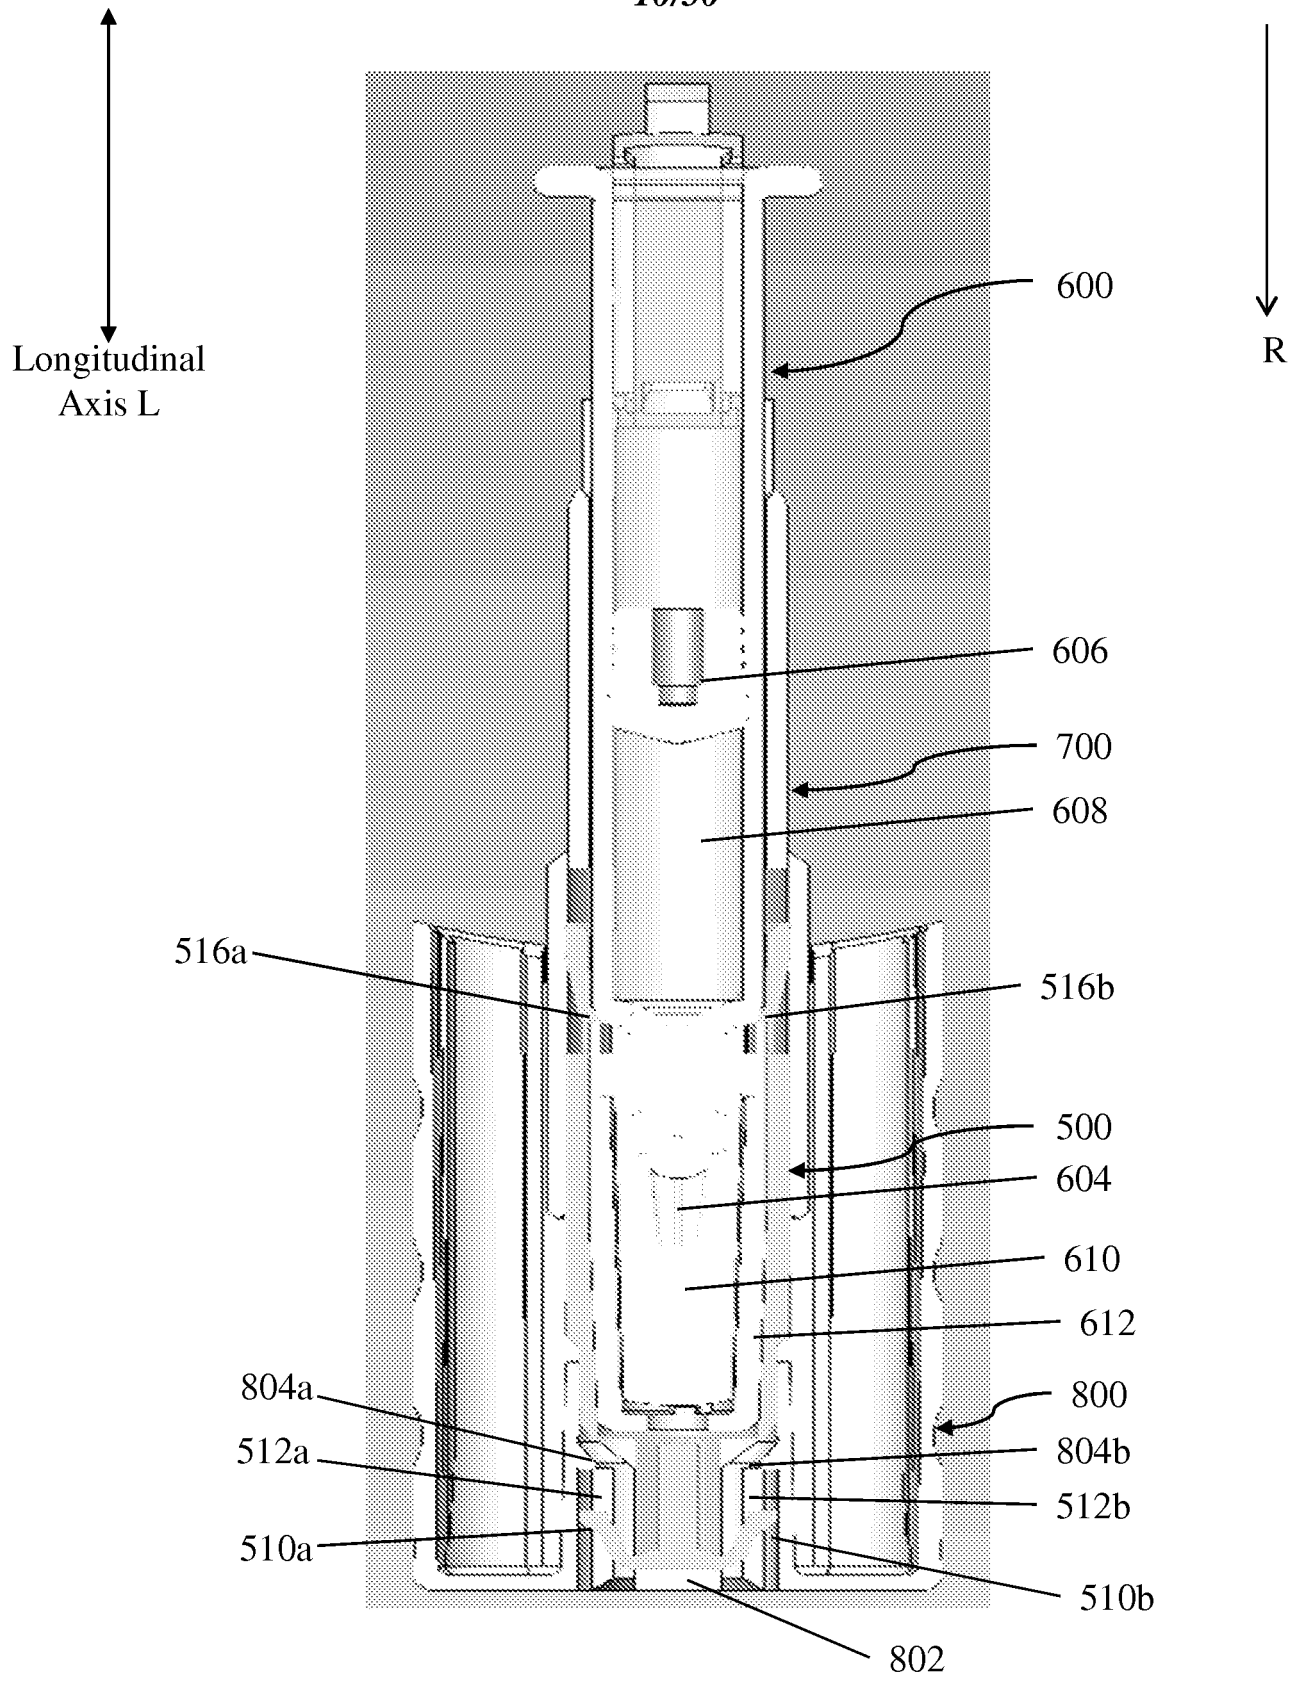

Longitudinal
Axis L
R
600
606
700
608
516a
516b
500
604
610
612
804a
800
512a
804b
512b
510a
510b
802

Figure 8

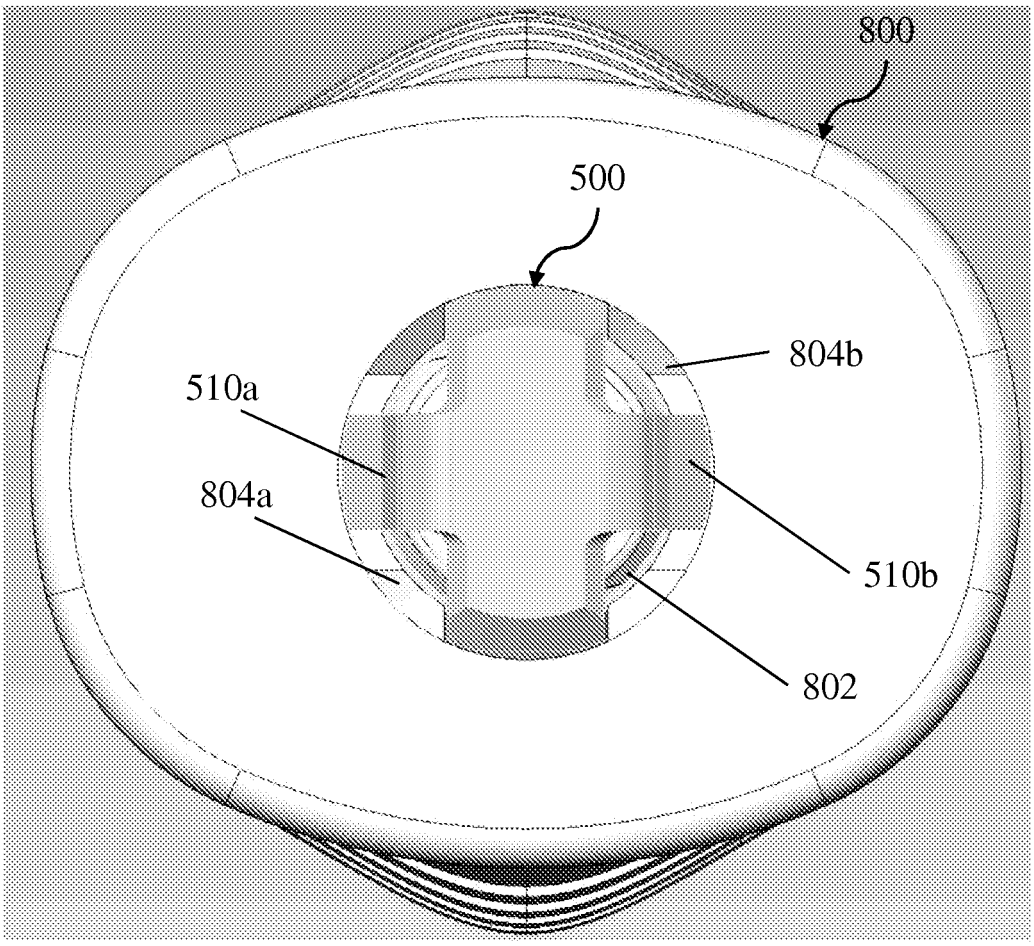


Figure 9

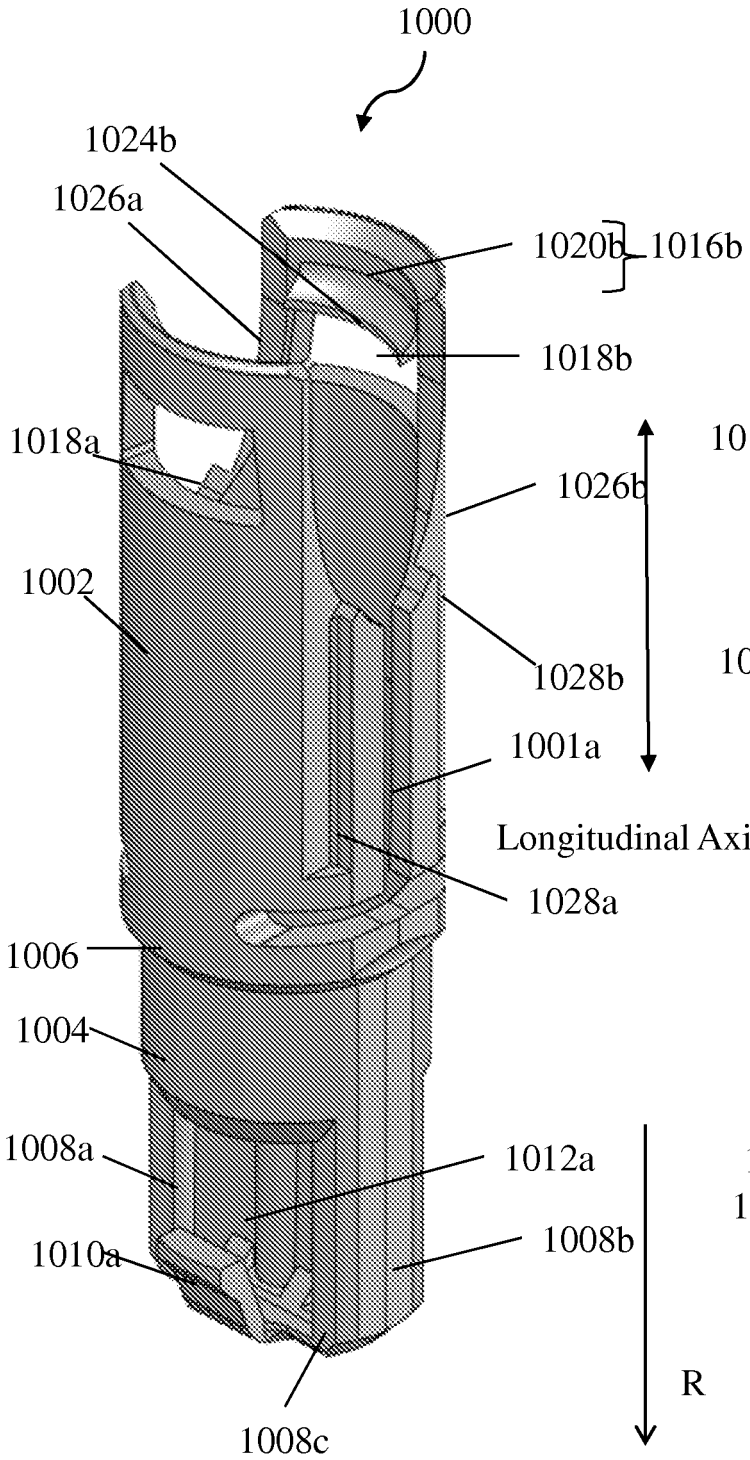


Figure 10A

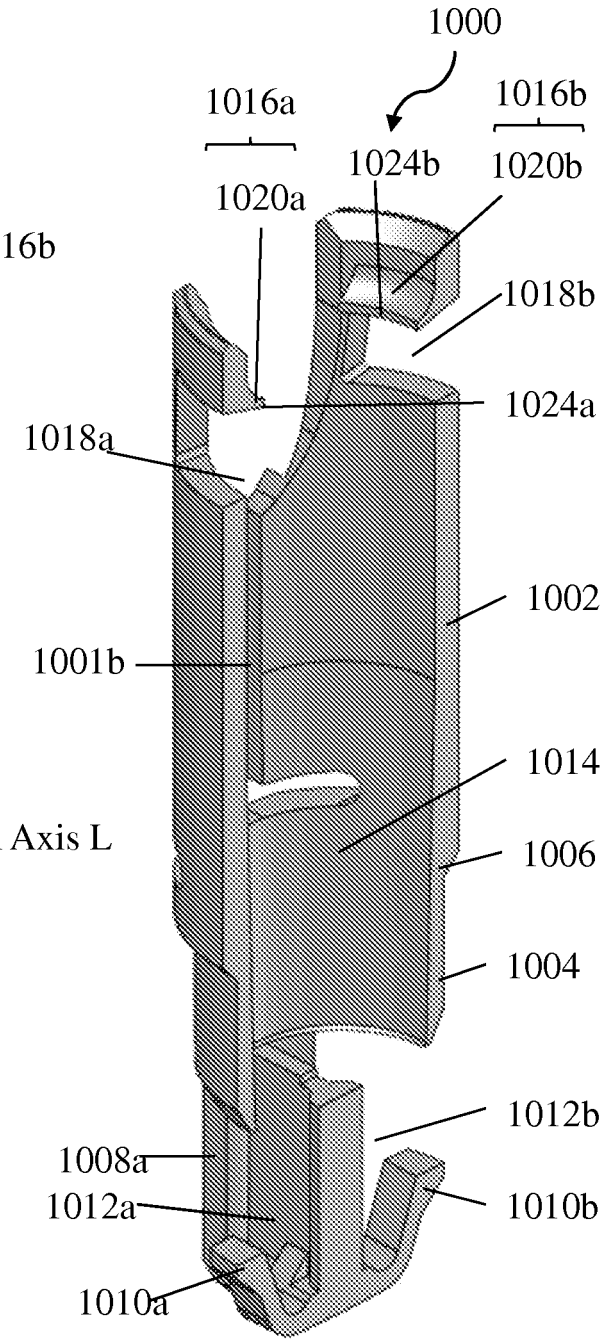


Figure 10B

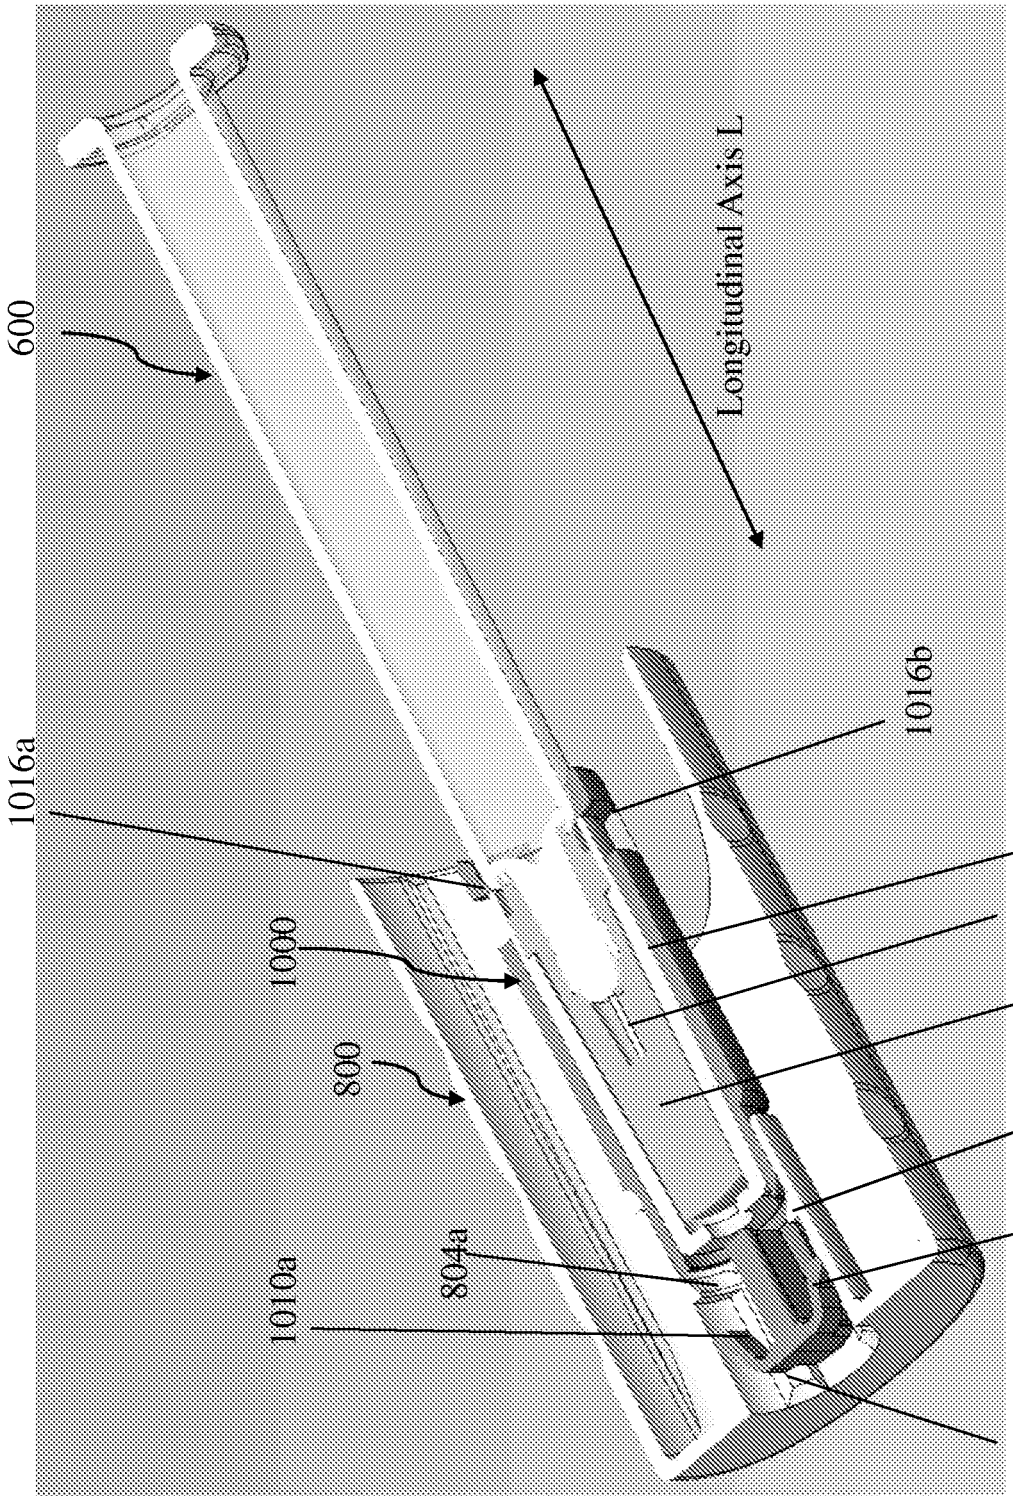

600
1016a
1000
800
1010a
804a
Longitudinal Axis L
1016b
612
604
610
804b
1010b
802

Figure 11

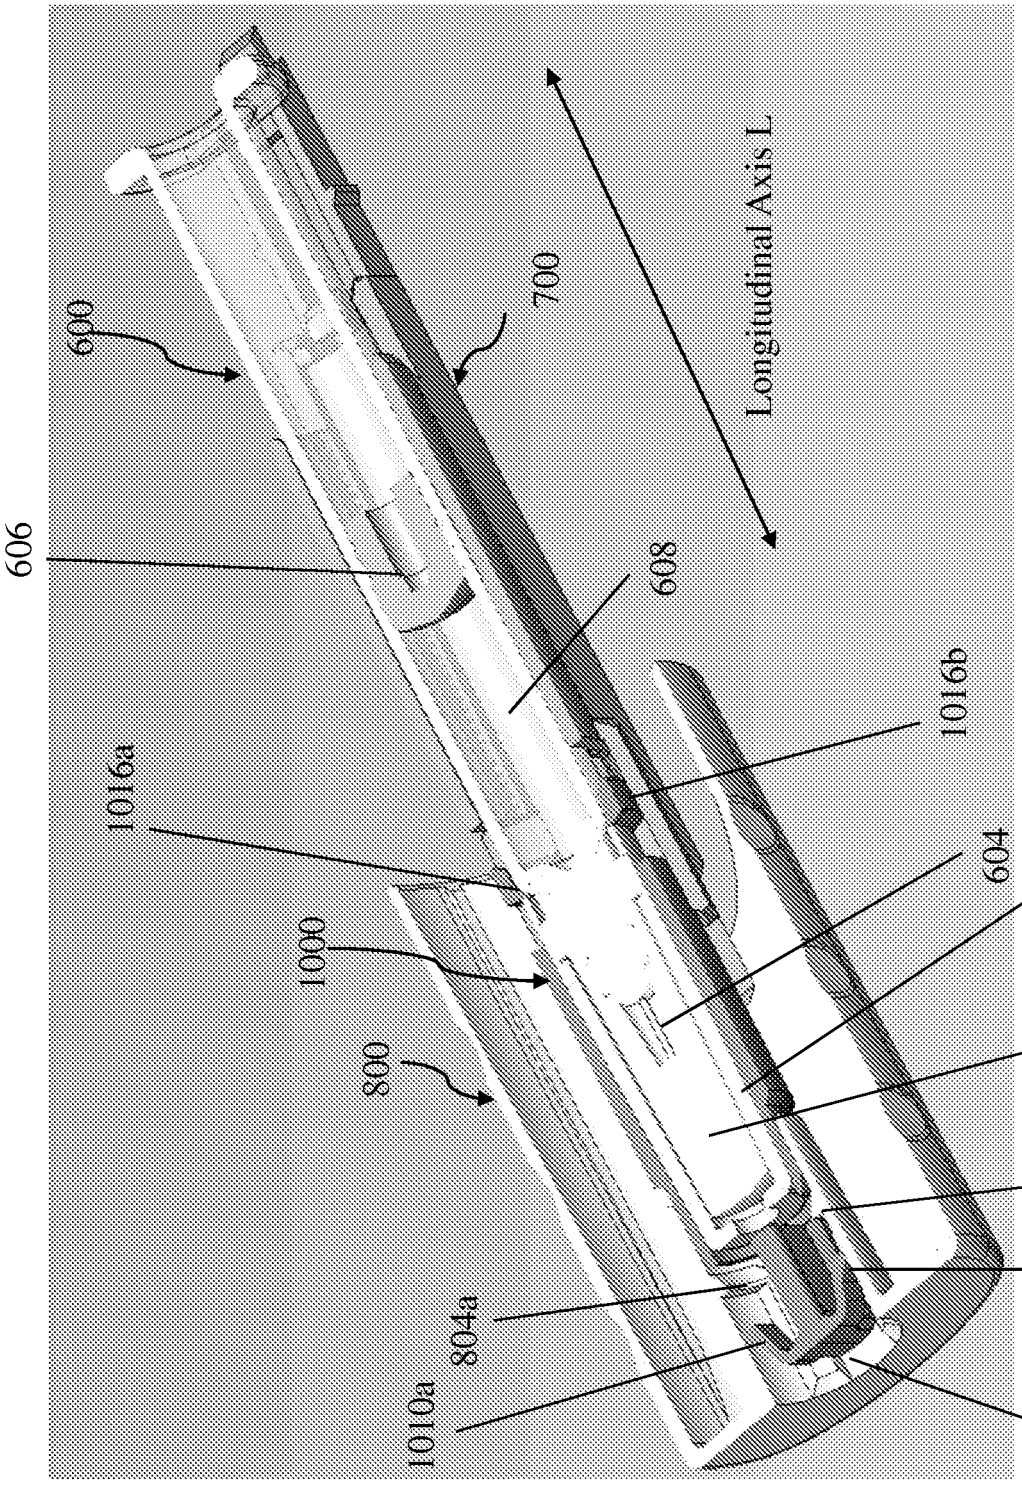

606
600
700
Longitudinal Axis L
608
1016b
1016a
1000
612
604
800
610
804b
804a
1010b
1010a
802

Figure 12

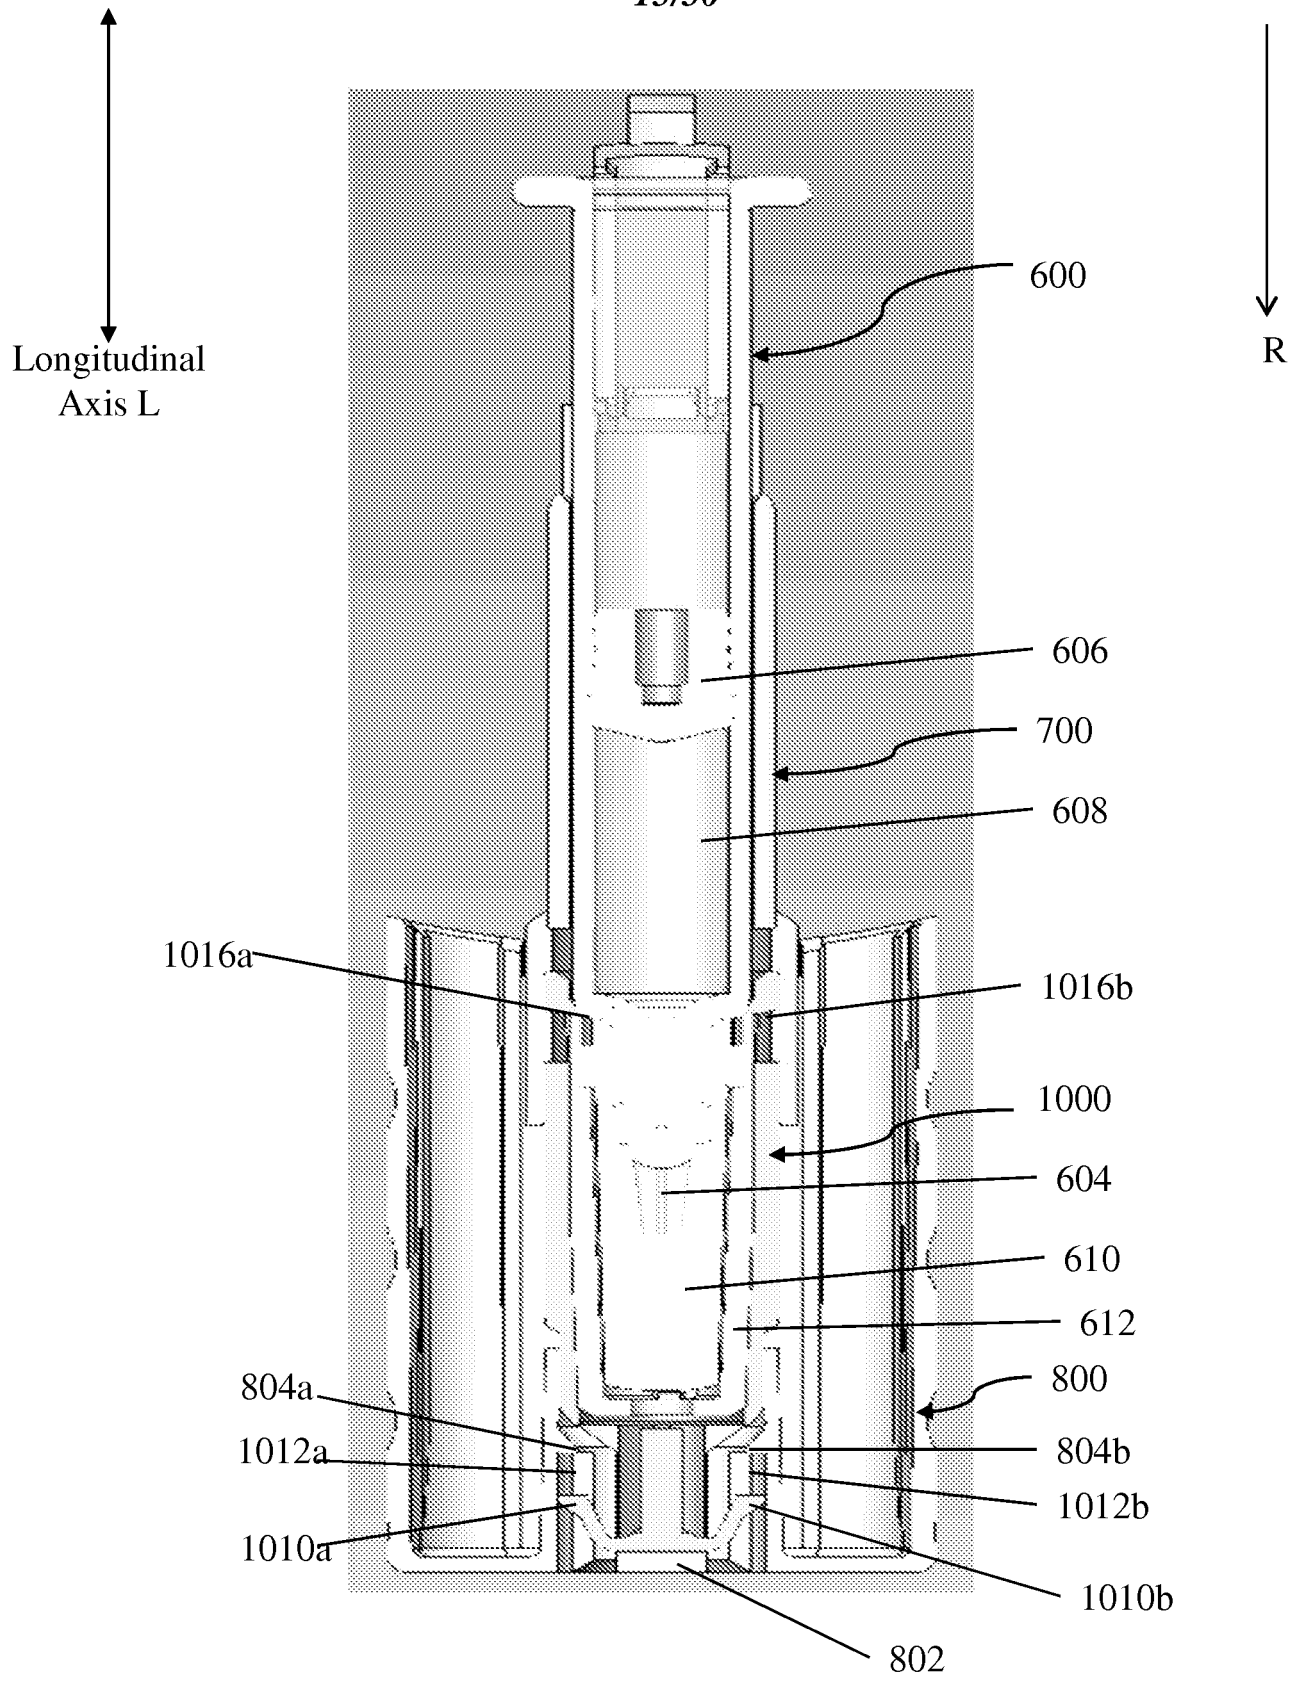

Longitudinal
Axis L
R
600
606
700
608
1016a
1016b
1000
604
610
612
804a
800
1012a
804b
1012b
1010a
1010b
802

Figure 13

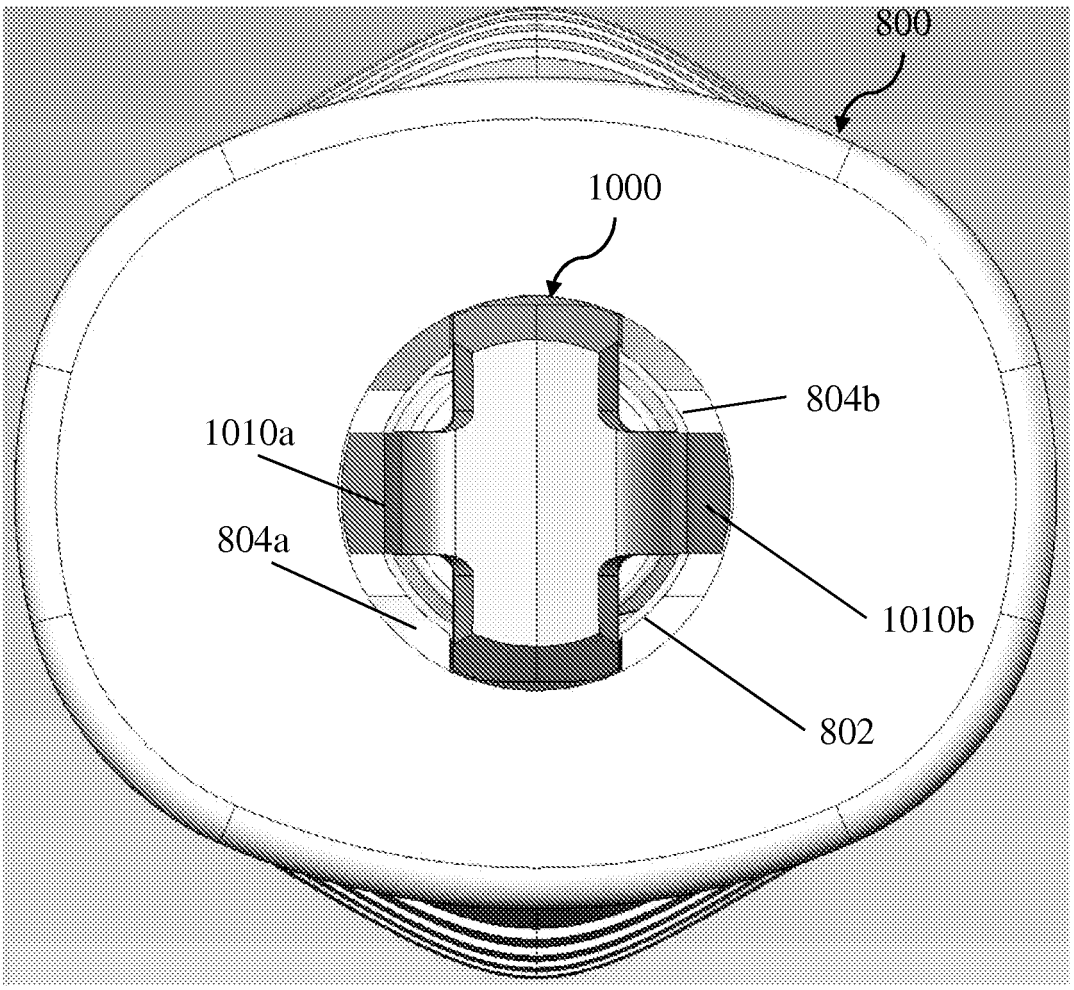


Figure 14

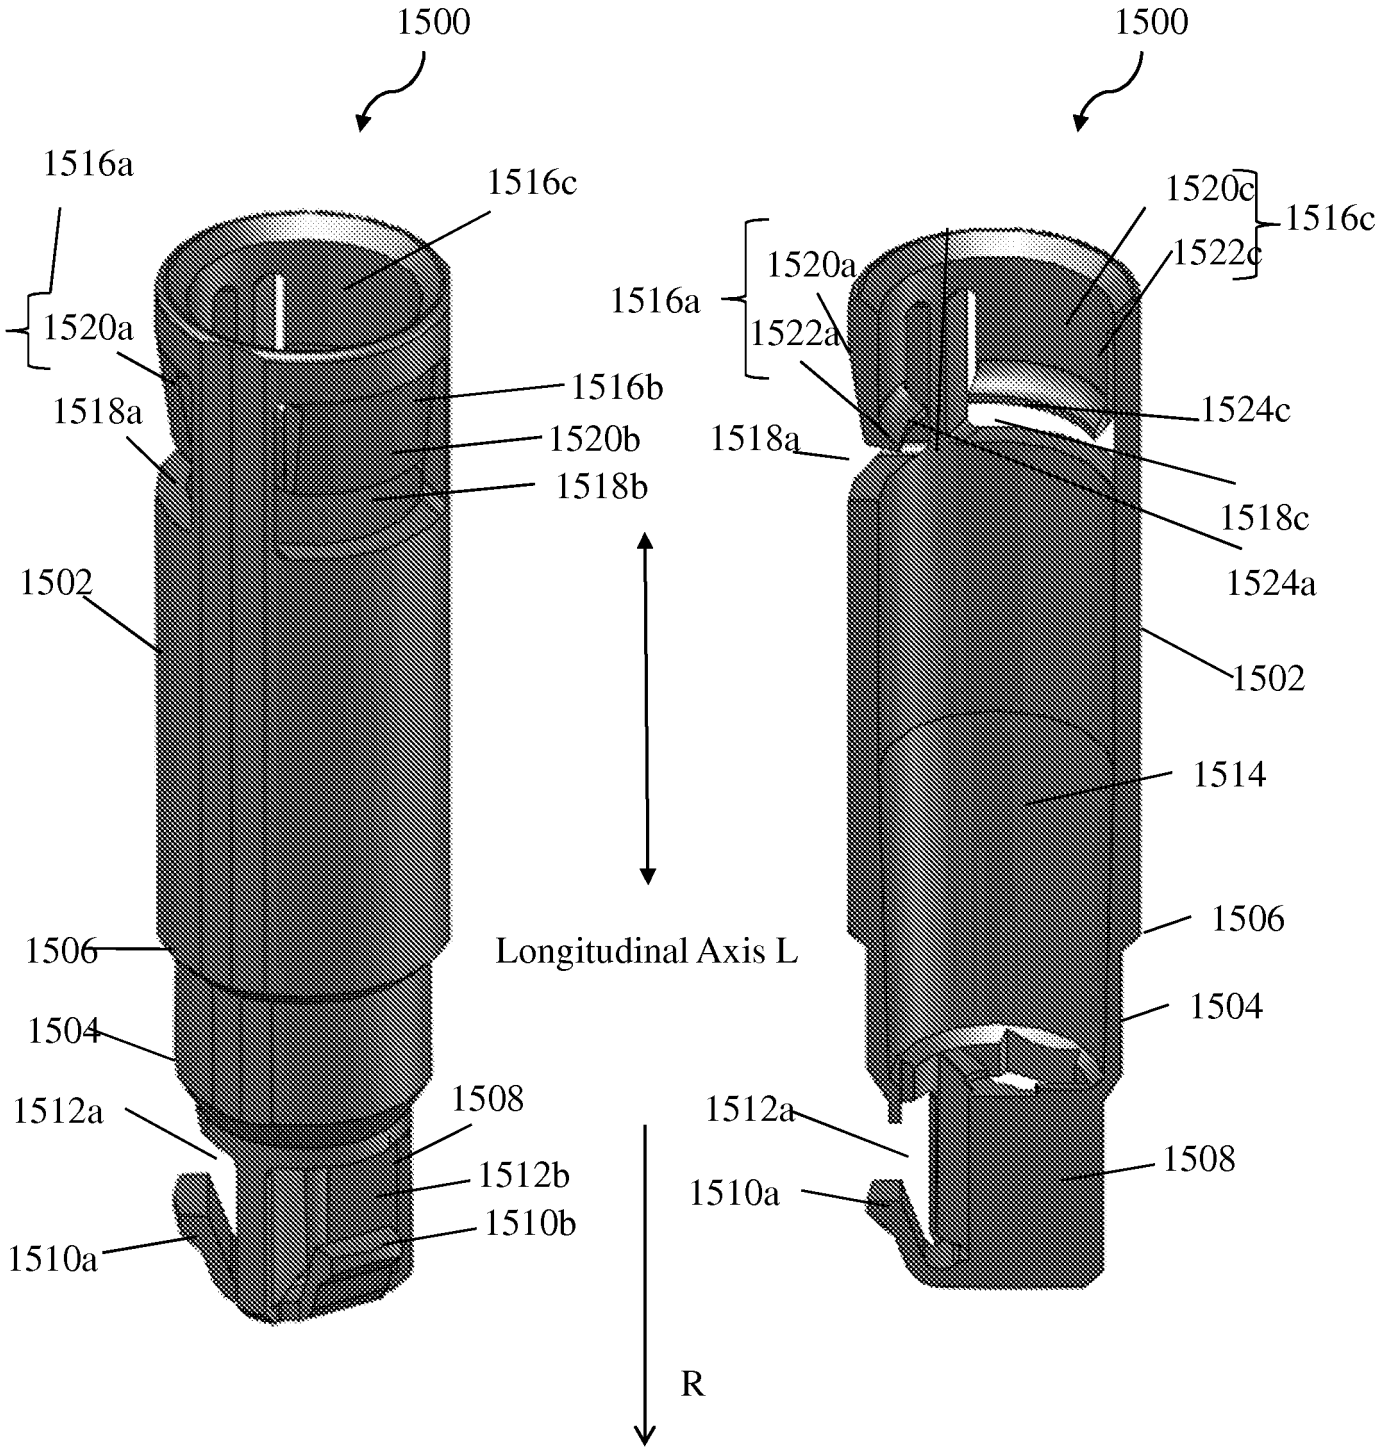


Figure 15A *Figure 15B*

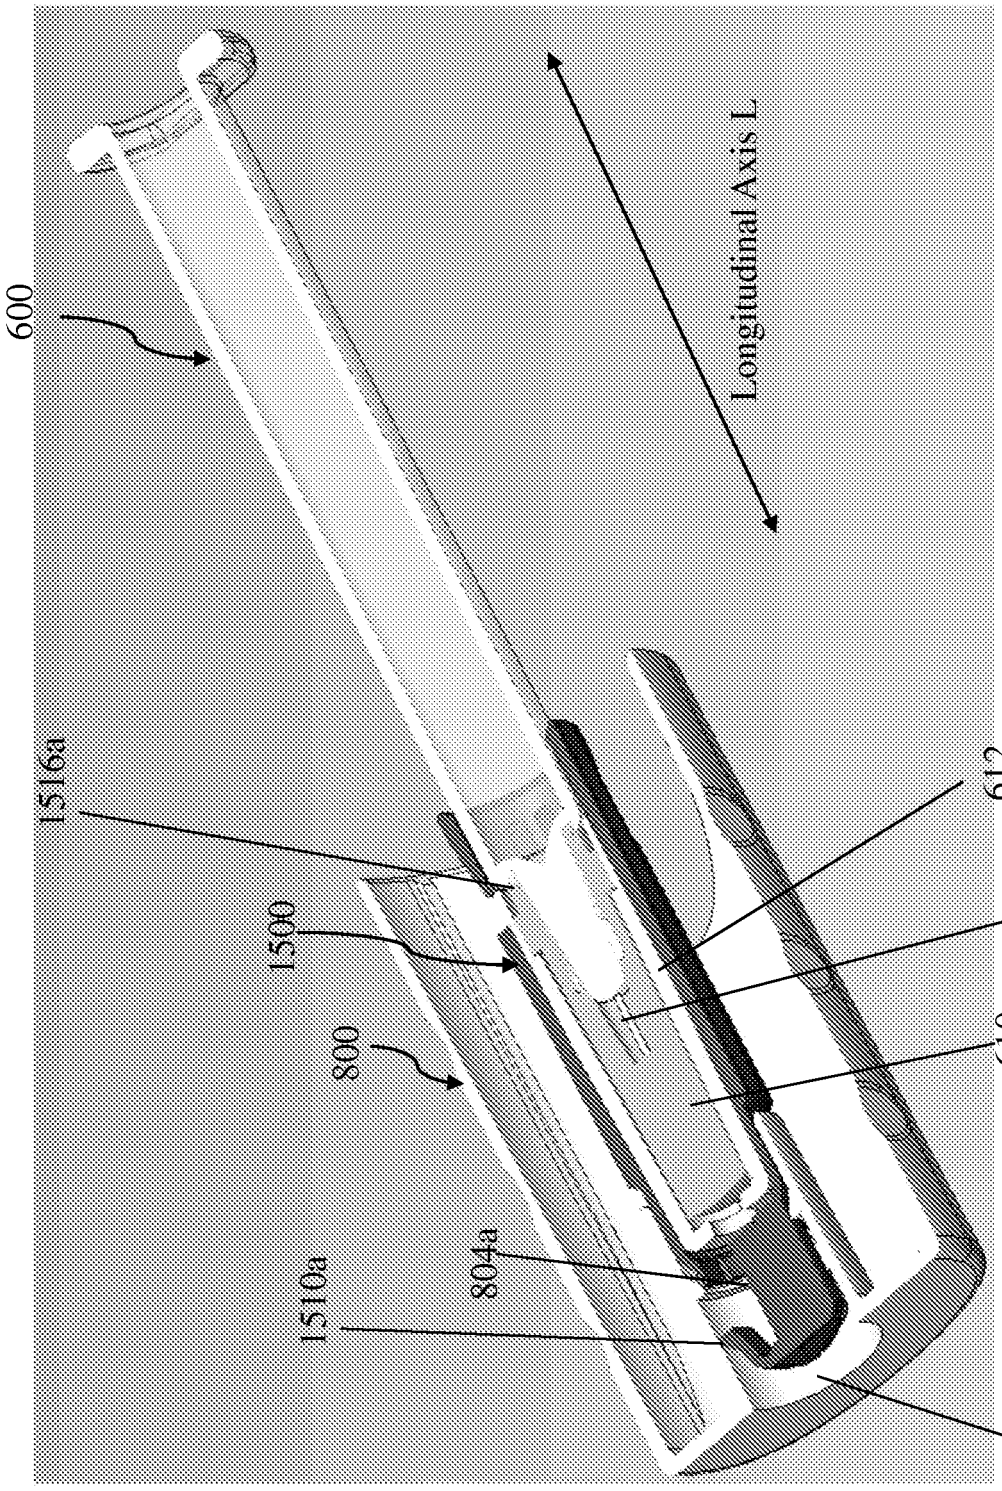

600
Longitudinal Axis L
1516a
1500
800
1510a
804a
612
604
610
802

Figure 16

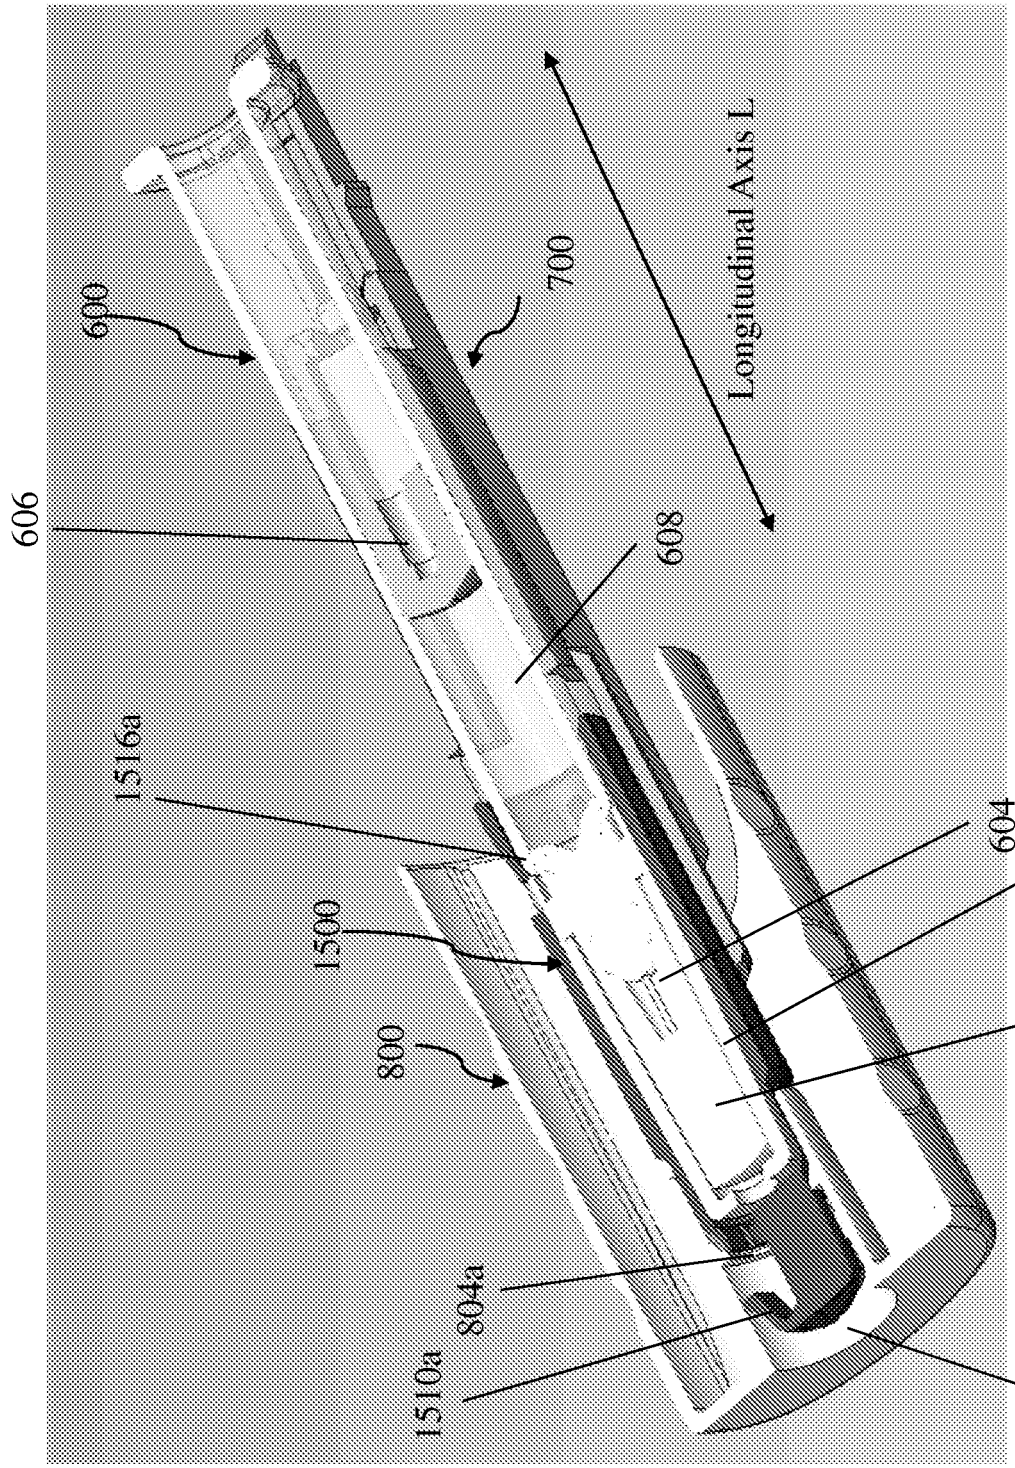

606
600
700
Longitudinal Axis L
608
1516a
1500
800
1510a
804a
604
612
610
802

Figure 17

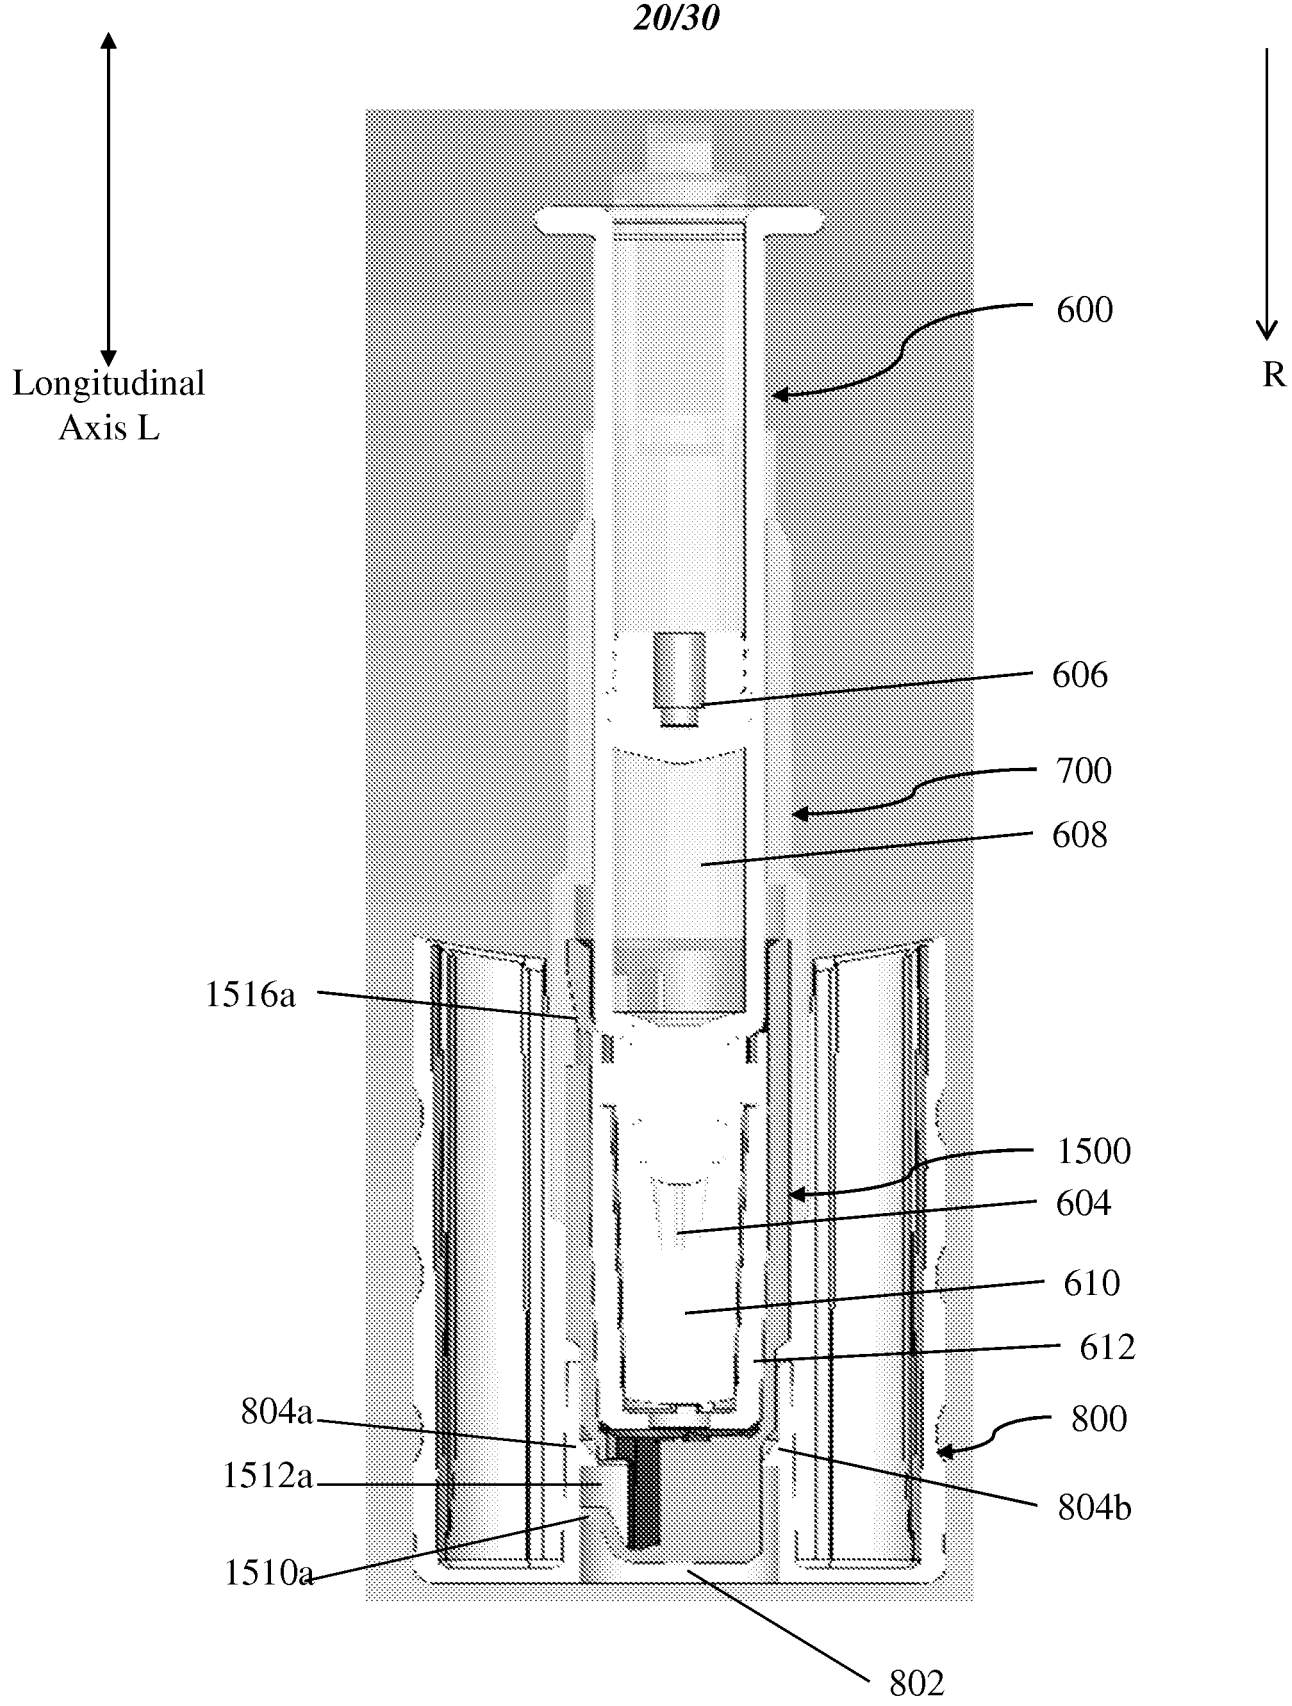

Longitudinal
Axis L
R
600
606
700
608
1516a
1500
604
610
612
804a
800
1512a
804b
1510a
802

Figure 18

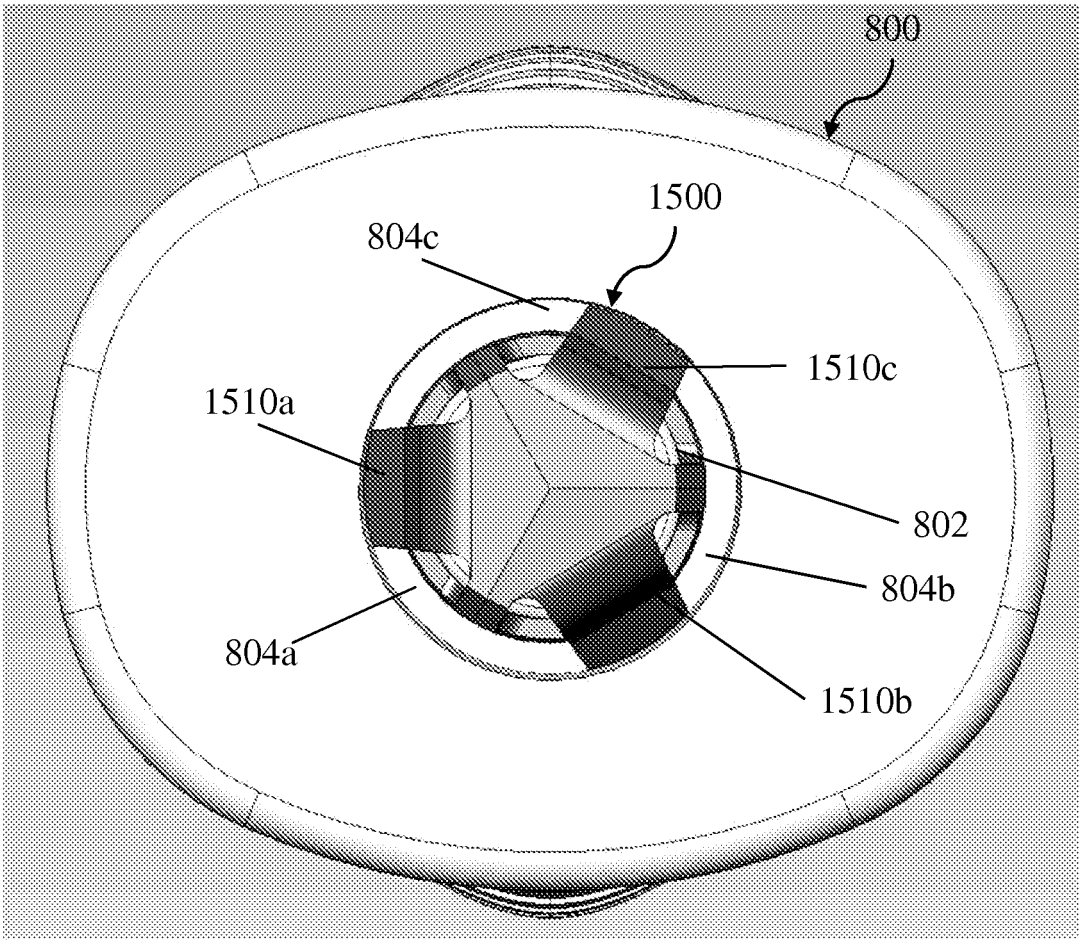


Figure 19

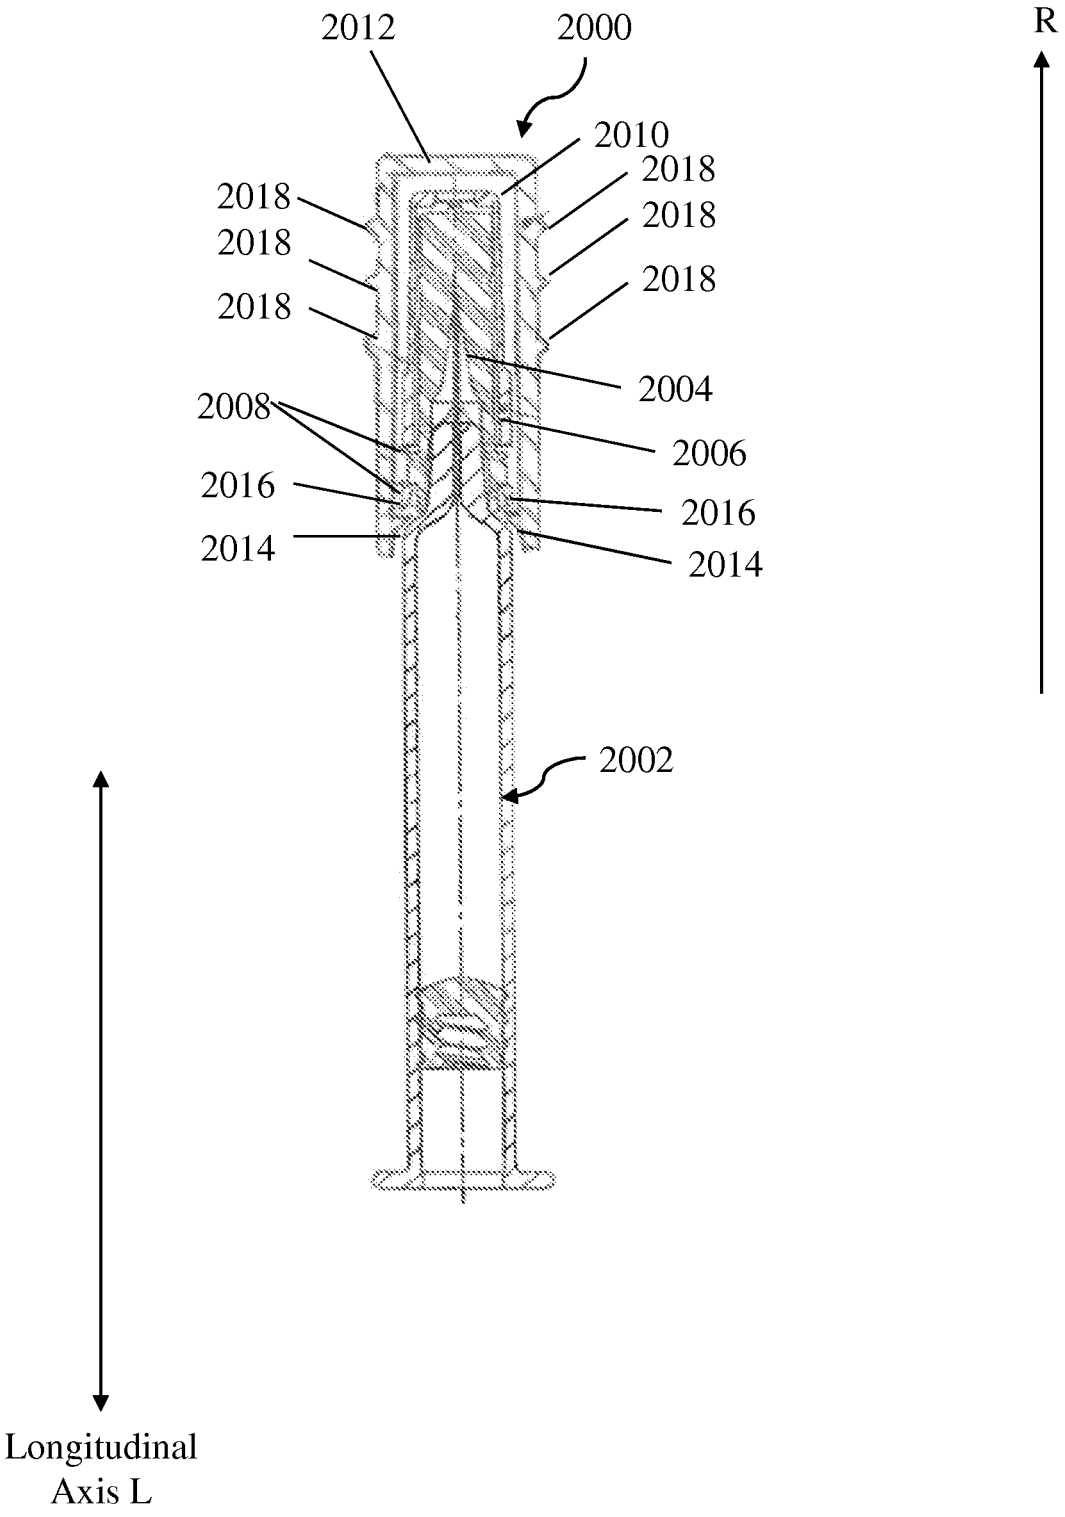

2012
2000
R
2010
2018
2018
2018
2018
2018
2018
2004
2008
2006
2016
2016
2014
2014
2002
Longitudinal
Axis L

Figure 20

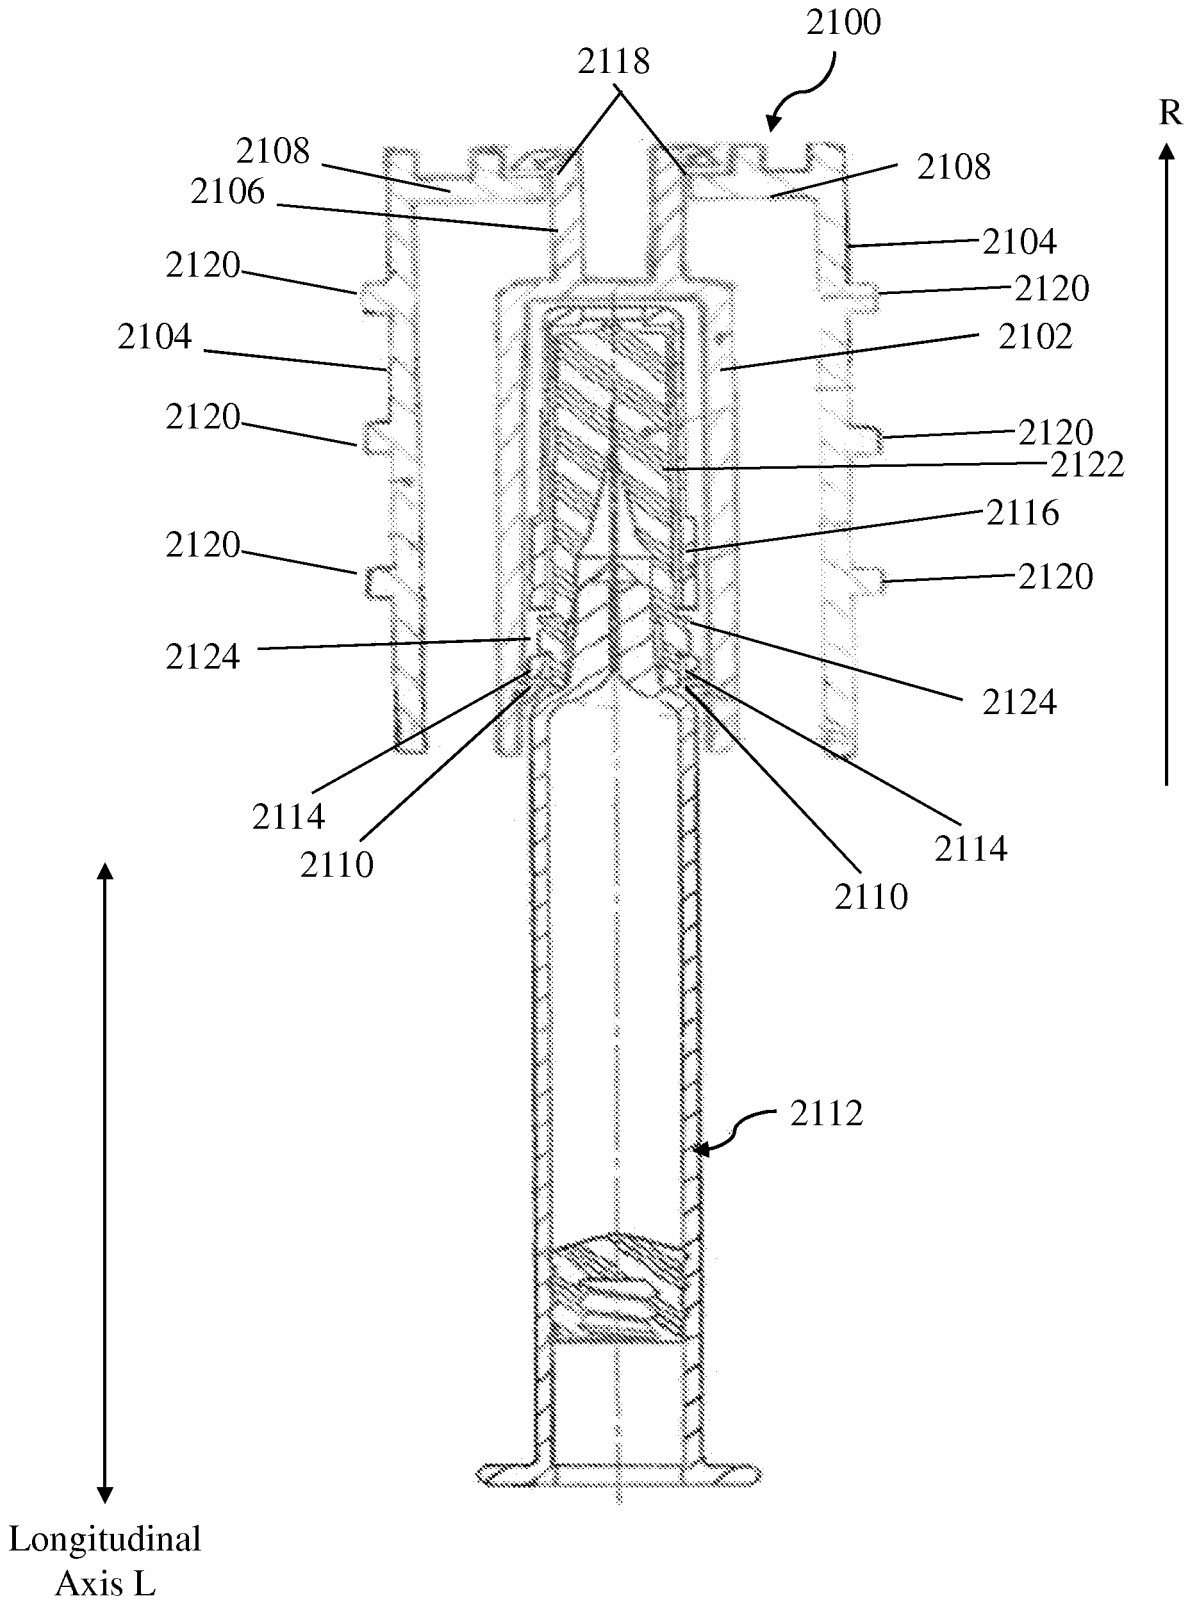

2100
2118
R
2108
2106
2108
2104
2120
2120
2104
2102
2120
2120
2122
2116
2120
2120
2124
2124
2114
2110
2114
2110
2112
Longitudinal
Axis L

Figure 21

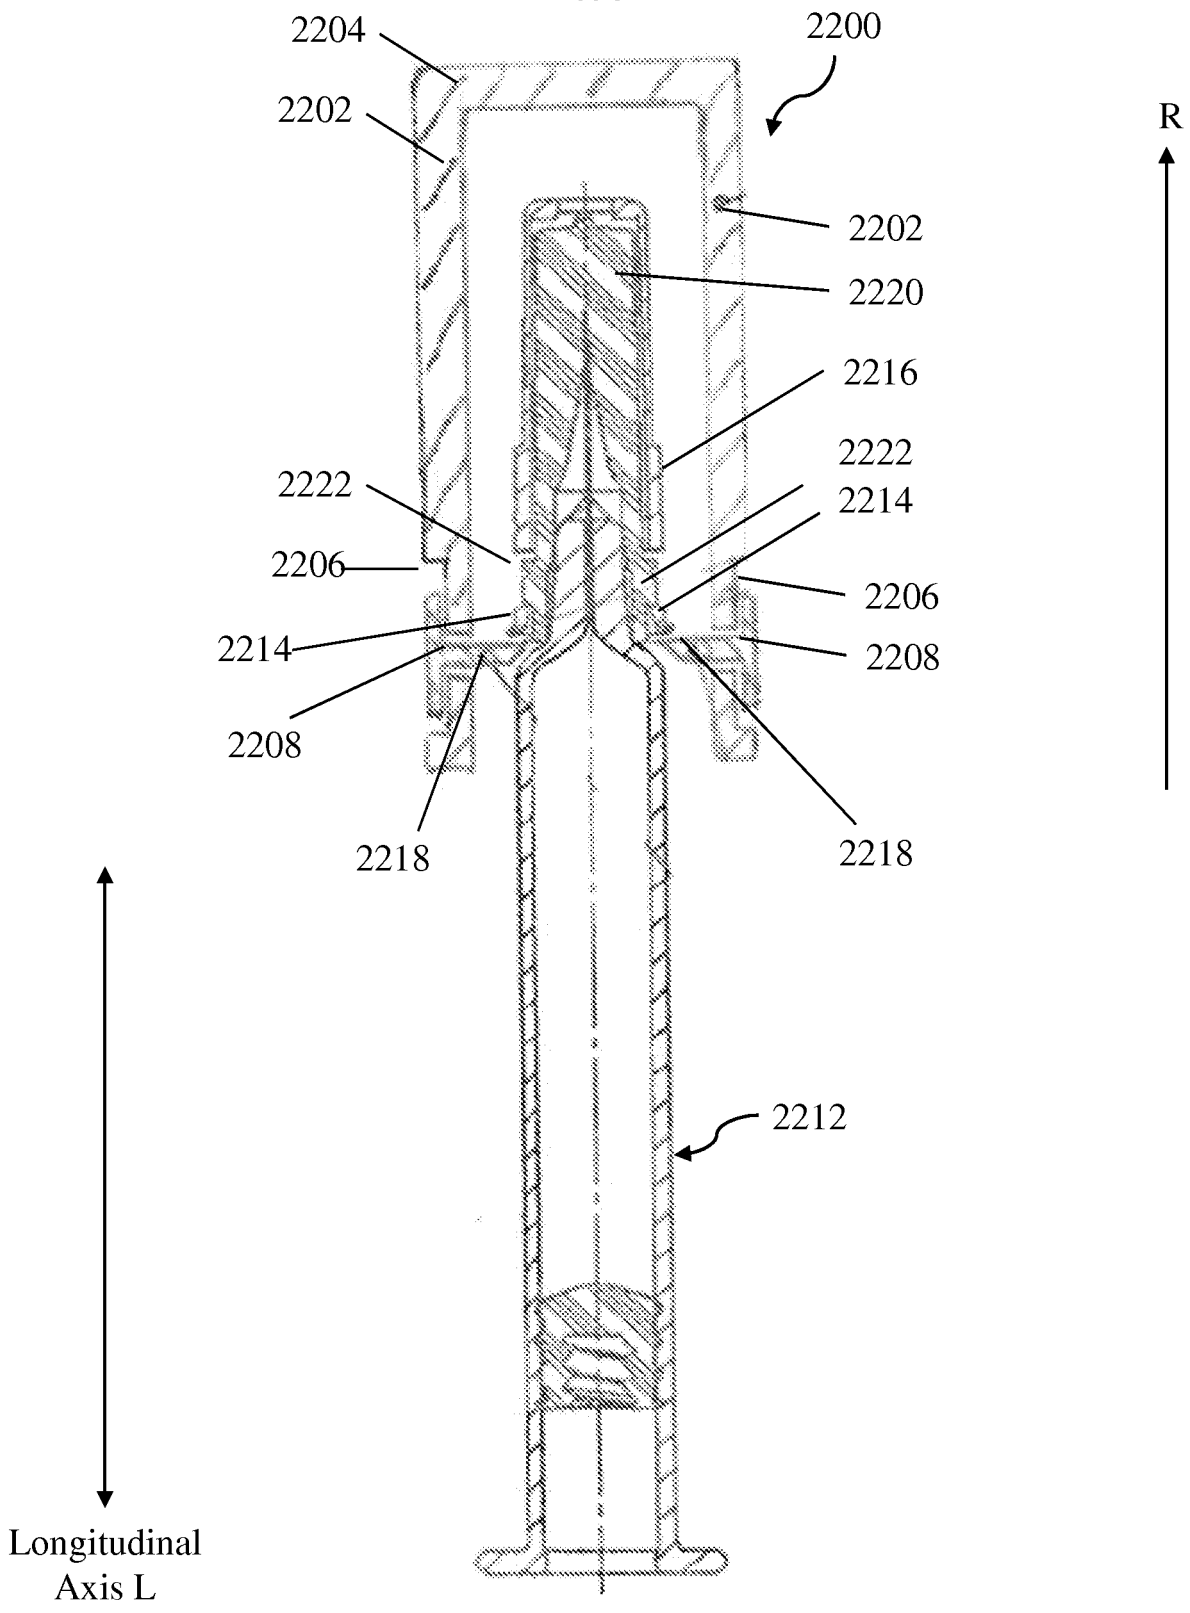

2204
2200
2202
R
2202
2220
2216
2222
2222
2214
2206
2206
2214
2208
2208
2218
2218
2212
Longitudinal
Axis L

Figure 22

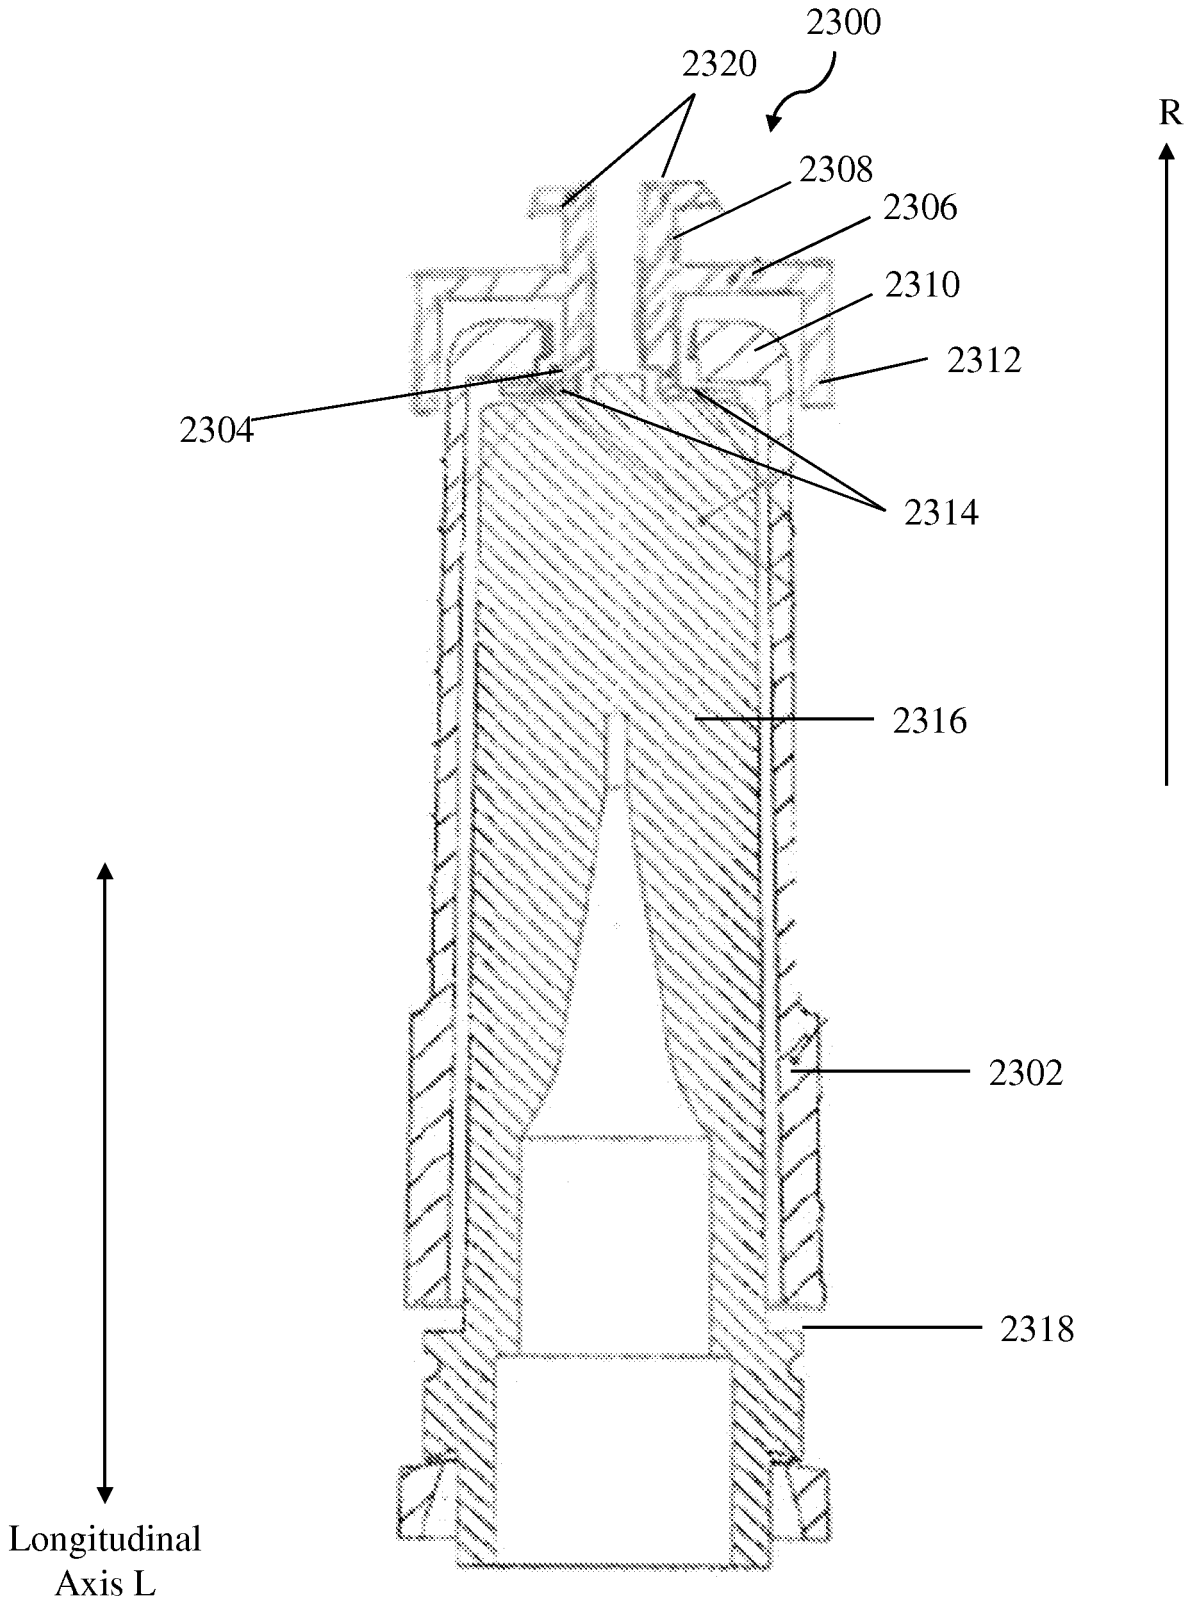

2300
2320
R
2308
2306
2310
2312
2304
2314
2316
2302
2318
Longitudinal
Axis L

Figure 23

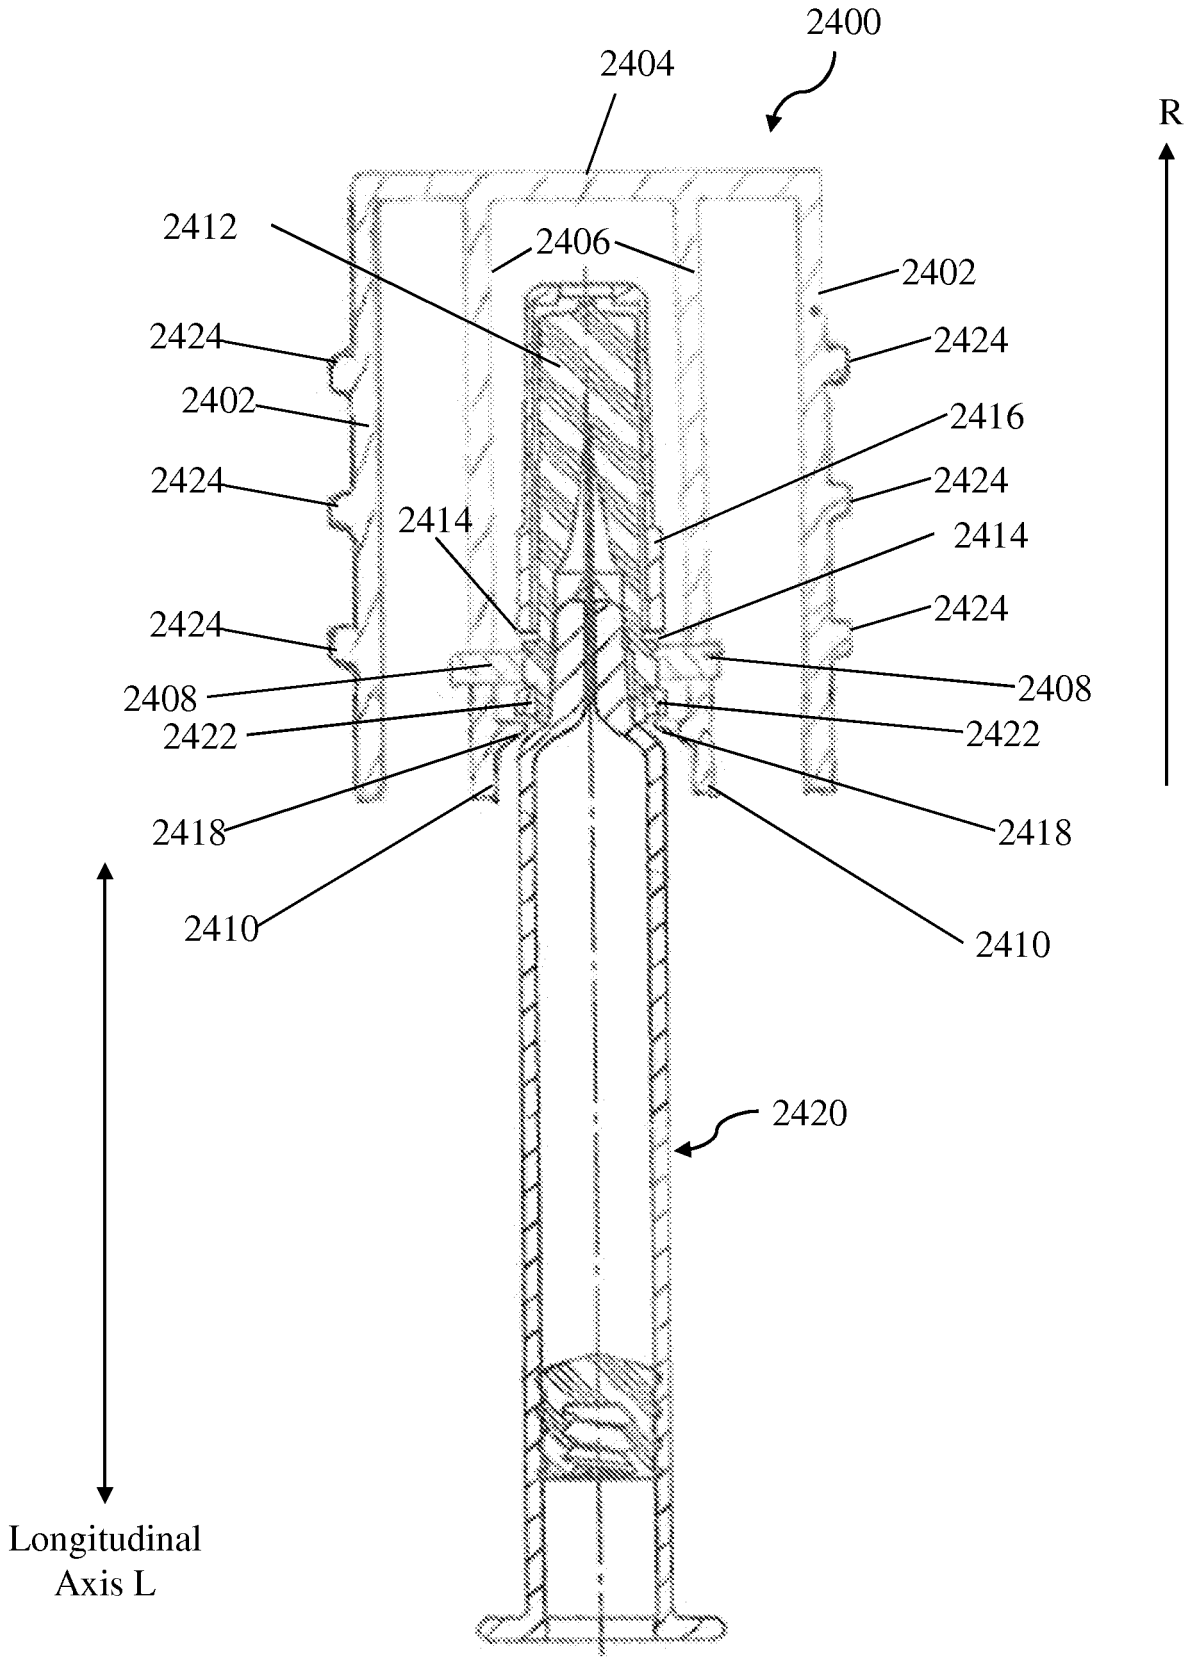

2400
2404
R
2412
2406
2402
2424
2424
2402
2416
2424
2424
2414
2414
2424
2424
2408
2408
2422
2422
2418
2418
2410
2410
2420
Longitudinal
Axis L

Figure 24

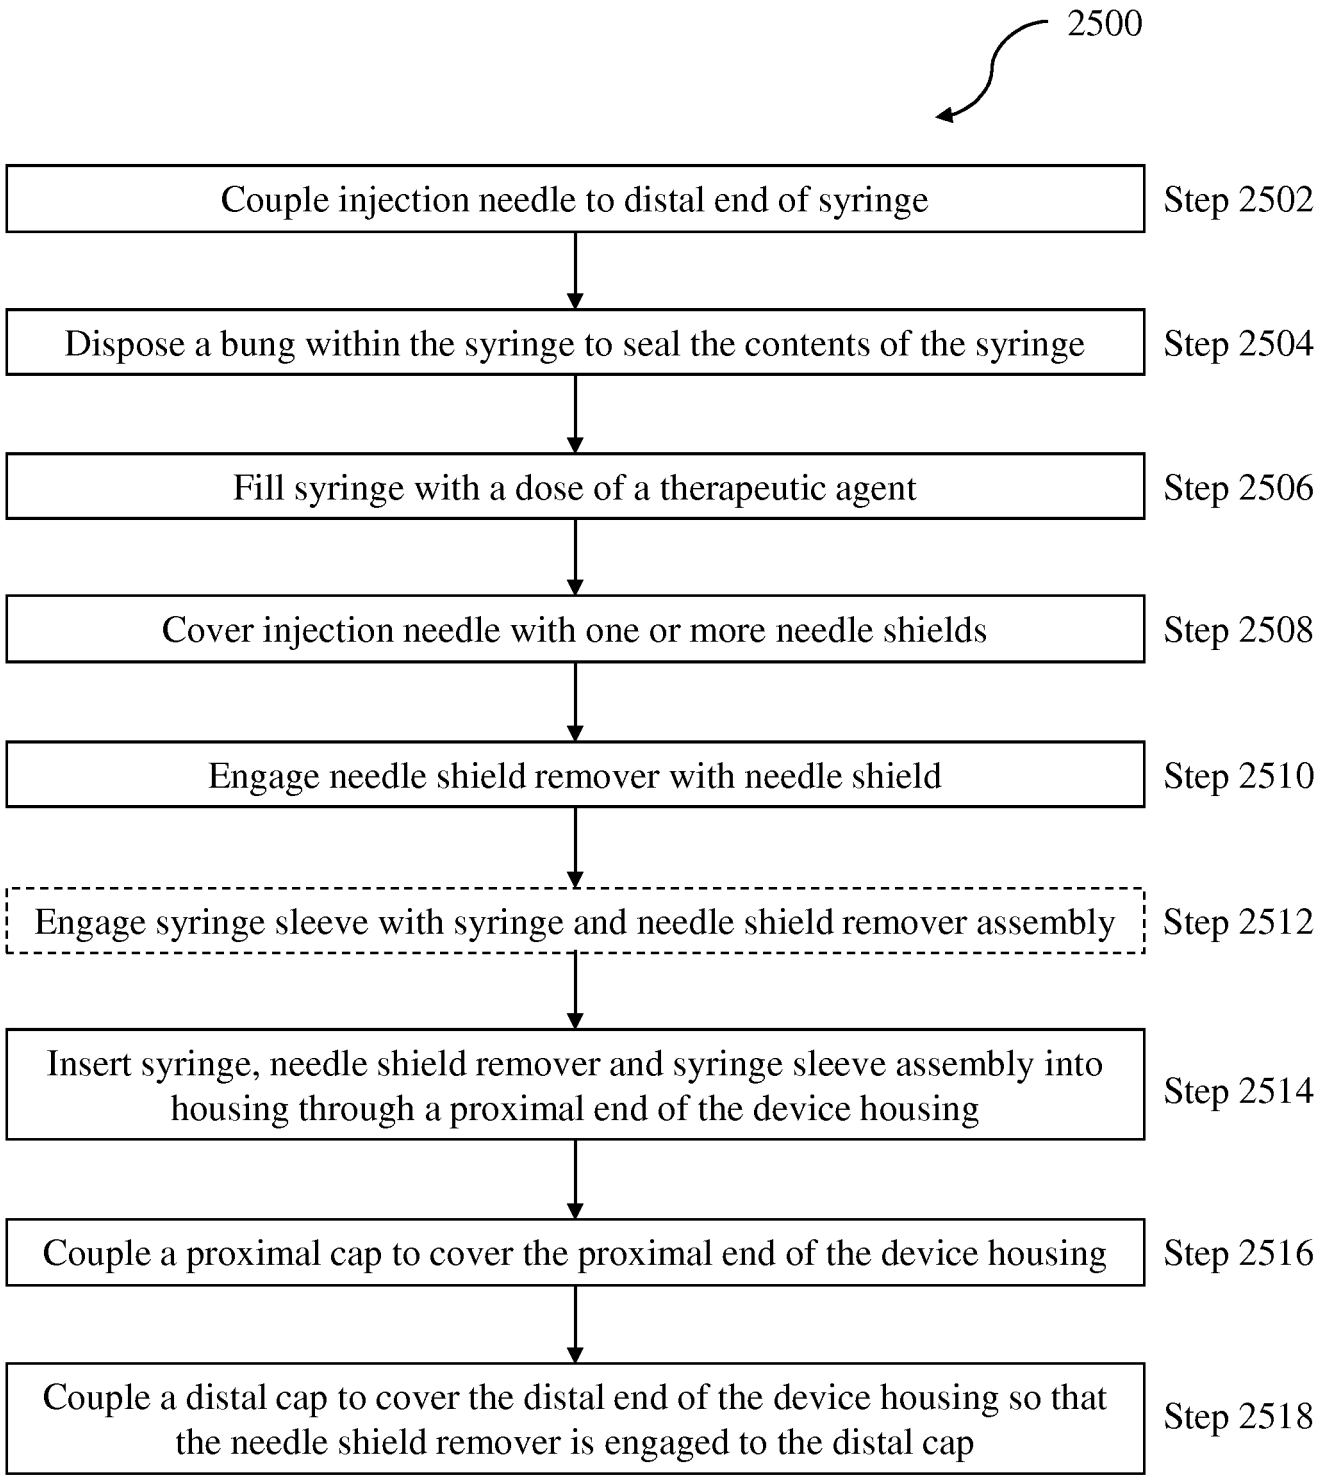

2500
Couple injection needle to distal end of syringe
Step 2502
Dispose a bung within the syringe to seal the contents of the syringe
Step 2504
Fill syringe with a dose of a therapeutic agent
Step 2506
Cover injection needle with one or more needle shields
Step 2508
Engage needle shield remover with needle shield
Step 2510
Engage syringe sleeve with syringe and needle shield remover assembly
Step 2512
Insert syringe, needle shield remover and syringe sleeve assembly into housing through a proximal end of the device housing
Step 2514
Couple a proximal cap to cover the proximal end of the device housing
Step 2516
Couple a distal cap to cover the distal end of the device housing so that the needle shield remover is engaged to the distal cap
Step 2518

Figure 25

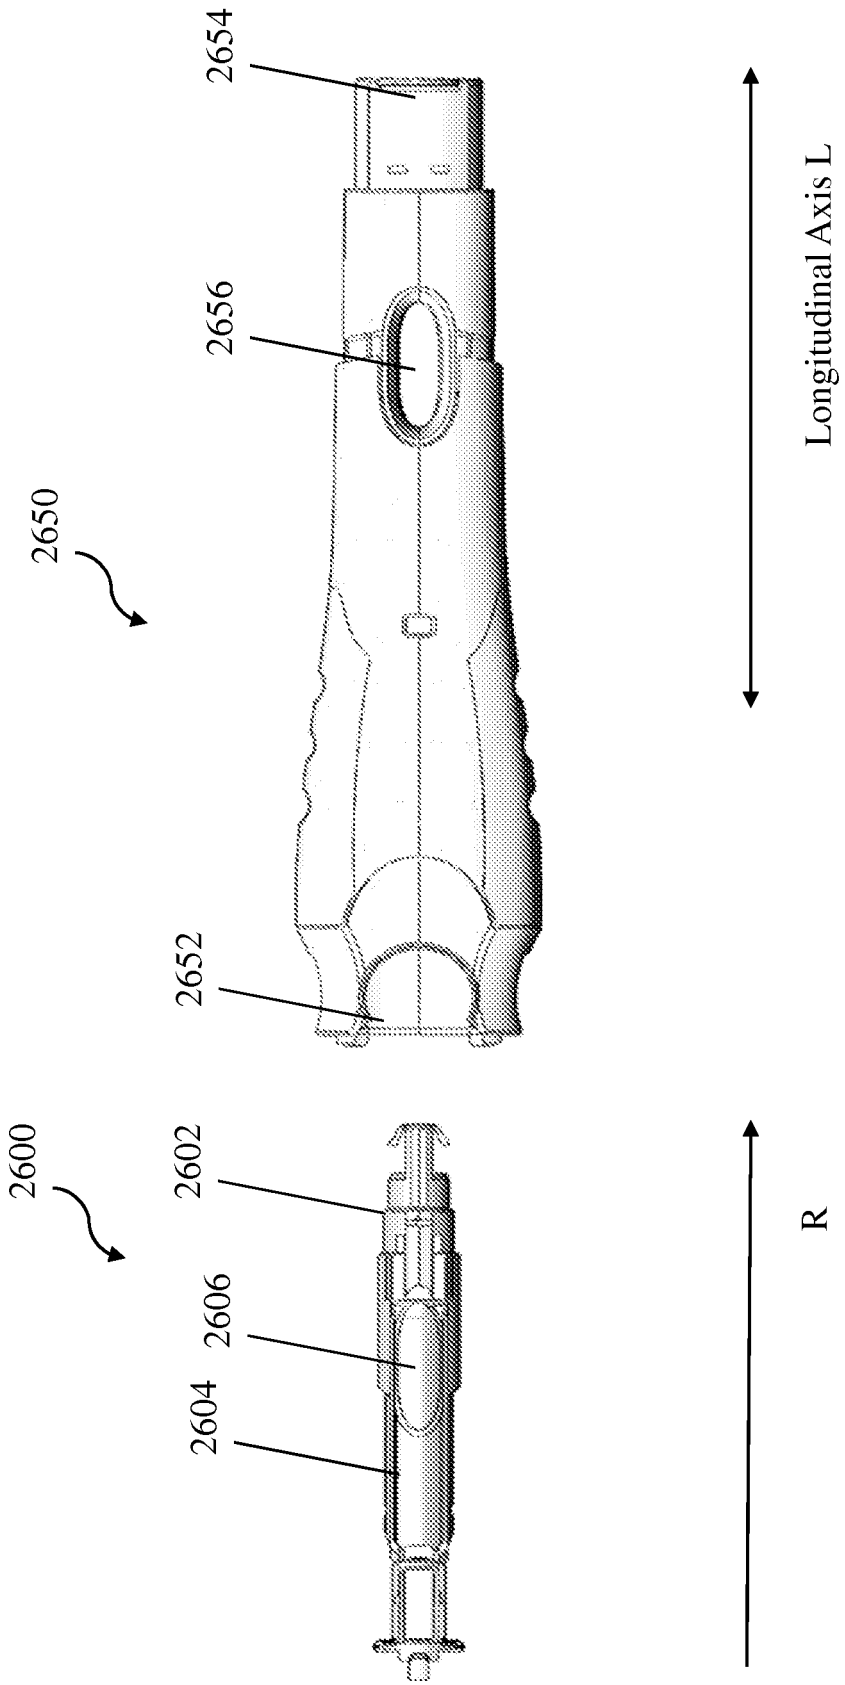

2654
2656
2650
2652
Longitudinal Axis L
2600
2602
2606
2604
R

Figure 26

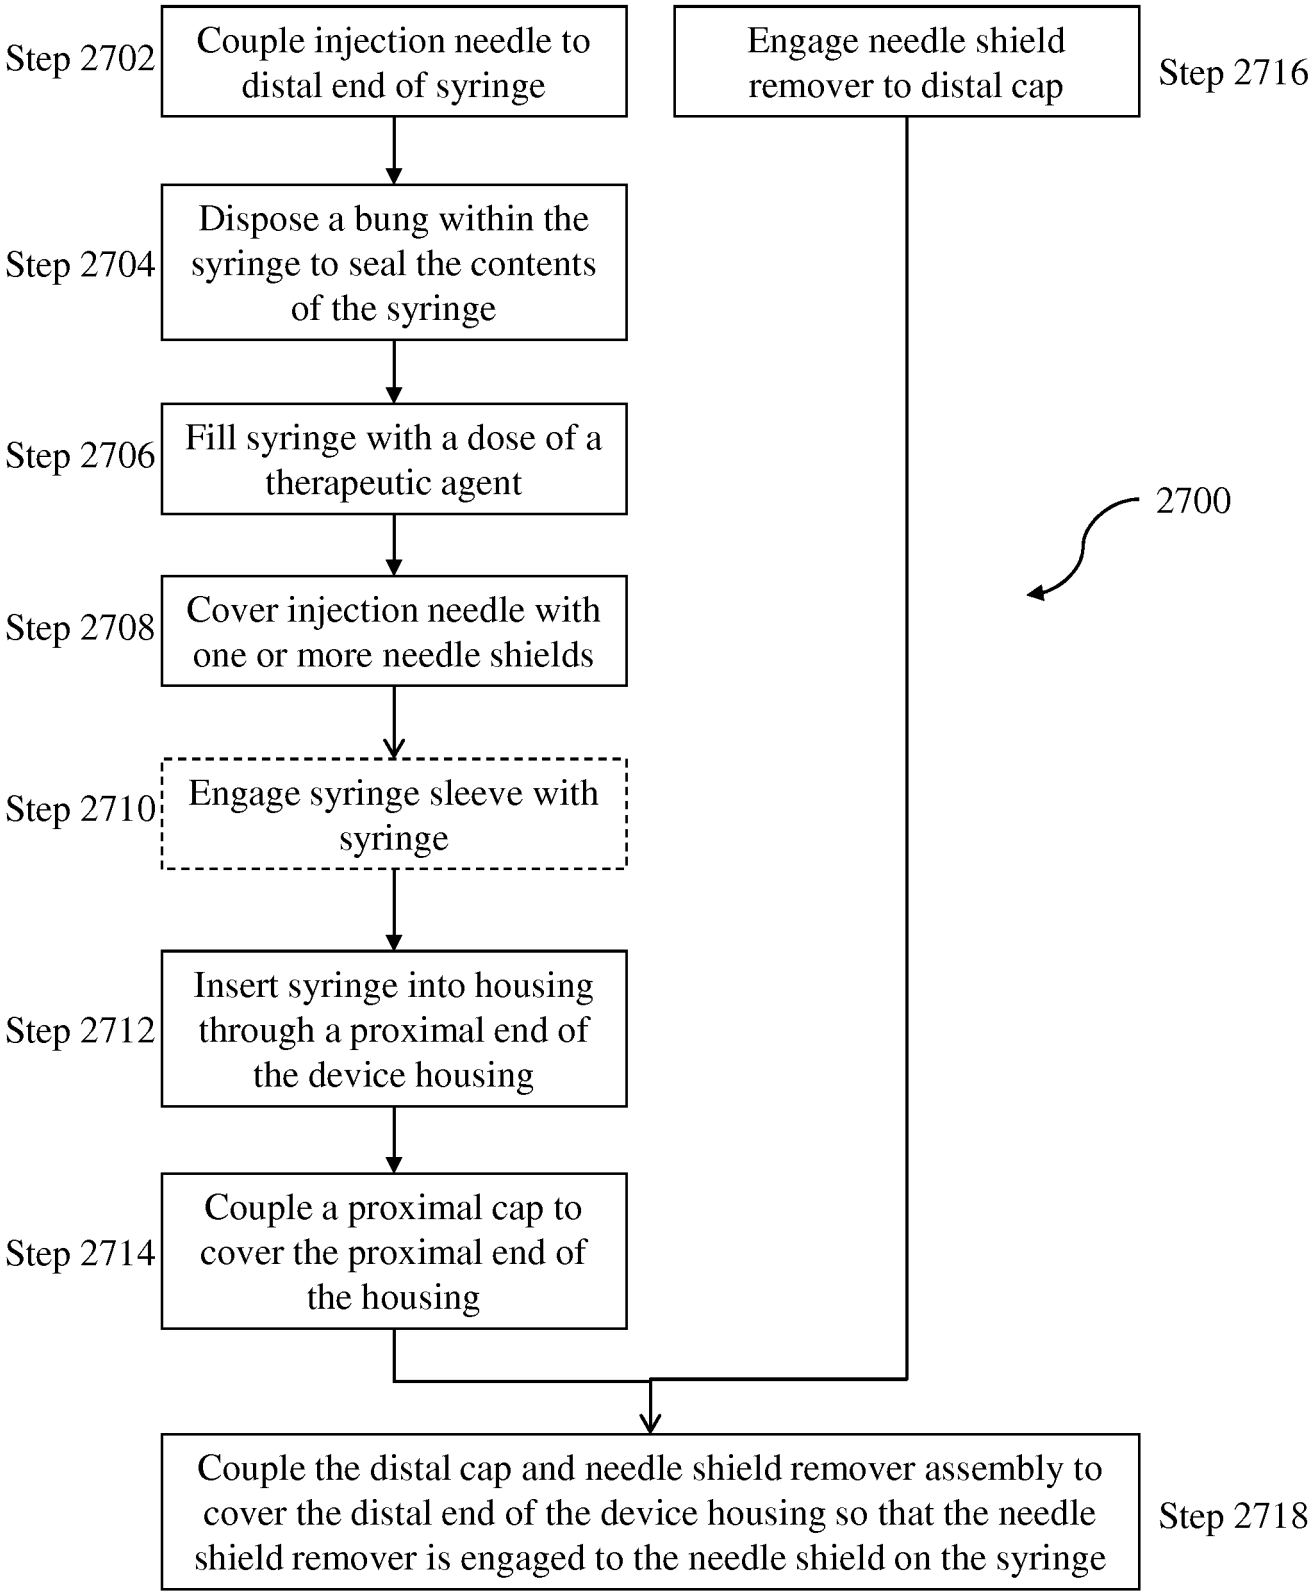

Step 2702
Couple injection needle to distal end of syringe
Step 2704
Dispose a bung within the syringe to seal the contents of the syringe
Step 2706
Fill syringe with a dose of a therapeutic agent
Step 2708
Cover injection needle with one or more needle shields
Step 2710
Engage syringe sleeve with syringe
Step 2712
Insert syringe into housing through a proximal end of the device housing
Step 2714
Couple a proximal cap to cover the proximal end of the housing
Step 2716
Engage needle shield remover to distal cap
2700
Couple the distal cap and needle shield remover assembly to cover the distal end of the device housing so that the needle shield remover is engaged to the needle shield on the syringe
Step 2718

Figure 27

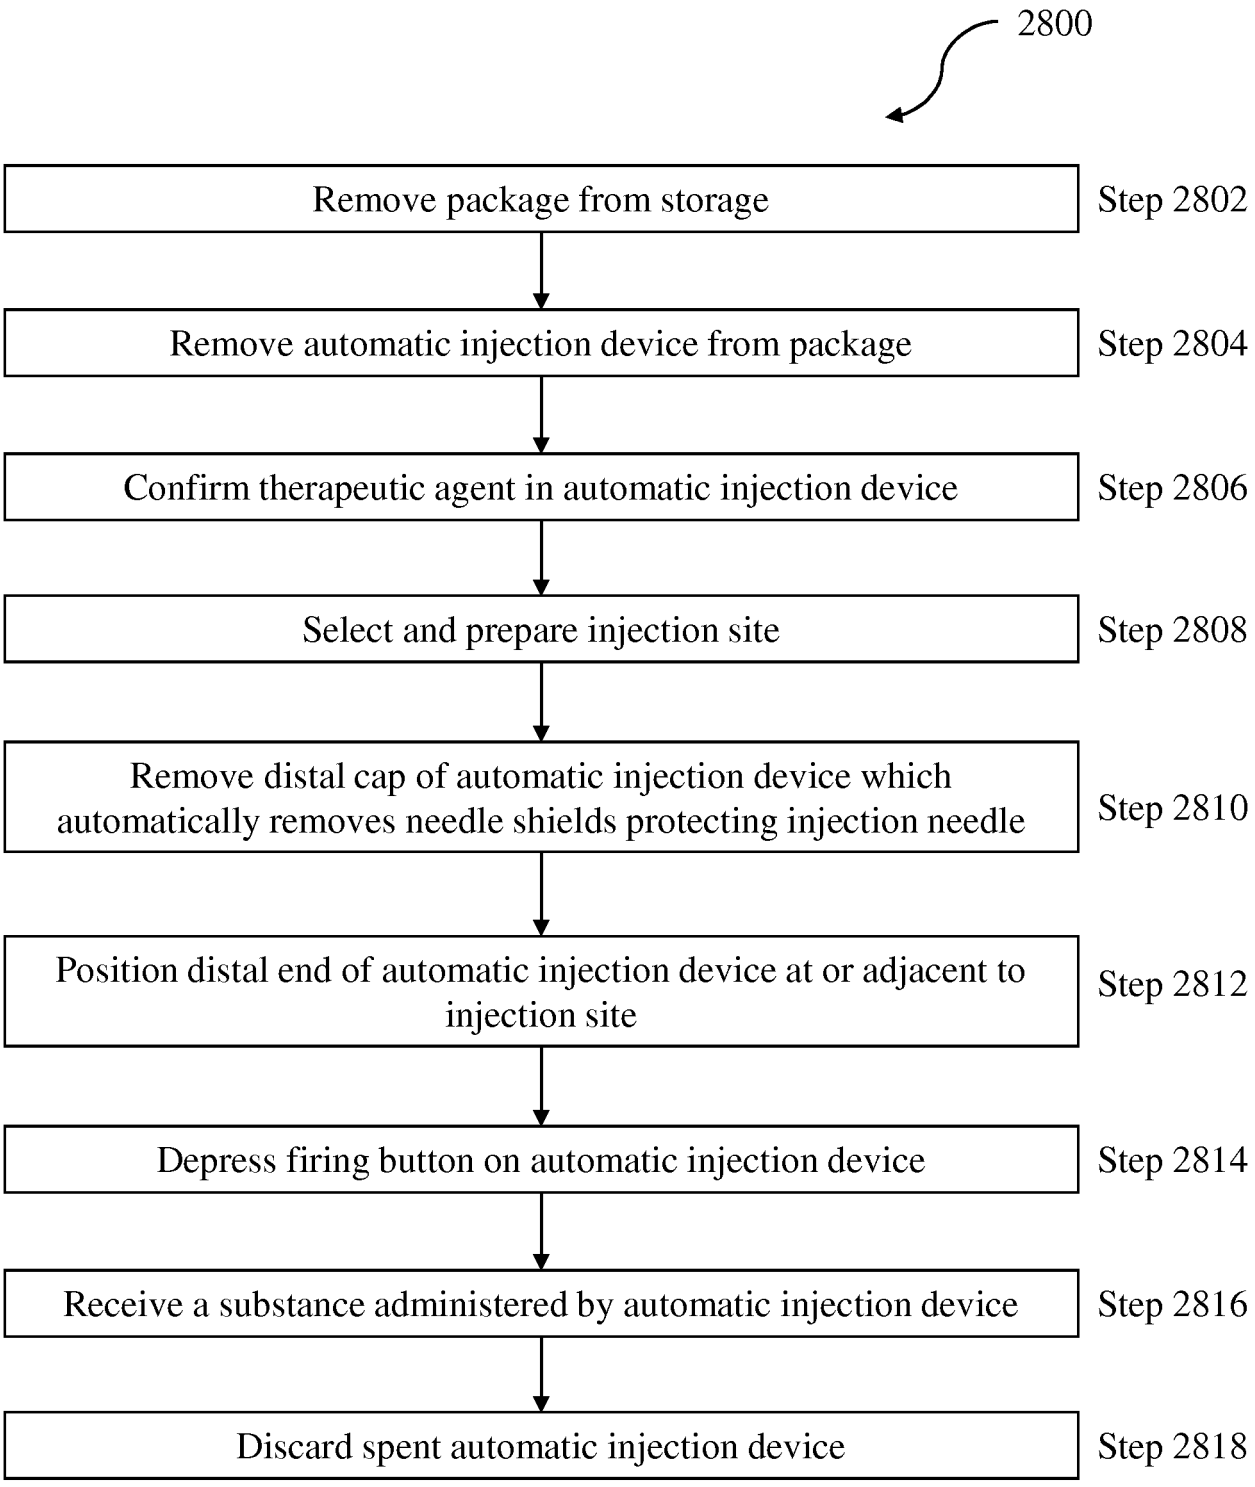

2800
Remove package from storage
Step 2802
Remove automatic injection device from package
Step 2804
Confirm therapeutic agent in automatic injection device
Step 2806
Select and prepare injection site
Step 2808
Remove distal cap of automatic injection device which automatically removes needle shields protecting injection needle
Step 2810
Position distal end of automatic injection device at or adjacent to injection site
Step 2812
Depress firing button on automatic injection device
Step 2814
Receive a substance administered by automatic injection device
Step 2816
Discard spent automatic injection device
Step 2818

Figure 28