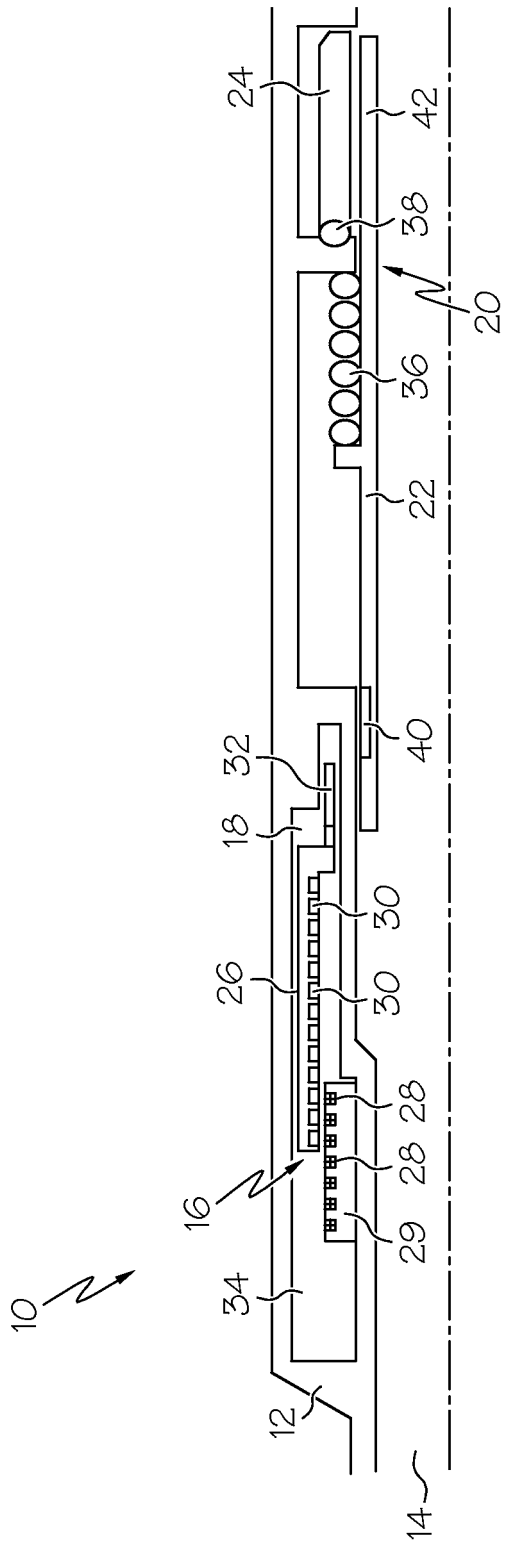

10
12
14
16
18
20
22
24
26
28
28
29
30
30
32
34
36
38
40
42

FIG. 1

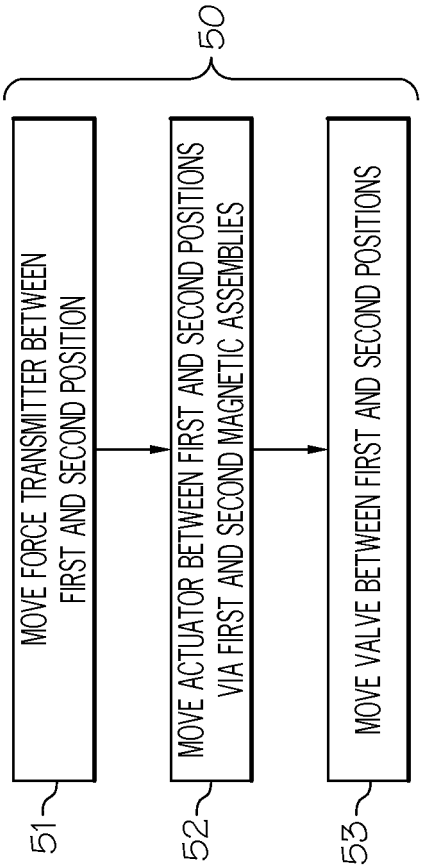

50
MOVE FORCE TRANSMITTER BETWEEN FIRST AND SECOND POSITION
MOVE ACTUATOR BETWEEN FIRST AND SECOND POSITIONS VIA FIRST AND SECOND MAGNETIC ASSEMBLIES
MOVE VALVE BETWEEN FIRST AND SECOND POSITIONS
51
52
53

FIG. 3

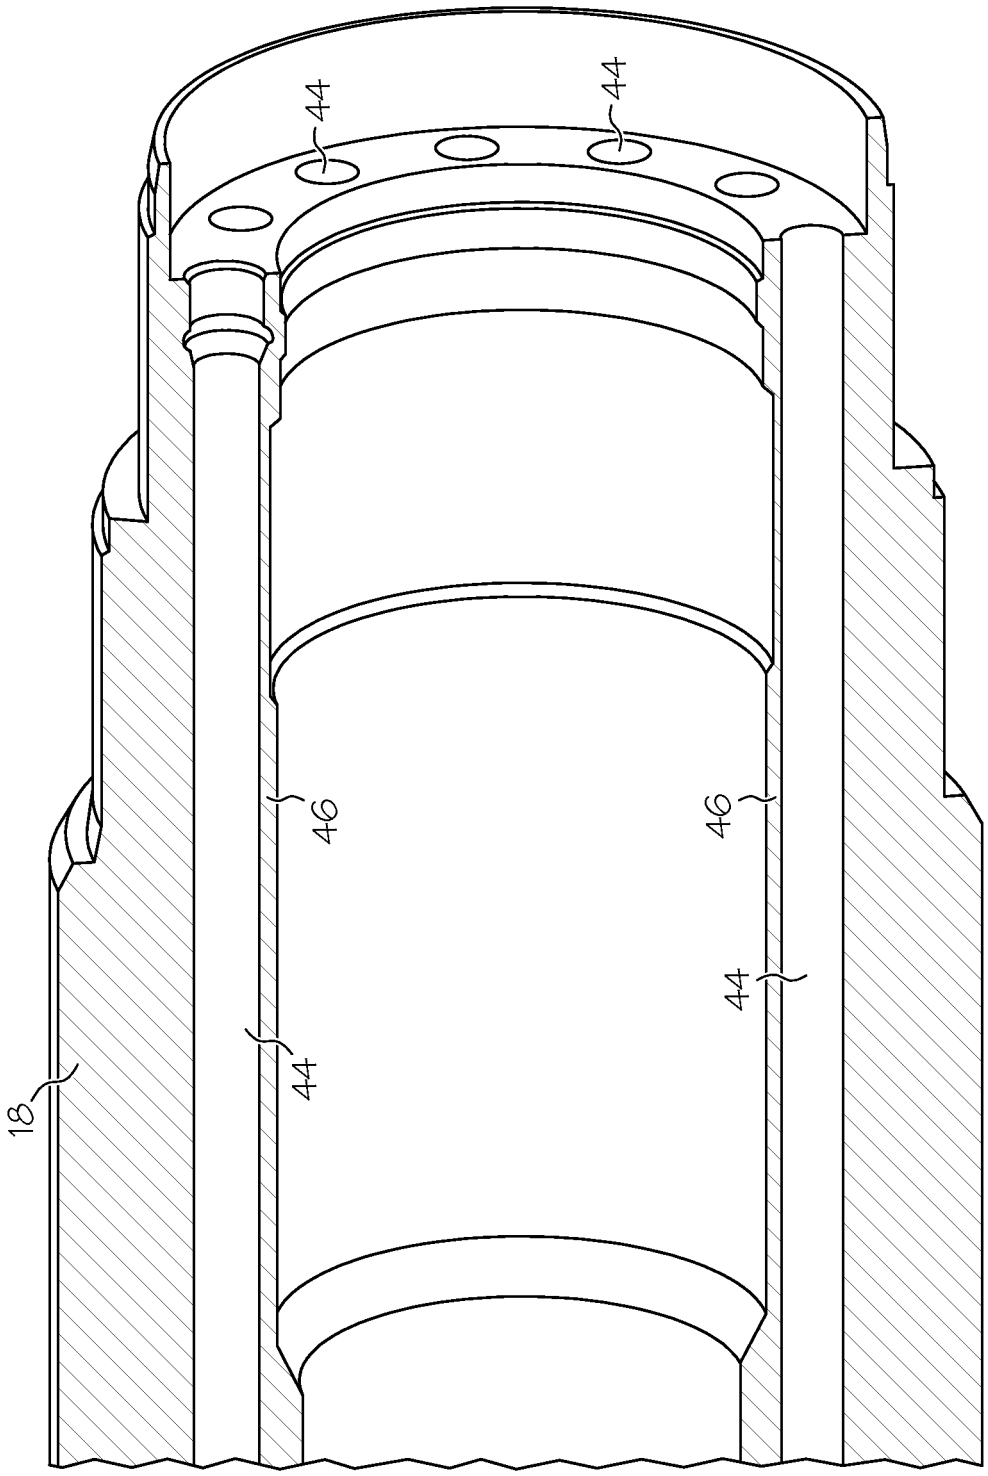


FIG. 2