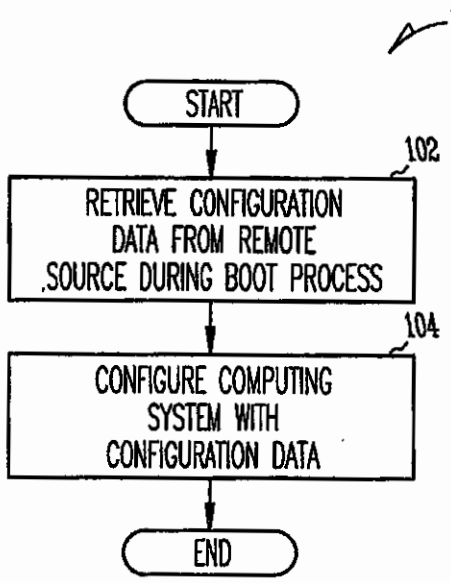

100
START
102
RETRIEVE CONFIGURATION DATA FROM REMOTE SOURCE DURING BOOT PROCESS
104
CONFIGURE COMPUTING SYSTEM WITH CONFIGURATION DATA
END

Fig. 1

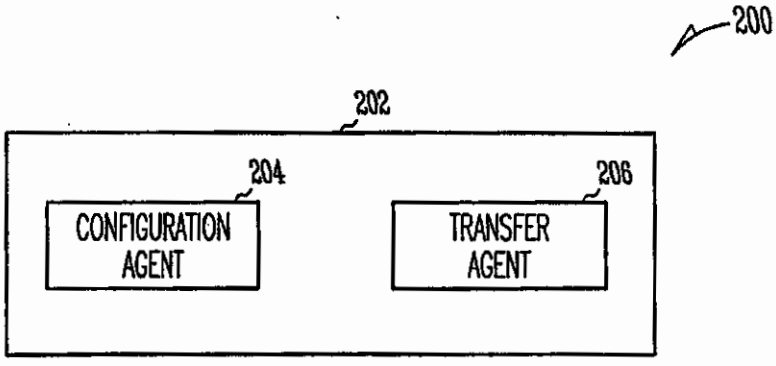

200
202
204
CONFIGURATION AGENT
206
TRANSFER AGENT

Fig. 2

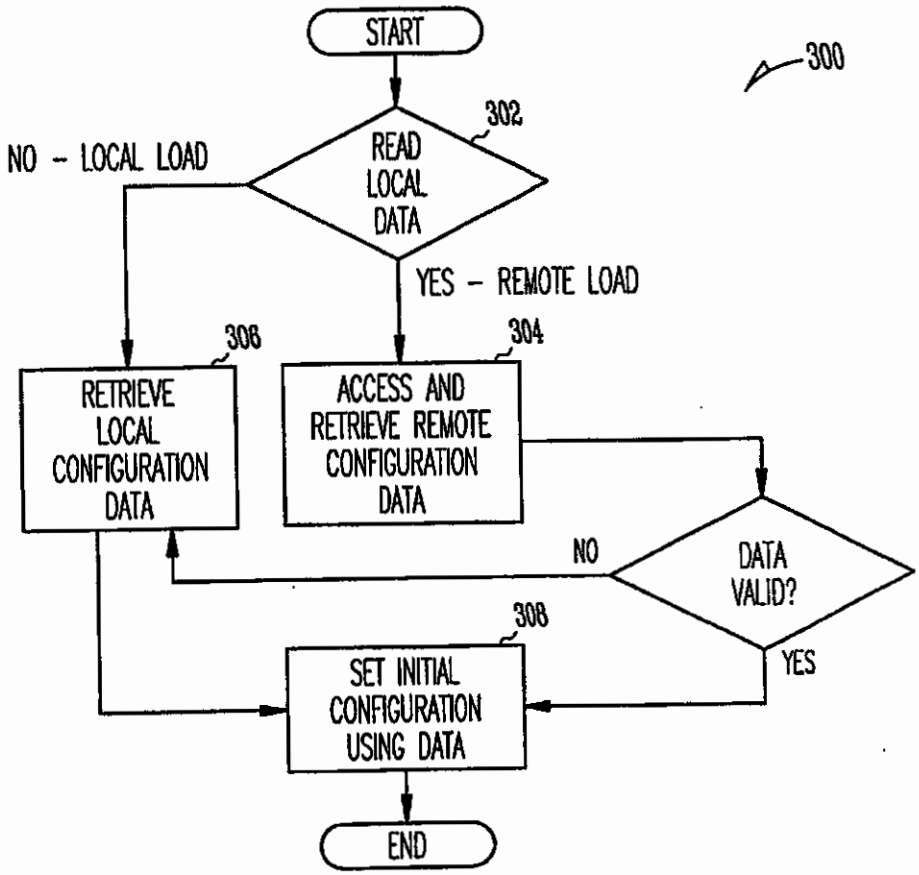

START
300
302
READ LOCAL DATA
NO - LOCAL LOAD
YES - REMOTE LOAD
306
RETRIEVE LOCAL CONFIGURATION DATA
304
ACCESS AND RETRIEVE REMOTE CONFIGURATION DATA
DATA VALID?
NO
YES
308
SET INITIAL CONFIGURATION USING DATA
END

Fig. 3

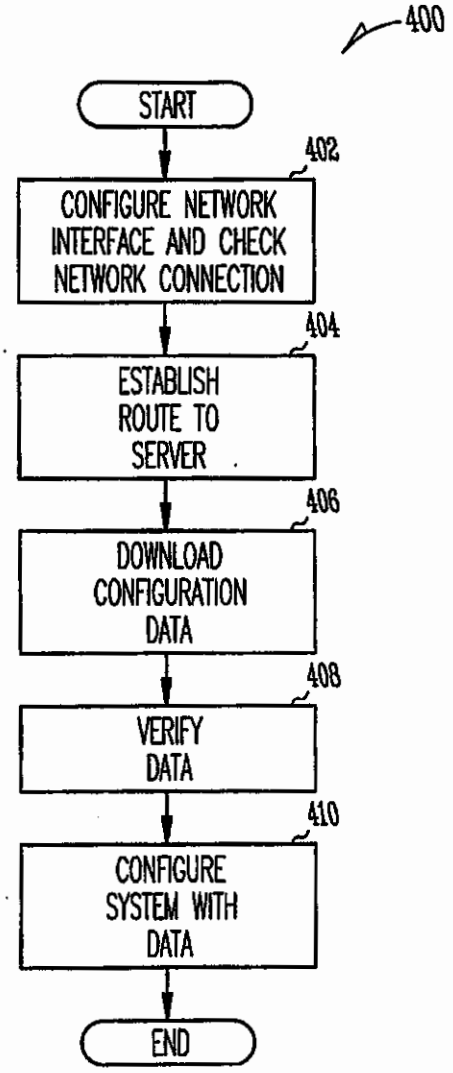

400
START
402
CONFIGURE NETWORK INTERFACE AND CHECK NETWORK CONNECTION
404
ESTABLISH ROUTE TO SERVER
406
DOWNLOAD CONFIGURATION DATA
408
VERIFY DATA
410
CONFIGURE SYSTEM WITH DATA
END

Fig. 4

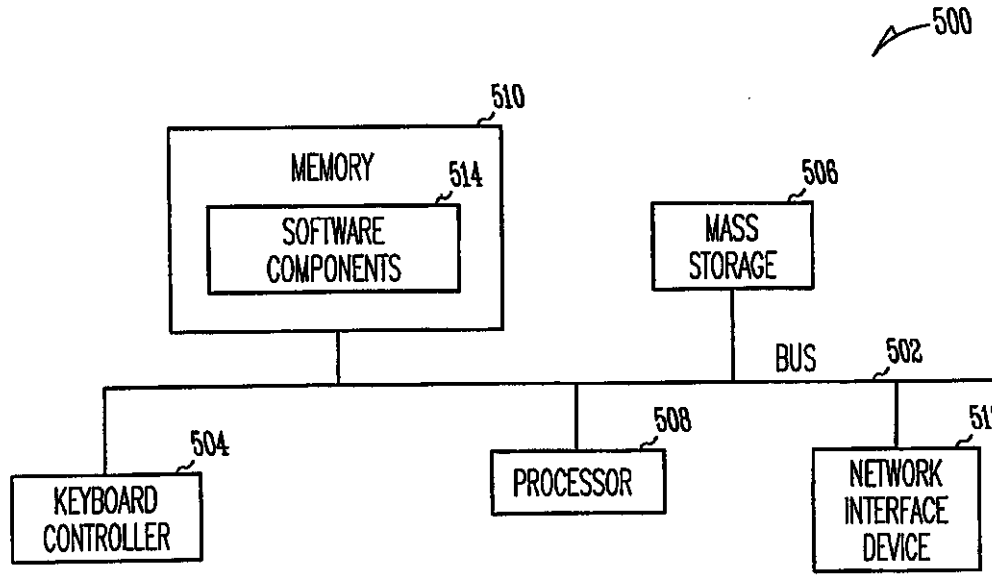

500
510
MEMORY
514
SOFTWARE COMPONENTS
506
MASS STORAGE
BUS
502
504
KEYBOARD CONTROLLER
508
PROCESSOR
512
NETWORK INTERFACE DEVICE

Fig. 5

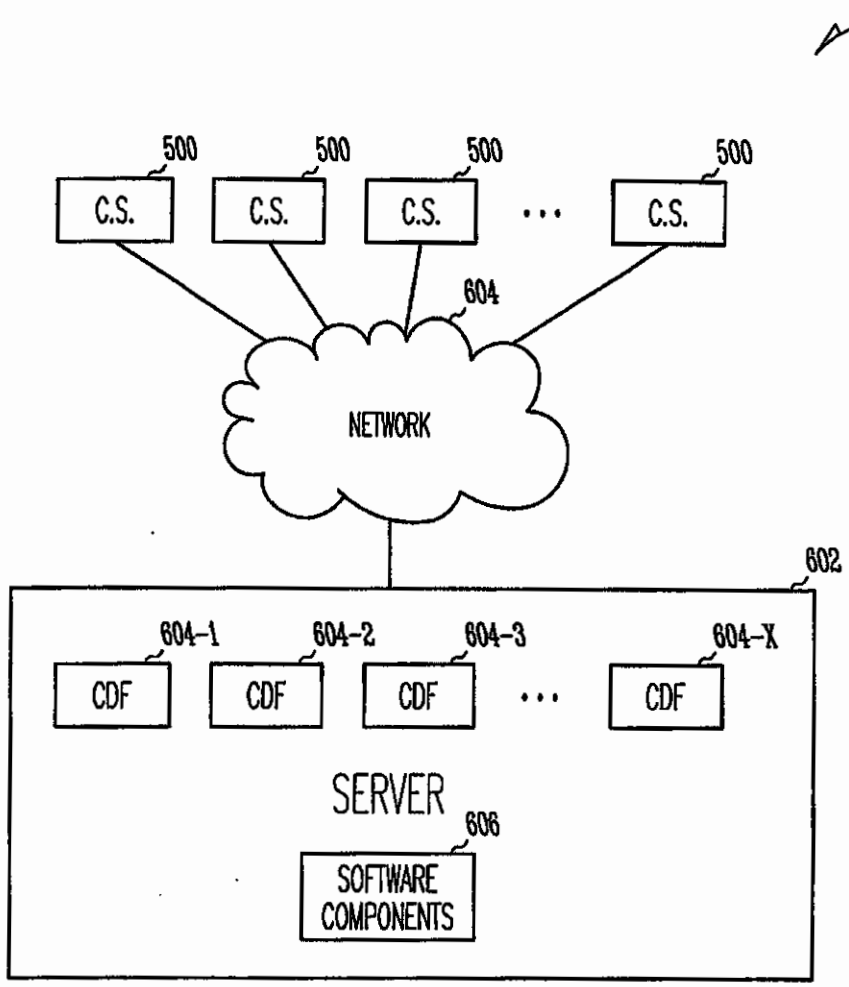

600
500
C.S.
500
C.S.
500
C.S.
500
C.S.
604
NETWORK
602
604-1
CDF
604-2
CDF
604-3
CDF
604-X
CDF
SERVER
606
SOFTWARE COMPONENTS

Fig. 6