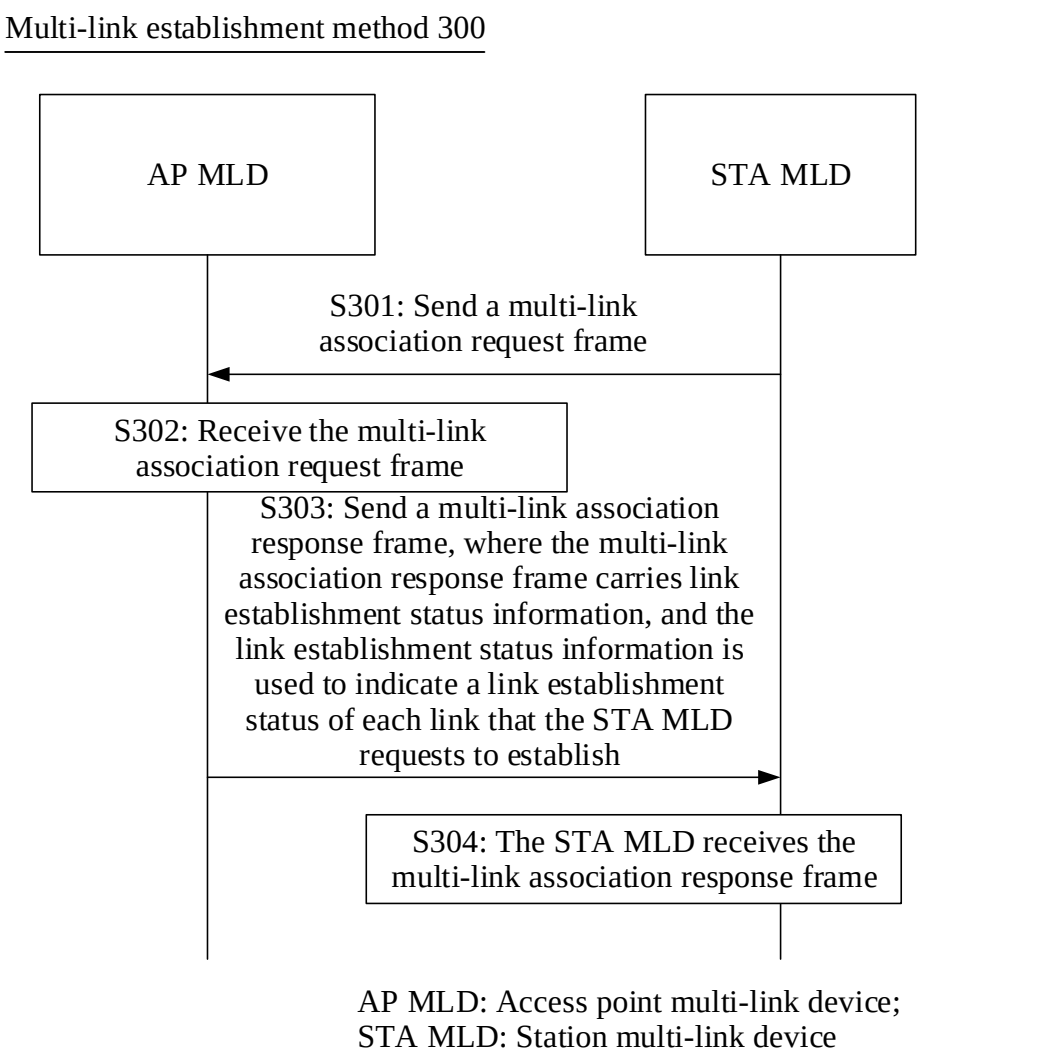

Multi-link establishment method 300
AP MLD
STA MLD
S301: Send a multi-link association request frame
S302: Receive the multi-link association request frame
S303: Send a multi-link association response frame, where the multi-link association response frame carries link establishment status information, and the link establishment status information is used to indicate a link establishment status of each link that the STA MLD requests to establish
S304: The STA MLD receives the multi-link association response frame
AP MLD: Access point multi-link device;
STA MLD: Station multi-link device

FIG. 8

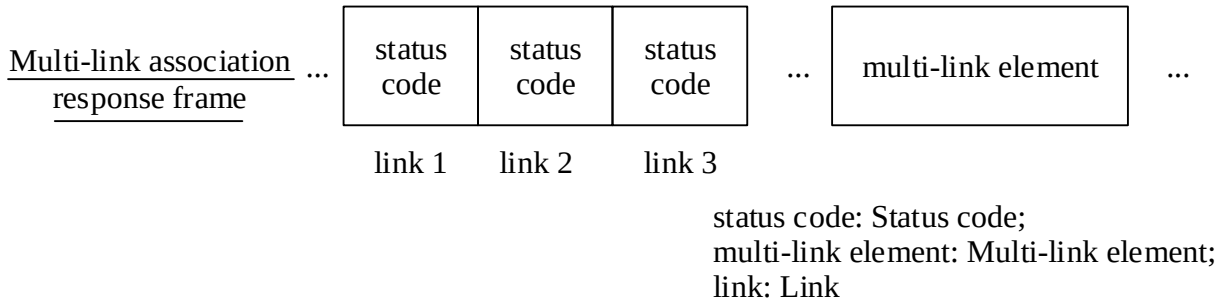

Multi-link association response frame
...
status code
status code
status code
...
multi-link element
...
link 1
link 2
link 3
status code: Status code;
multi-link element: Multi-link element;
link: Link

FIG. 9

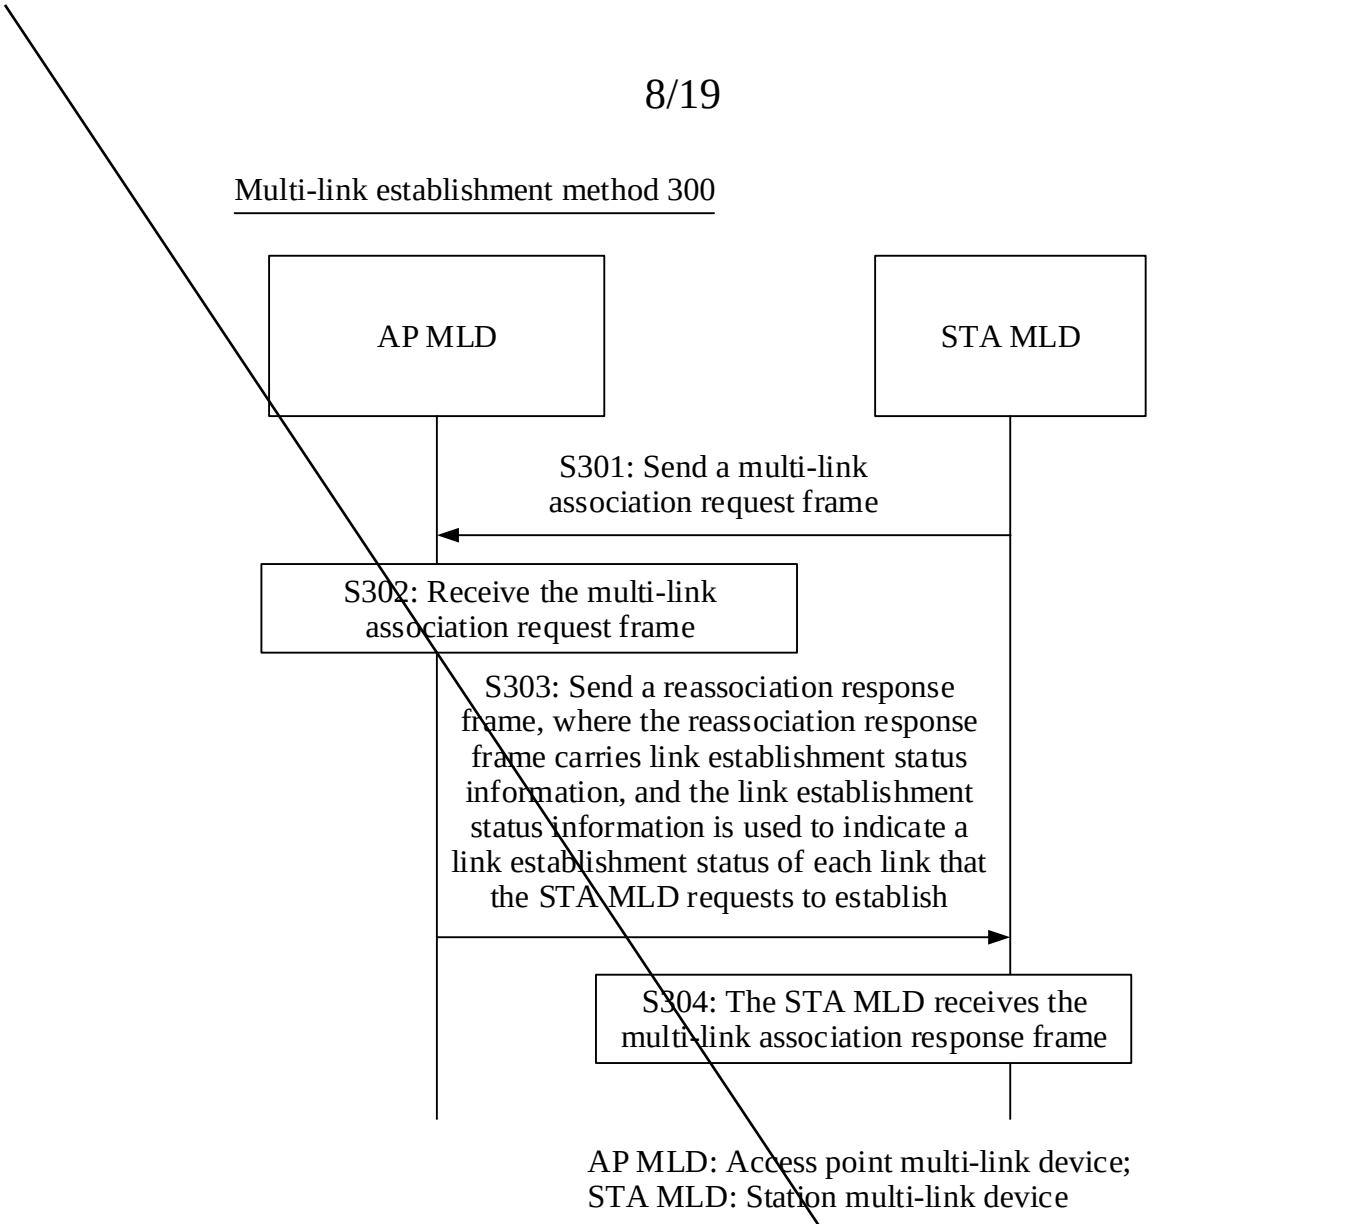

Multi-link establishment method 300
AP MLD
STA MLD
S301: Send a multi-link association request frame
S302: Receive the multi-link association request frame
S303: Send a reassociation response frame, where the reassociation response frame carries link establishment status information, and the link establishment status information is used to indicate a link establishment status of each link that the STA MLD requests to establish
S304: The STA MLD receives the multi-link association response frame
AP MLD: Access point multi-link device;
STA MLD: Station multi-link device

FIG. 8

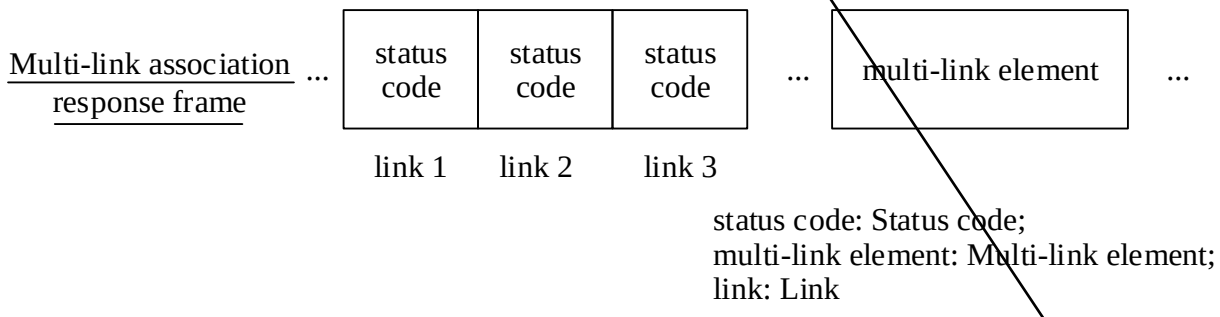

Multi-link association response frame
...
status code
status code
status code
...
multi-link element
...
link 1
link 2
link 3
status code: Status code;
multi-link element: Multi-link element;
link: Link

FIG. 9