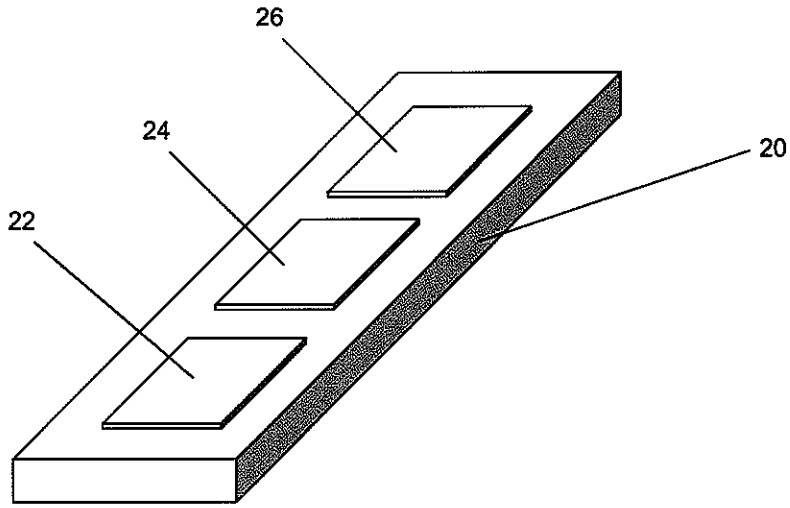



Figure 1

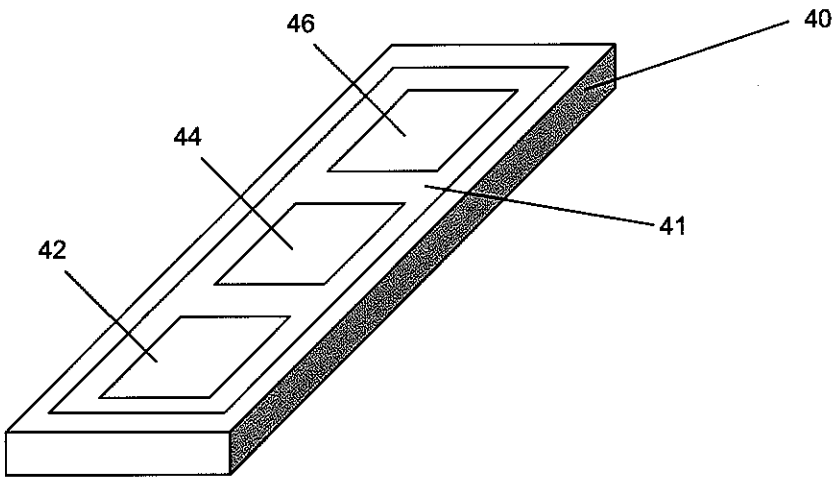



Figure 2

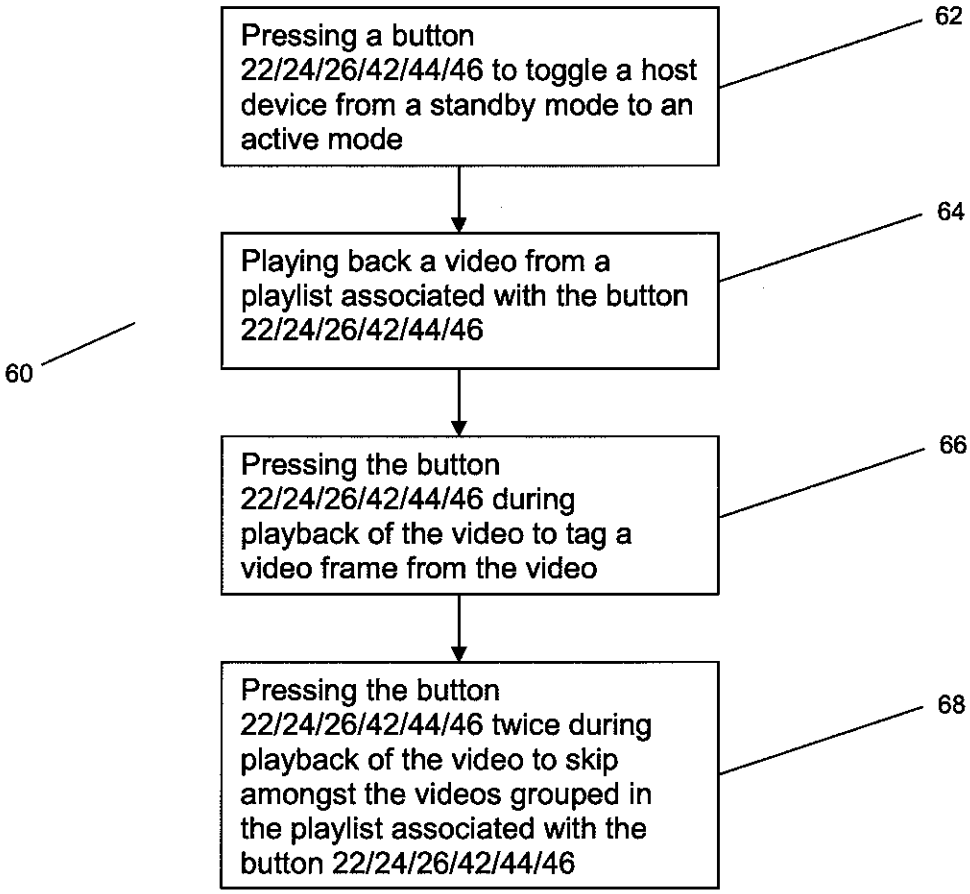

Pressing a button 22/24/26/42/44/46 to toggle a host device from a standby mode to an active mode
62
Playing back a video from a playlist associated with the button 22/24/26/42/44/46
64
60
Pressing the button 22/24/26/42/44/46 during playback of the video to tag a video frame from the video
66
Pressing the button 22/24/26/42/44/46 twice during playback of the video to skip amongst the videos grouped in the playlist associated with the button 22/24/26/42/44/46
68

Figure 3