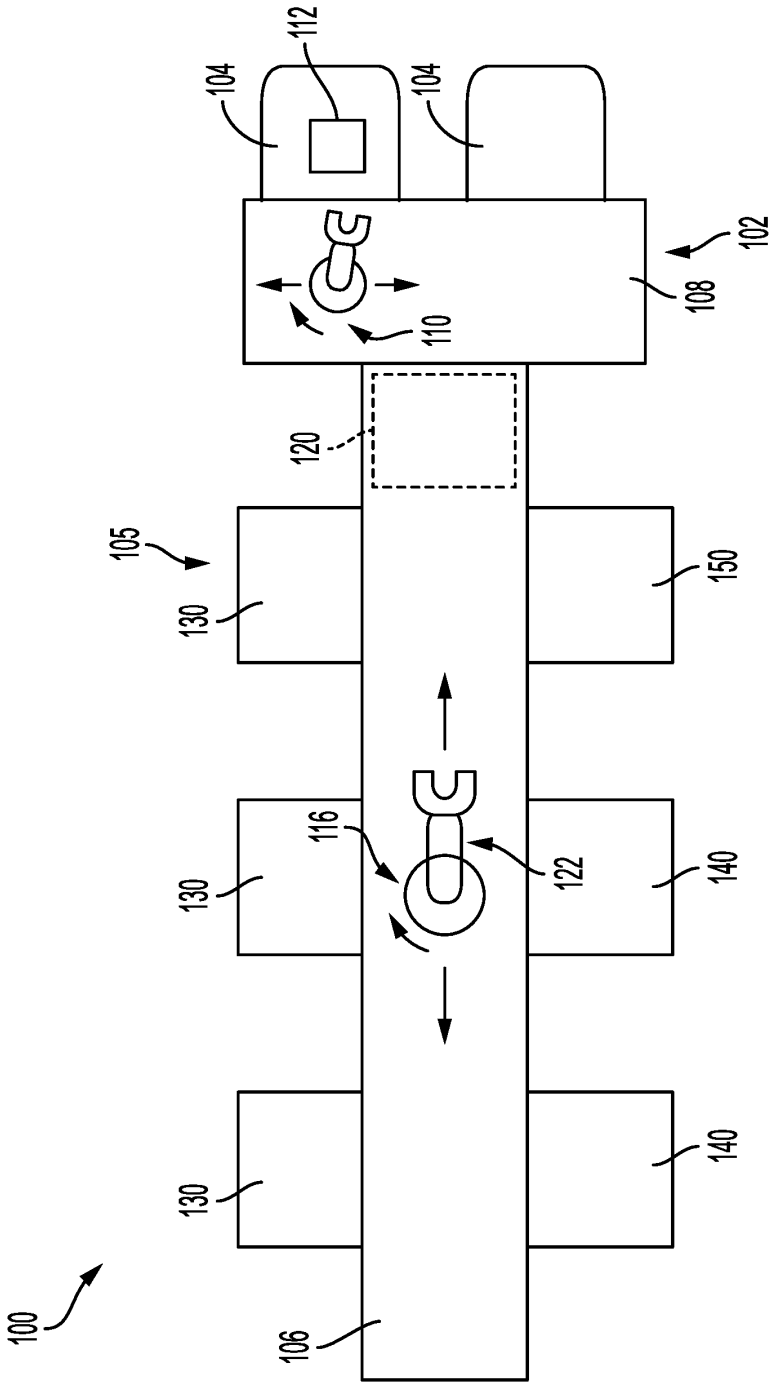

112
104
104
102
108
110
120
105
130
150
116
122
130
140
130
140
100
106

FIG. 1

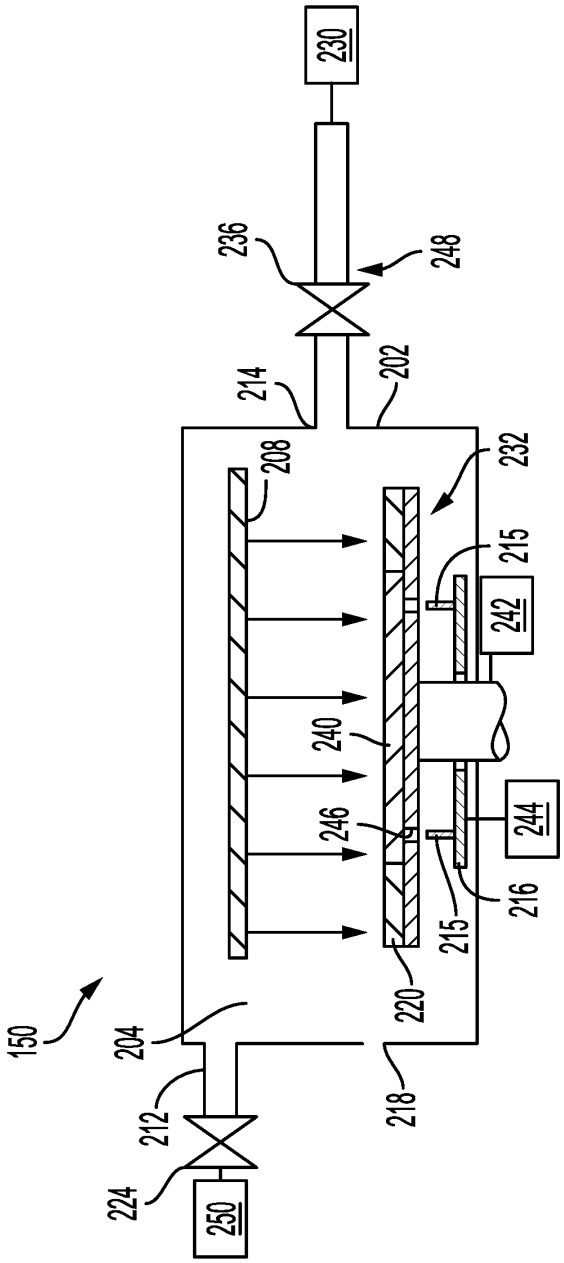

230
236
248
214
202
208
232
215
242
240
246
244
216
215
220
150
204
218
212
224
250

FIG. 2

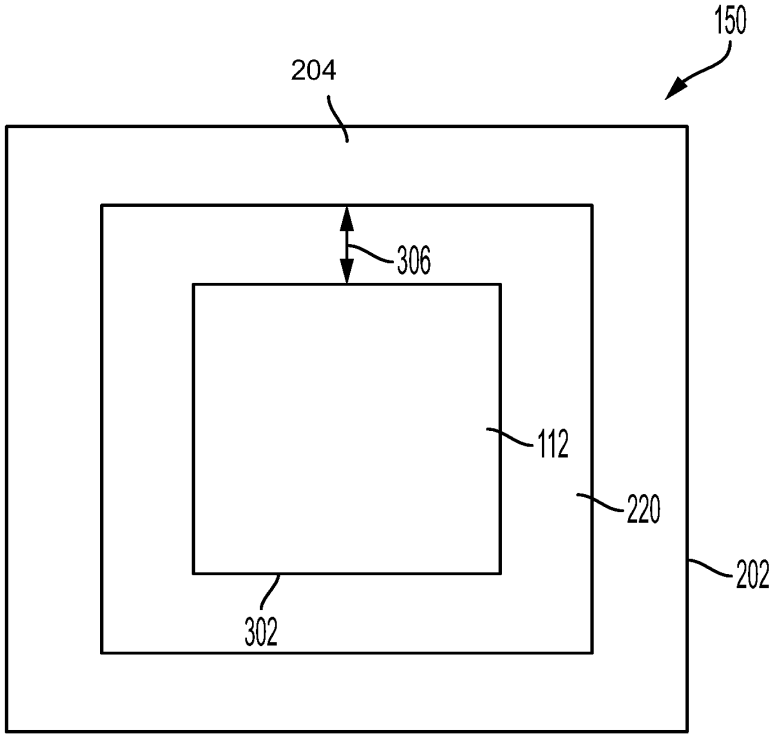


FIG. 3

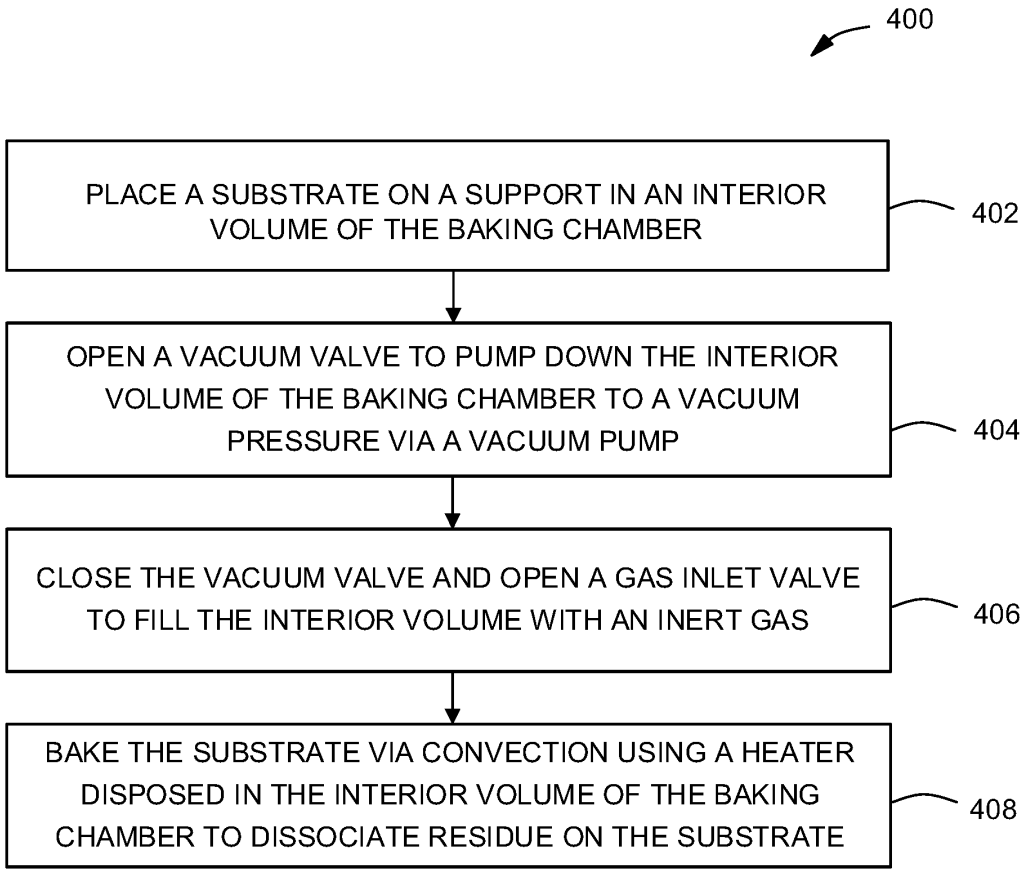

400
PLACE A SUBSTRATE ON A SUPPORT IN AN INTERIOR VOLUME OF THE BAKING CHAMBER
402
OPEN A VACUUM VALVE TO PUMP DOWN THE INTERIOR VOLUME OF THE BAKING CHAMBER TO A VACUUM PRESSURE VIA A VACUUM PUMP
404
CLOSE THE VACUUM VALVE AND OPEN A GAS INLET VALVE TO FILL THE INTERIOR VOLUME WITH AN INERT GAS
406
BAKE THE SUBSTRATE VIA CONVECTION USING A HEATER DISPOSED IN THE INTERIOR VOLUME OF THE BAKING CHAMBER TO DISSOCIATE RESIDUE ON THE SUBSTRATE
408

FIG. 4