




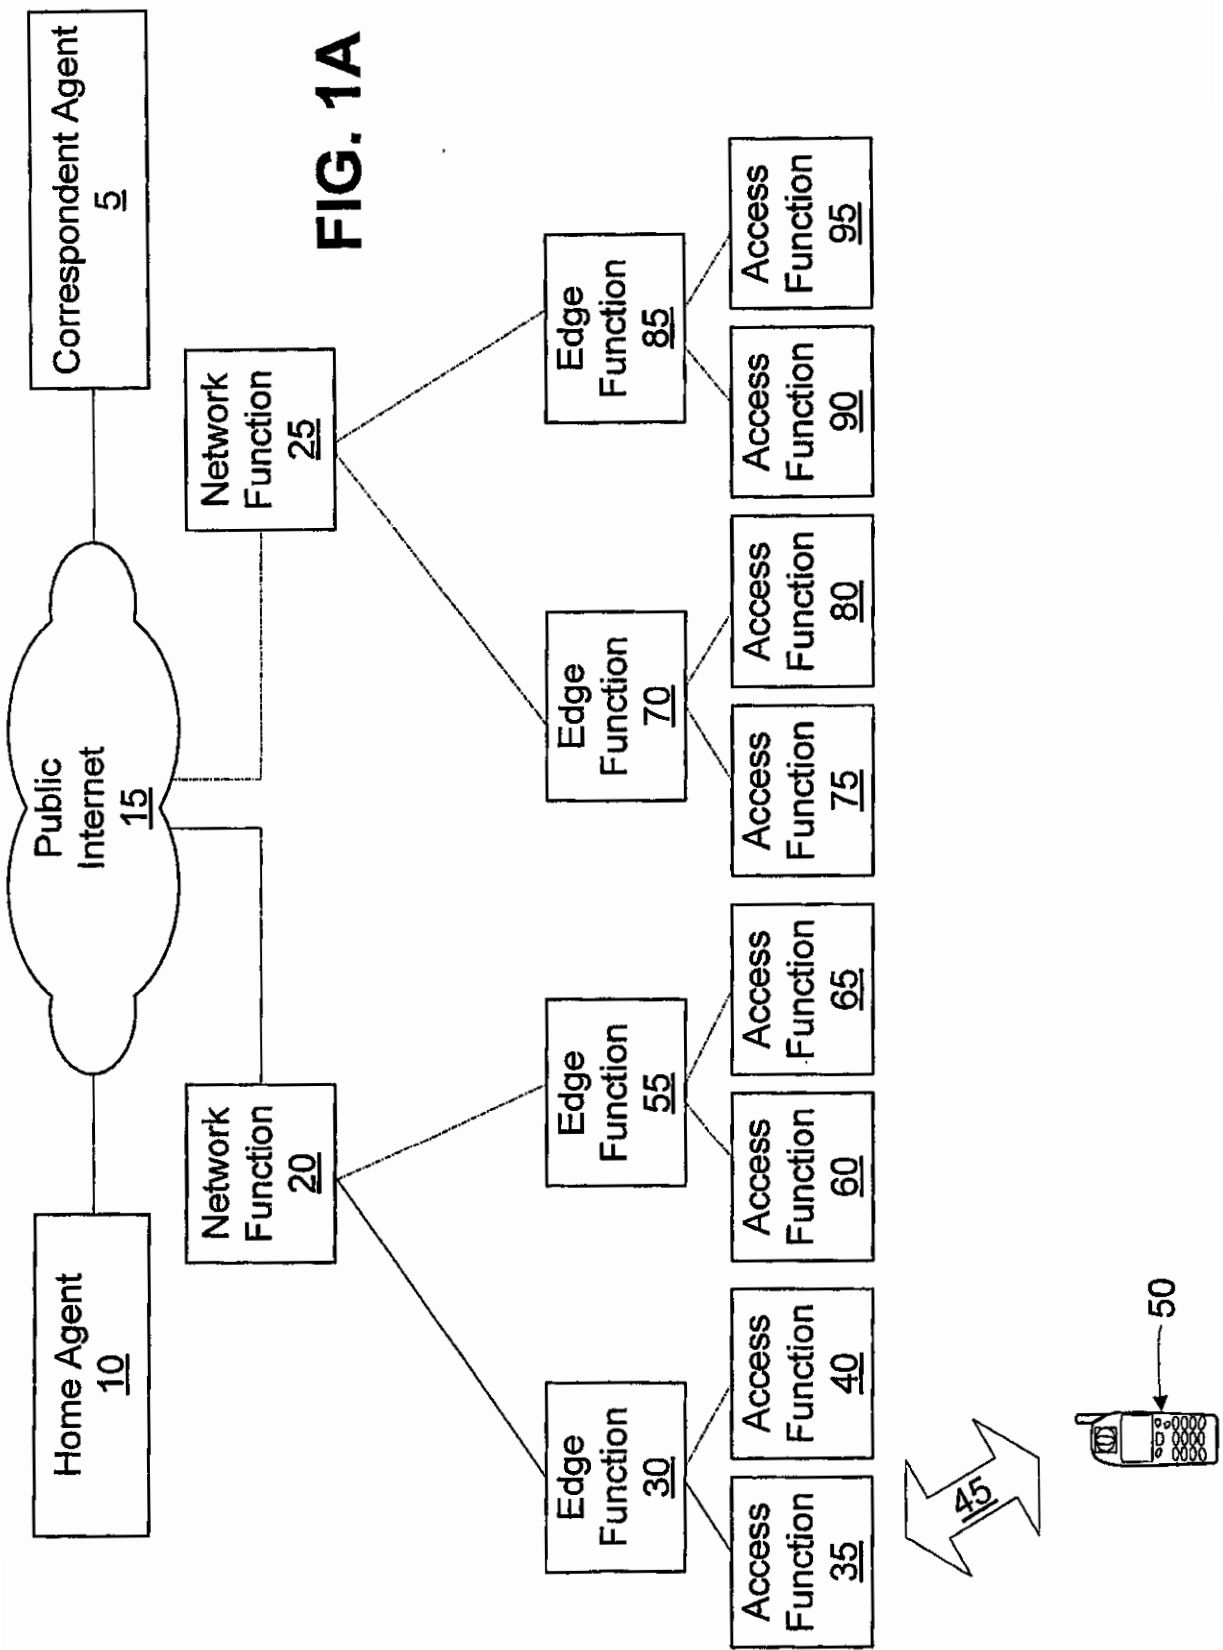


2/22

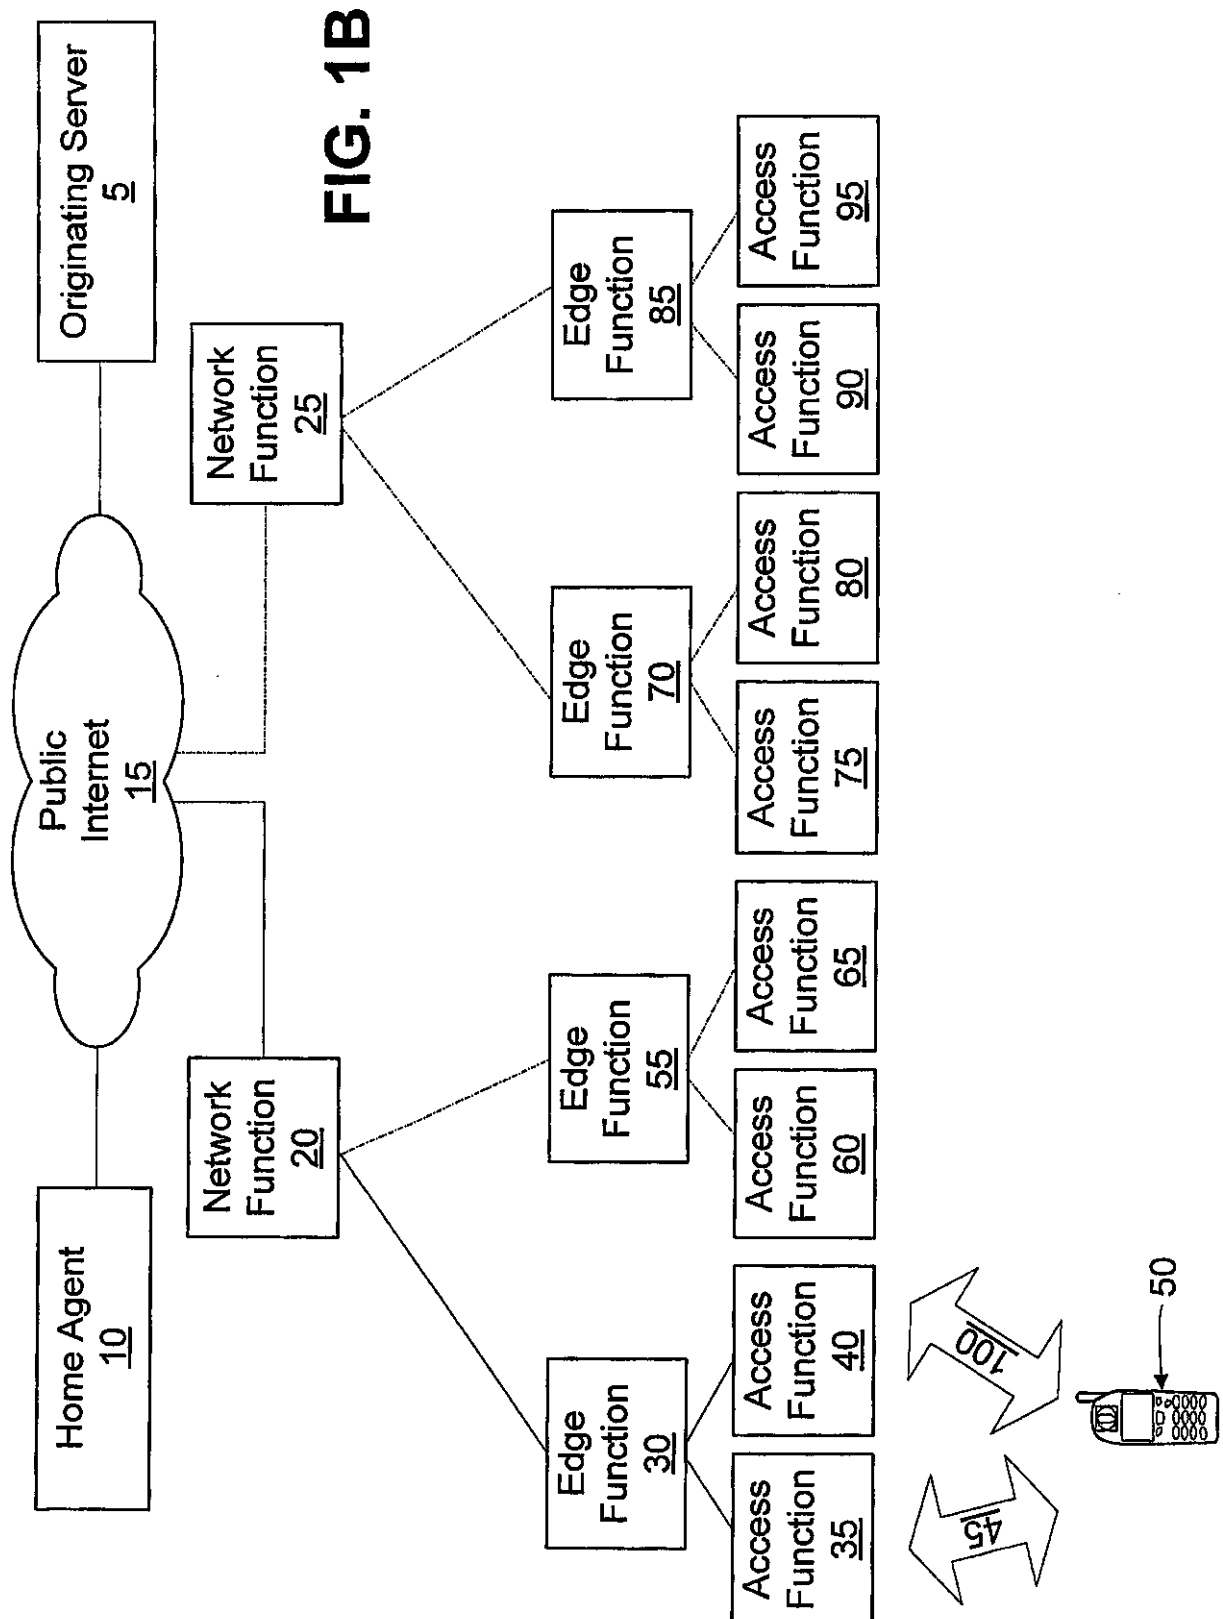


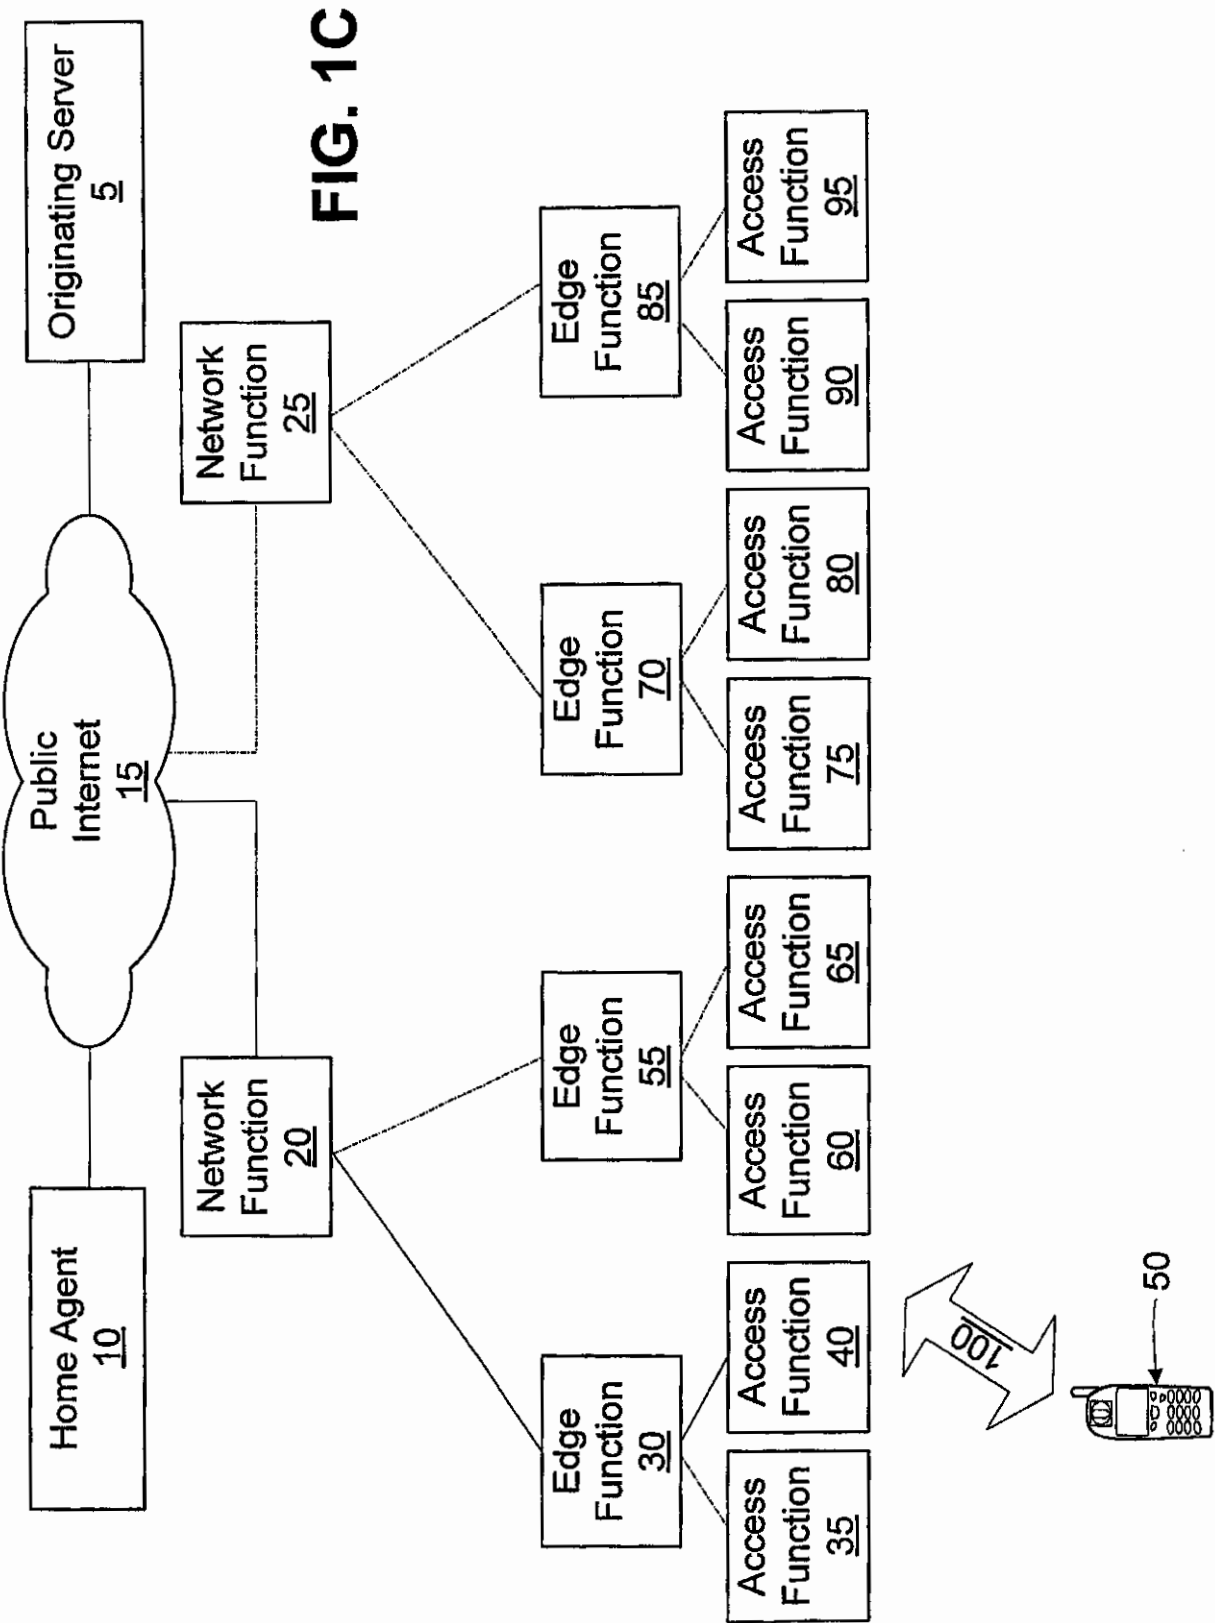


4/22

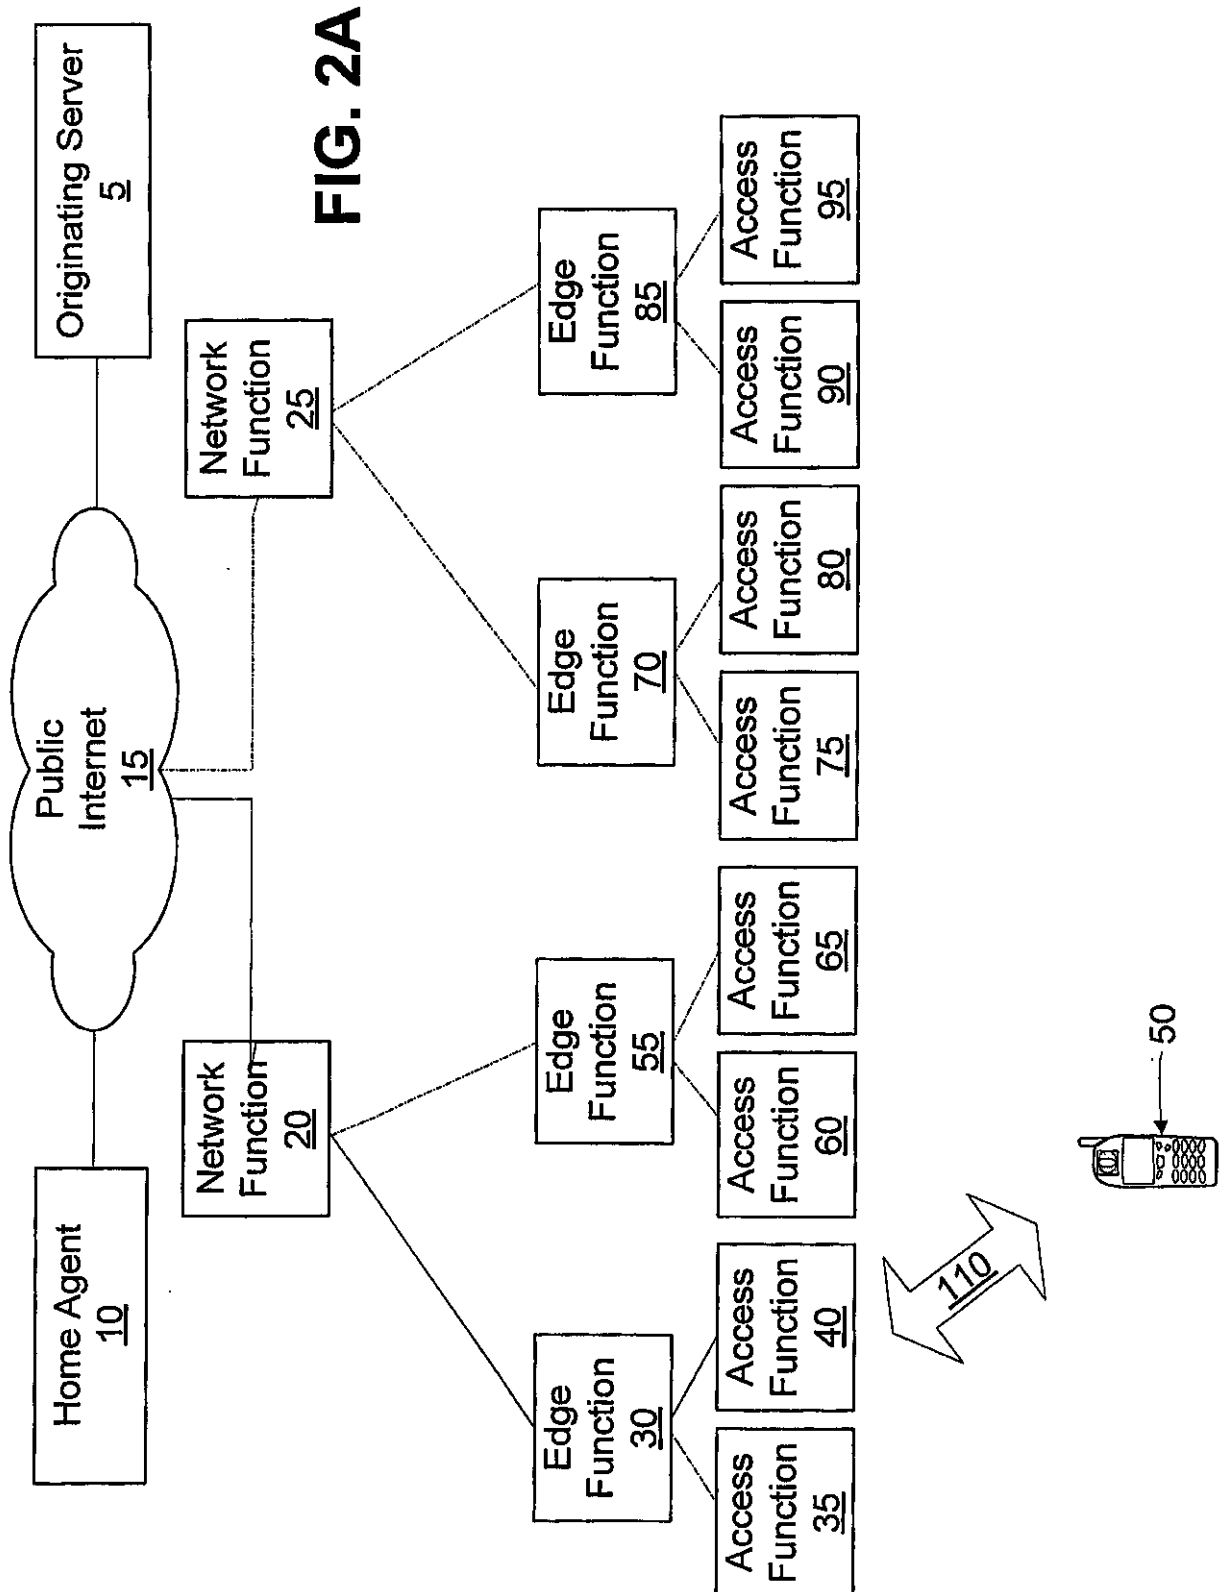


5/22

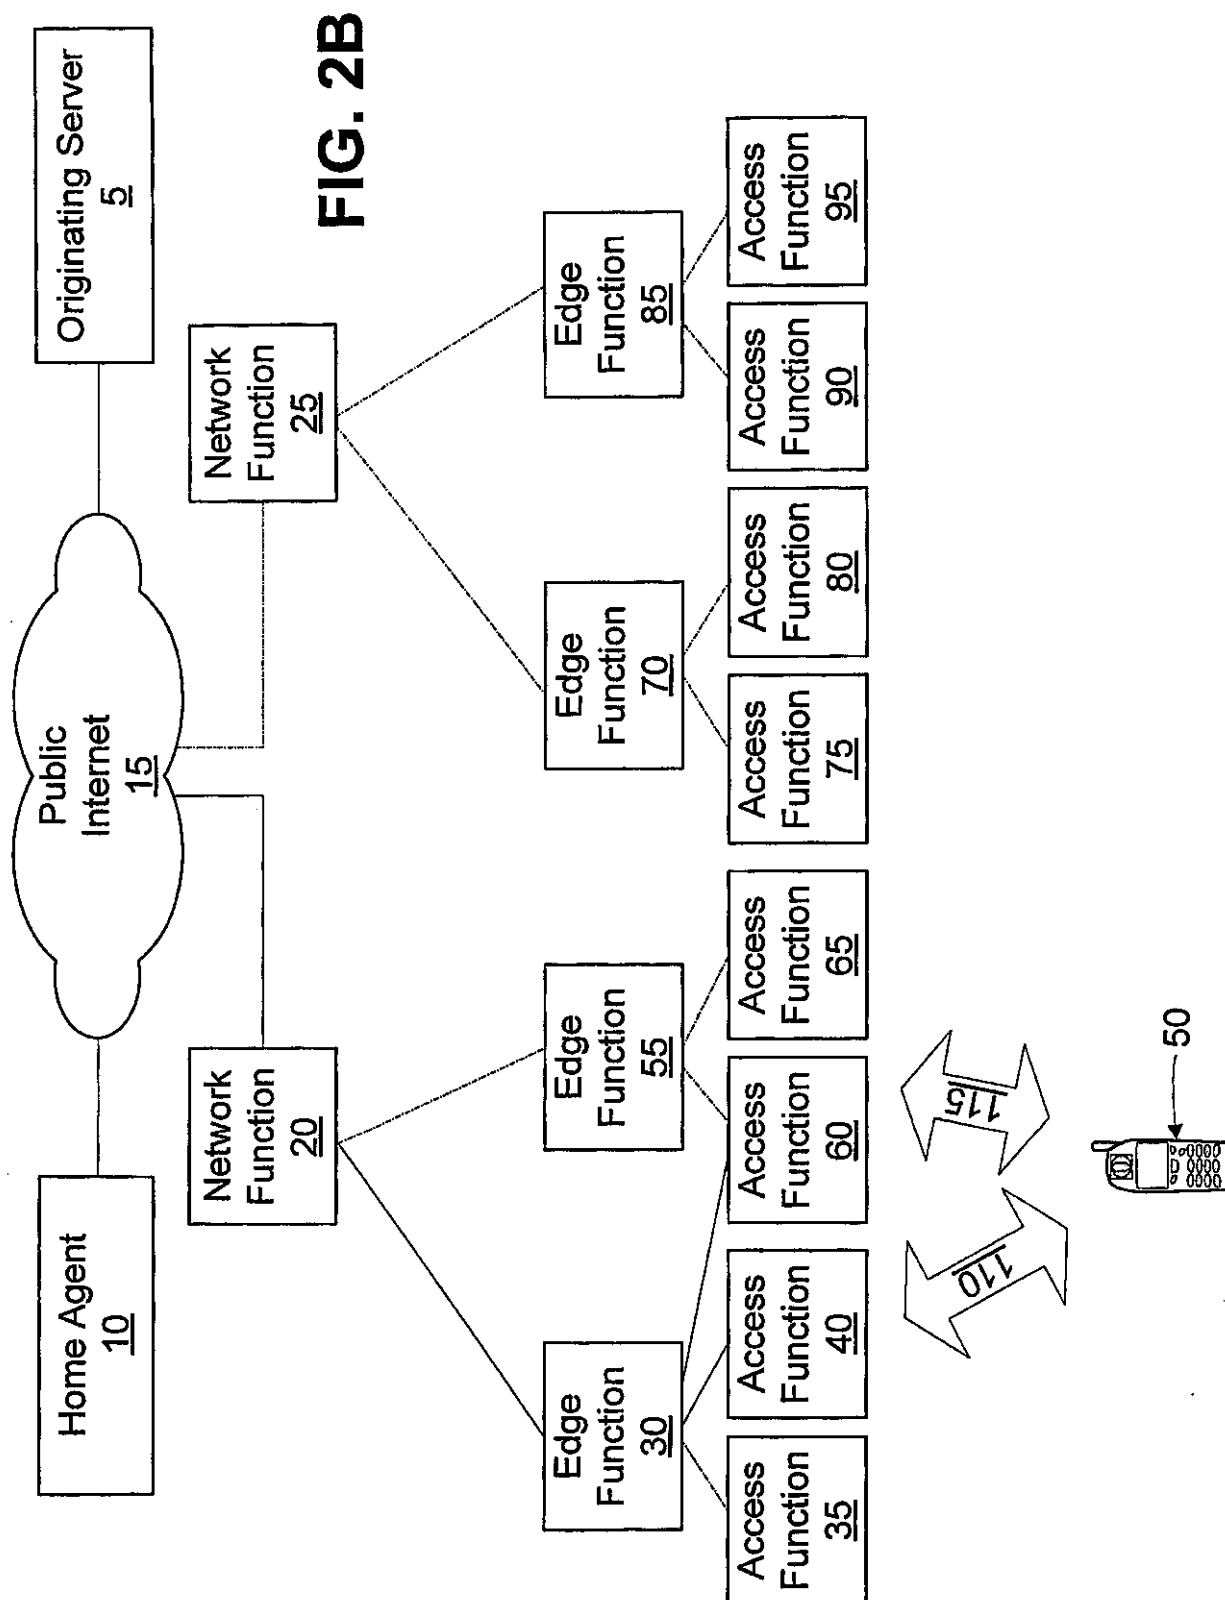


6/22

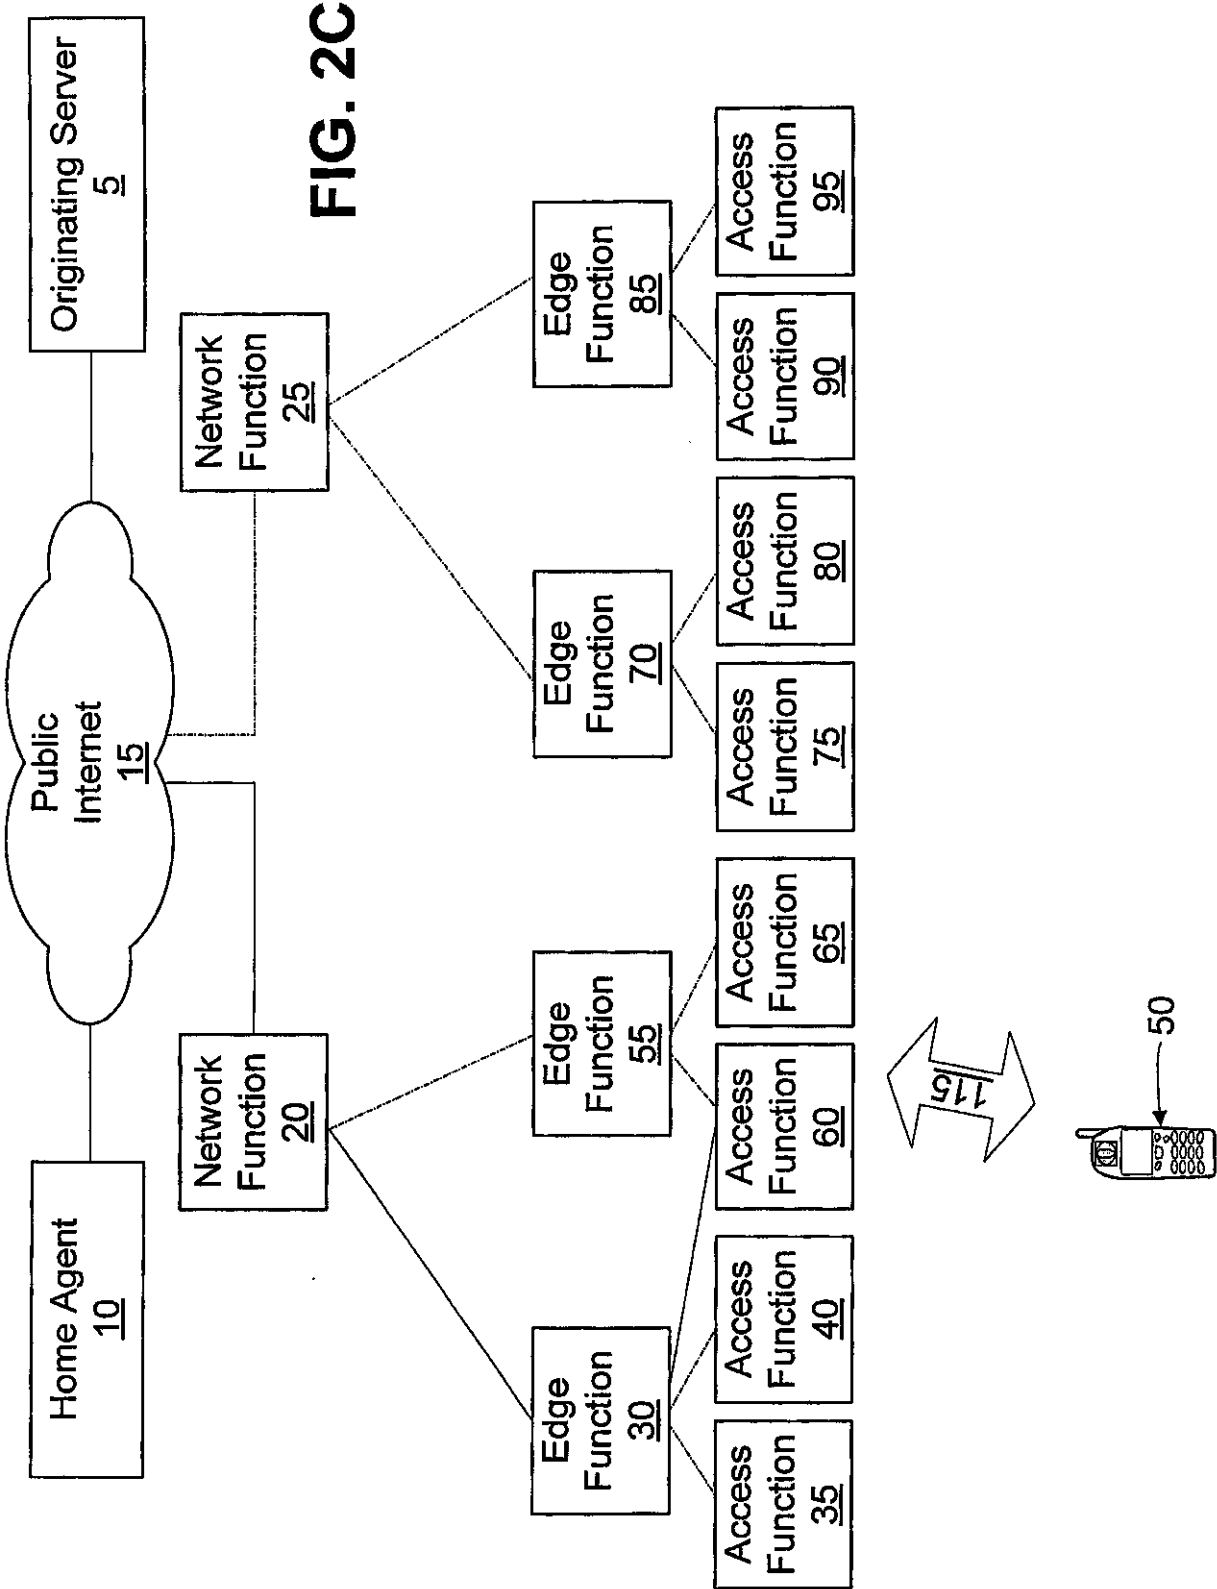


7/22

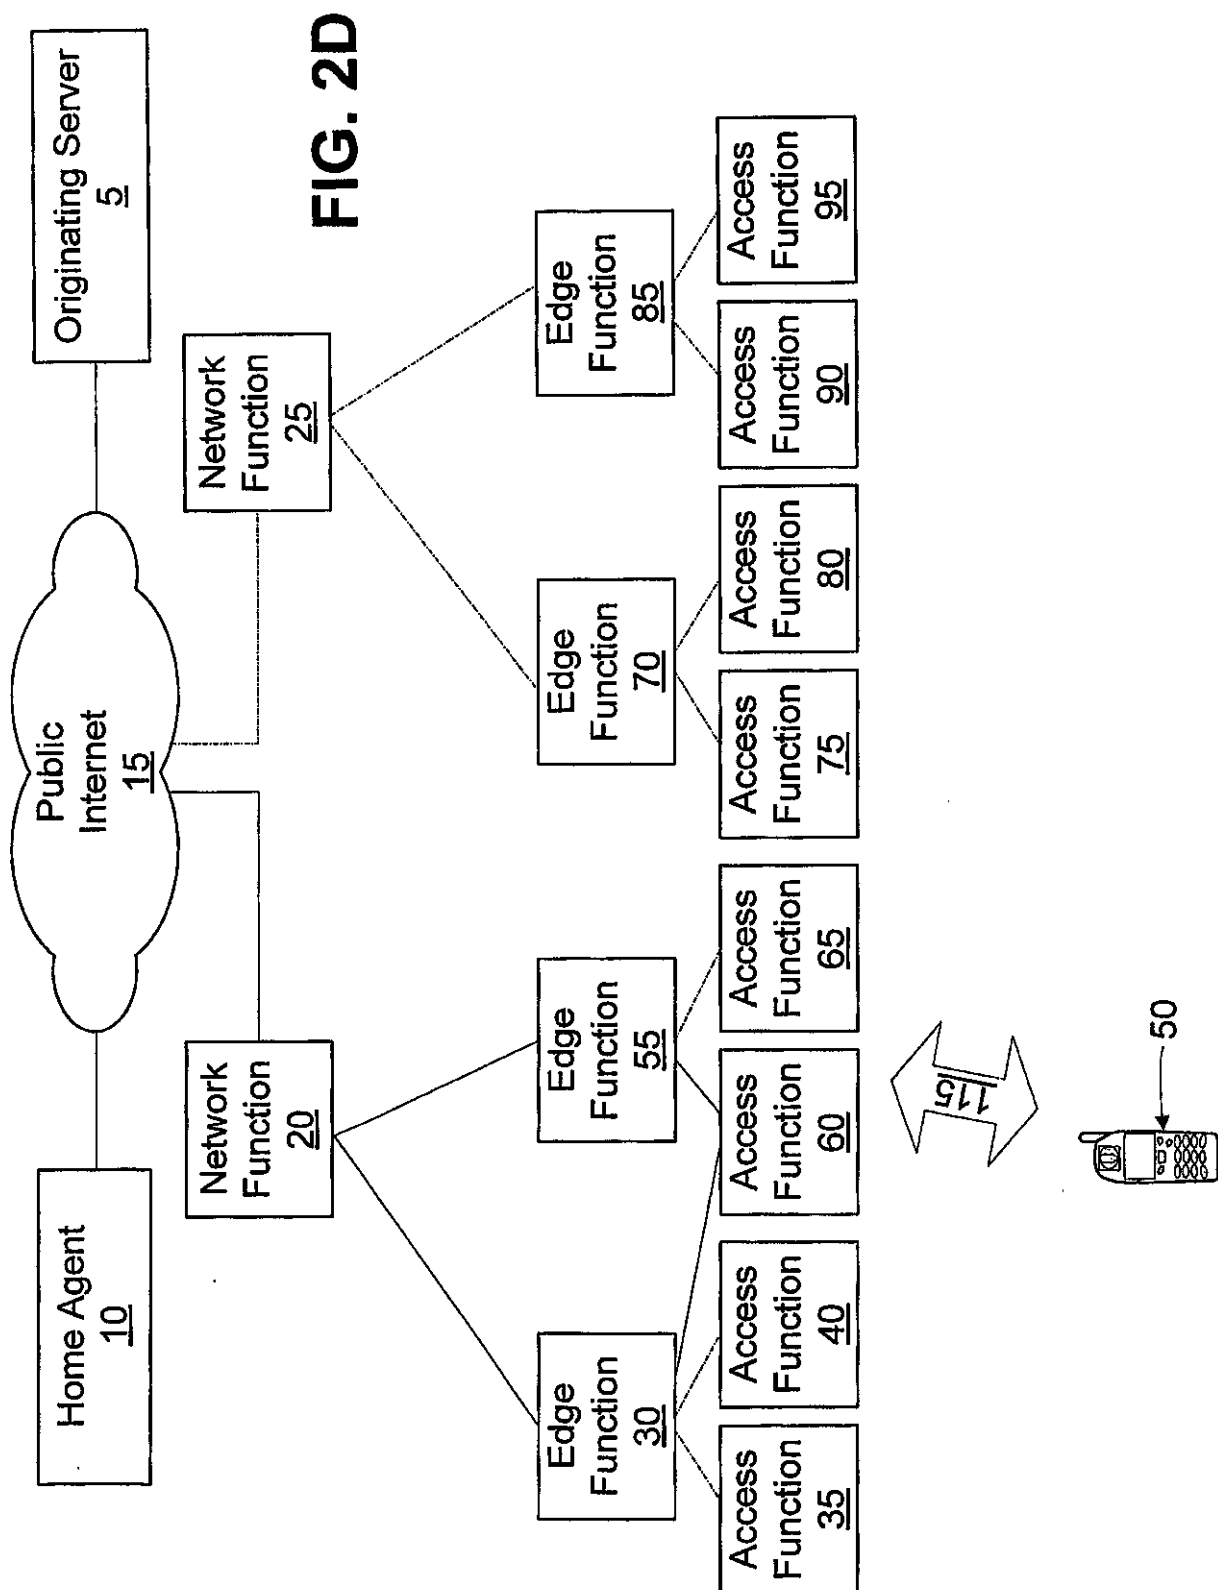


8/22

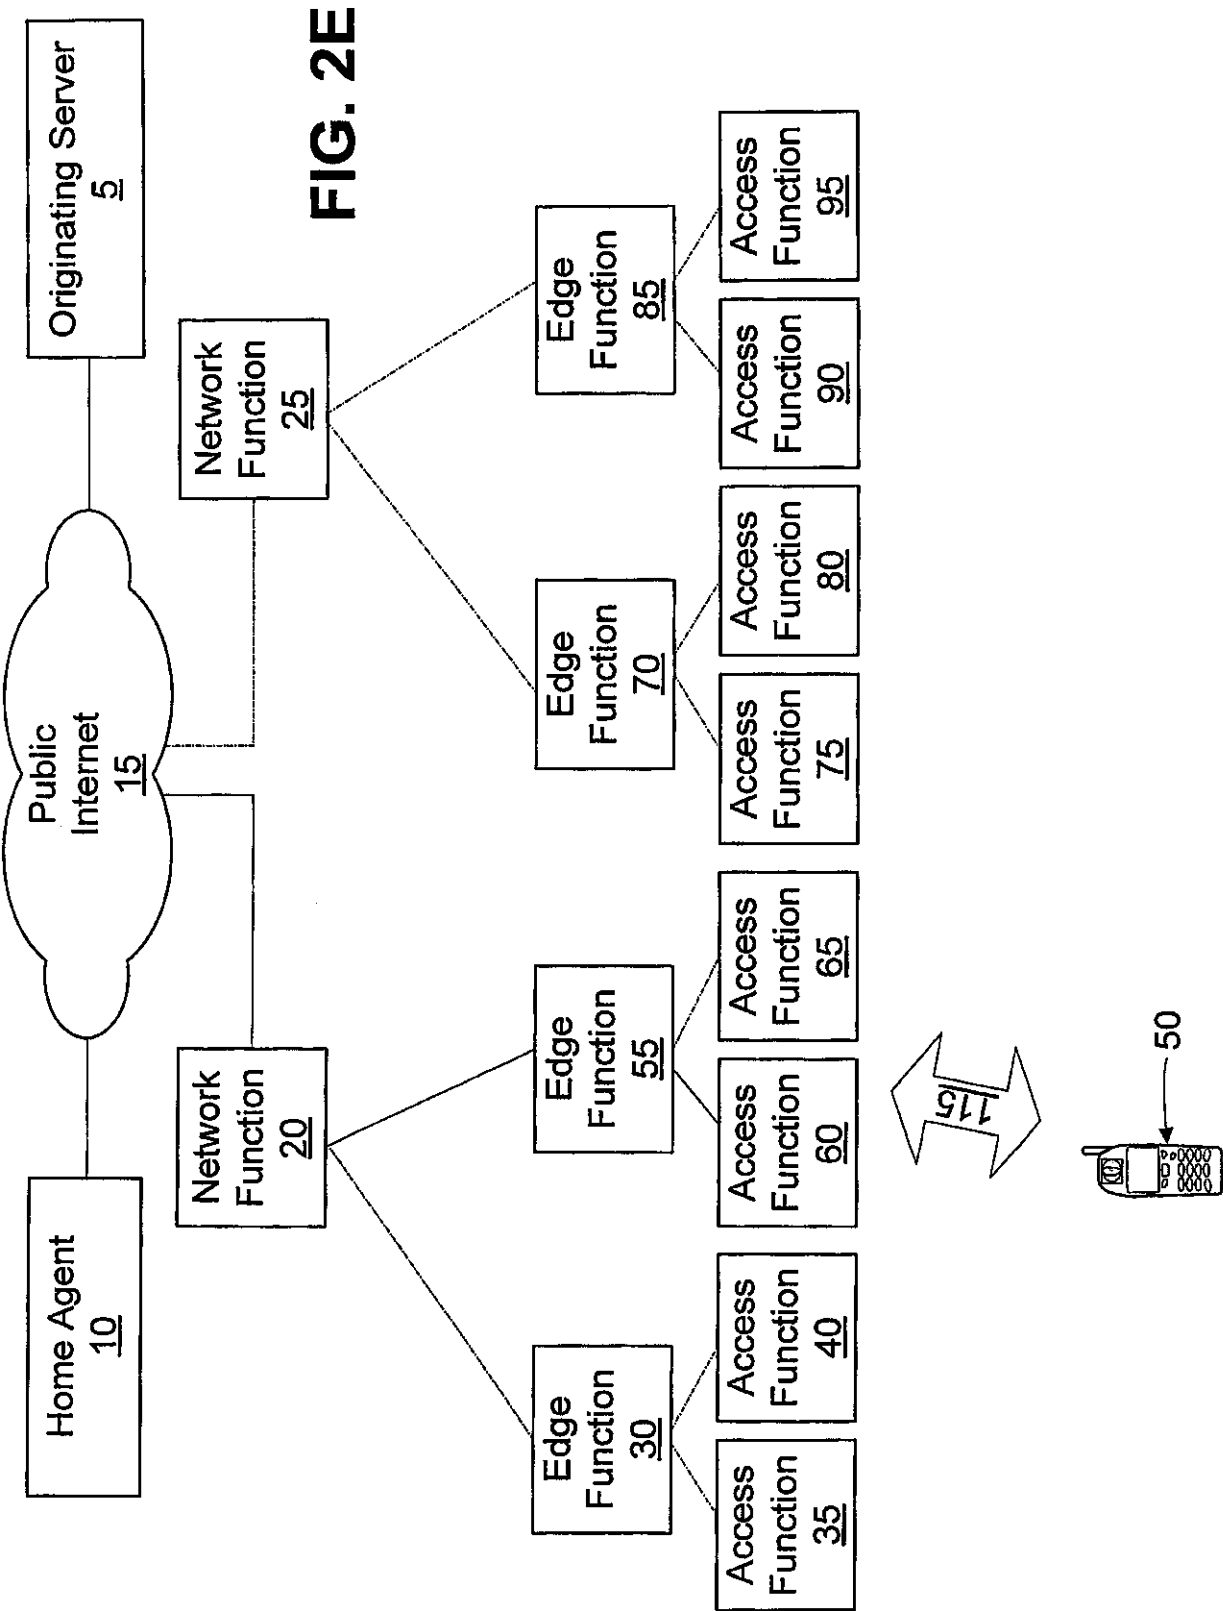


9/22

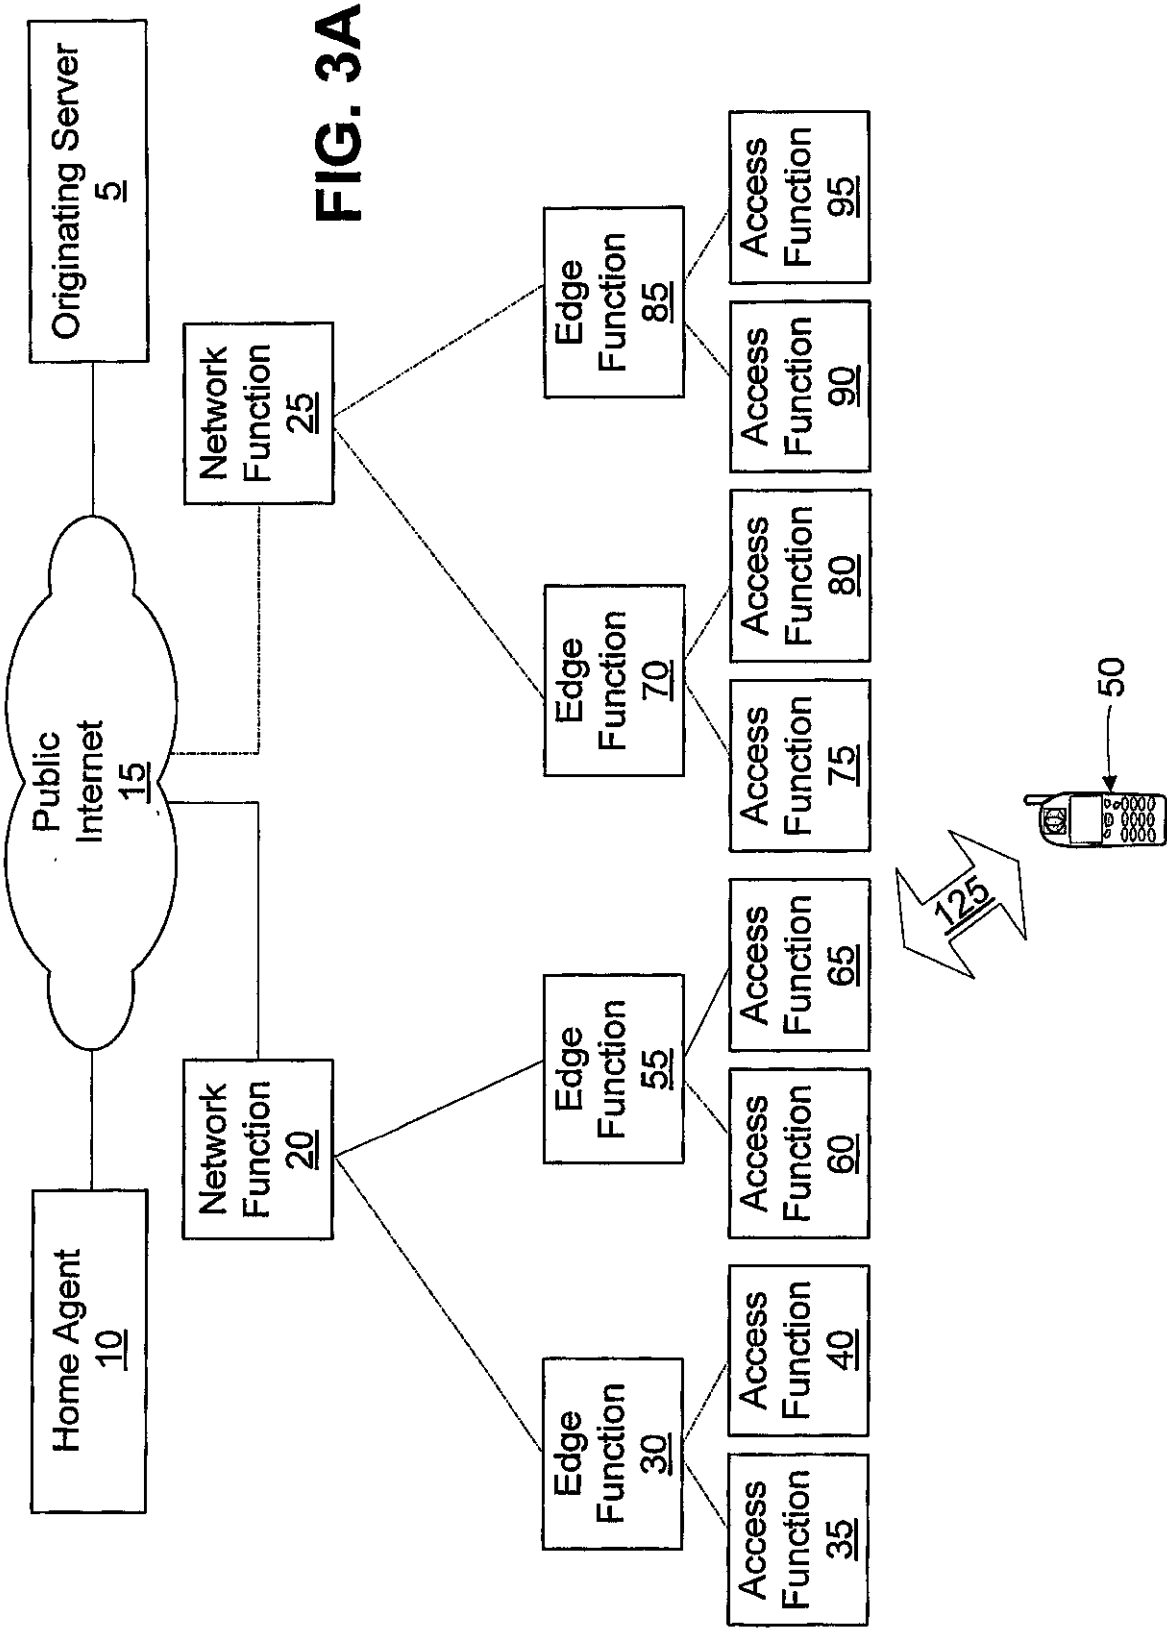



10/22

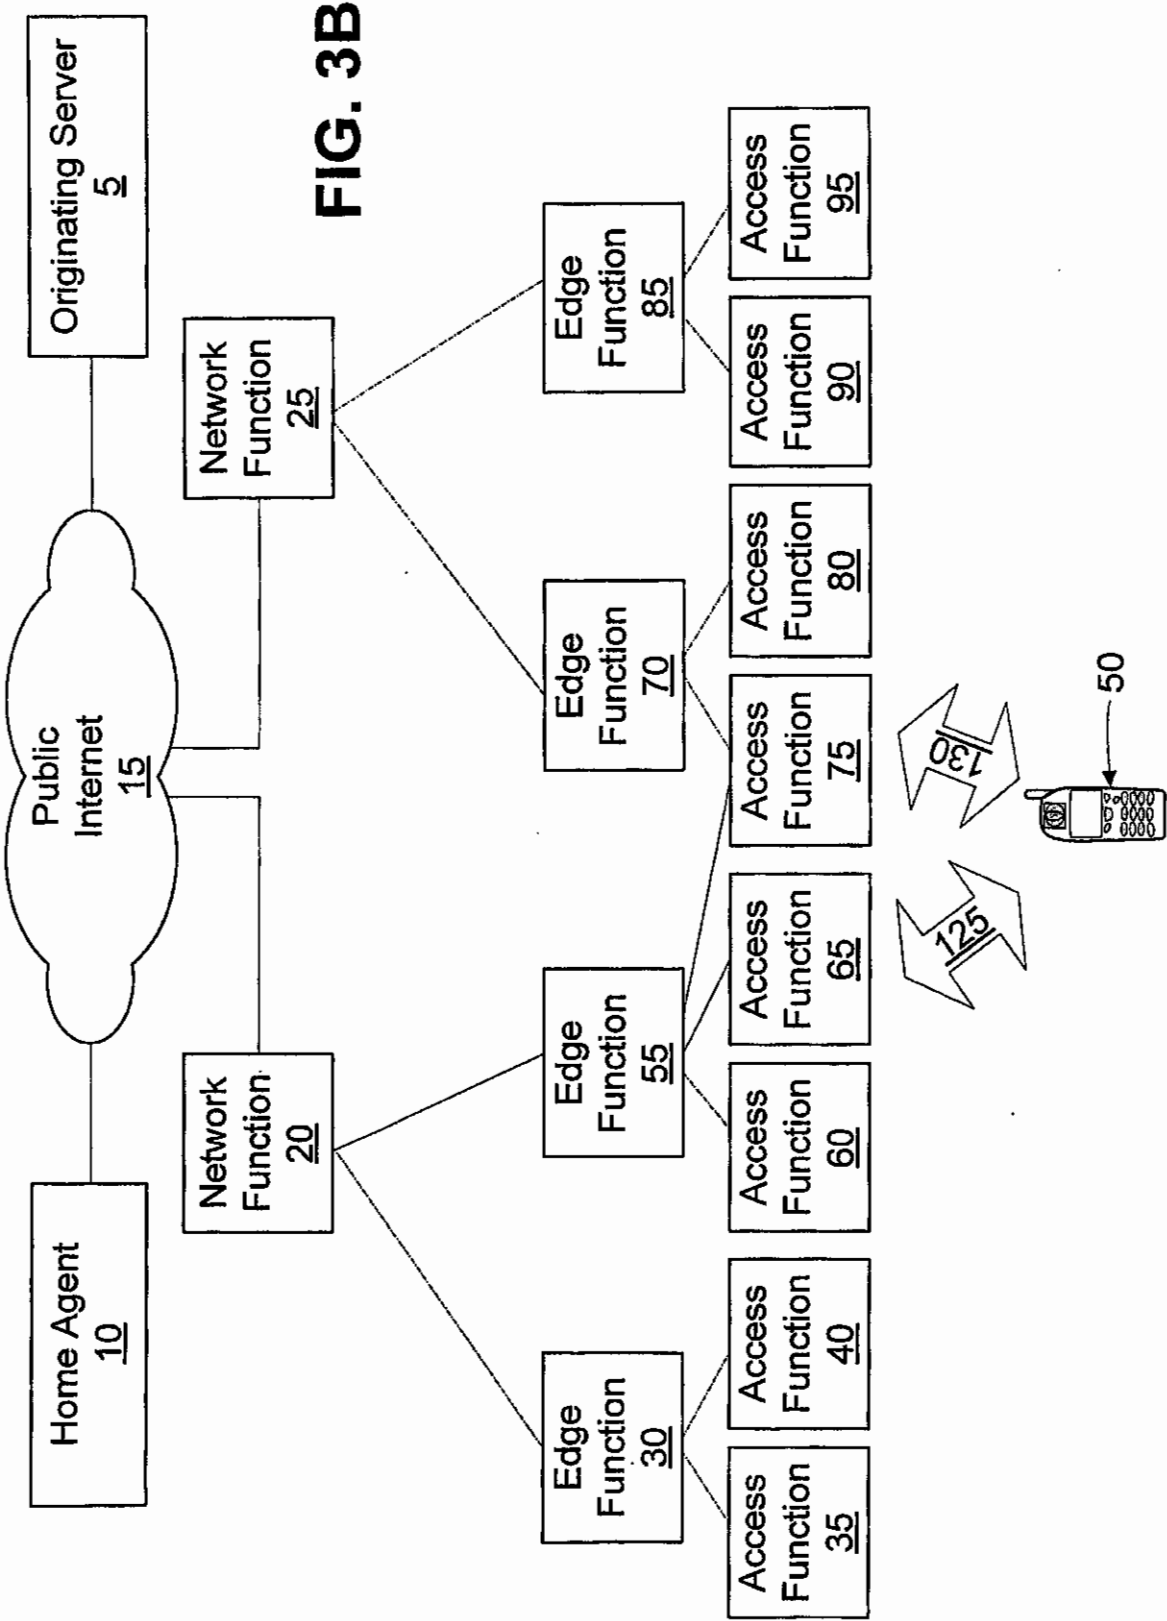

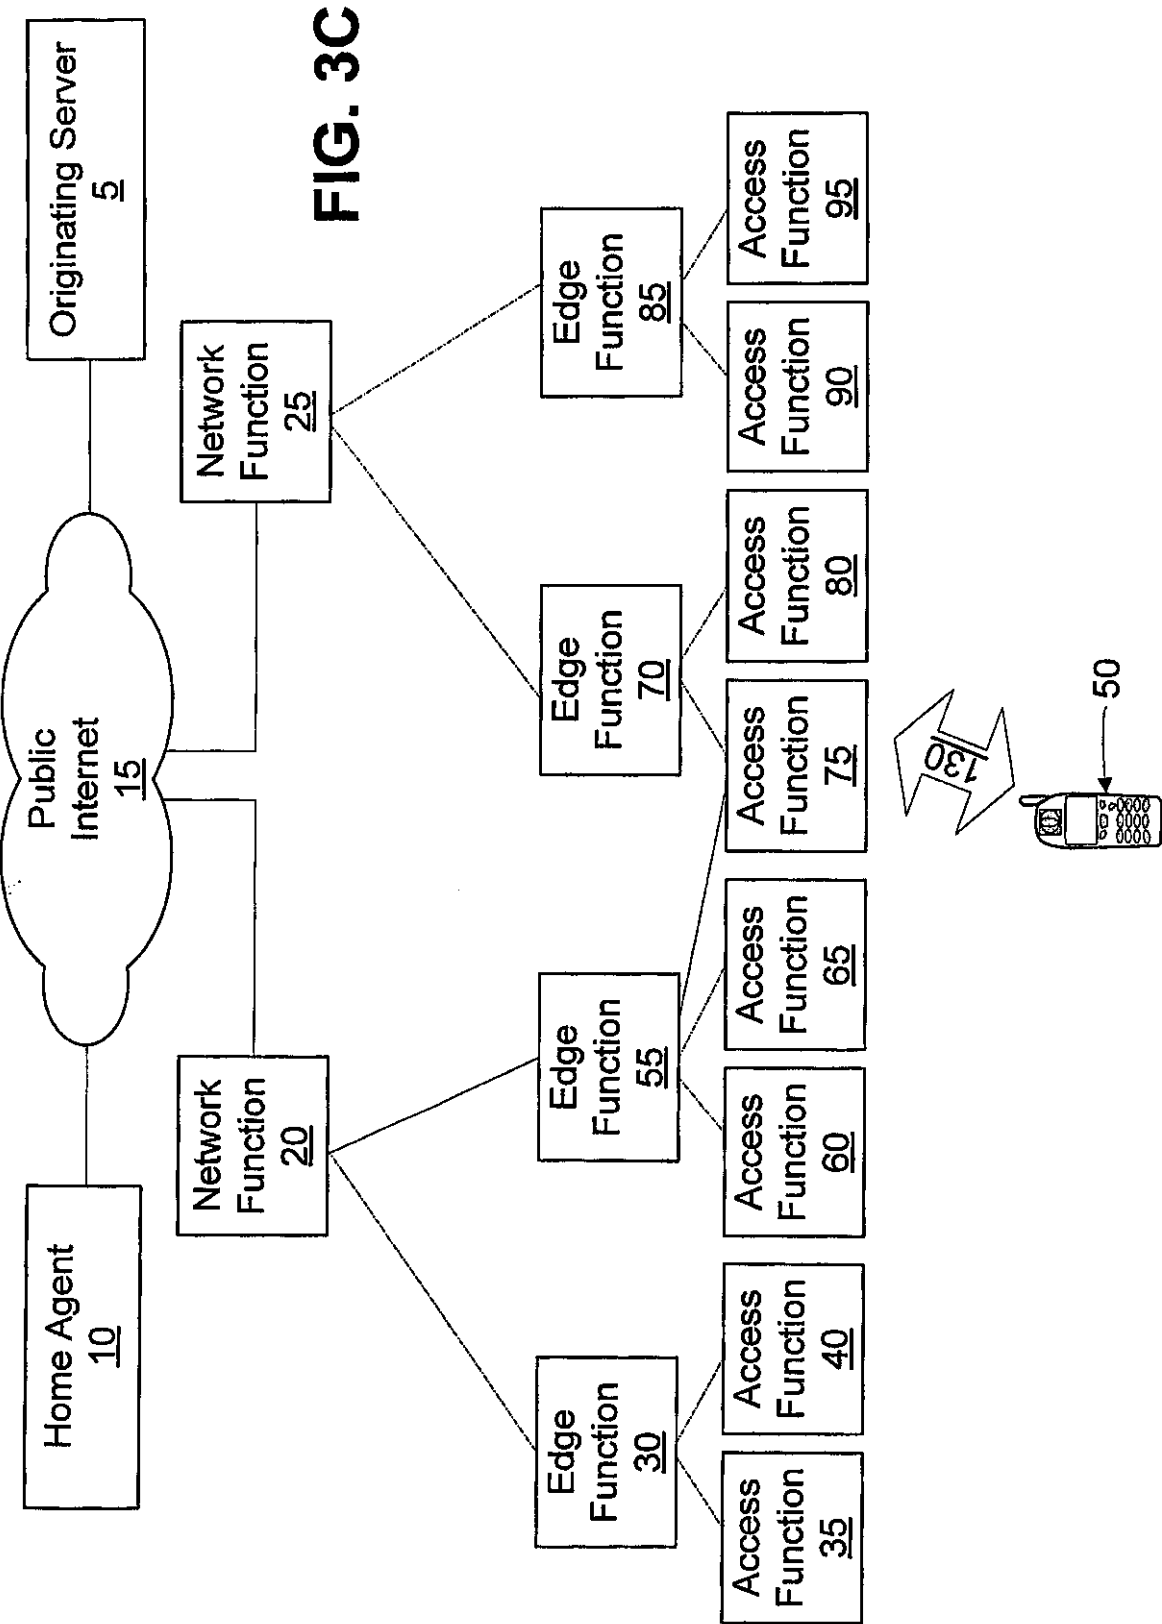


12/22

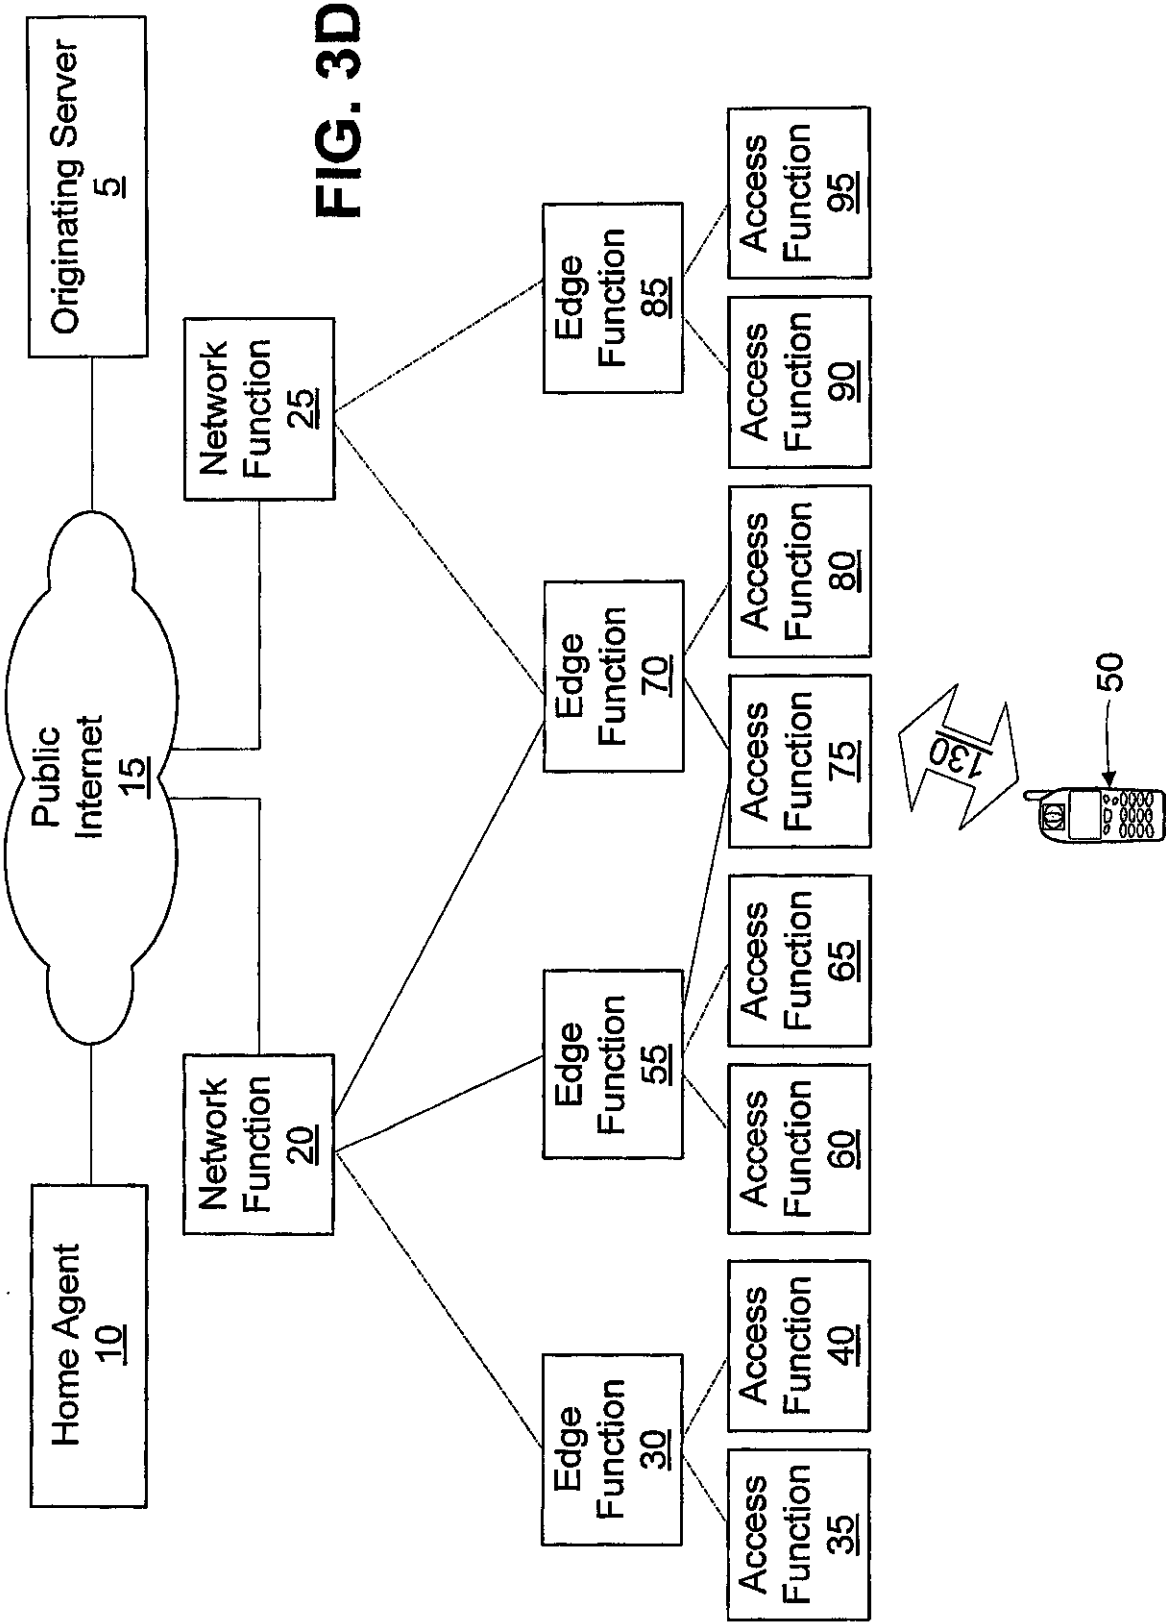

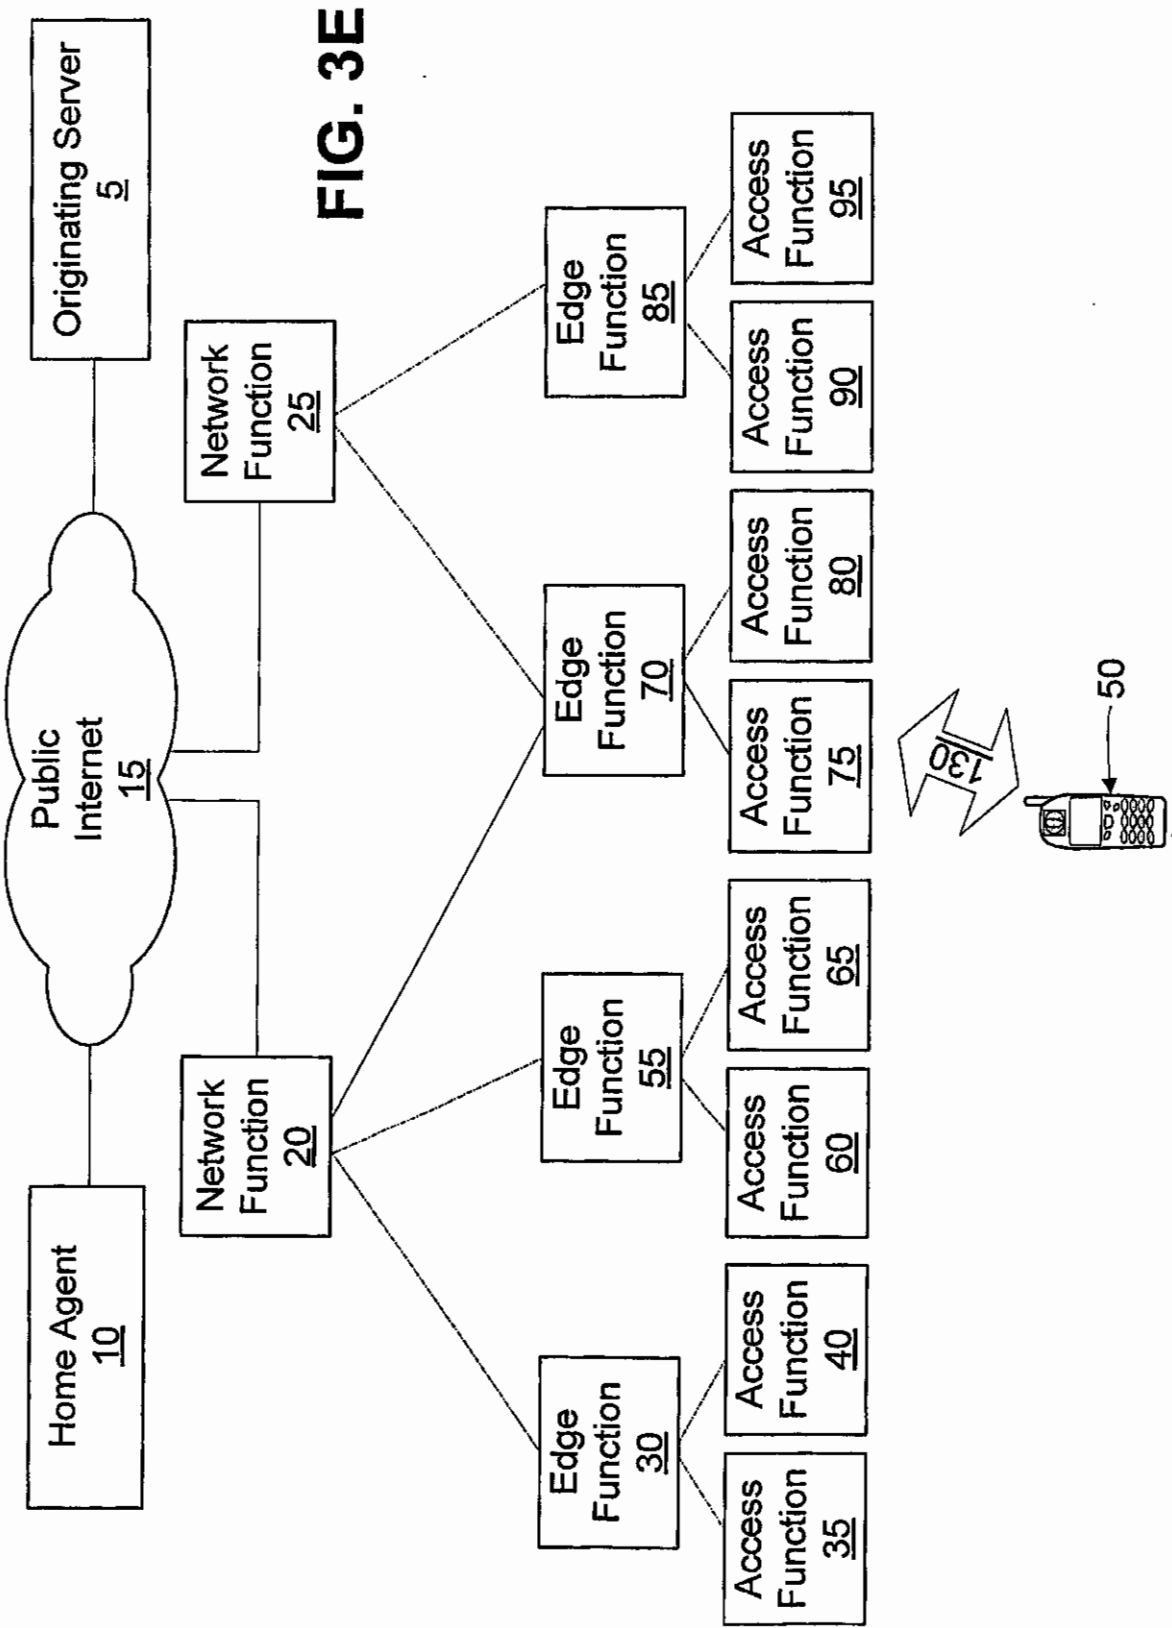

14/22

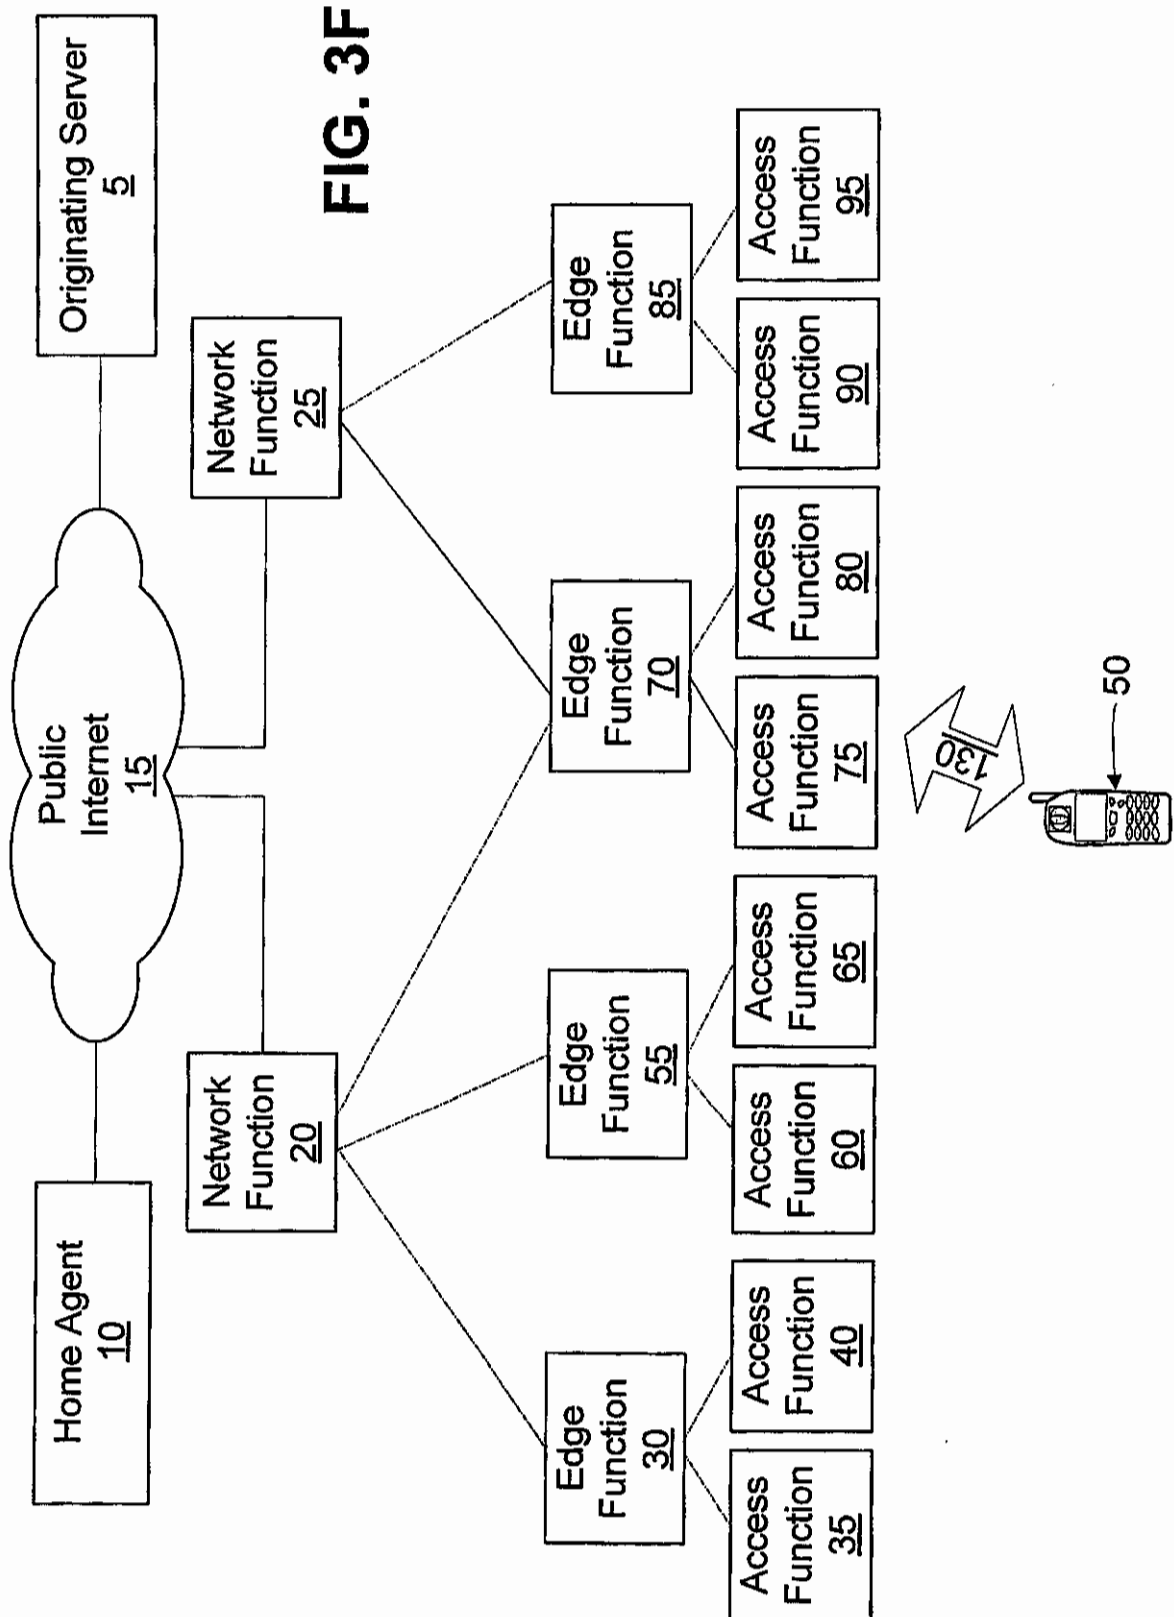

15/22

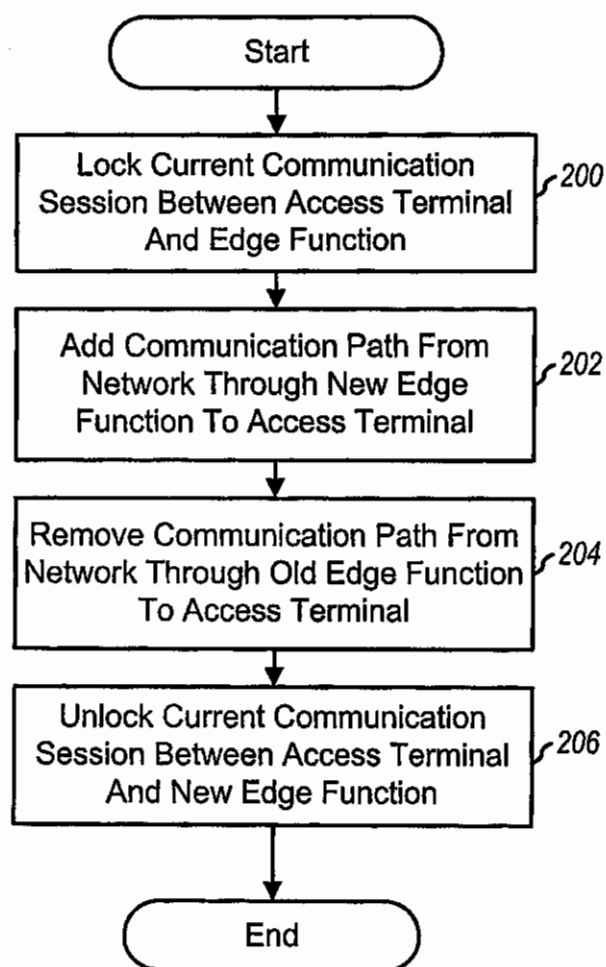


FIG. 4

16/22

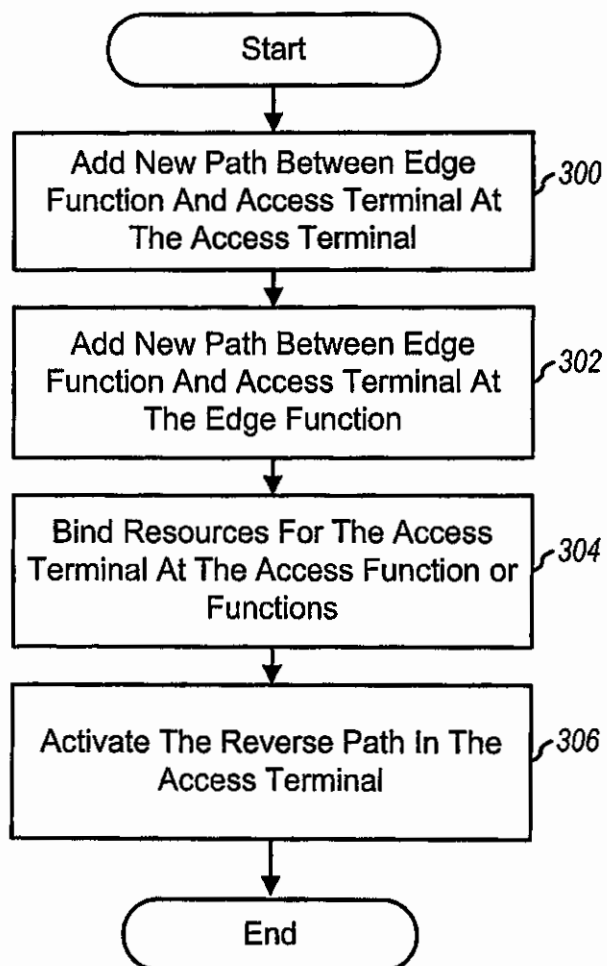
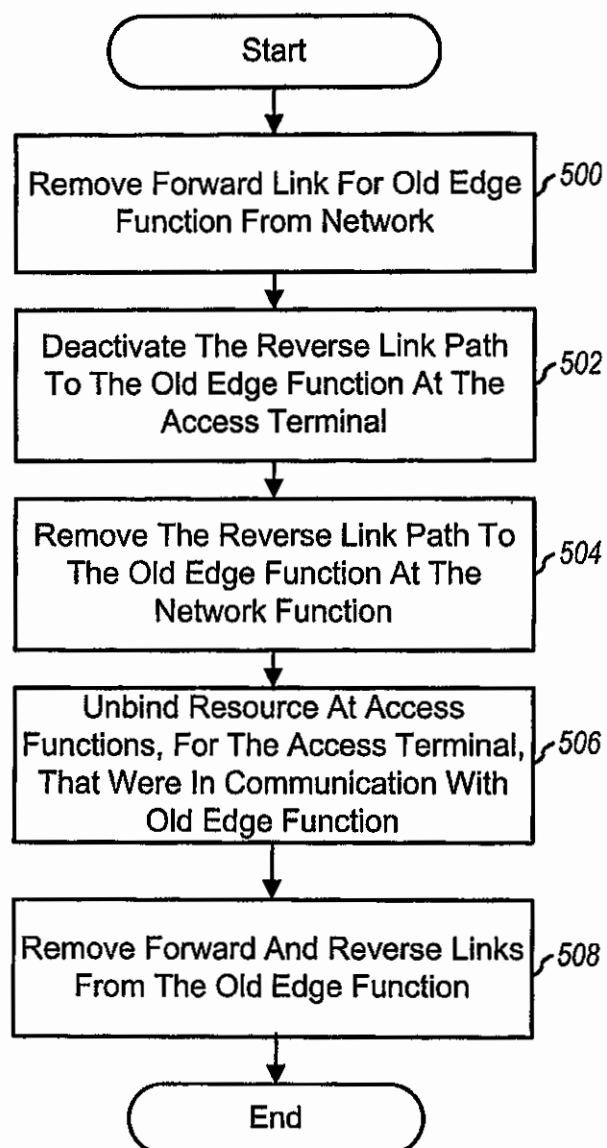
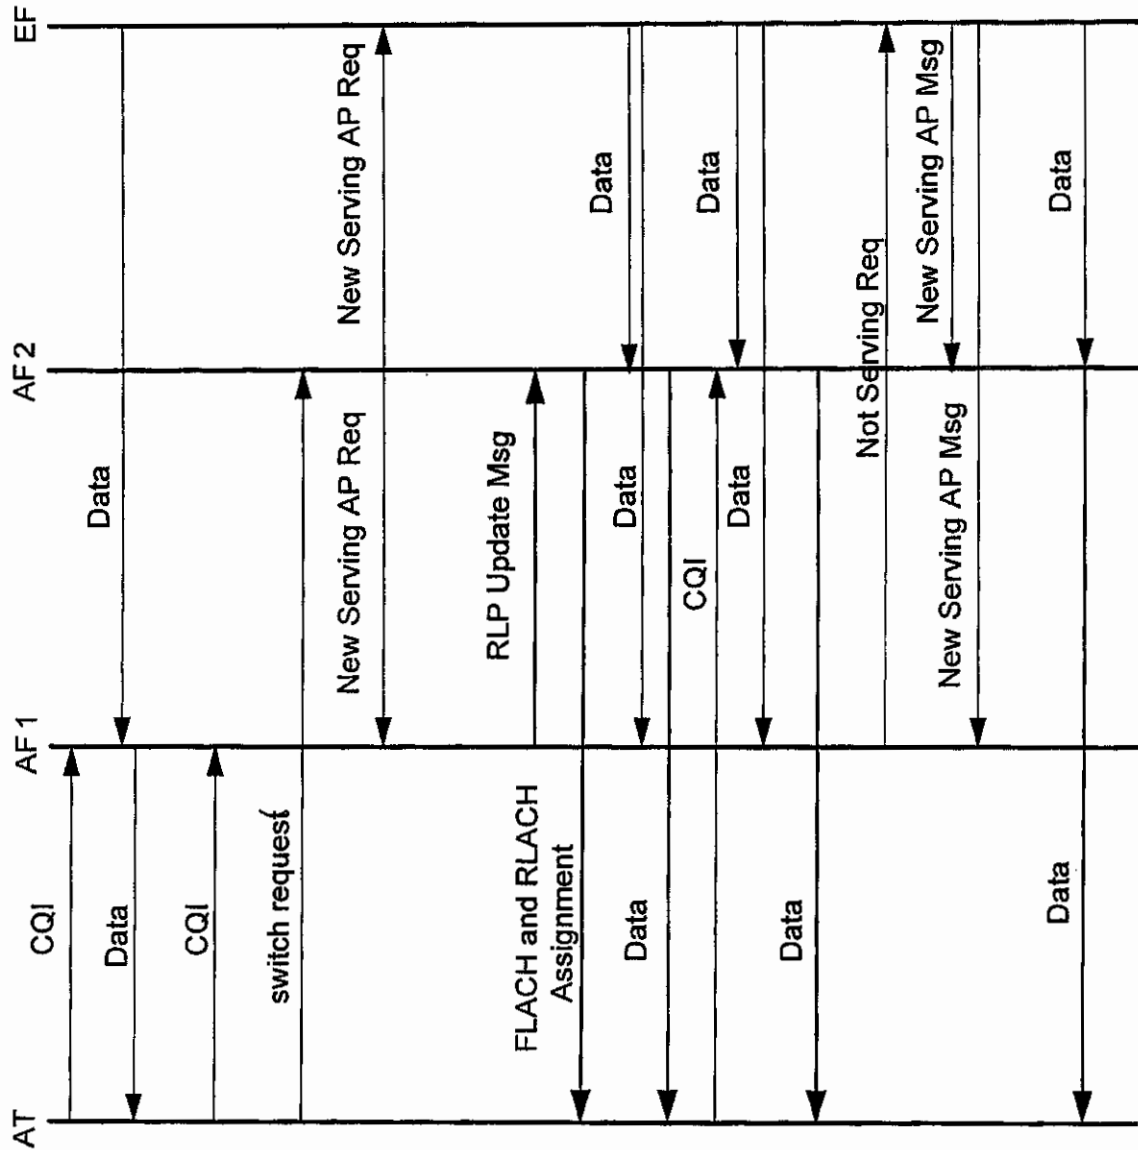


FIG. 5

17/22

**Fig. 6**

18/22

**Fig. 7**

AT Detects
low signal on
AF1, high
signal on AF2

Fast Switching

Communicate
with AF2

End
communicate
with AF1. AF1
initiates end
when no CQIs
for certain time

FIG. 8A

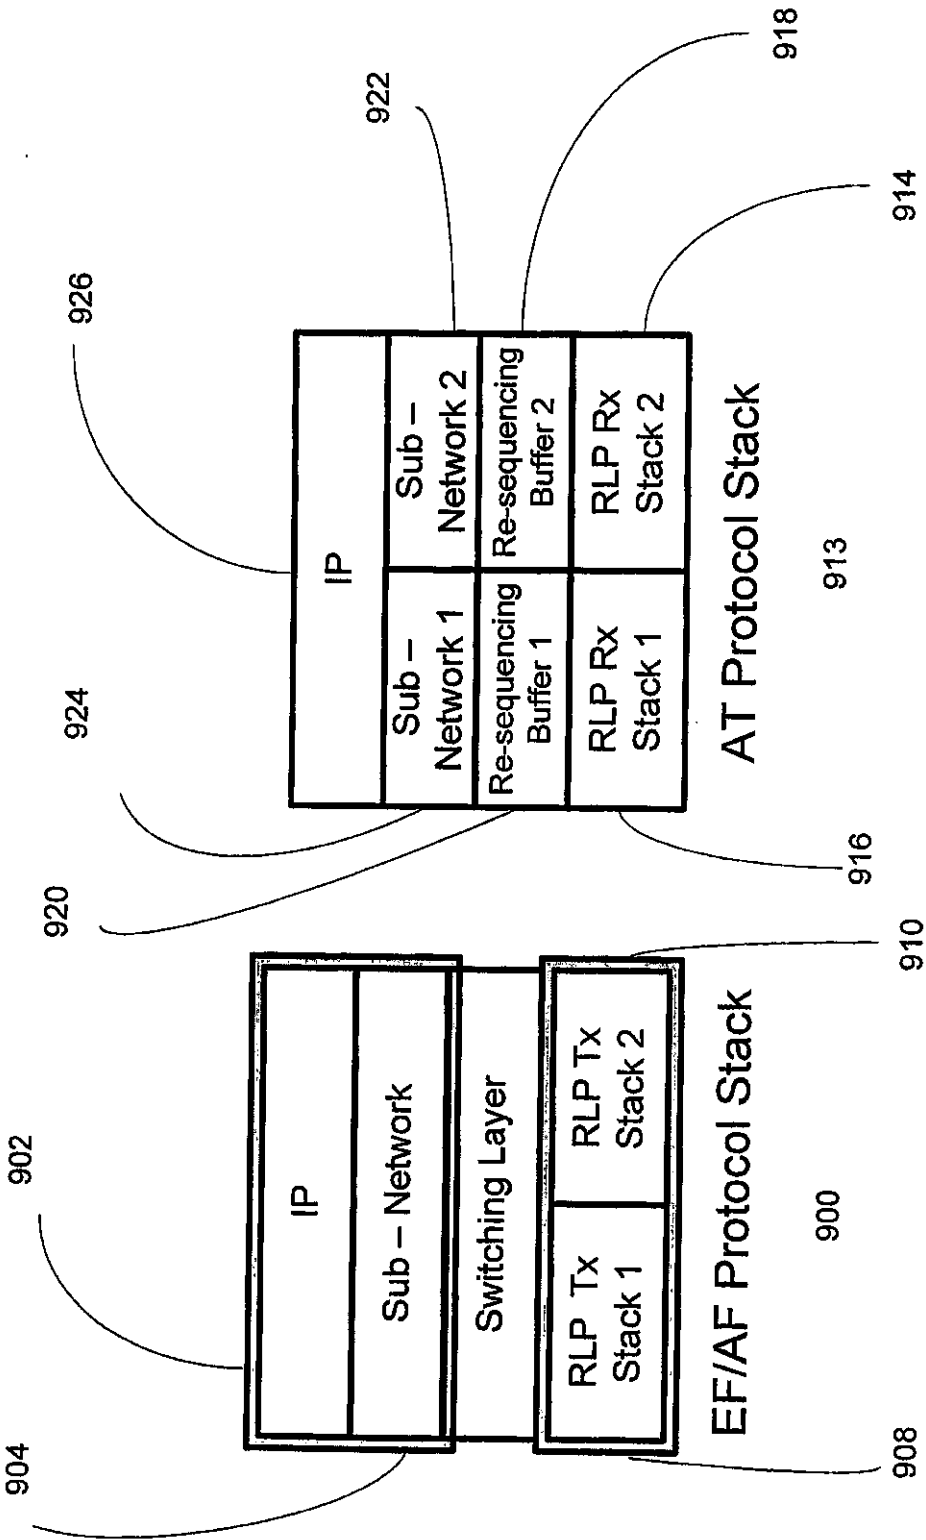


FIG. 8B


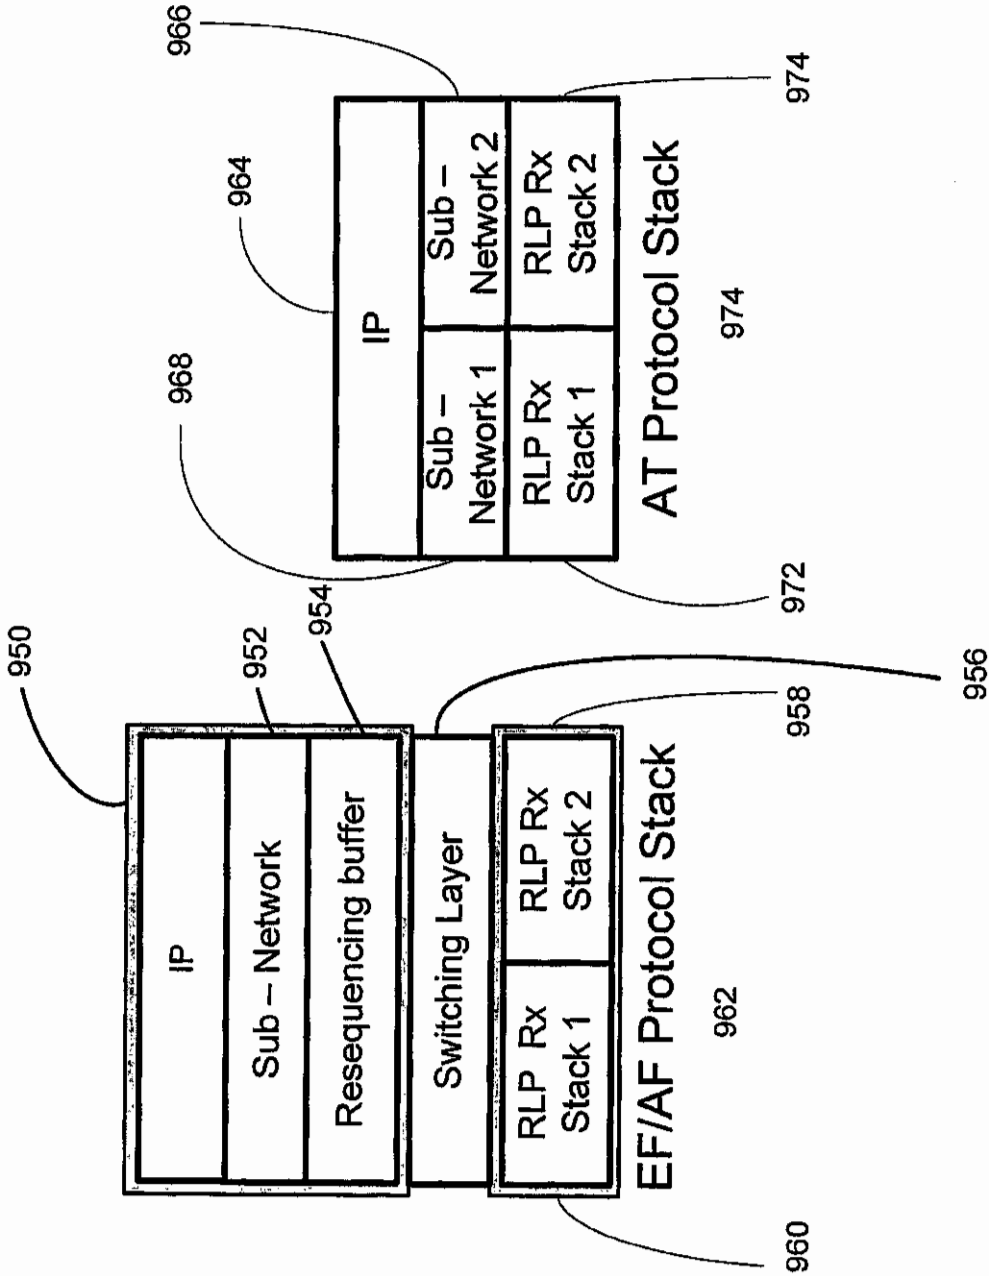


FIG. 9



22/22

FIG. 10

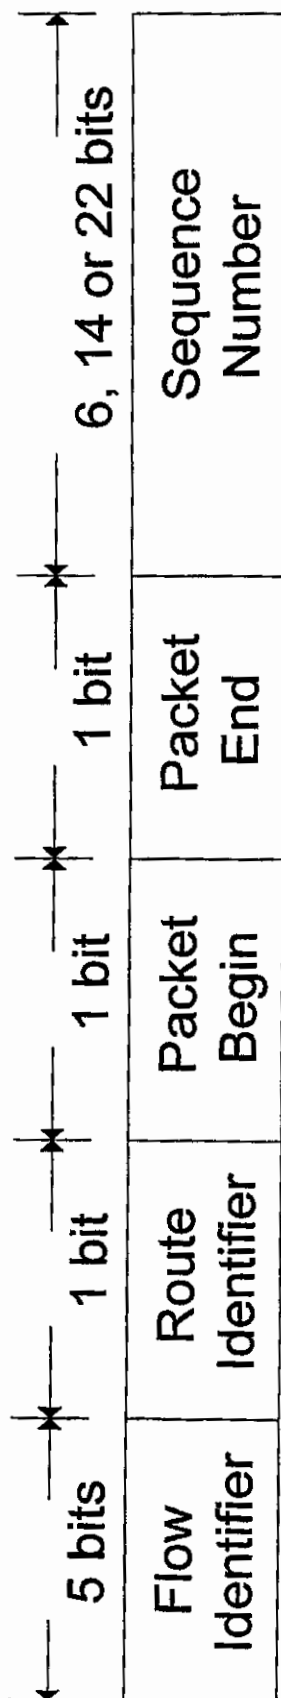