


1/14

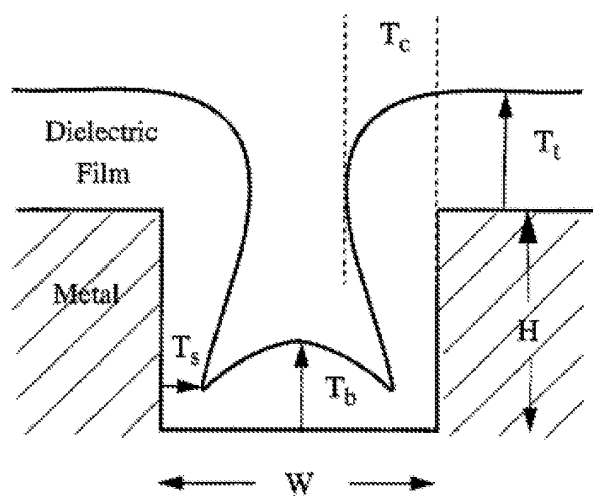

$$\text{Aspect Ratio} = \frac{H}{W}$$

$$\text{bottom step coverage} = \frac{T_b}{T_t}$$

$$\text{side step coverage} = \frac{T_s}{T_t}$$

$$\text{cusping} = \frac{T_c - T_s}{T_s}$$

FIG. 1

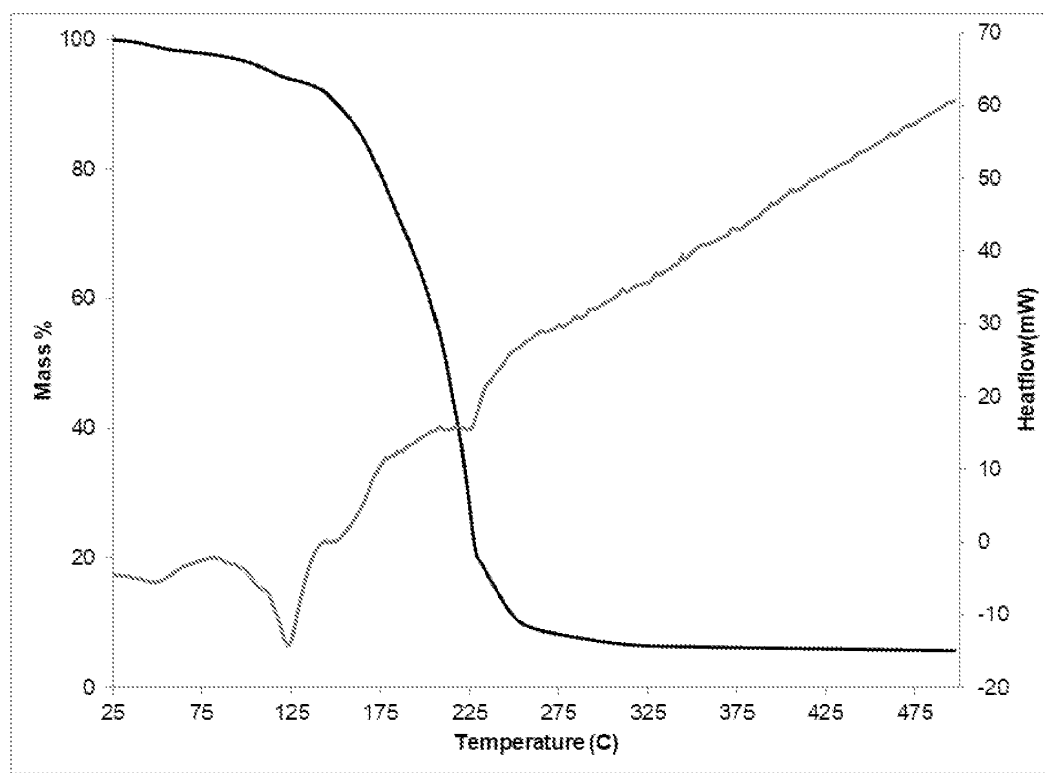


FIG. 2

2/14

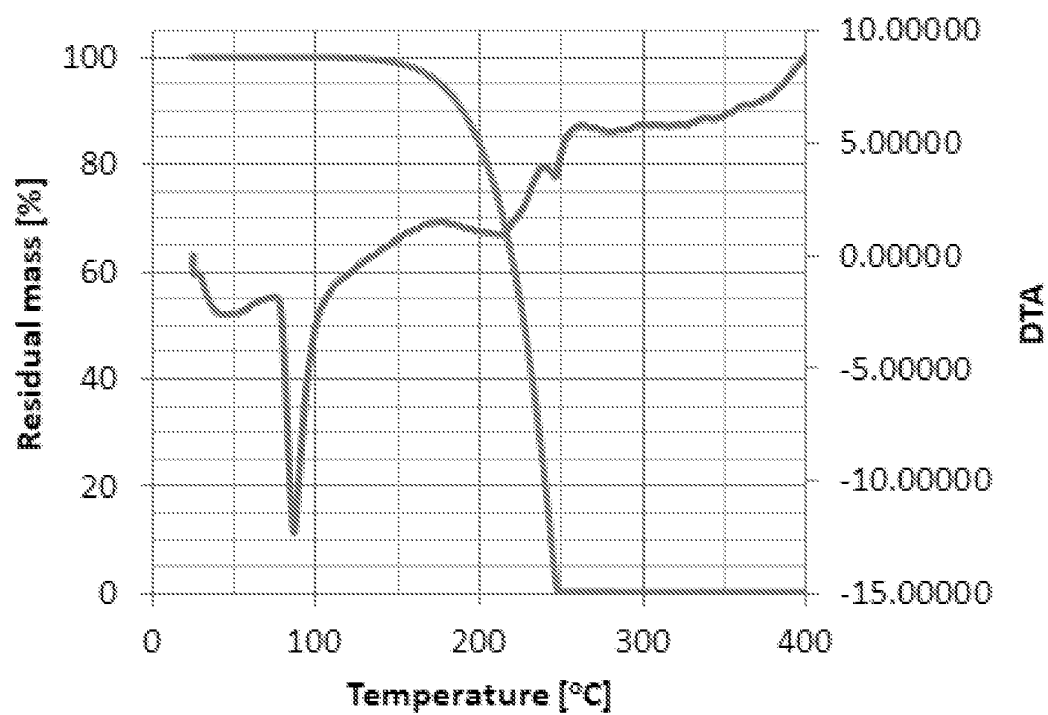


FIG. 3

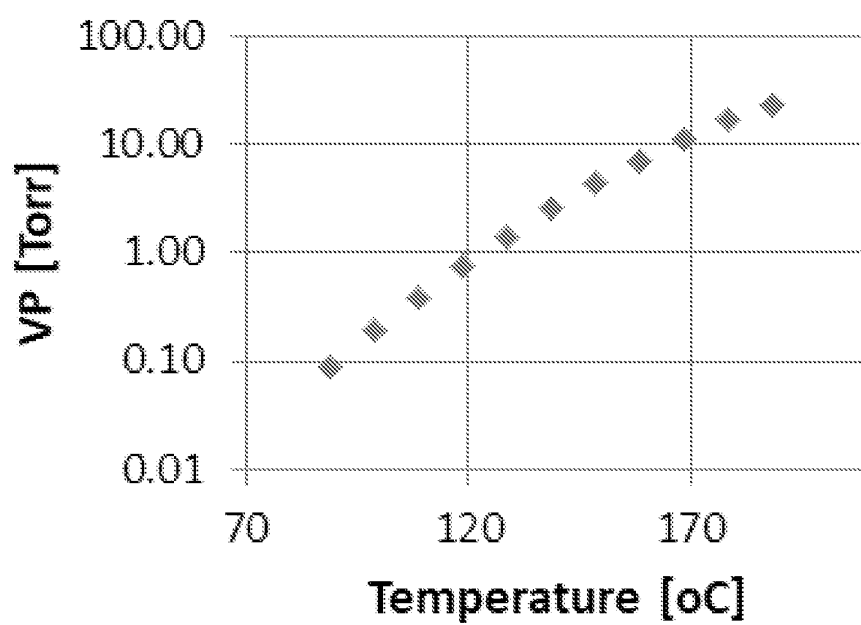


FIG. 4A

3/14

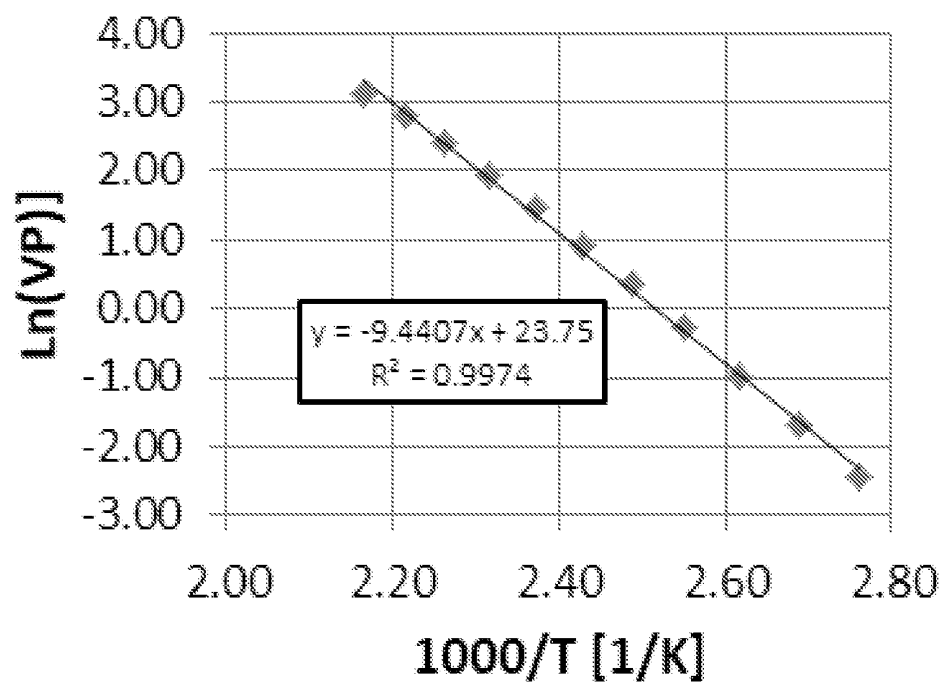


FIG. 4B

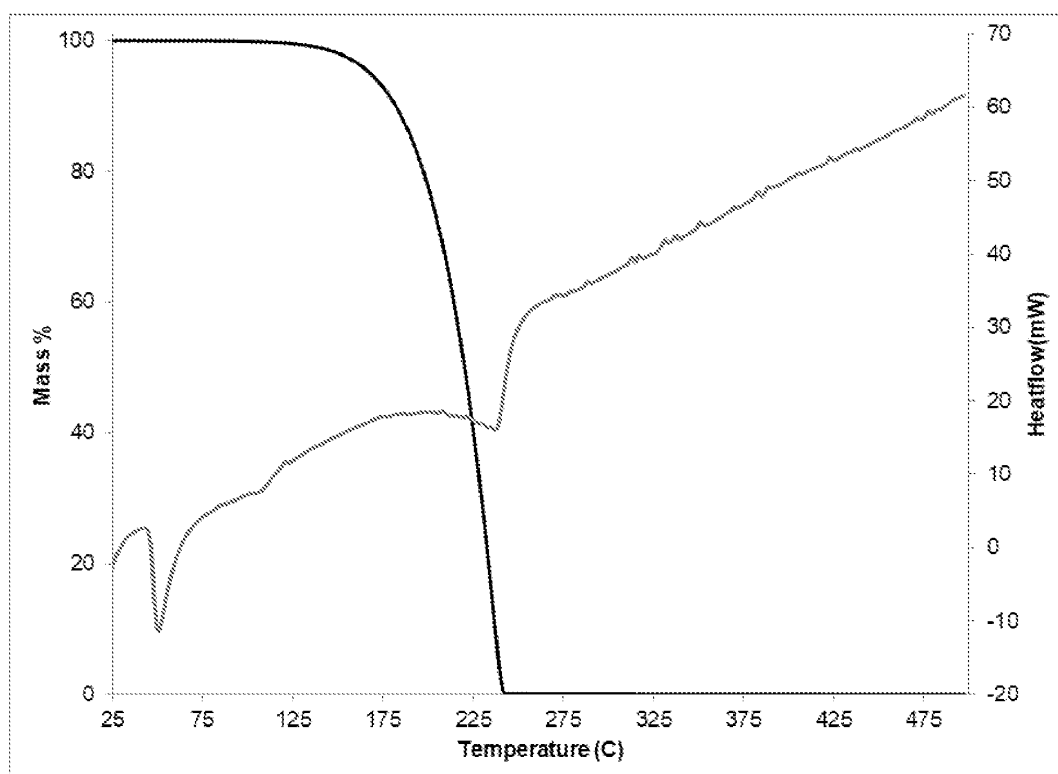


FIG. 5

4/14

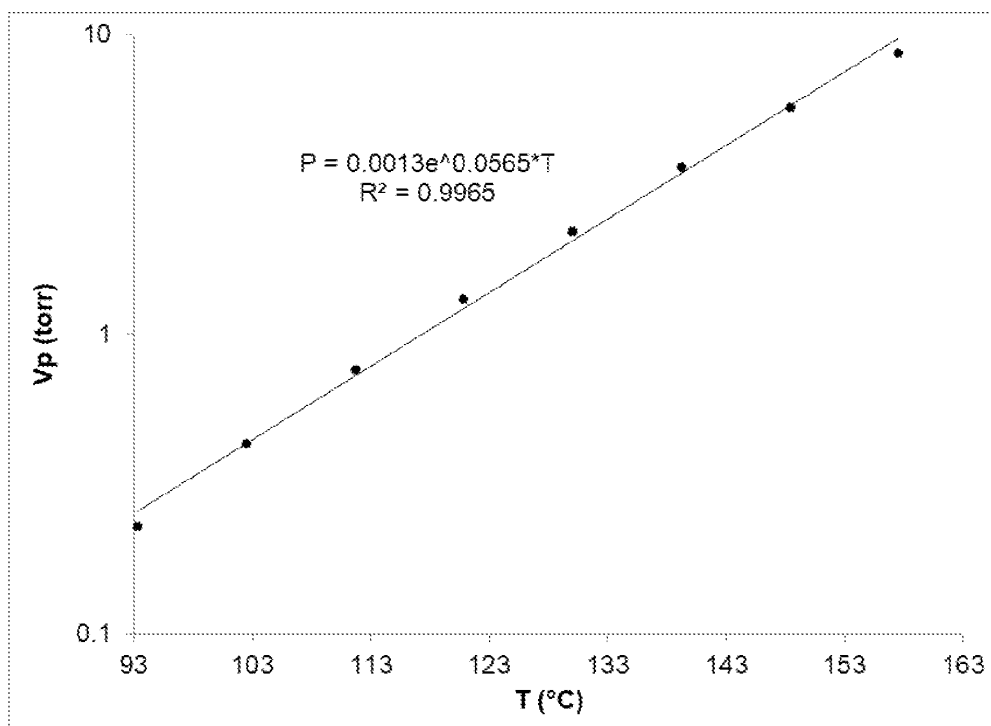


FIG. 6A

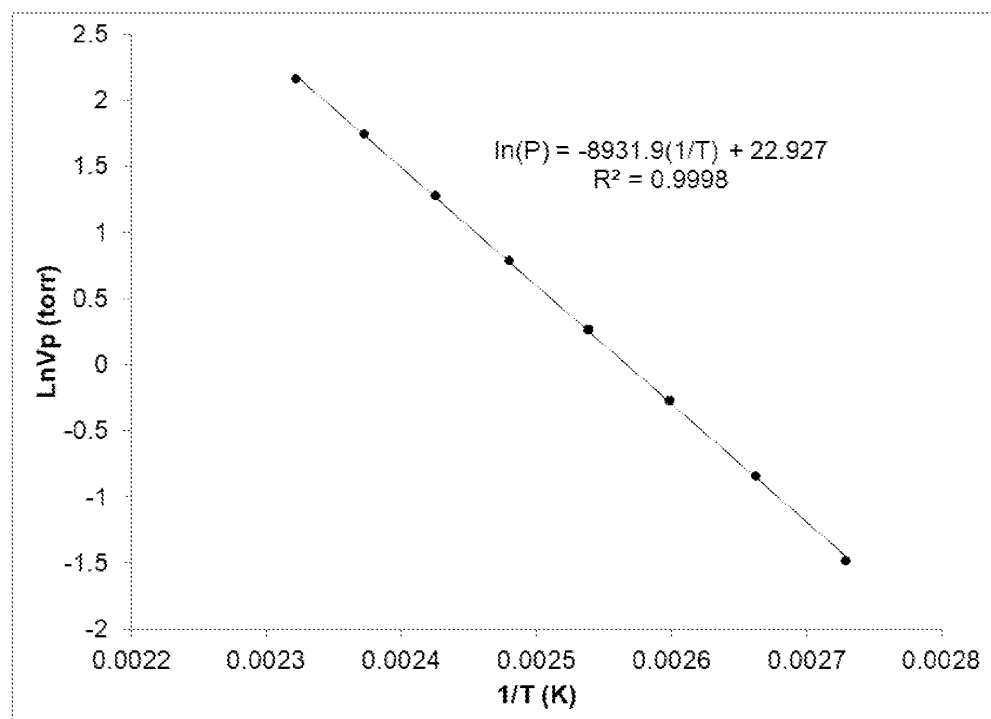


FIG. 6B

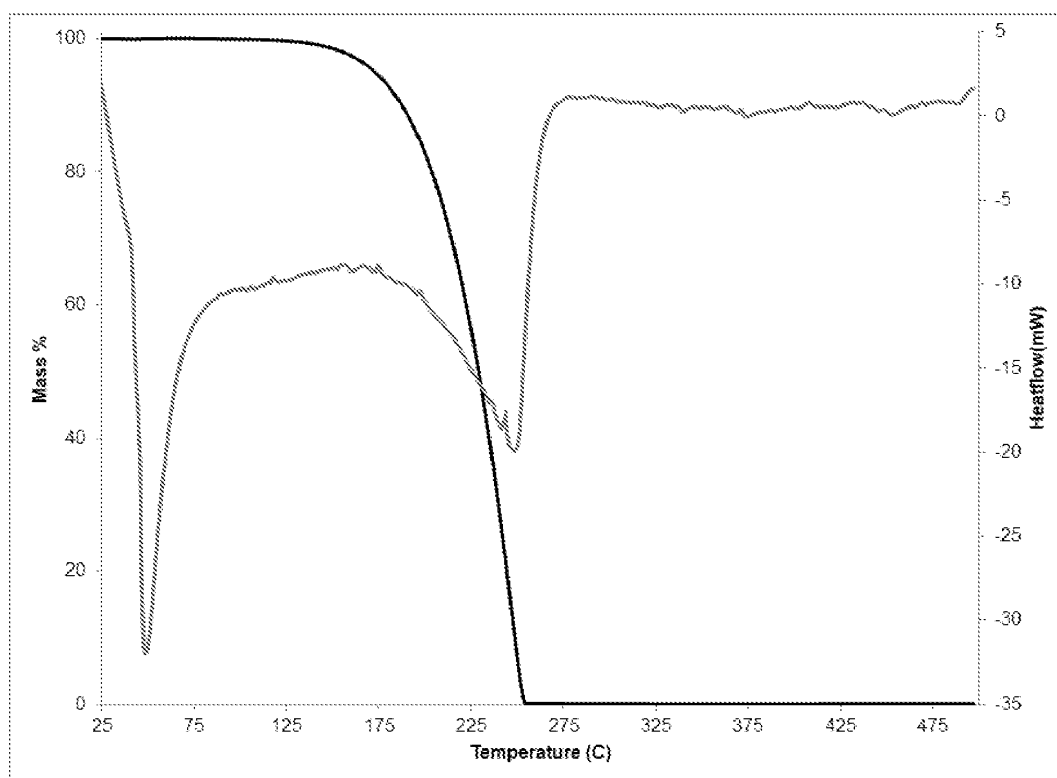


FIG. 7

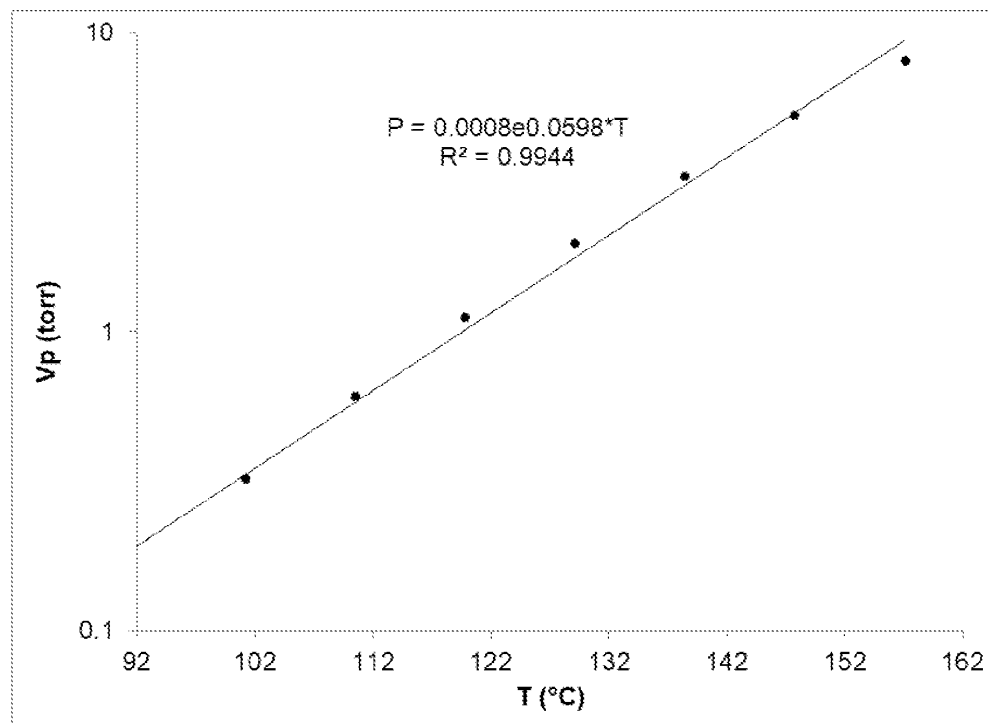


FIG. 8A

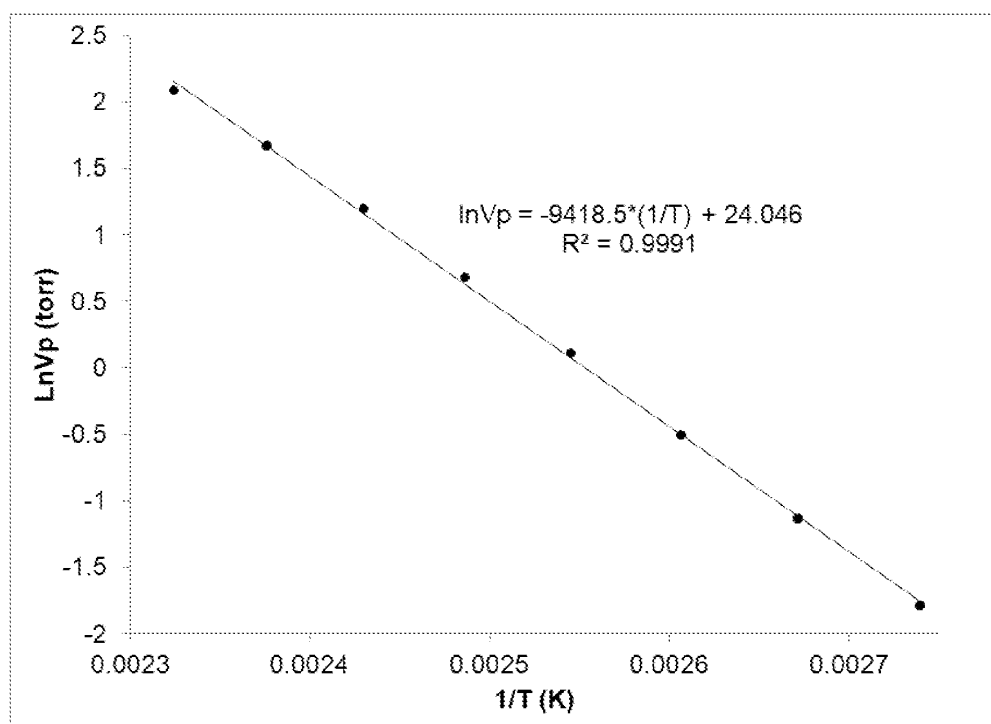


FIG. 8B

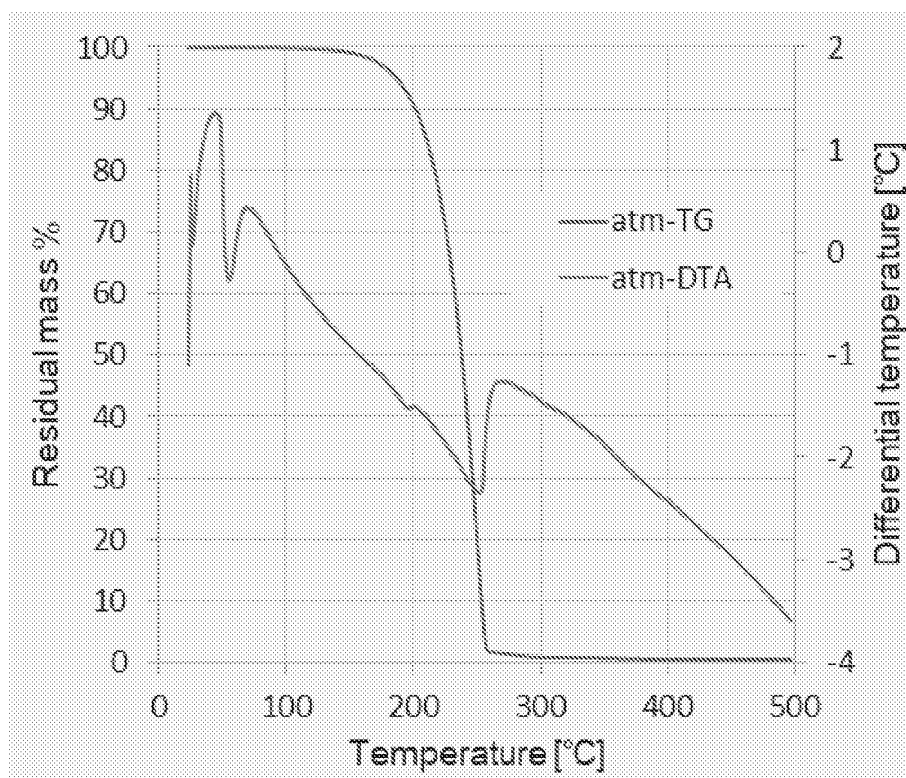


FIG. 9

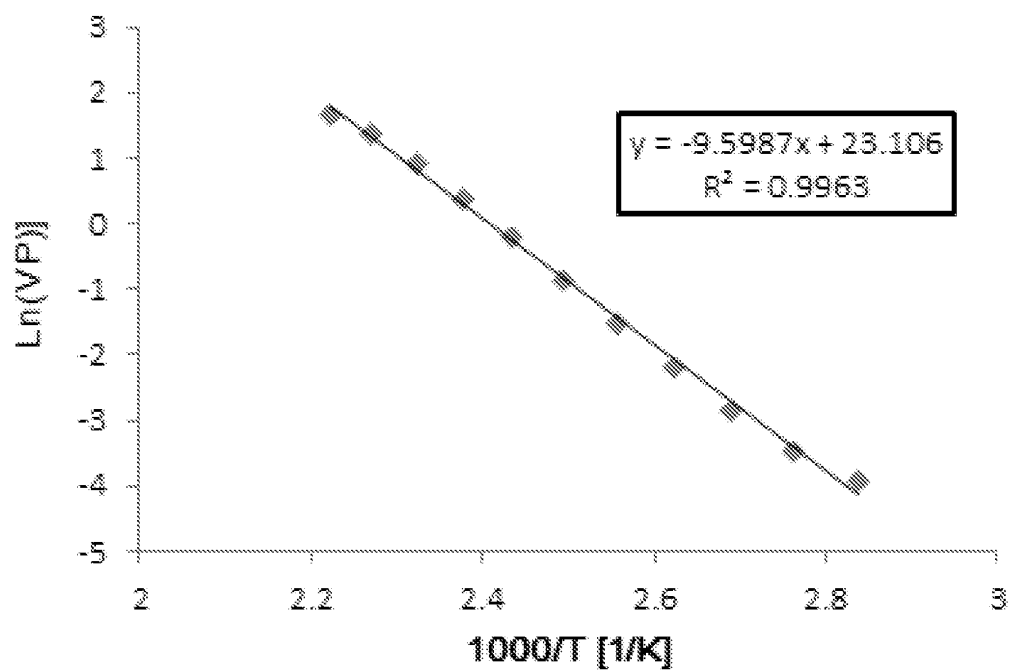


FIG. 10A

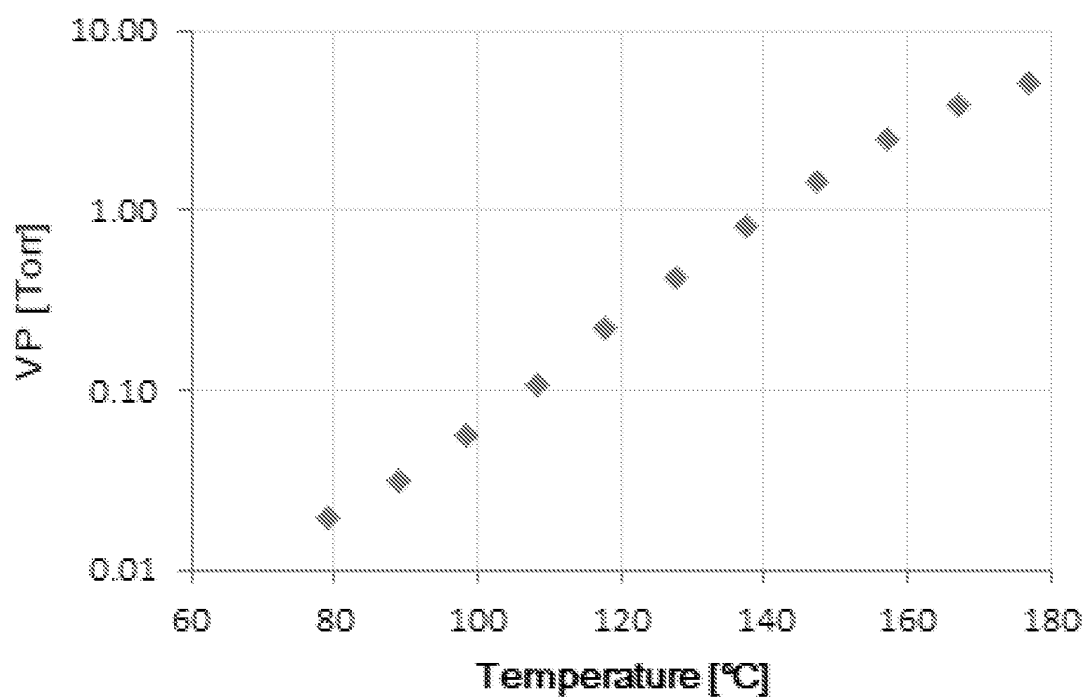


FIG. 10B

8/14

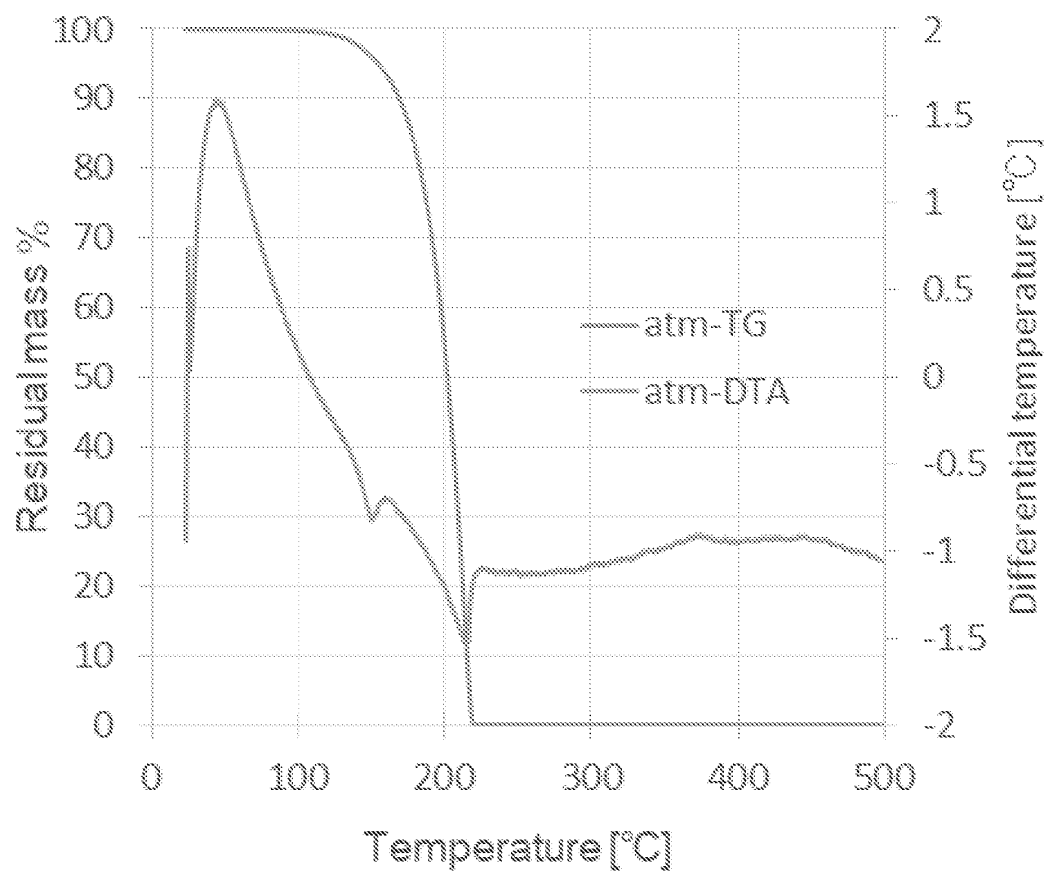


FIG. 11

9/14

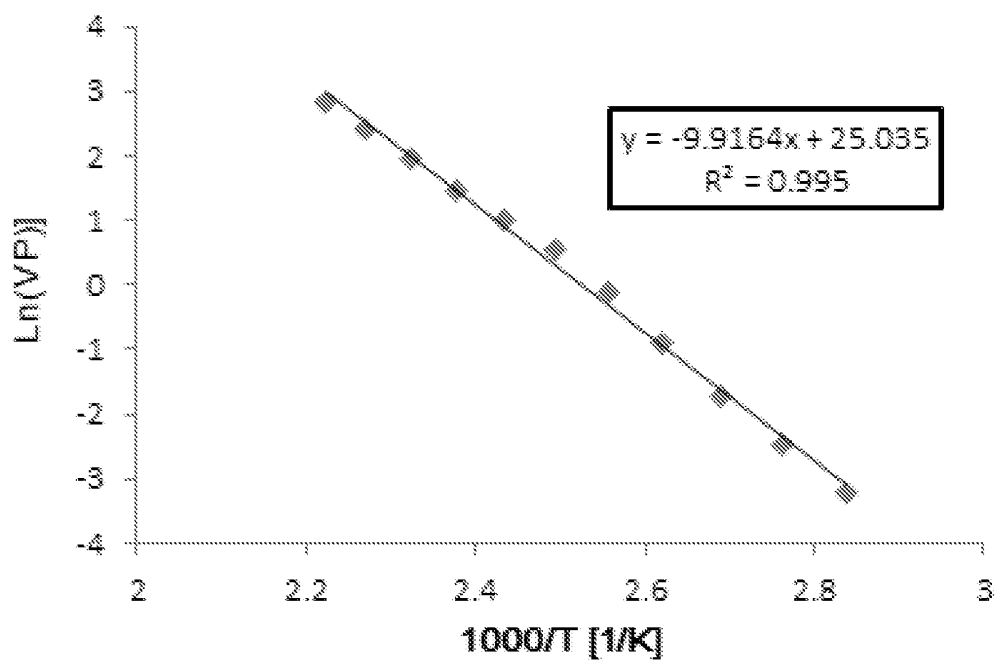


FIG. 12A

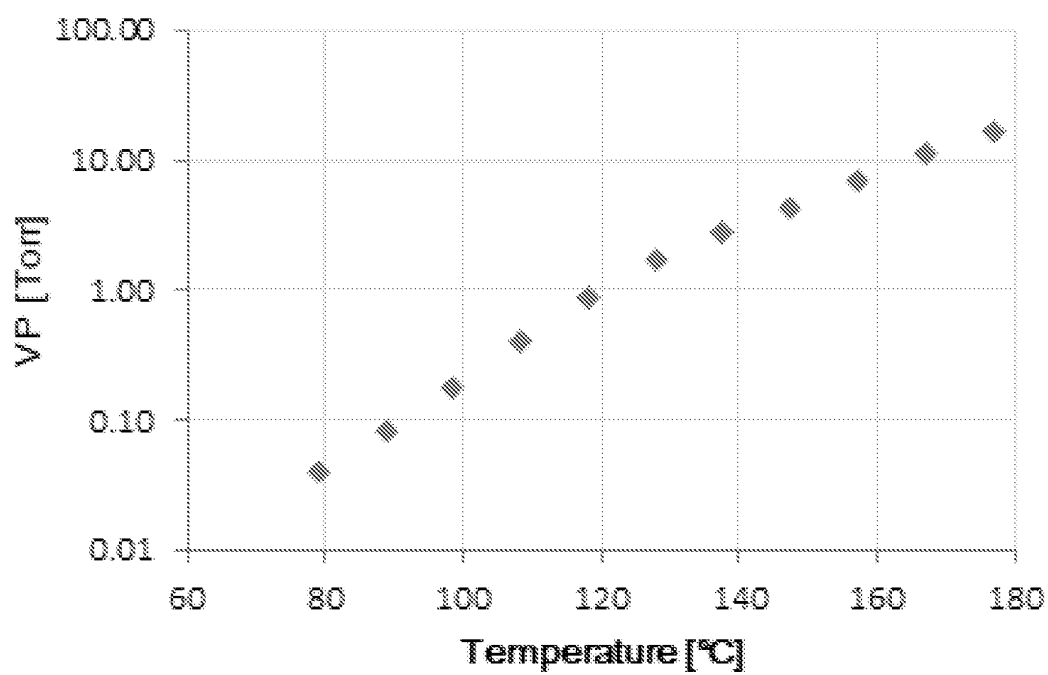


FIG. 12B

10/14

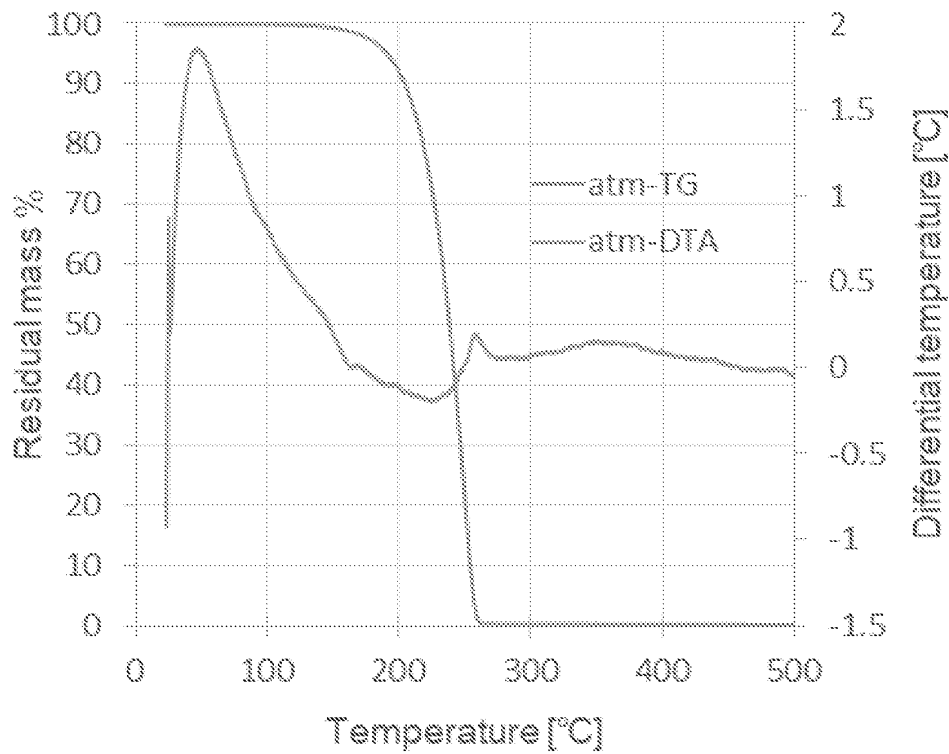


FIG. 13

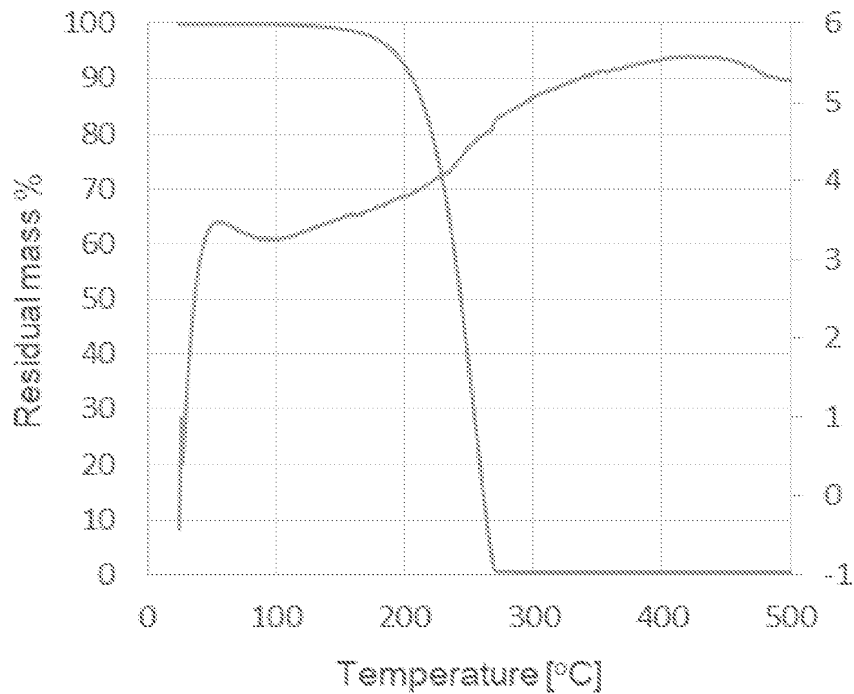


FIG. 14

11/14

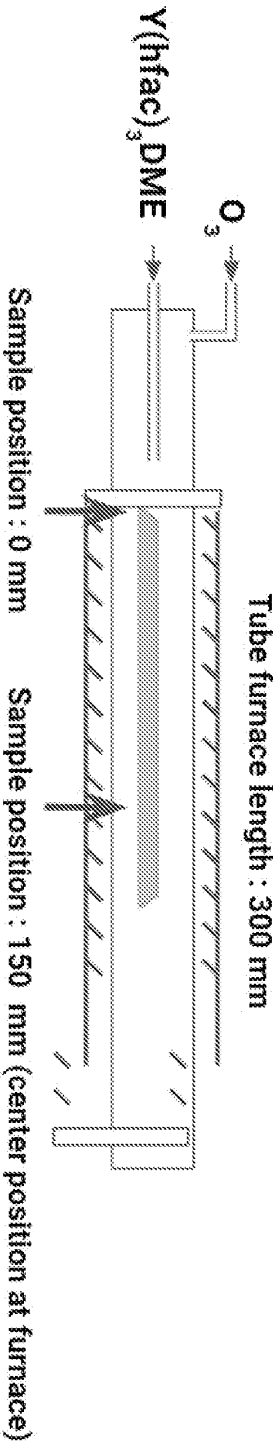


FIG. 15

12/14

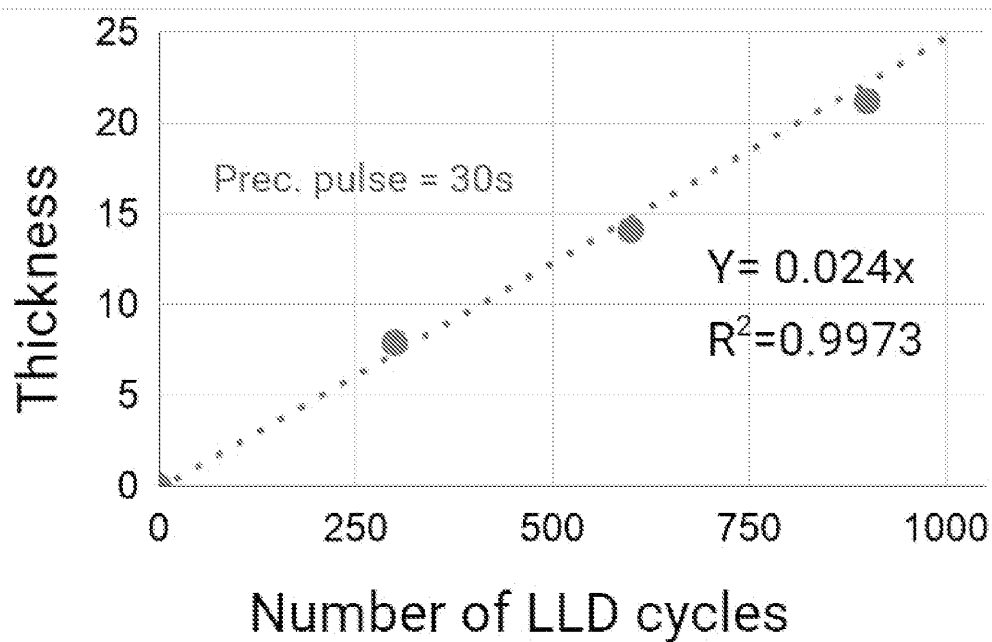


FIG. 16

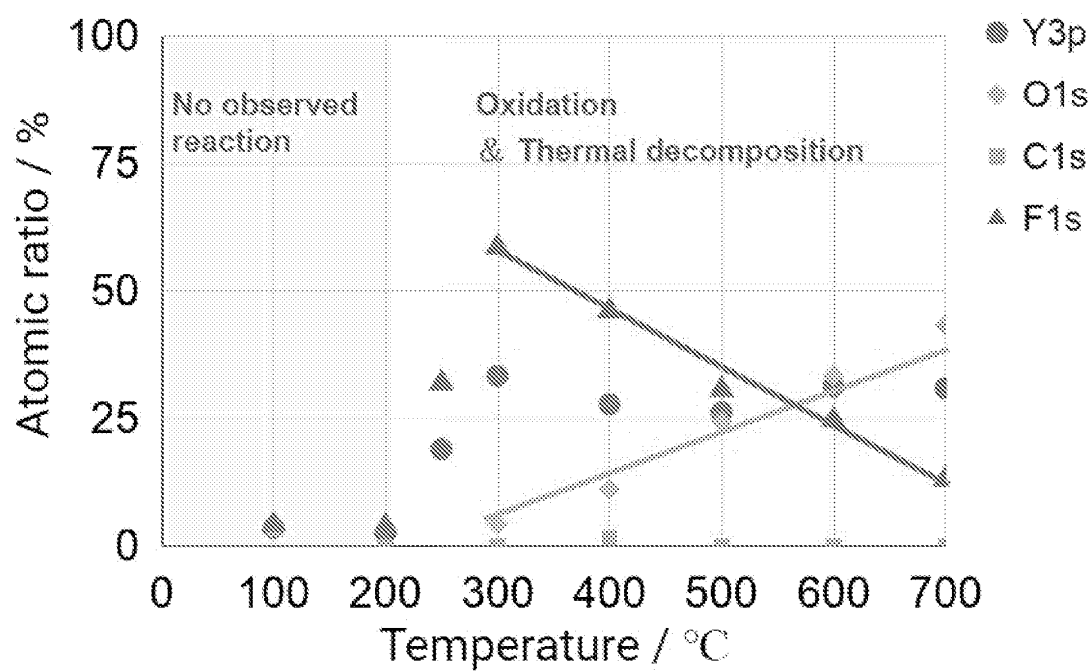


FIG. 17

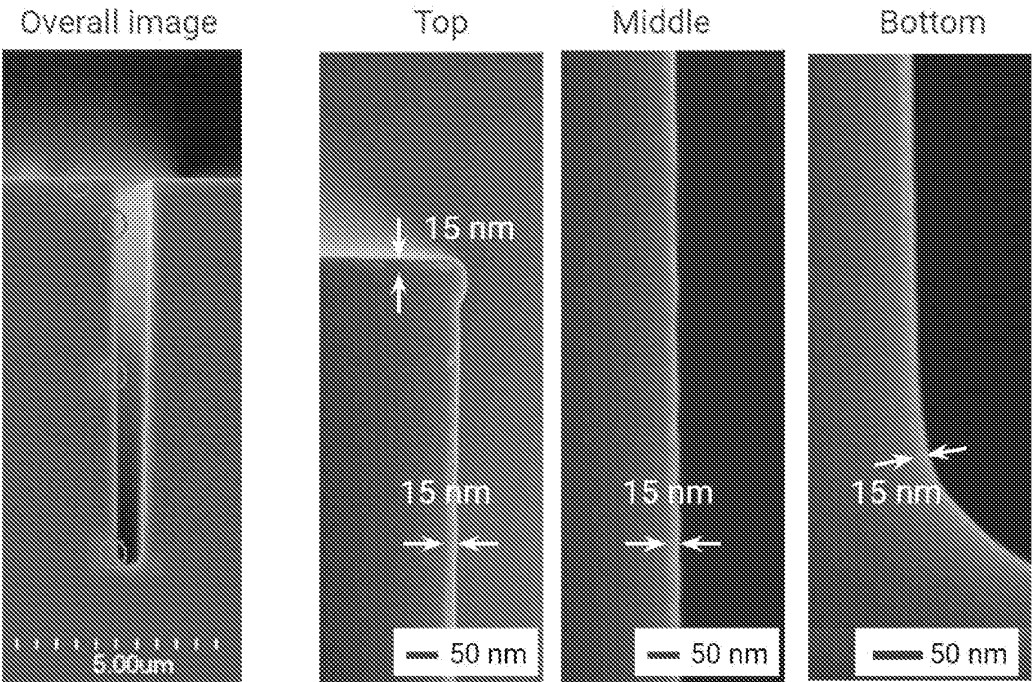


FIG. 18

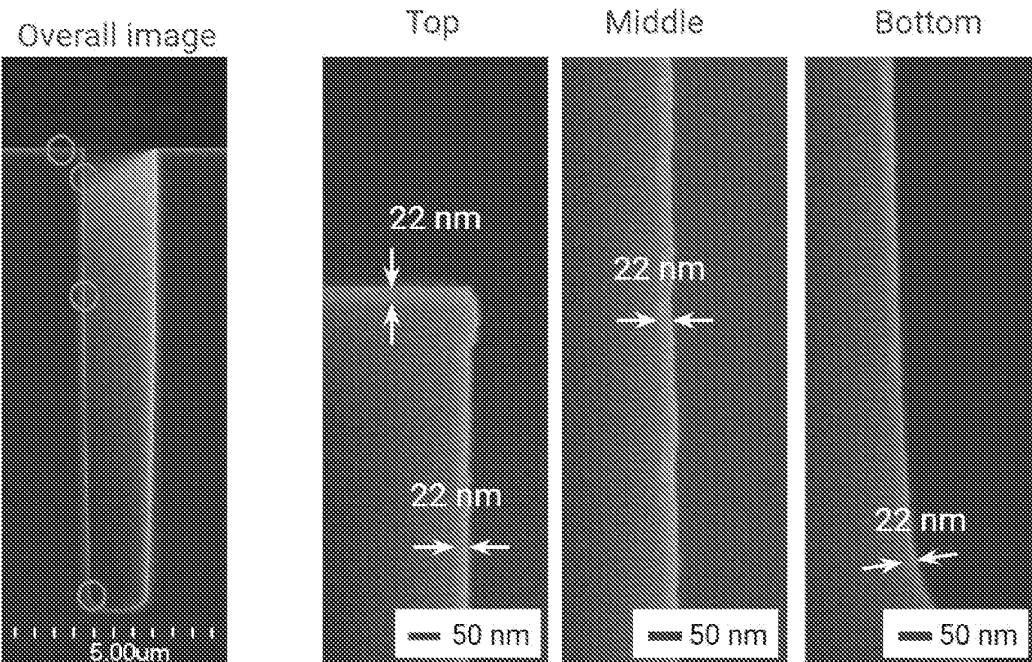


FIG. 19

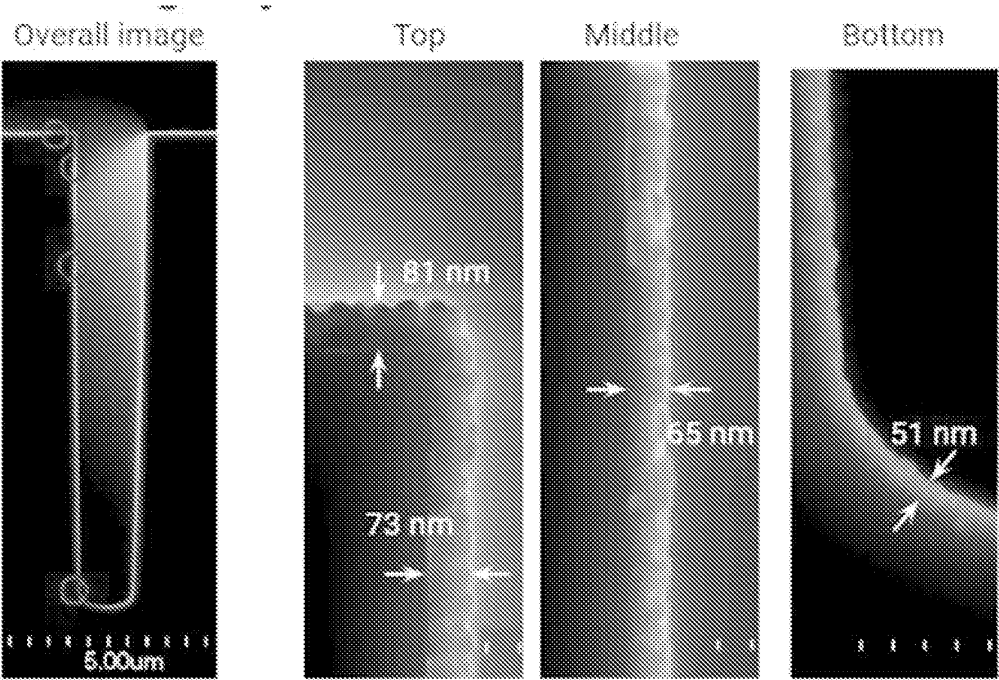


FIG. 20

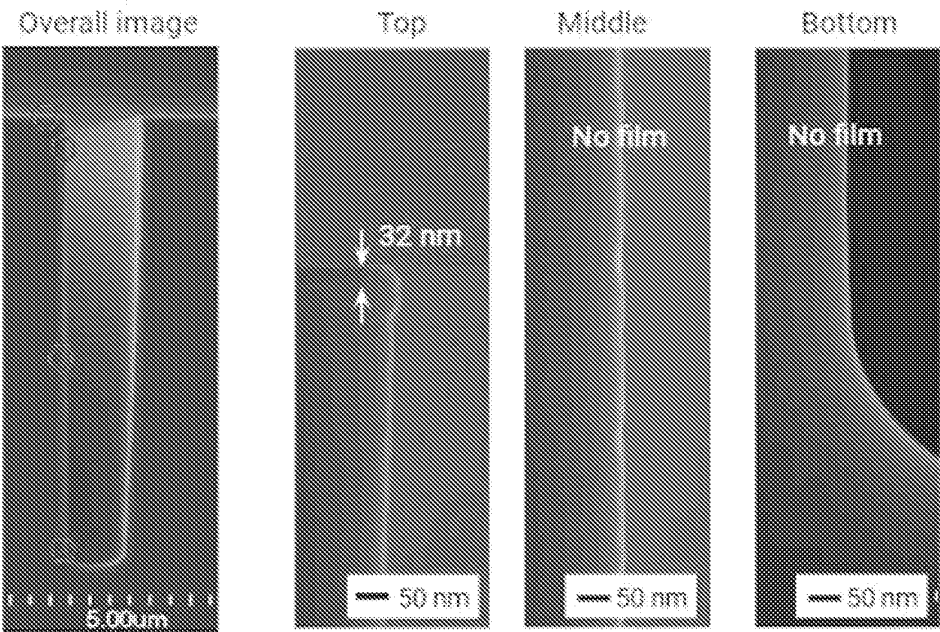


FIG. 21