

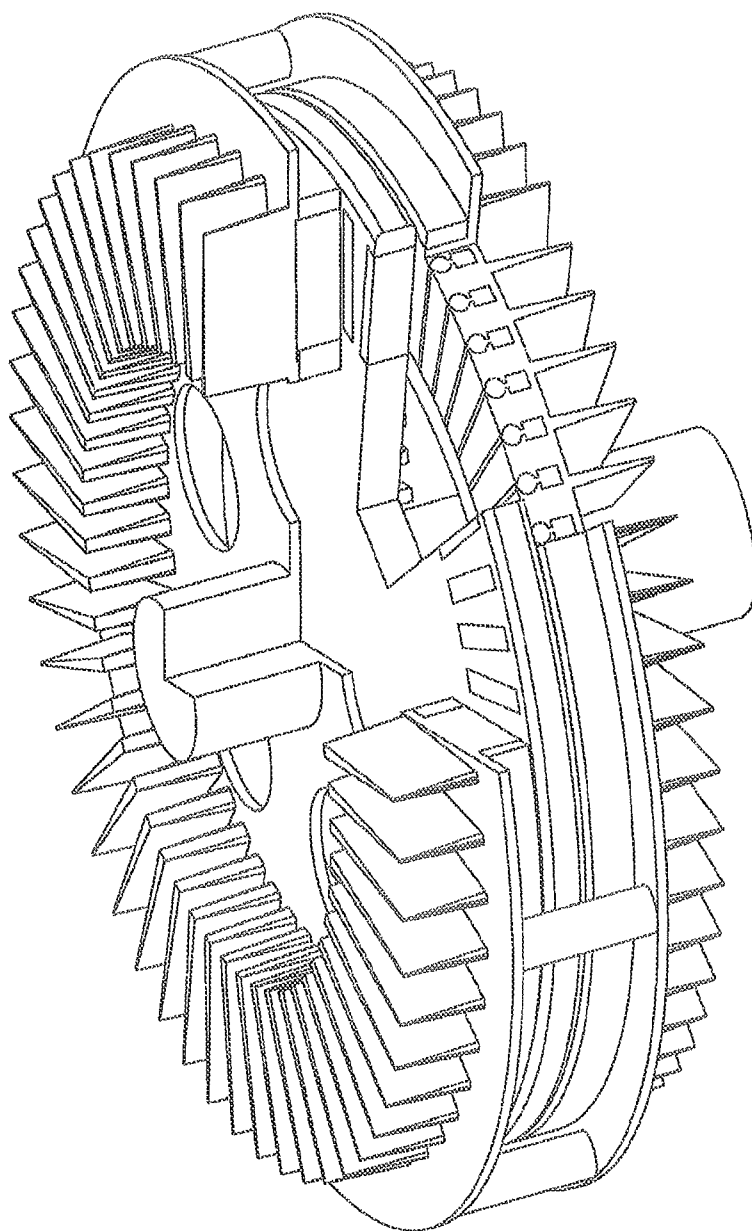


FIG. 1

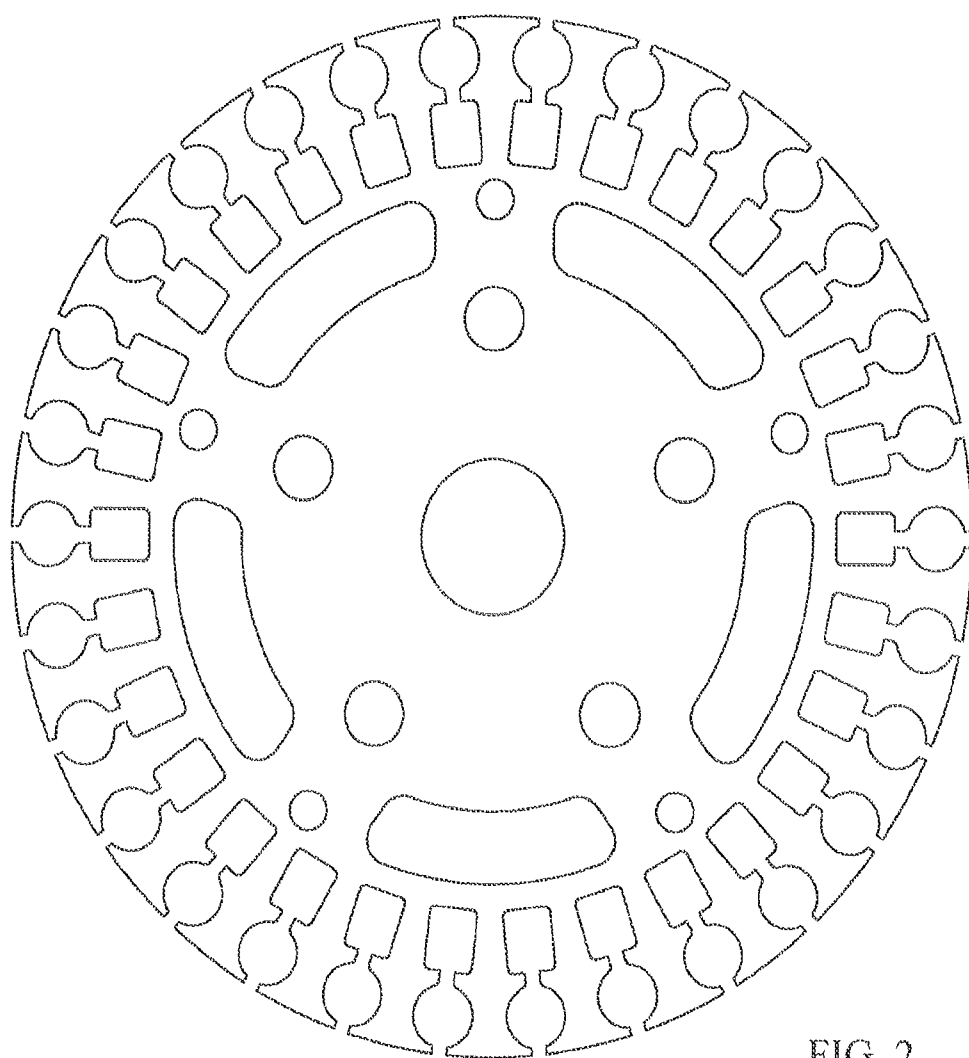


FIG. 2

3/9

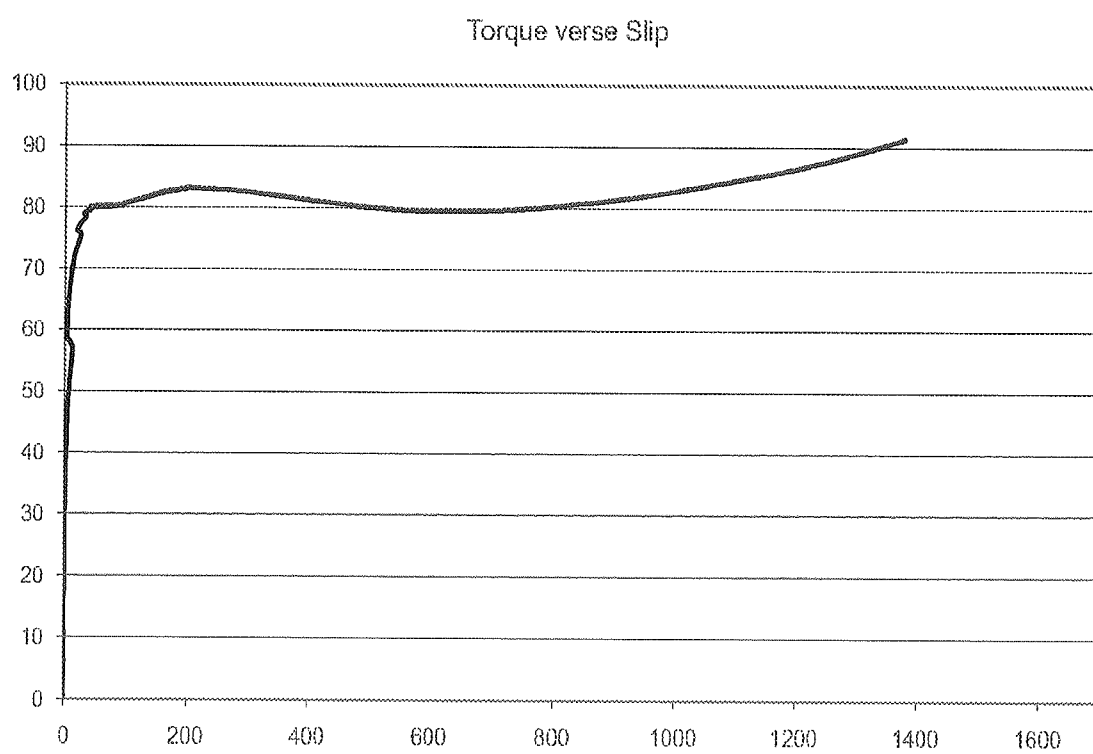


FIG. 3

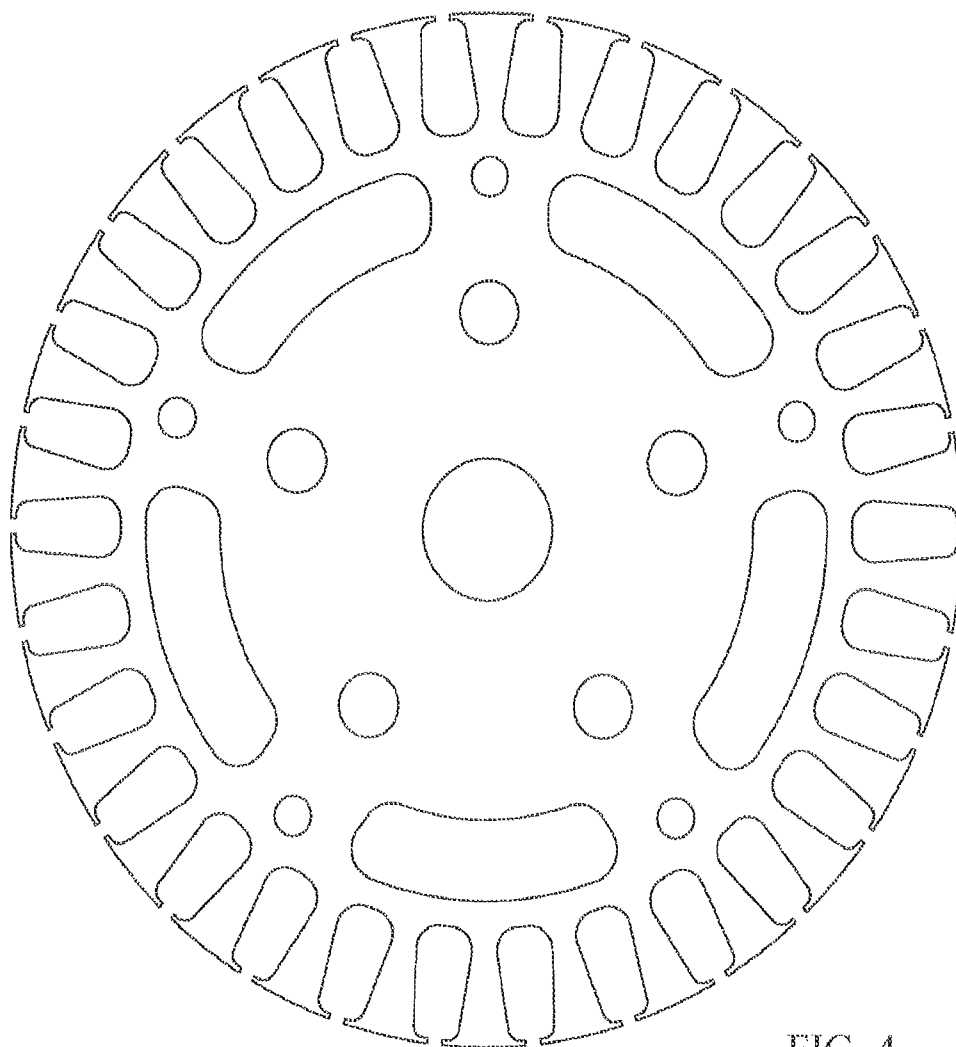


FIG. 4

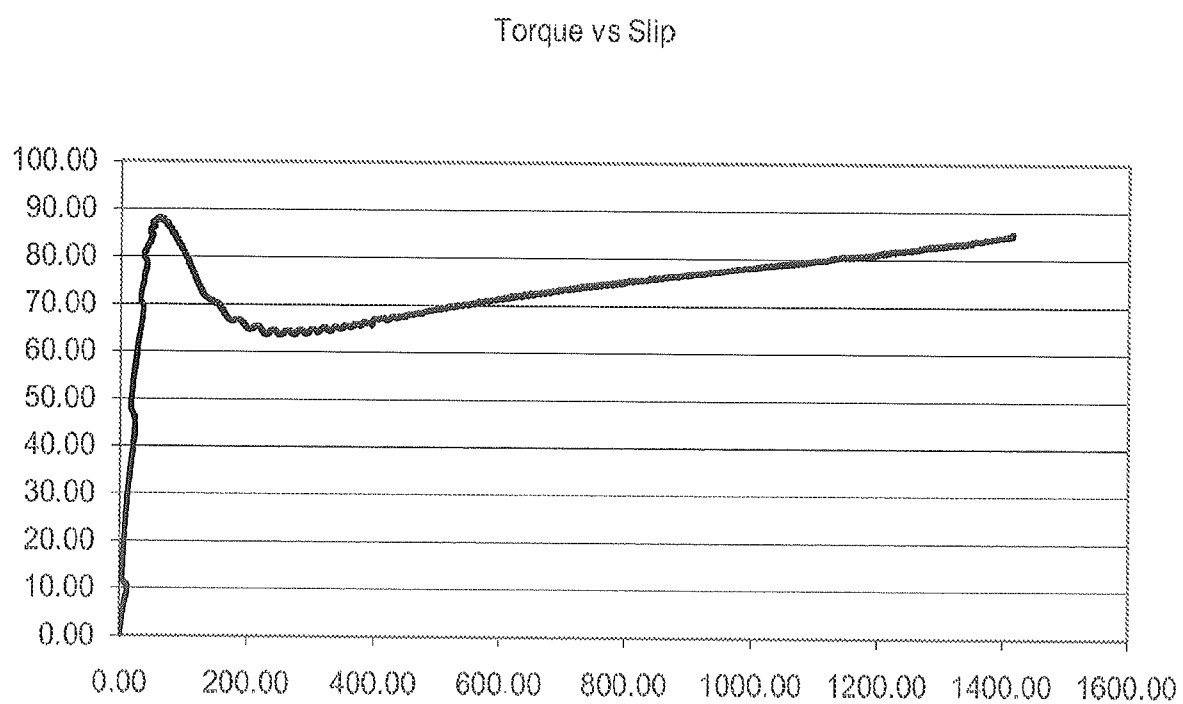


FIG. 5

“SOFT – START”

Actual Current (A) consumed vs. time to start 25 hp, belt driven blower.

A Flux Drive [™] coupling is compared to a rigid flexible coupling during this starting event.

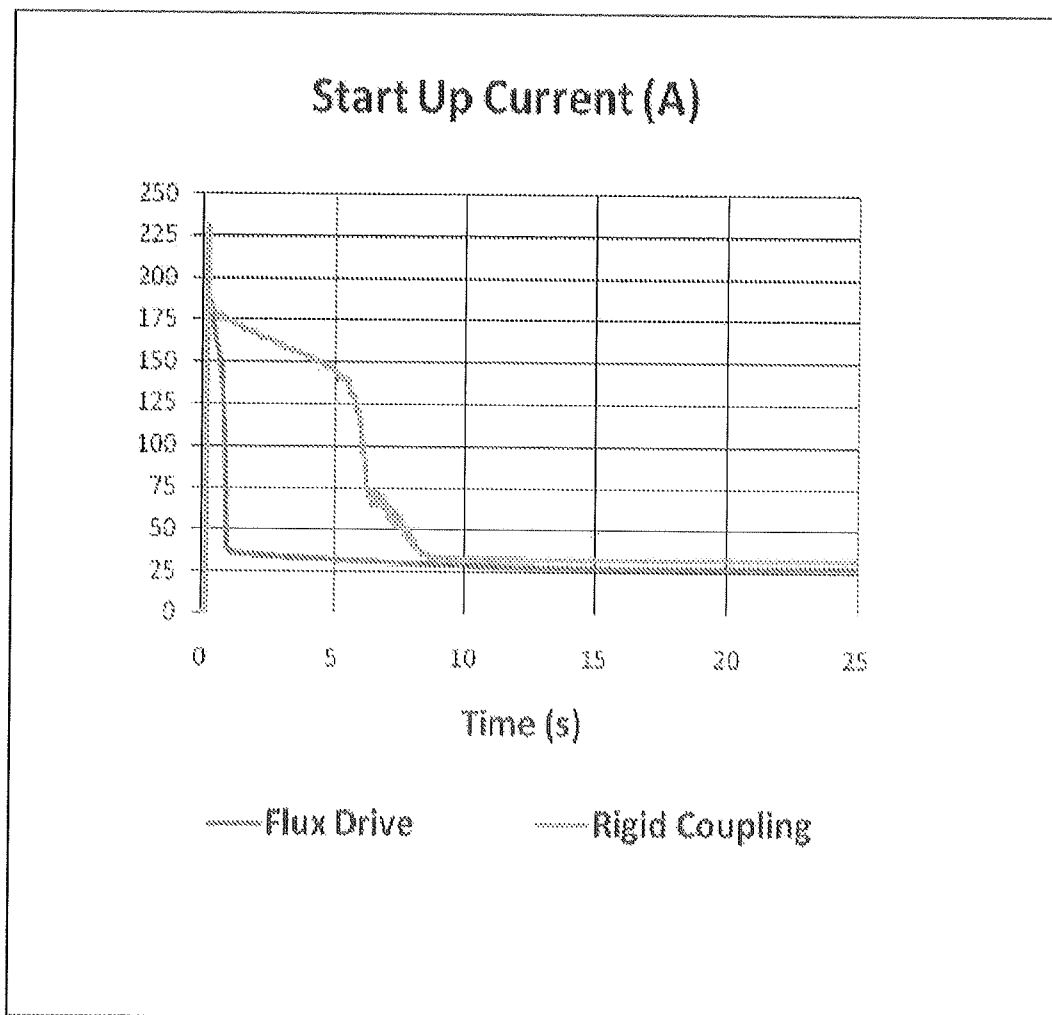


FIG. 6

"SOFT – START"

Actual power (kW) consumed vs. time to start 25 hp, belt driven blower.

A Flux Drive [™] coupling is compared to a rigid flexible coupling during this starting event.

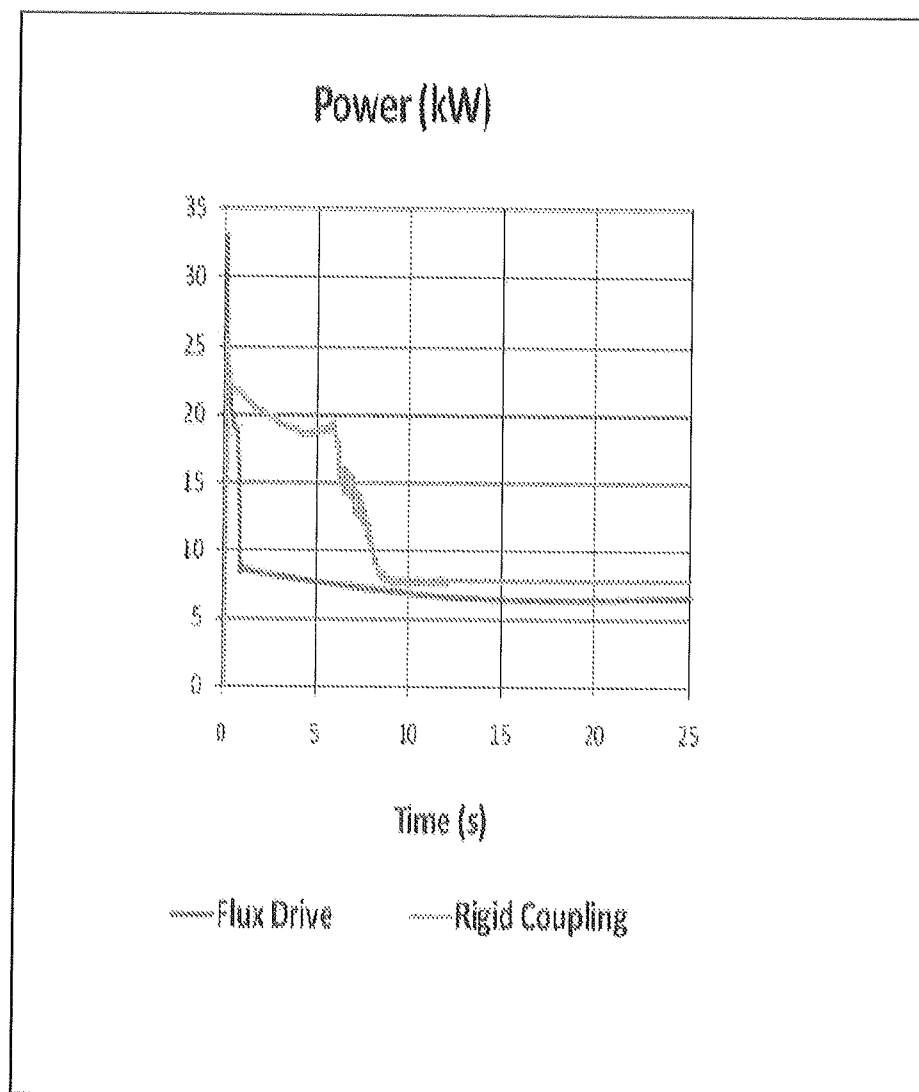


FIG. 7

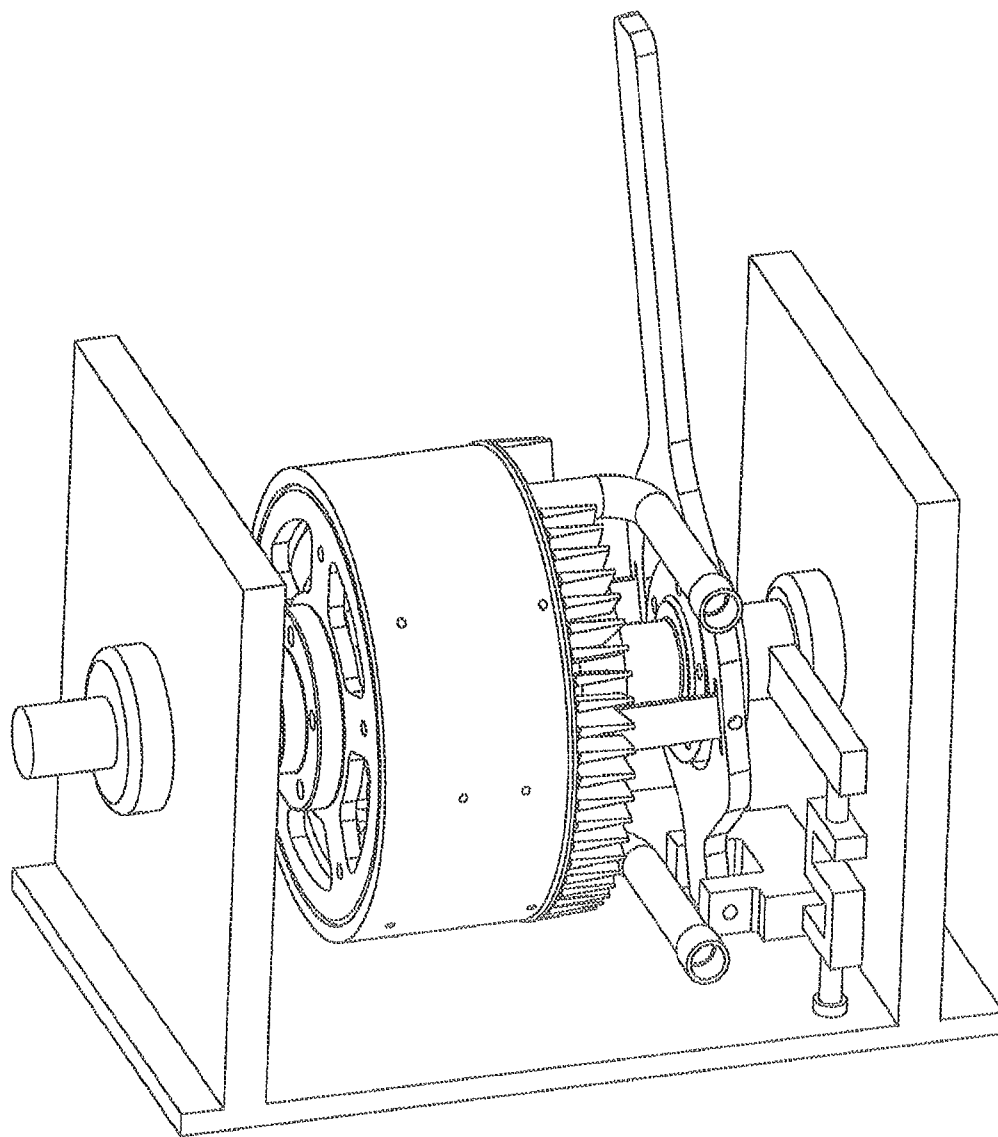


FIG. 8

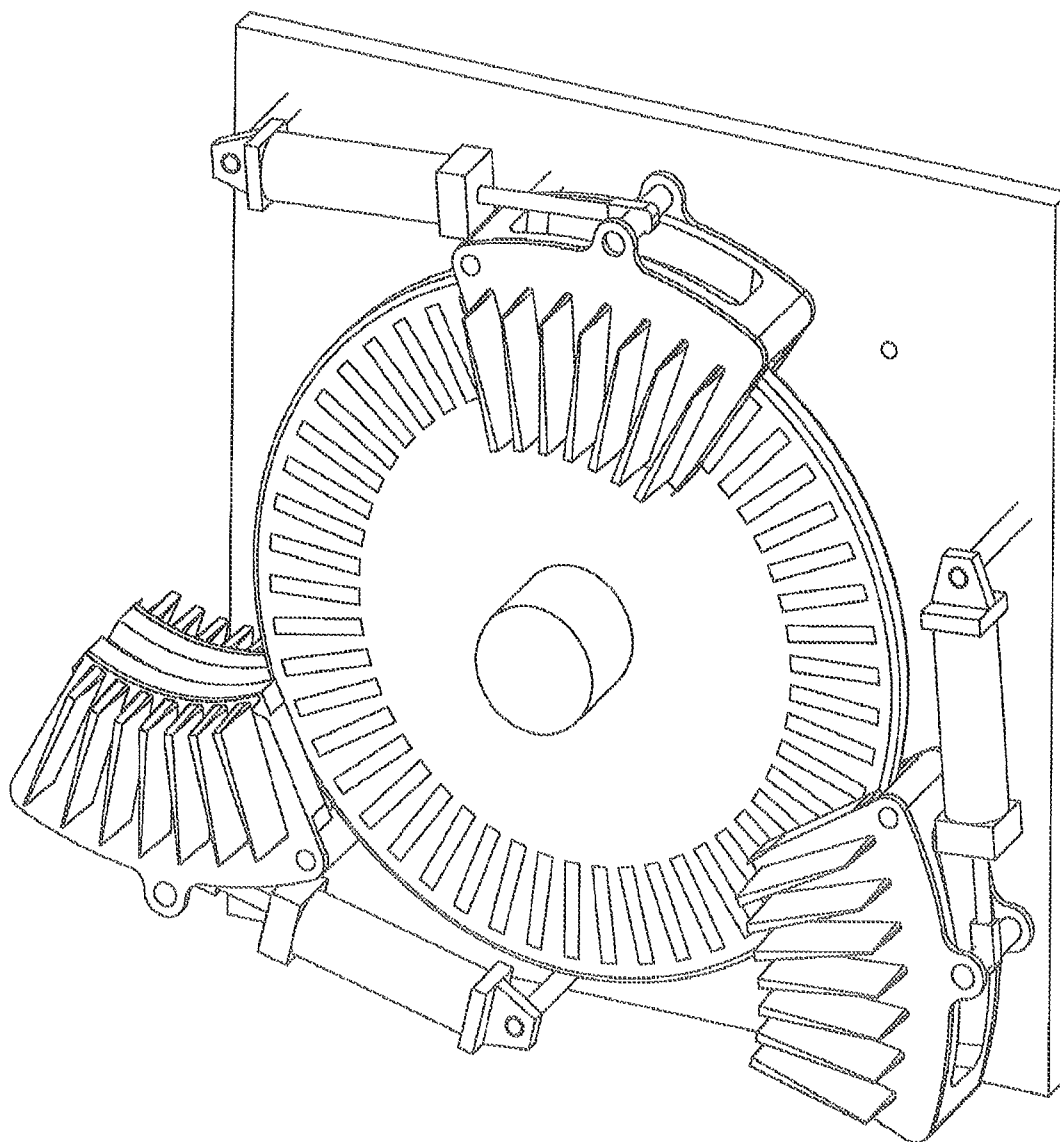


FIG. 9