


1/11

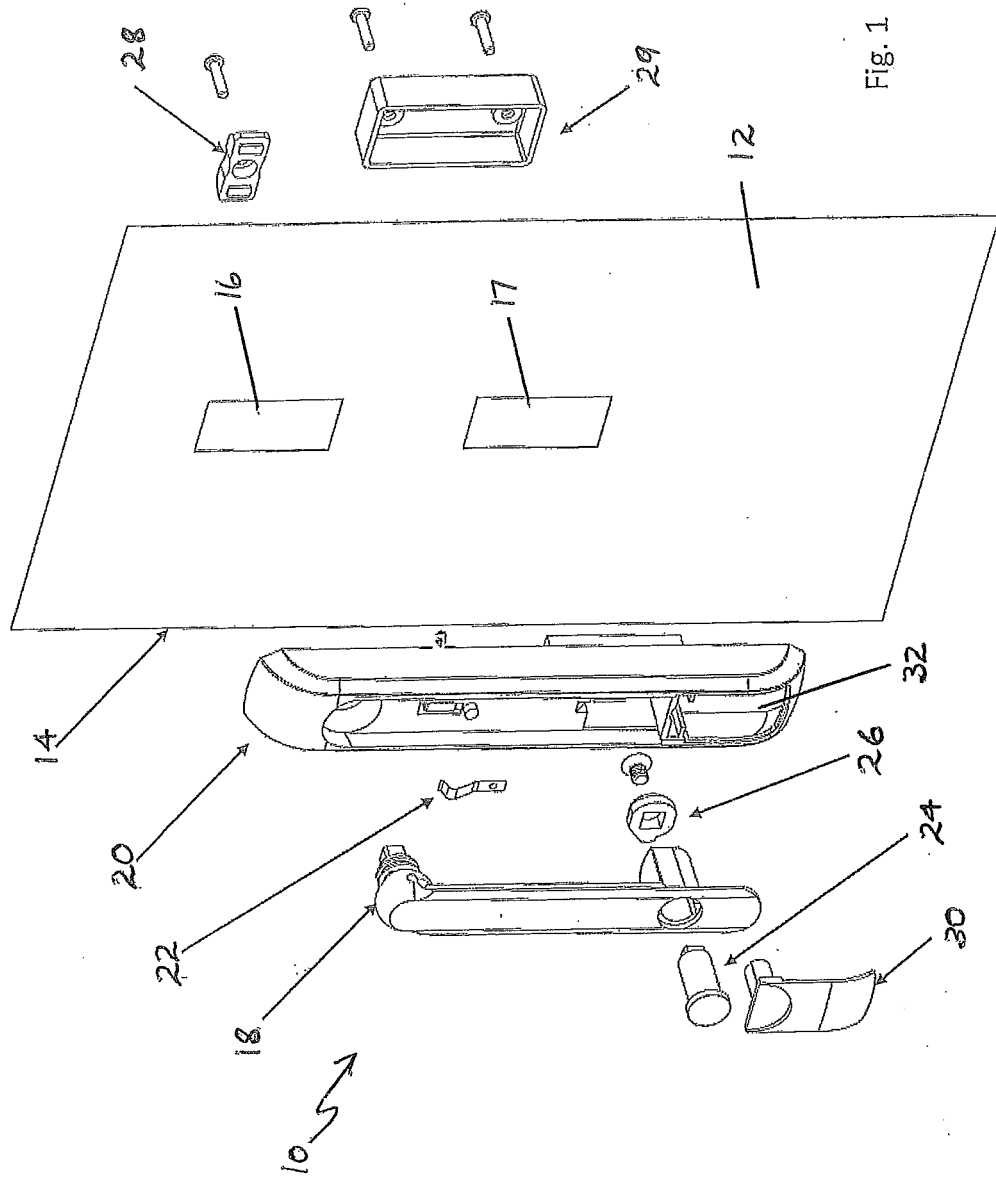

2/11

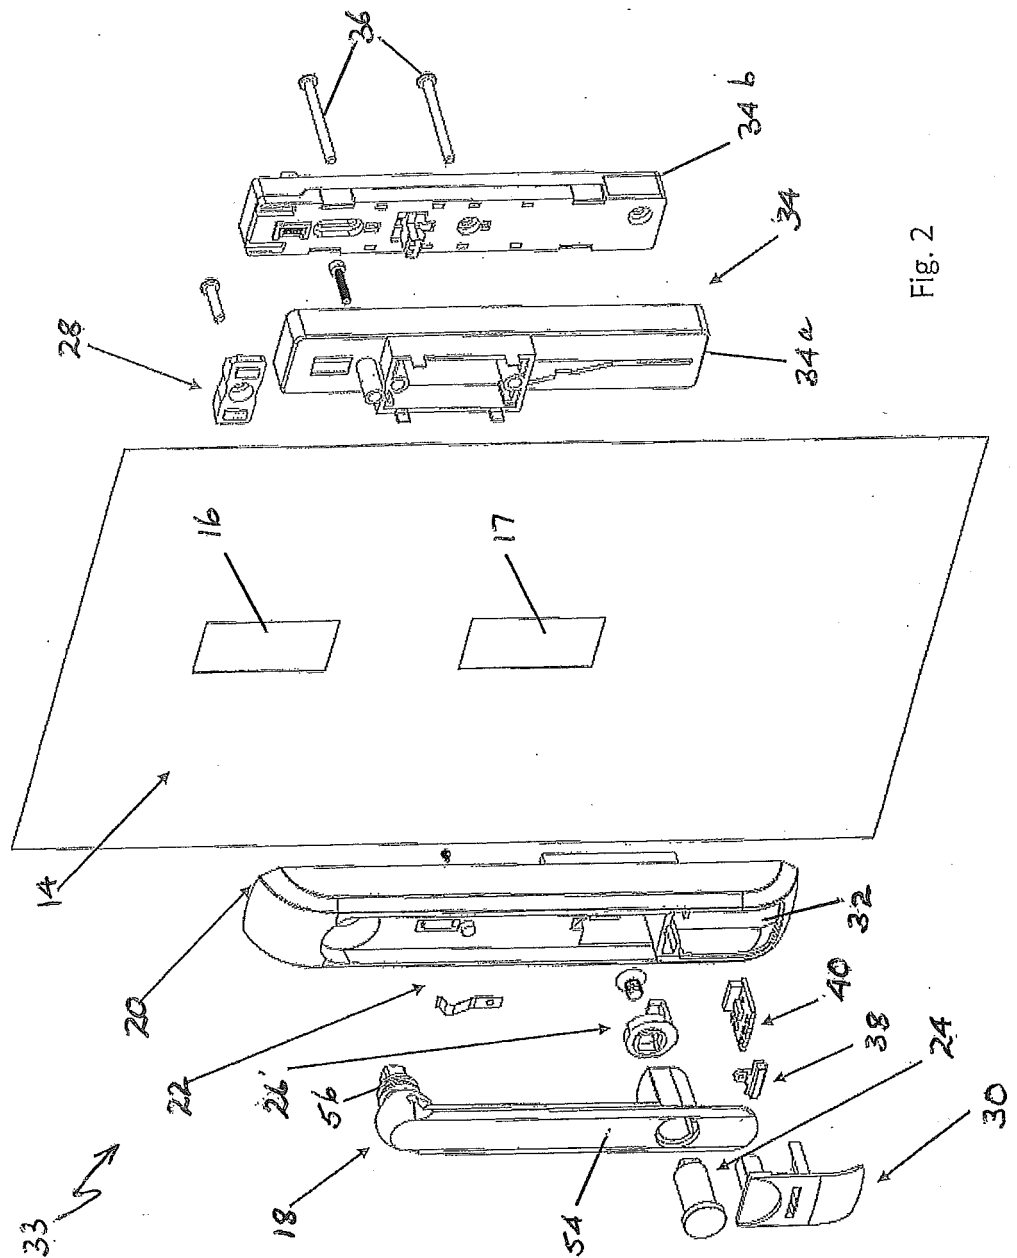


Fig. 2

3/11

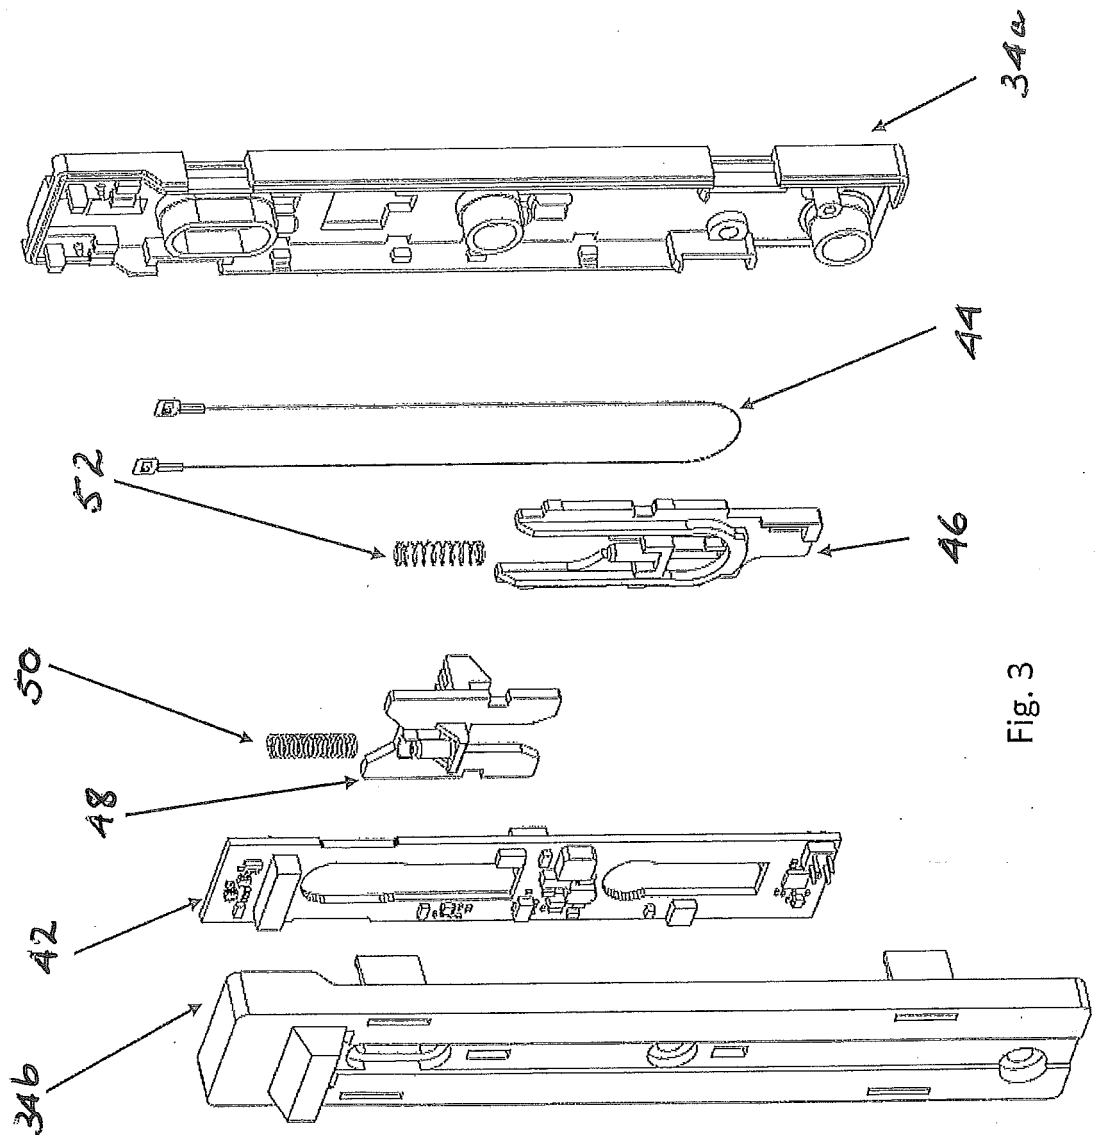


Fig. 3

4/11

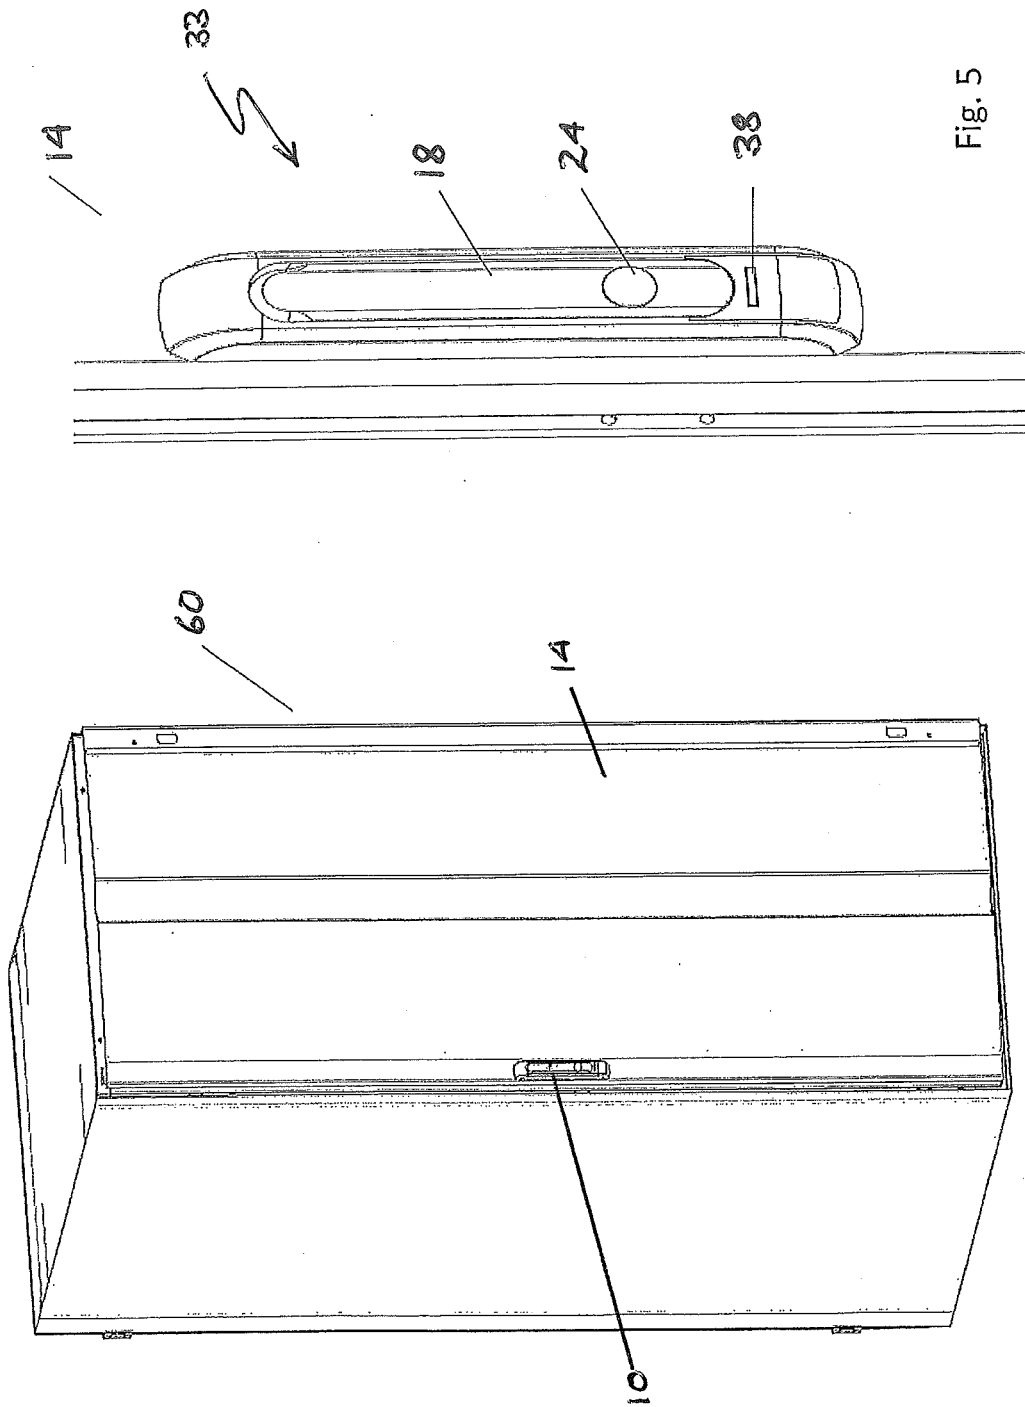


Fig. 4

Fig. 5

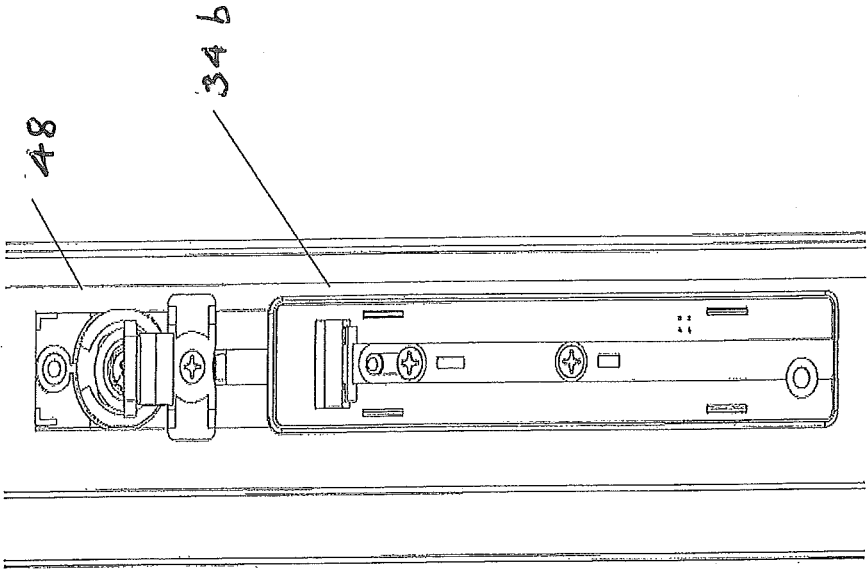


Fig. 7

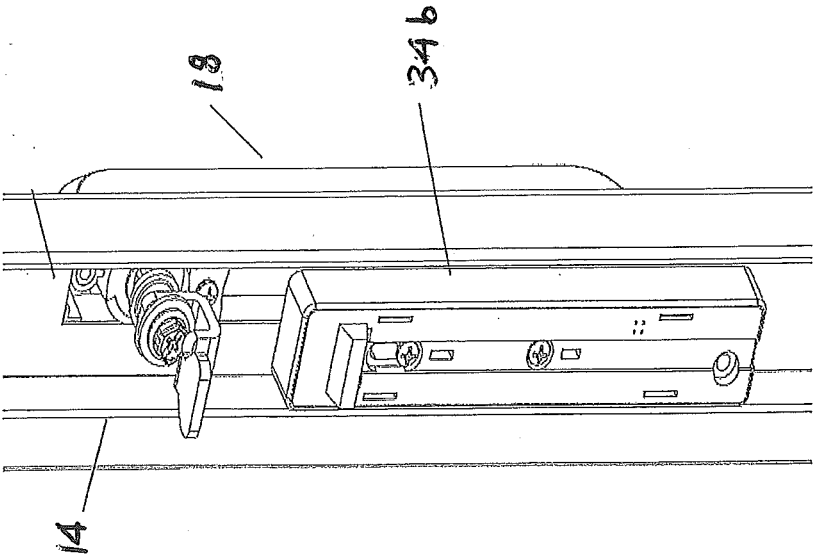


Fig. 6

6/11

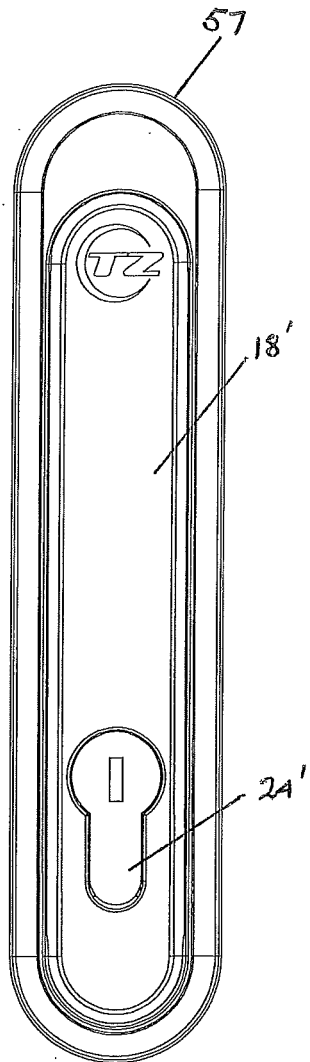


Fig. 8

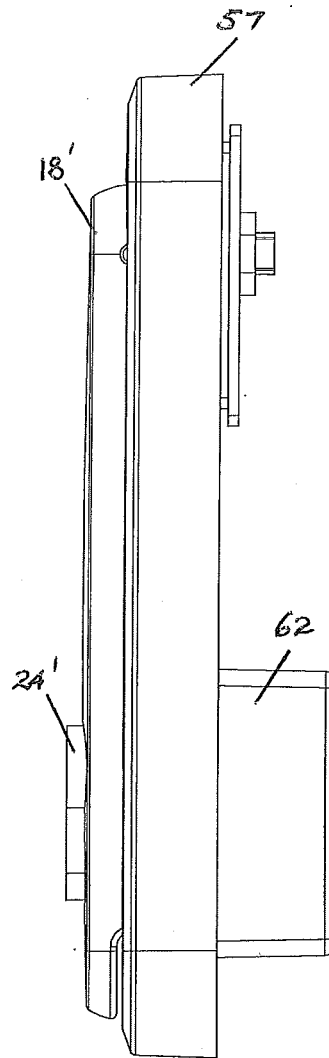


Fig. 9

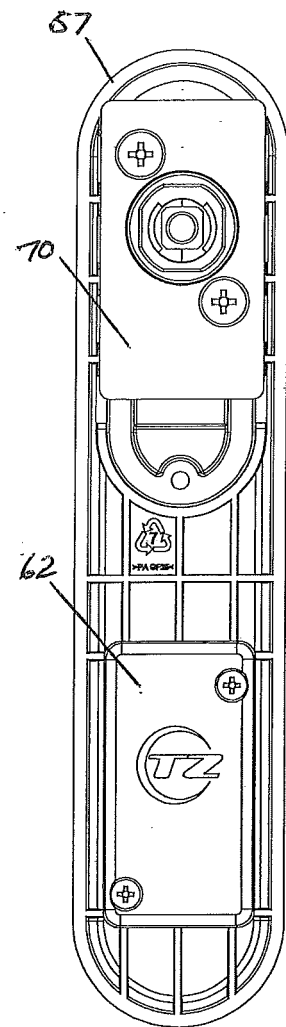


Fig. 10

7/11

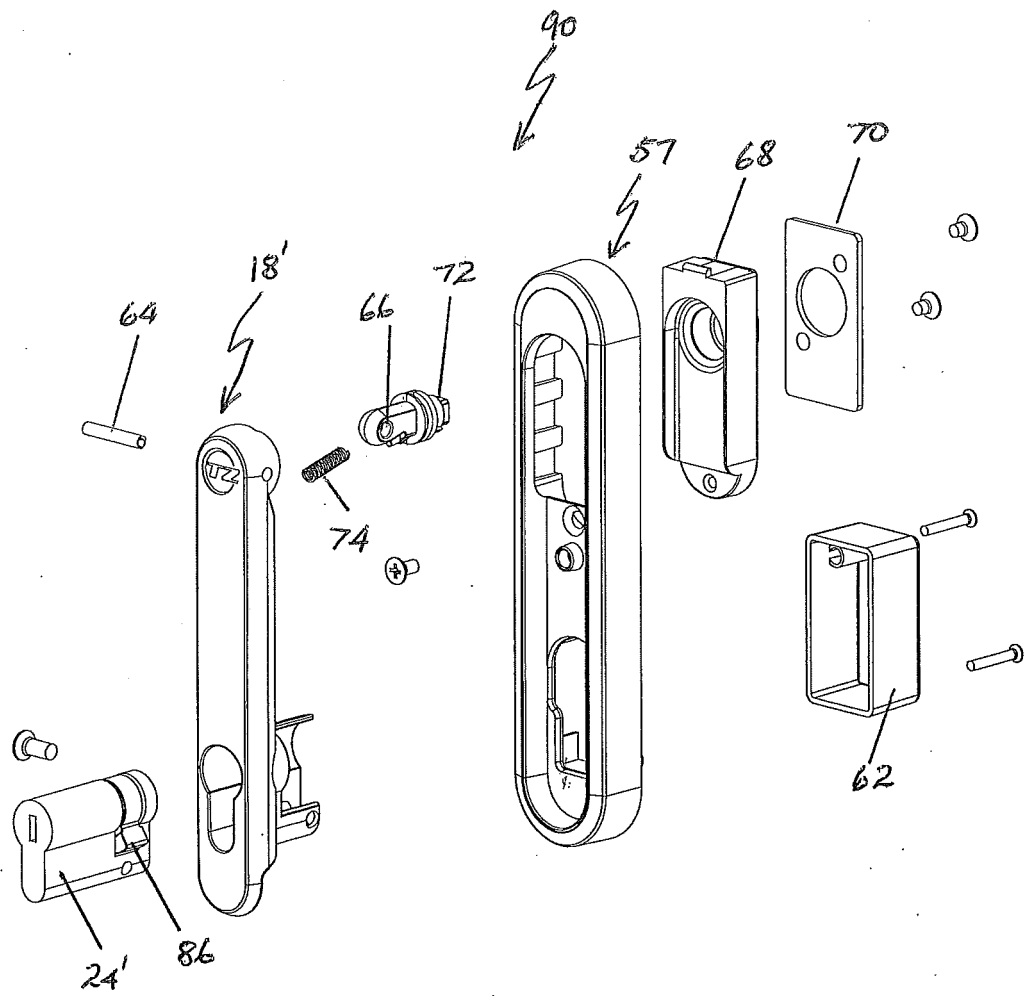


Fig. 11

8/11

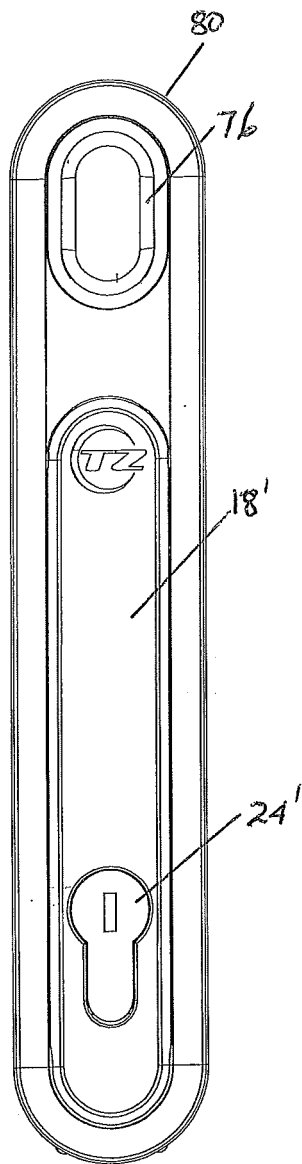


Fig. 12

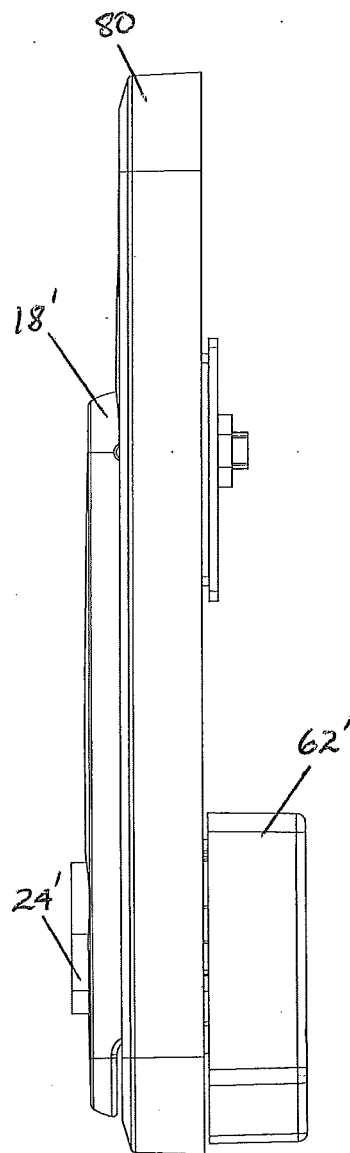


Fig. 13

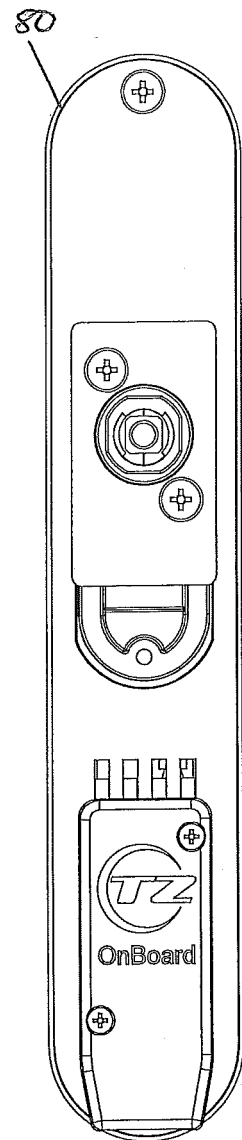


Fig. 14

9/11


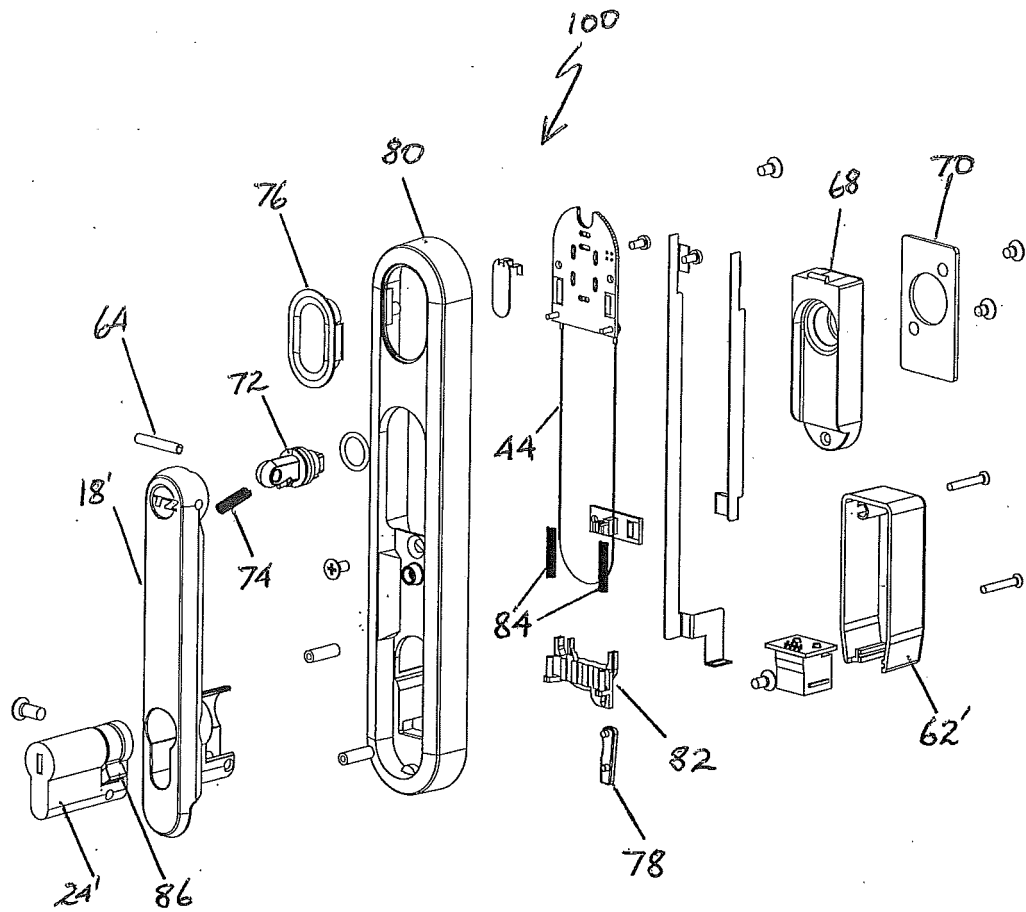



Fig. 15

10/11

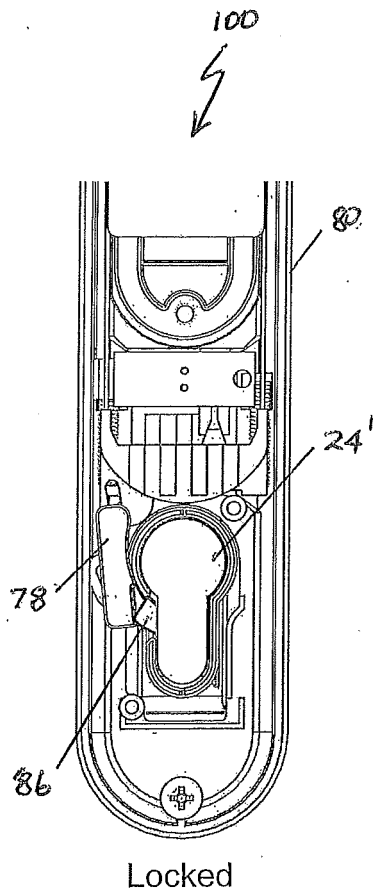


Locked

Fig. 16

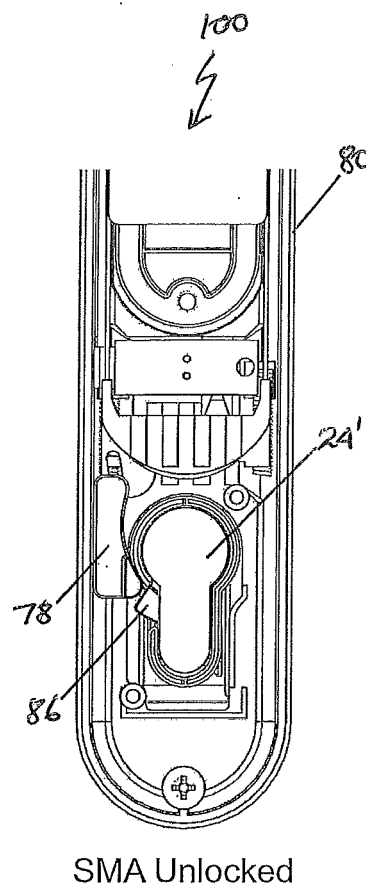

SMA Unlocked


Fig. 17

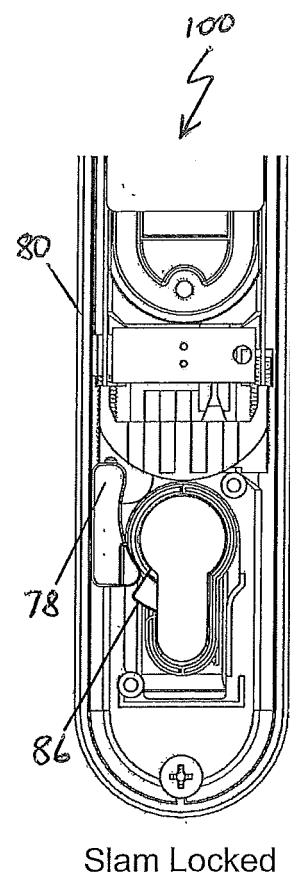


Slam Locked

Fig. 18


11/11

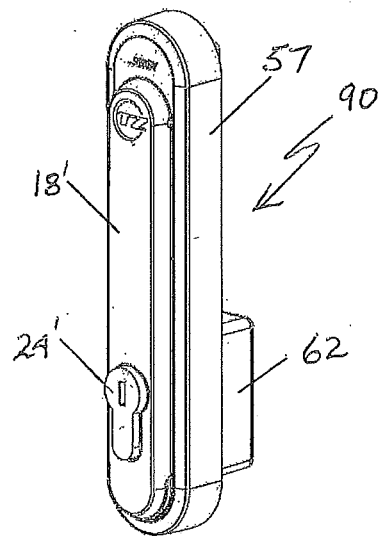


Step 1. Basic Handle

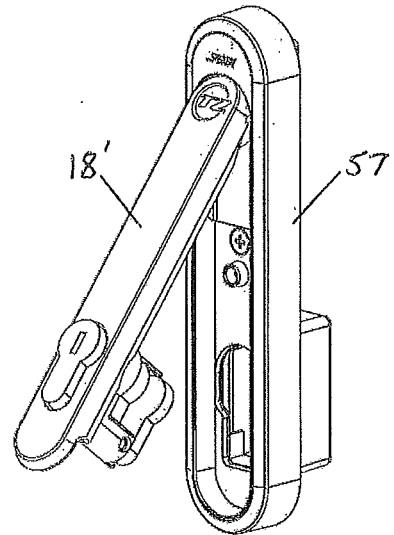

Step 2. Handle Raised

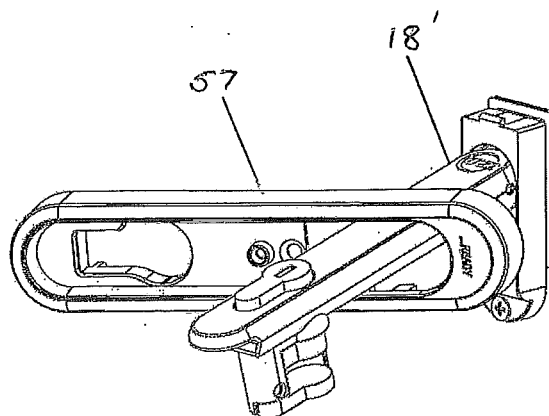

Step 3. Cover Removed

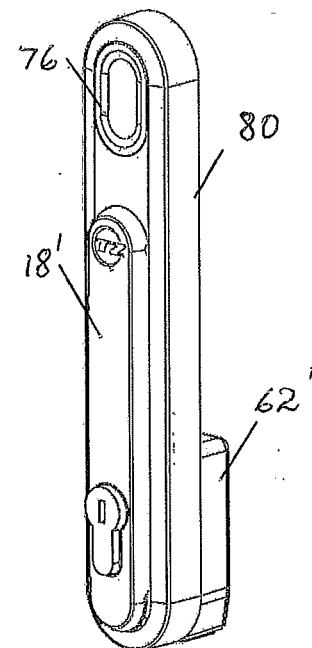

Step 4. Electronic Lock

Fig. 19