

1/20

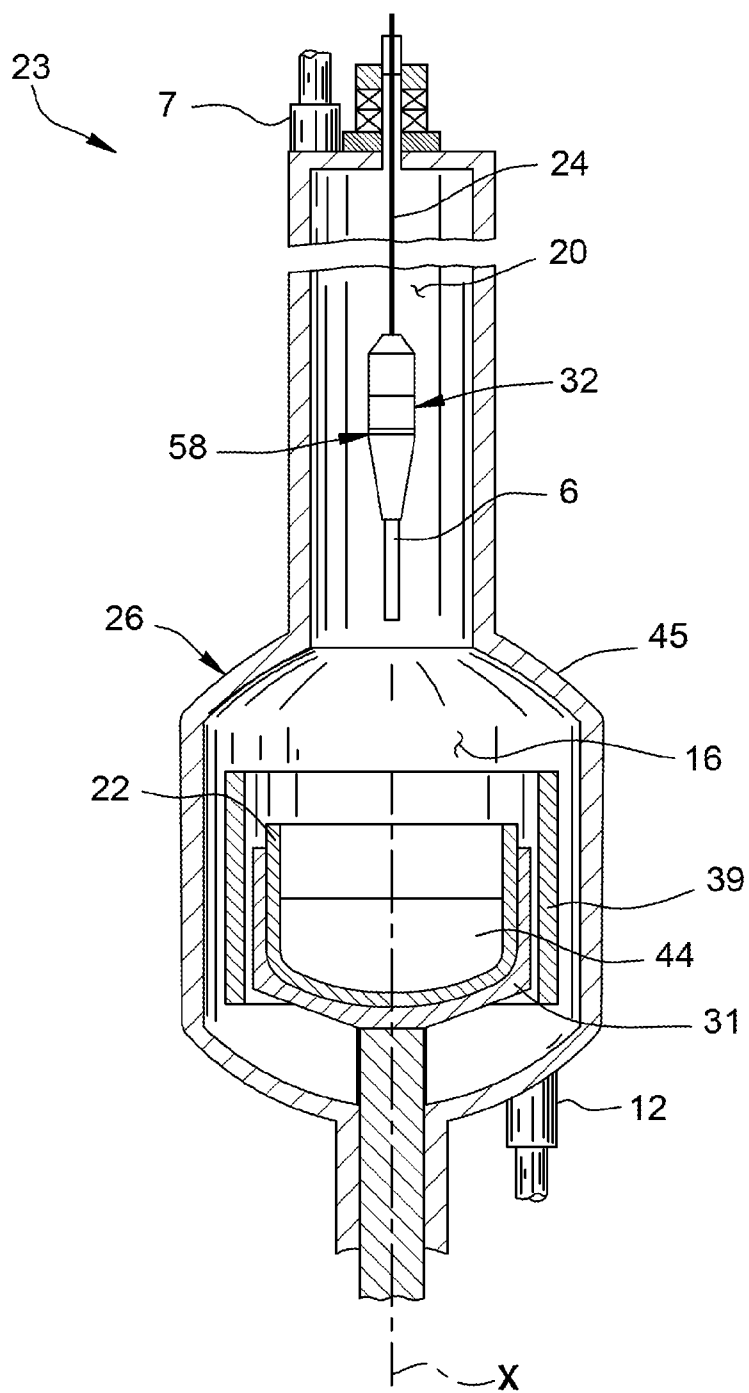


FIG. 1

2/20

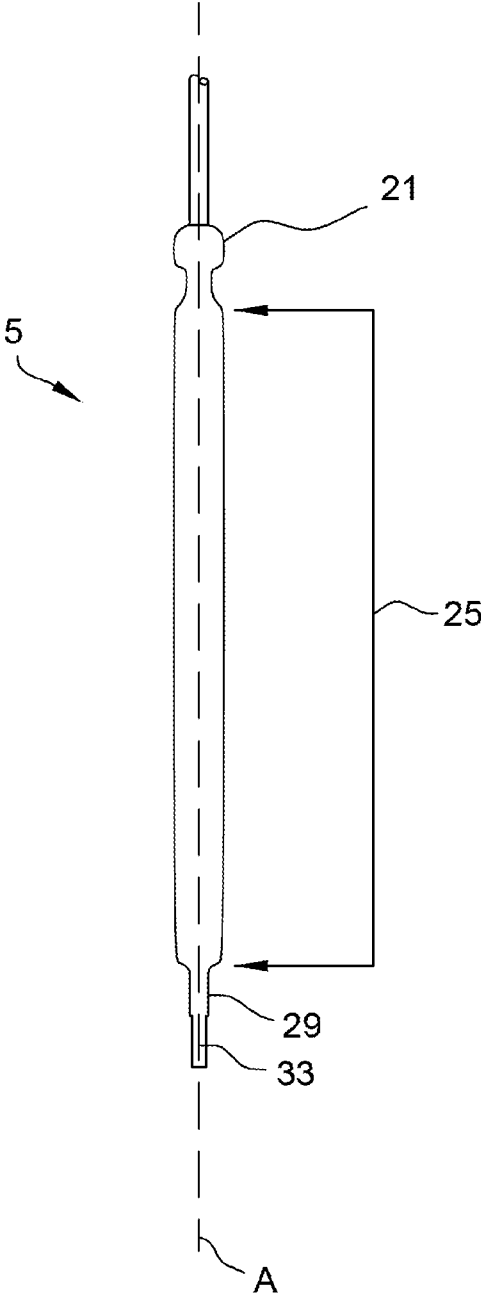


FIG. 2

3/20

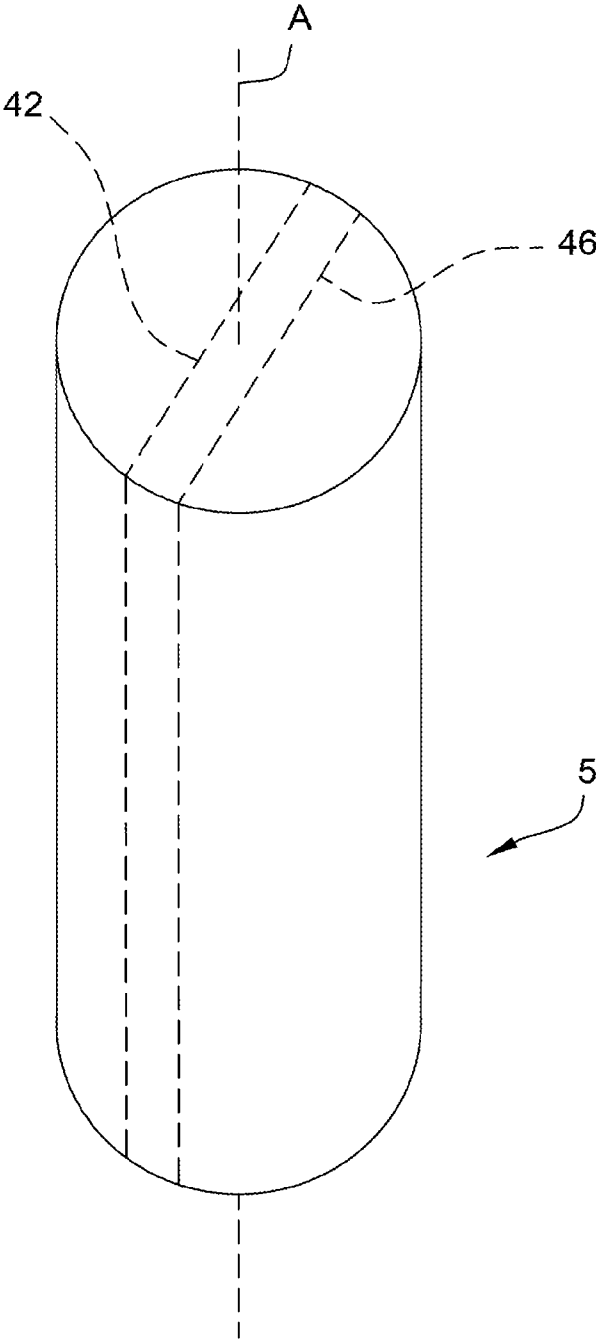


FIG. 3

4/20

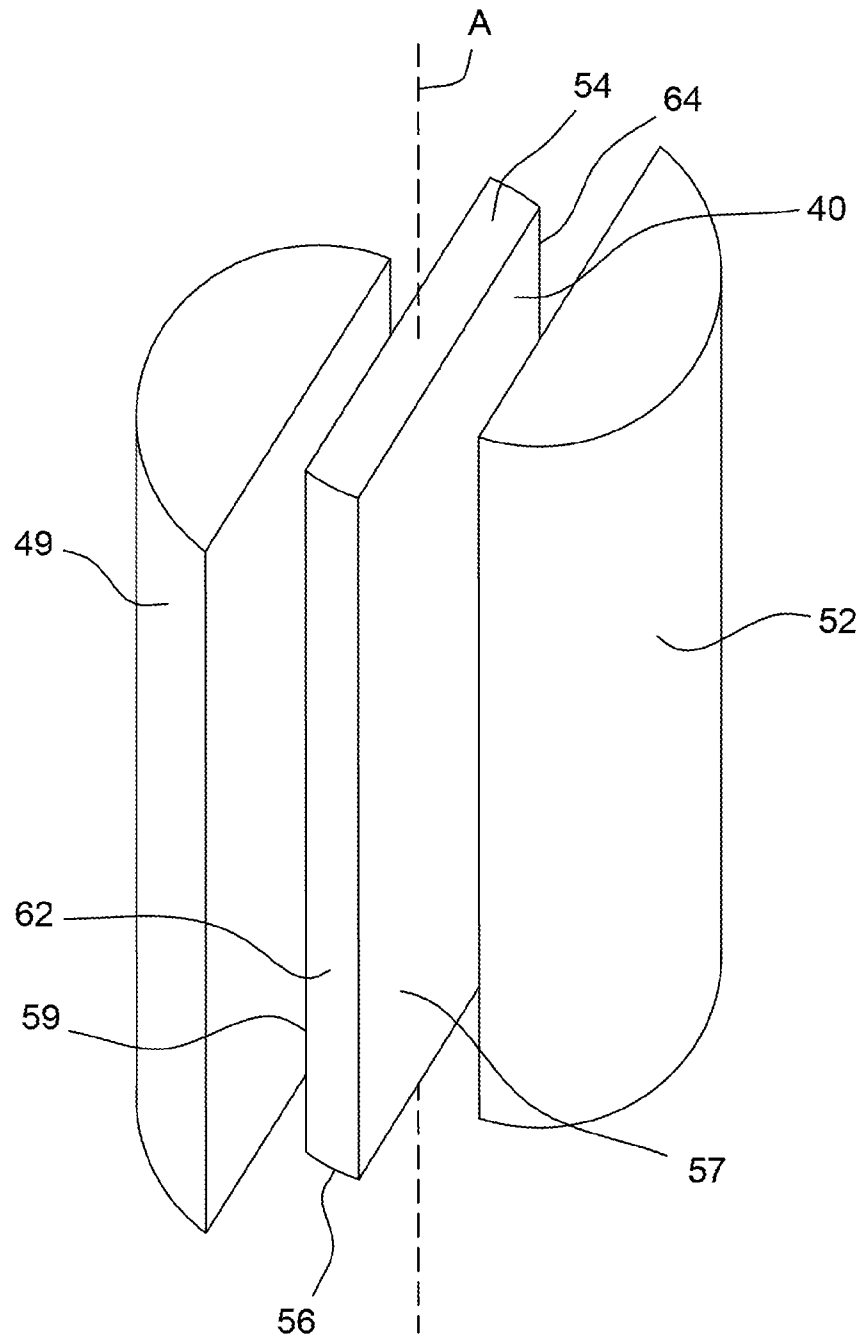


FIG. 4

5/20

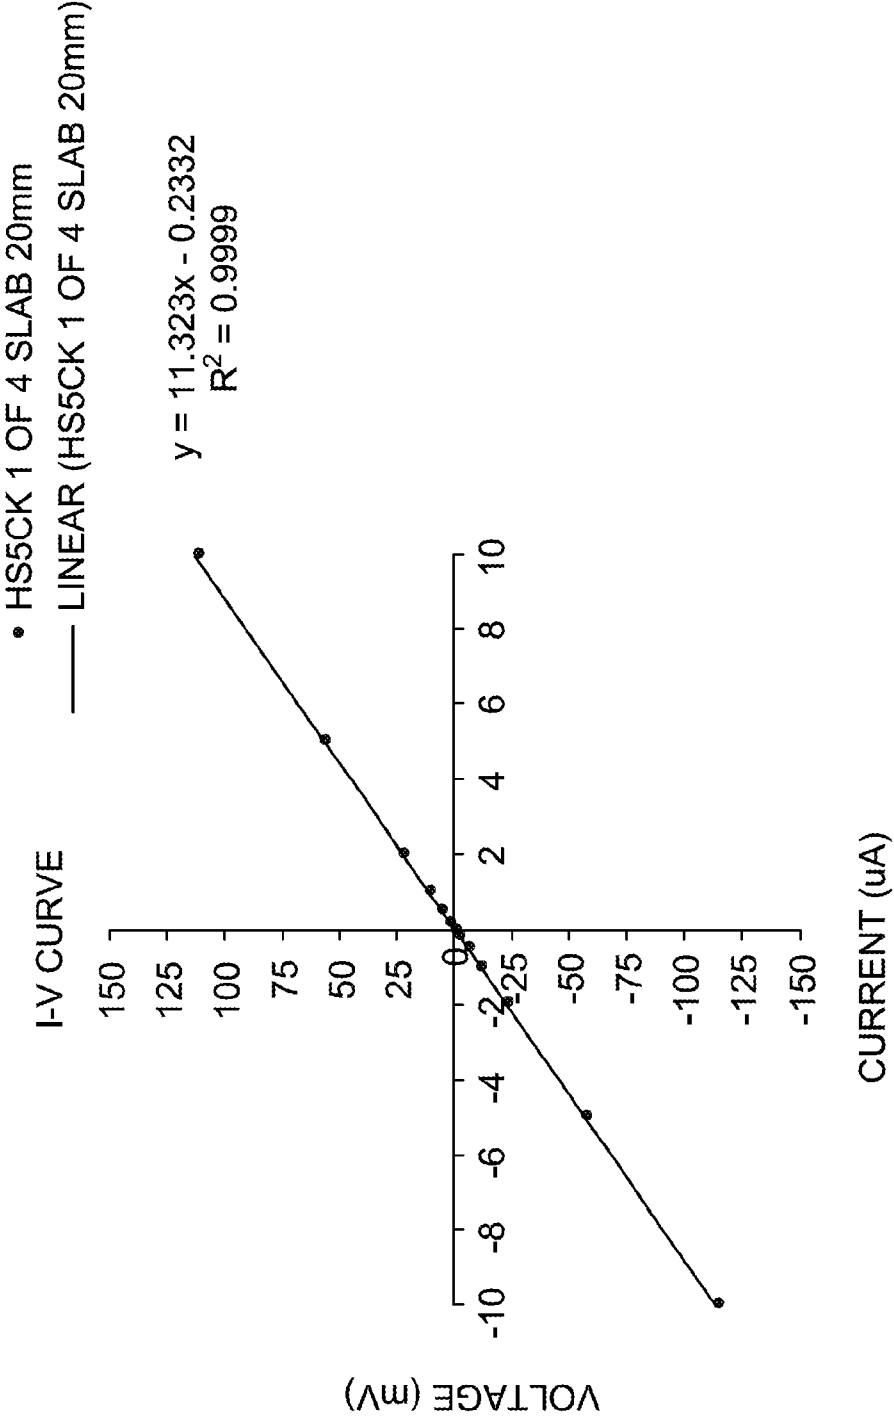


FIG. 5

6/20

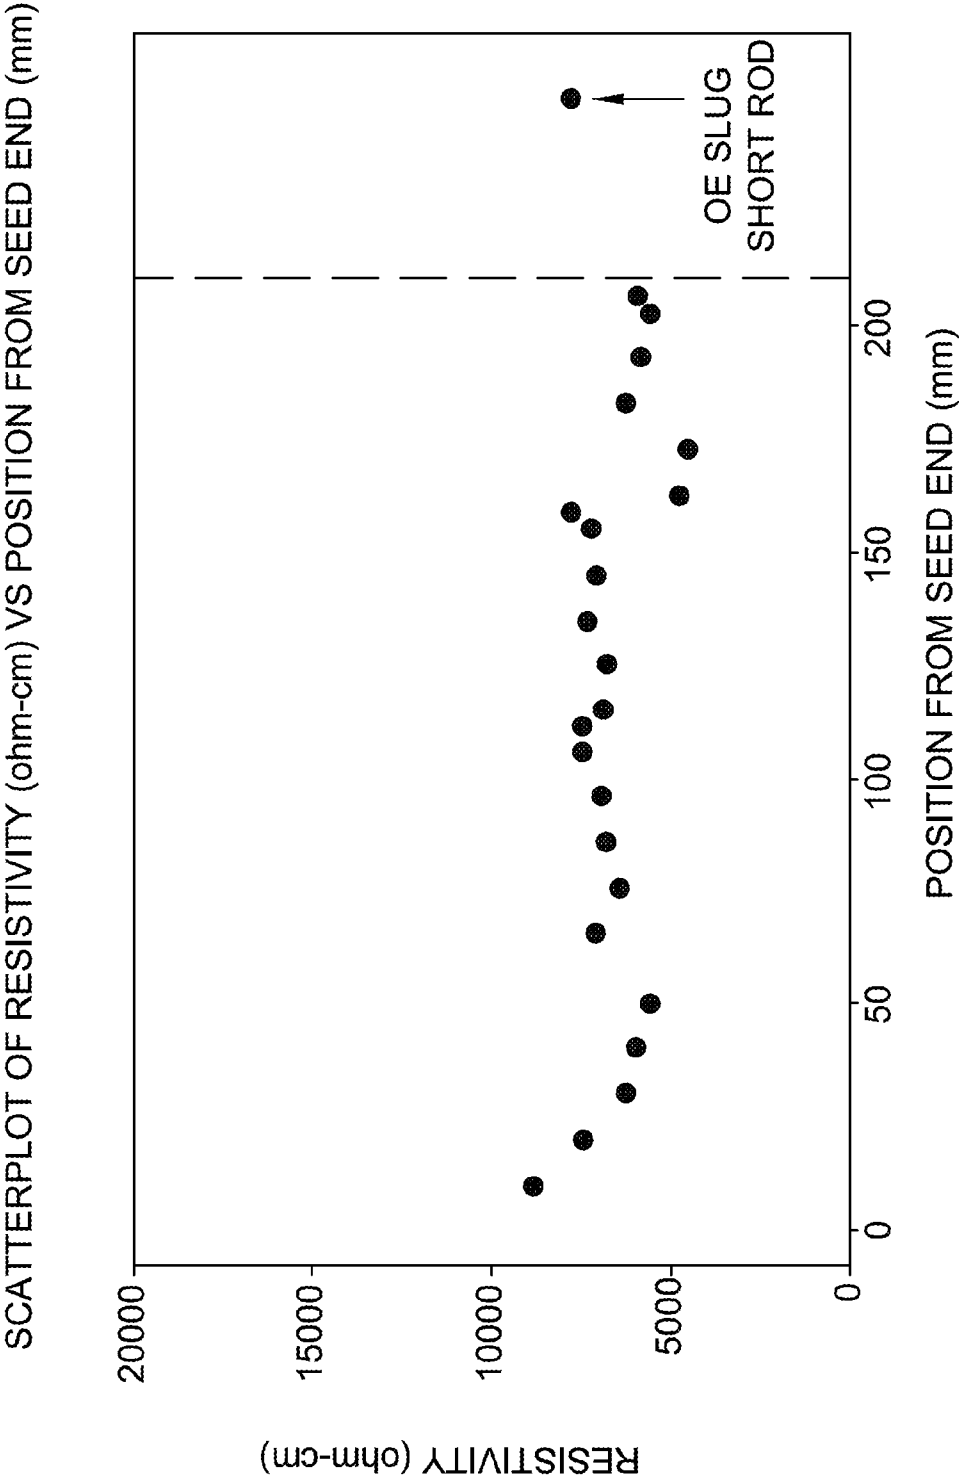


FIG. 6

2PP SAMPLE ROD (ground flat) vs. 4PP SHORT INGOT AND PRODUCT INGOT

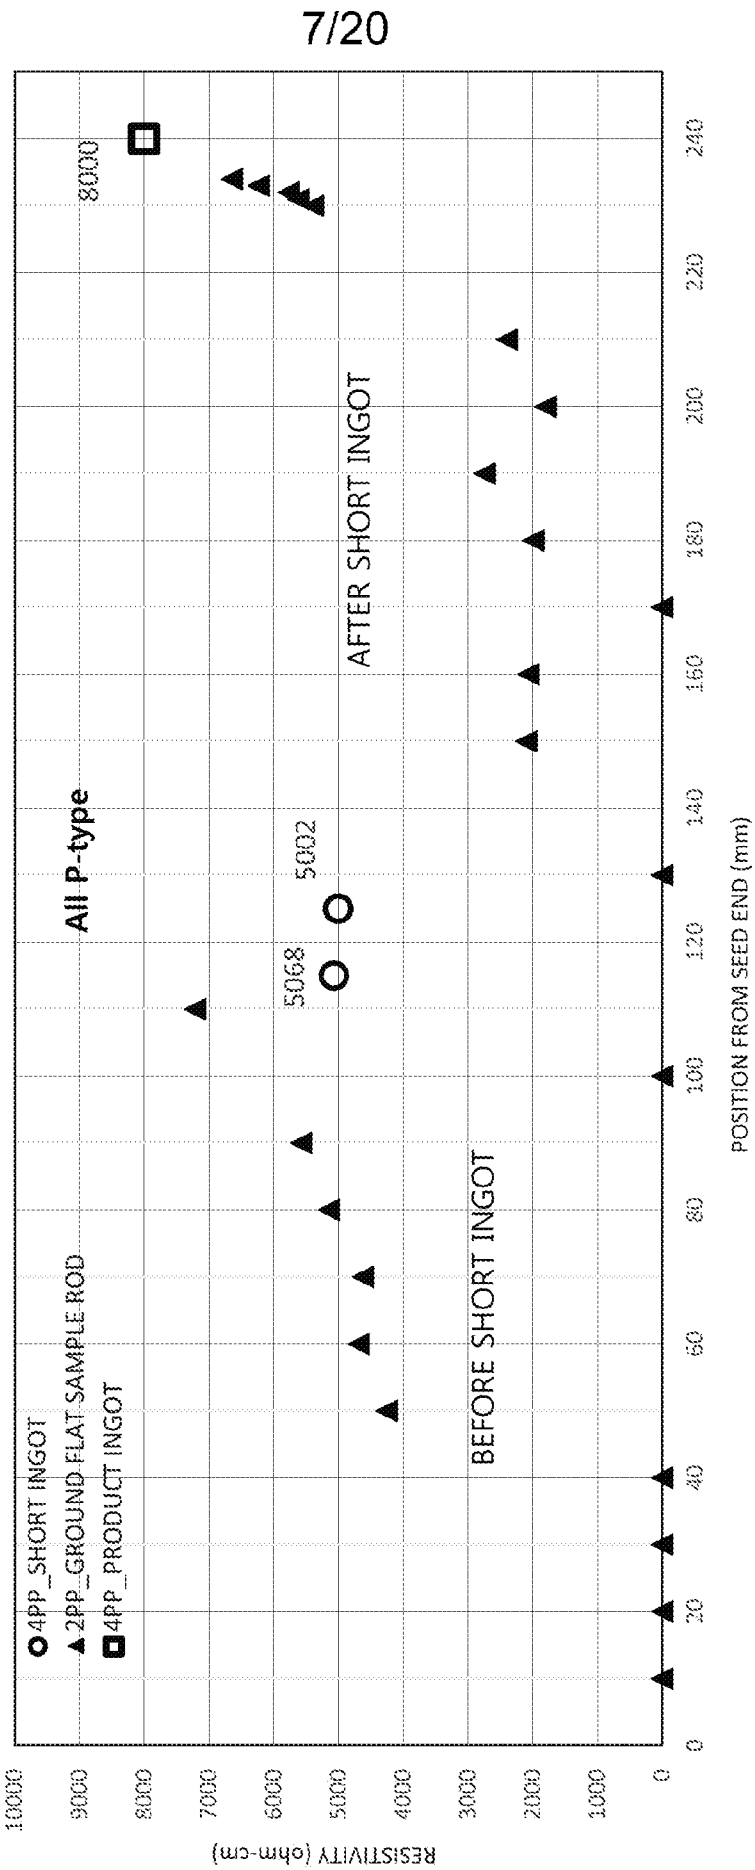


FIG. 7

8/20

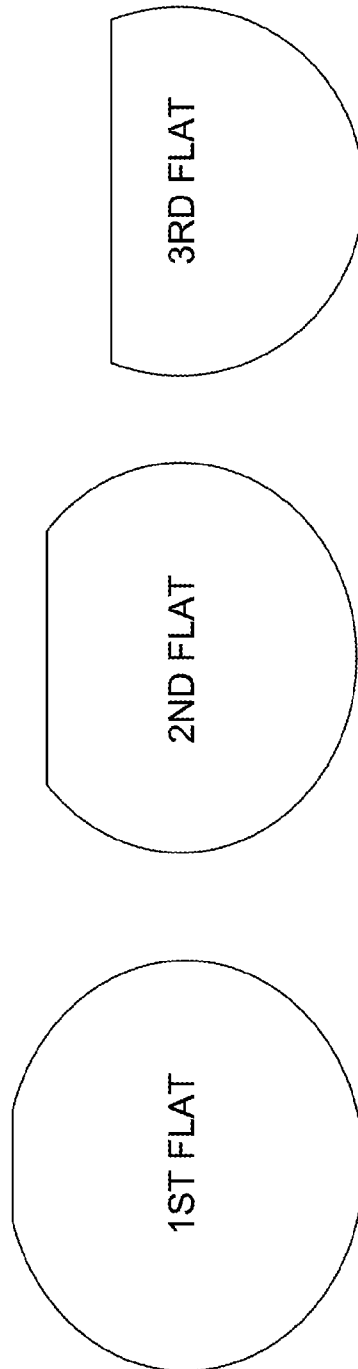


FIG. 8A

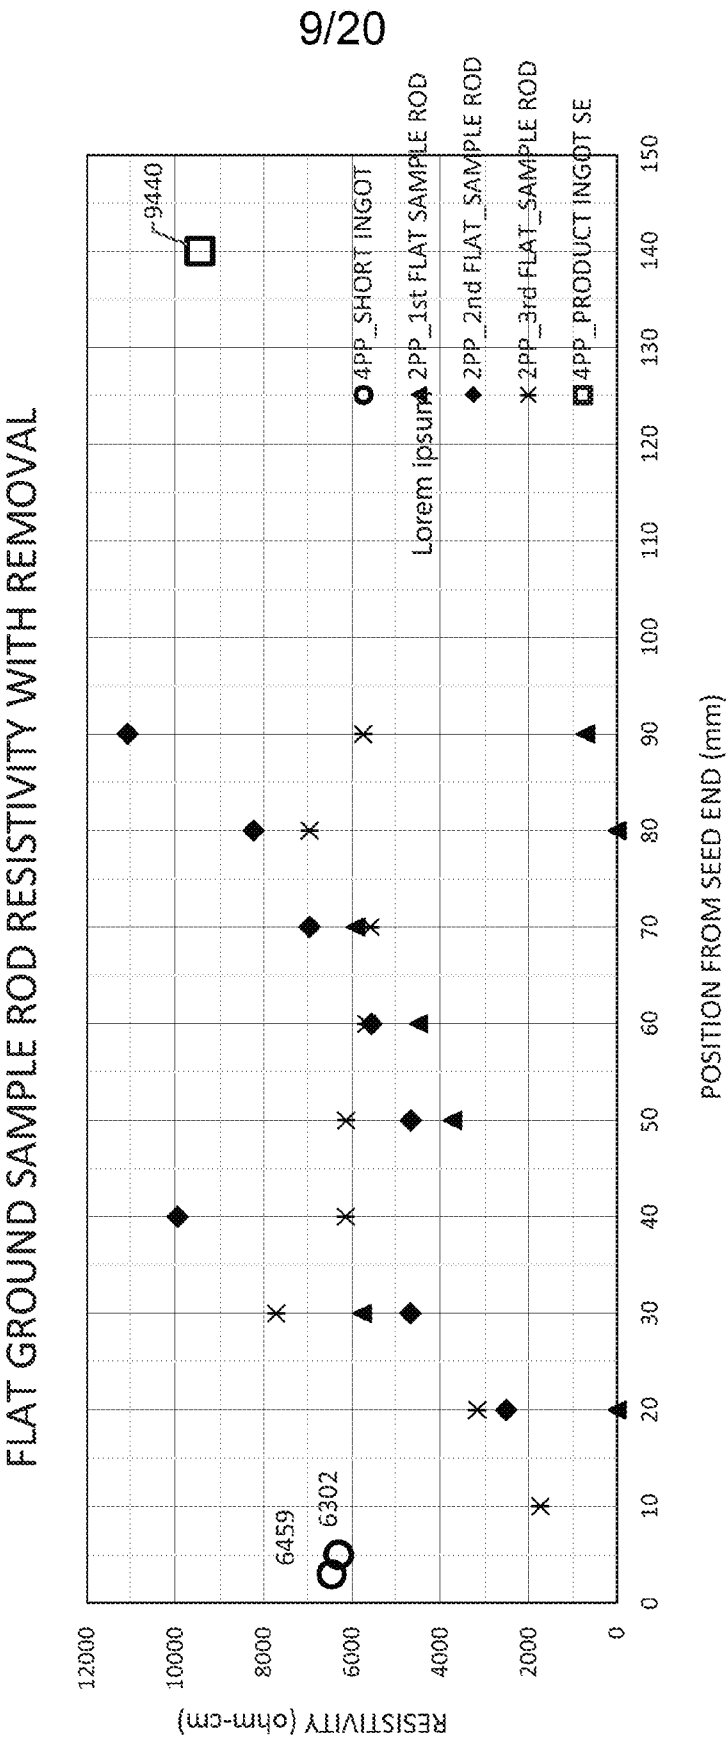


FIG. 8B

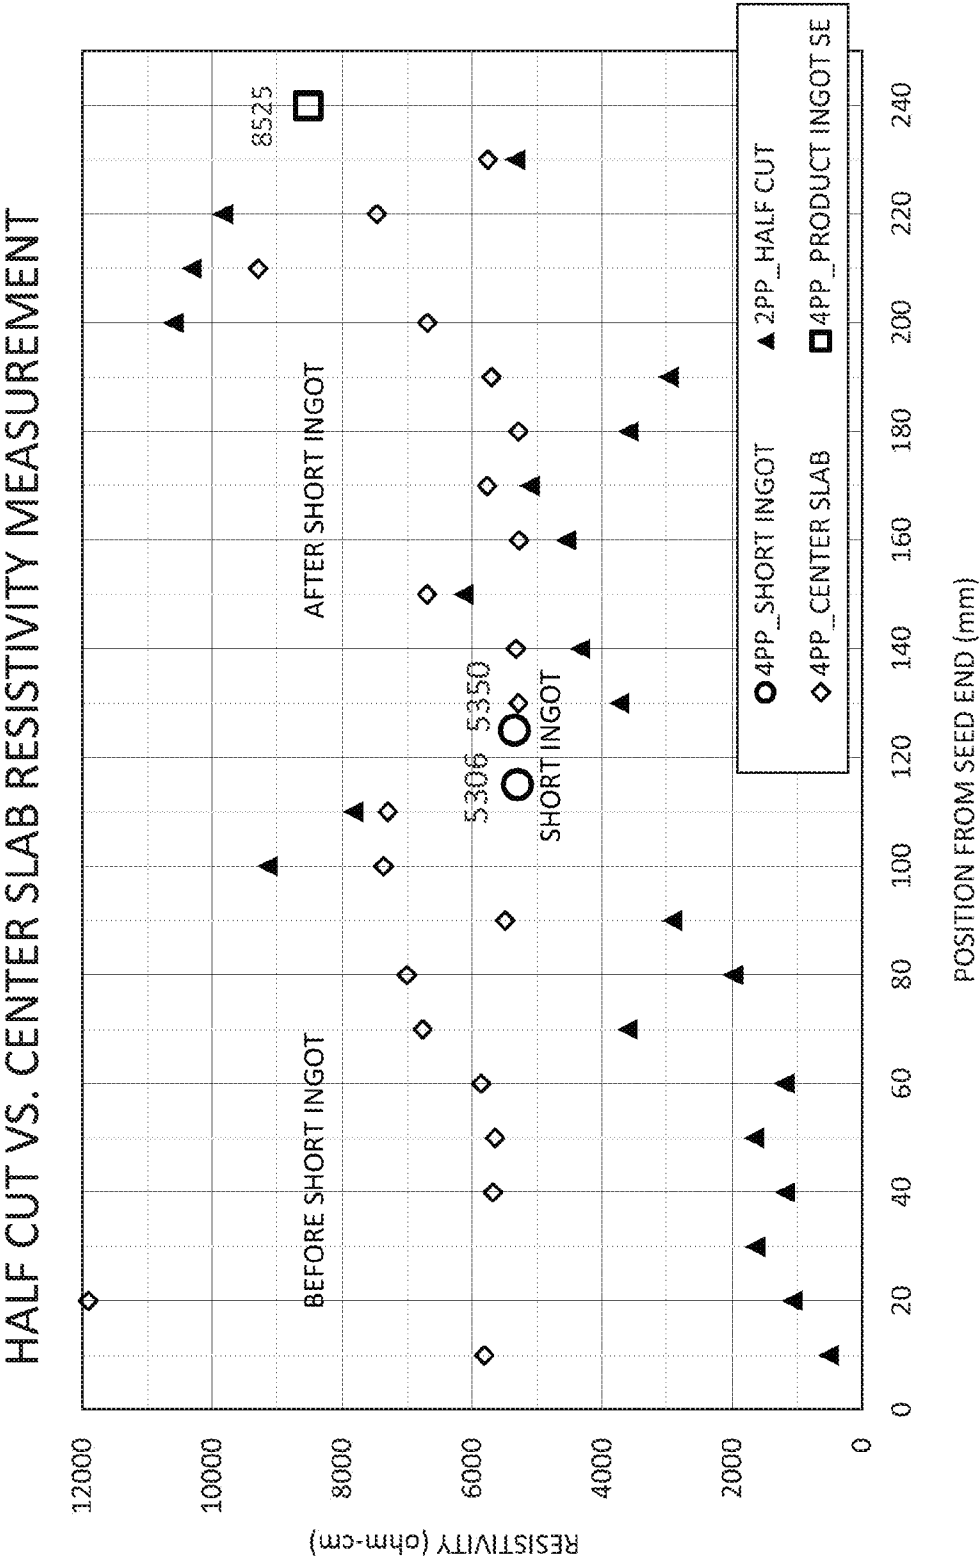


FIG. 9

2PP vs 4PP (FLAT GROUND SAMPLE ROD VS. CENTER SLAB)

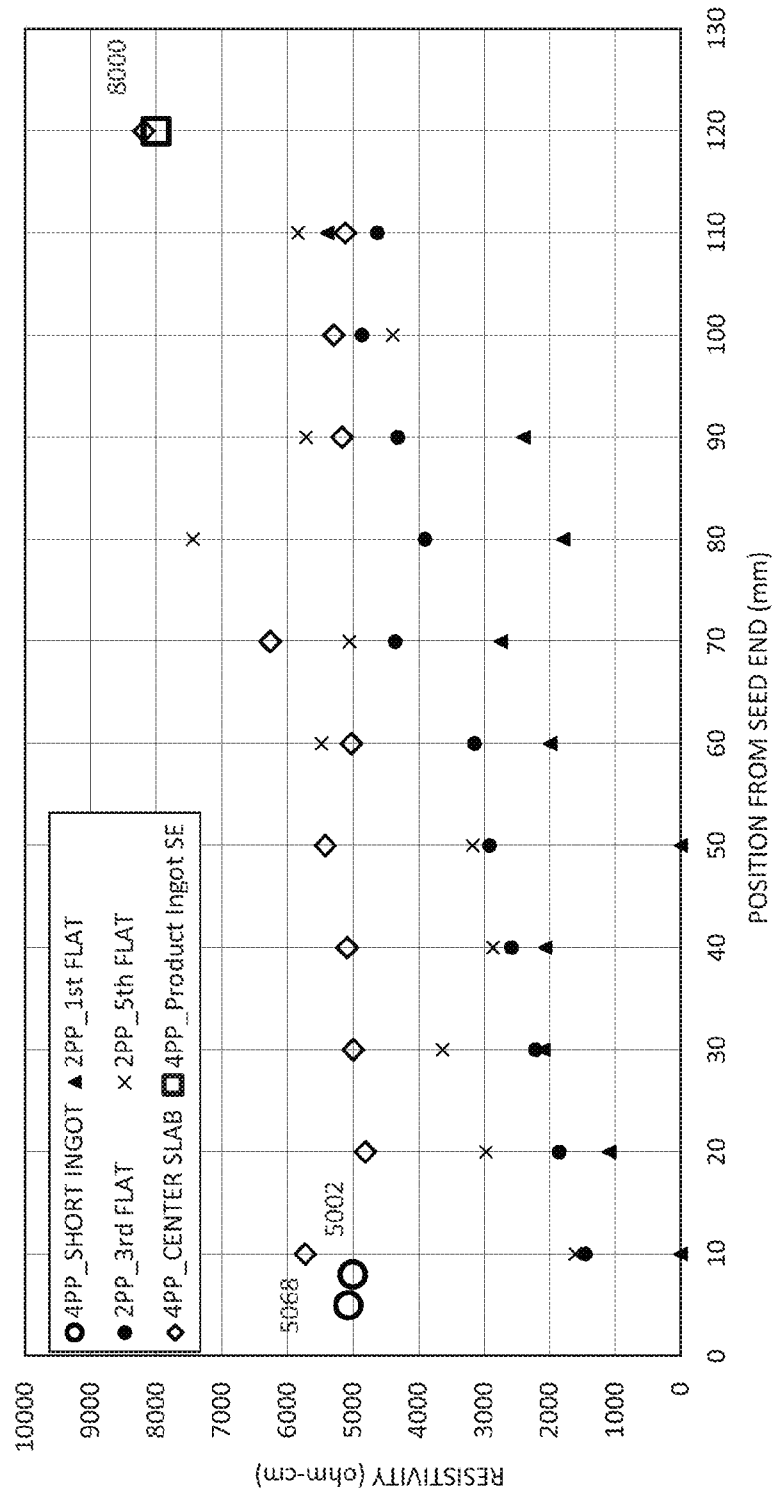


FIG. 10

12/20

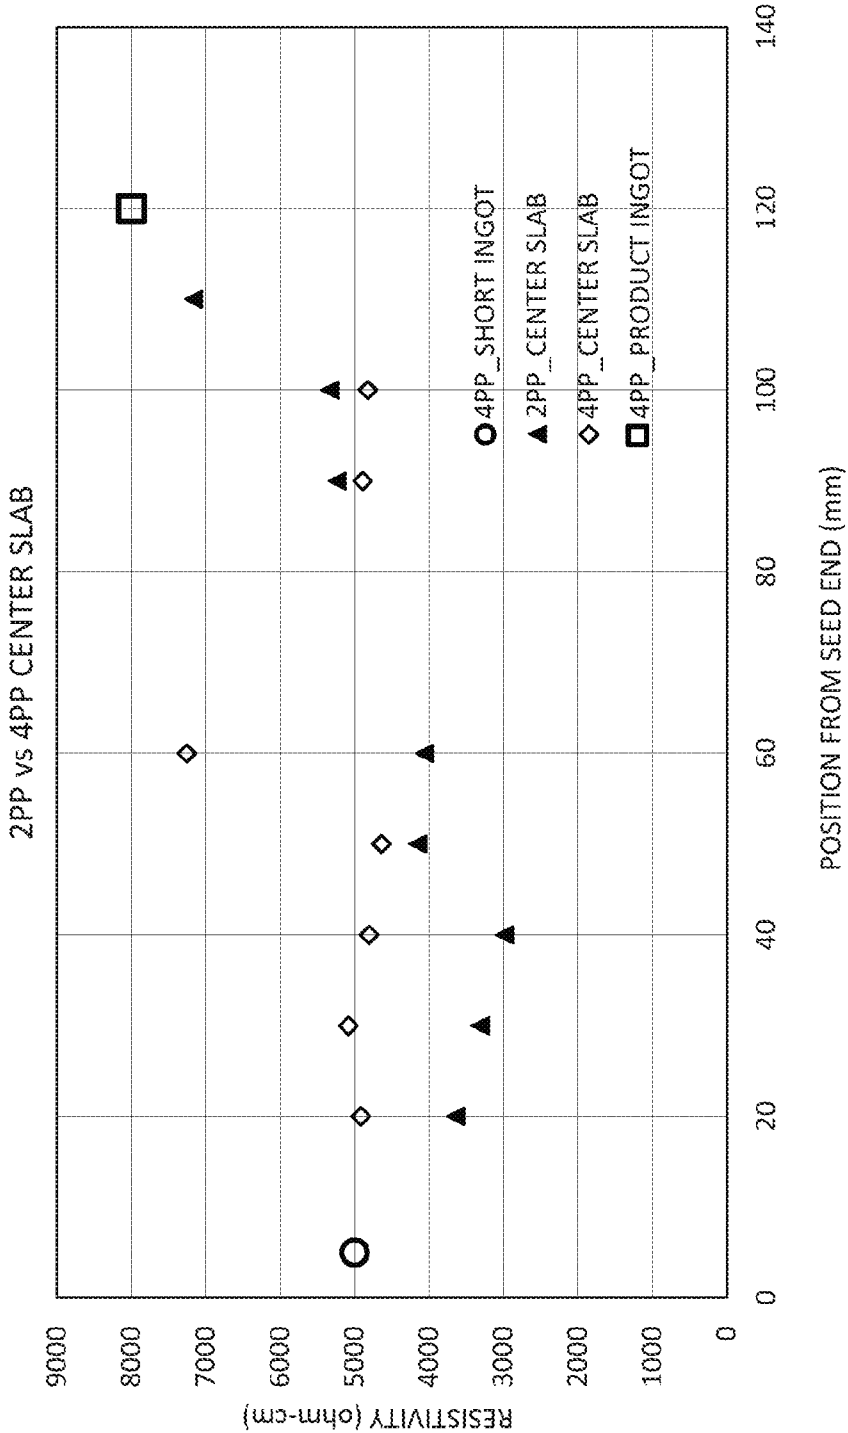


FIG. 11

13/20

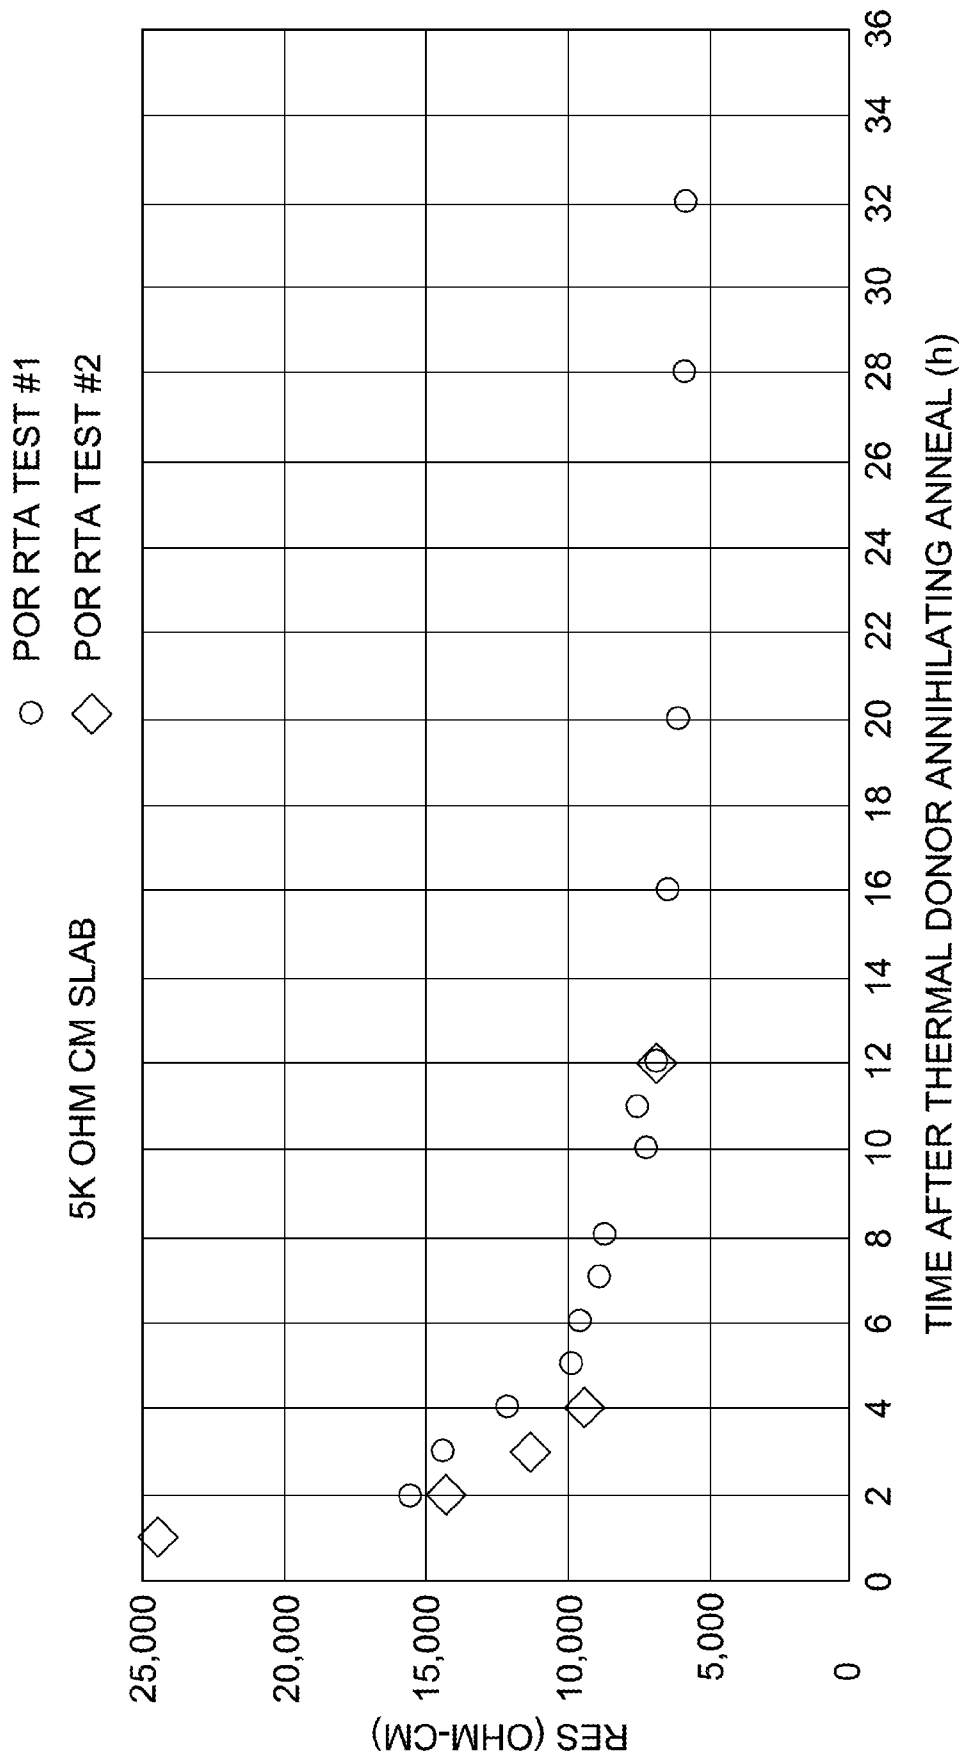


FIG. 12

14/20

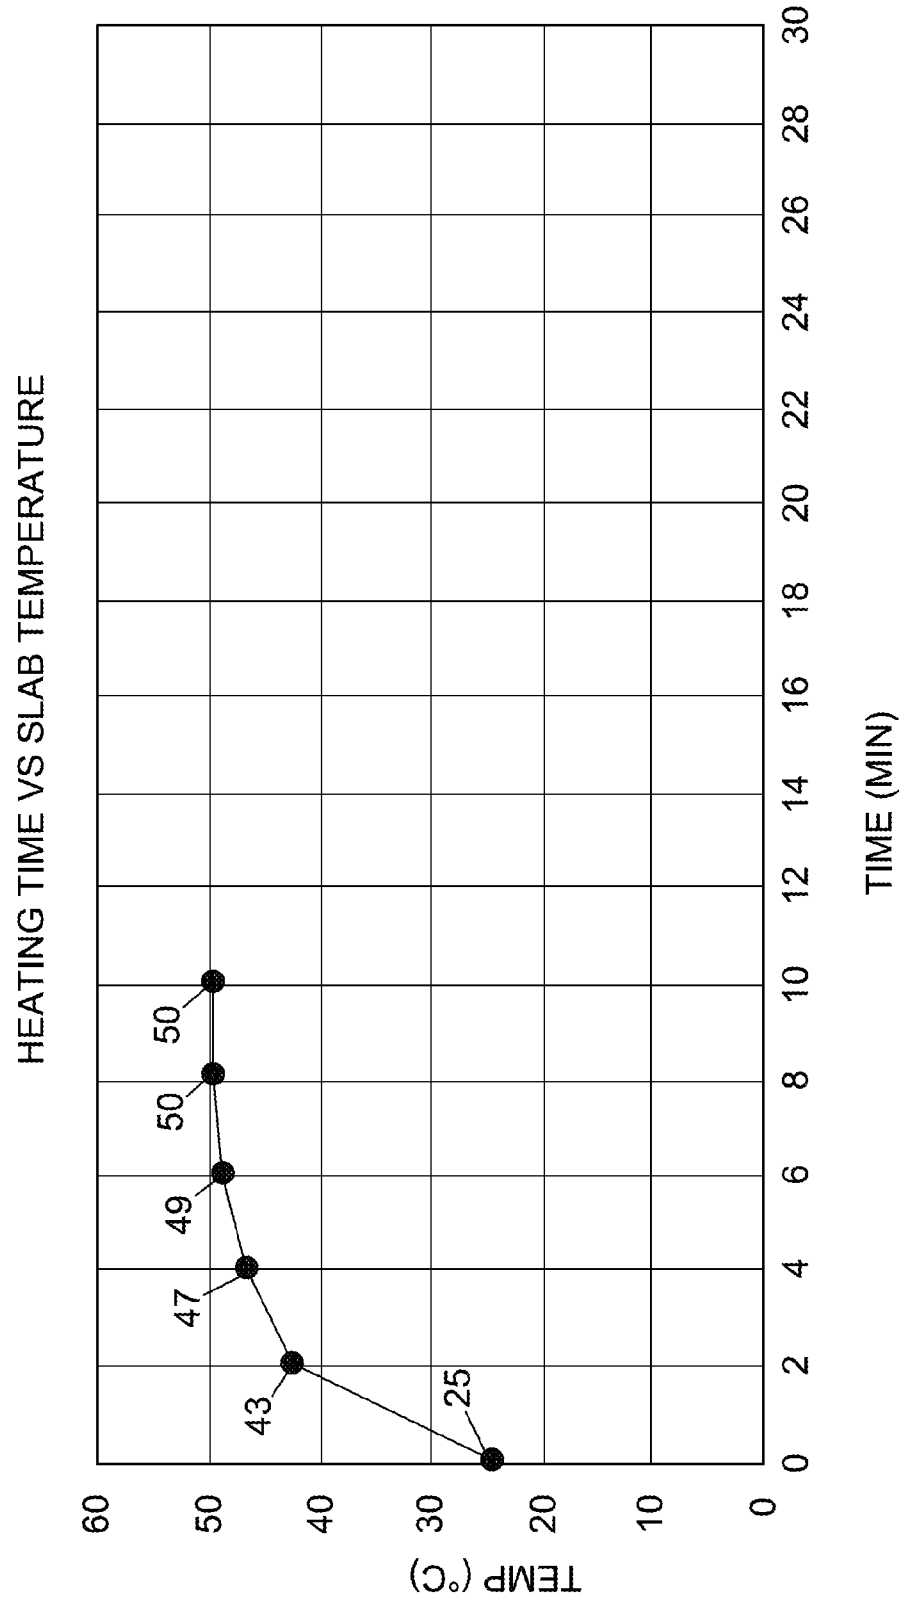


FIG. 13

15/20

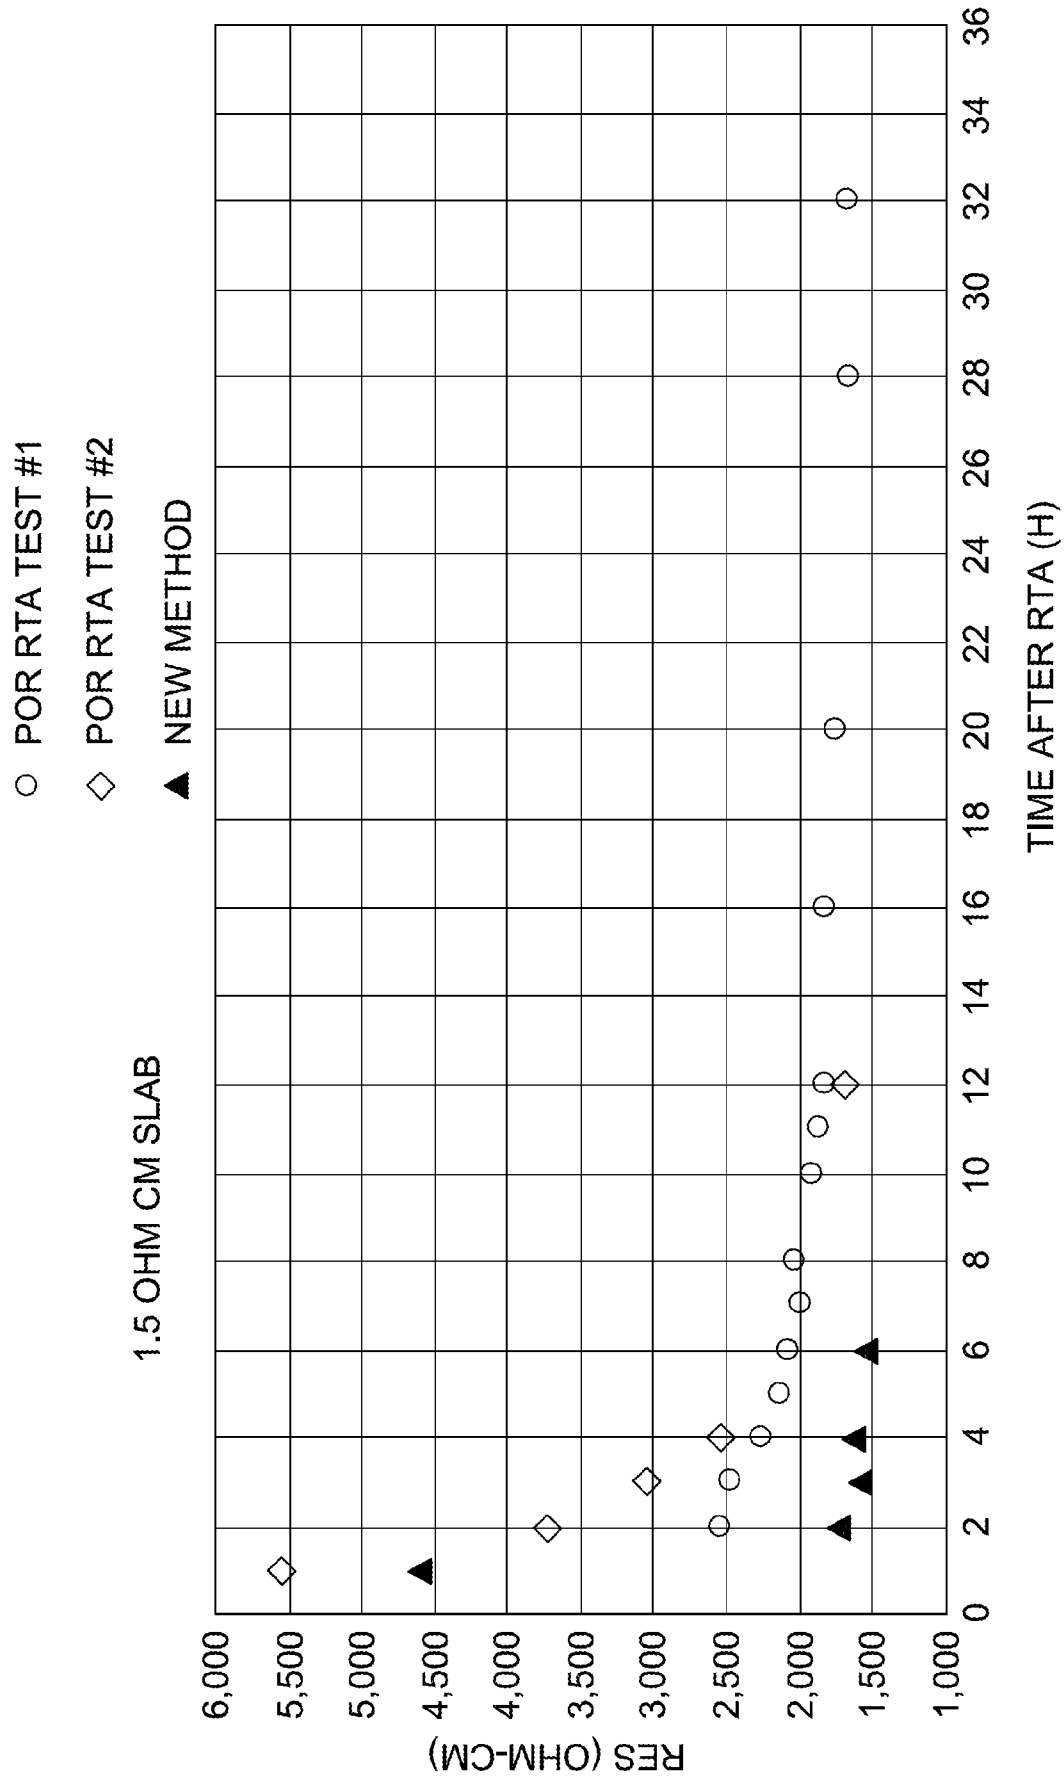


FIG. 14A

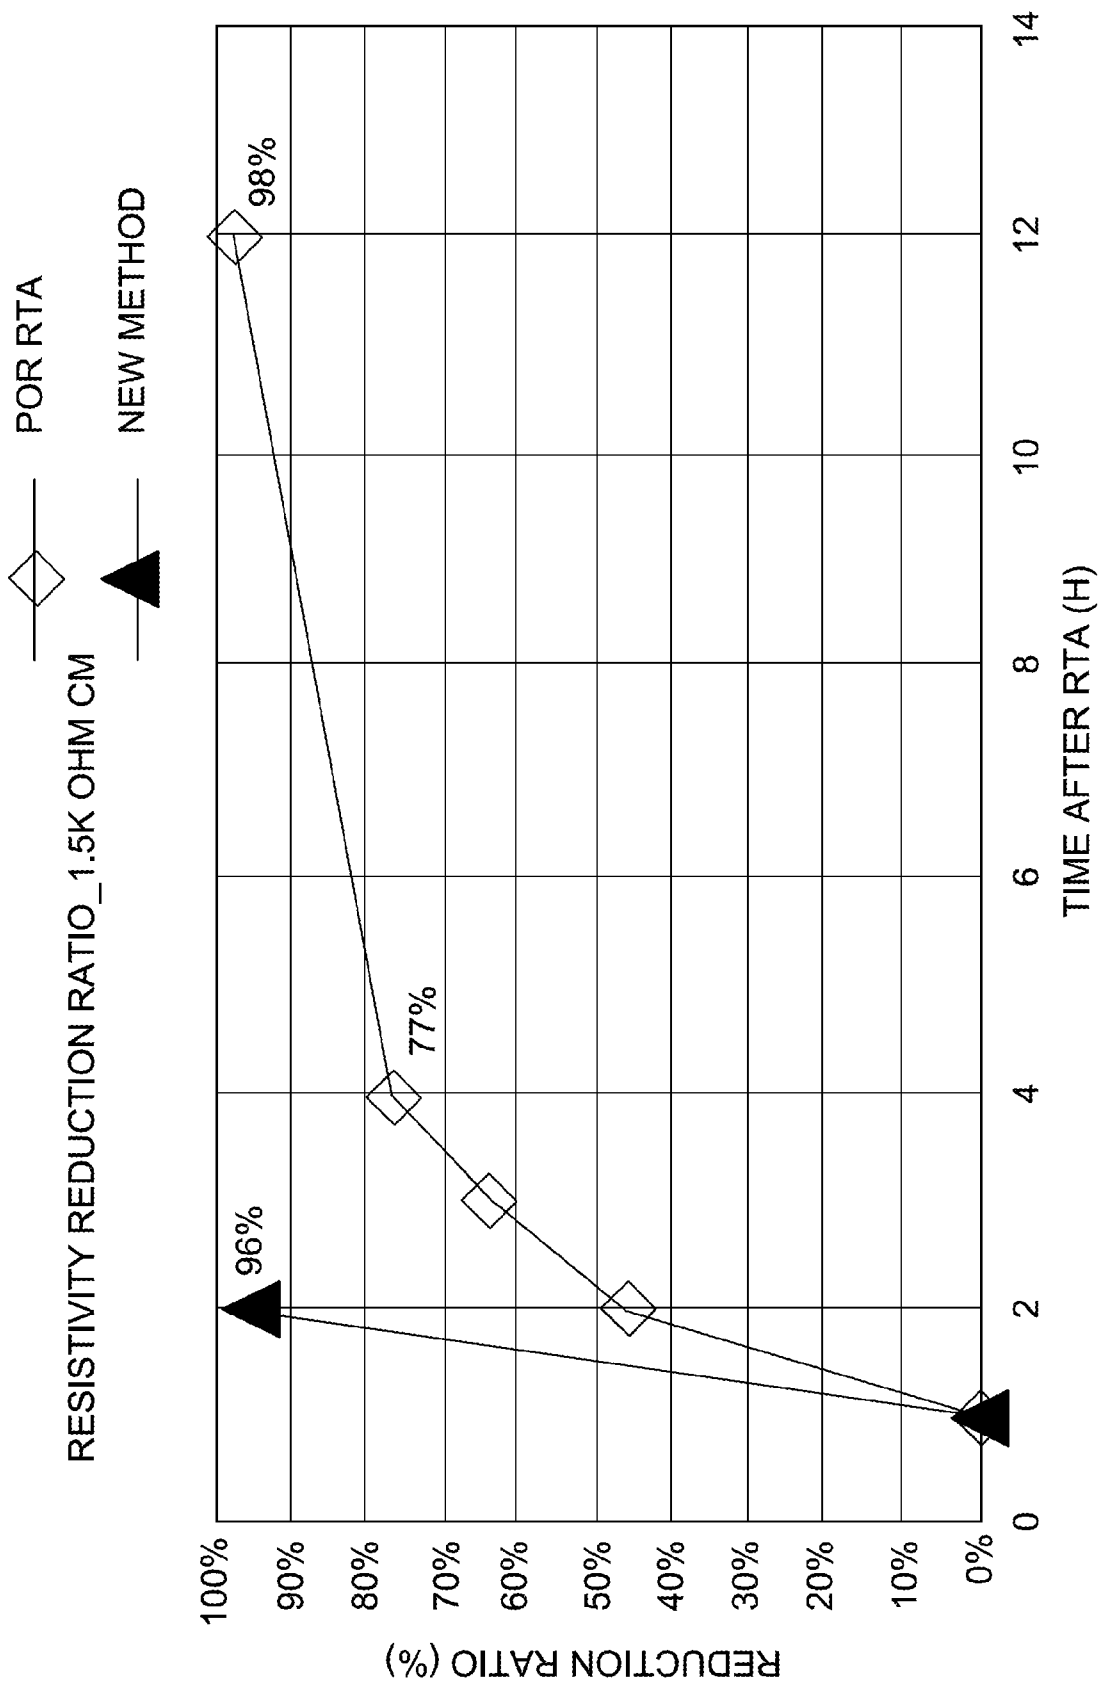


FIG. 14B

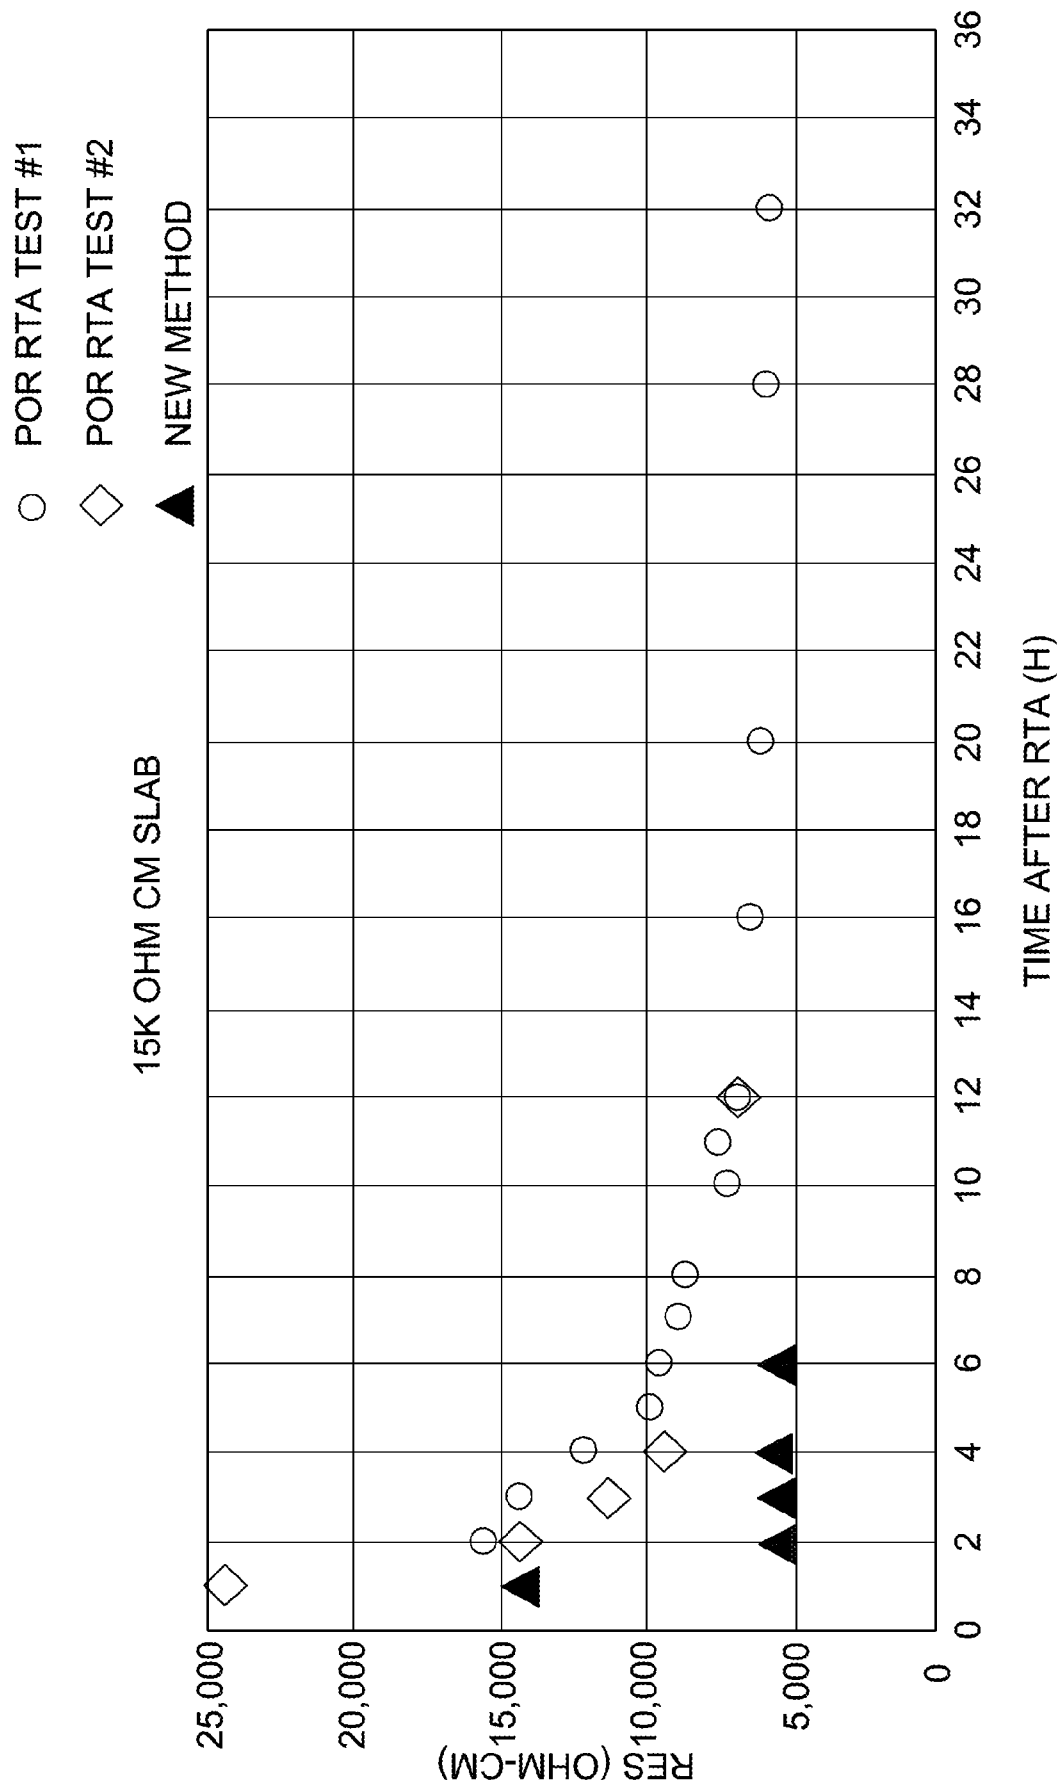


FIG. 15A

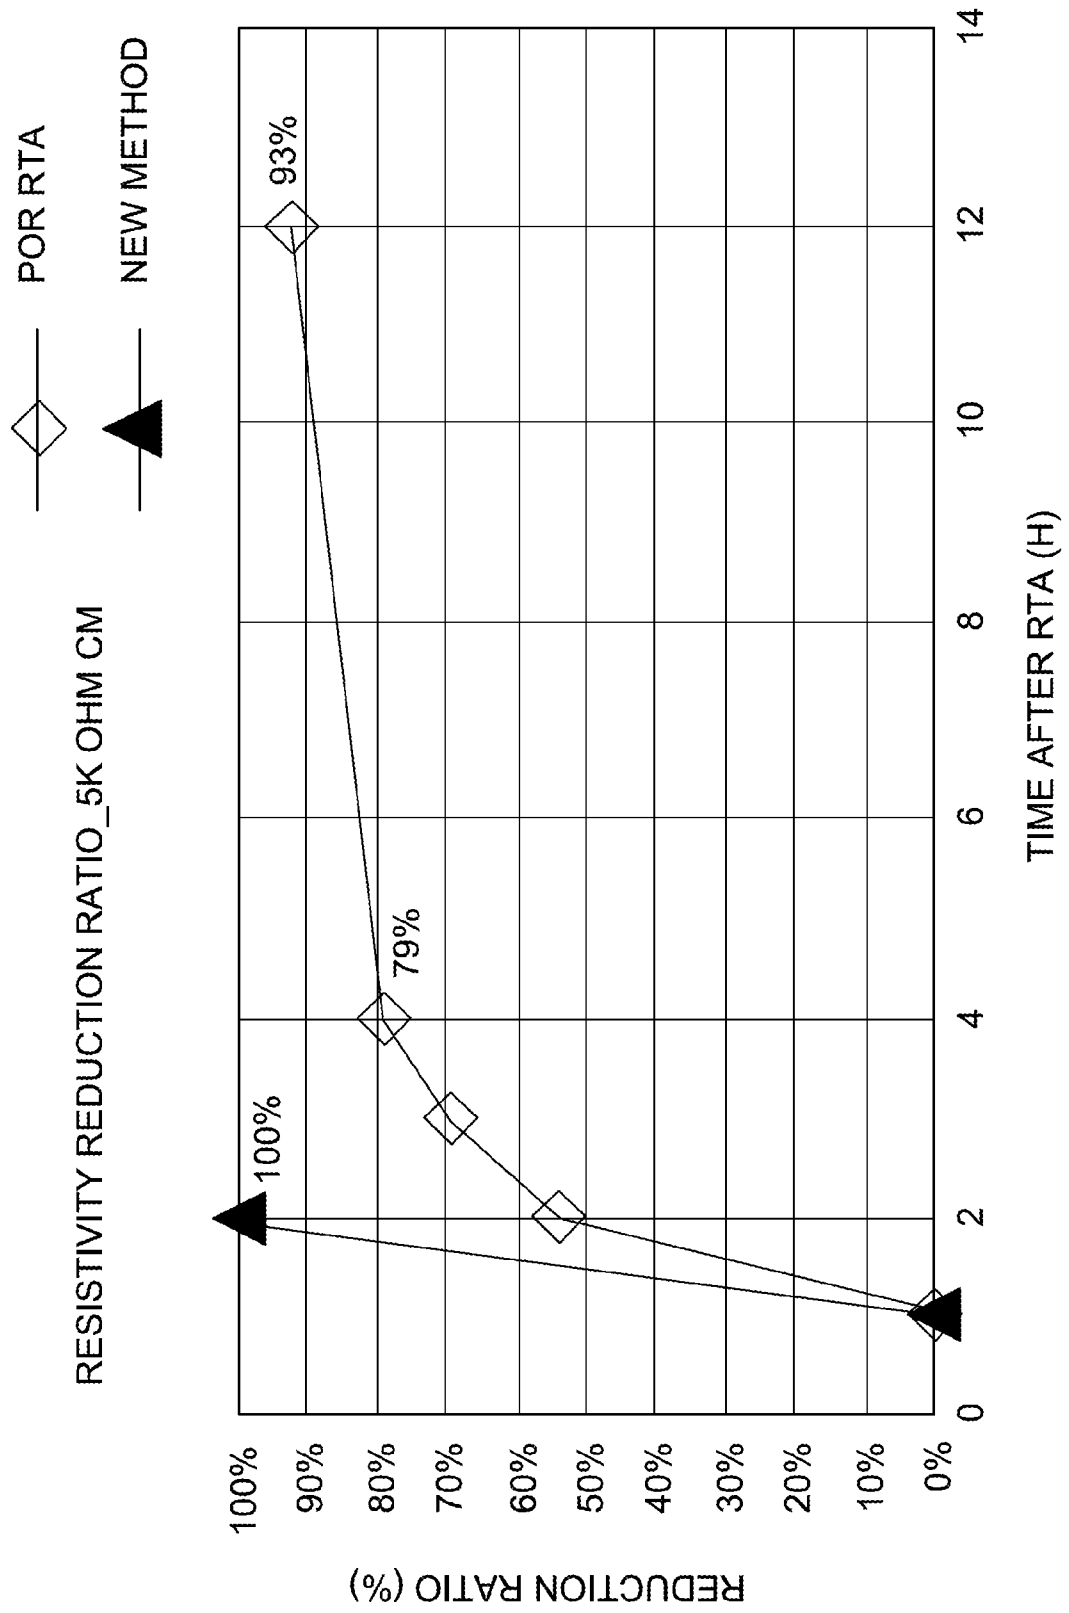


FIG. 15B


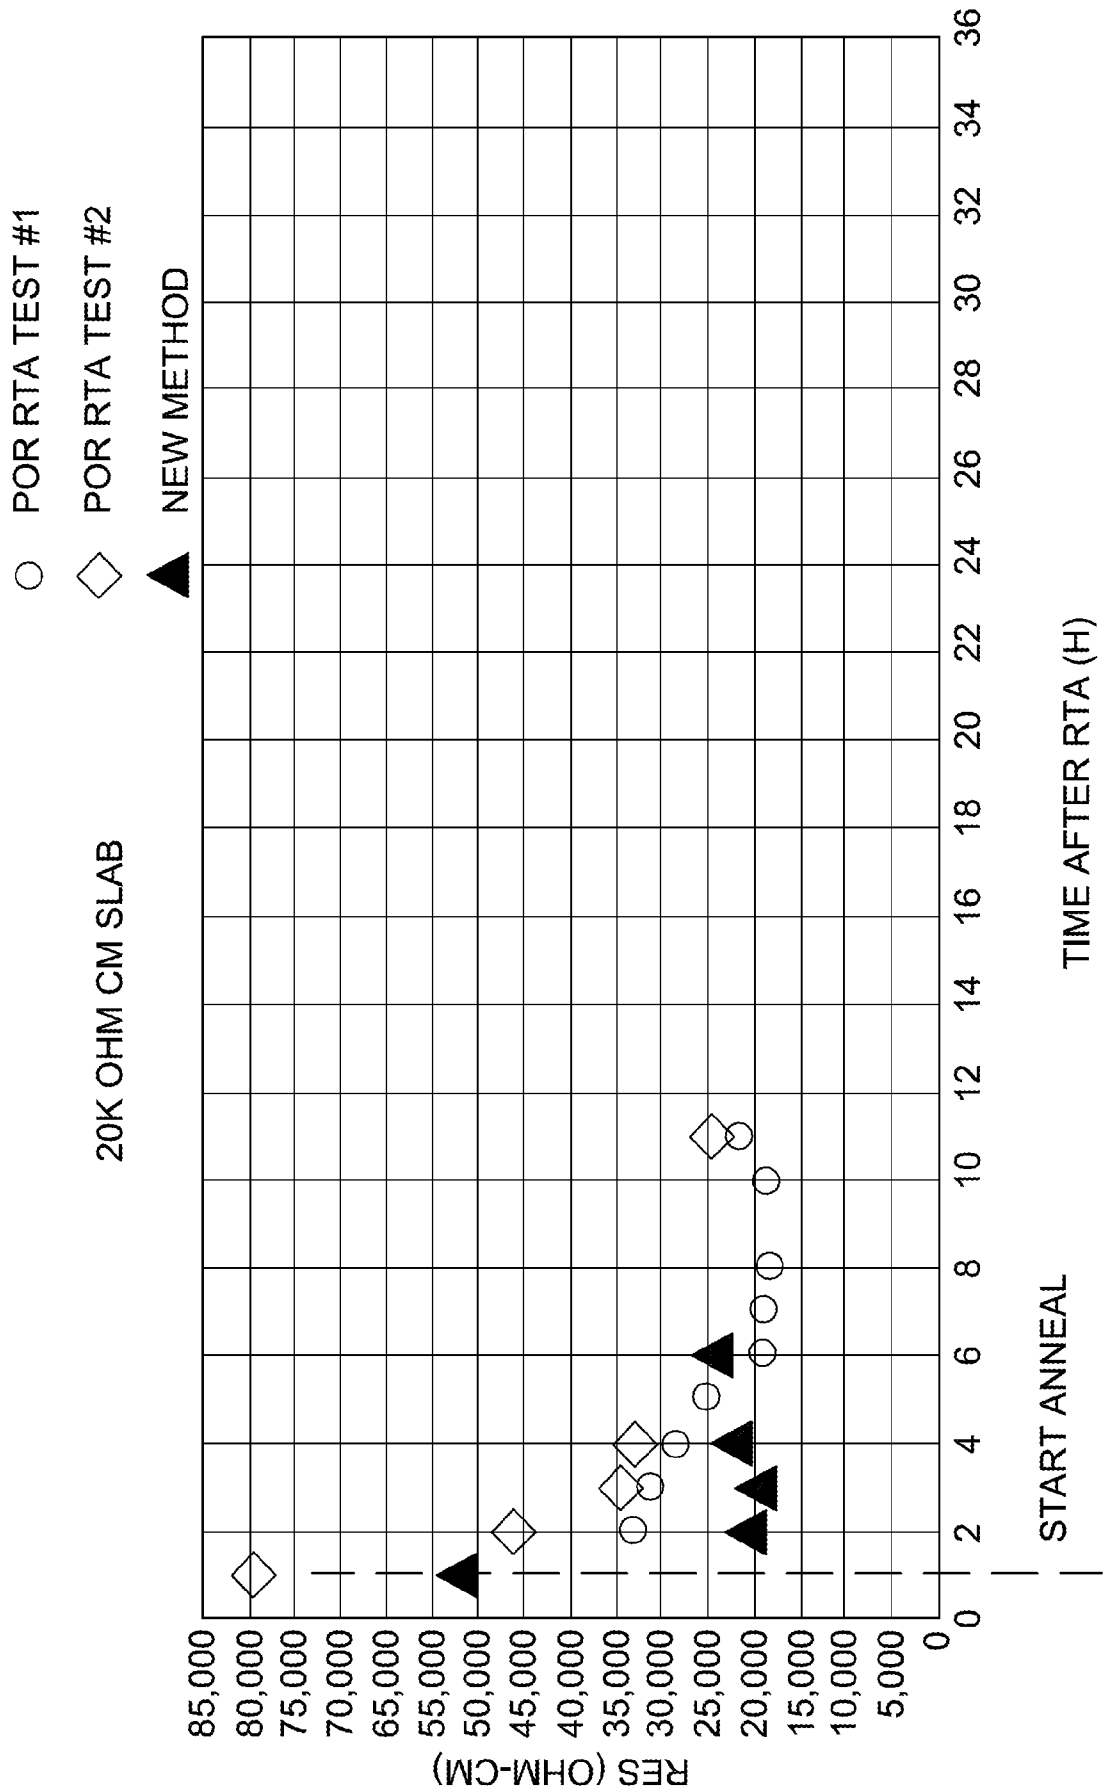


FIG. 16A

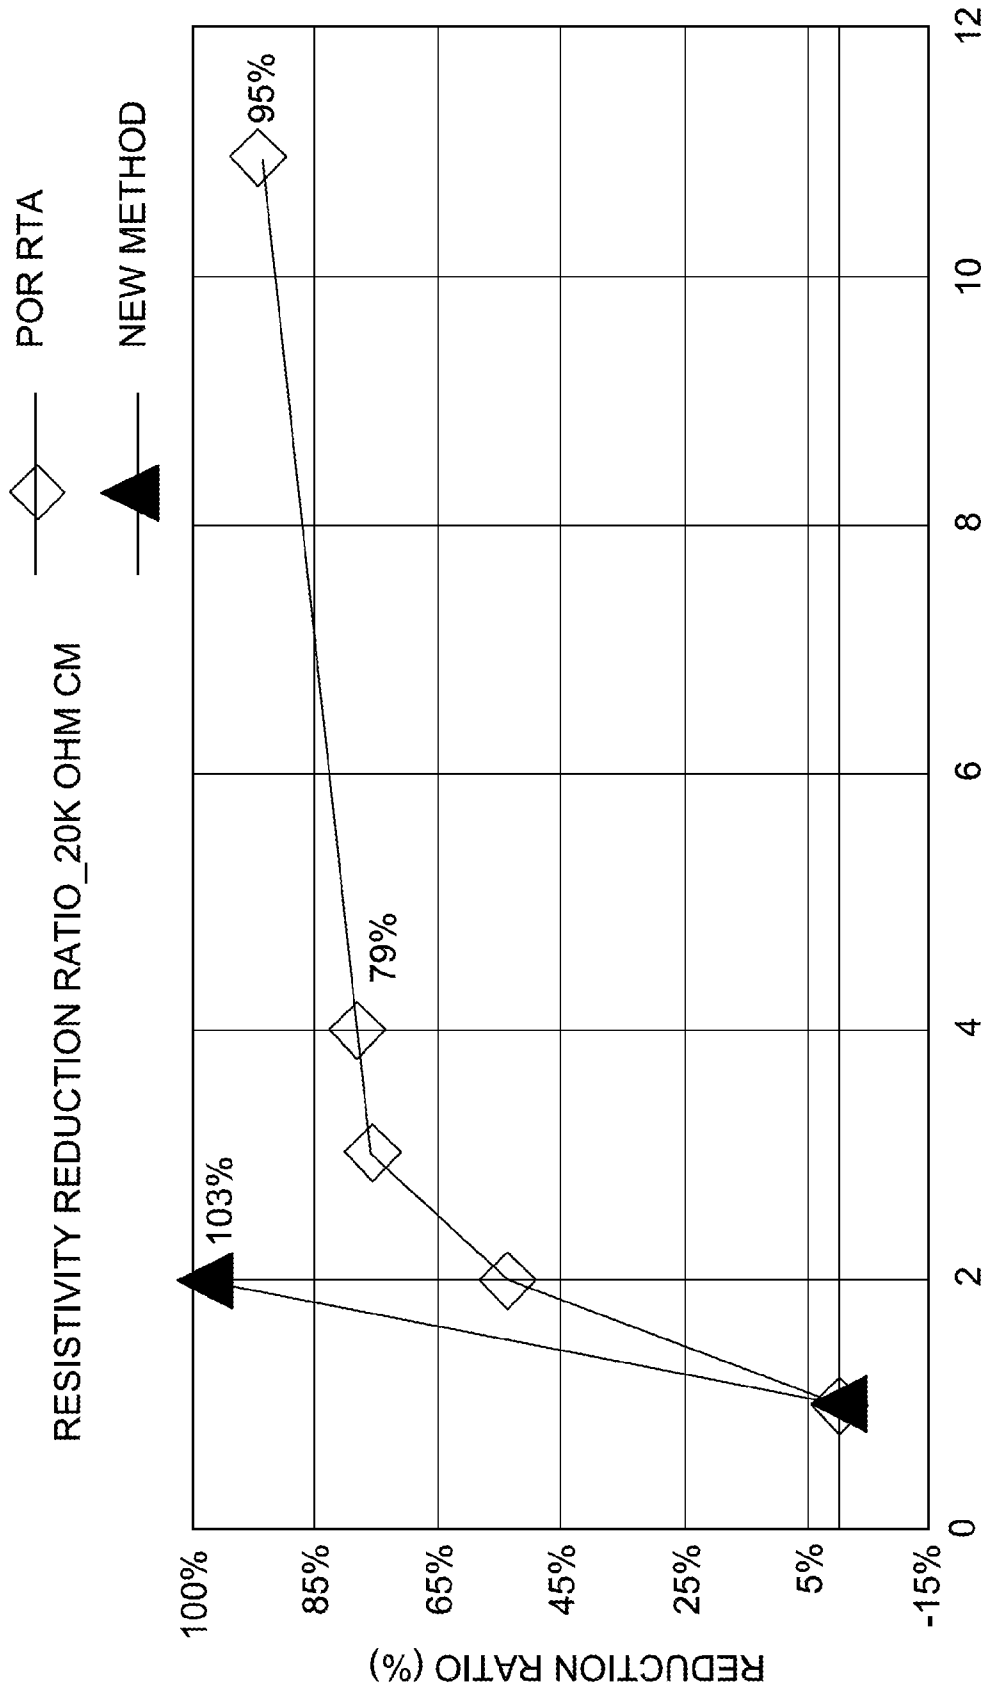

TIME AFTER RTA (H)

FIG. 16B