

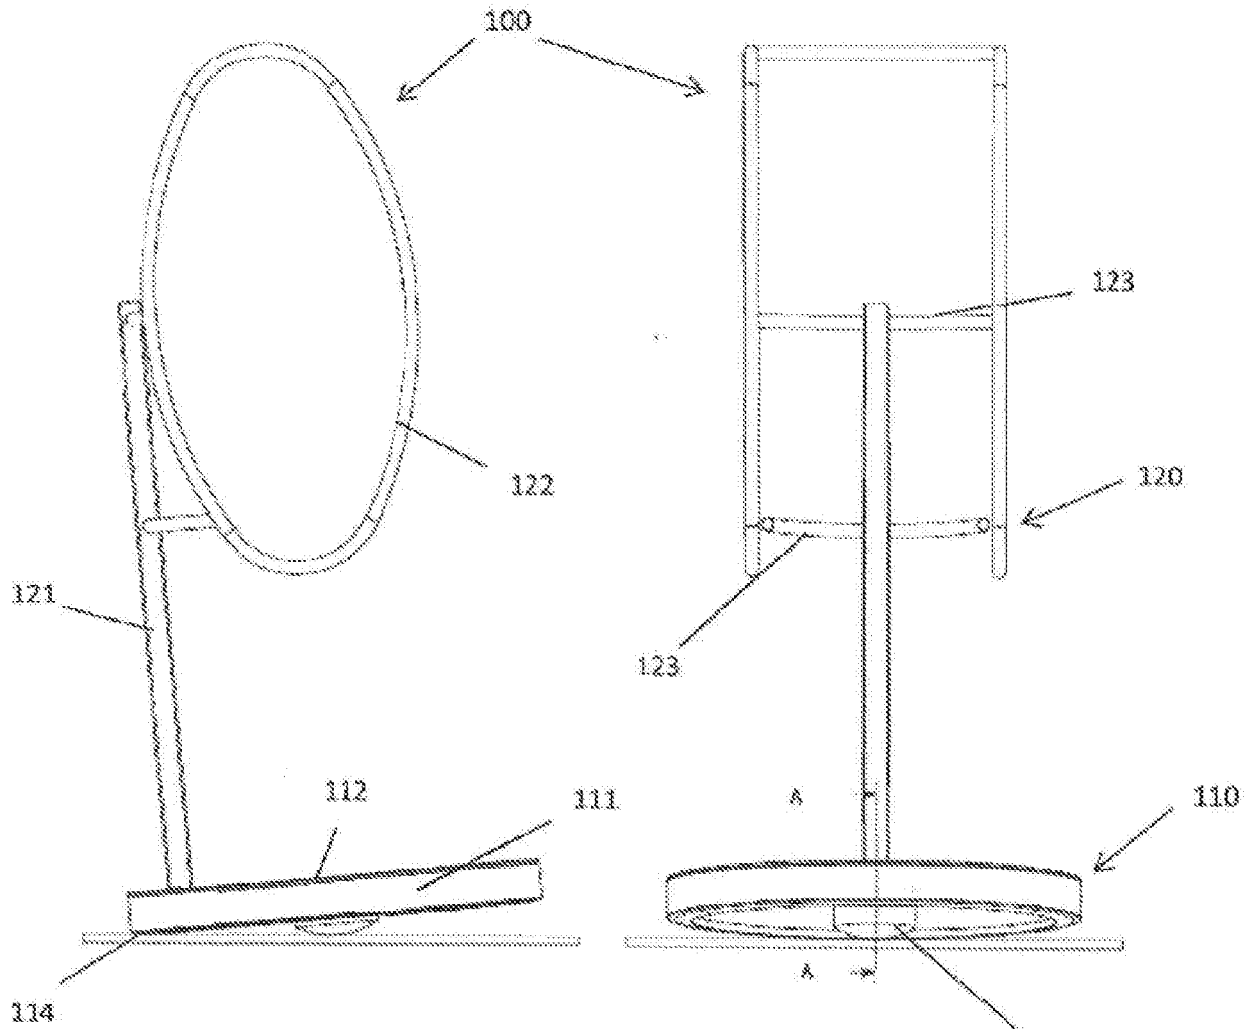


FIGURE 1

FIGURE 2

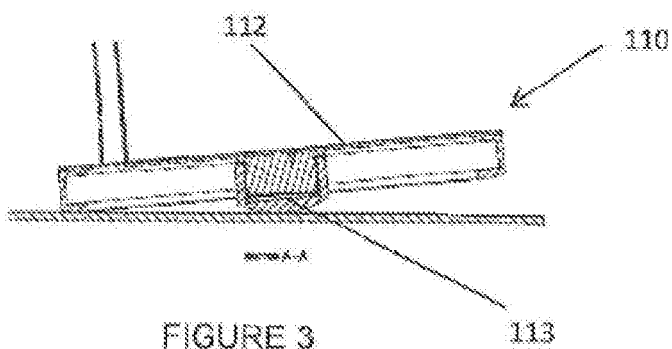


FIGURE 3

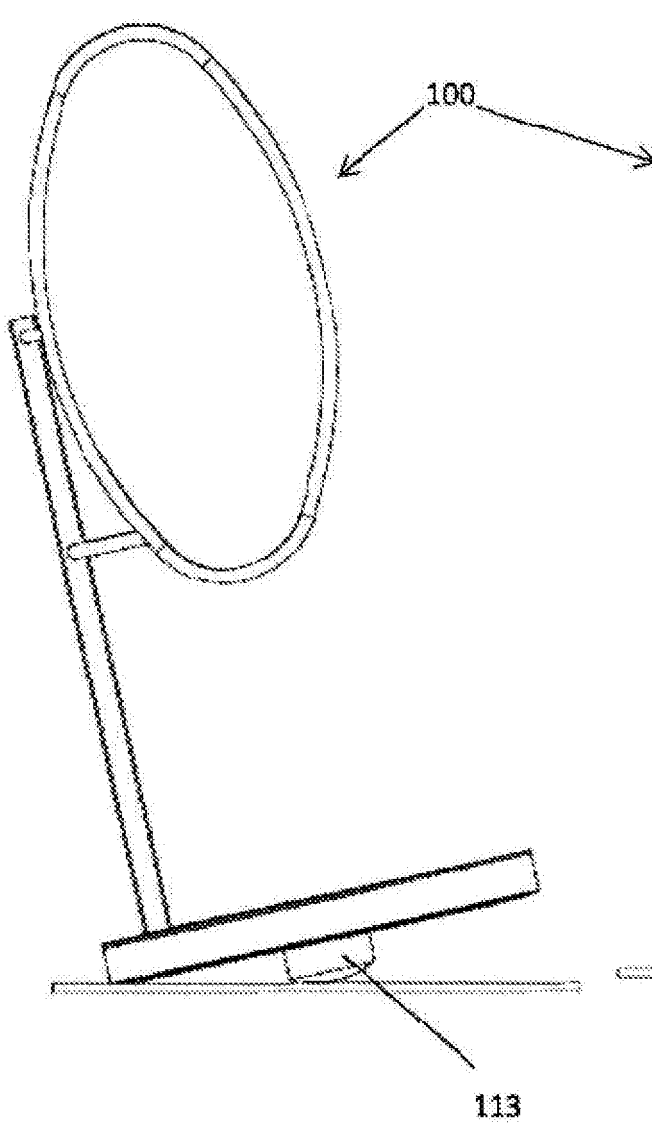


FIGURE 4

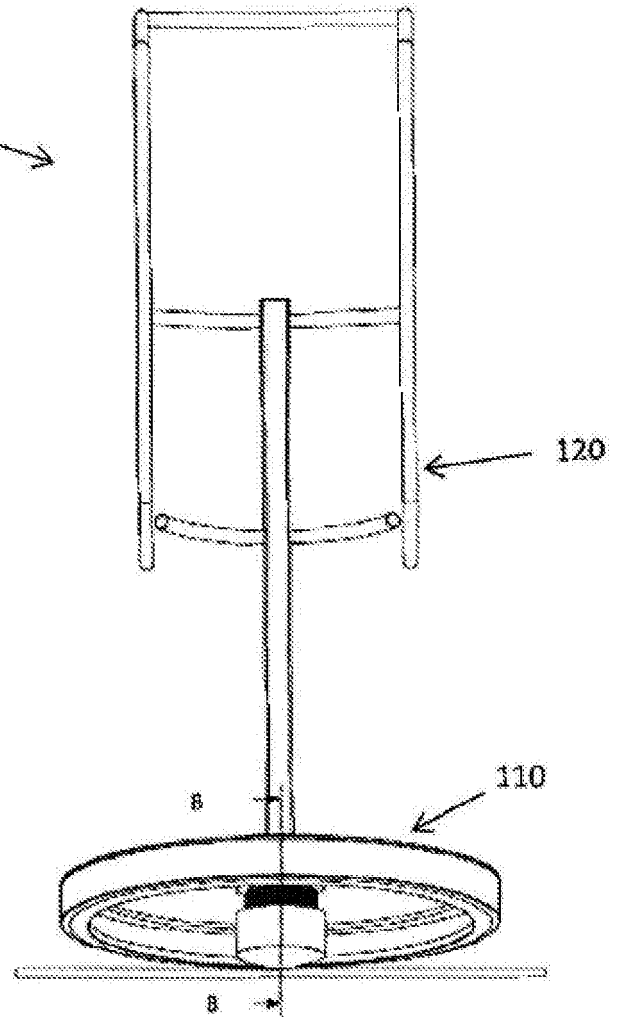


FIGURE 5

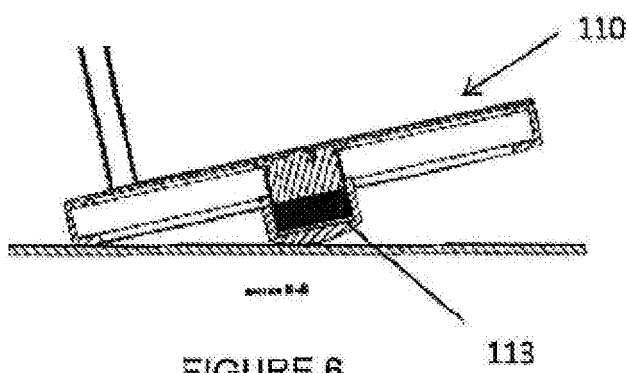


FIGURE 6

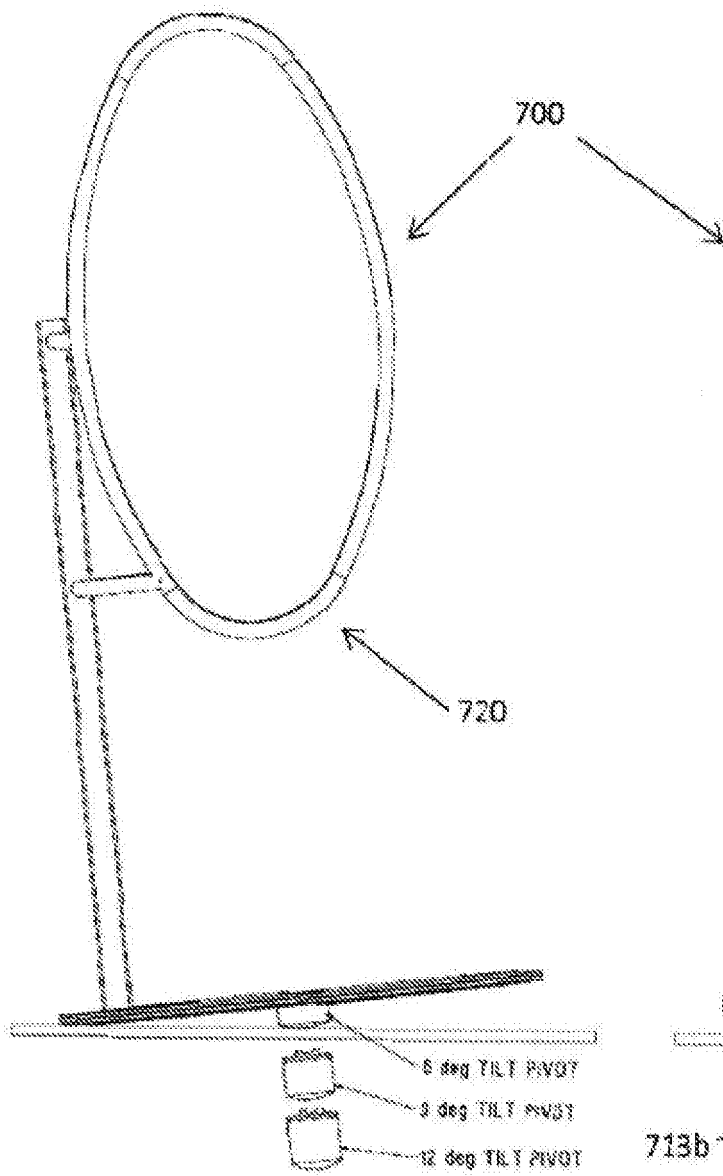


FIGURE 7

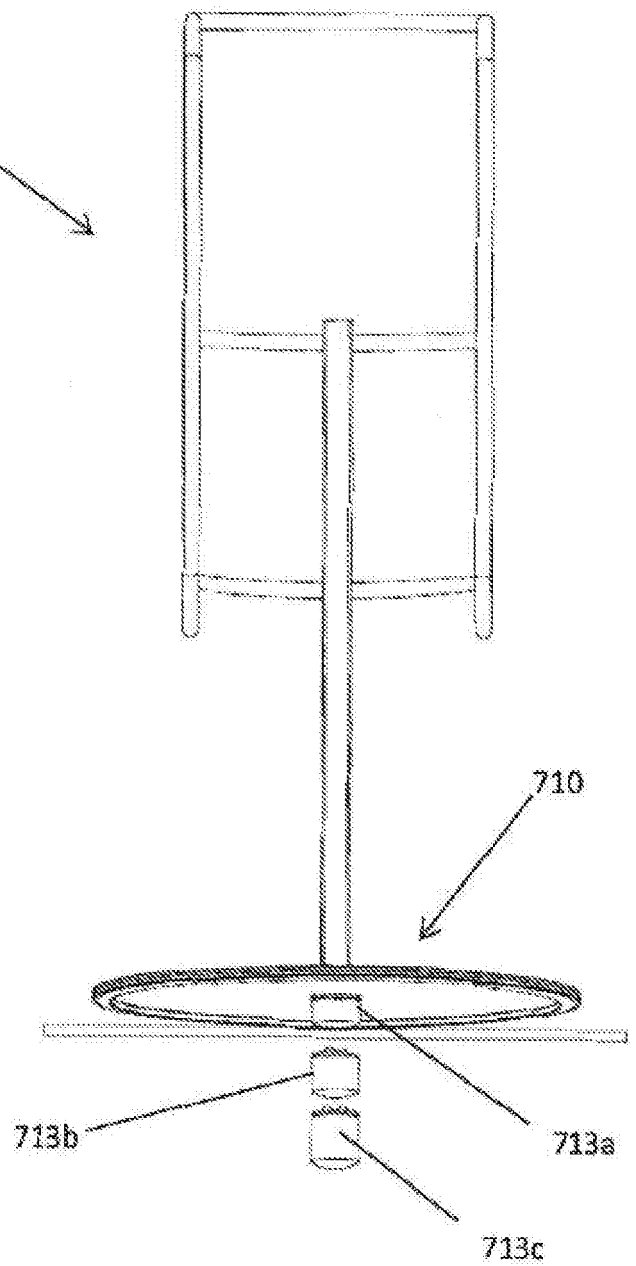


FIGURE 8

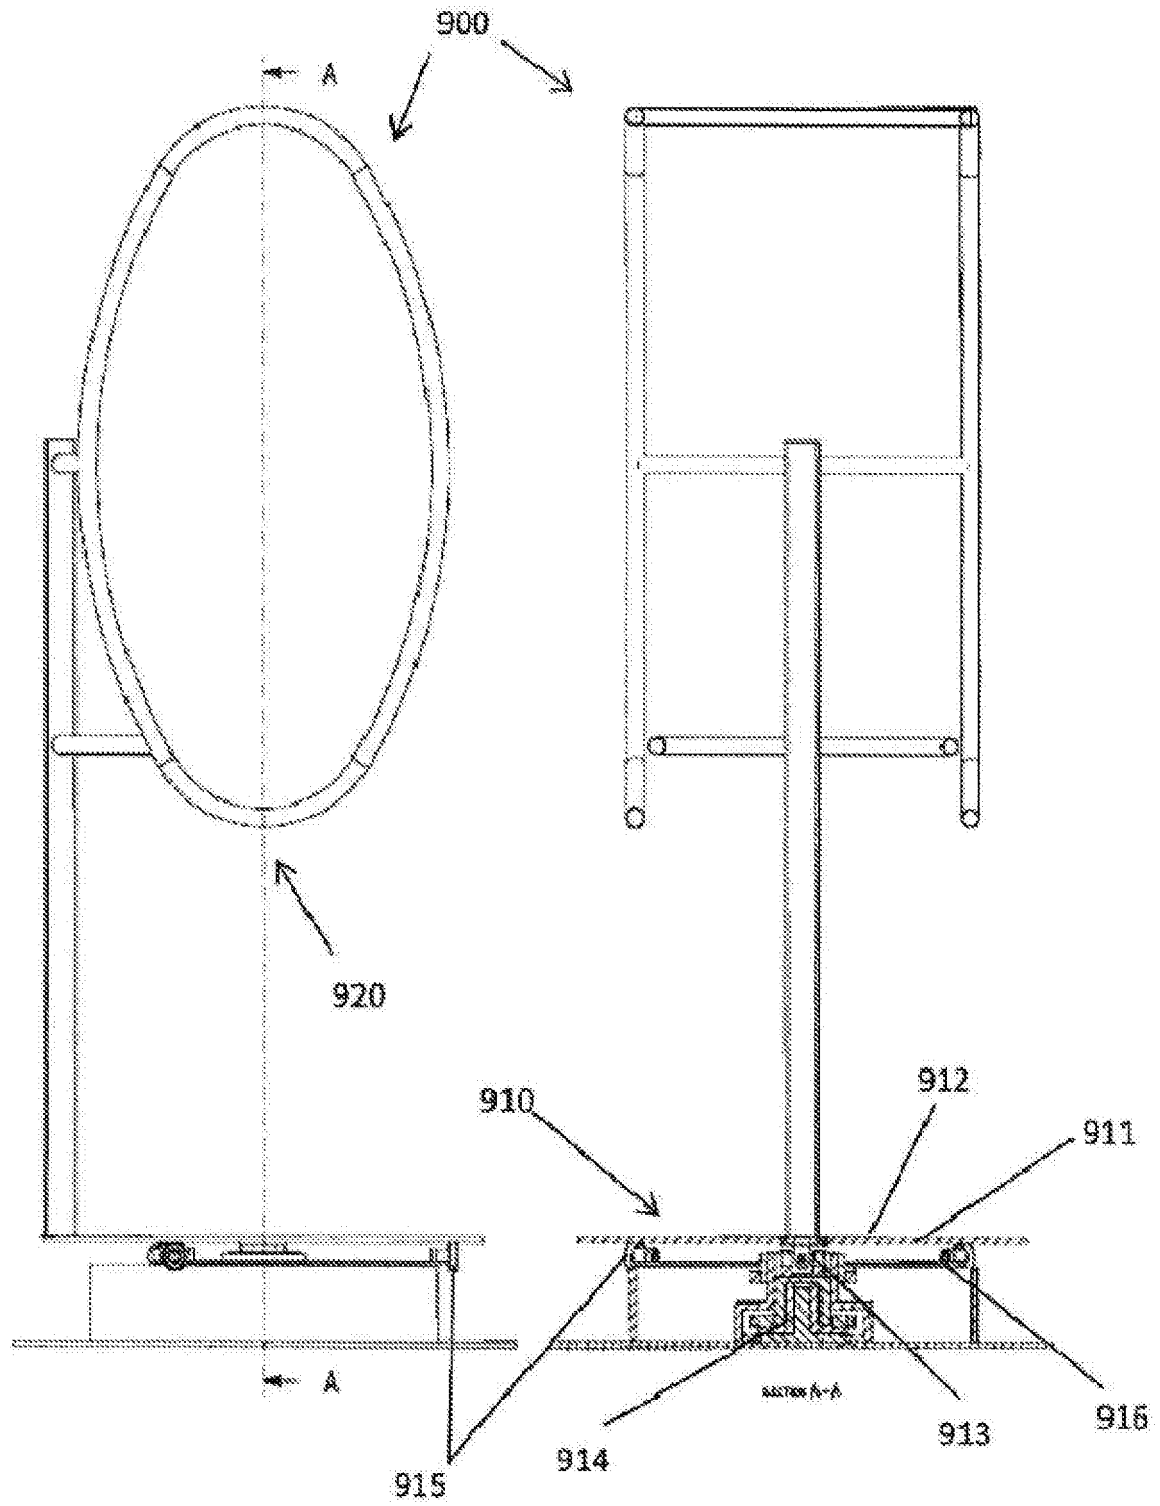


FIGURE 9

FIGURE 10

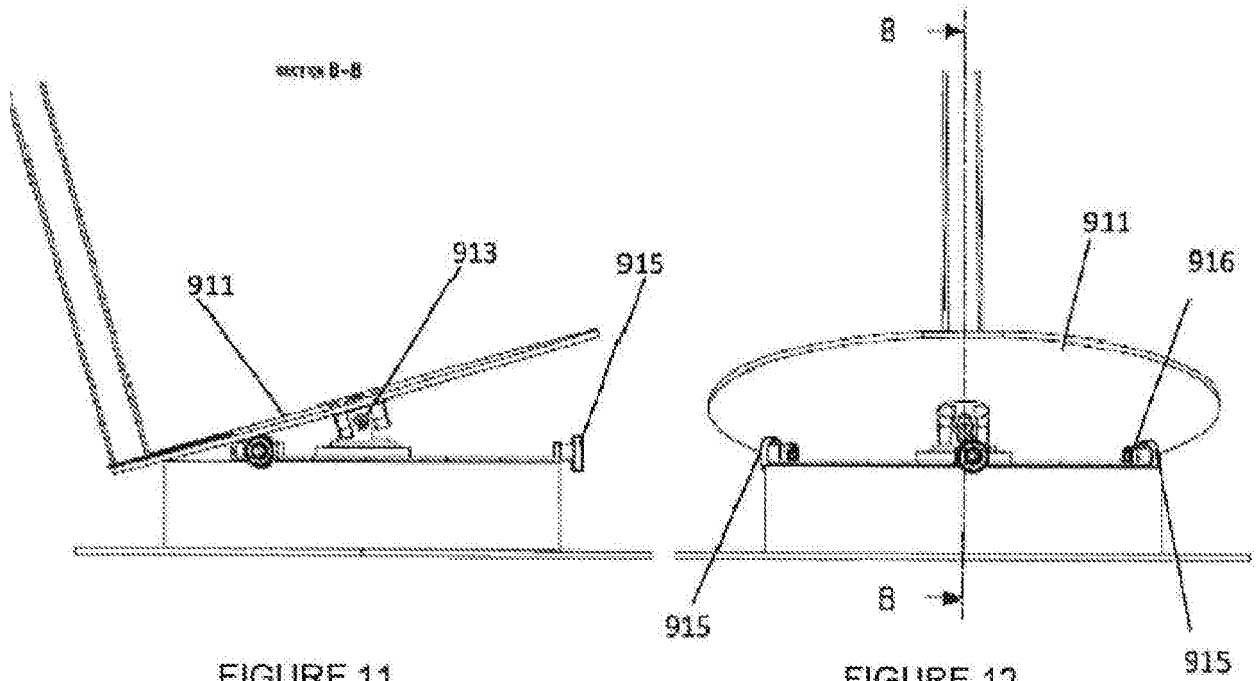


FIGURE 11

FIGURE 12

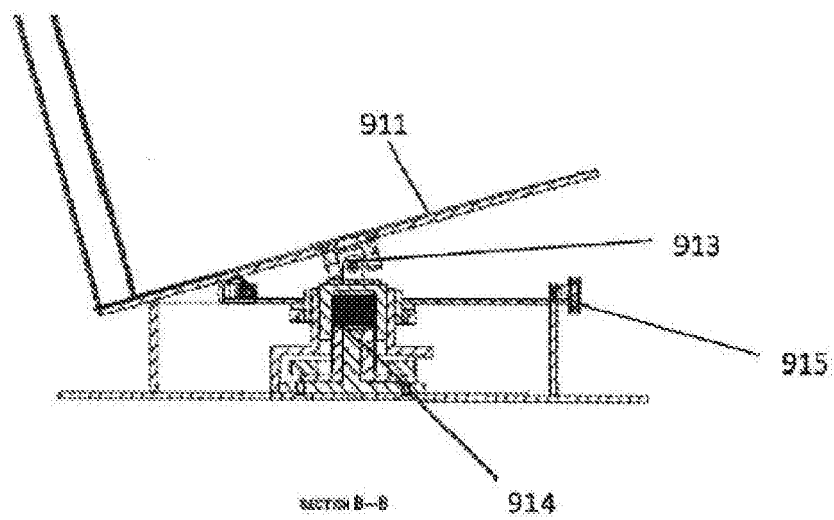
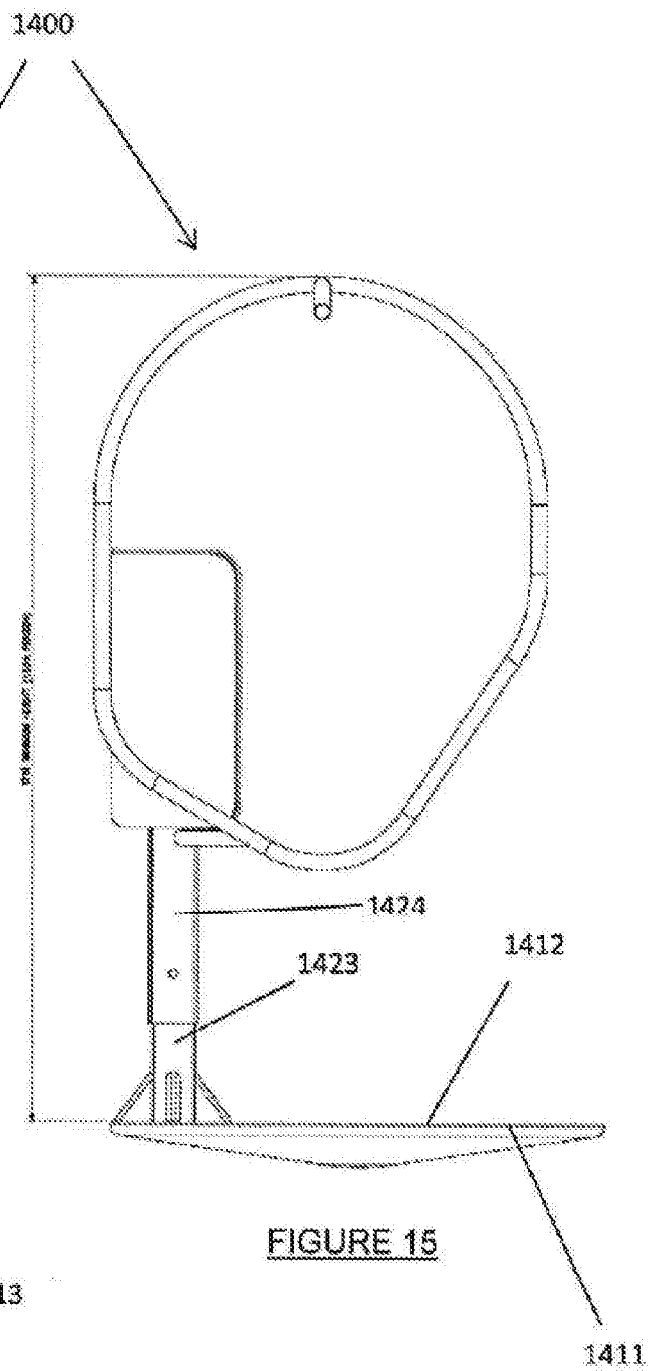
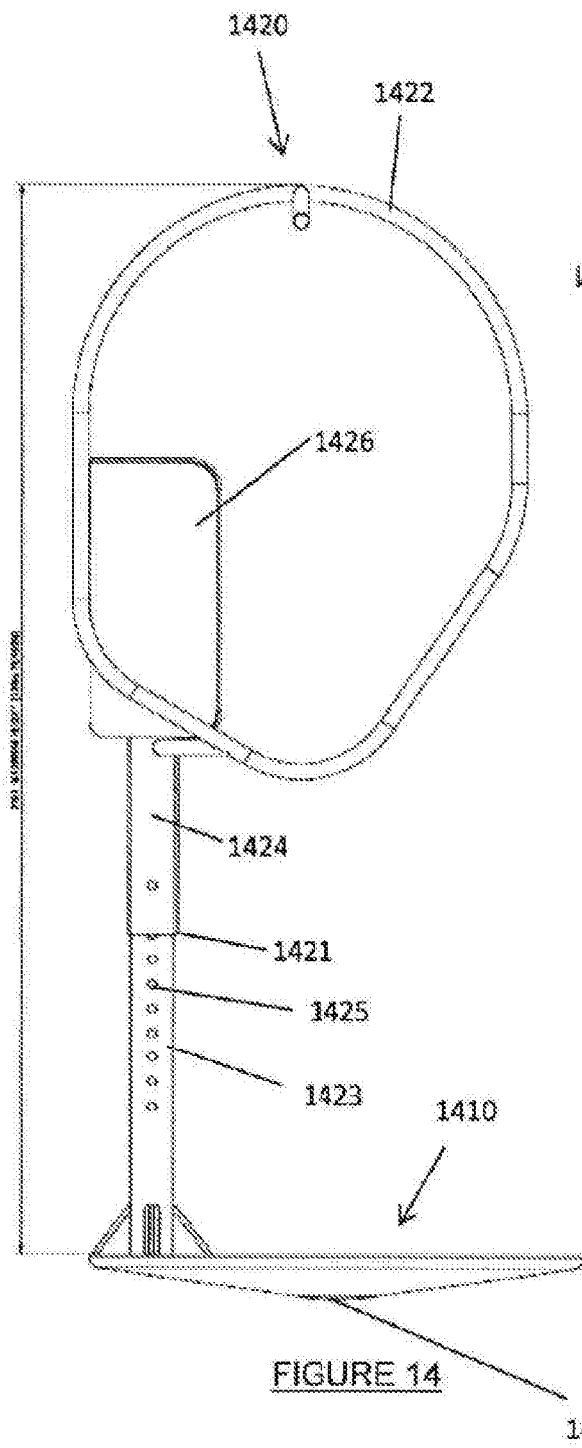


FIGURE 13



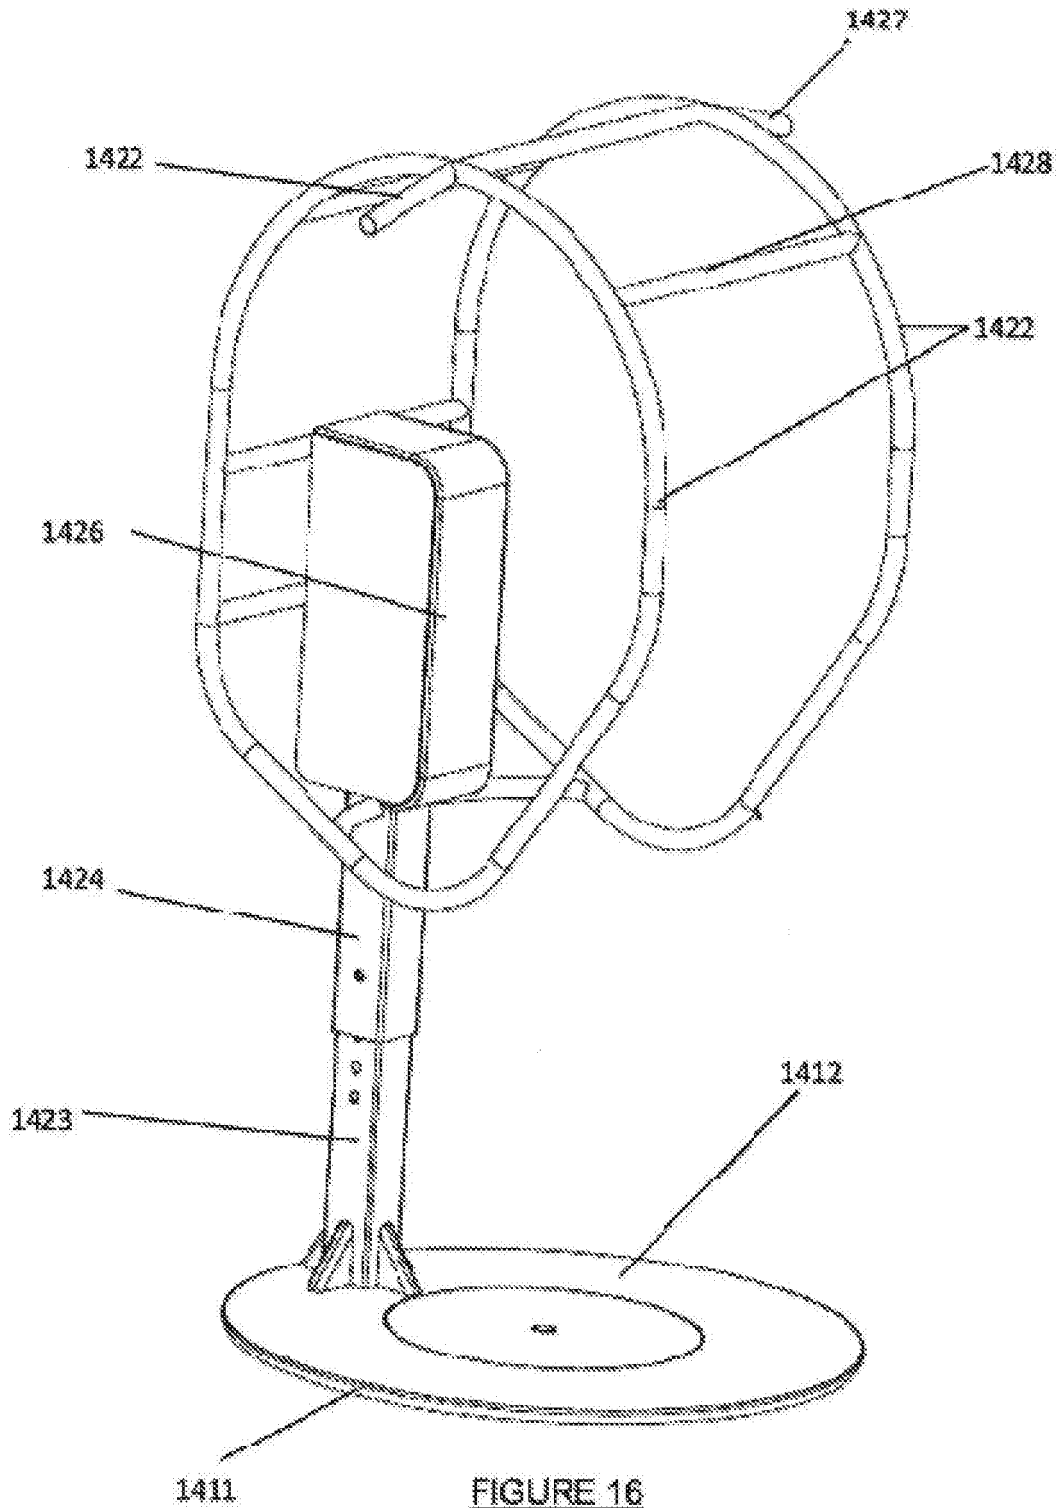


FIGURE 16

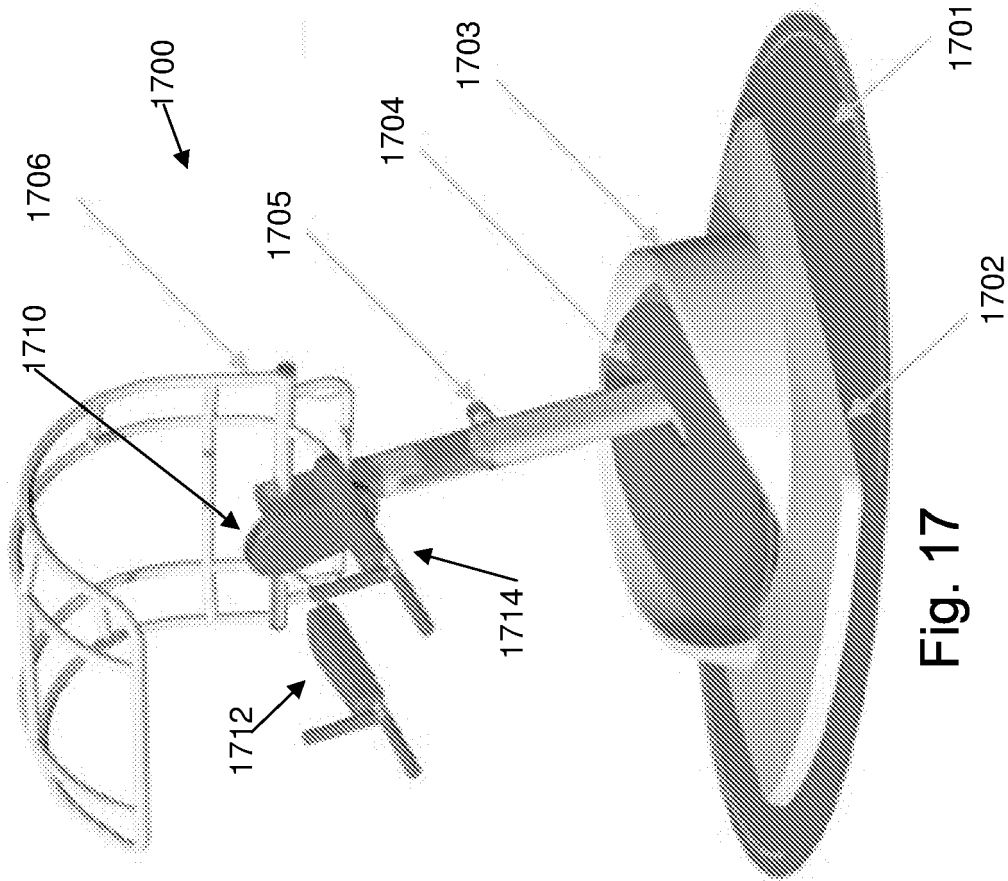
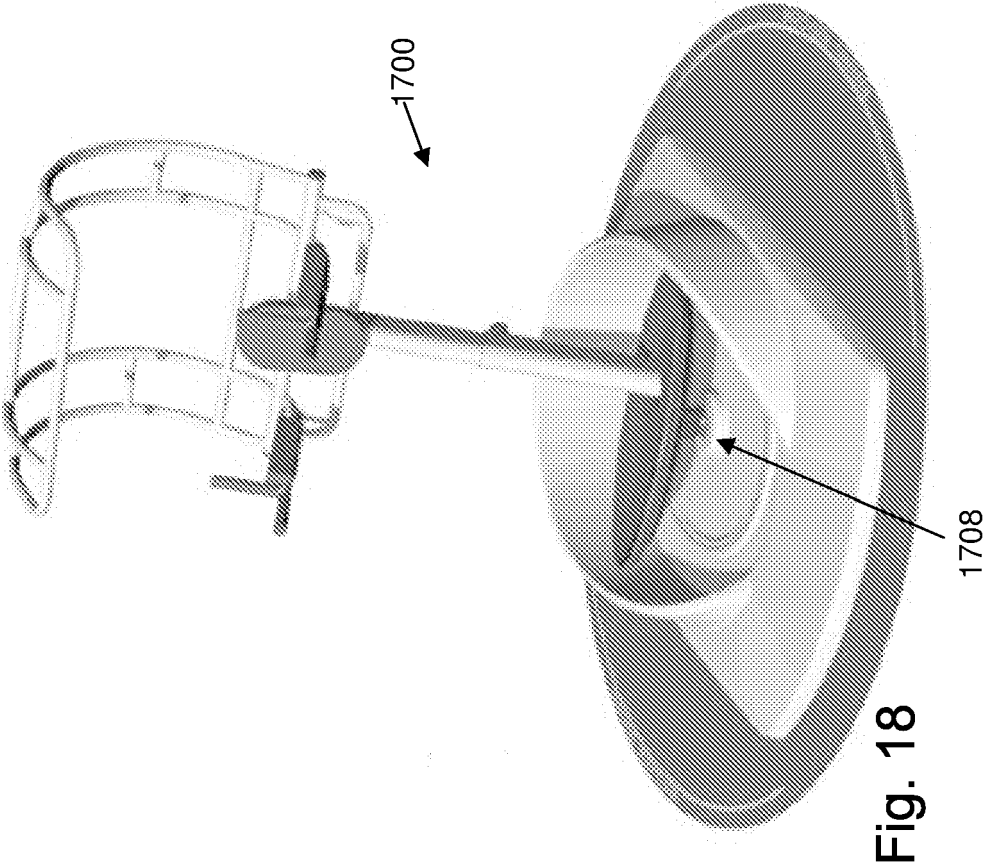


Fig. 19


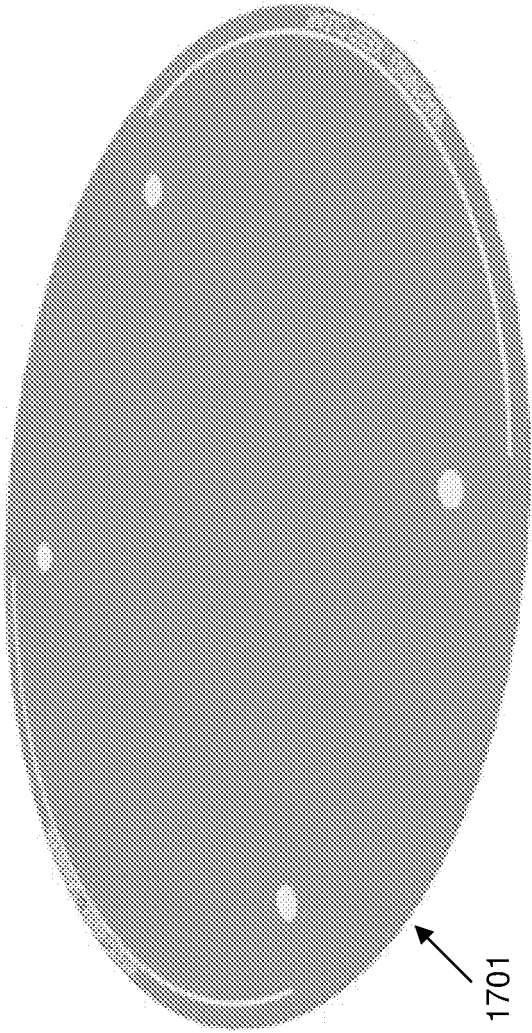


Fig. 20

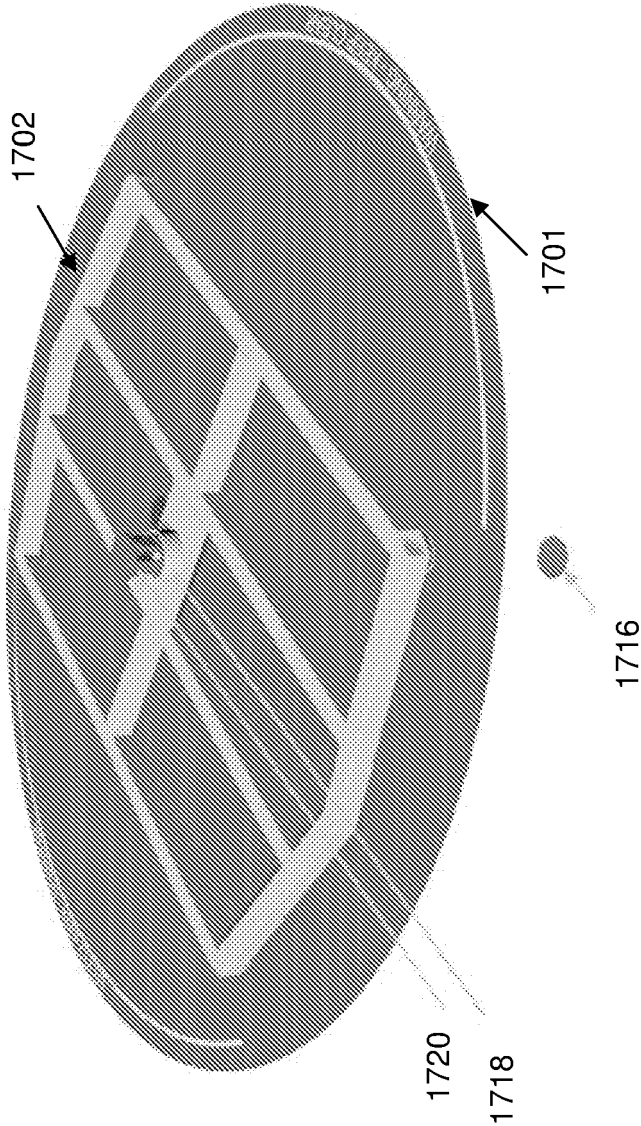

10/28

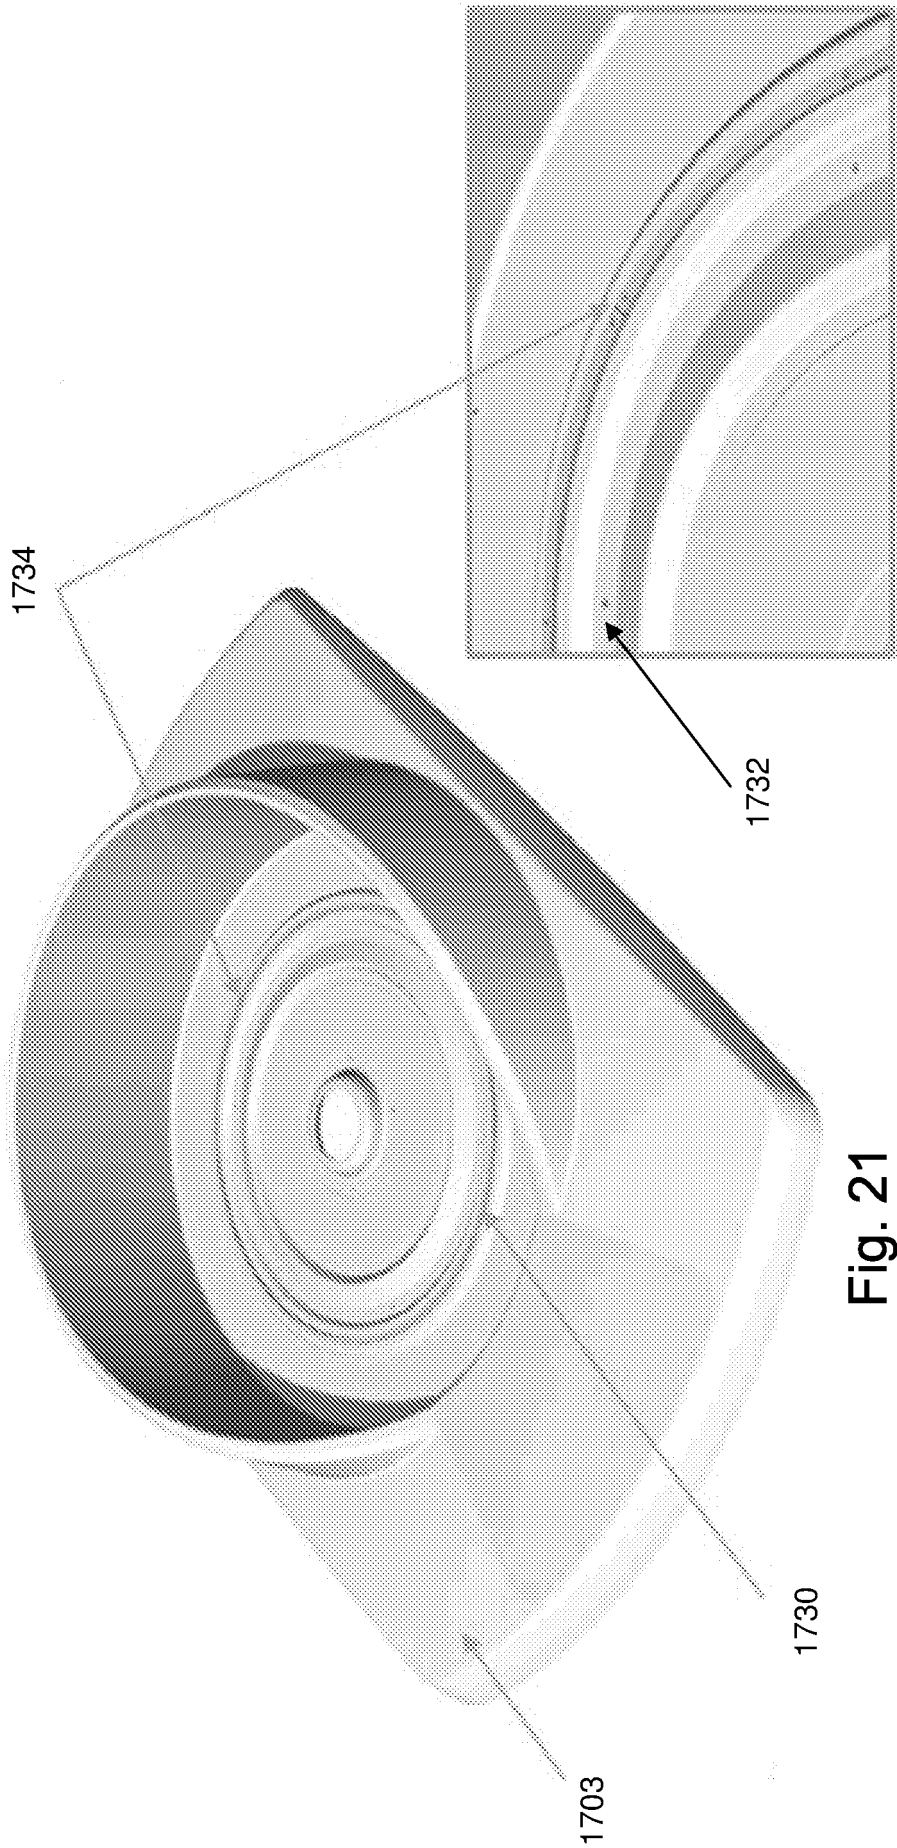


Fig. 21

Fig. 21A


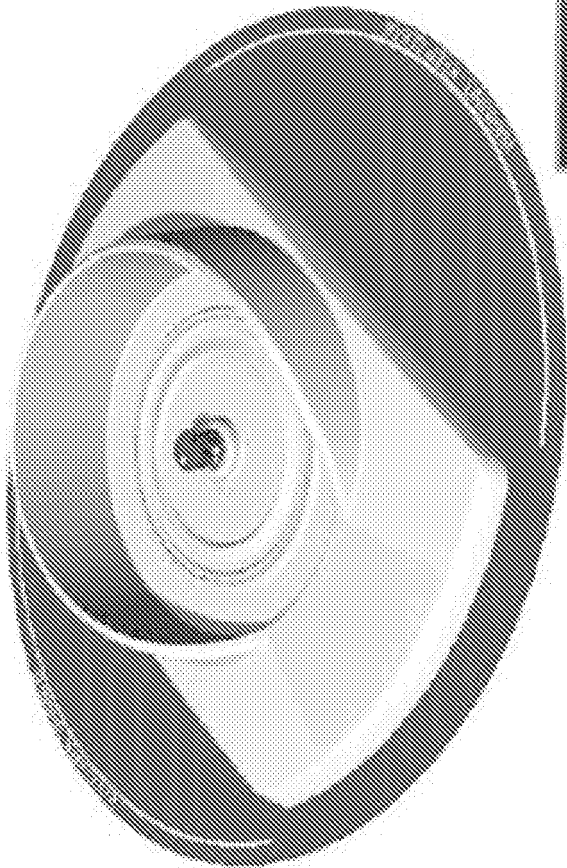


Fig. 22

1740

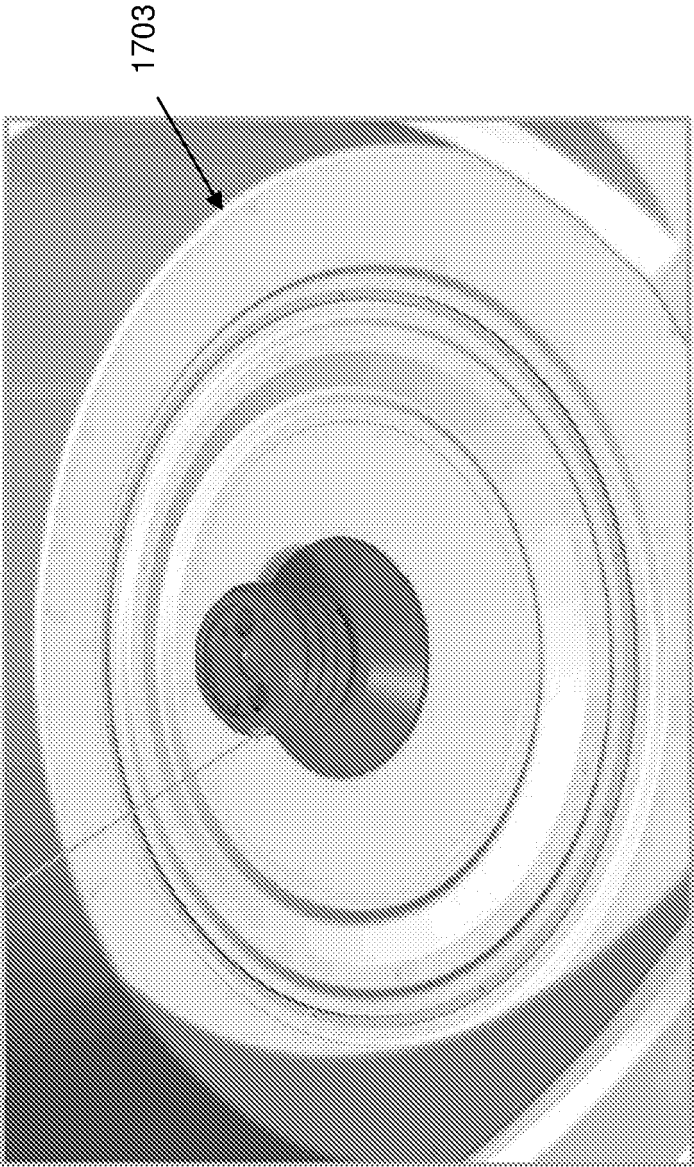

1703

Fig. 23

12/28

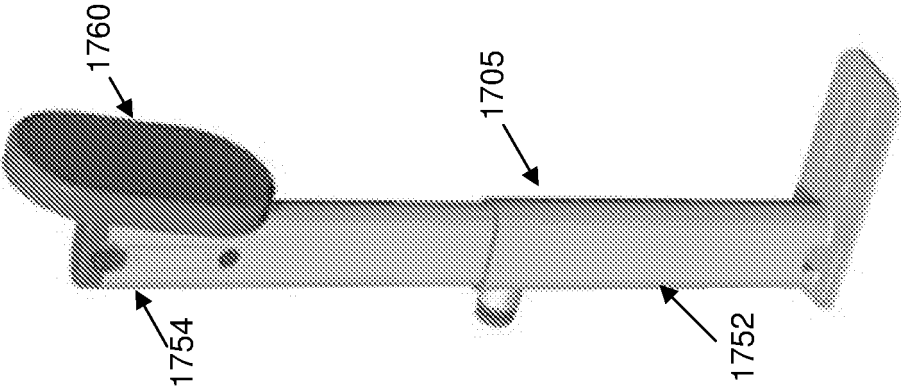


Fig. 25

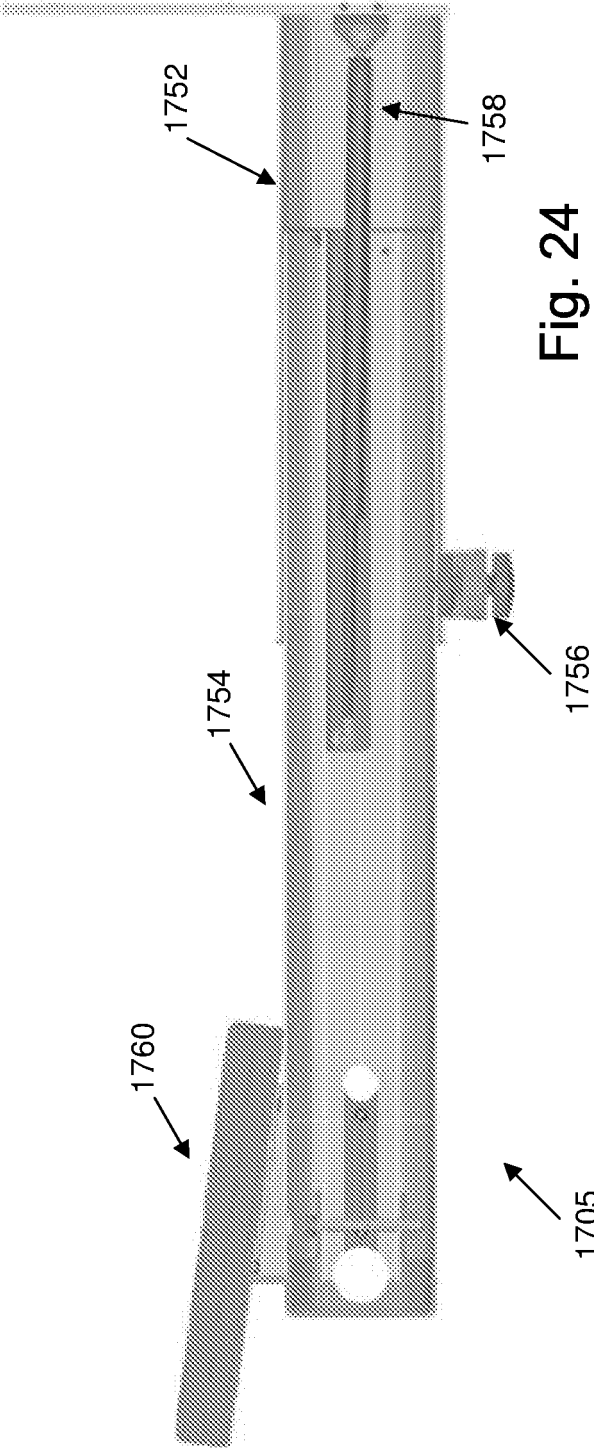


Fig. 24

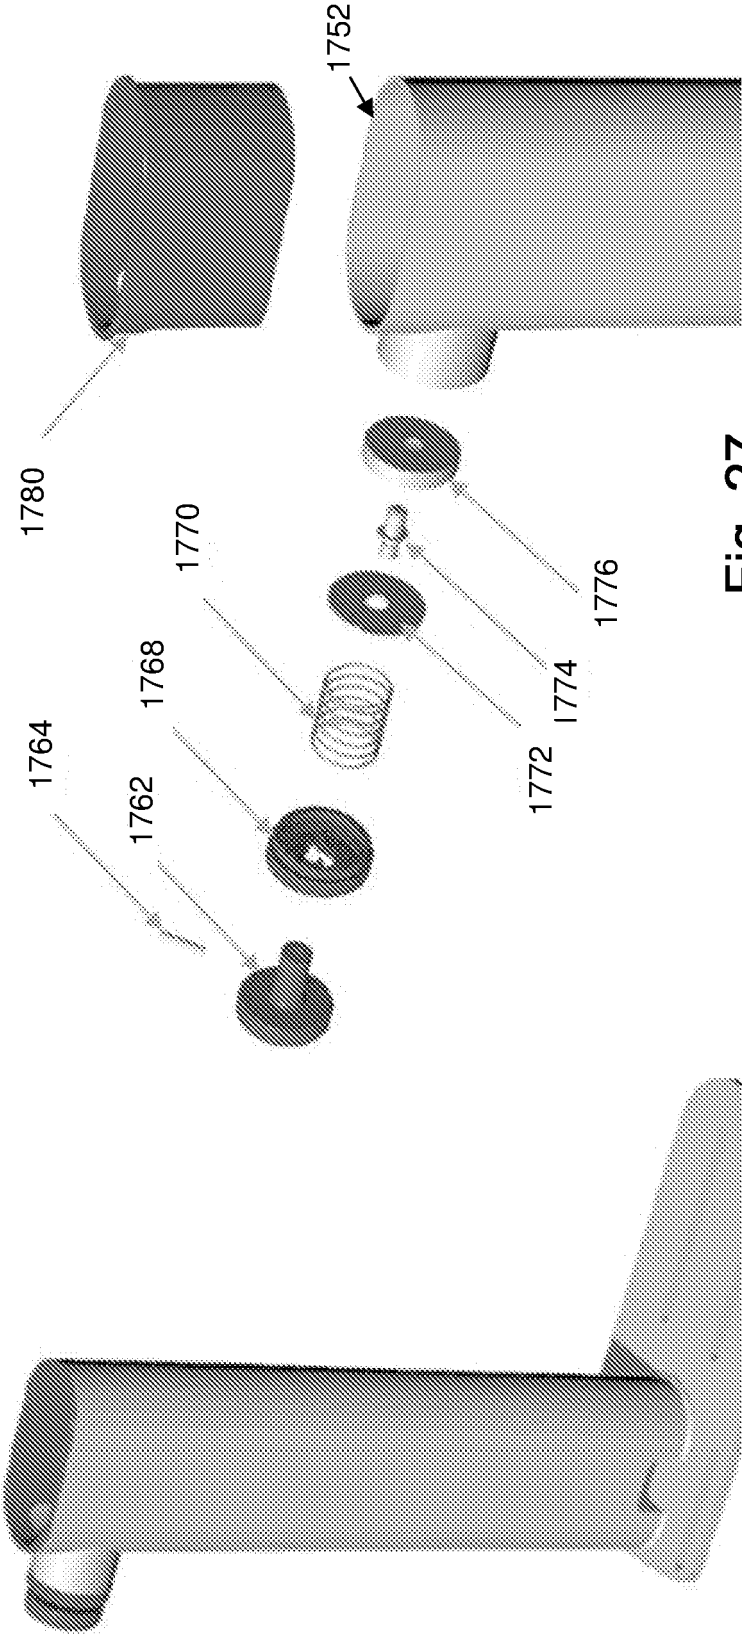


Fig. 27

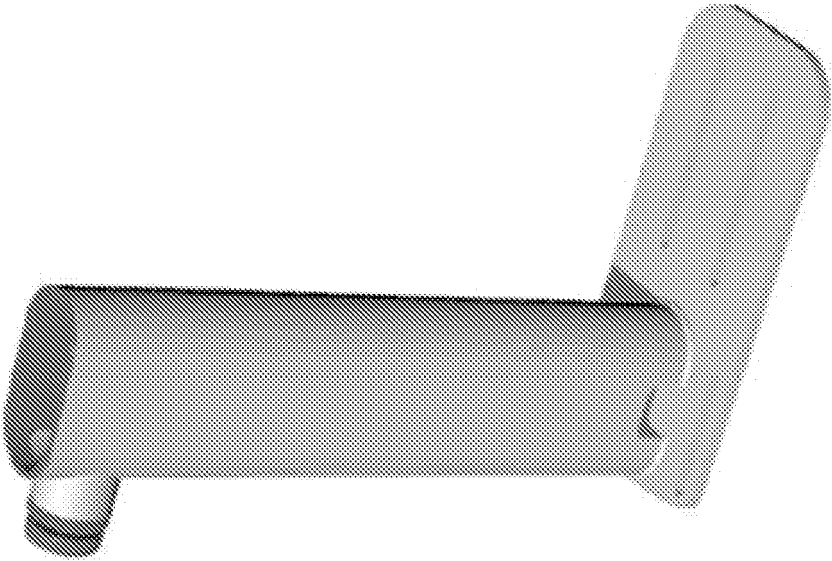
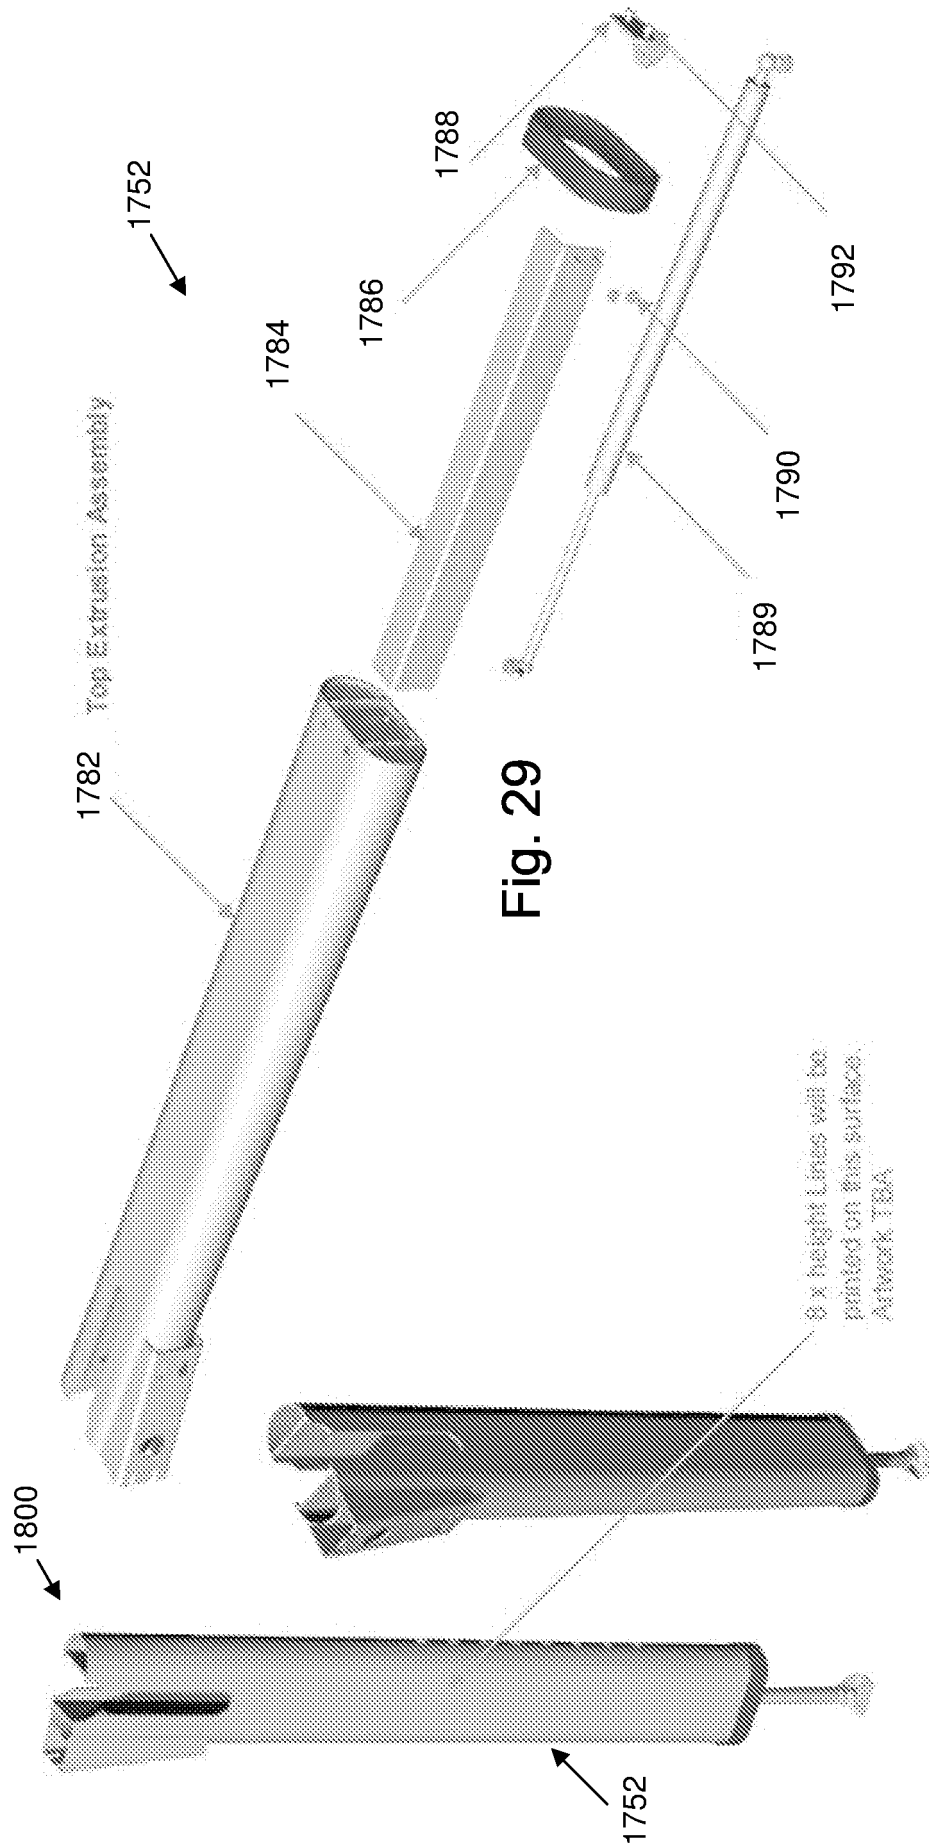
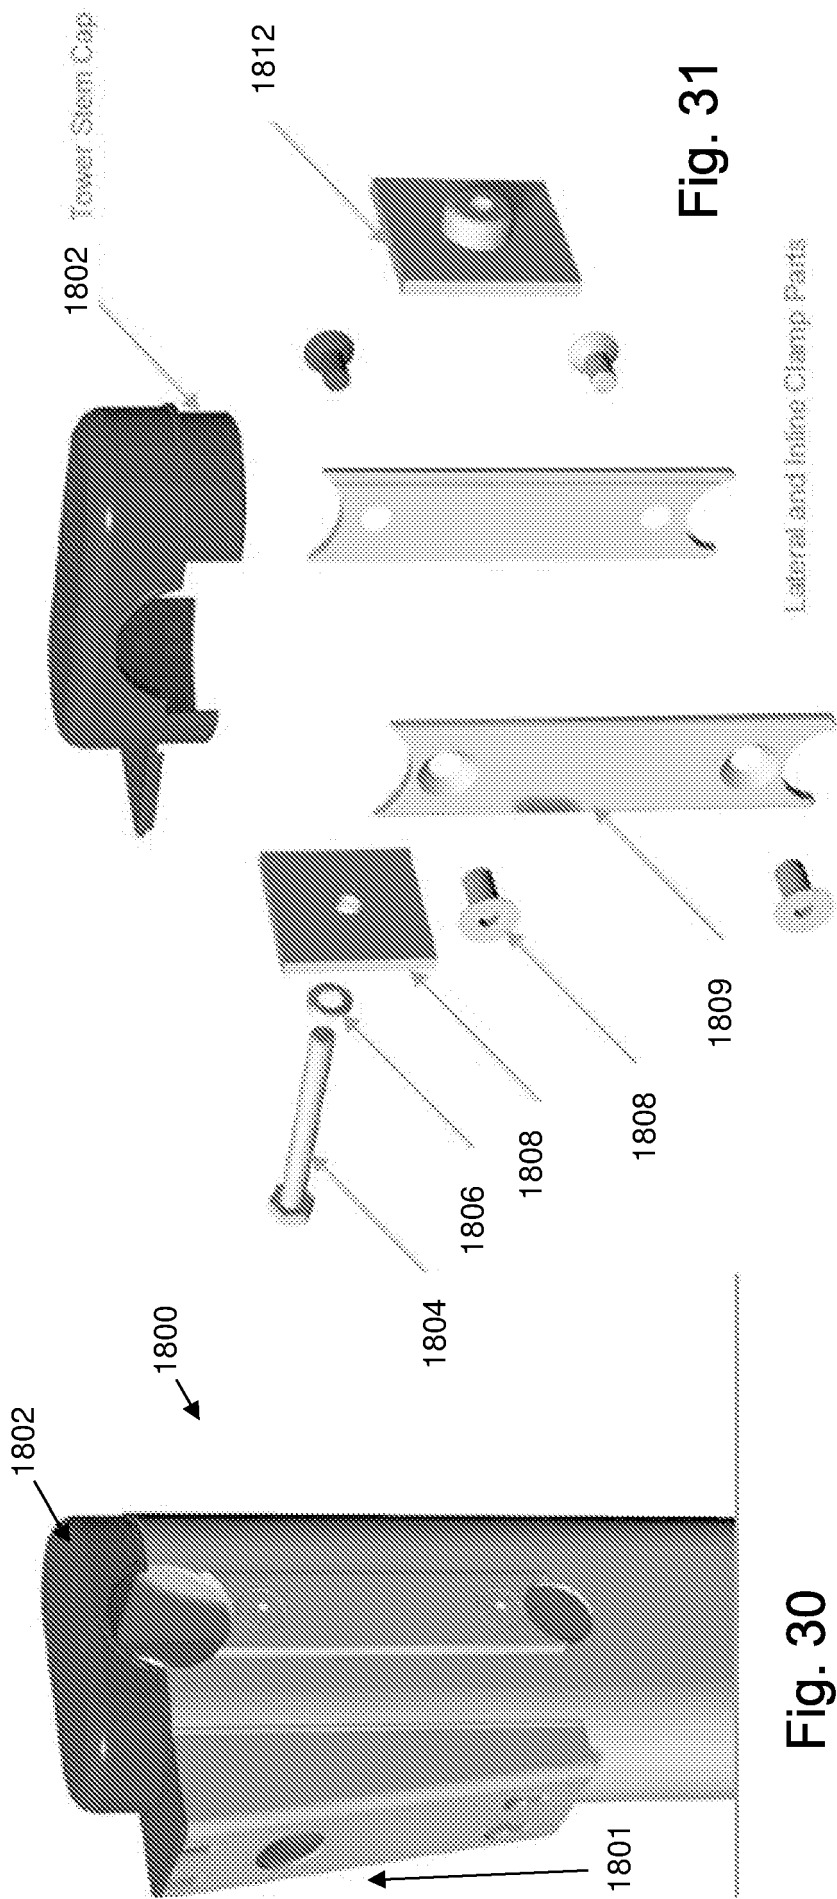


Fig. 26





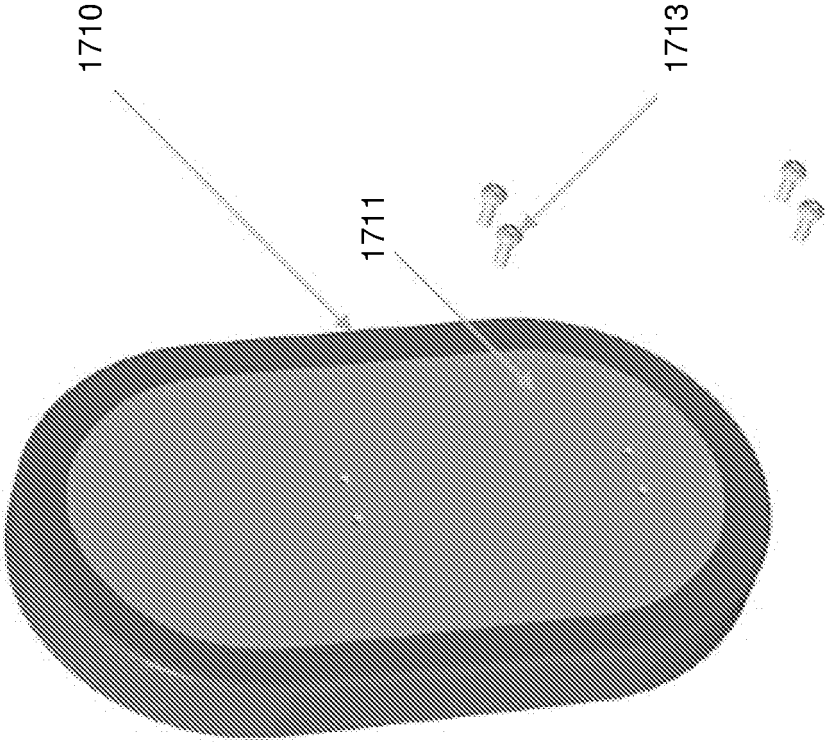


Fig. 32

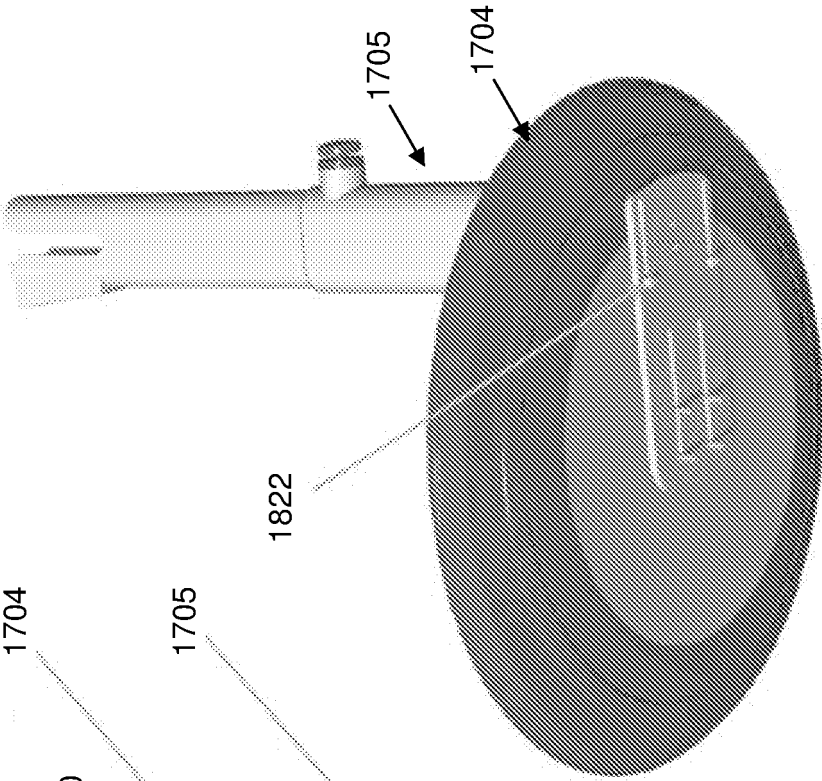


Fig. 34

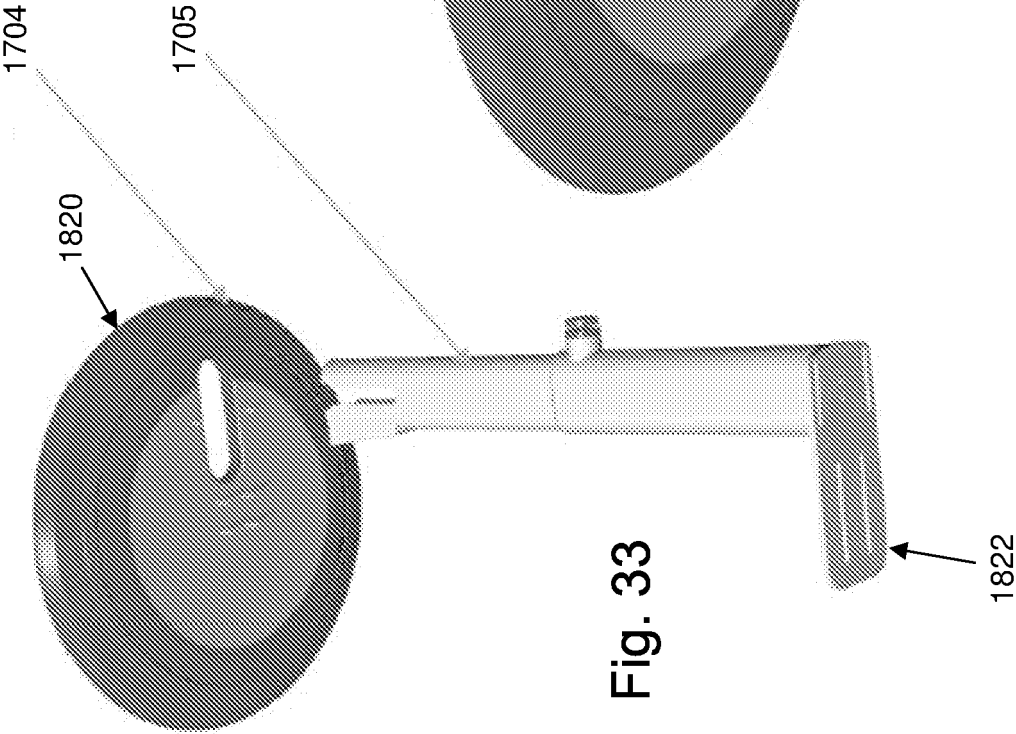
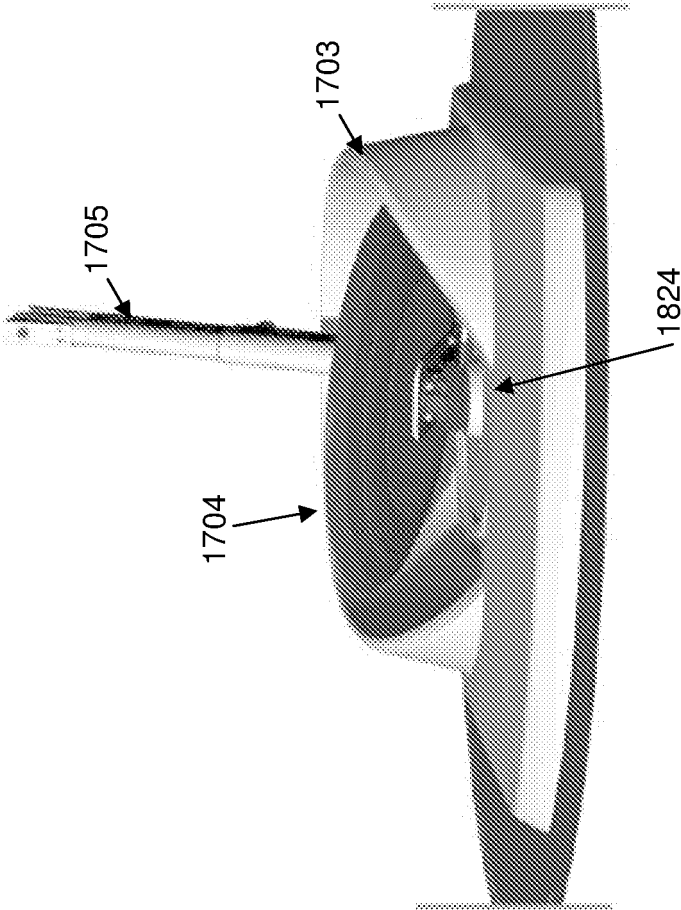
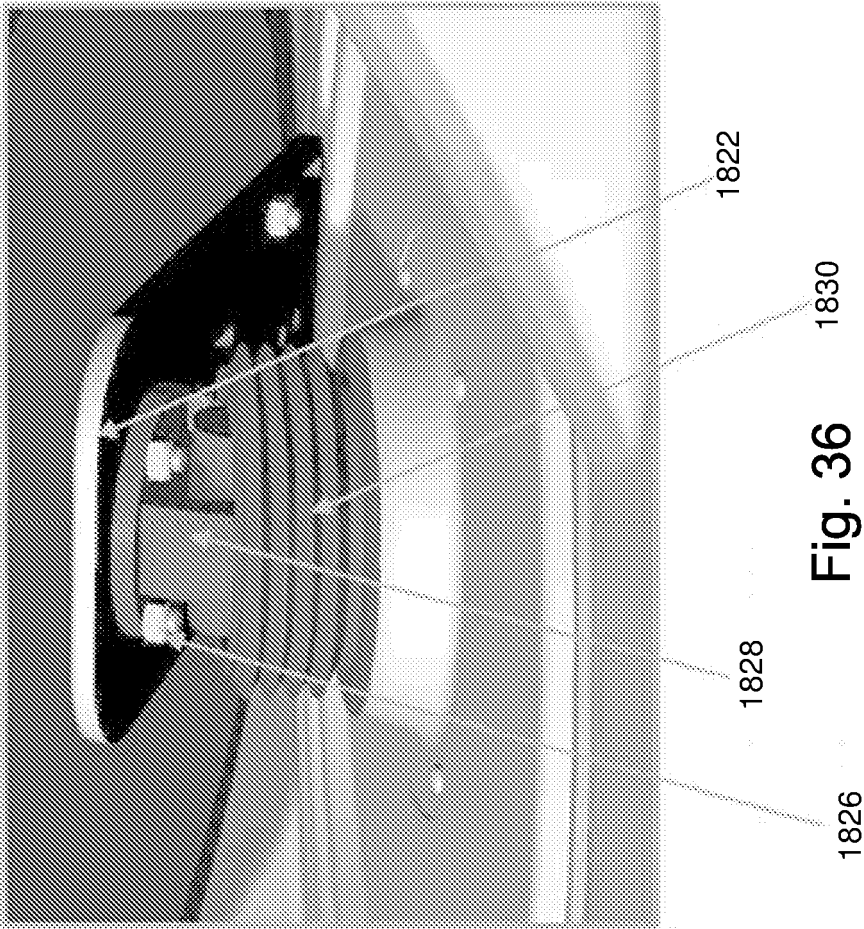


Fig. 33



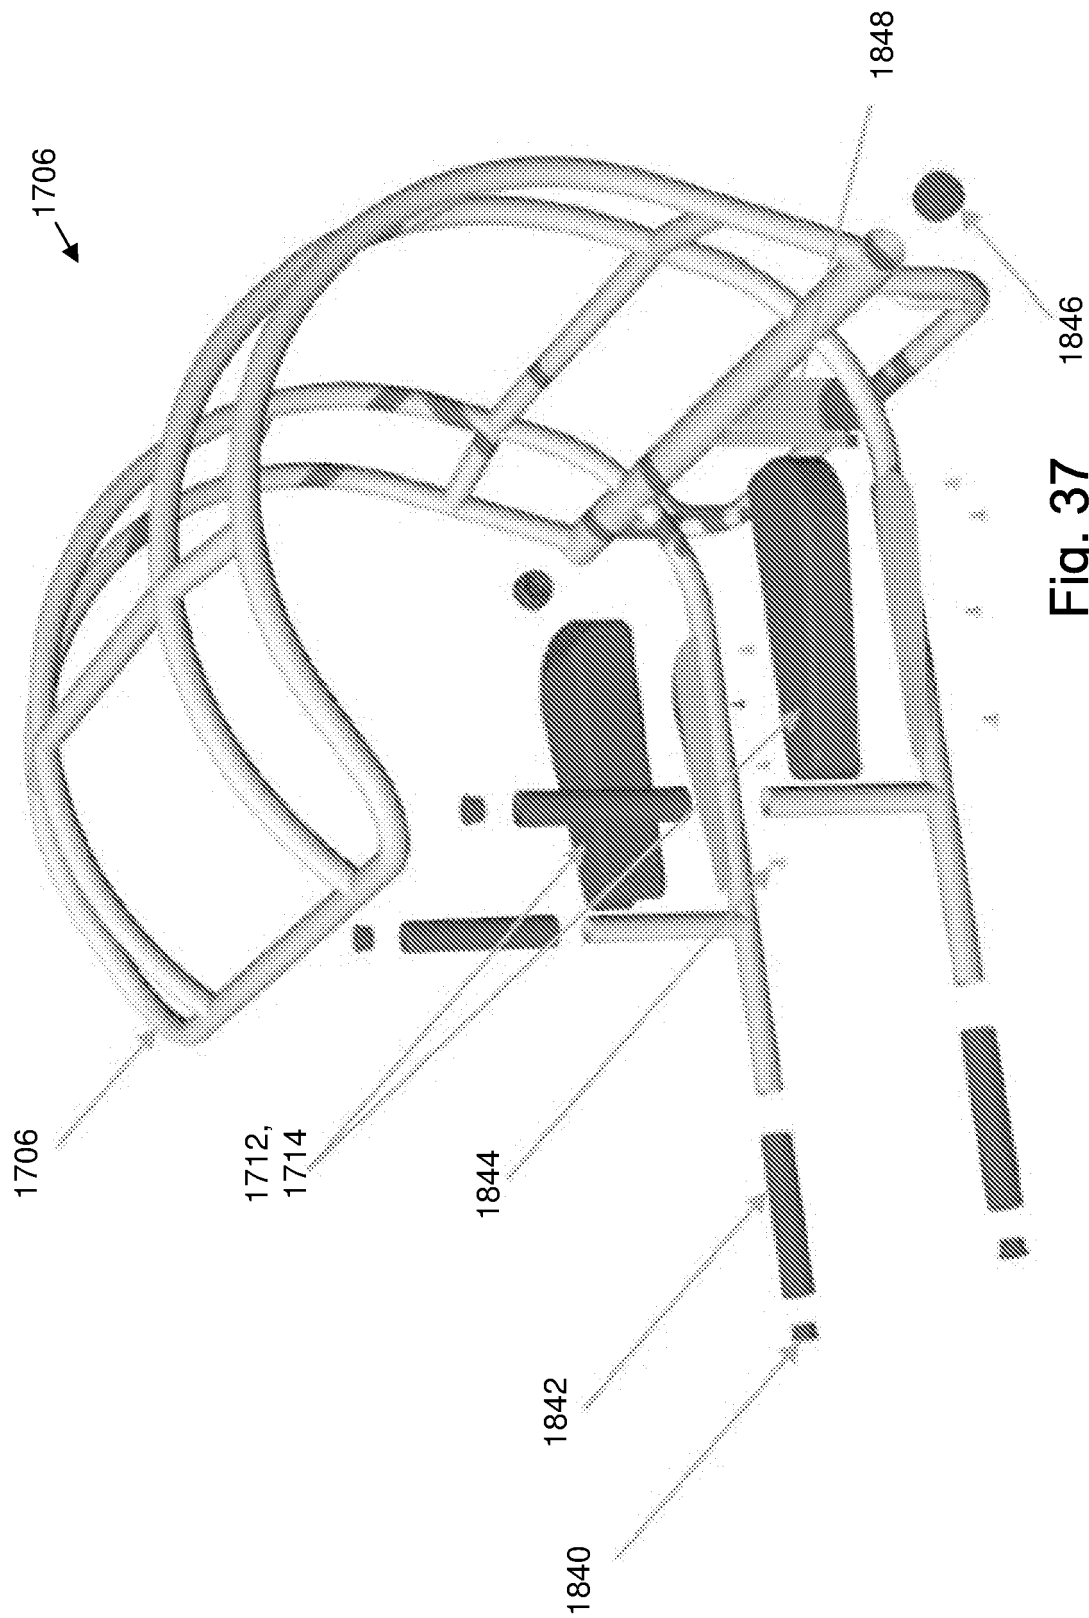


Fig. 37


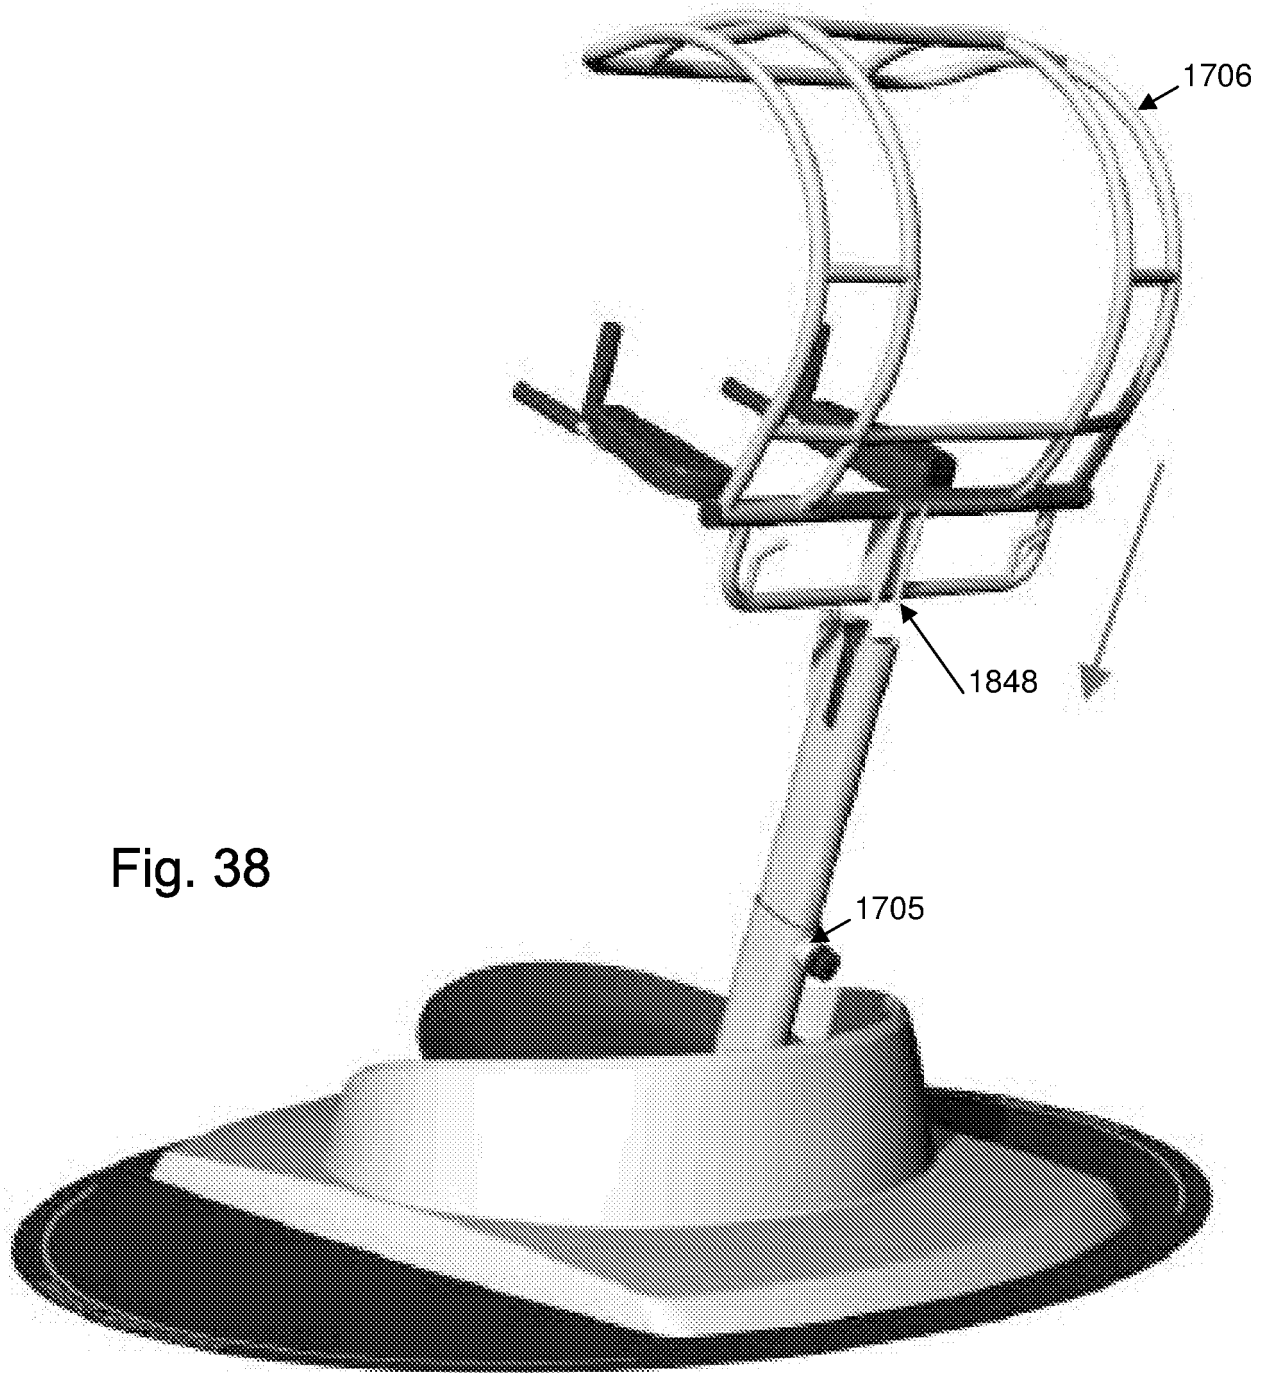


Fig. 38

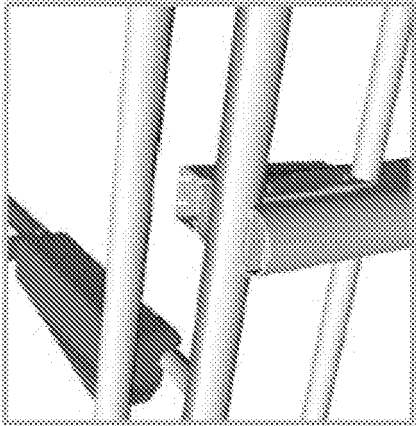

2. Assemble the Lateral and Inline Clamps joining the Frame to the Stem loosely. Once all are in place, tighten firmly.

Fig. 39

3. Assemble the Back Pad into place. Adjust the bottom two screws so they slide snugly into the their keyhole slots. Firmly tighten the top two screws

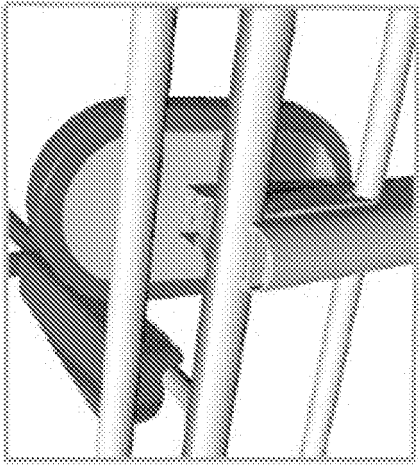


Fig. 40

4. Align and carefully knock the Tower Stem Cap into place

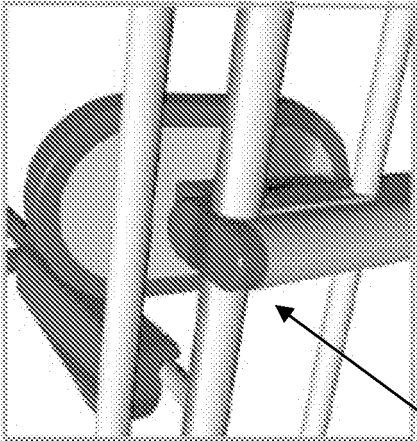


Fig. 41

1848

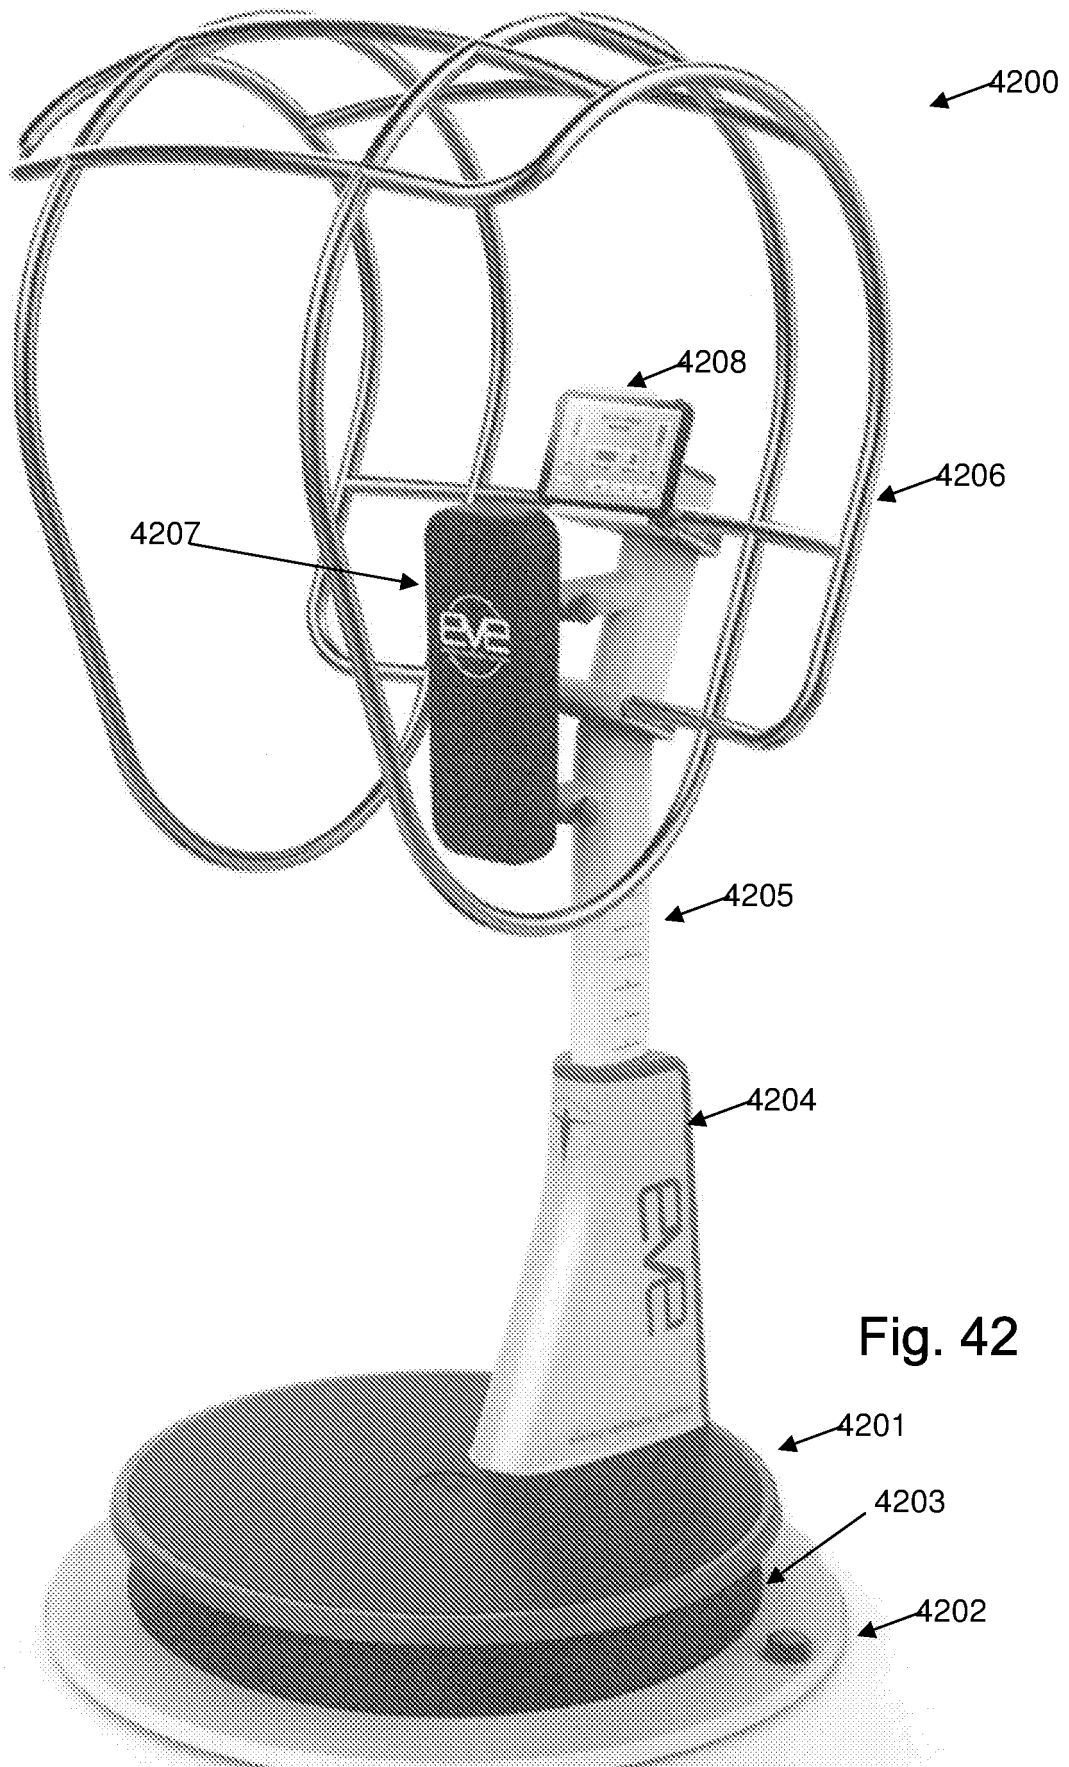


Fig. 42

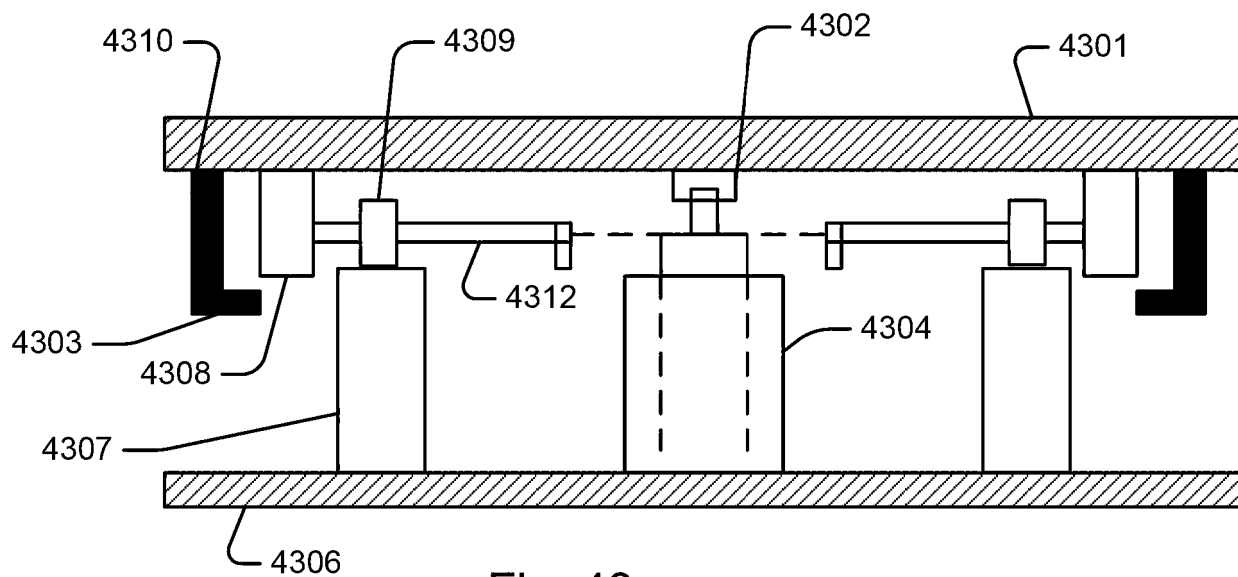


Fig. 43

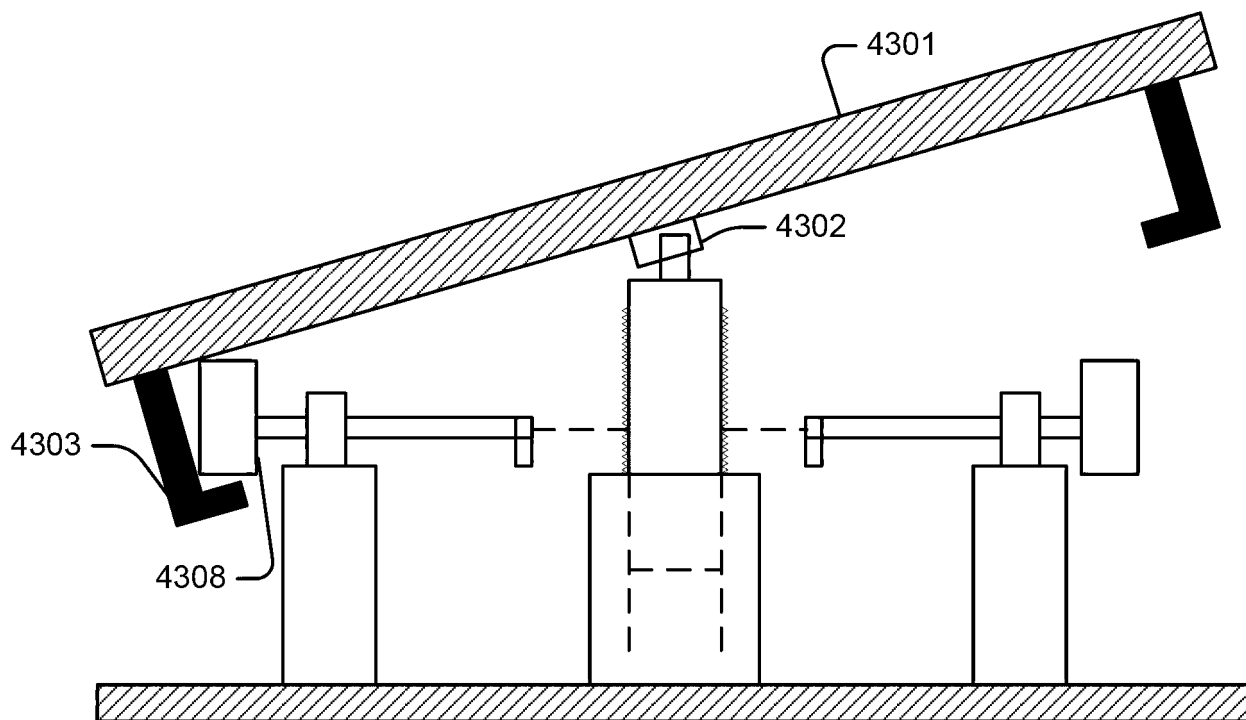
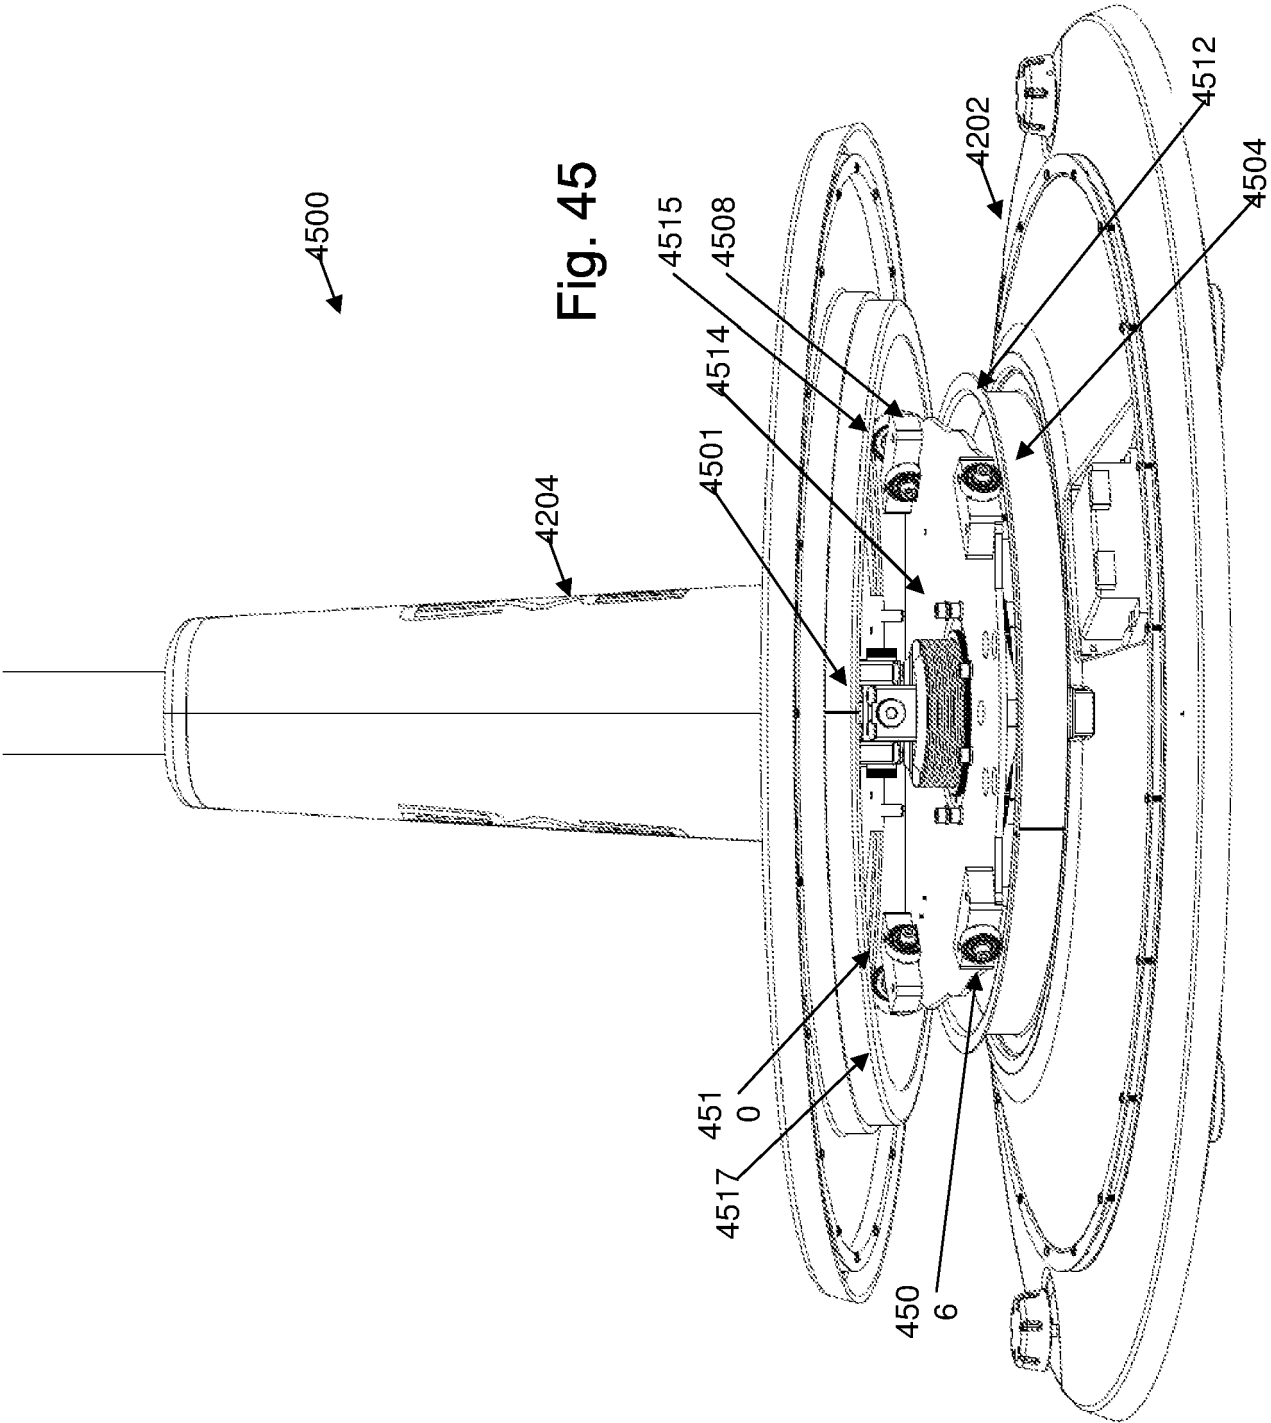
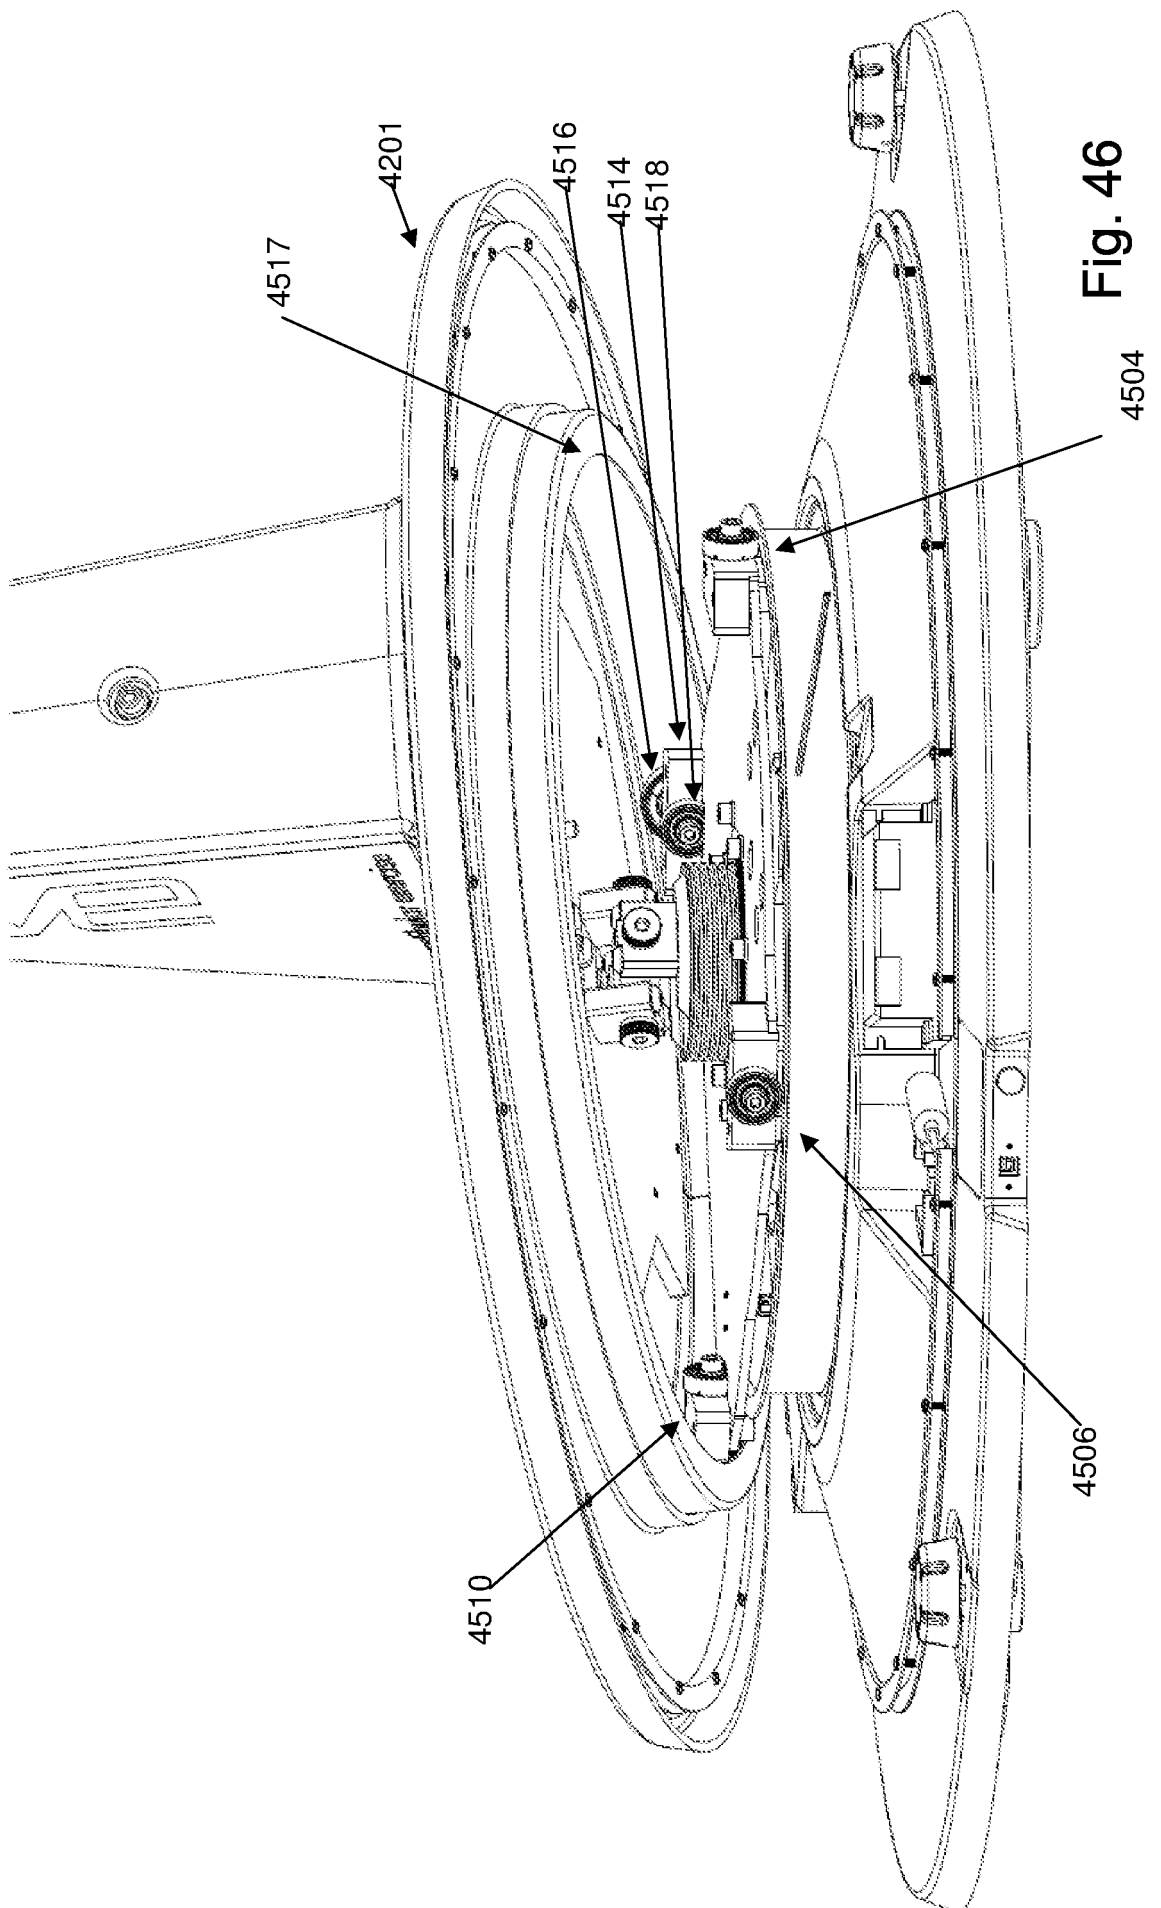
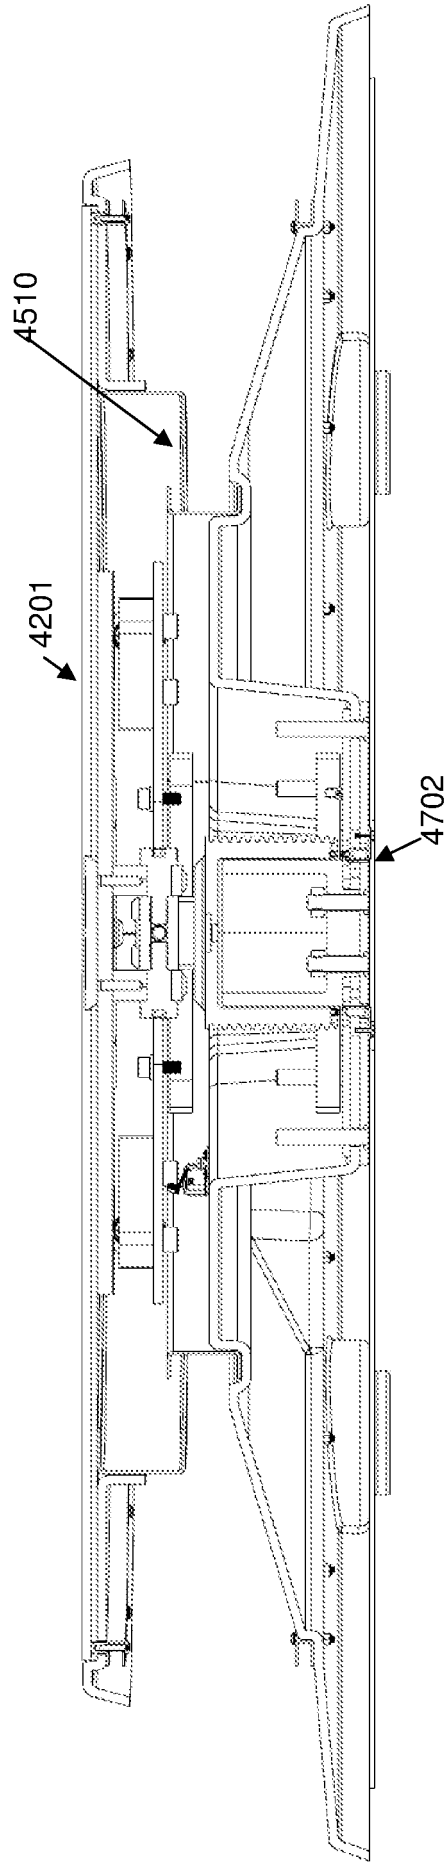
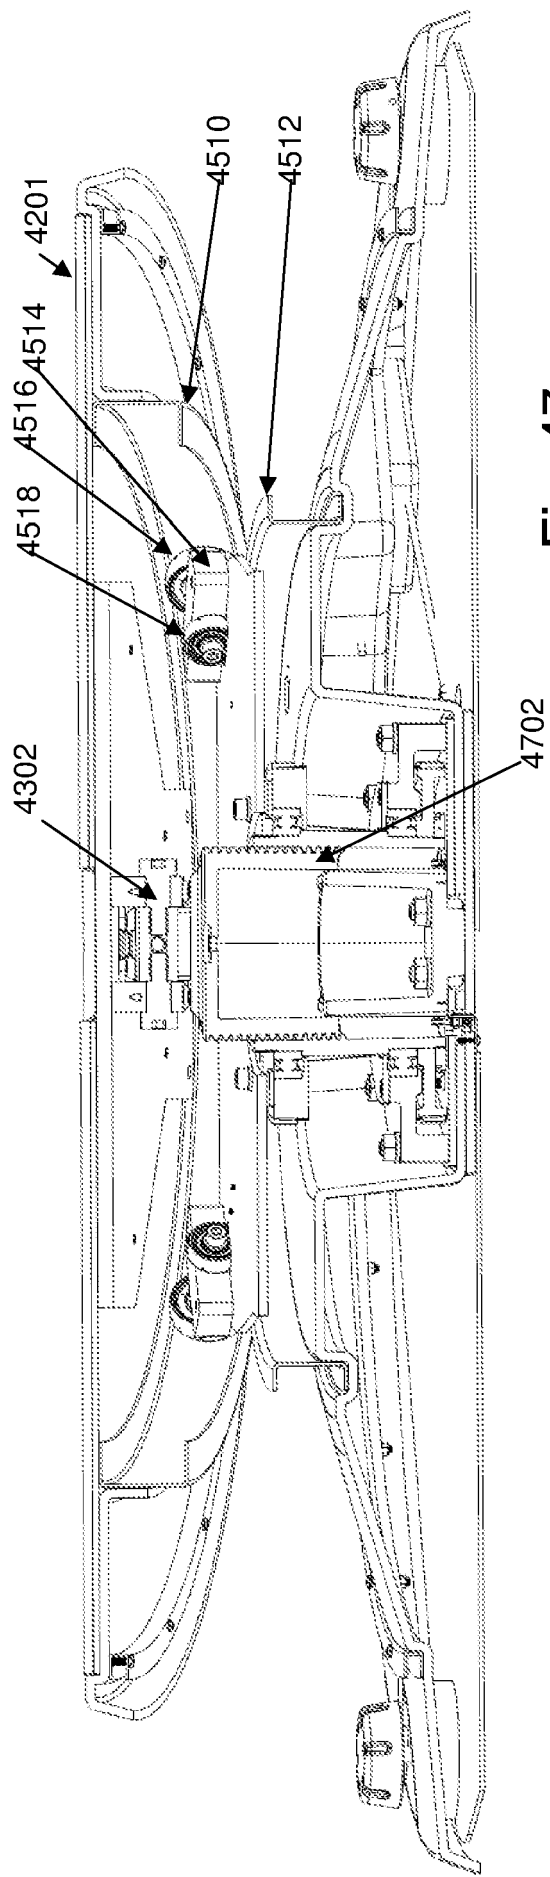


Fig. 44







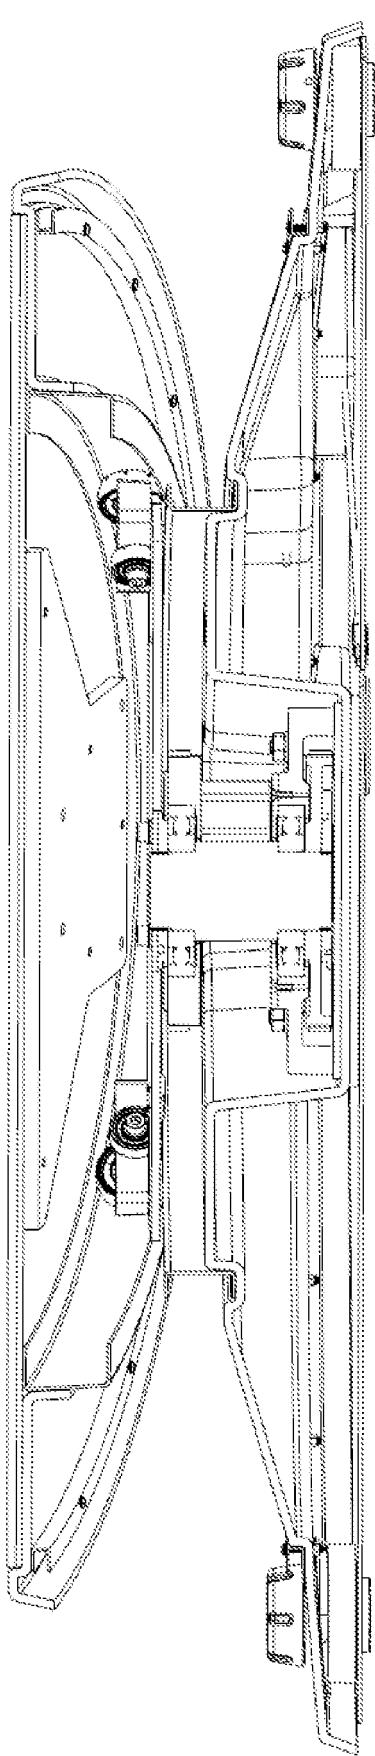


Fig. 49

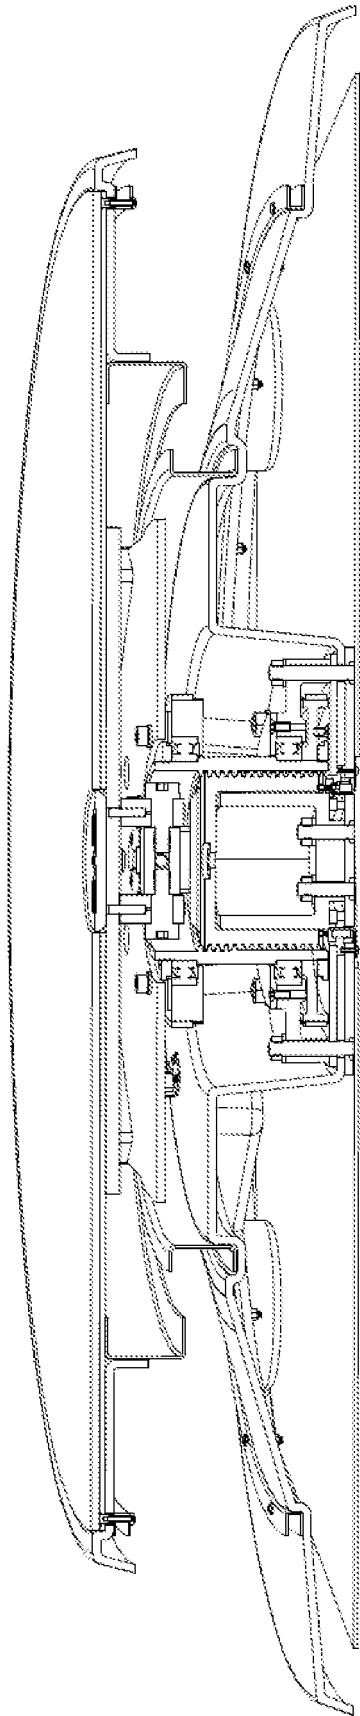


Fig. 50

Fig. 51

