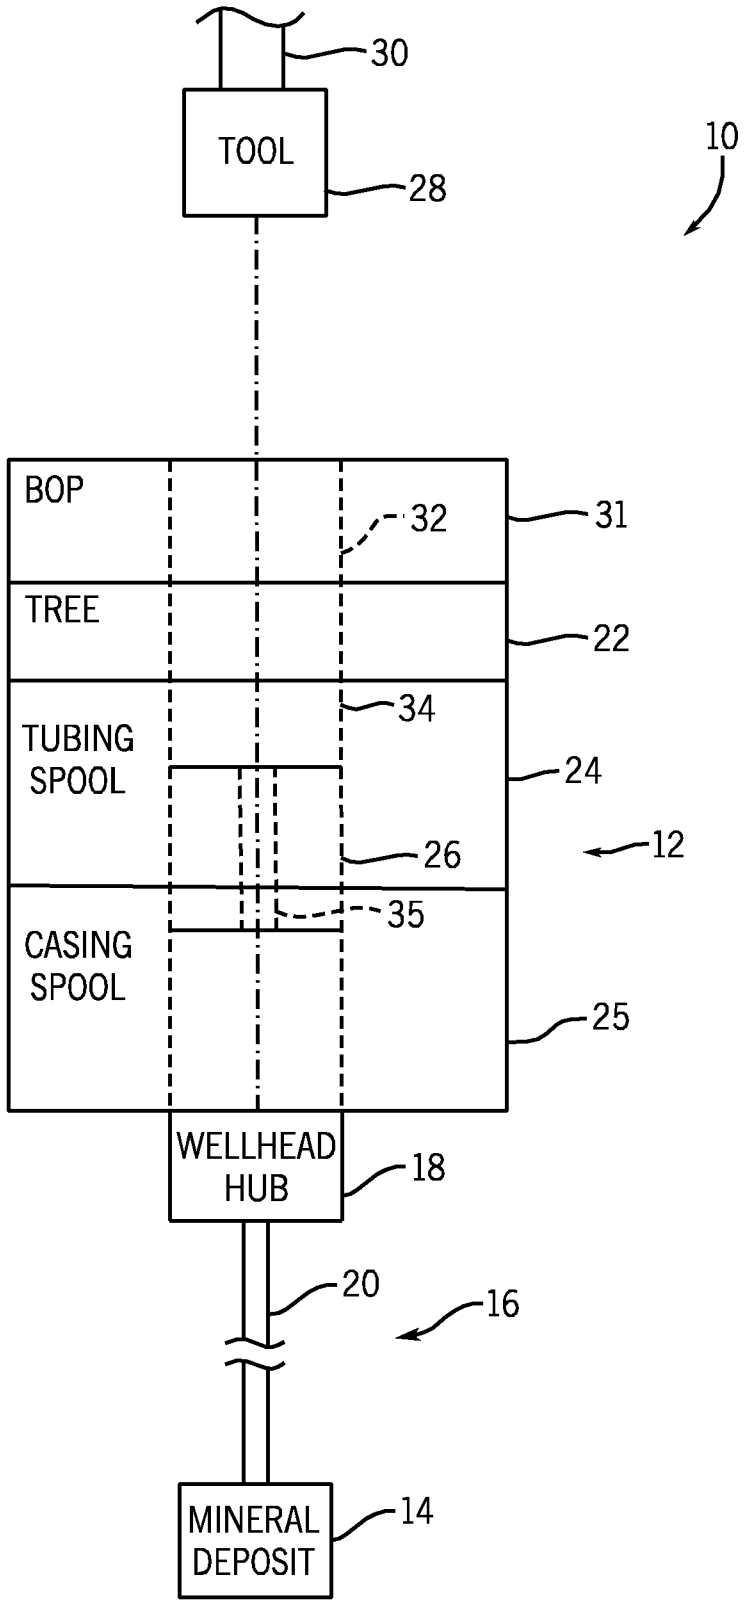

30
TOOL
28
10
BOP
32
31
TREE
22
34
TUBING SPOOL
24
26
12
35
CASING SPOOL
25
WELLHEAD HUB
18
20
16
MINERAL DEPOSIT
14

FIG. 1

FIG. 2

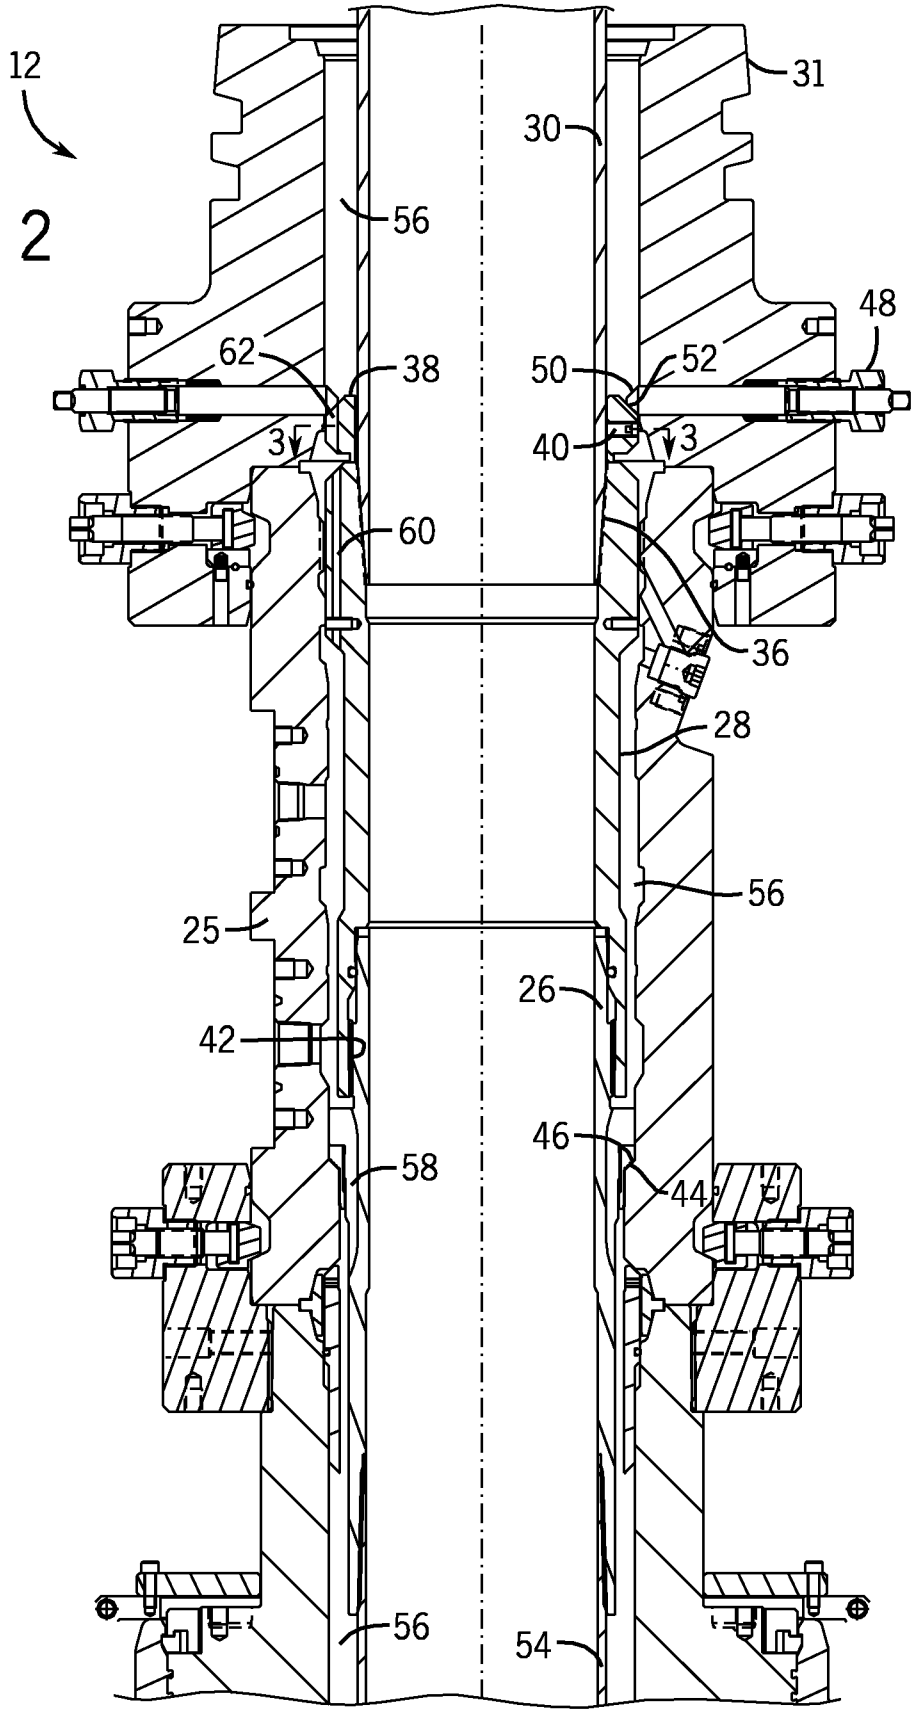
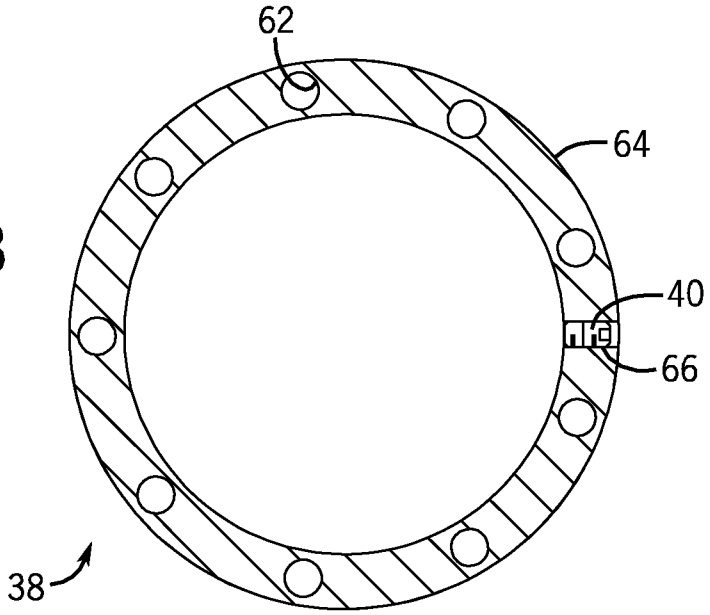


FIG. 3



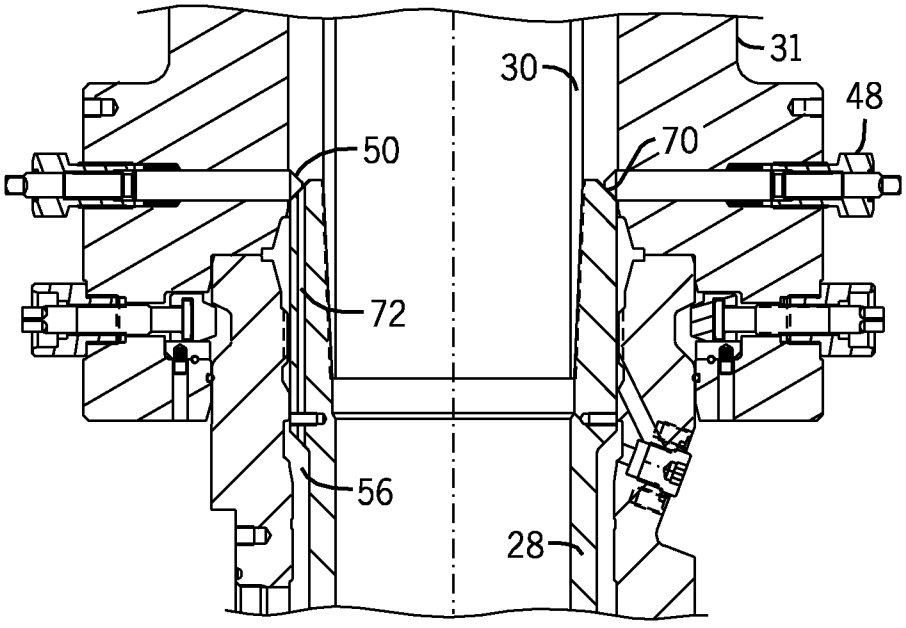


FIG. 4

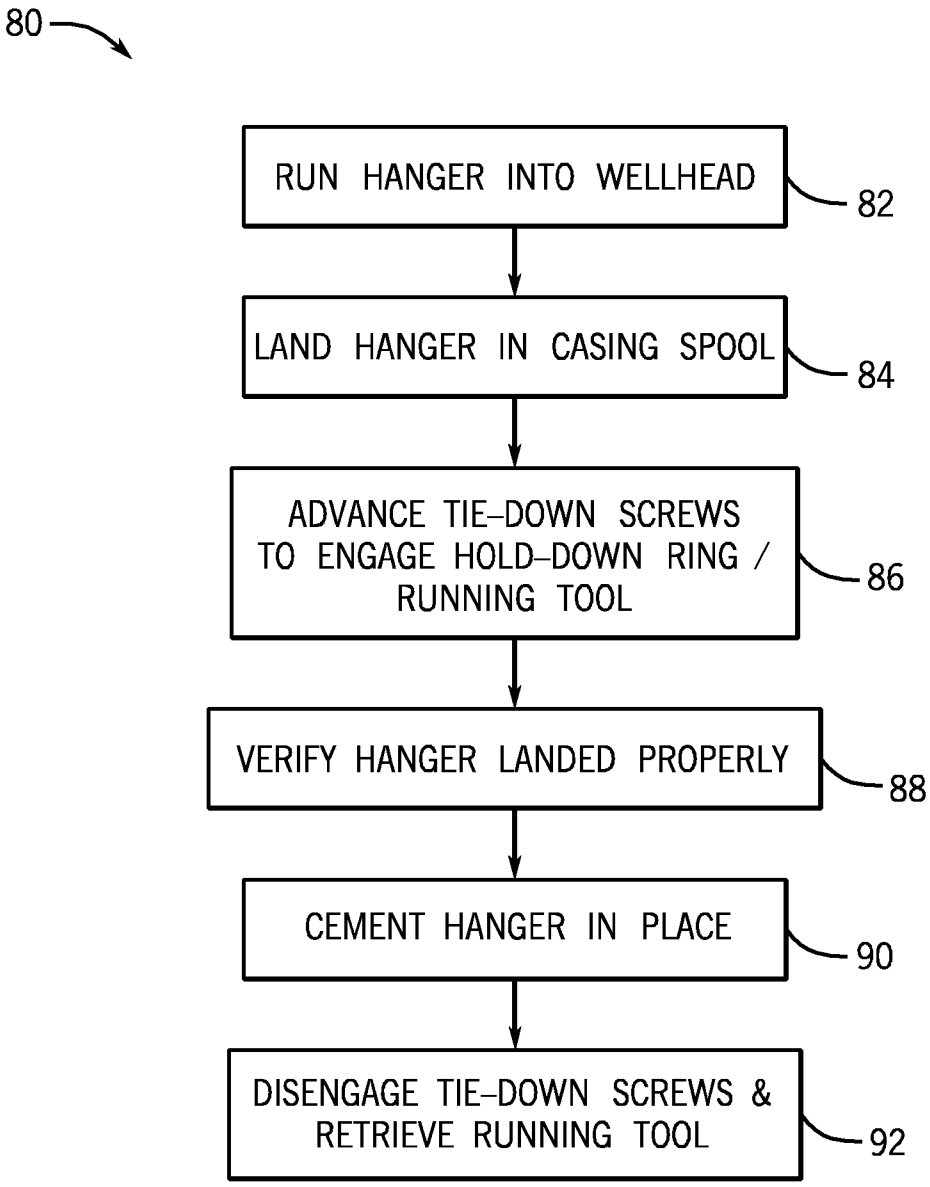

80
RUN HANGER INTO WELLHEAD
82
LAND HANGER IN CASING SPOOL
84
ADVANCE TIE-DOWN SCREWS TO ENGAGE HOLD-DOWN RING / RUNNING TOOL
86
VERIFY HANGER LANDED PROPERLY
88
CEMENT HANGER IN PLACE
90
DISENGAGE TIE-DOWN SCREWS & RETRIEVE RUNNING TOOL
92

FIG. 5