

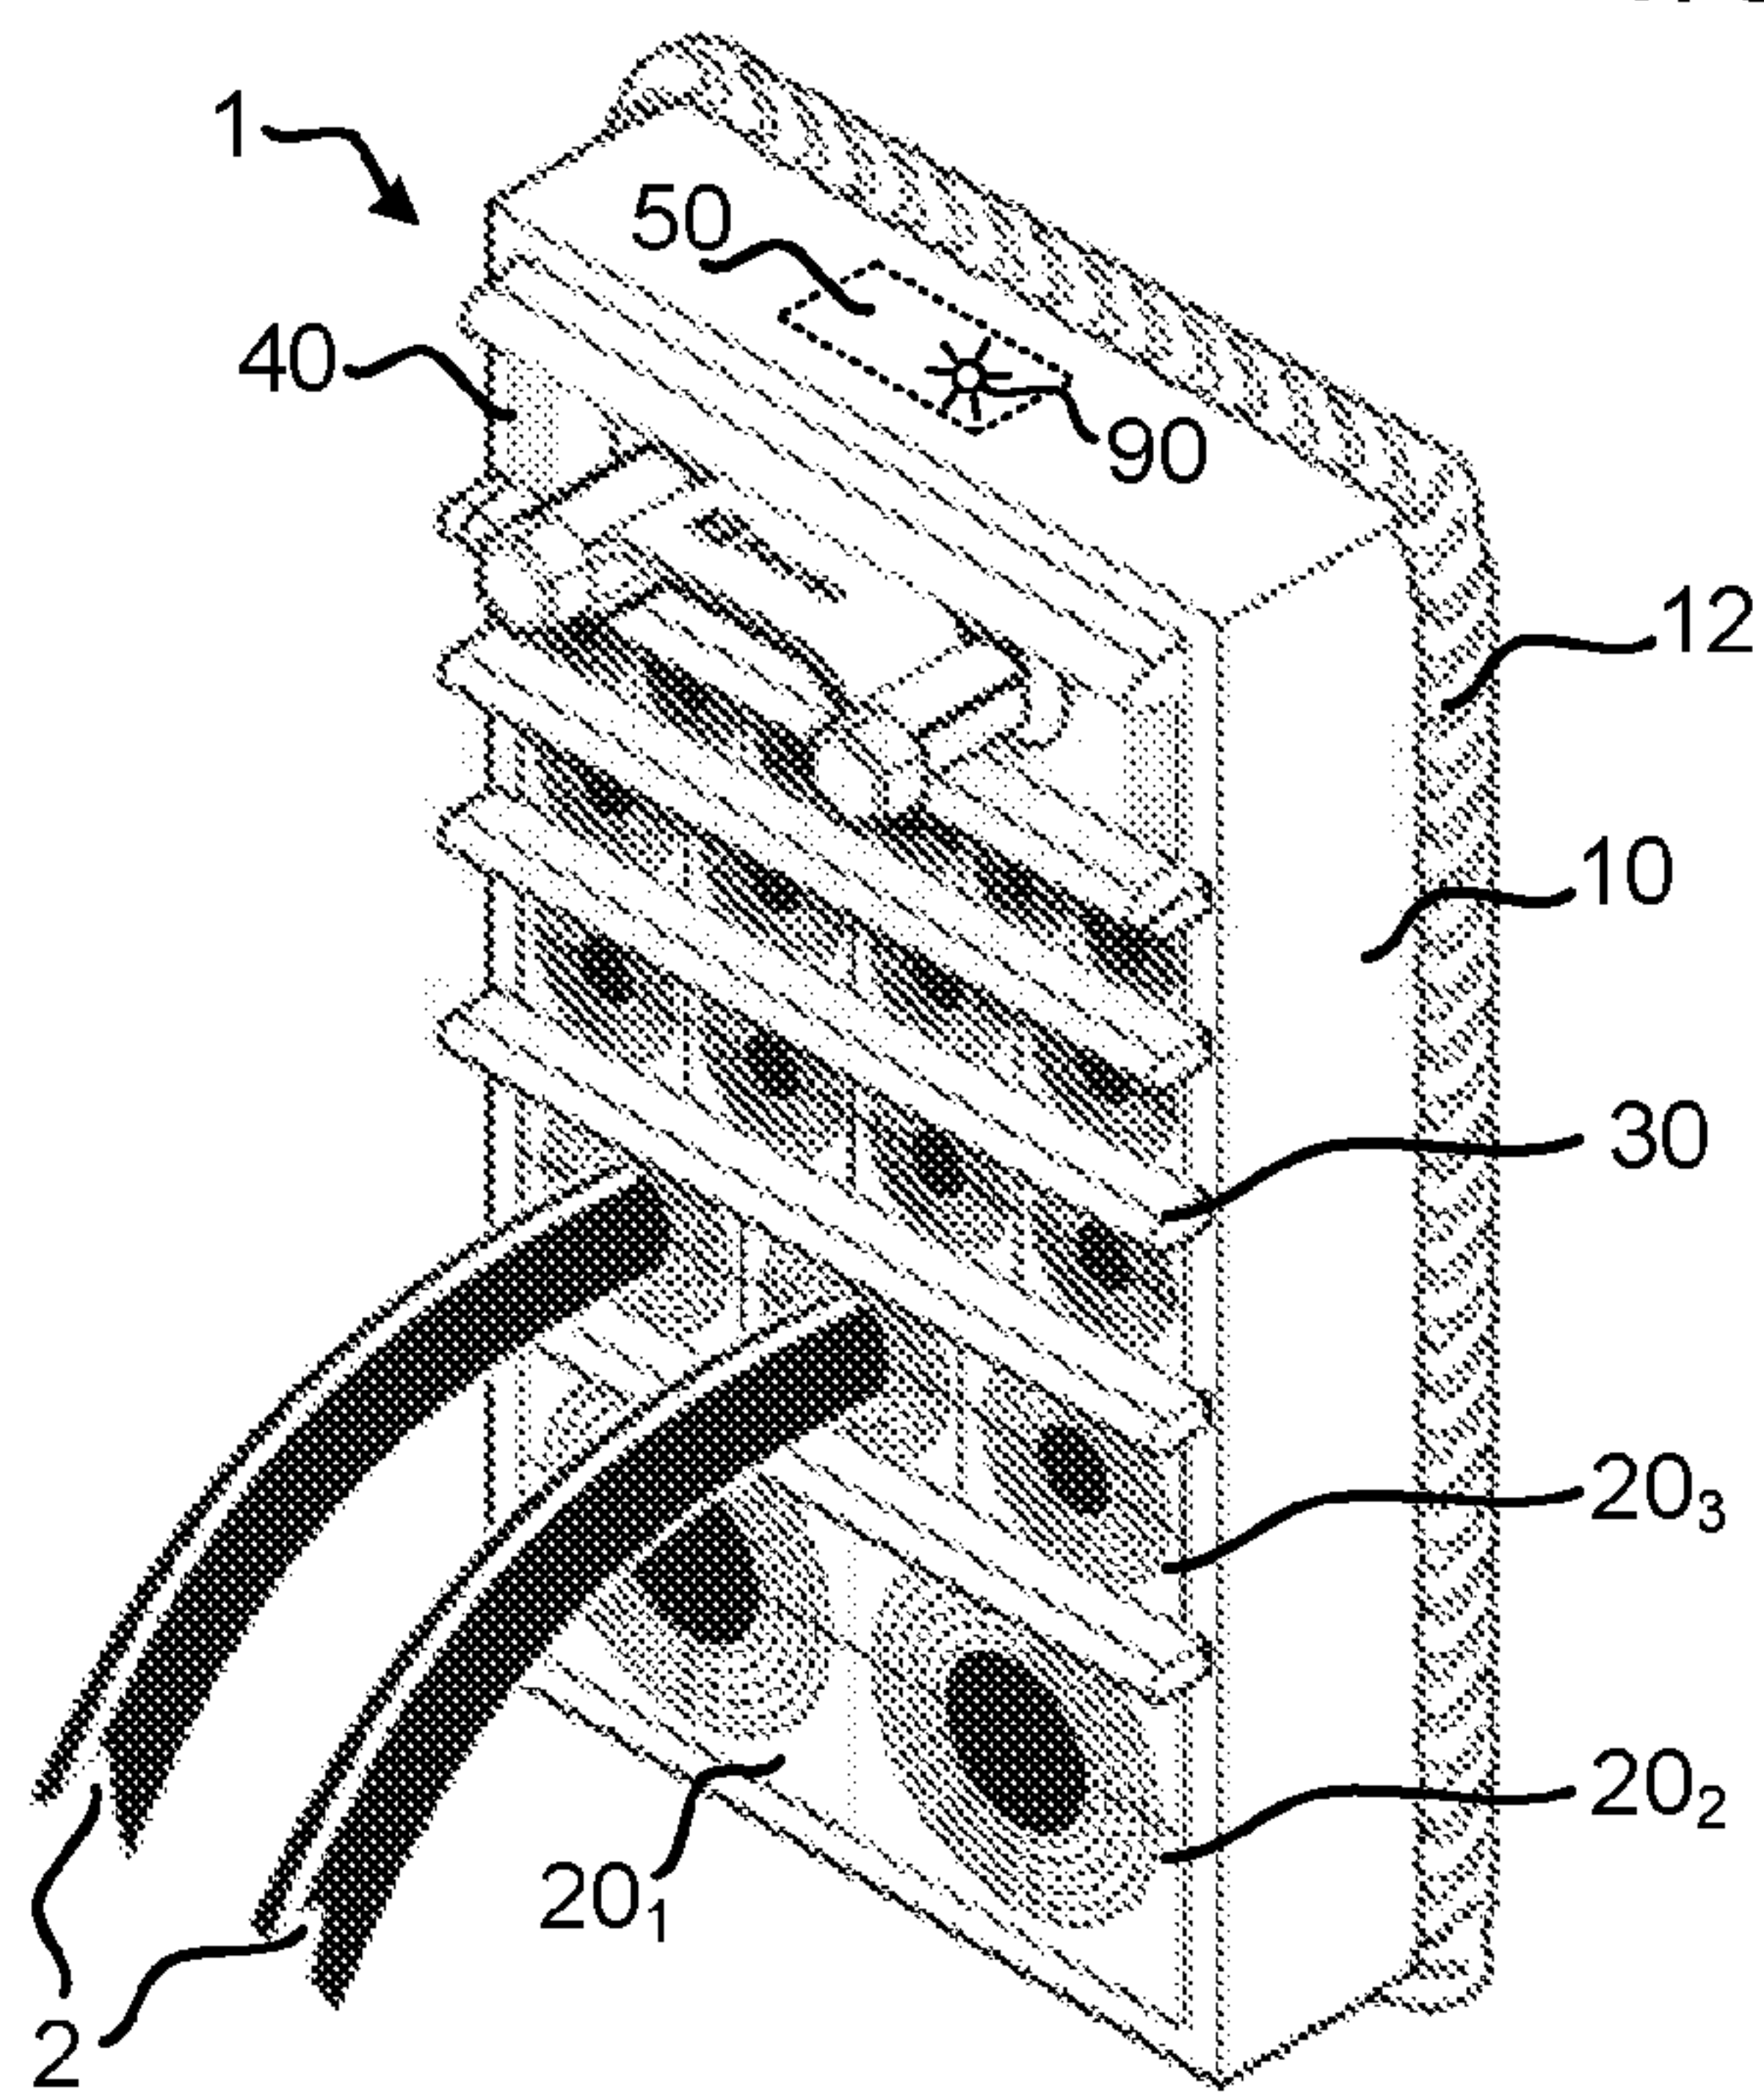


Fig 1

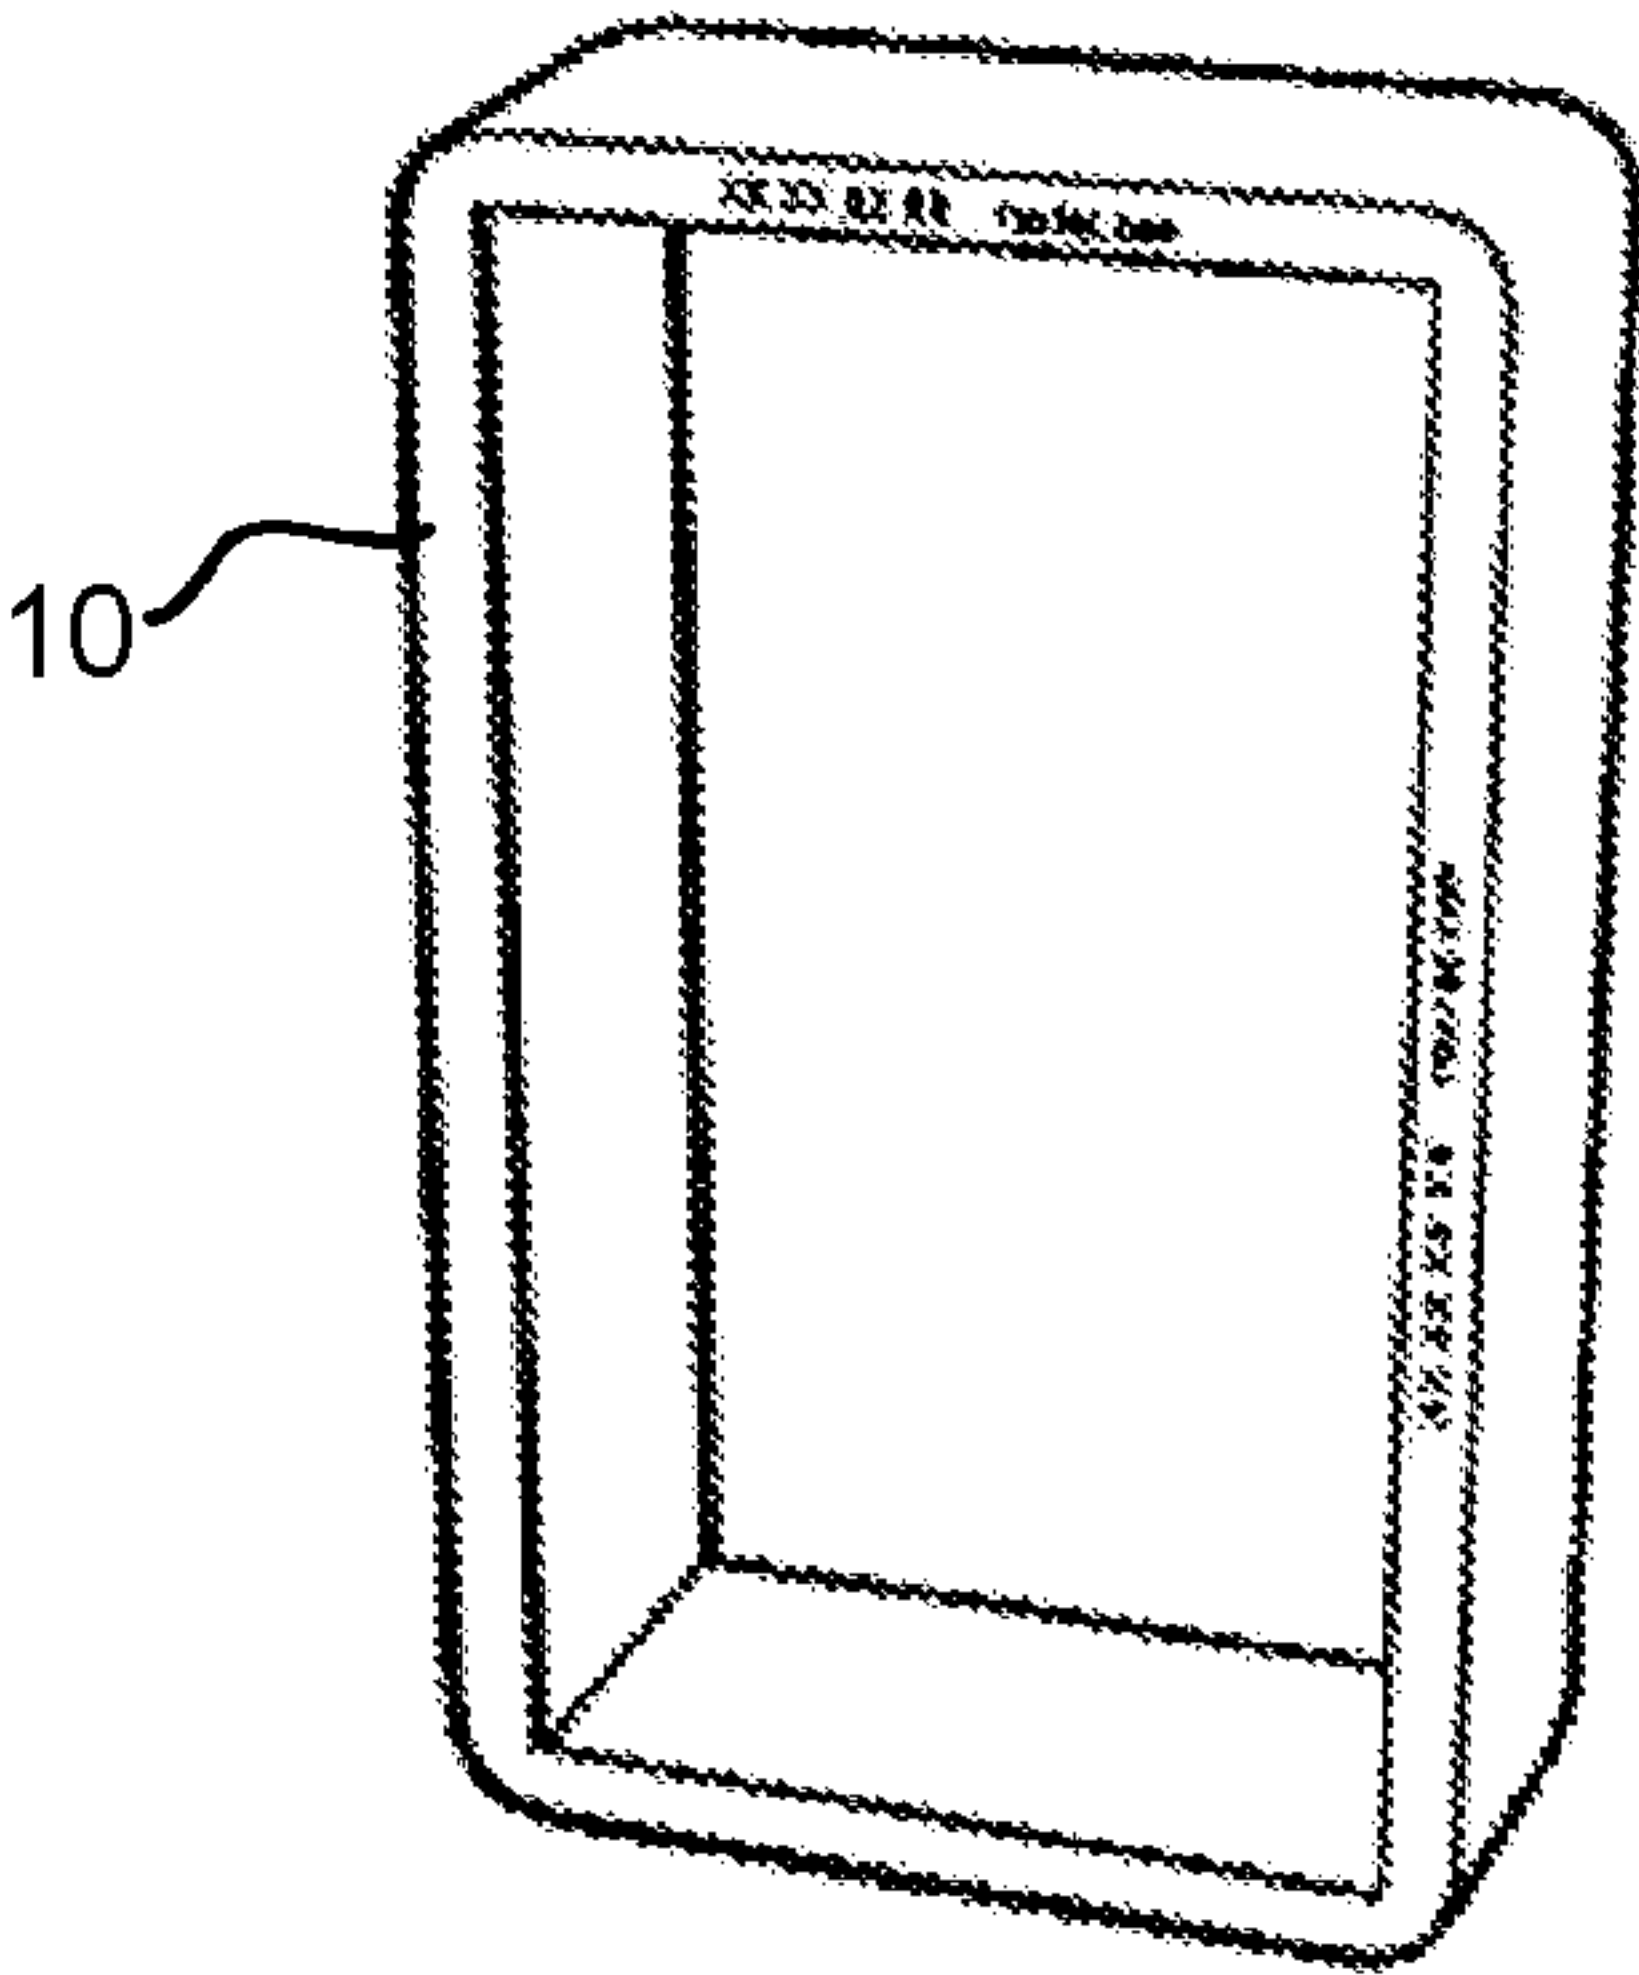


Fig 2A

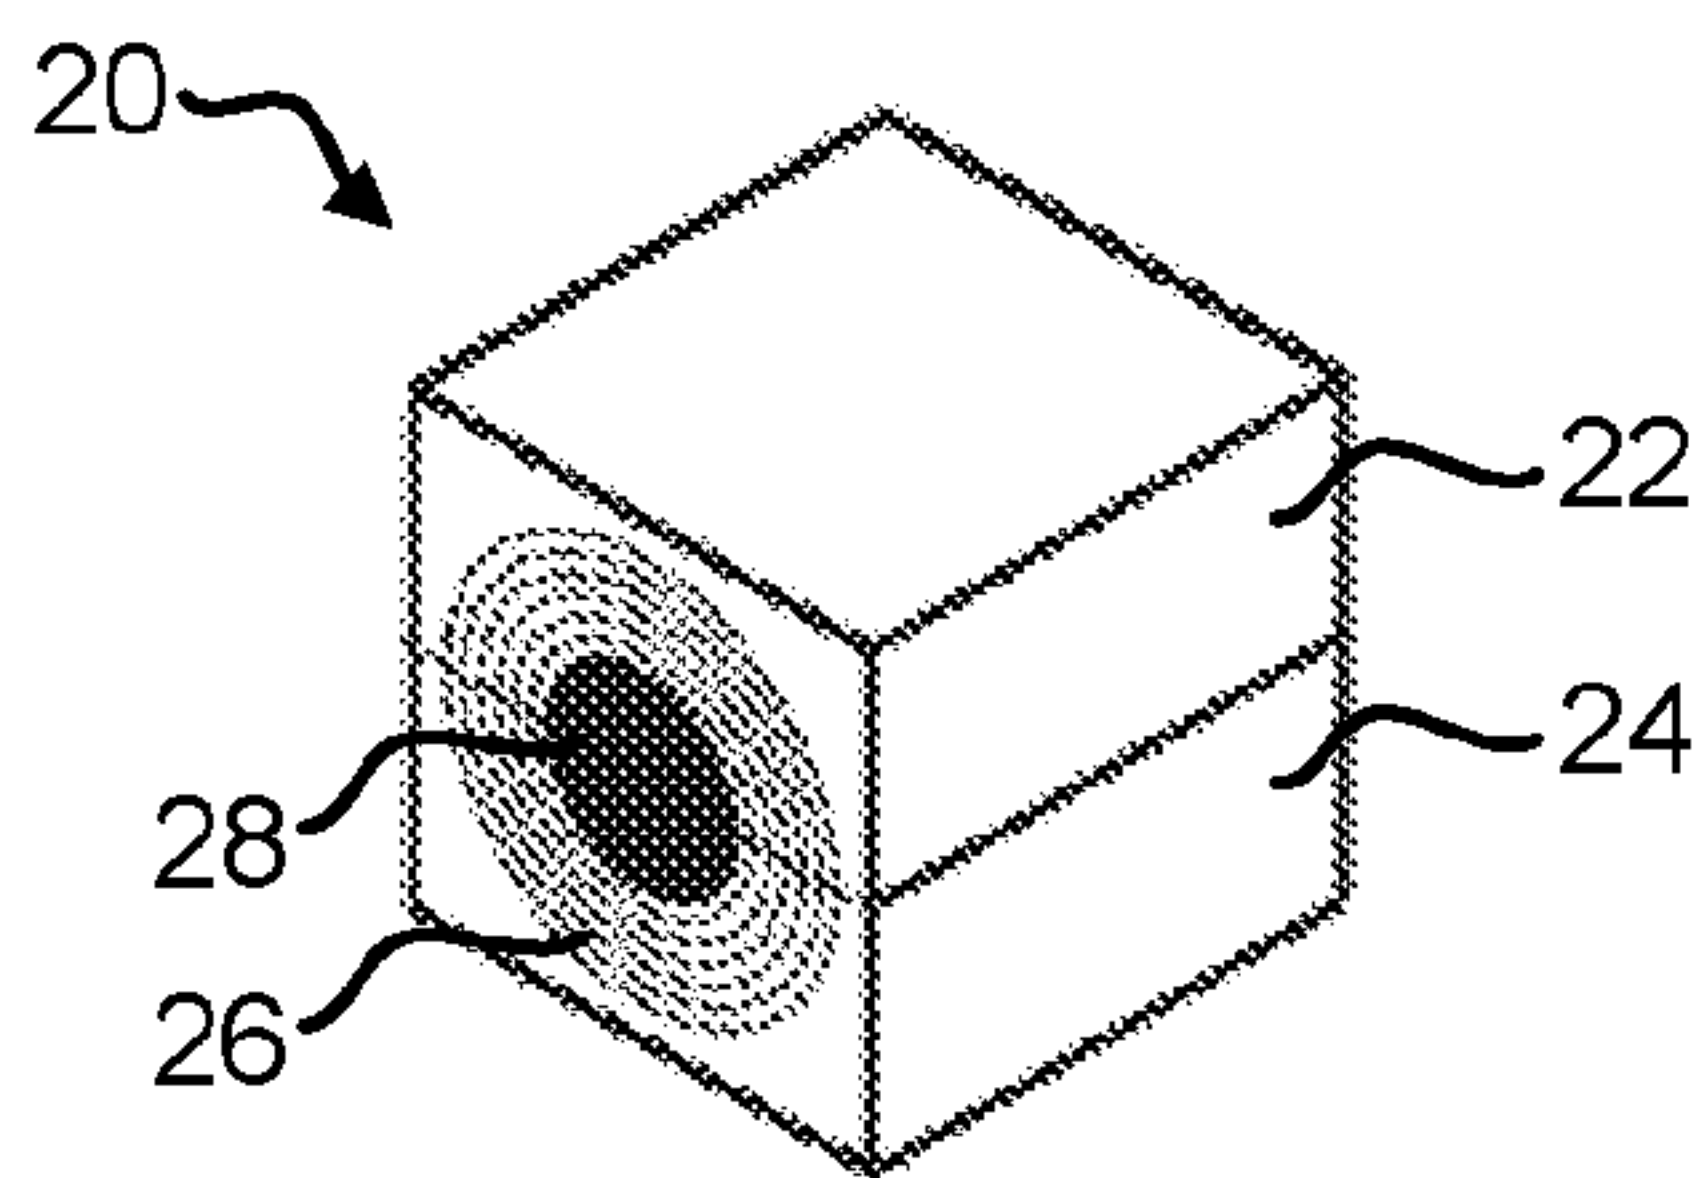


Fig 2B

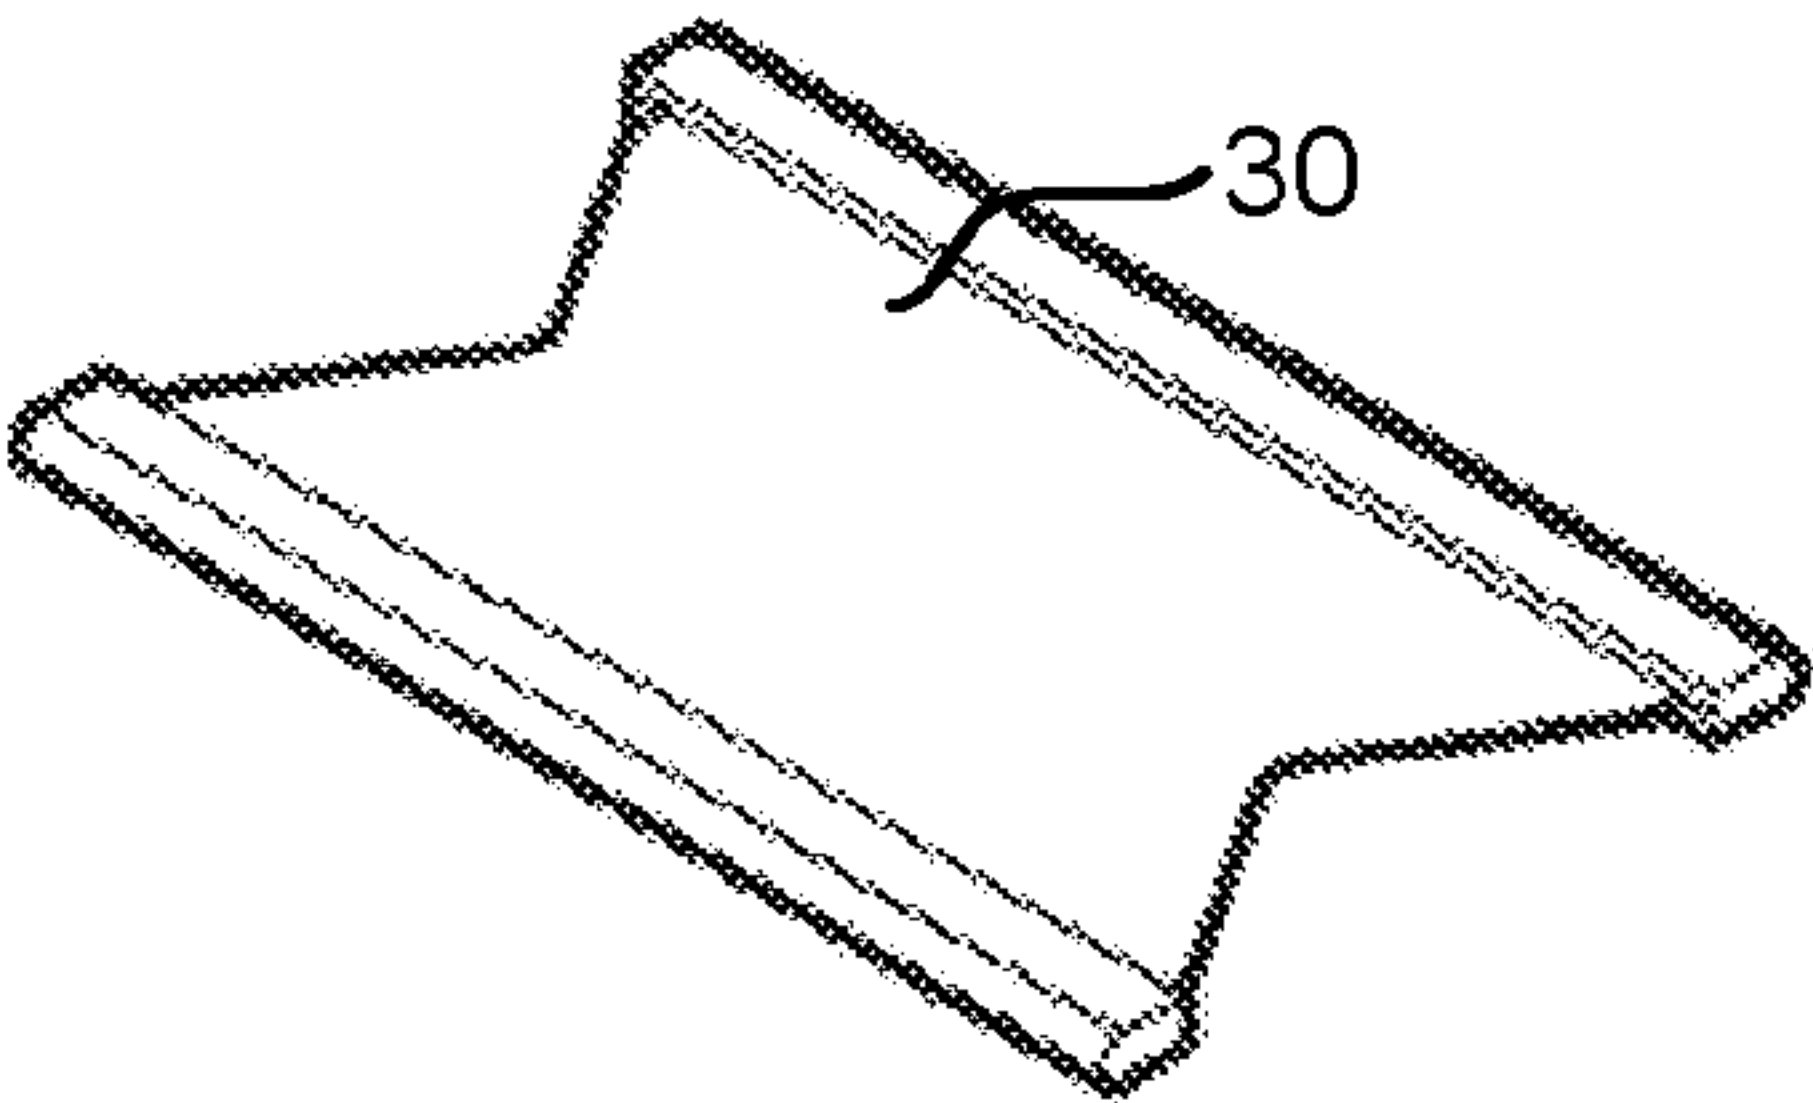


Fig 2C

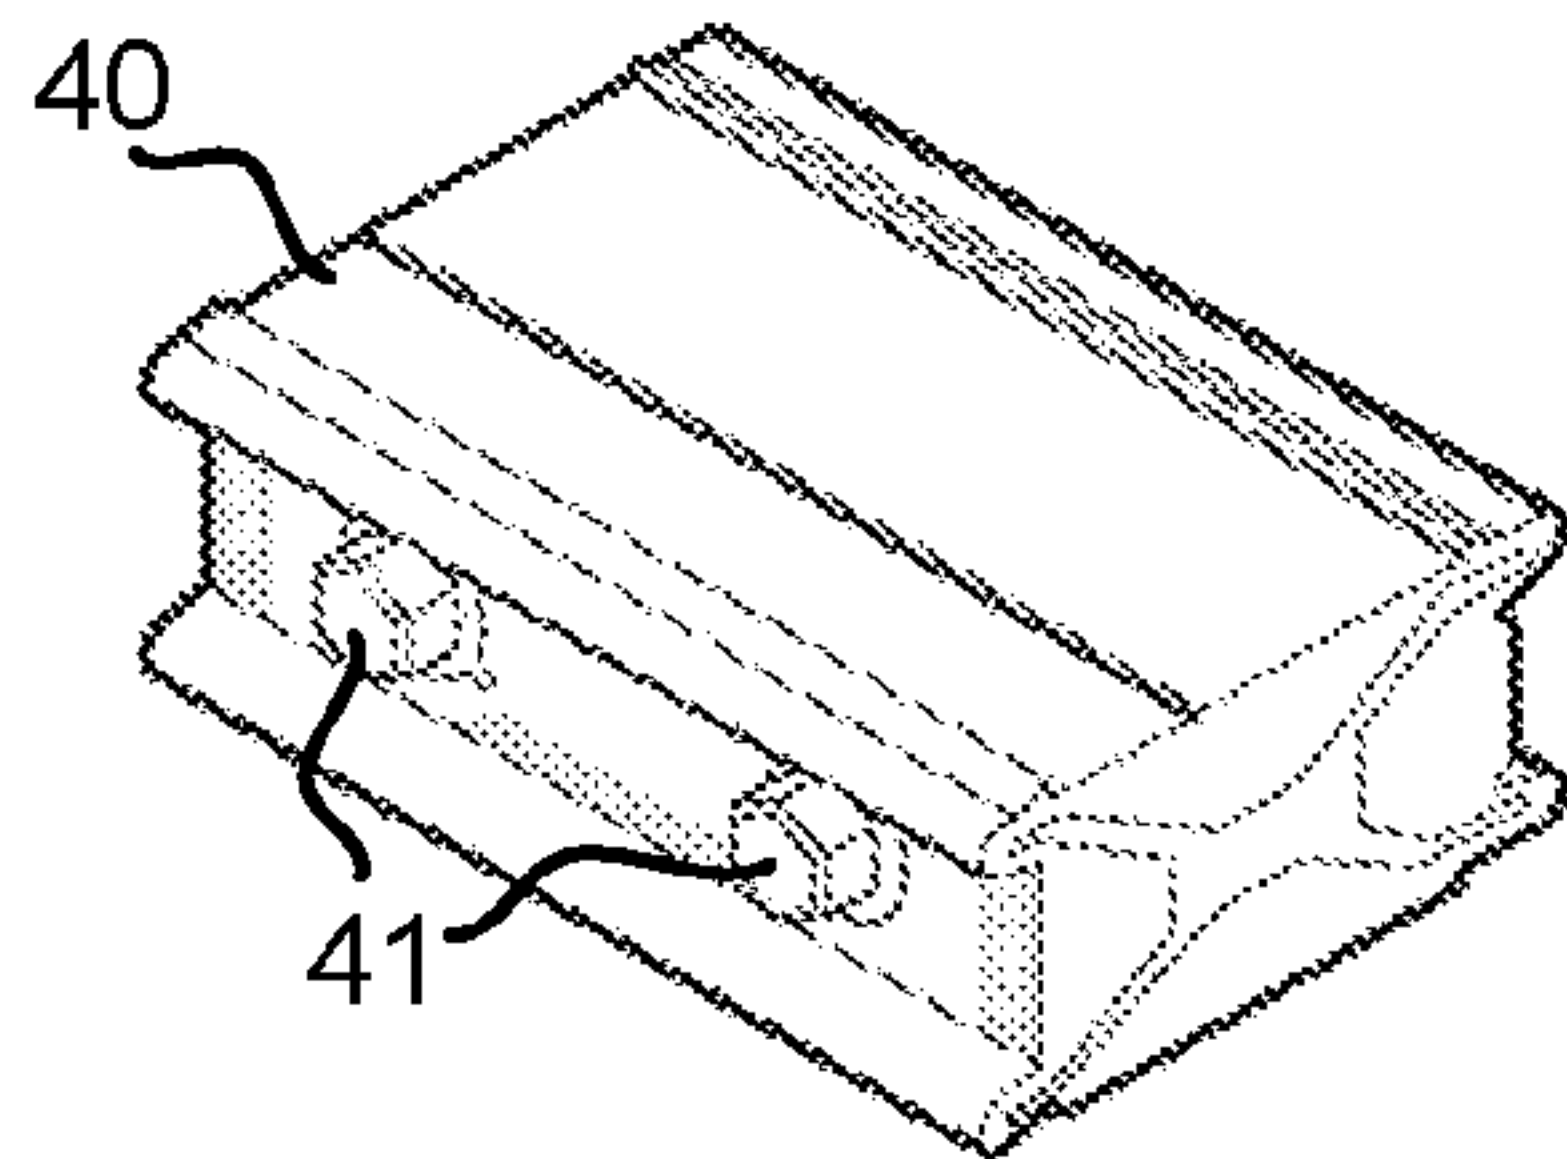


Fig 2D

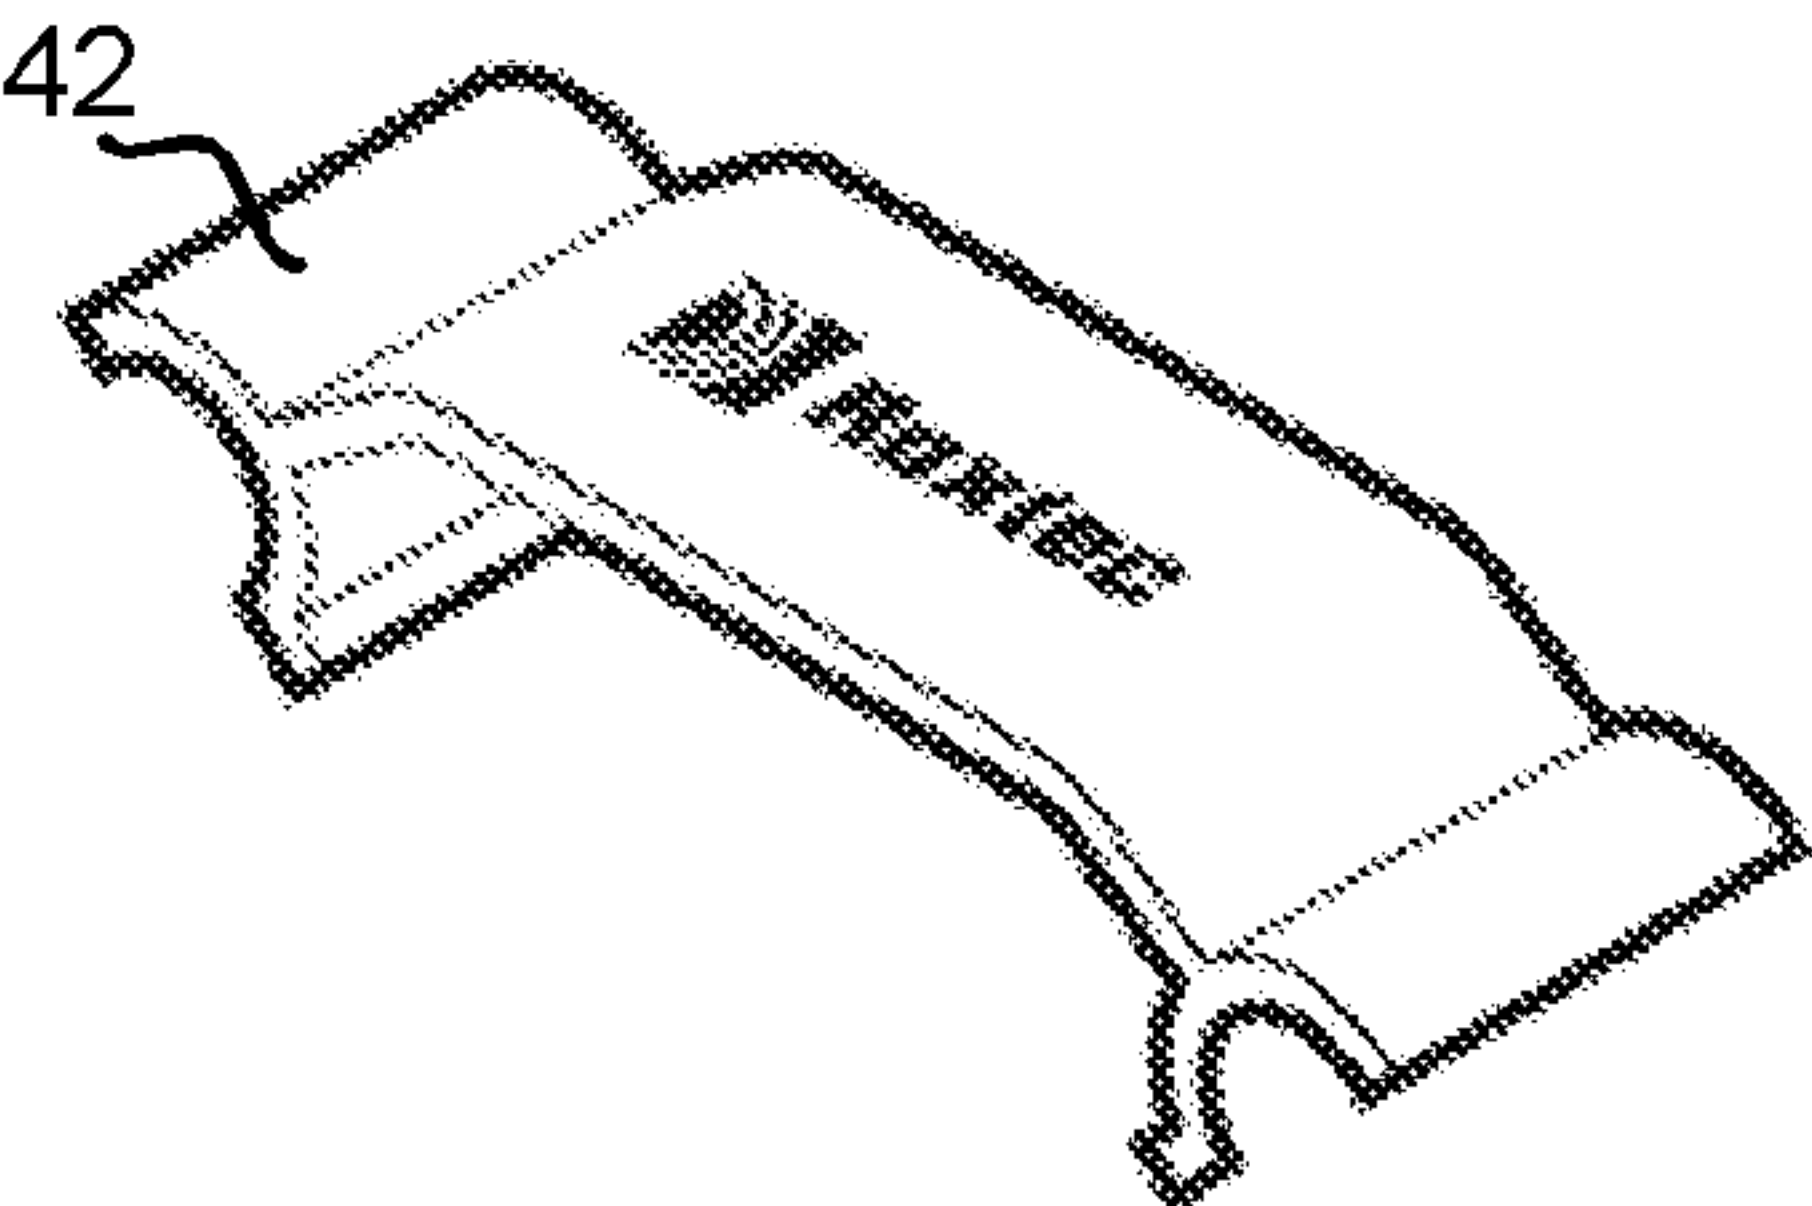


Fig 2E

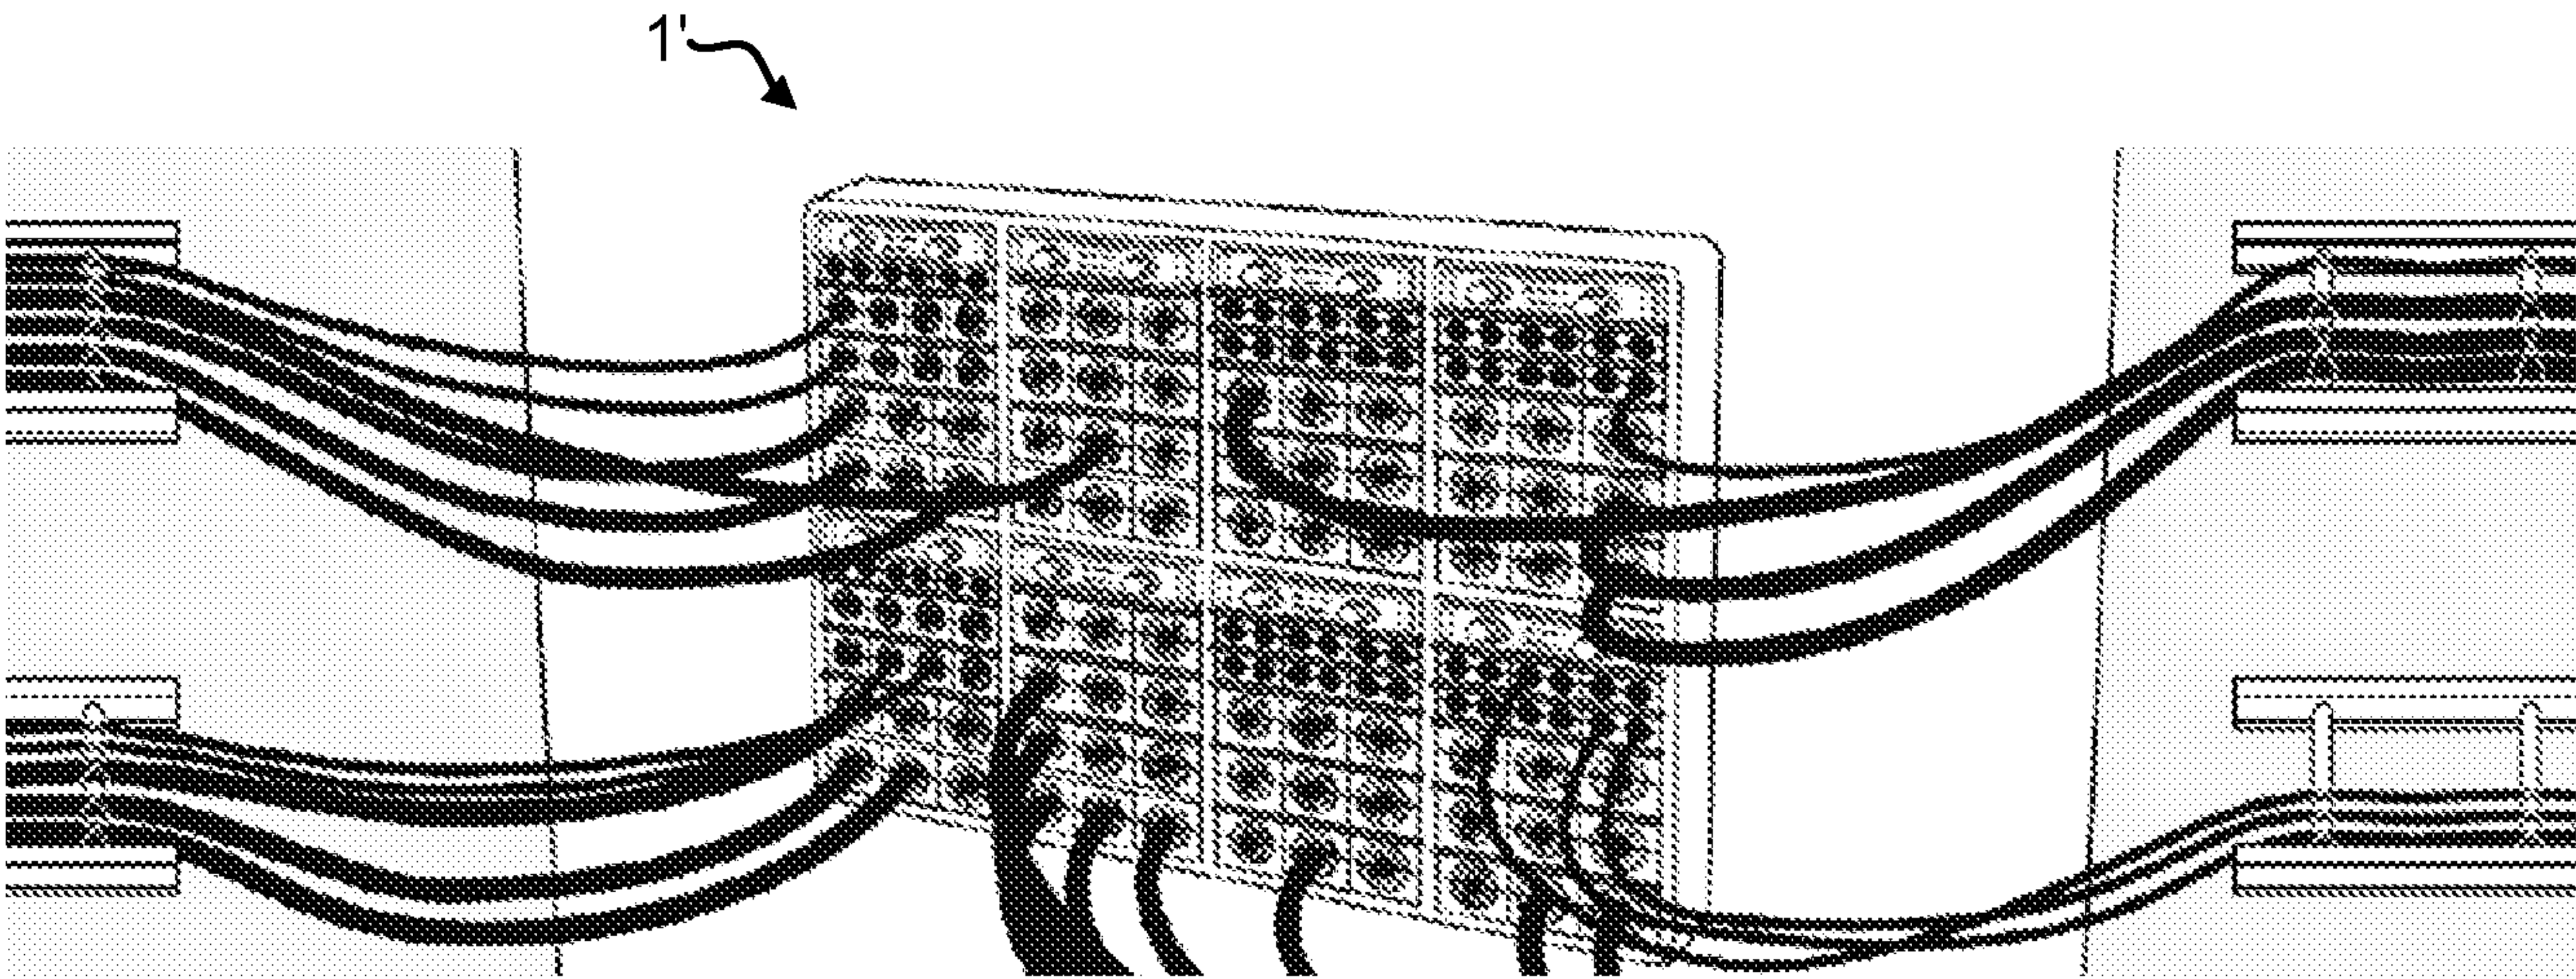


Fig 3

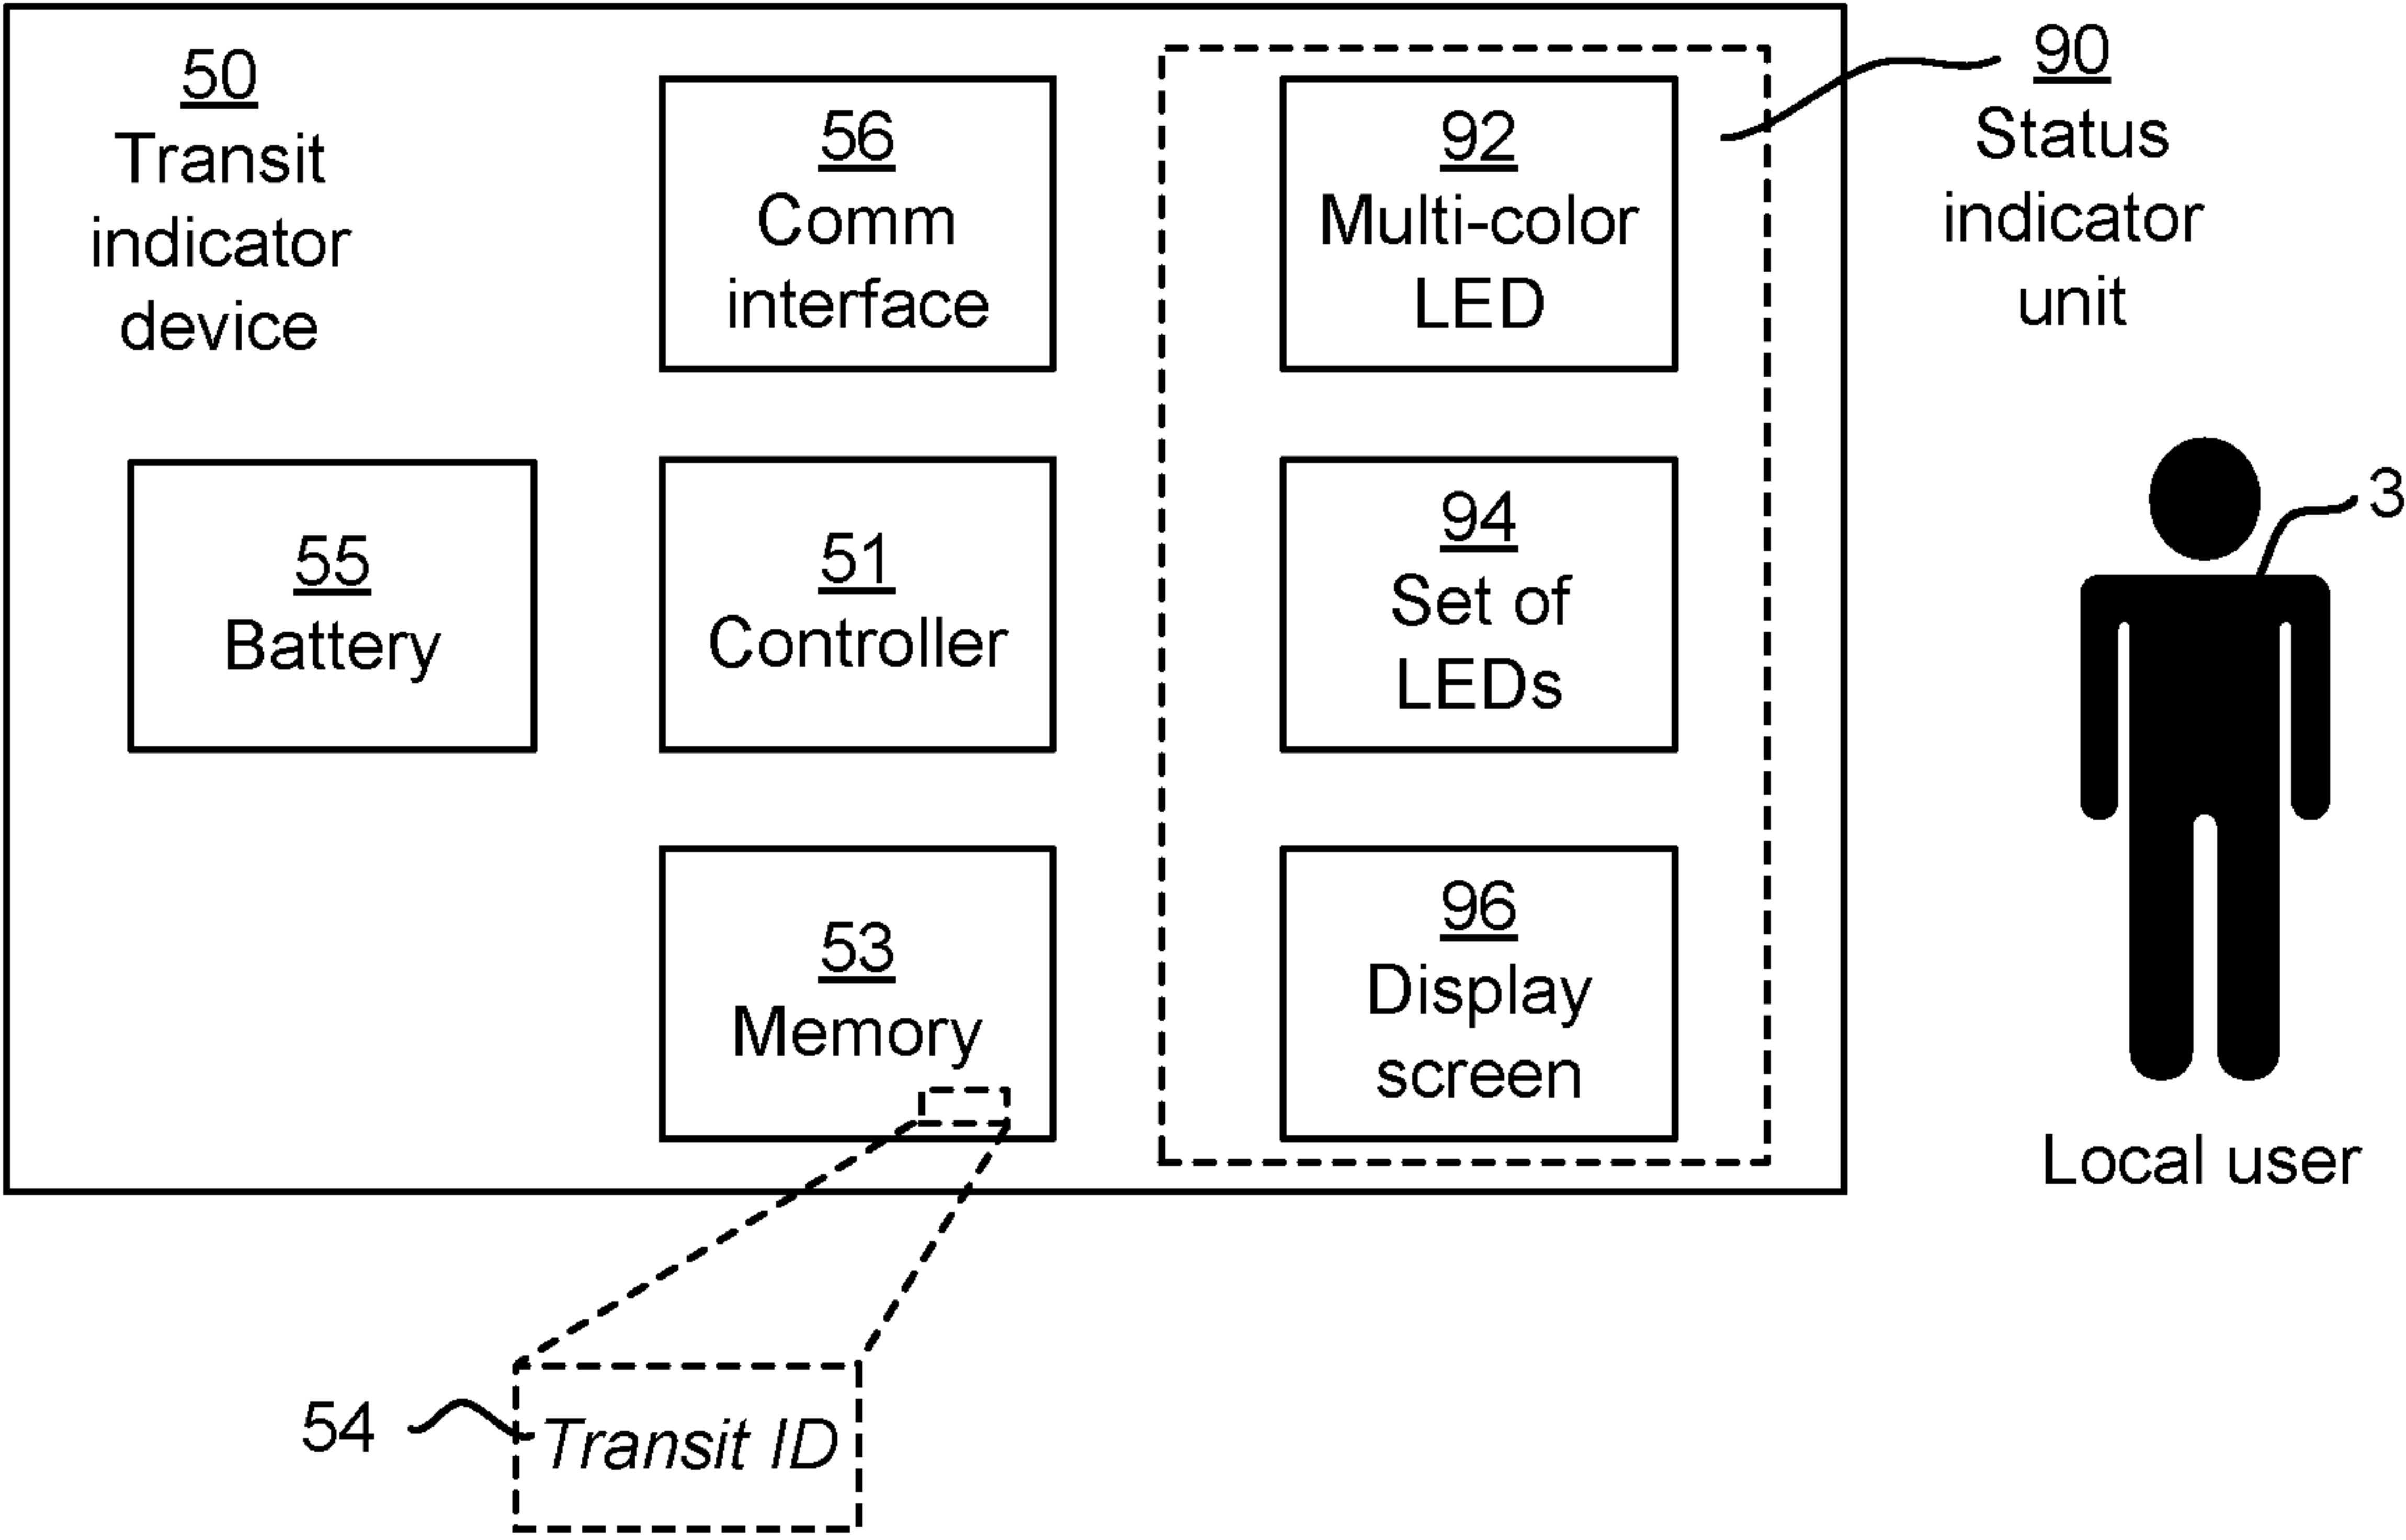


Fig 4

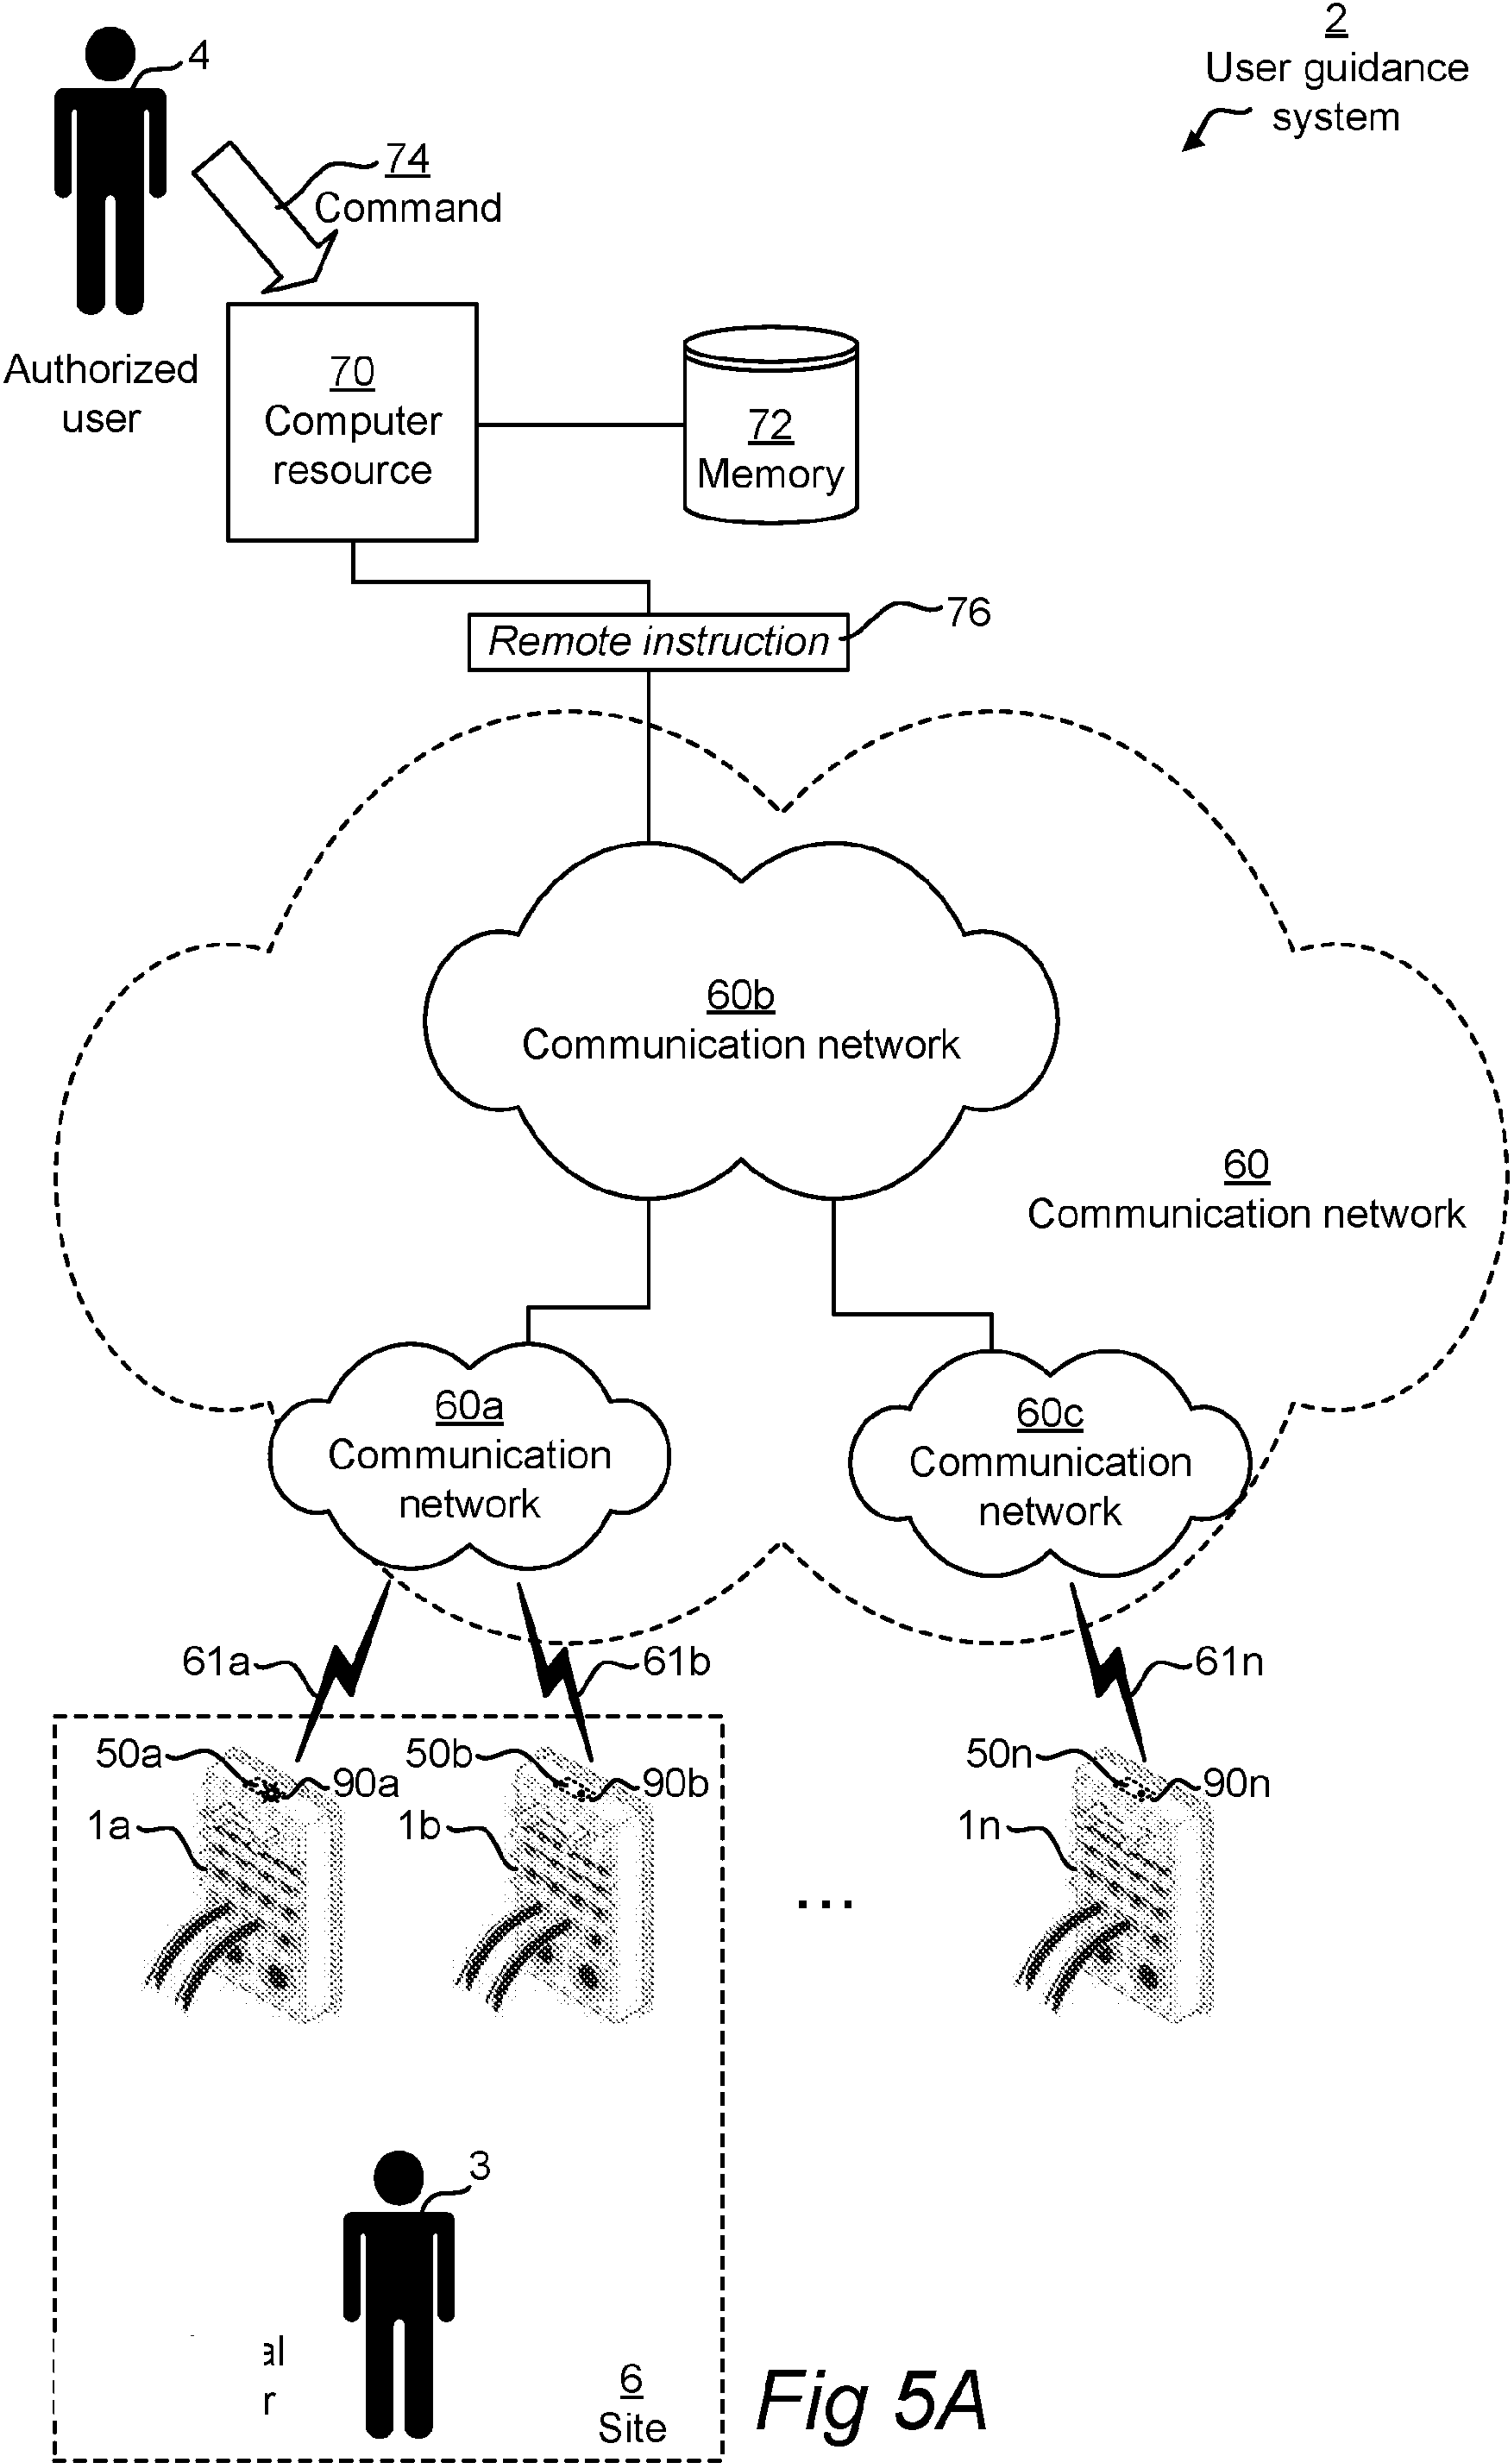
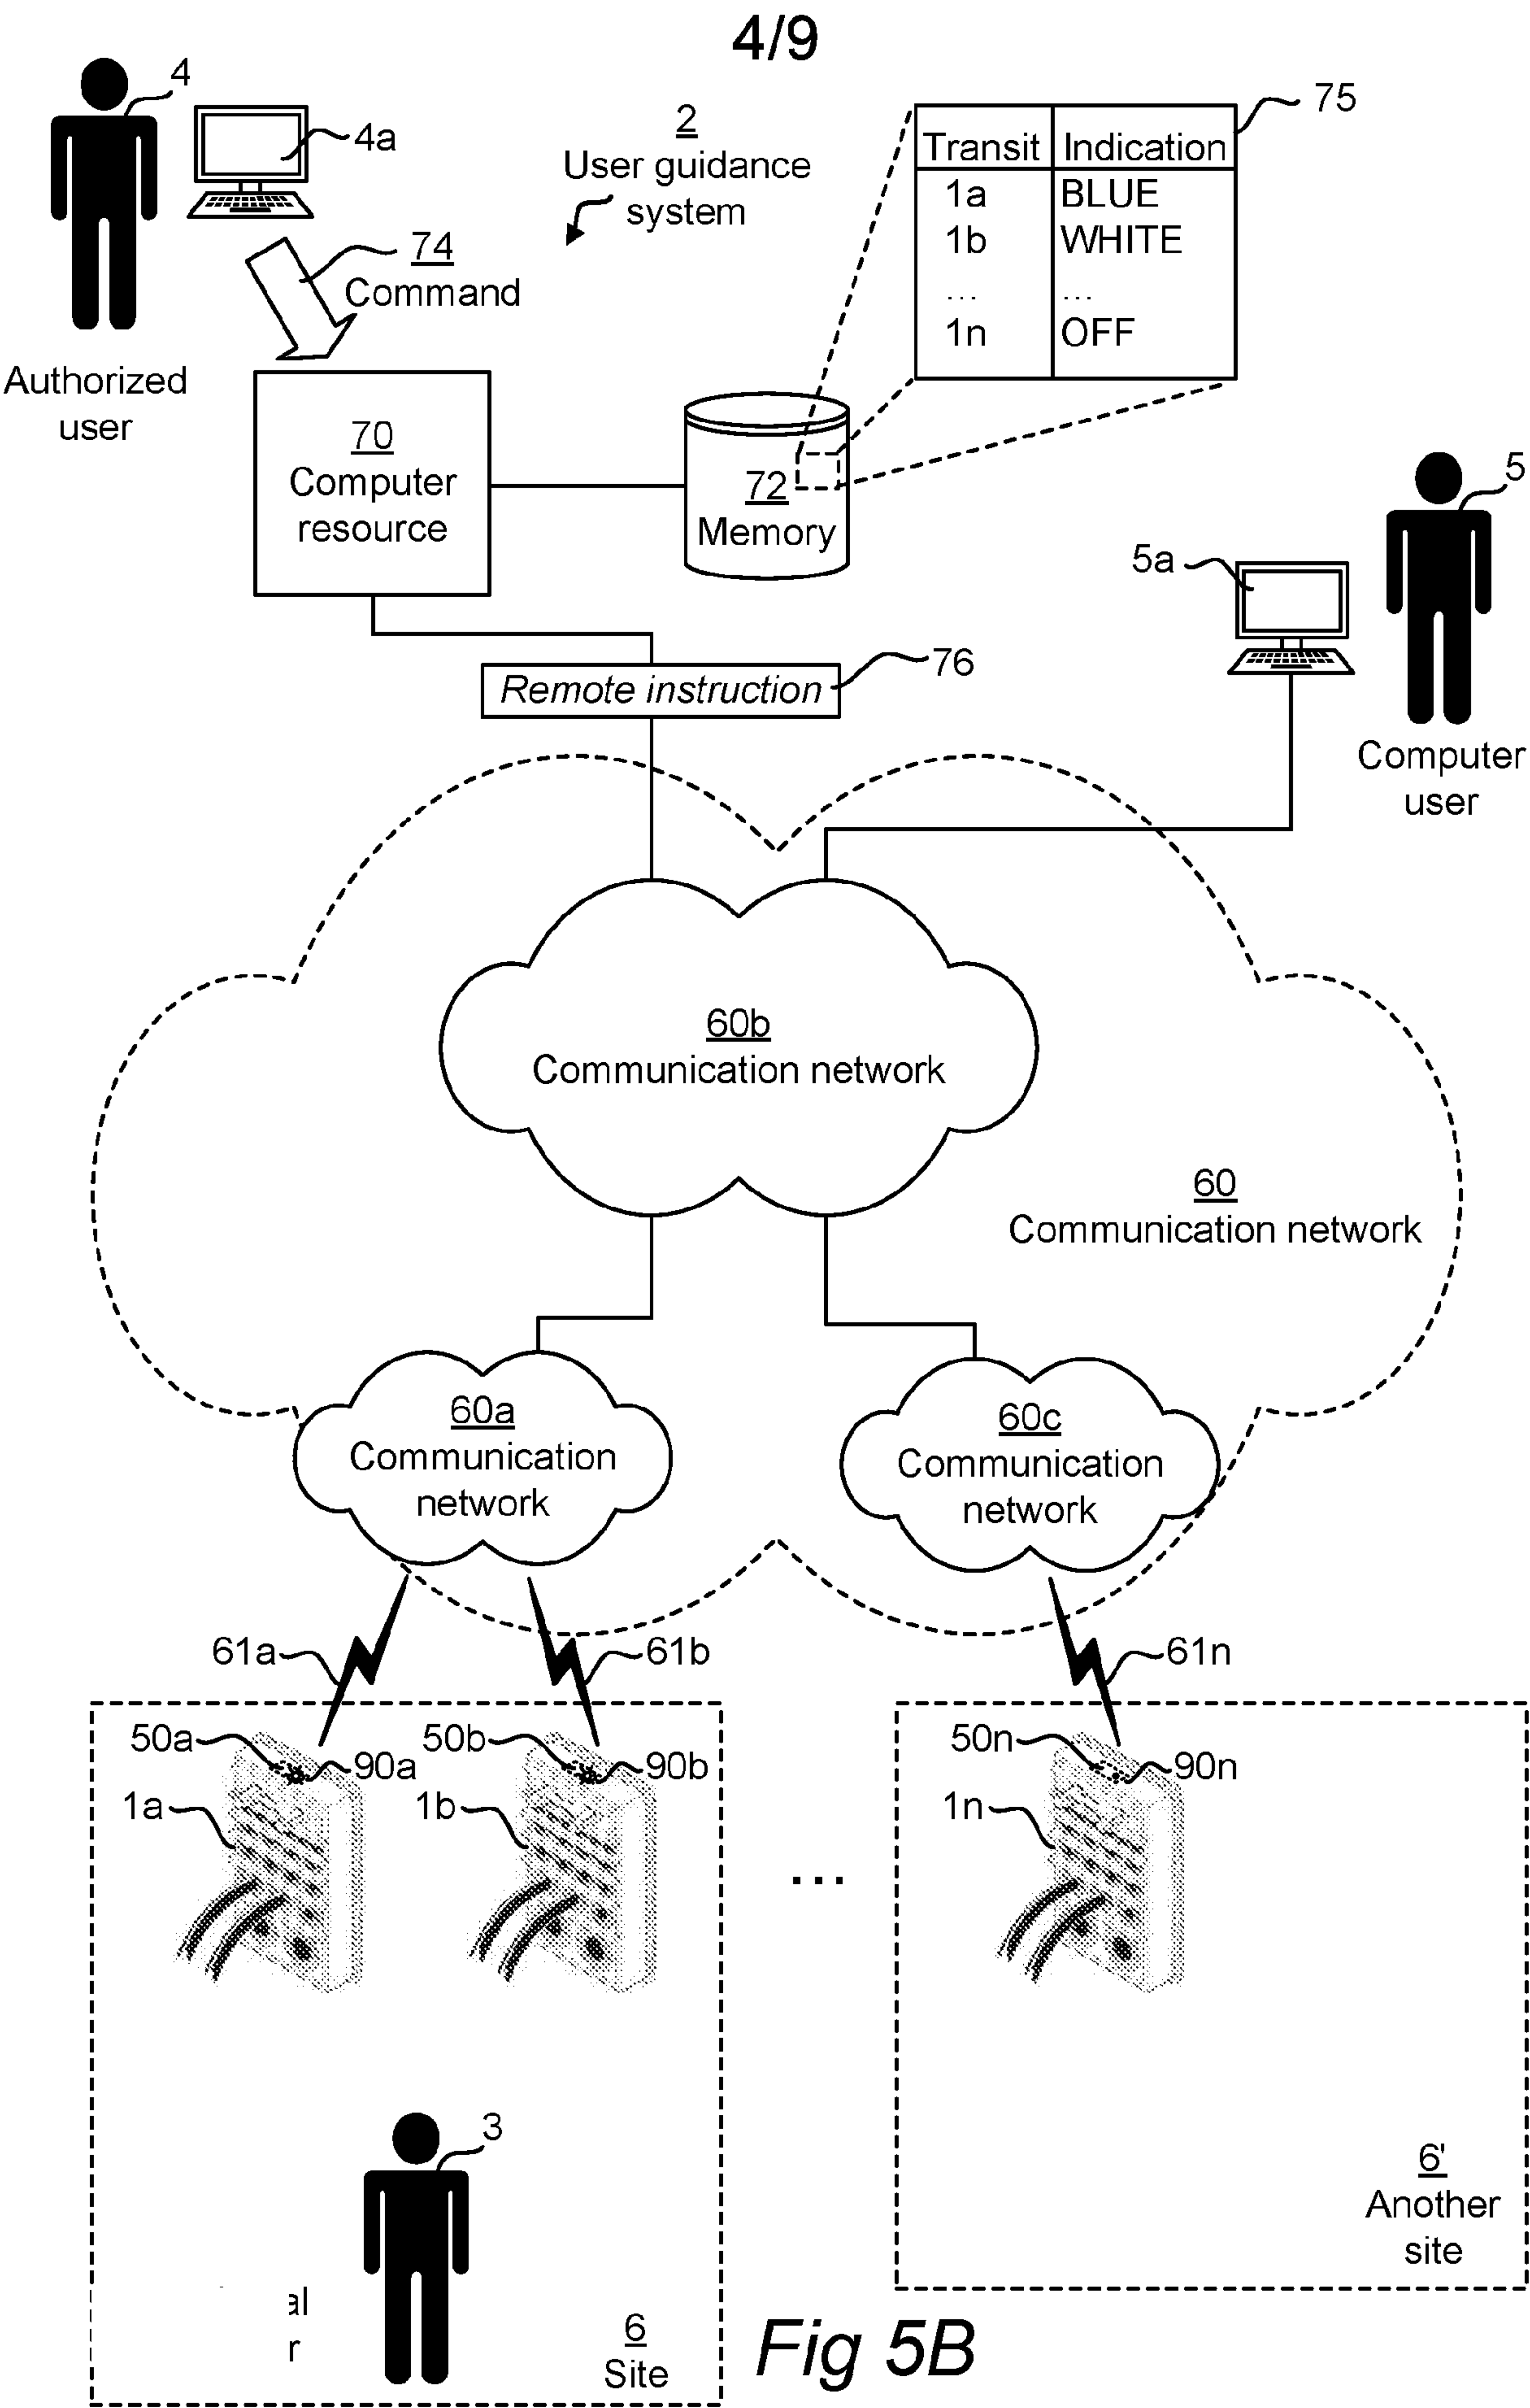
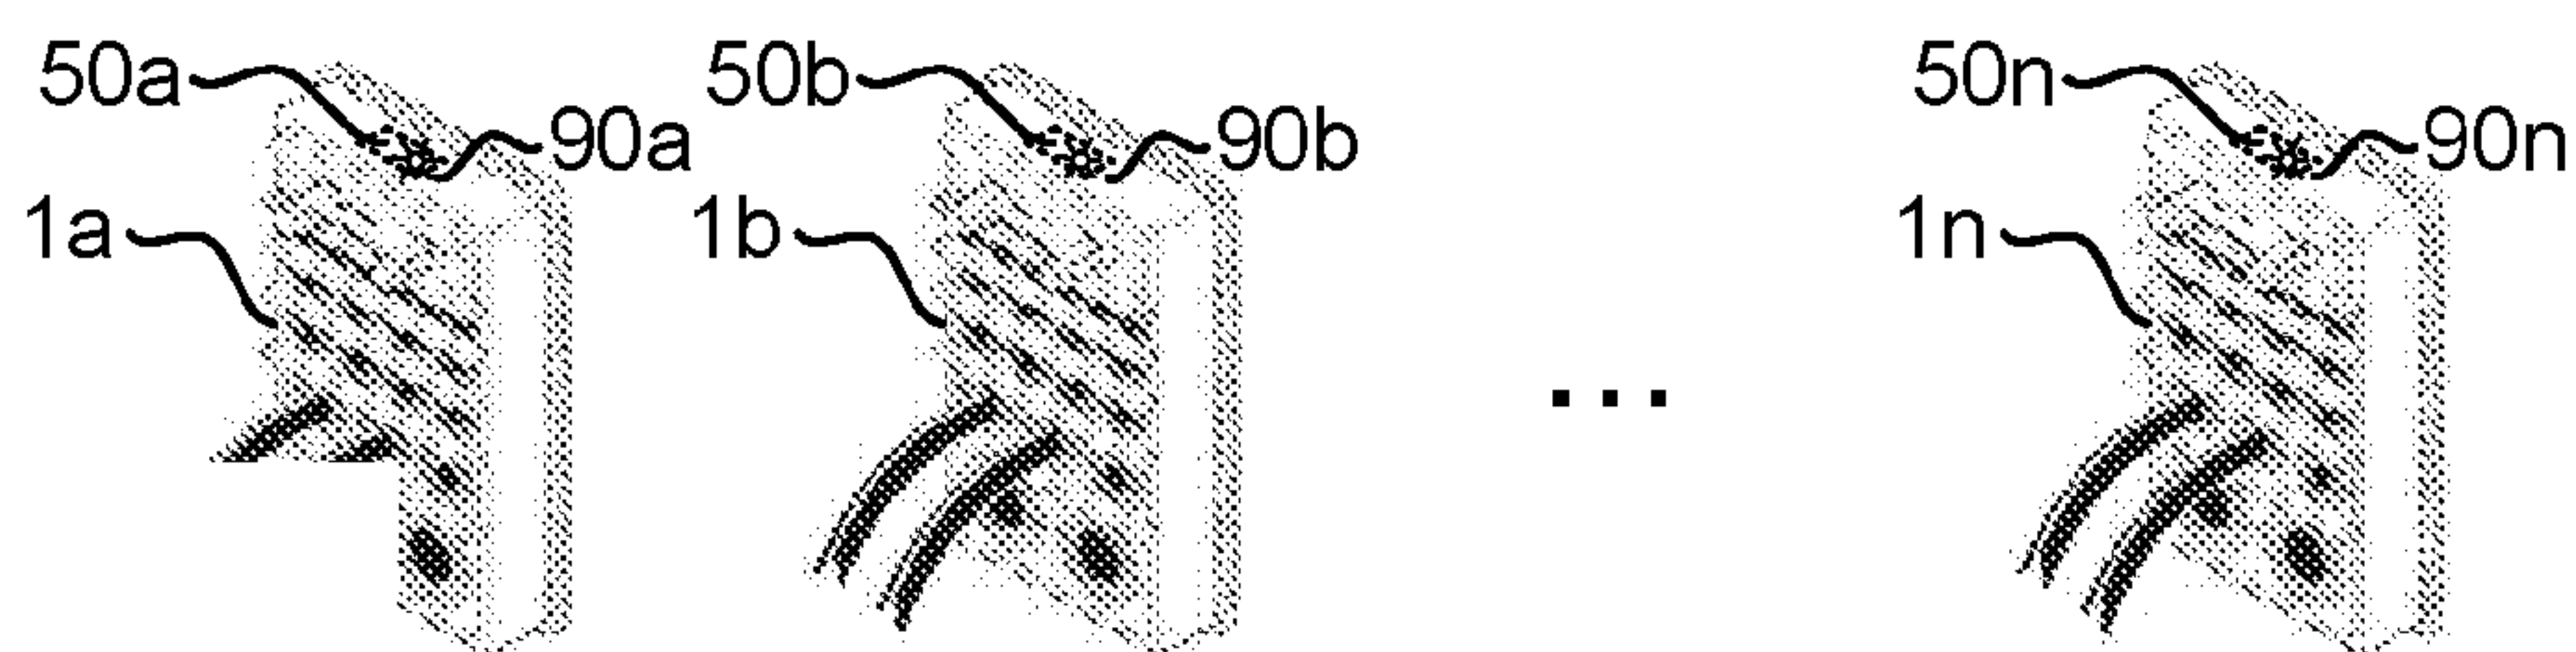
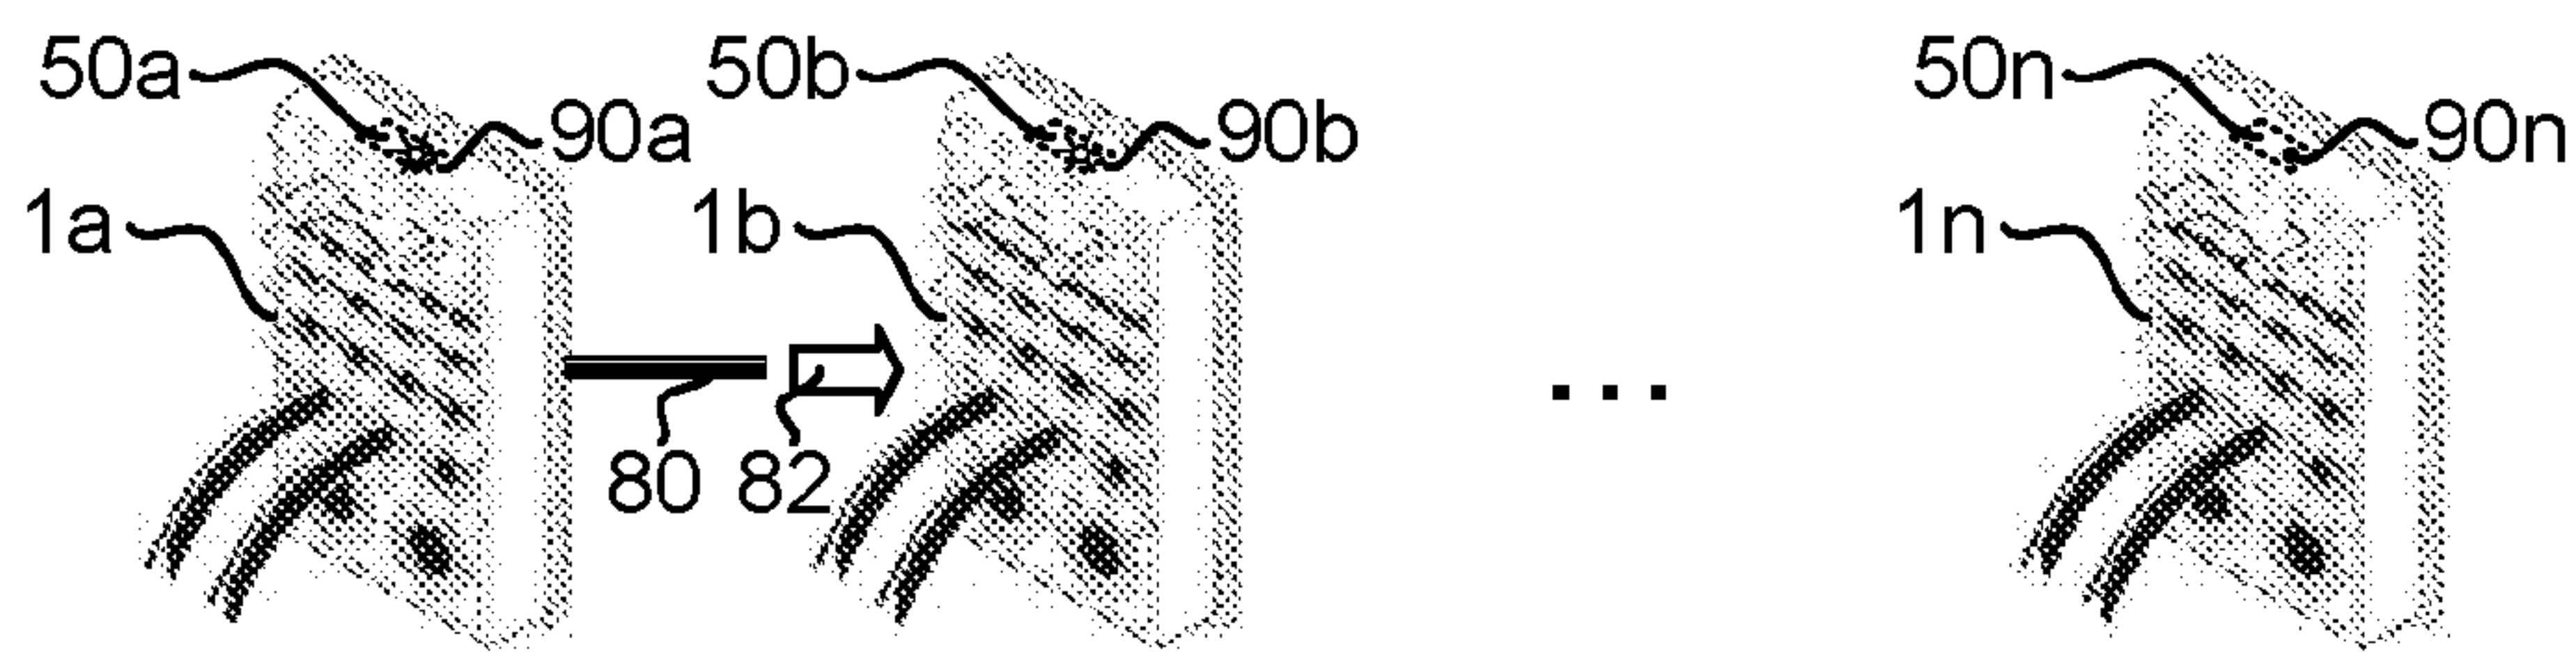
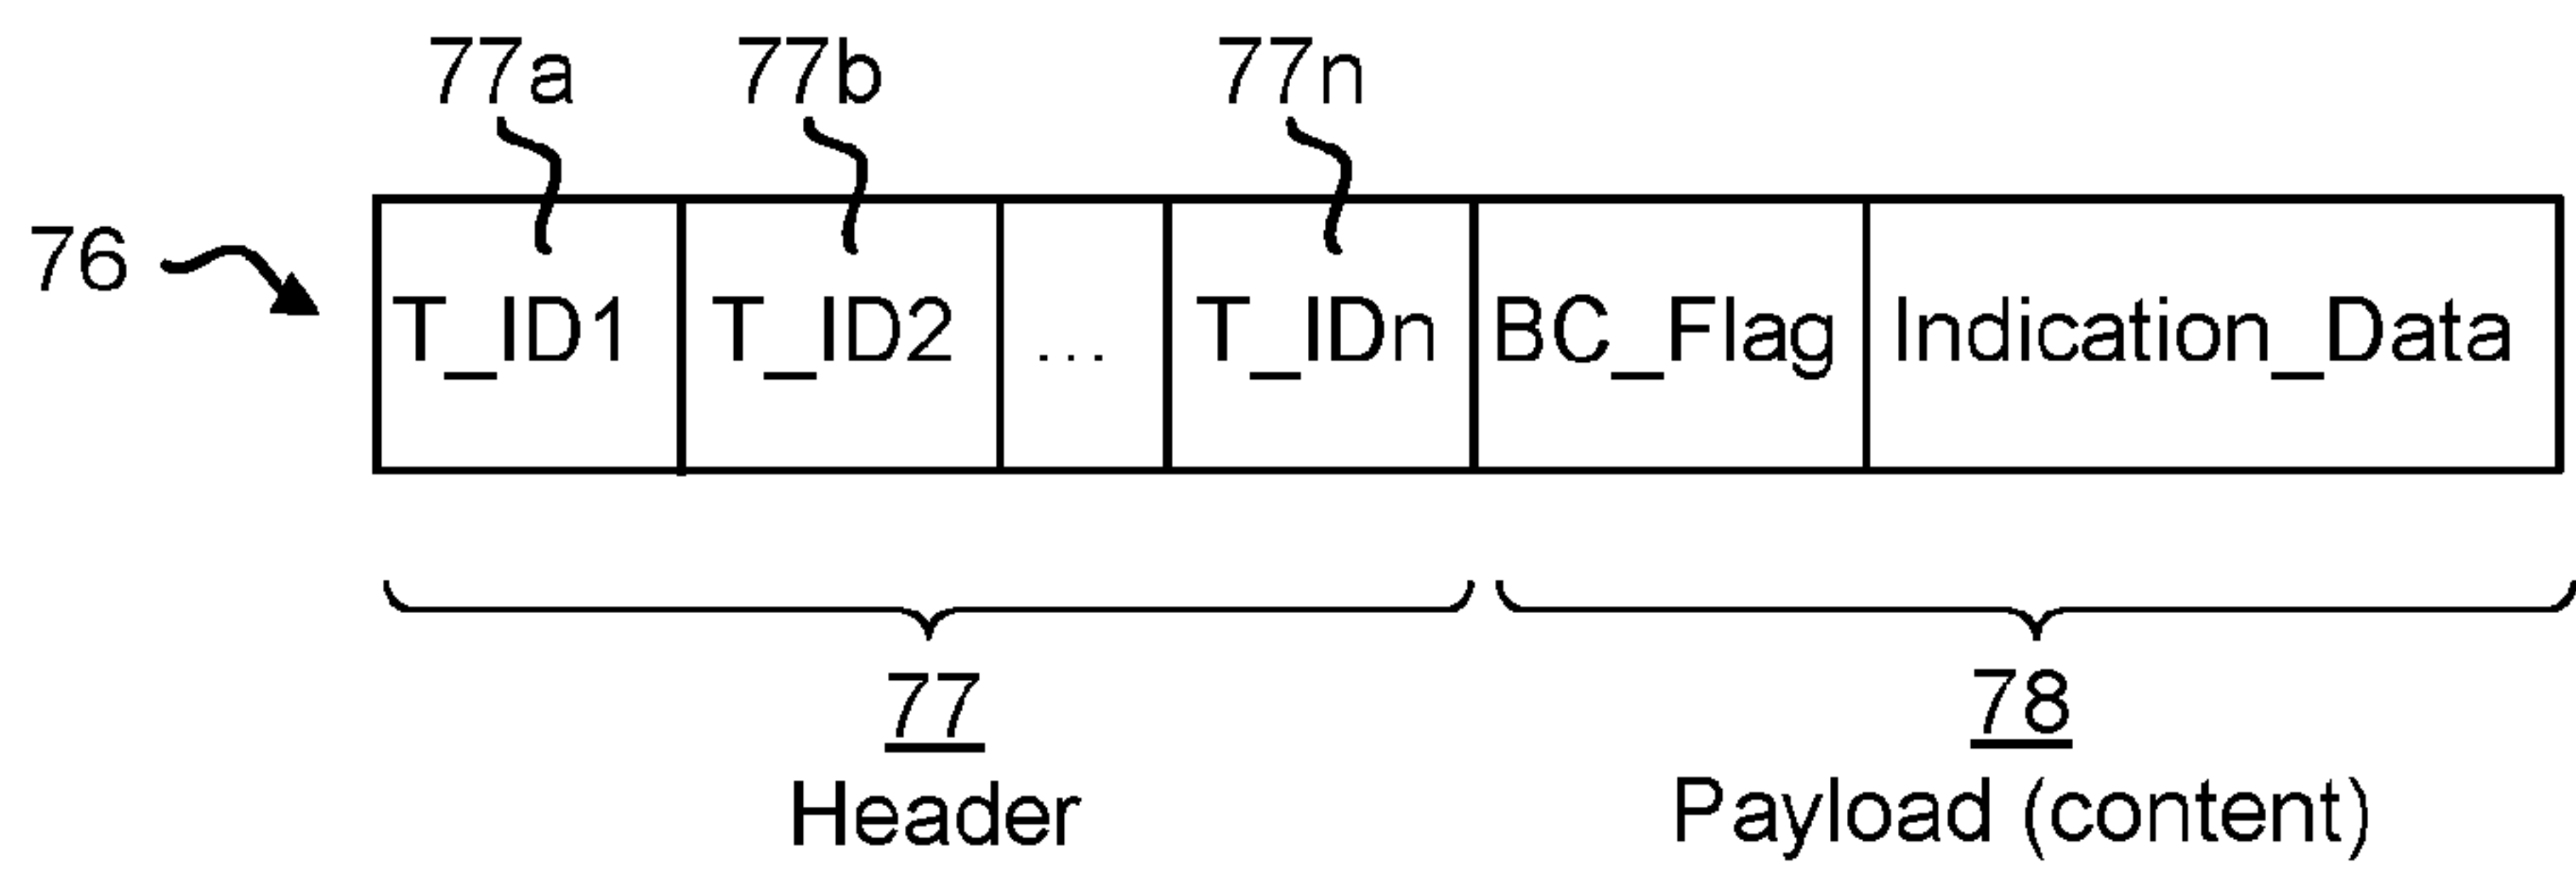
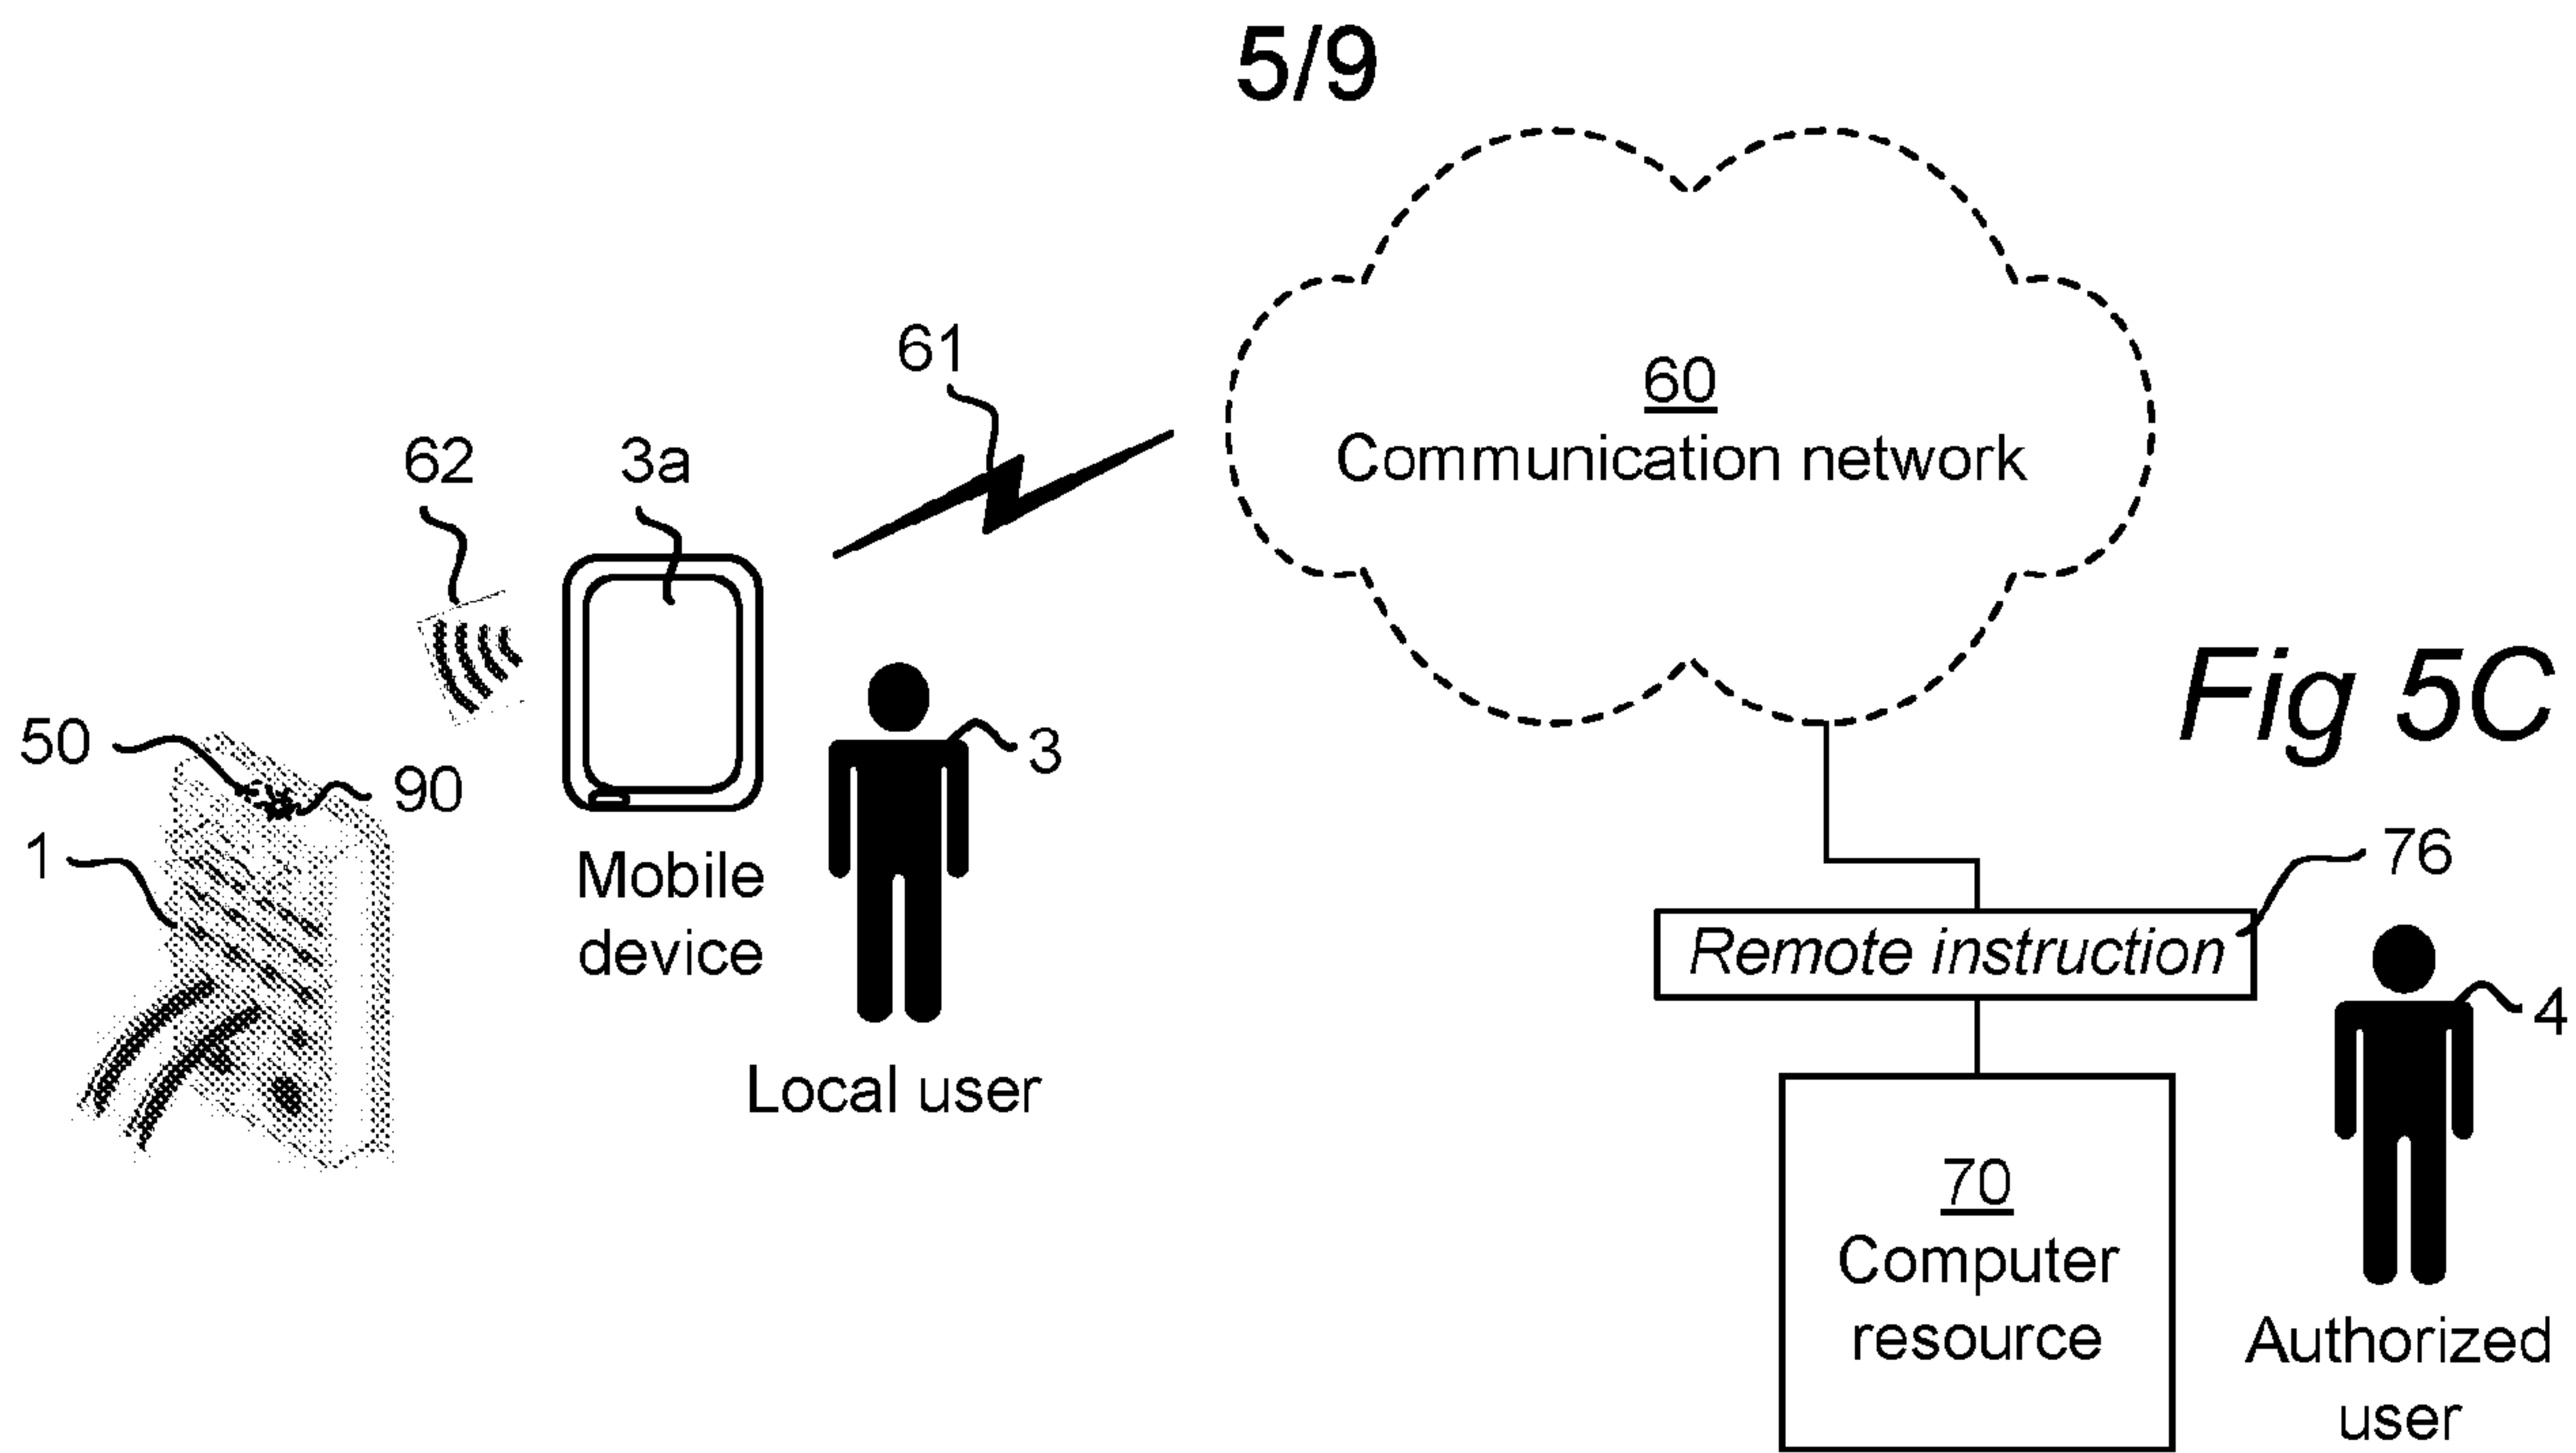


Fig 5A





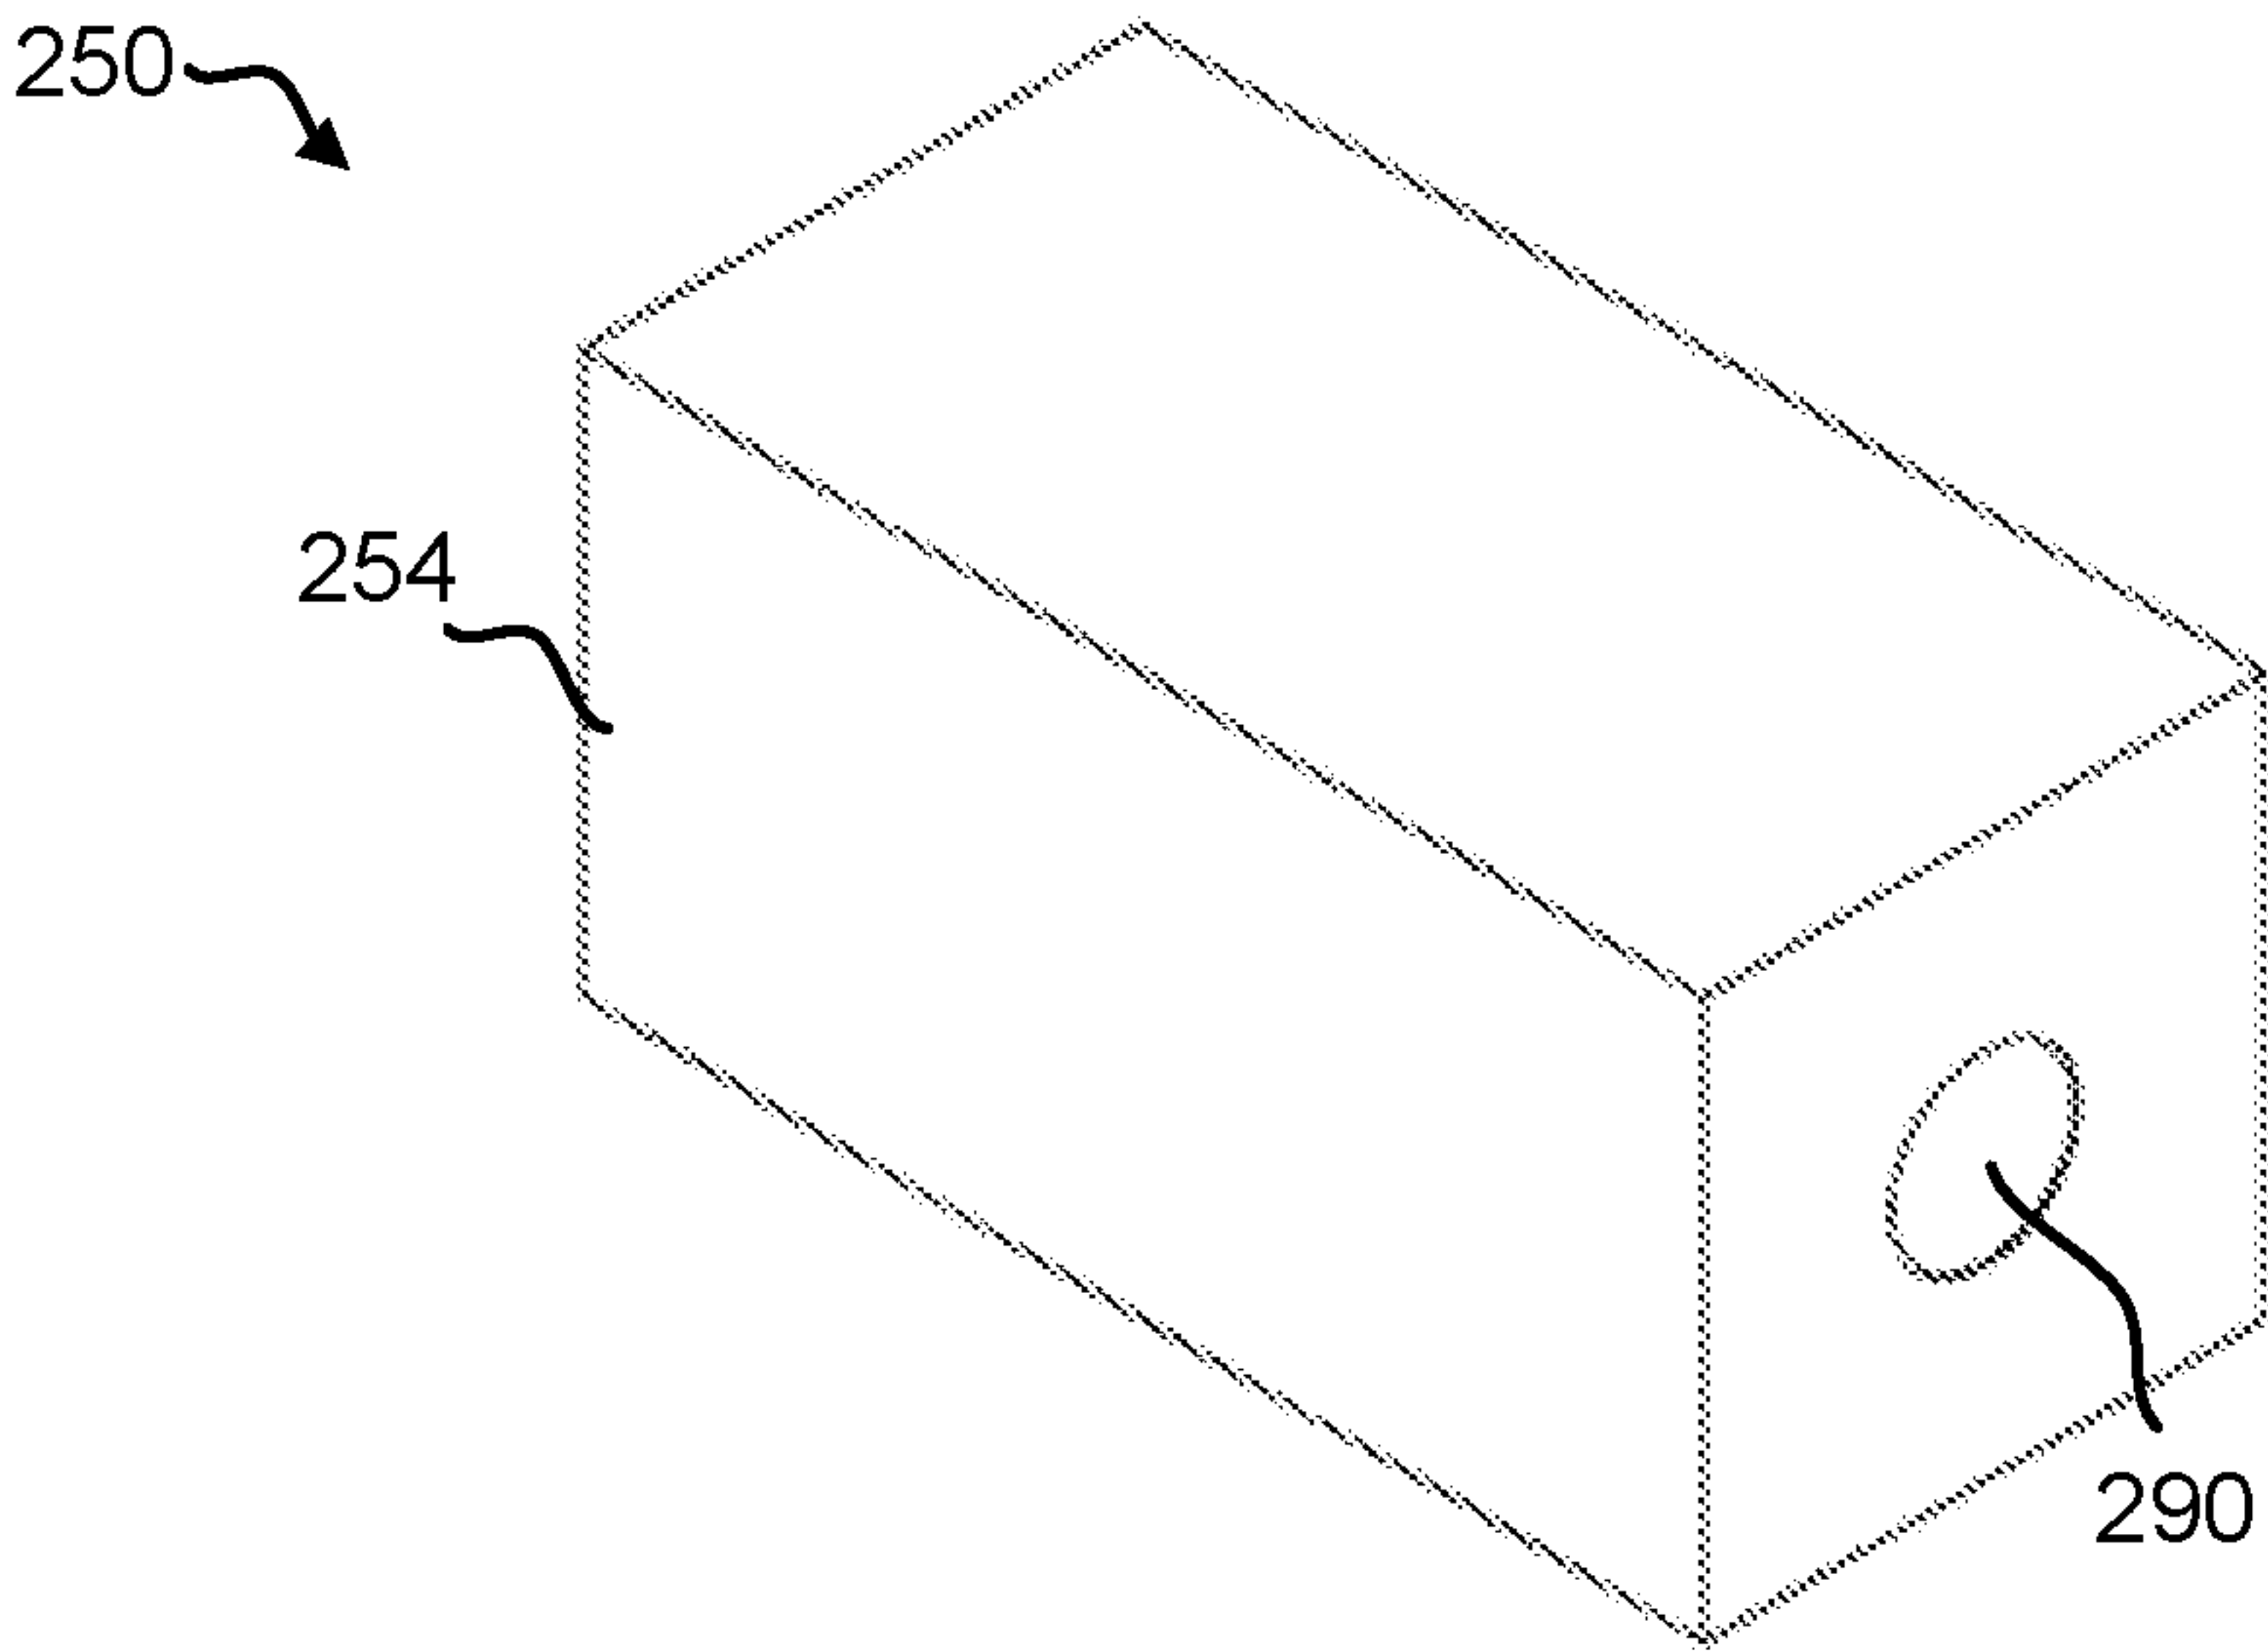


Fig 8A

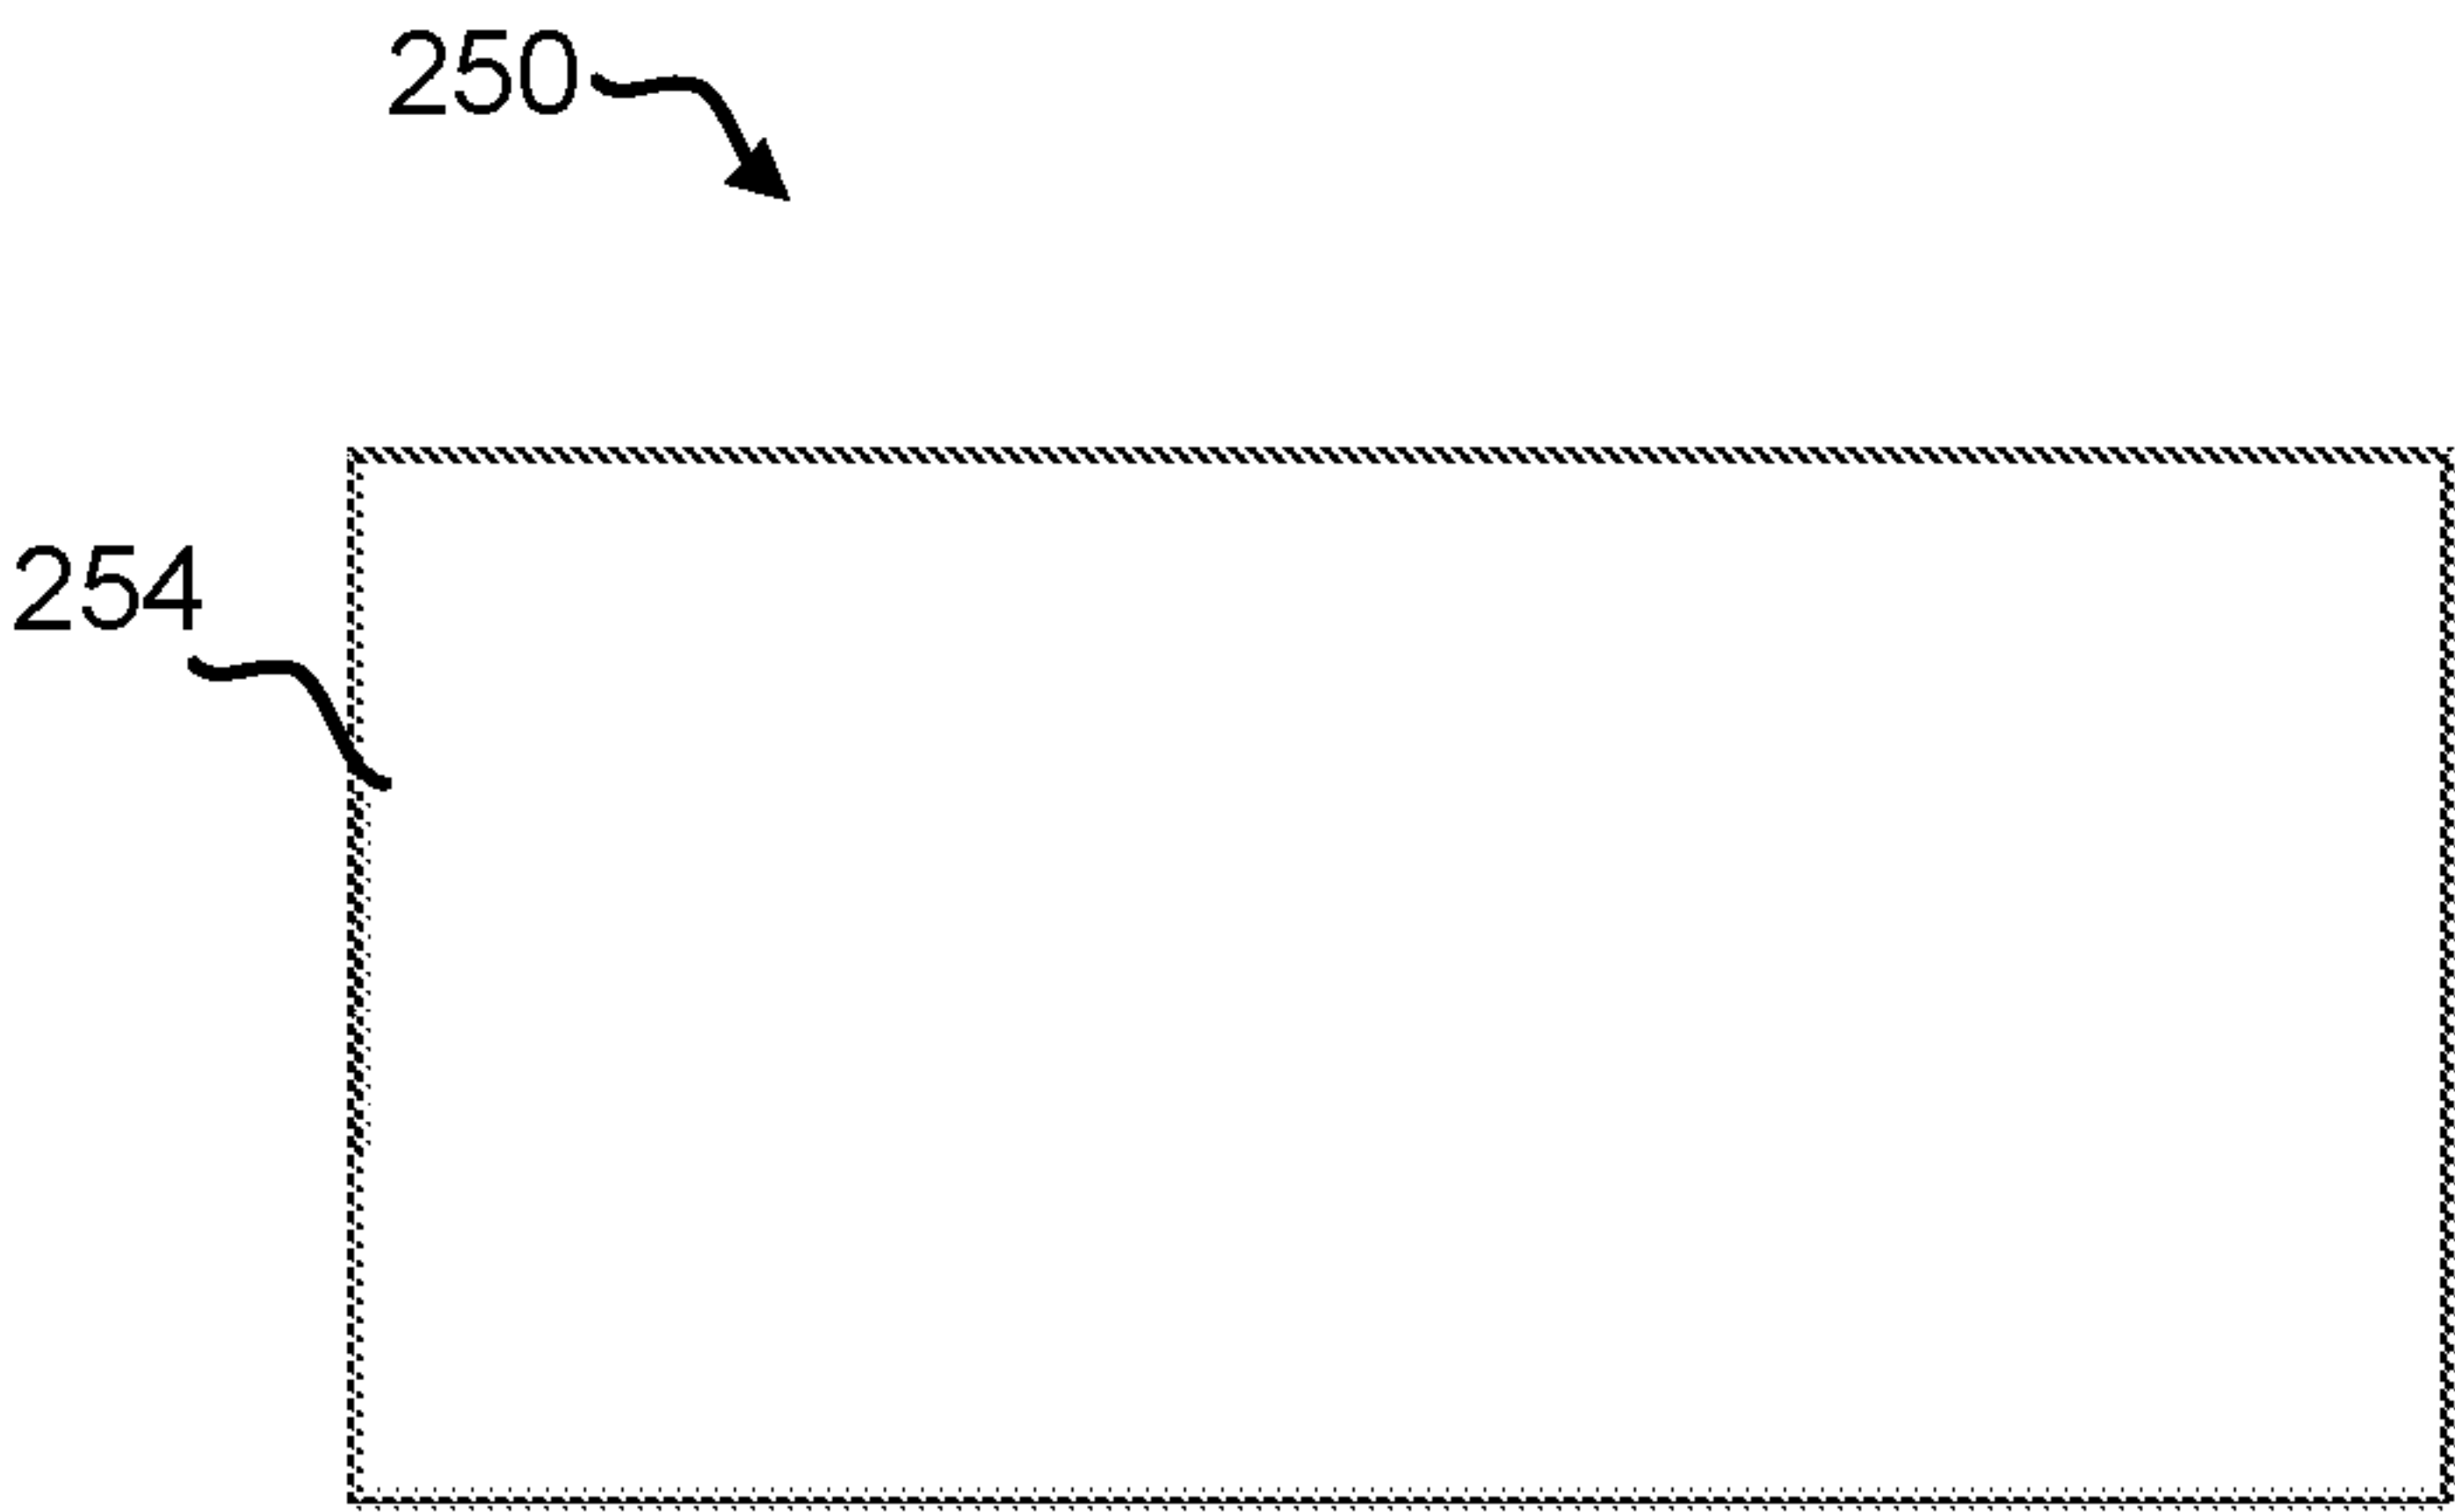


Fig 8B





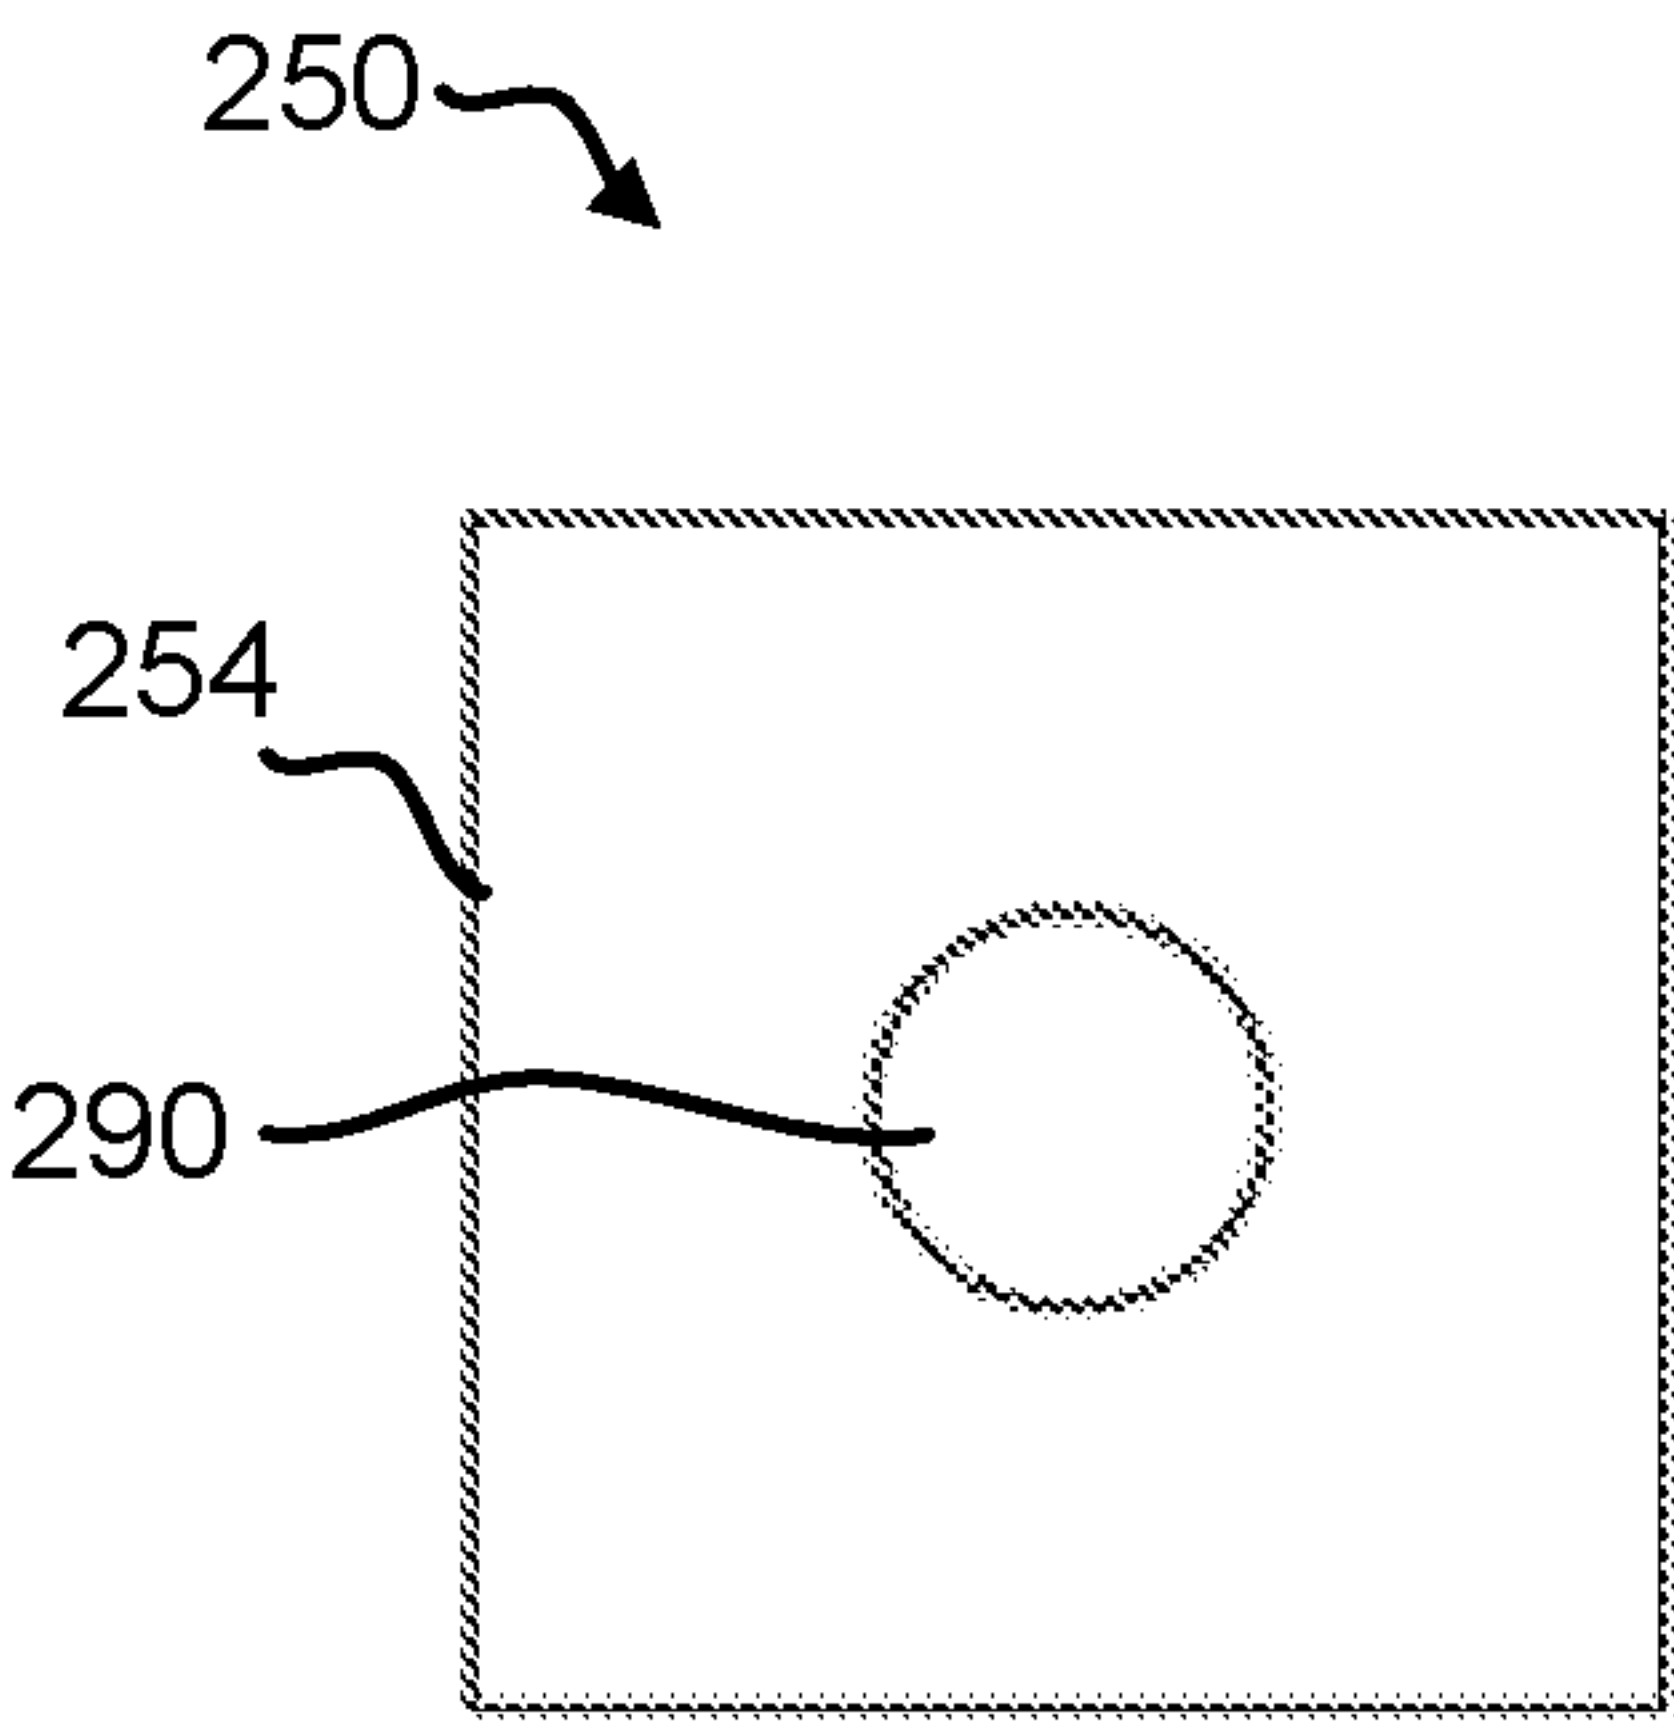



Fig 8C

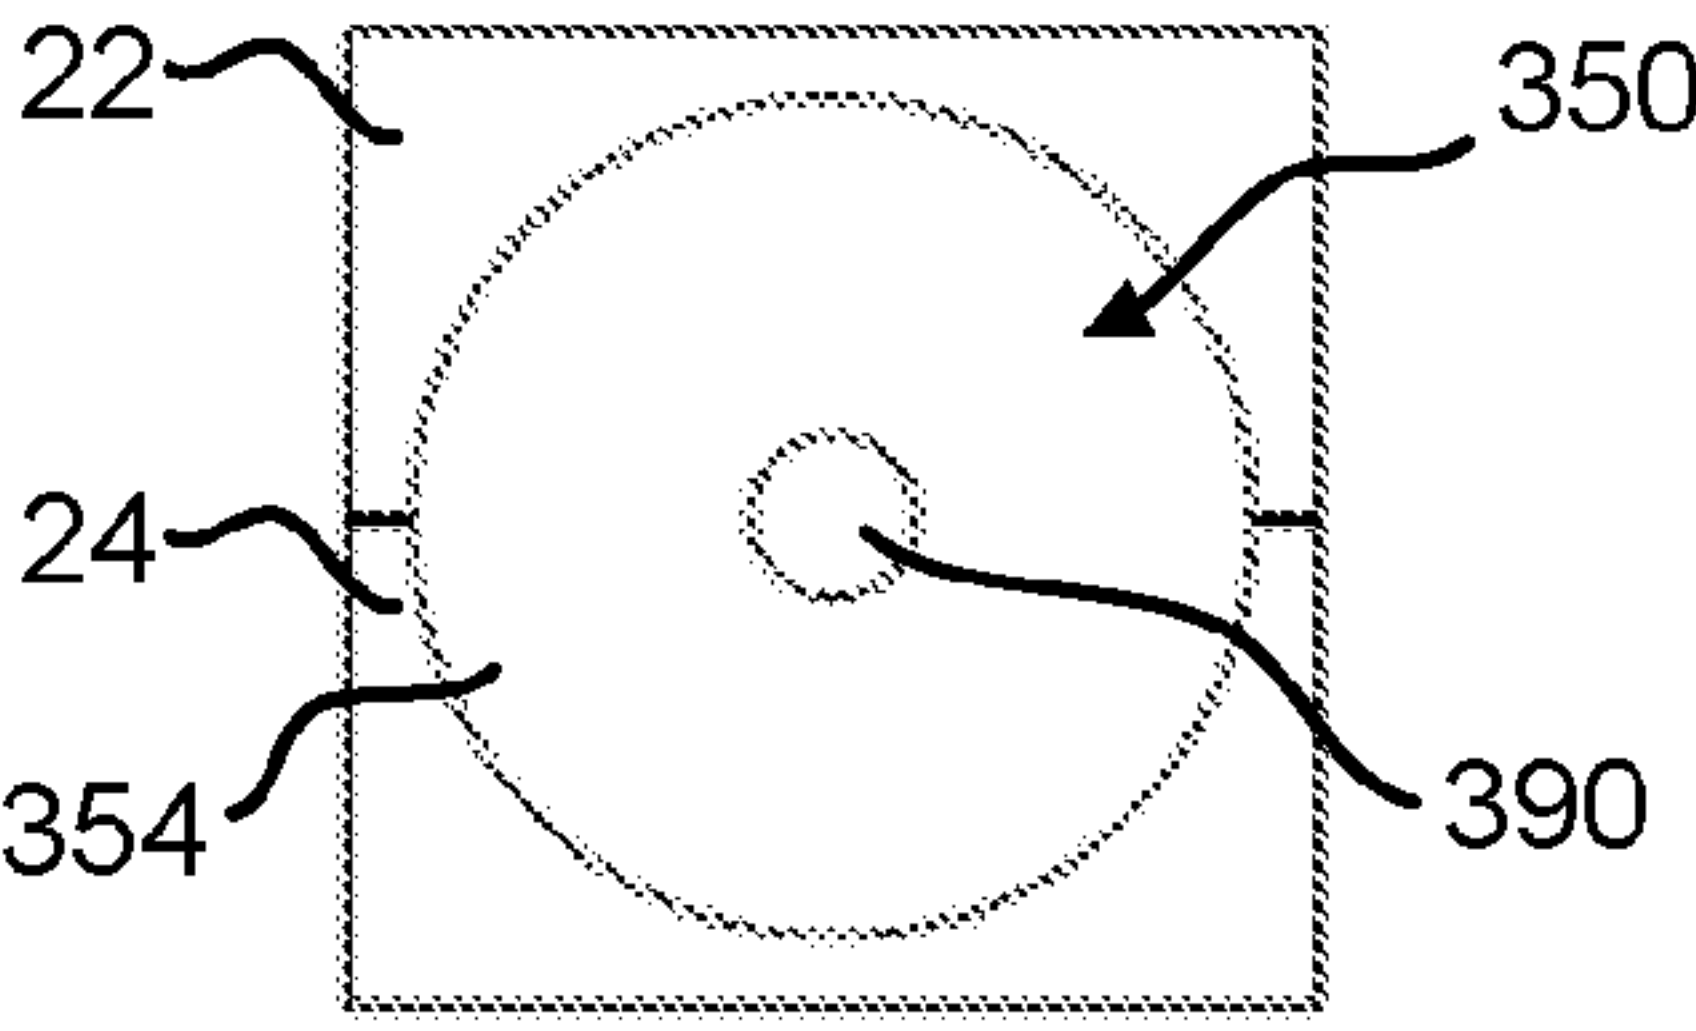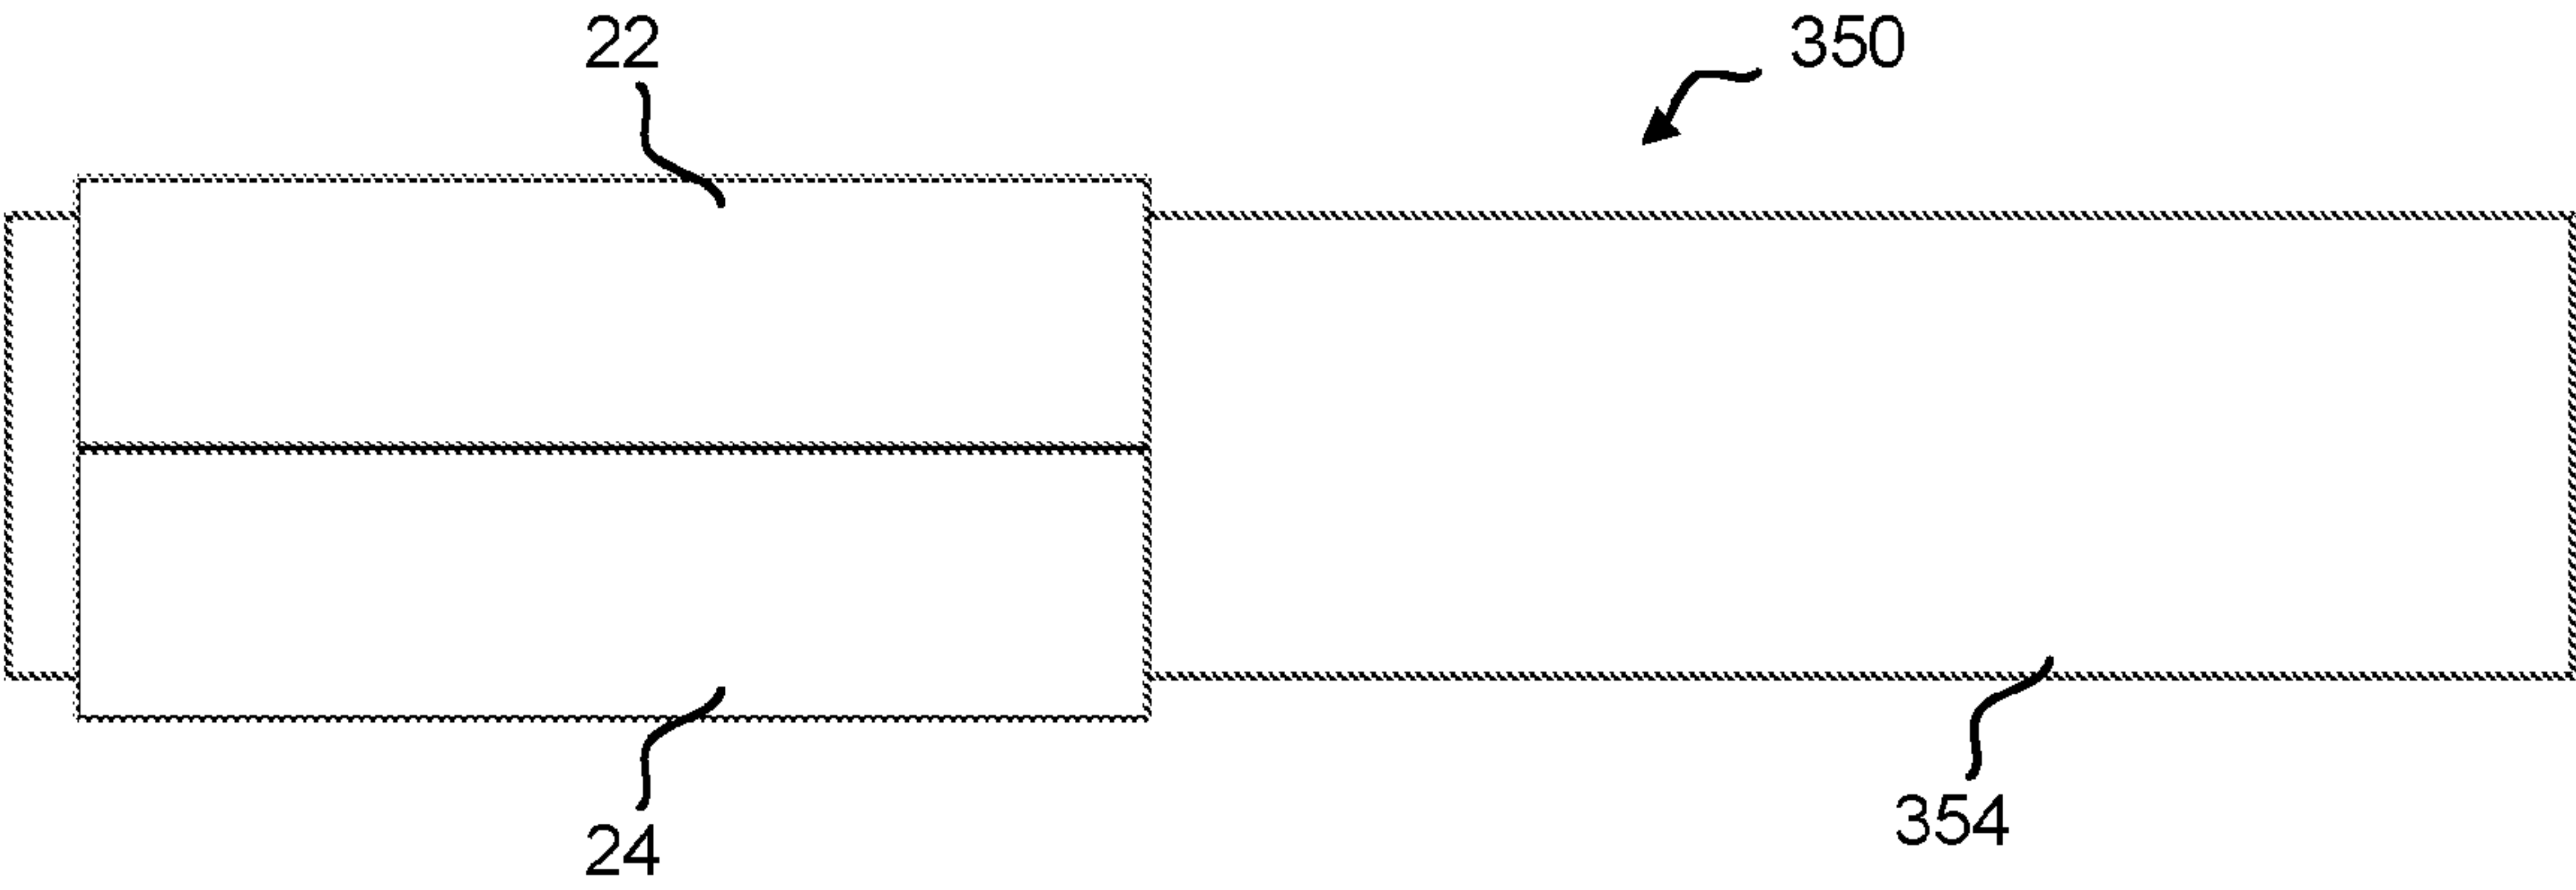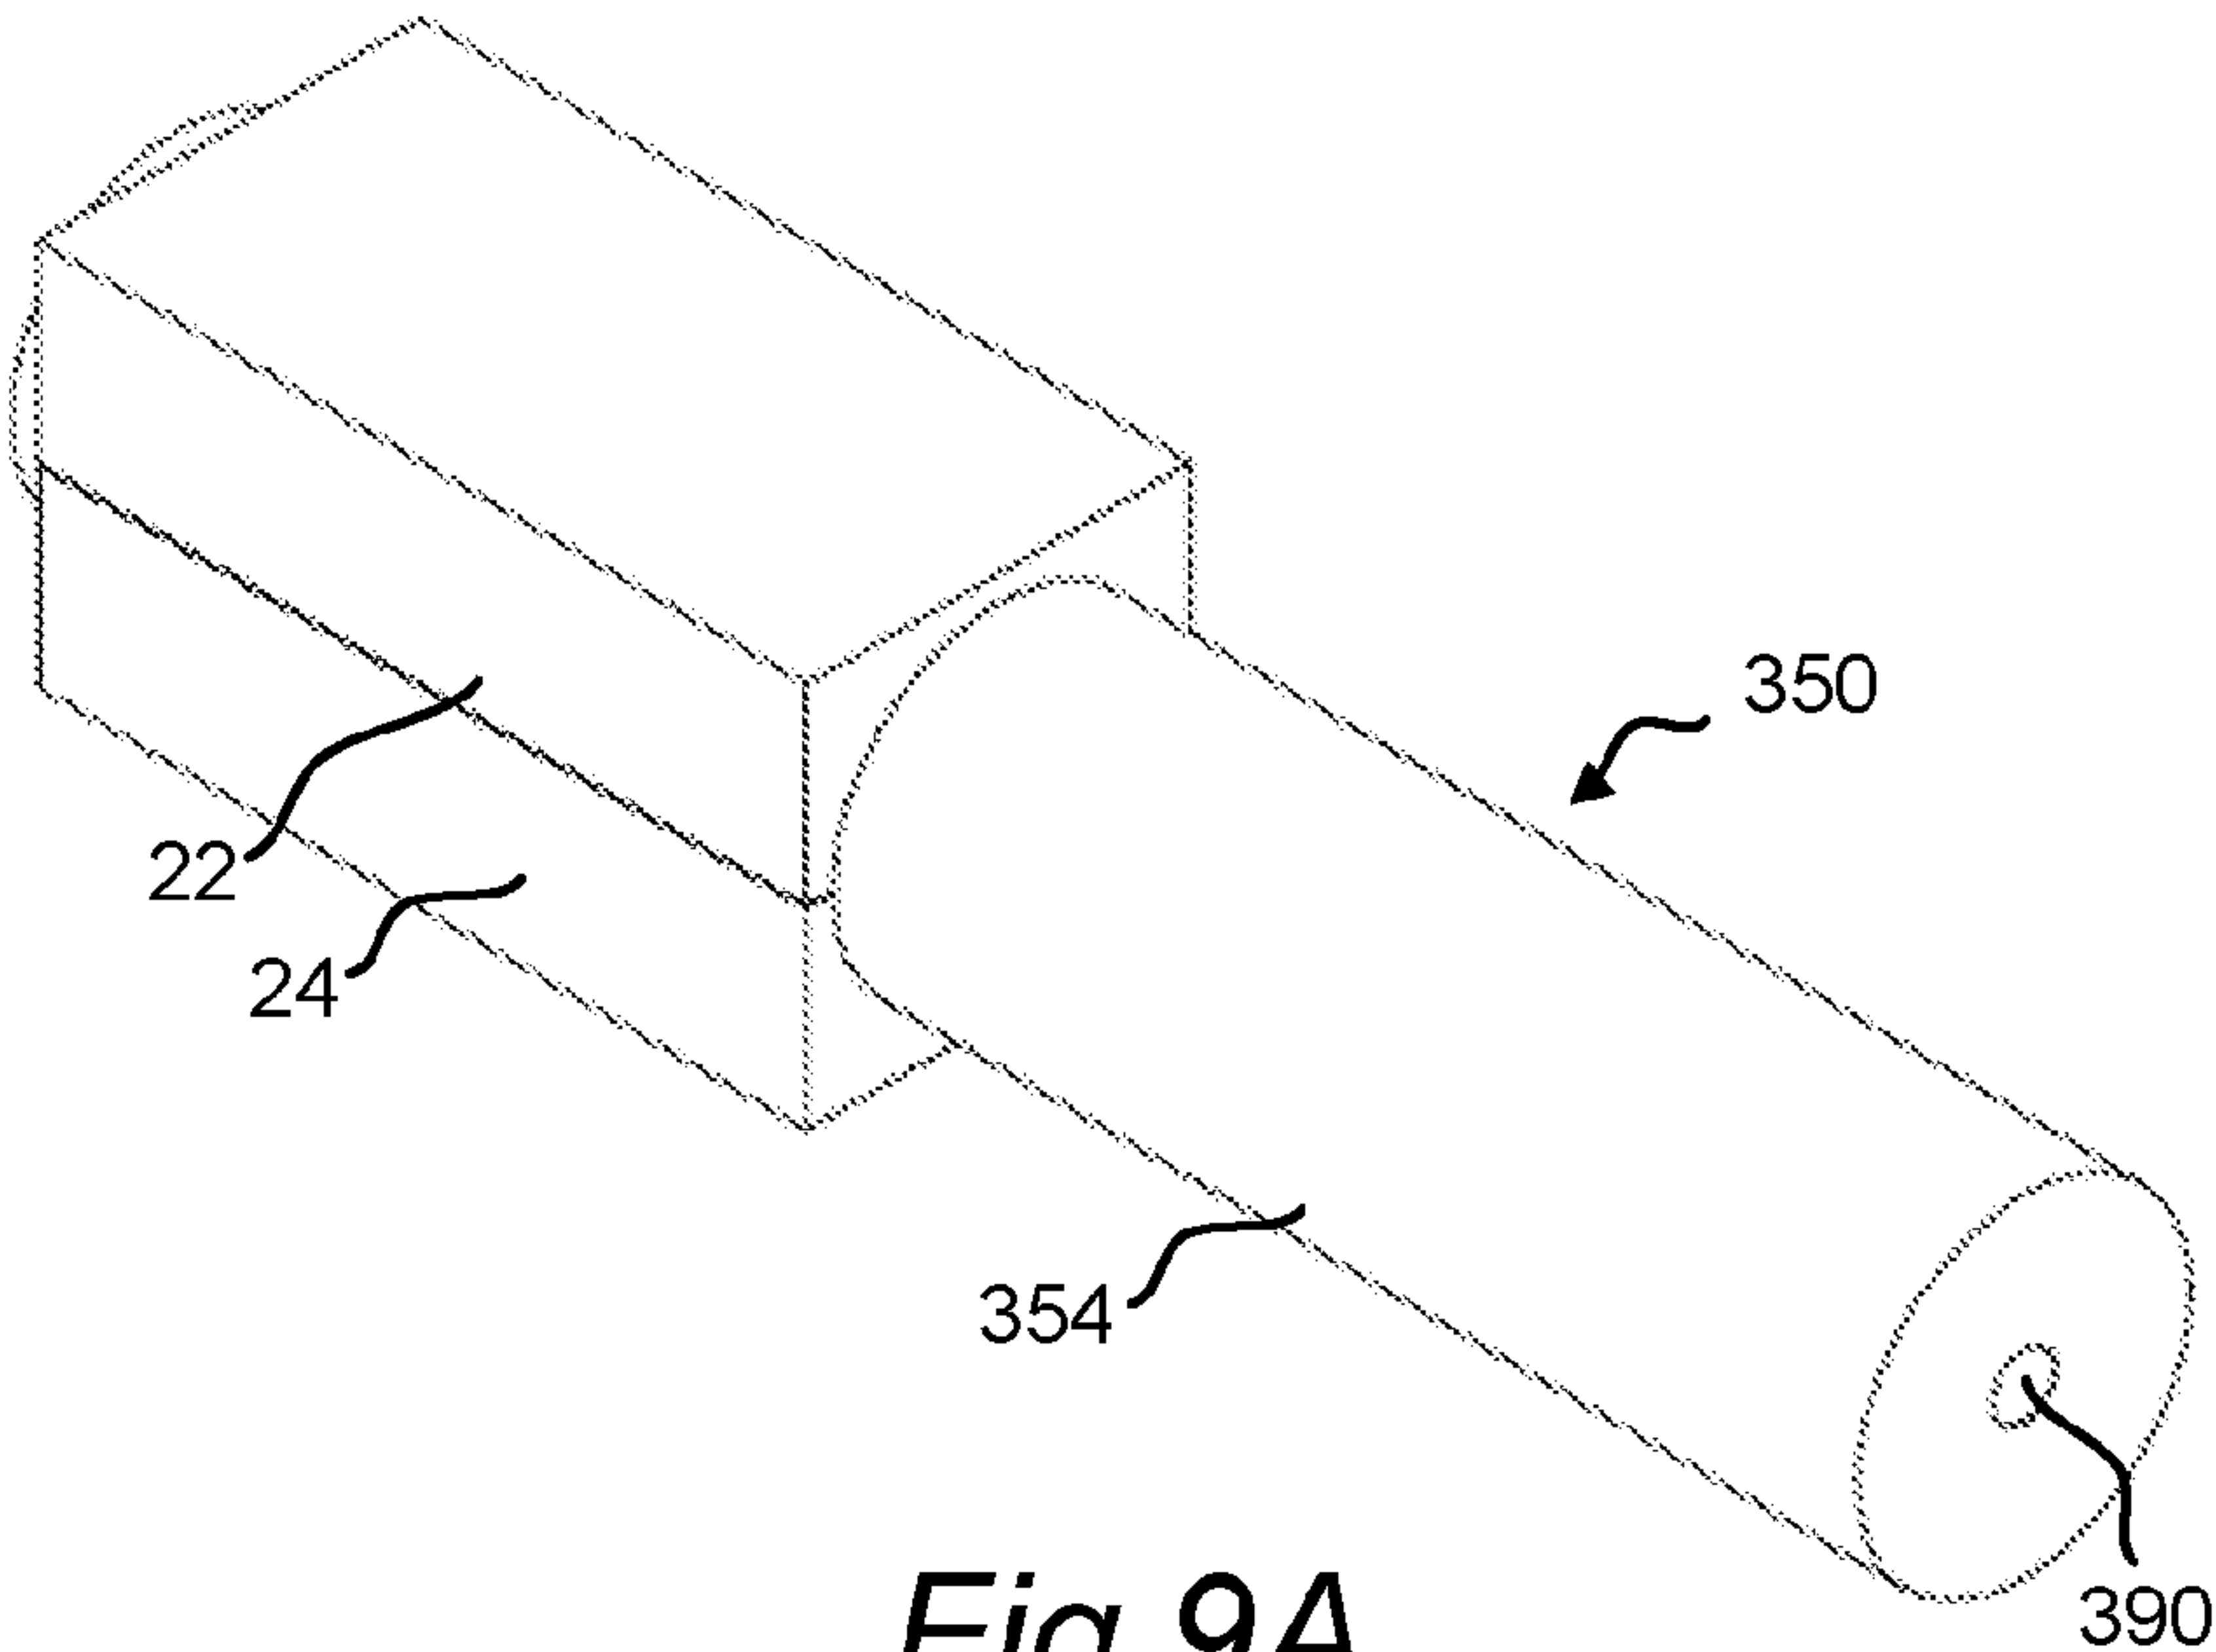


8/9

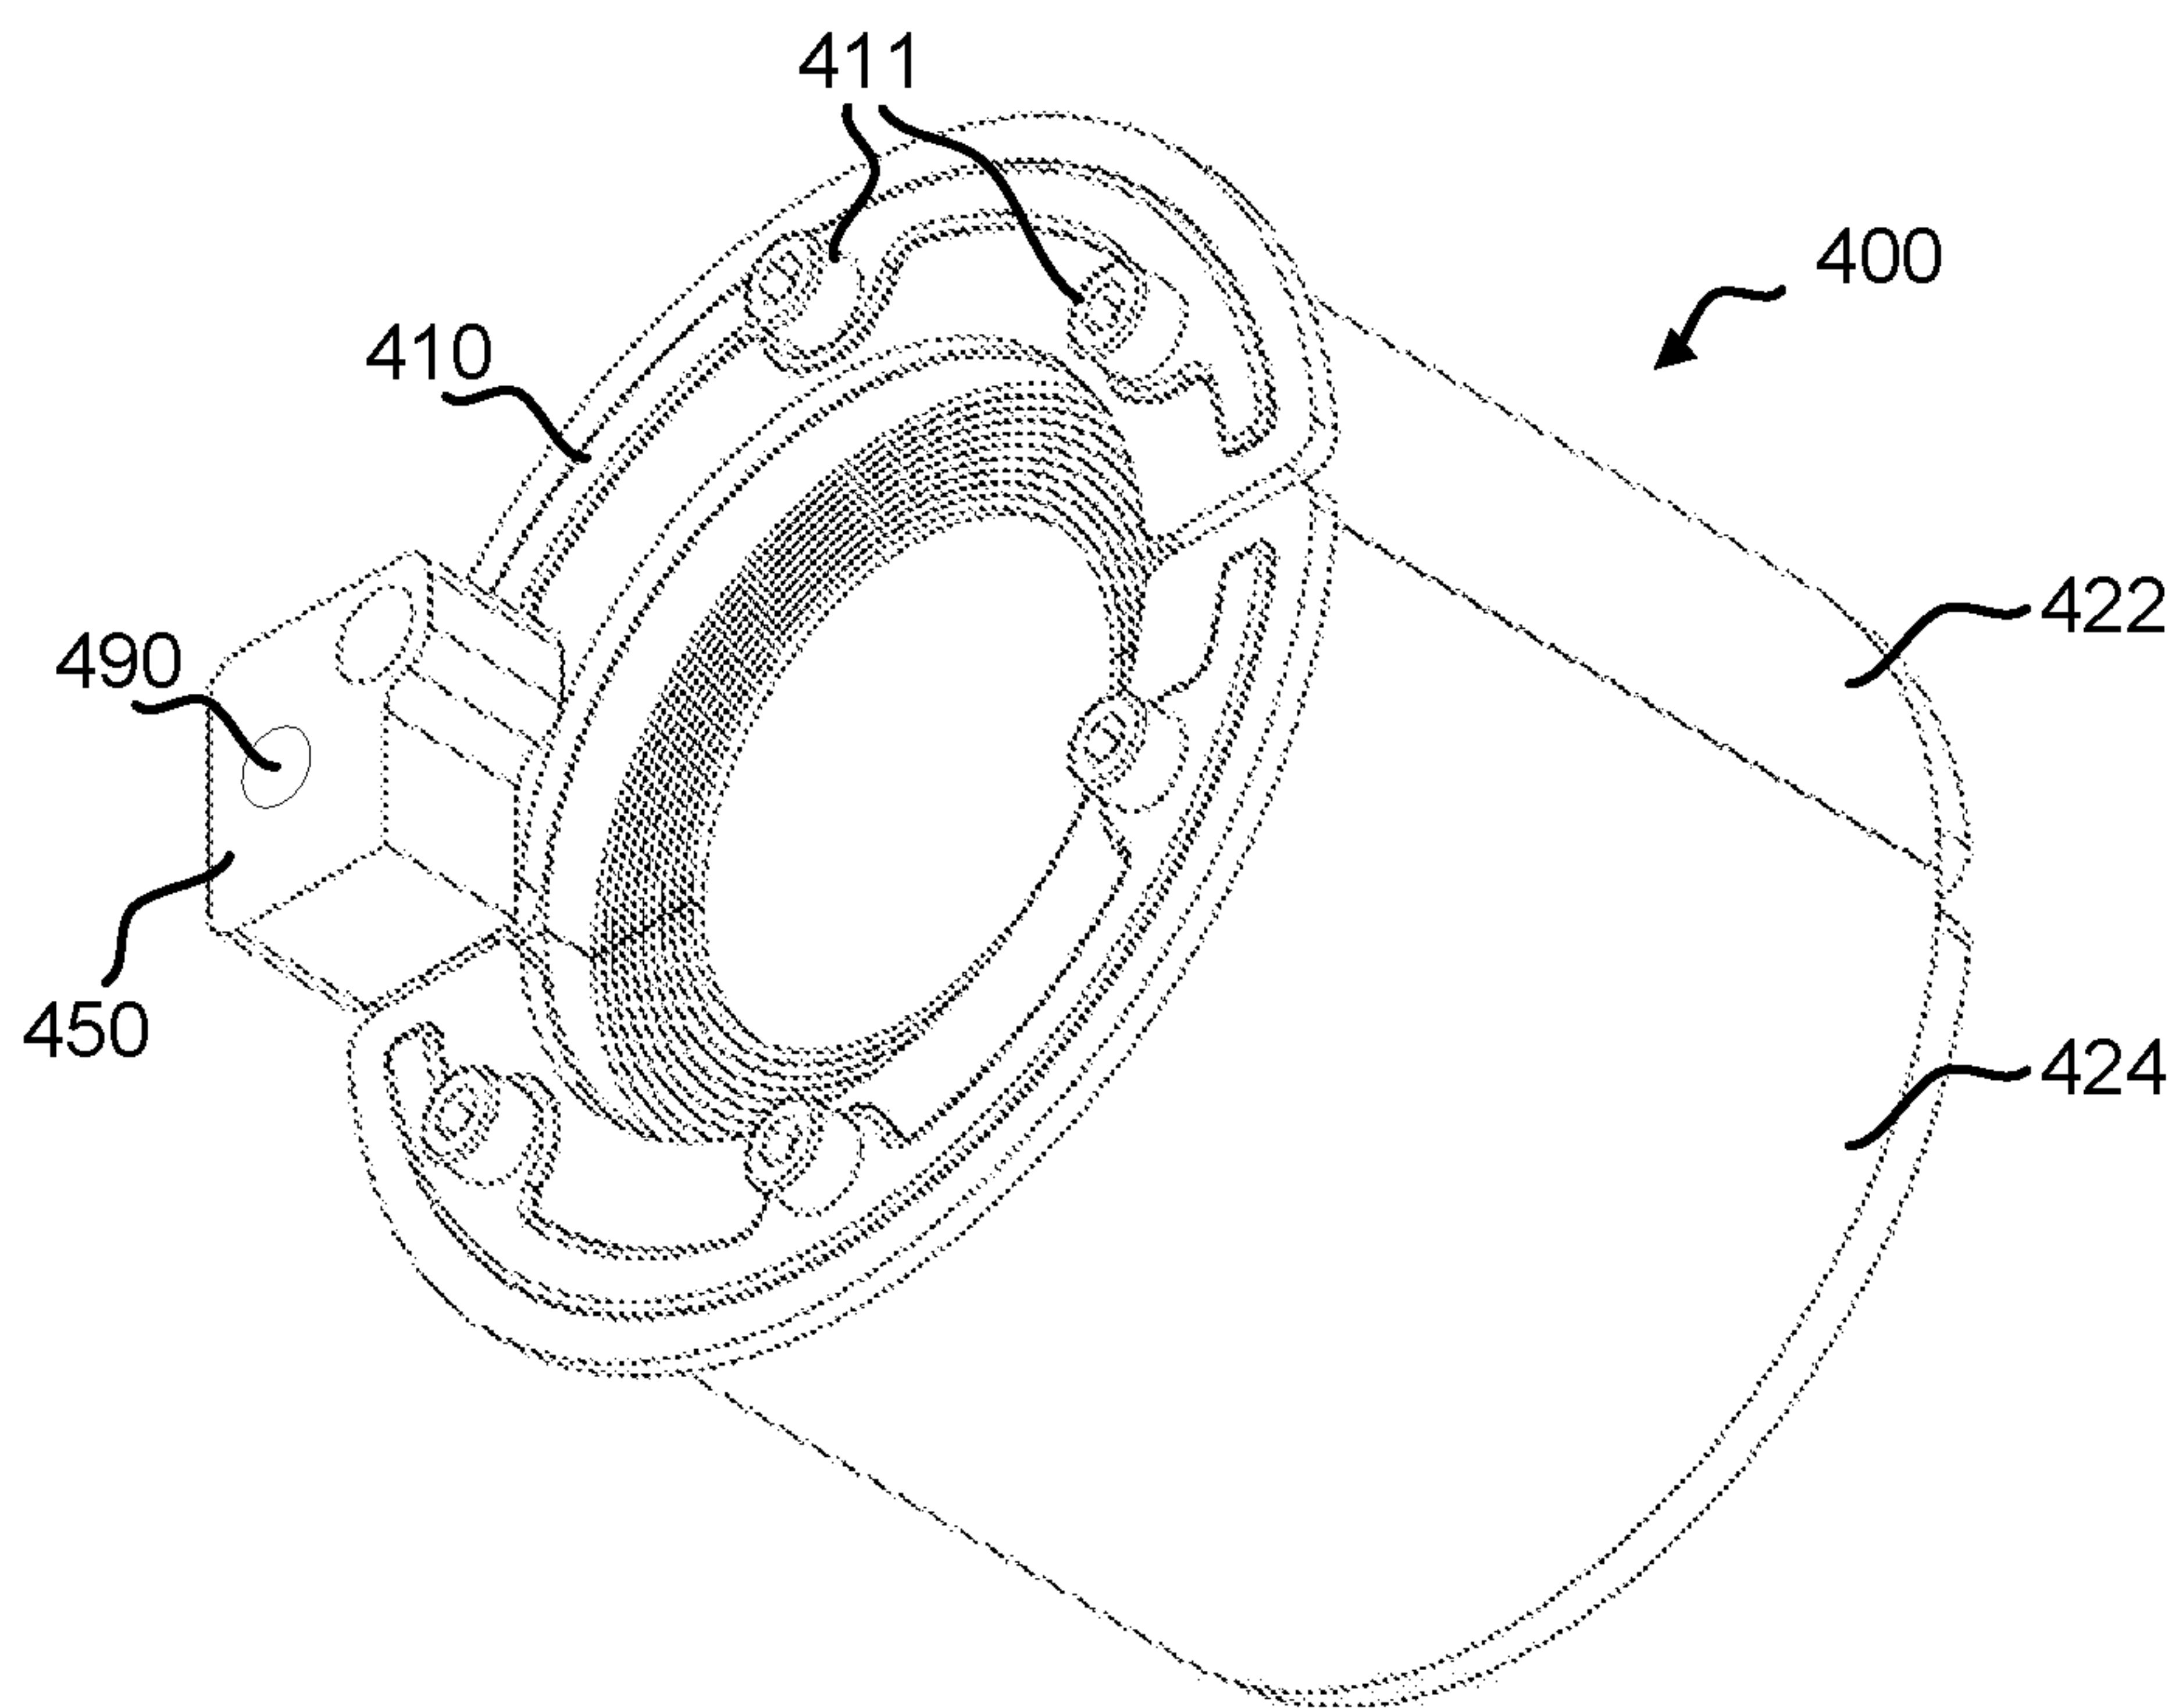

*Fig 10A*

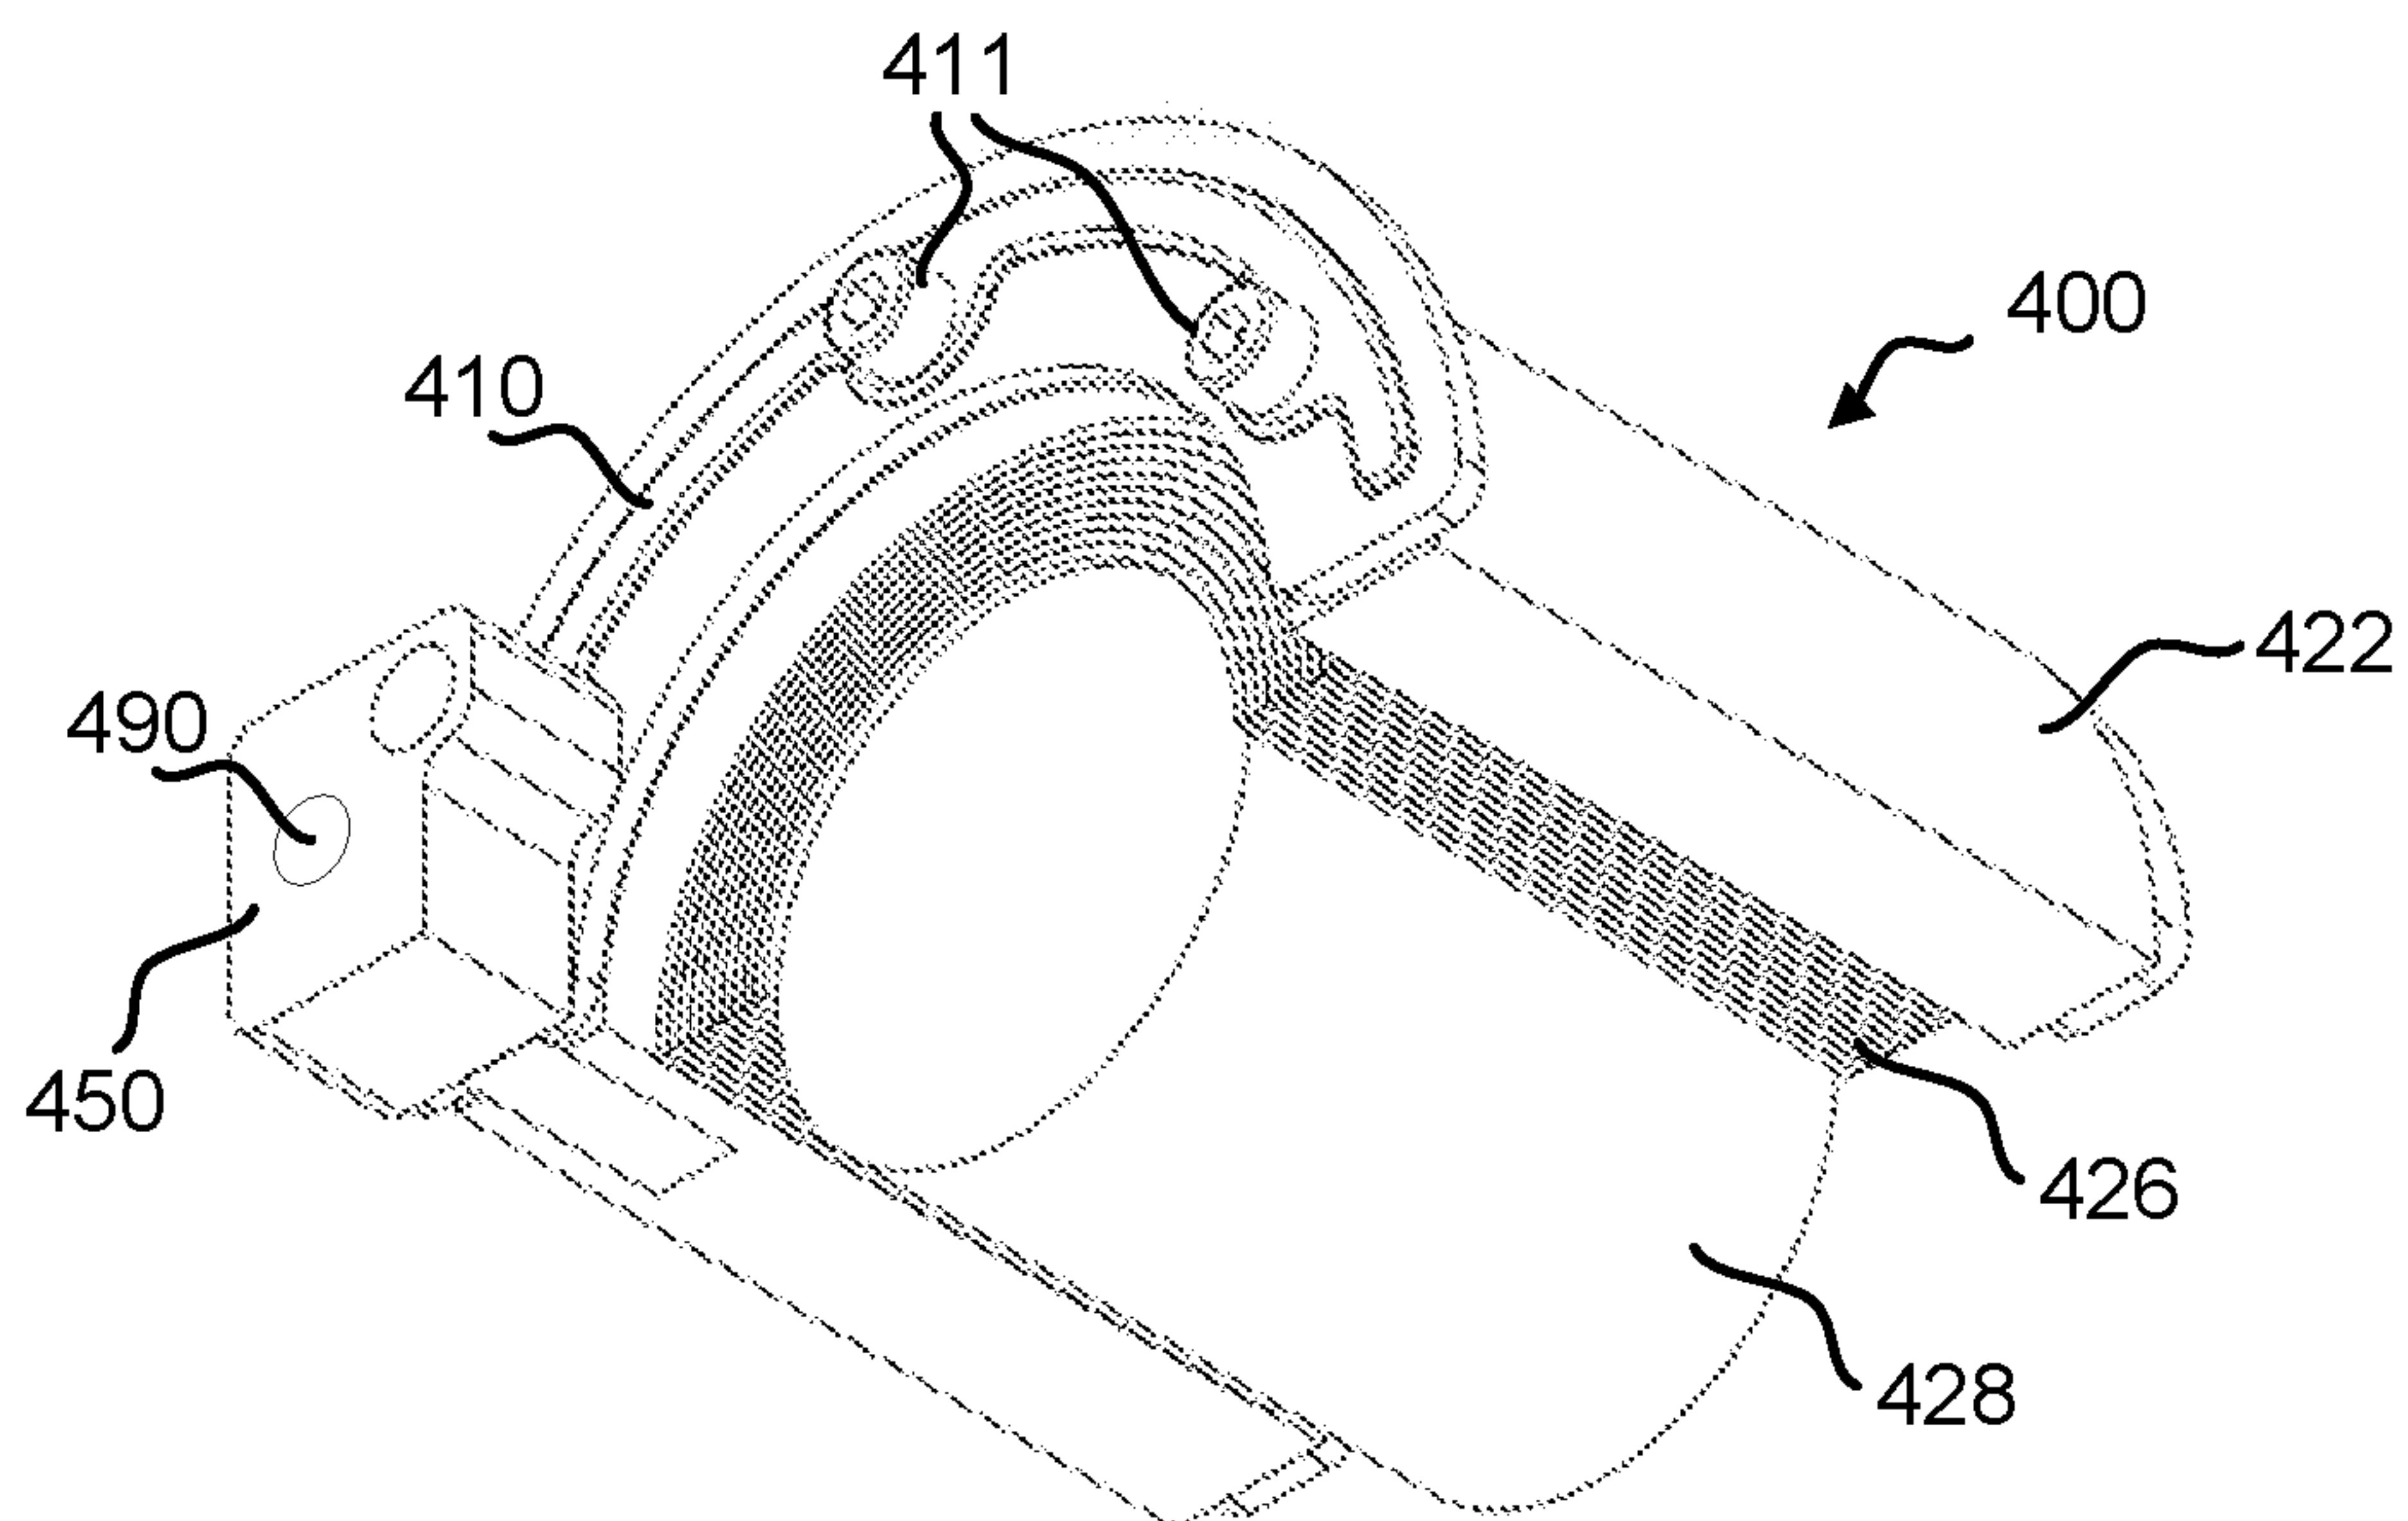

*Fig 10B*

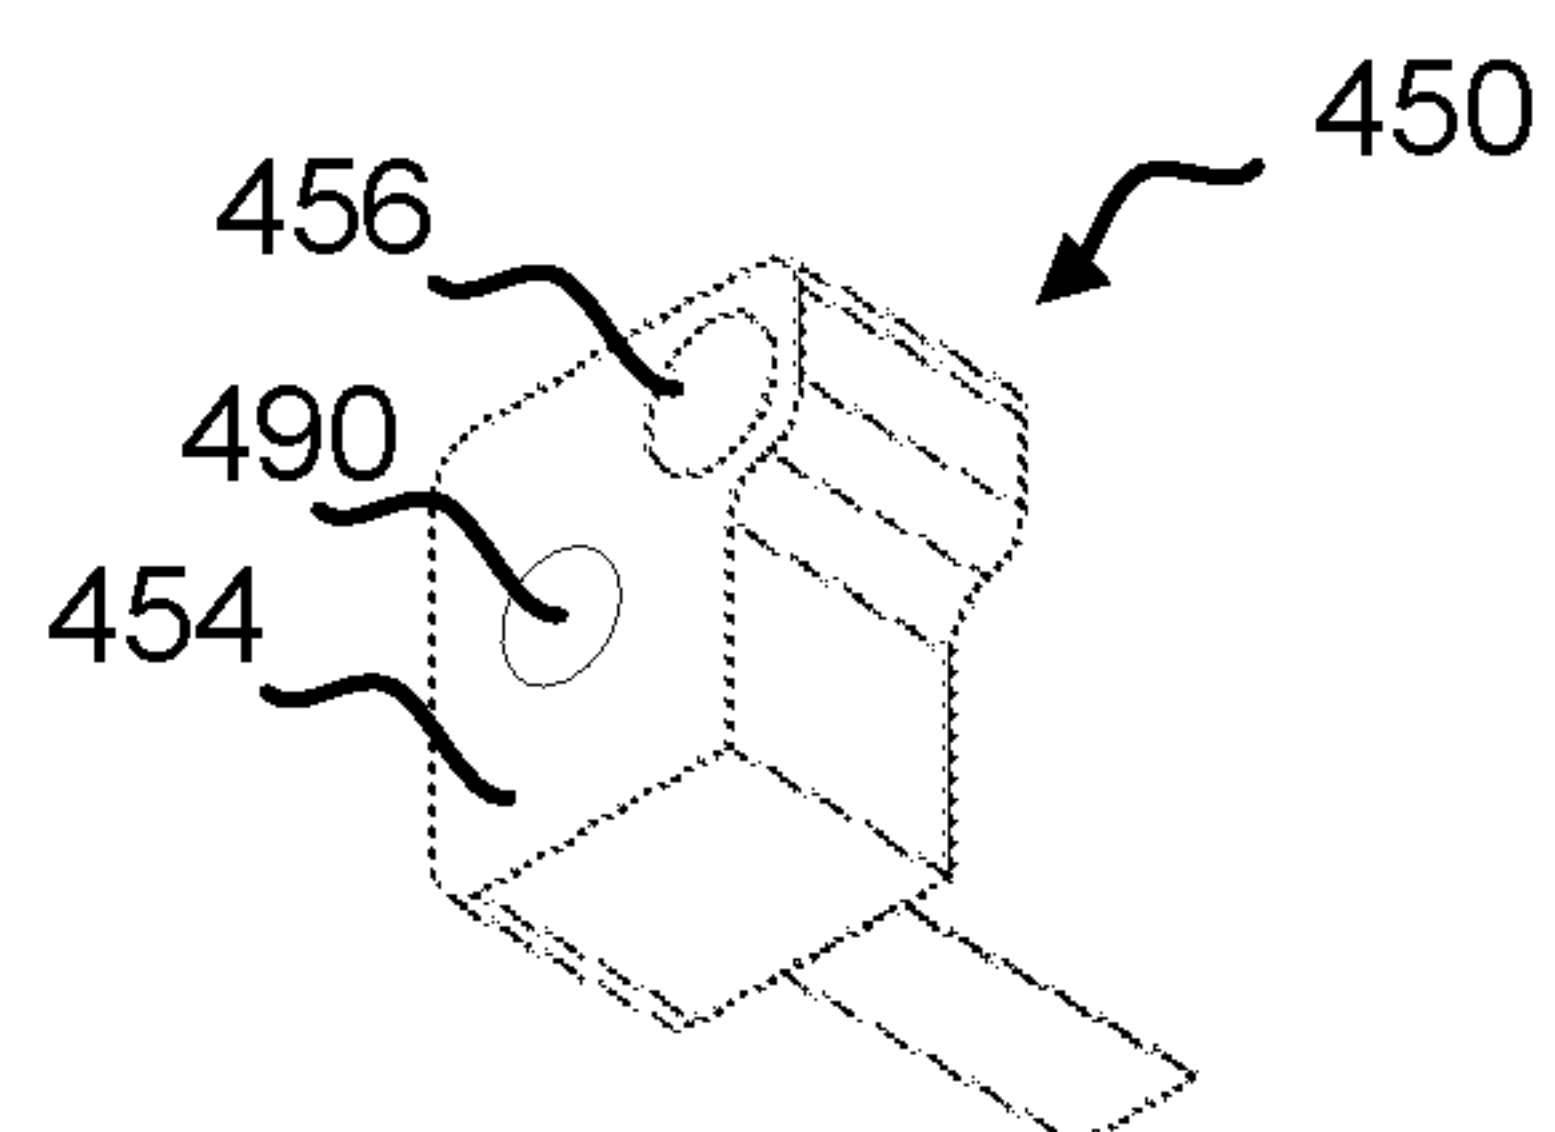


*Fig 10C*

9/9

500

A method of guiding a local user 3 at a cable, pipe or wire transit 1; 1a...1n; 400:

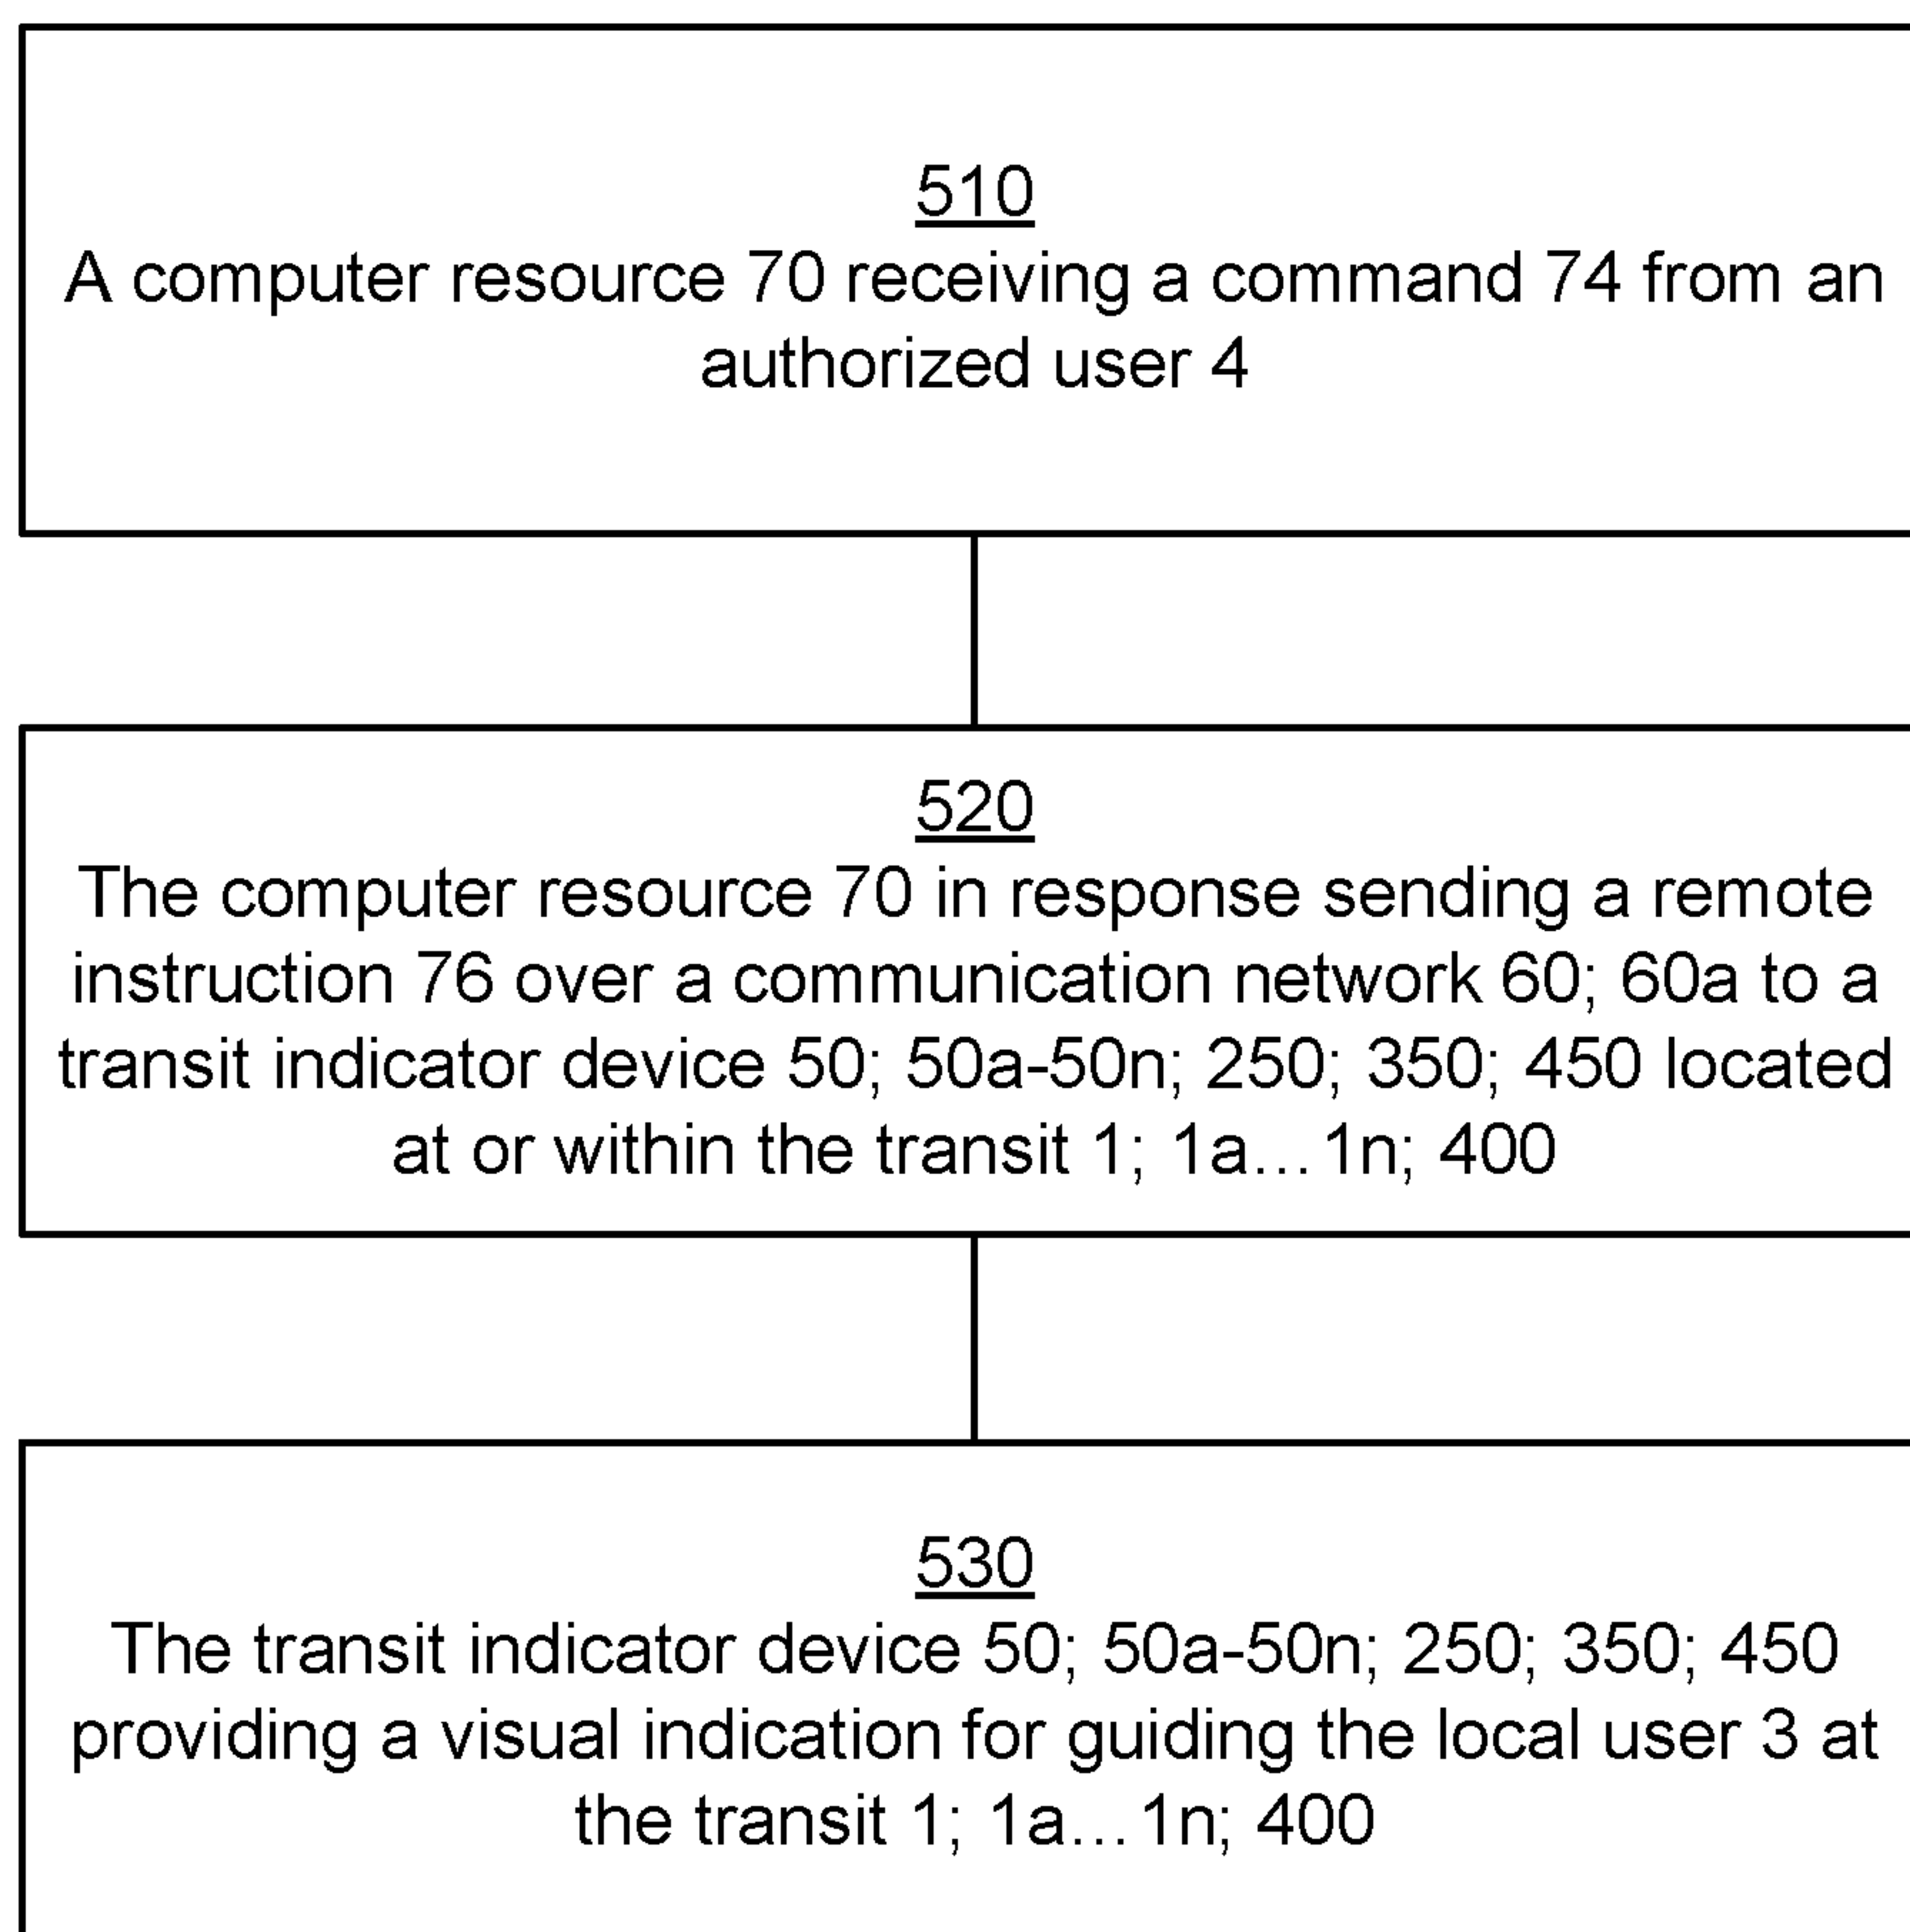

*Fig 11*