

FIG. 1

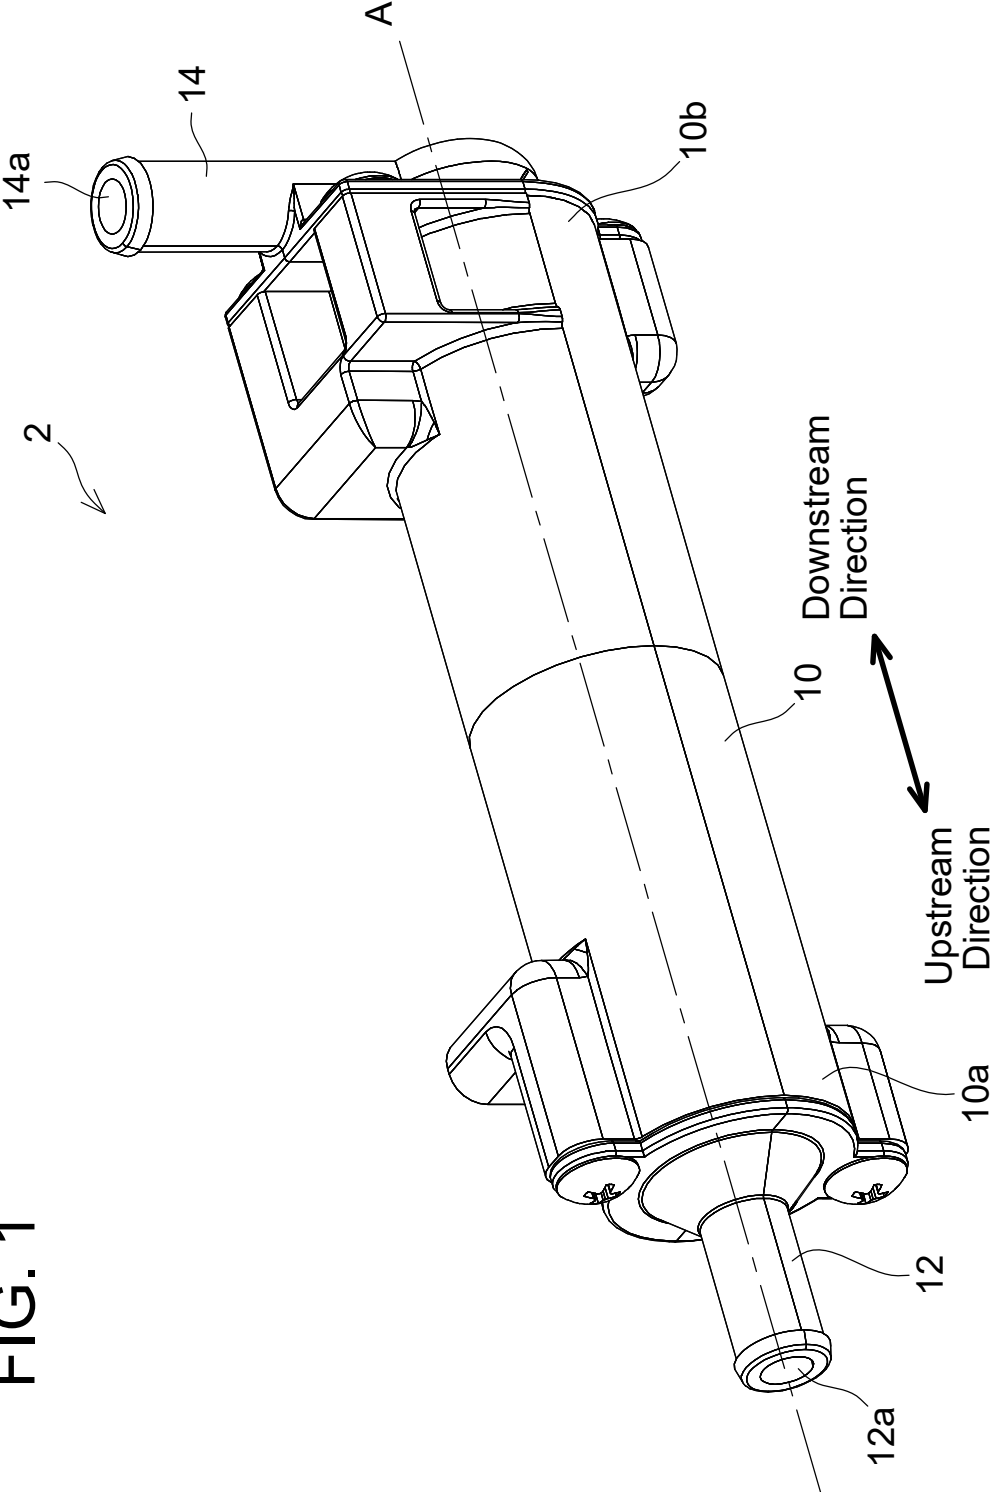
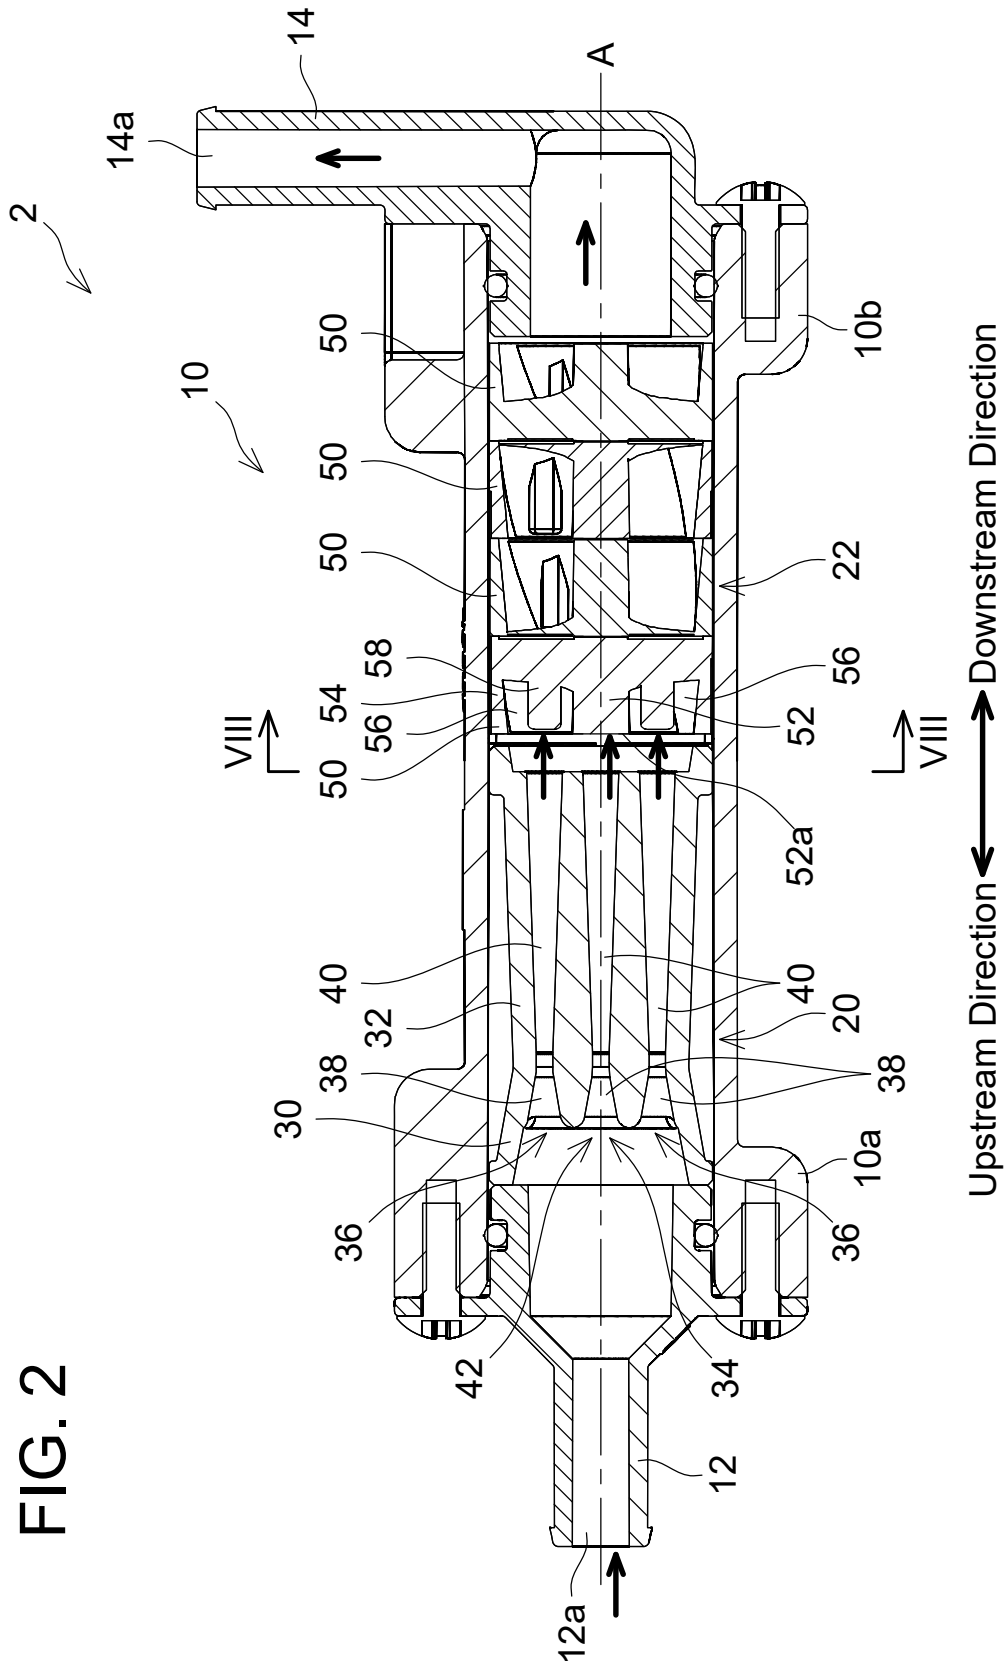


FIG. 2



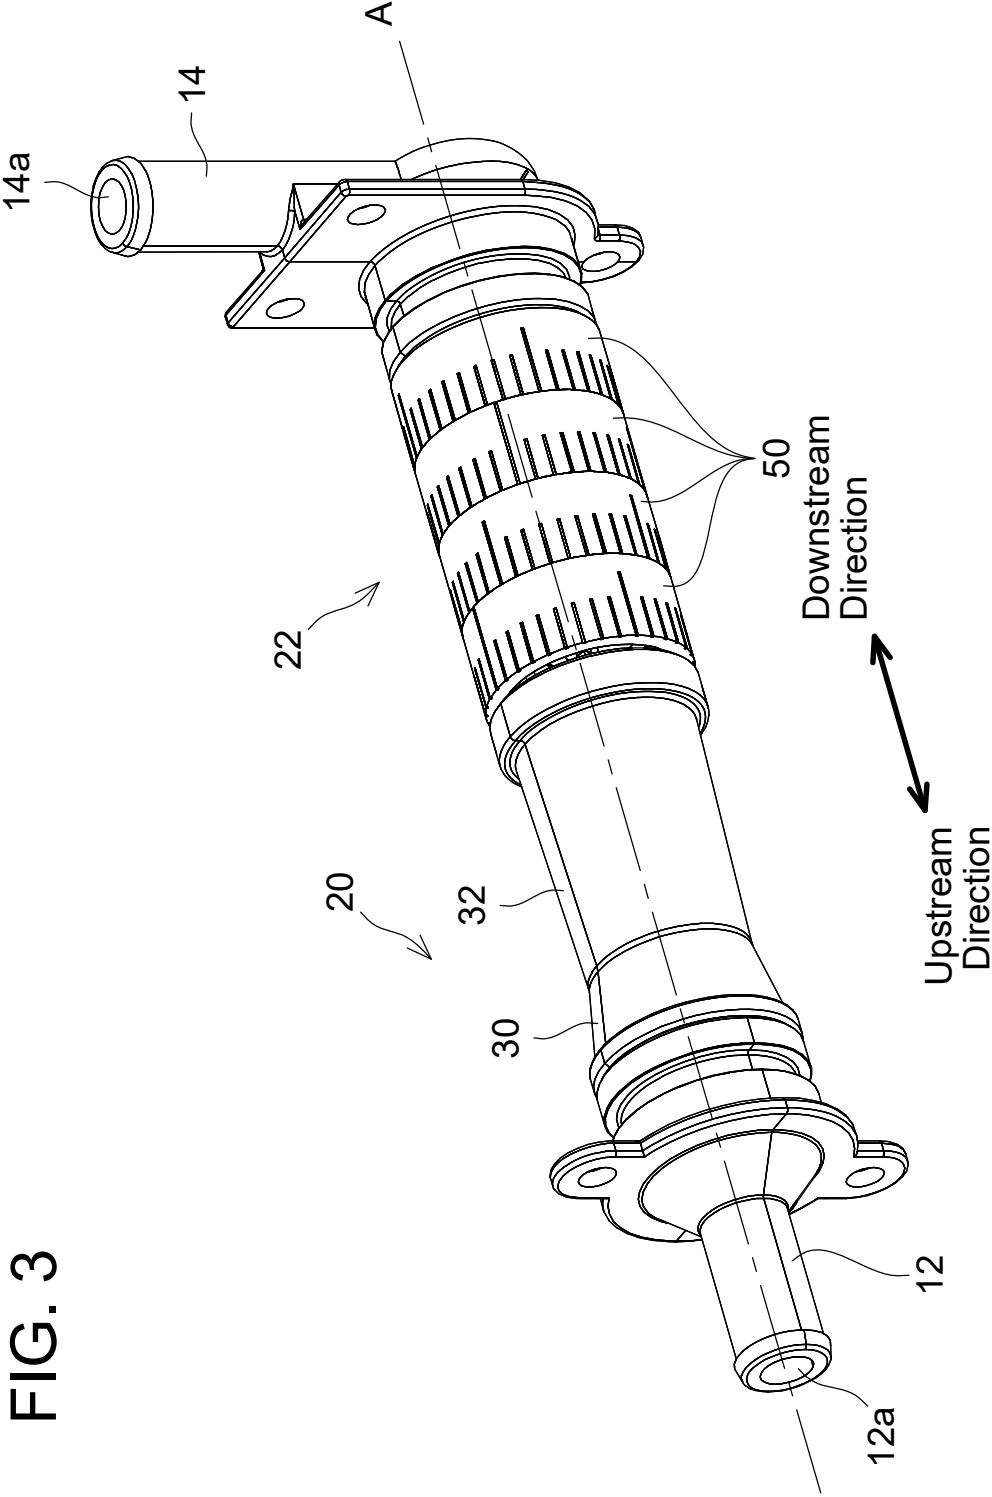


FIG. 3

FIG. 4

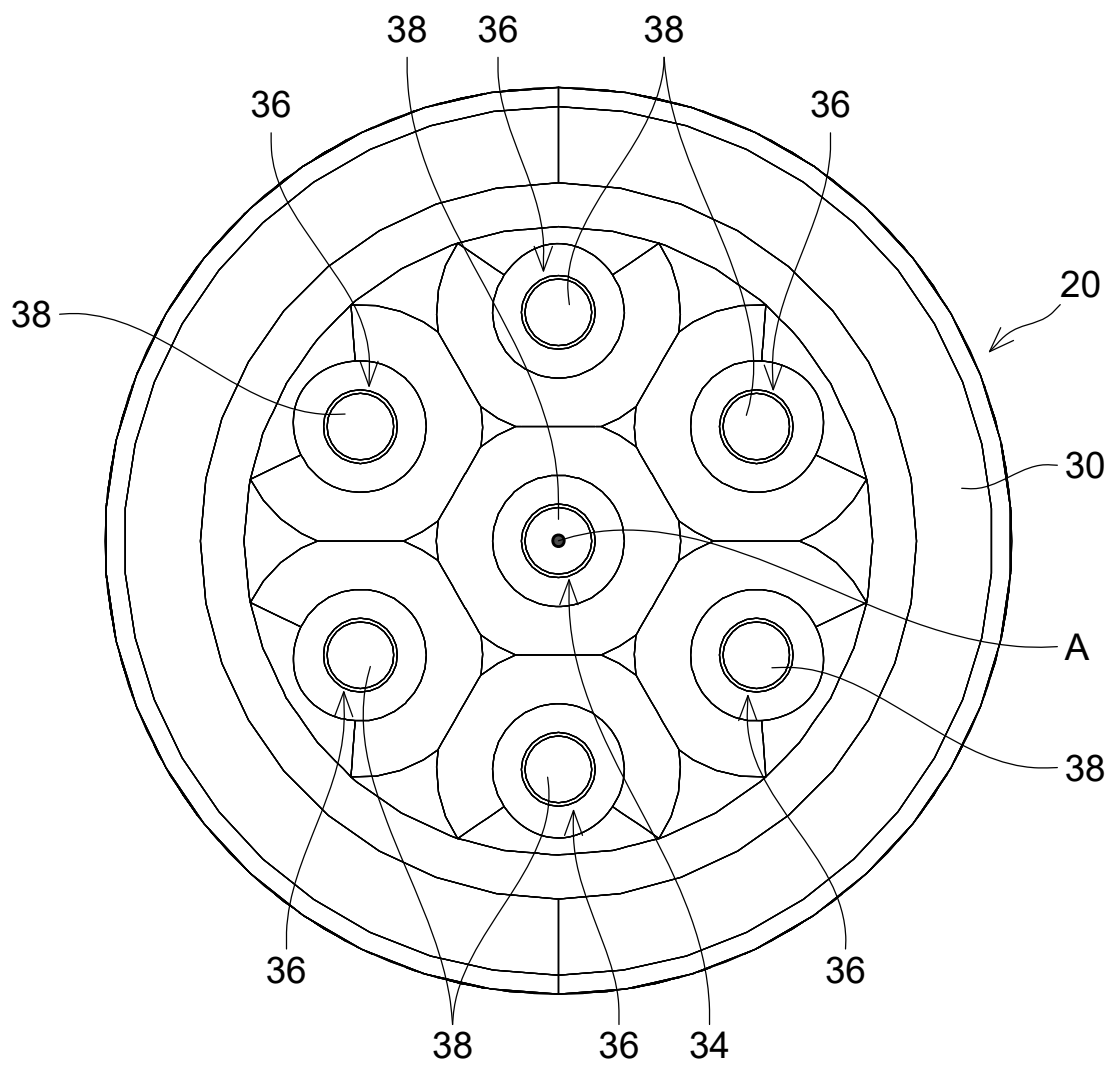


FIG. 5

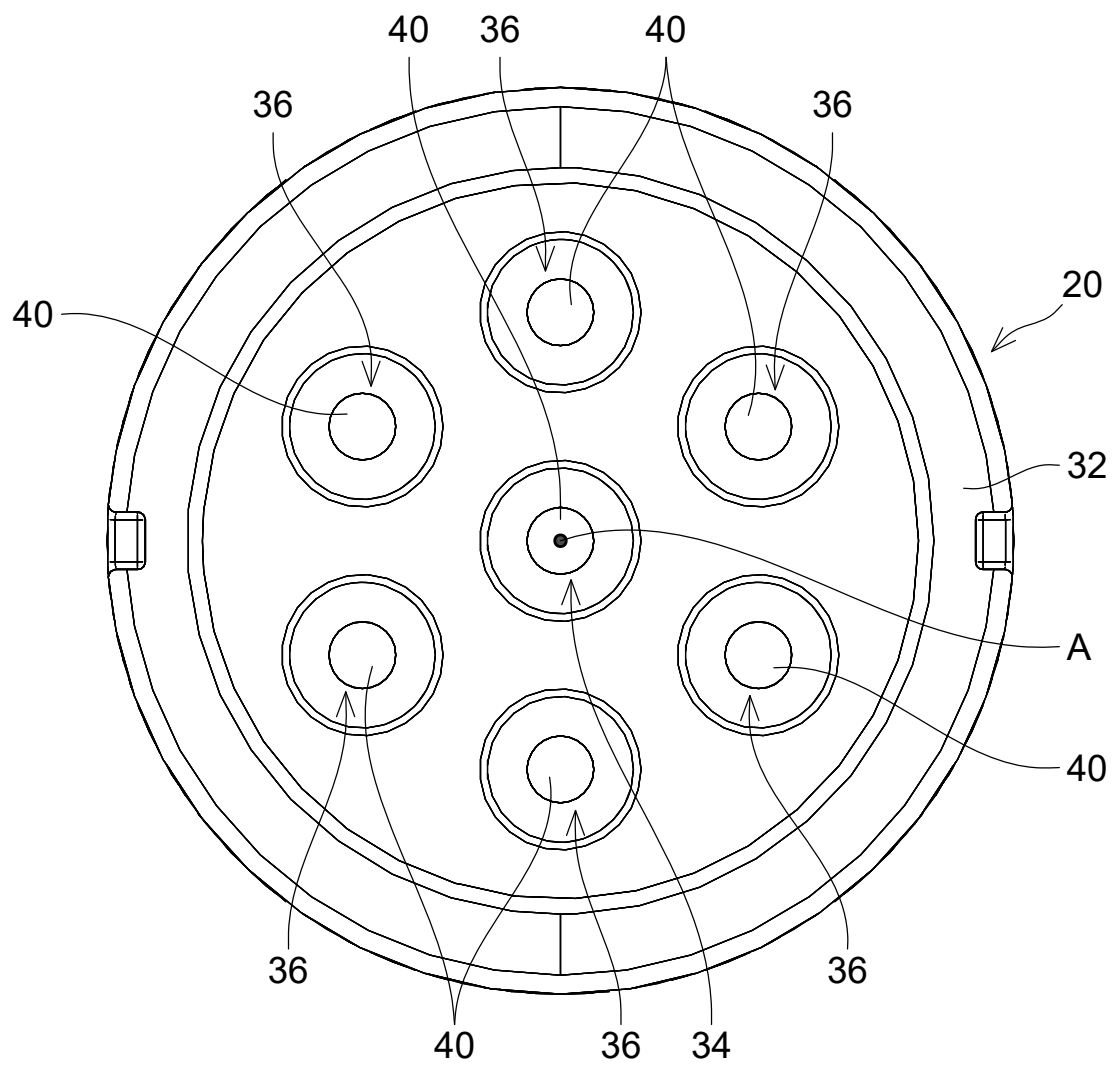


FIG. 6

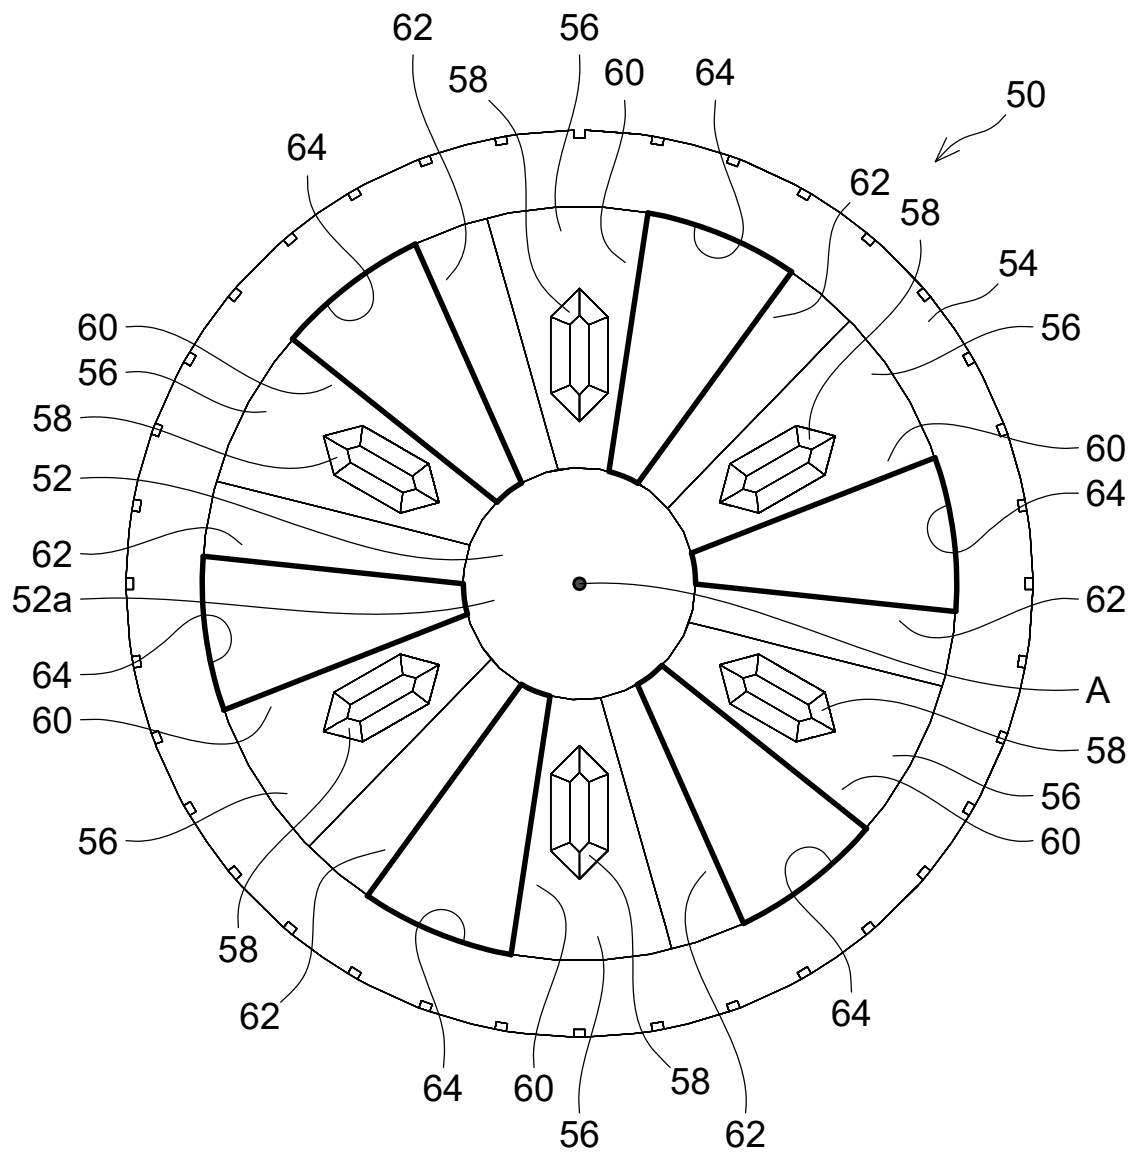


FIG. 7

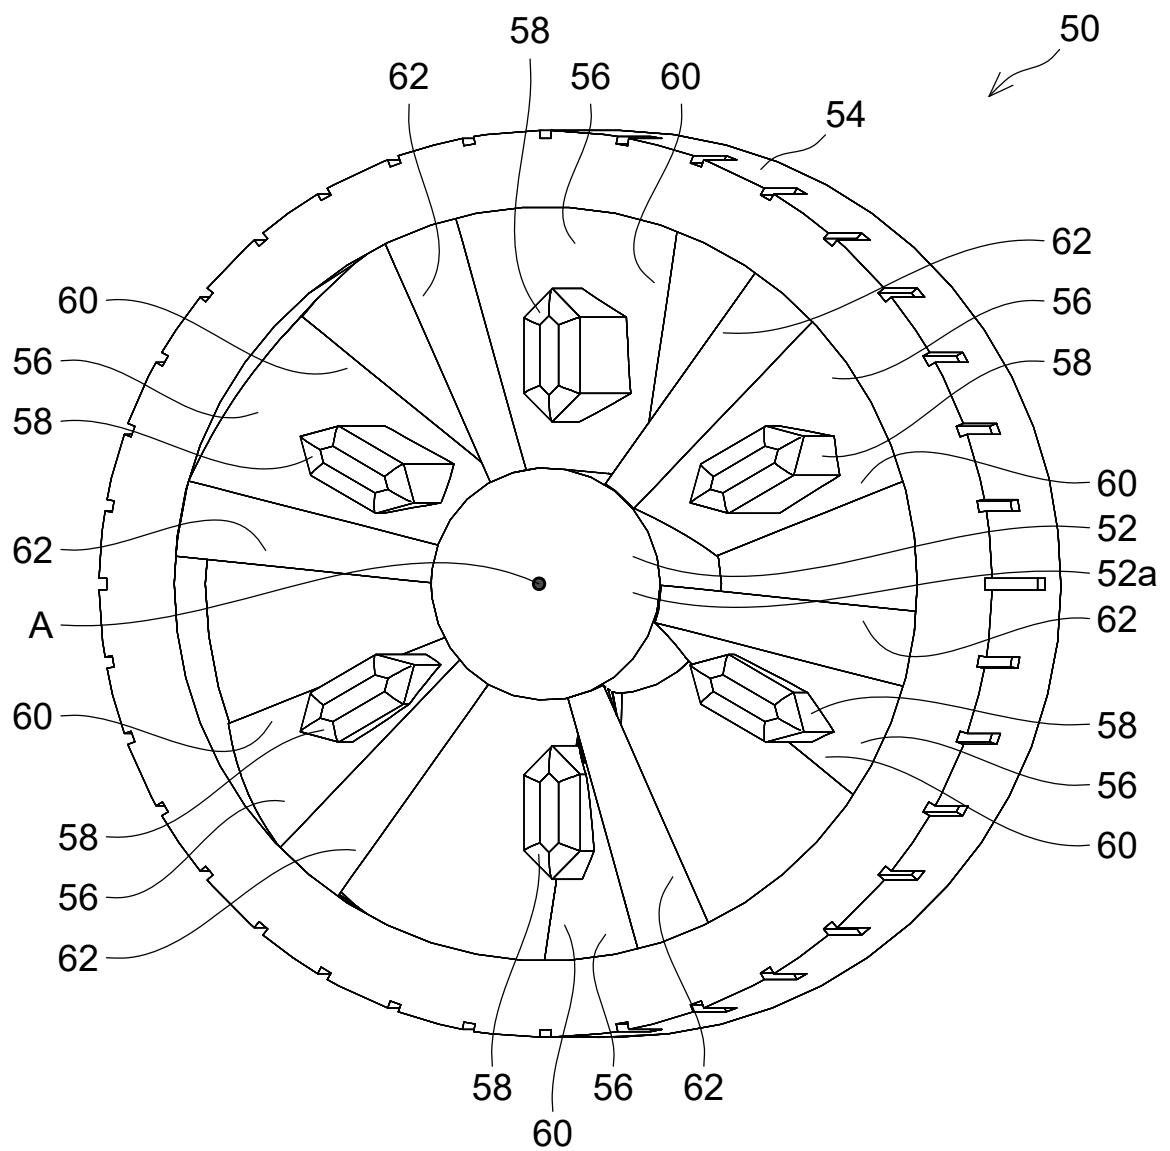


FIG. 8

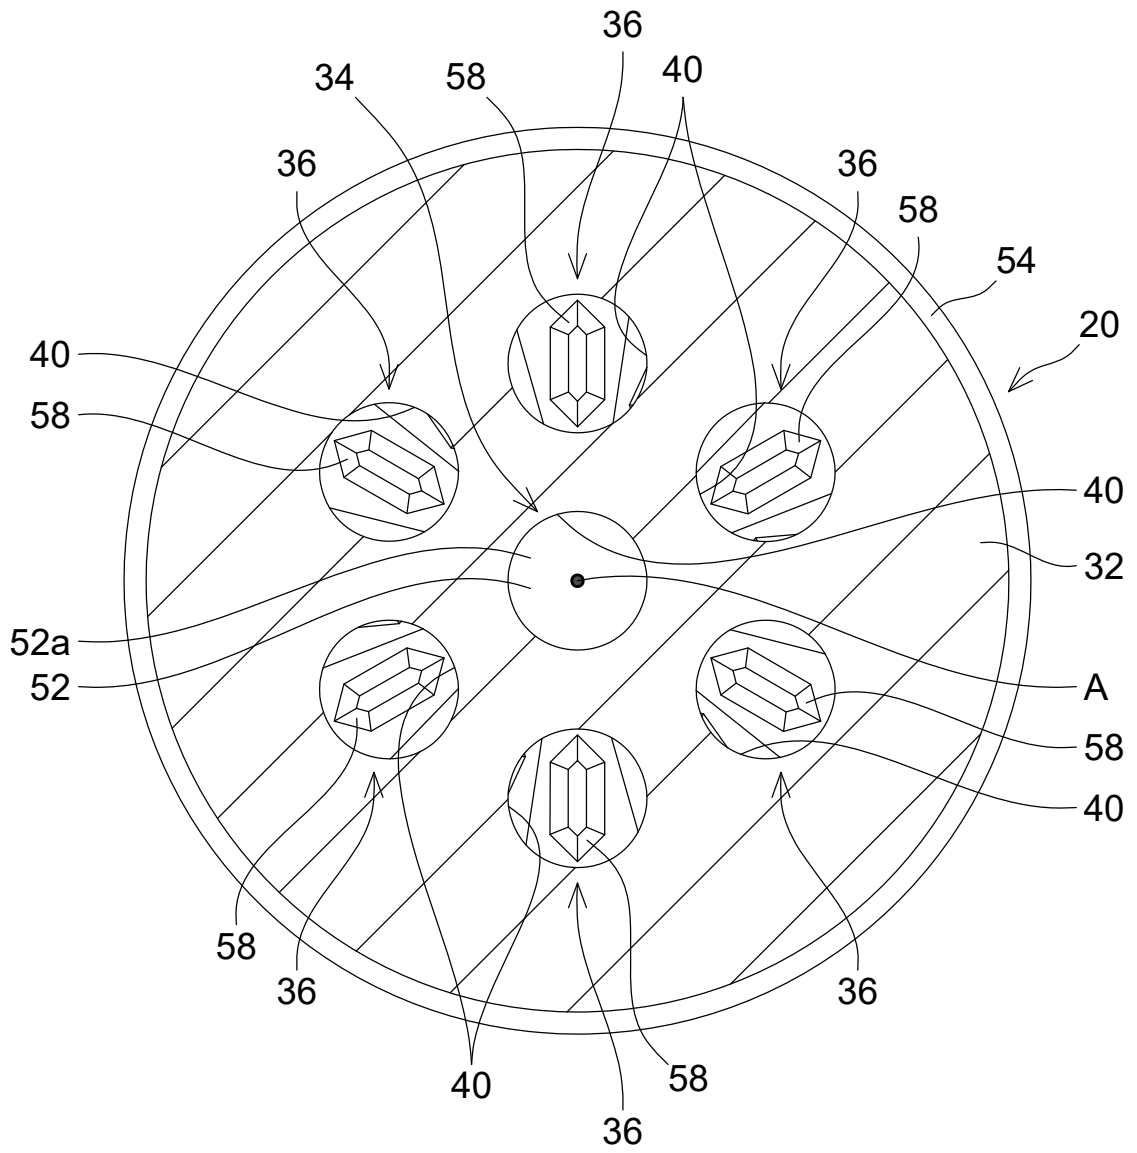


FIG. 9

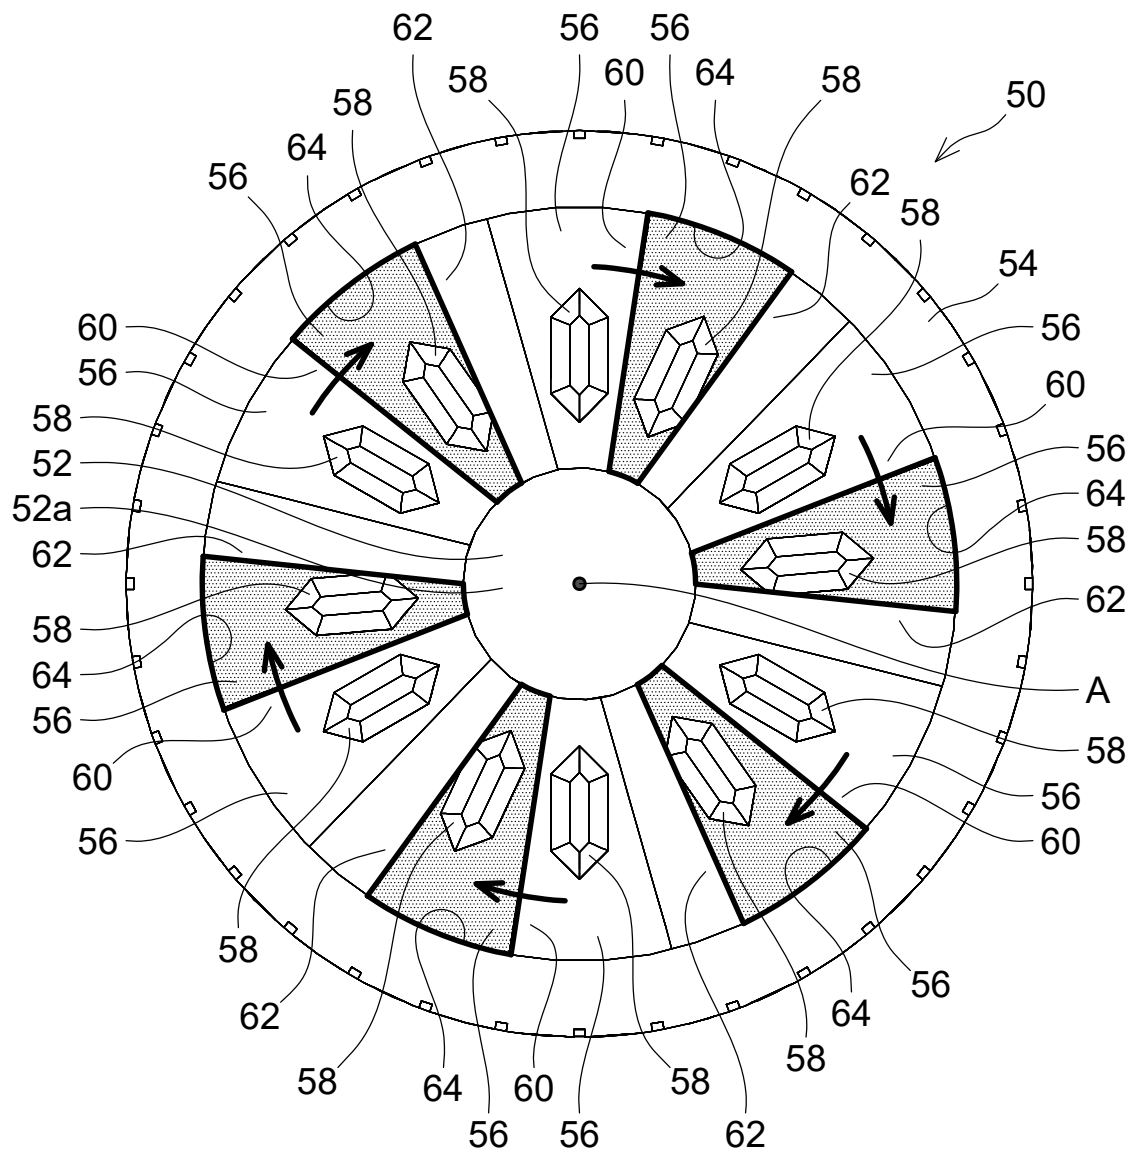


FIG. 10

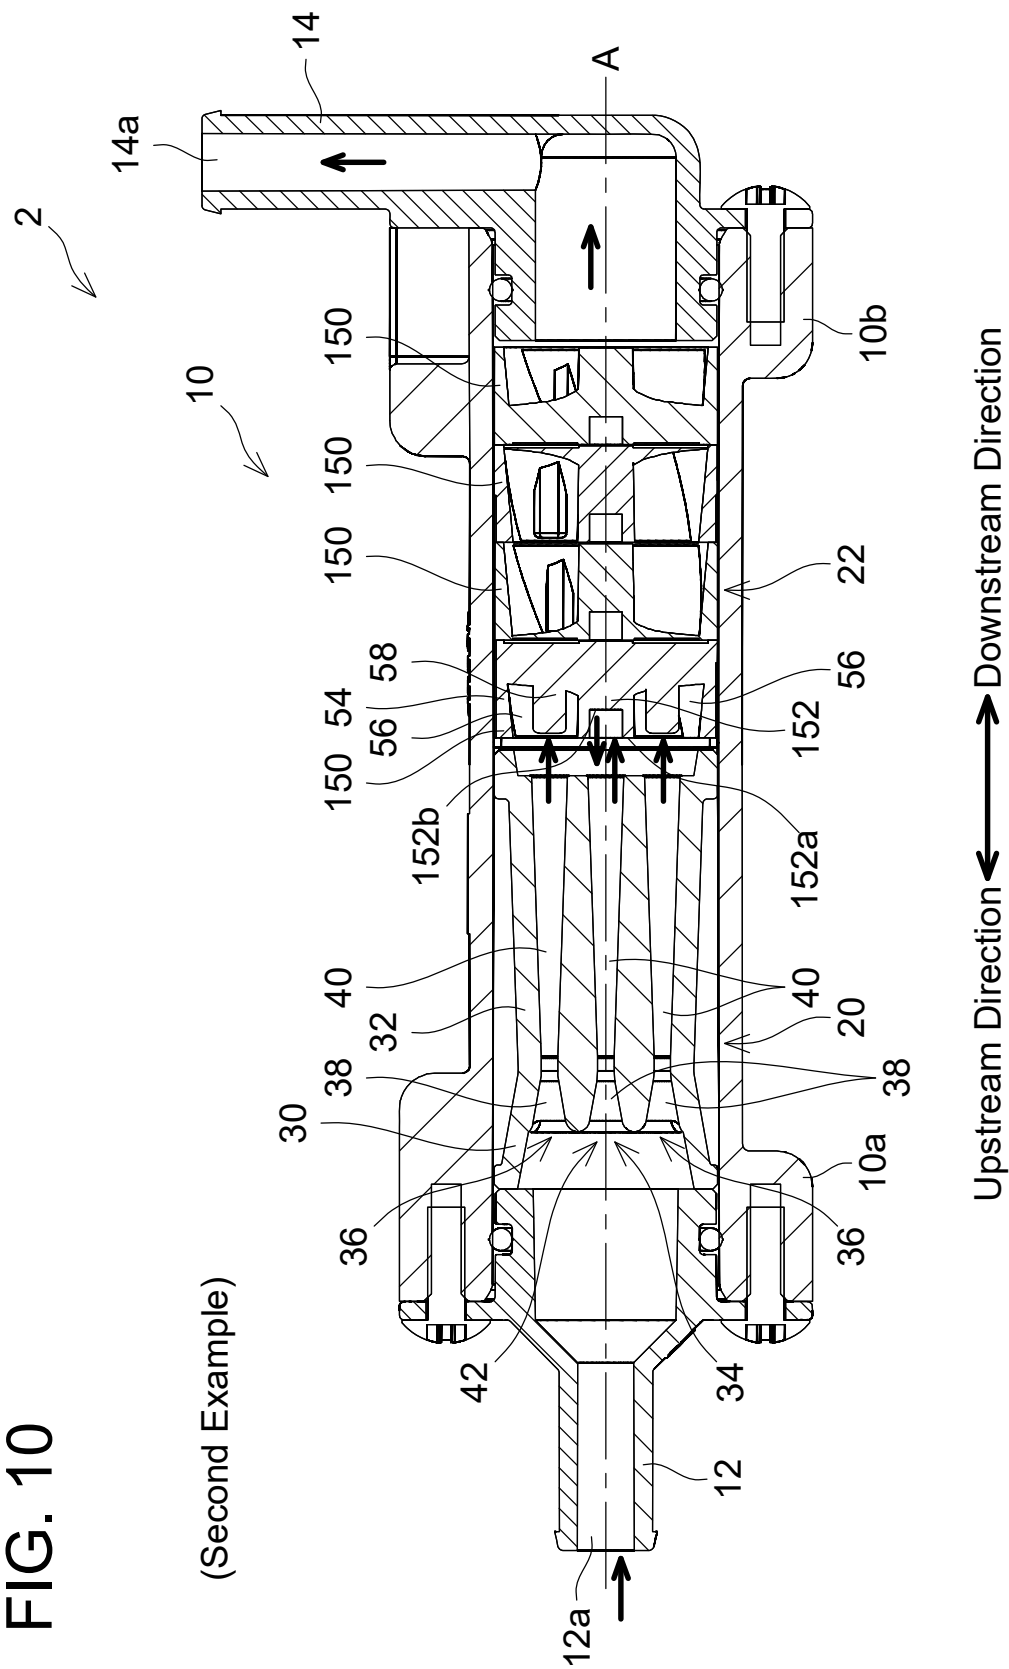


FIG. 11

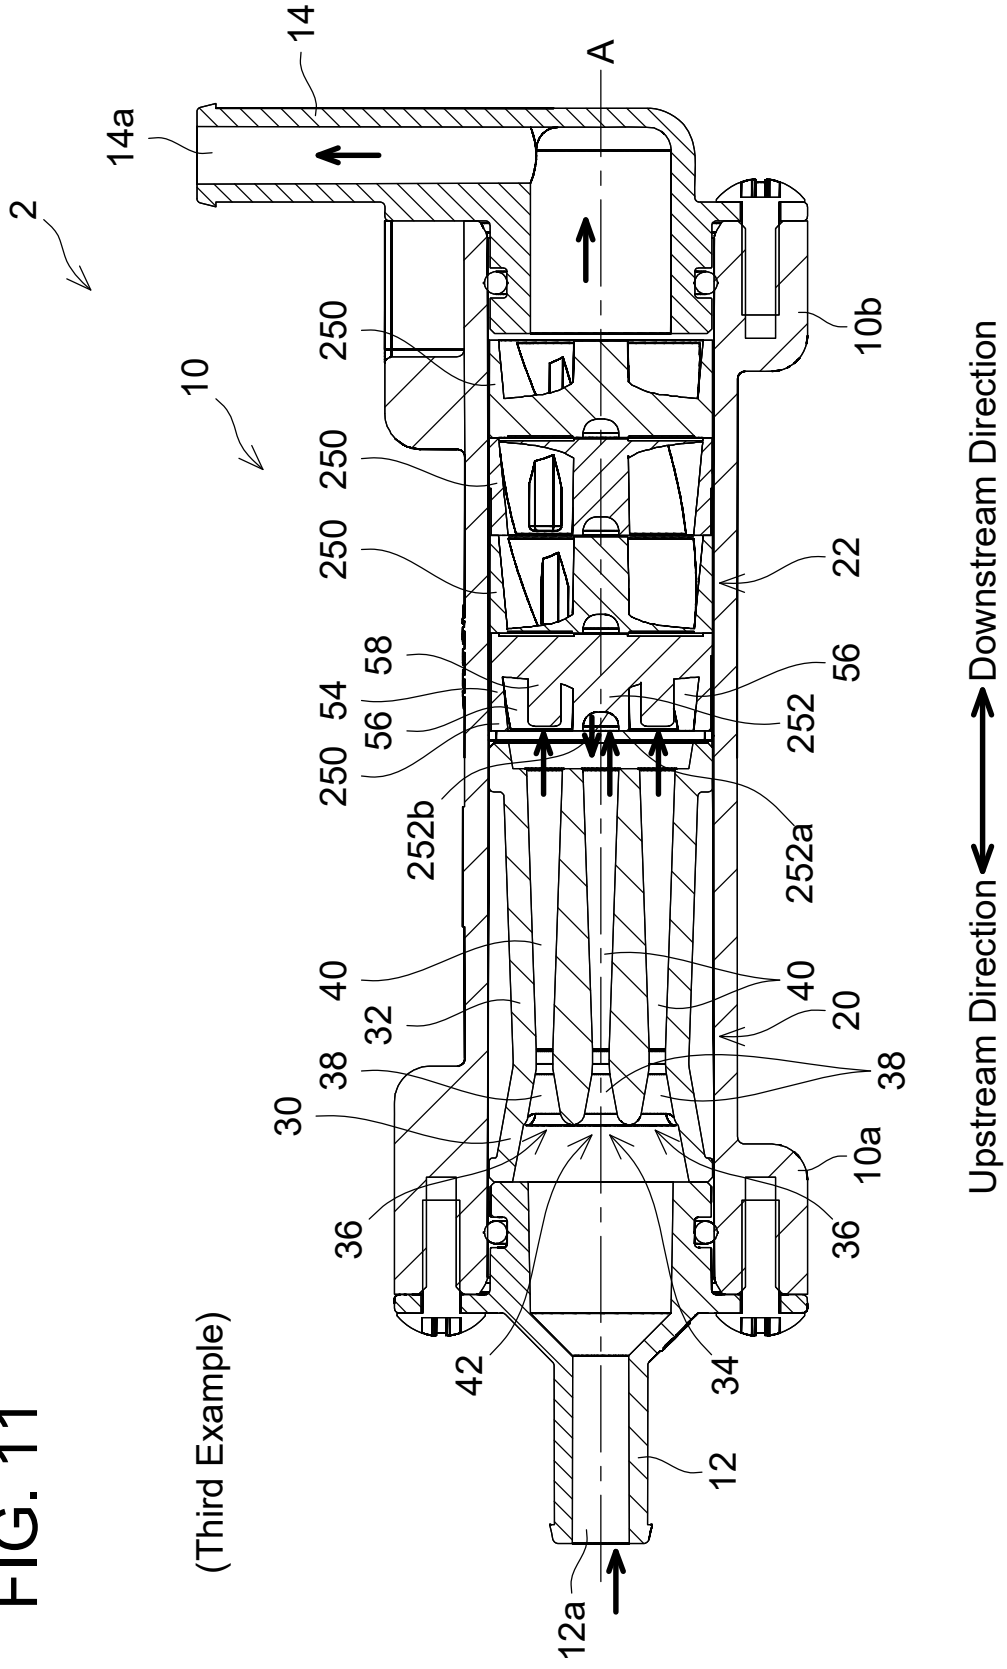


FIG. 12

(Fourth Example)

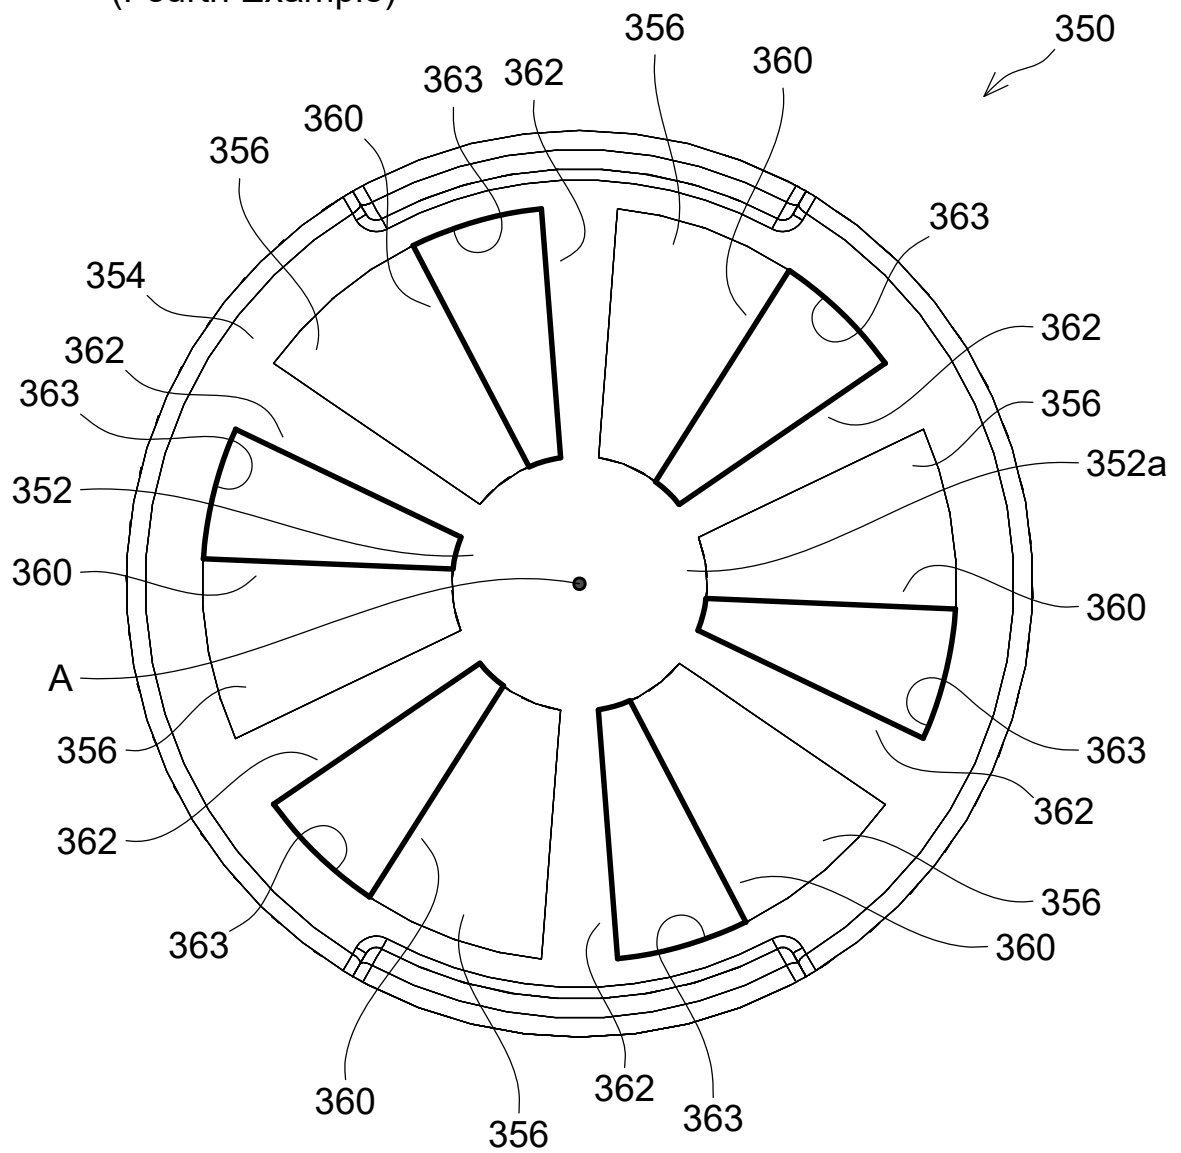


FIG. 13

(Fourth Example)

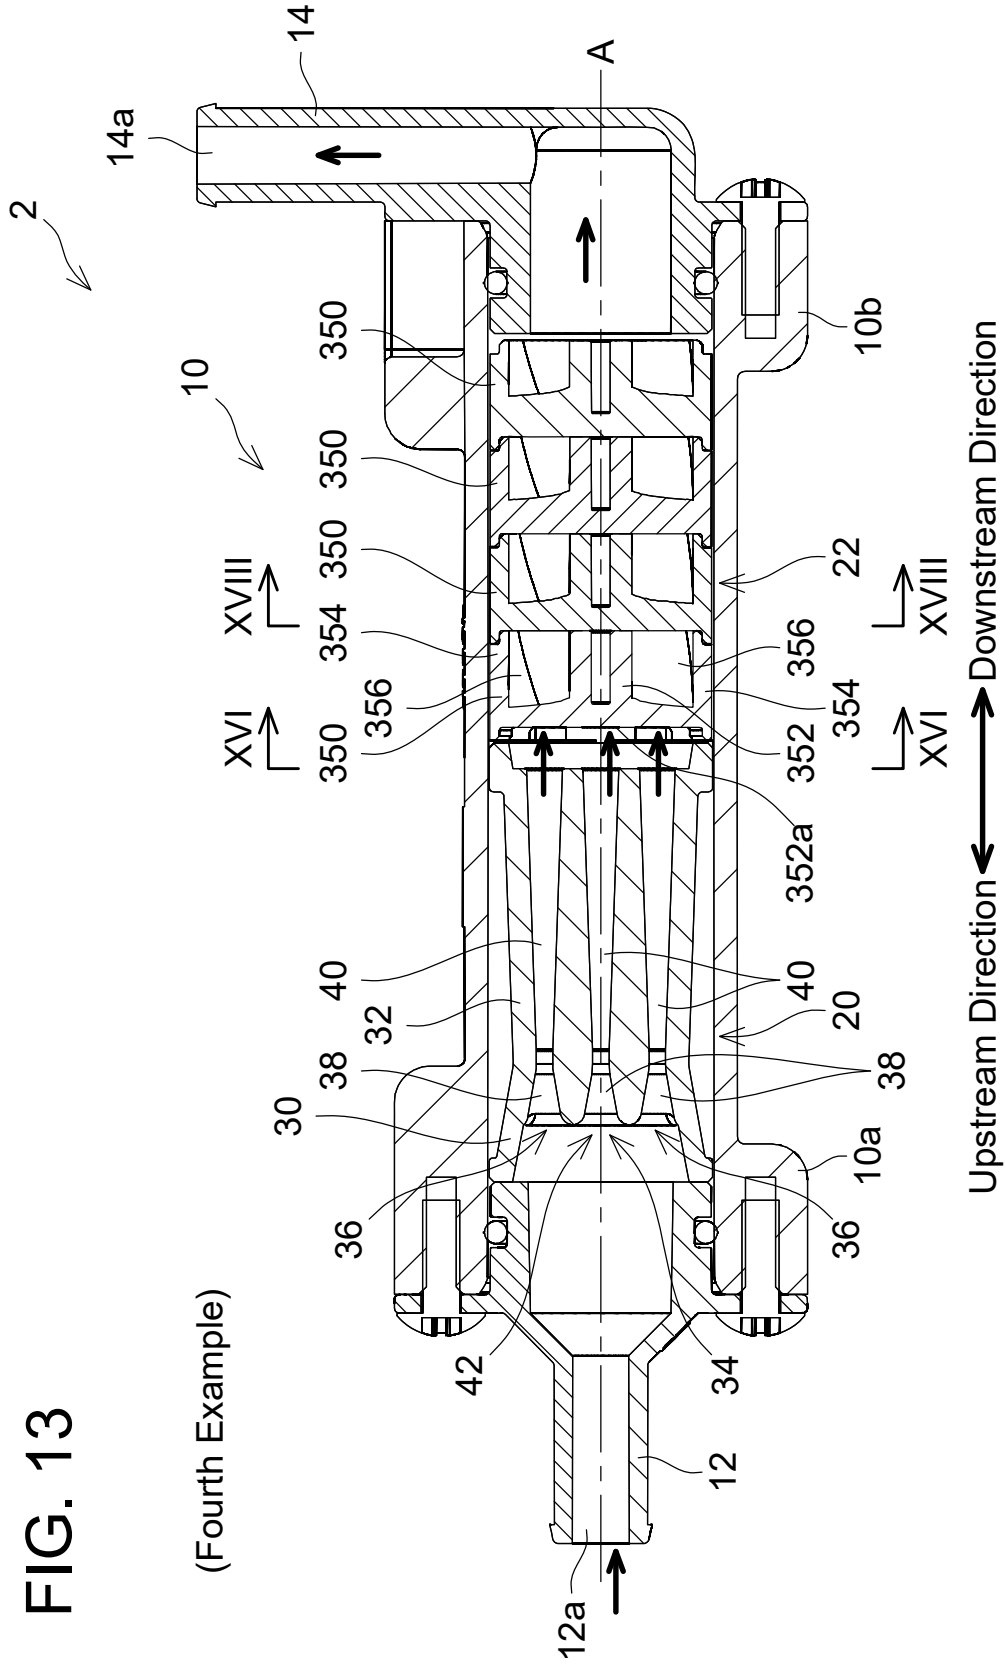


FIG. 14

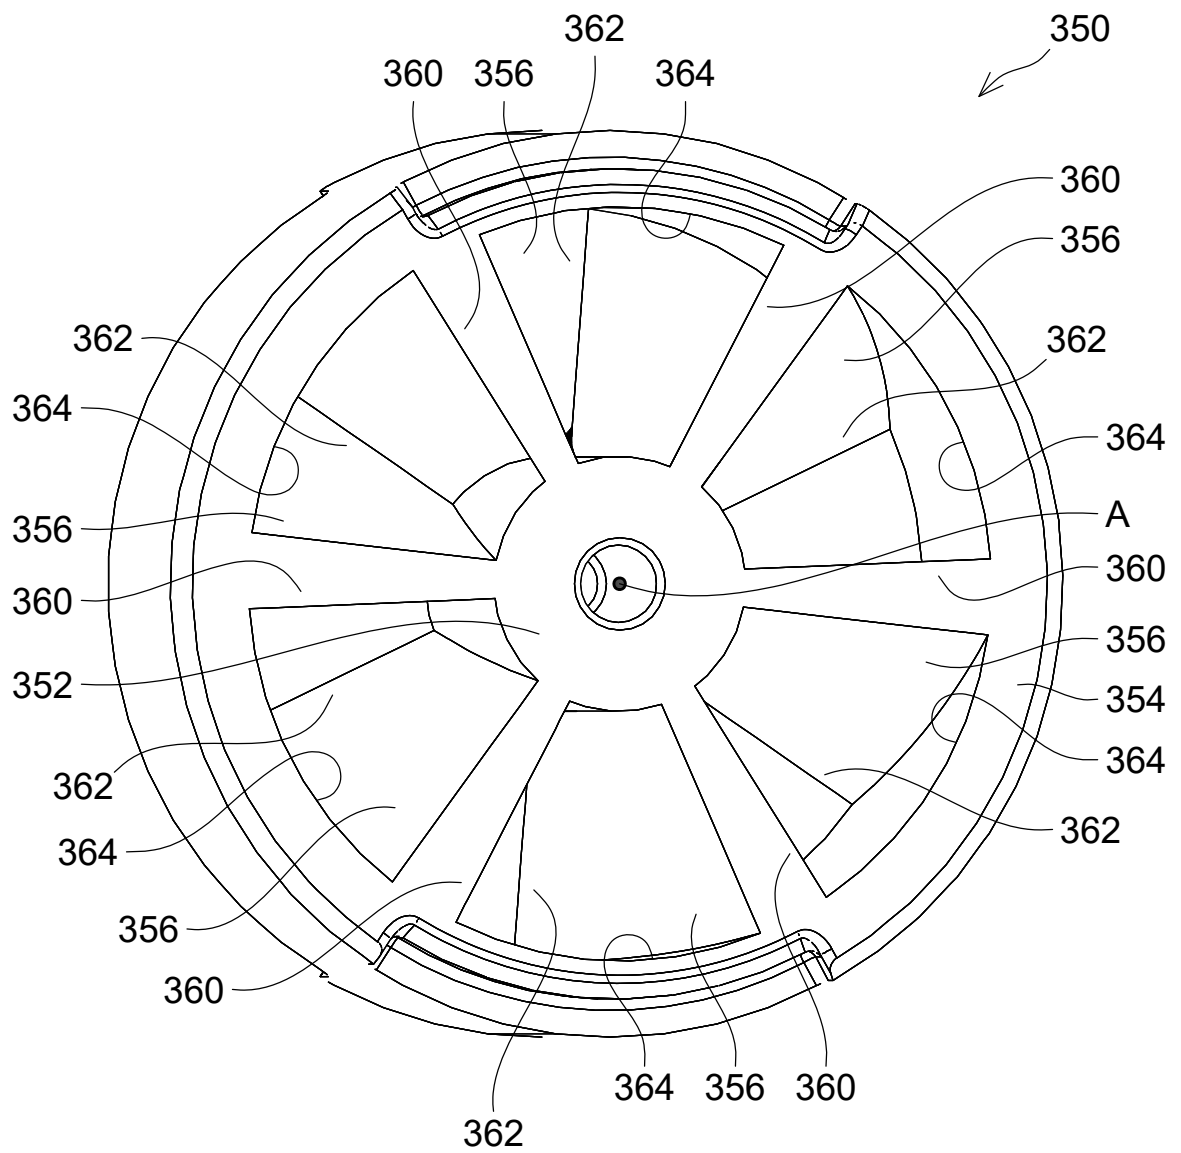


FIG. 15

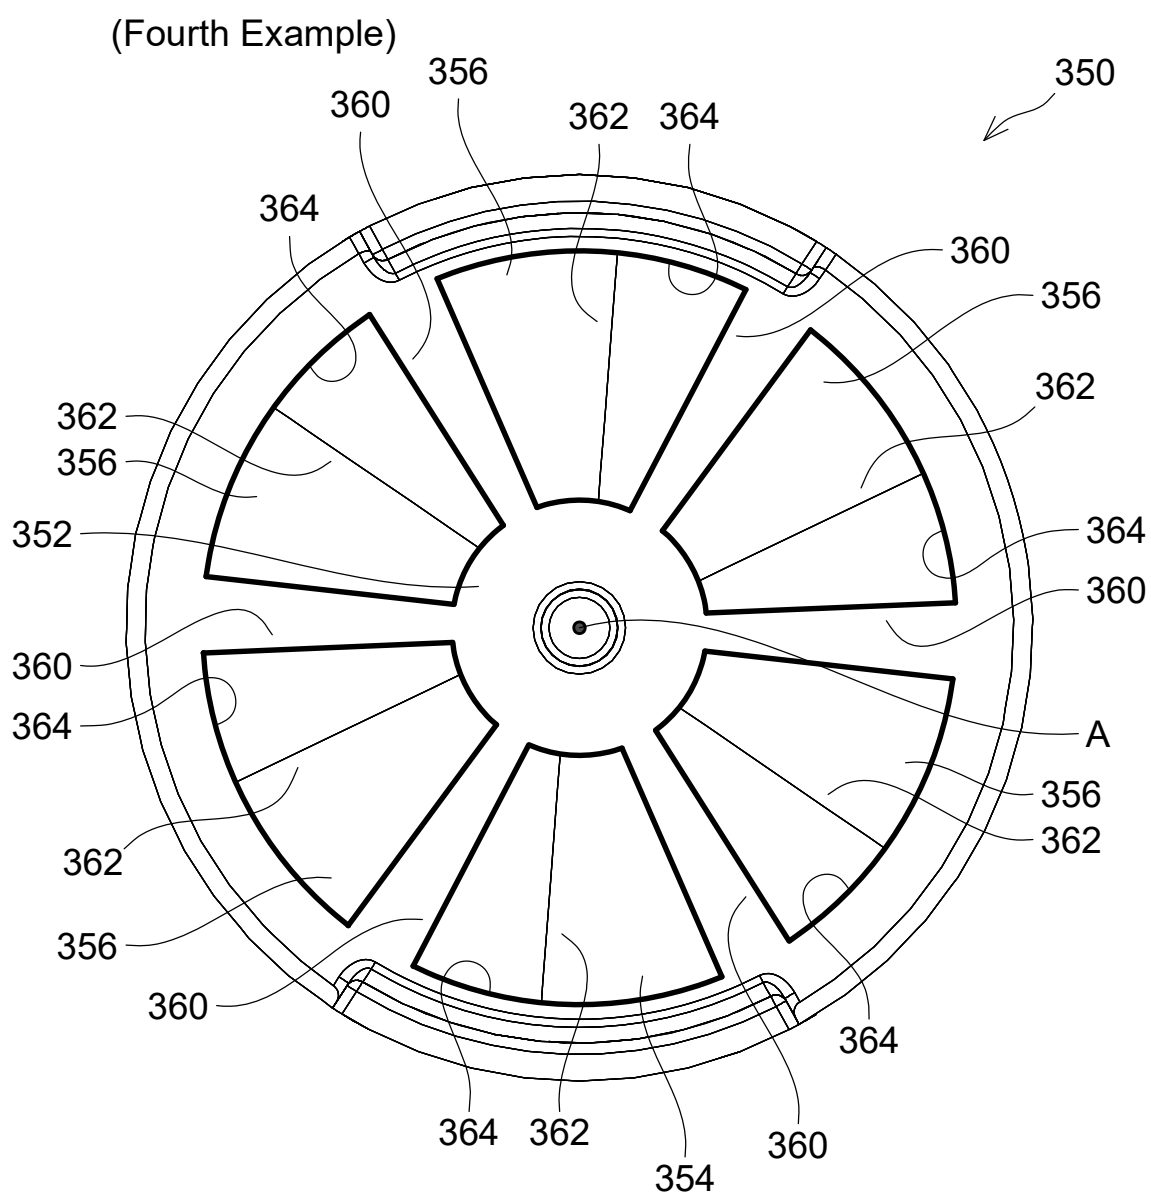


FIG. 16

(Fourth Example)

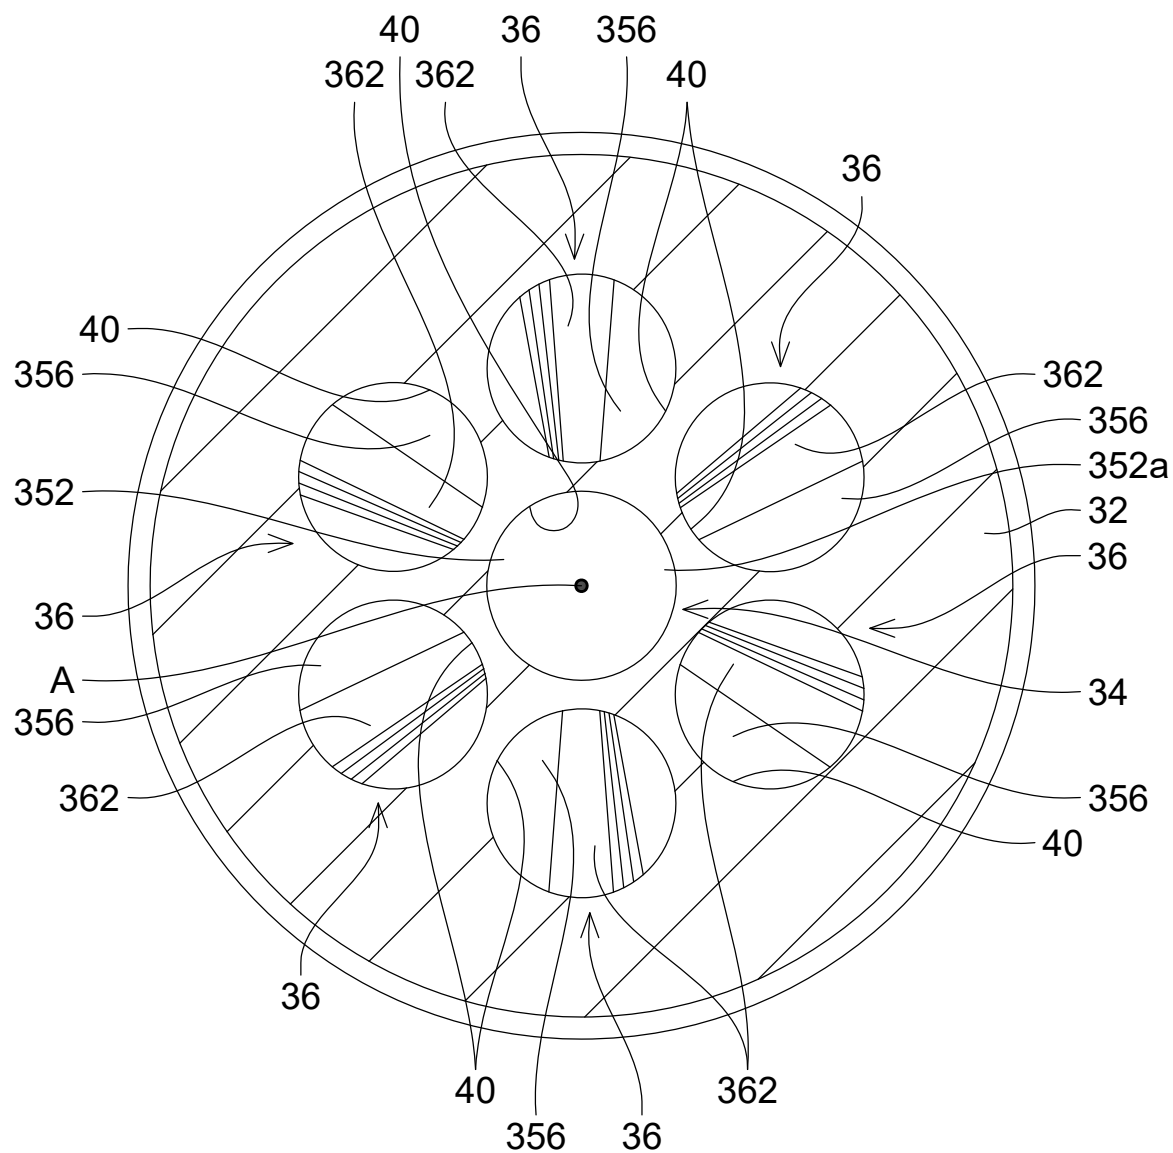


FIG. 17

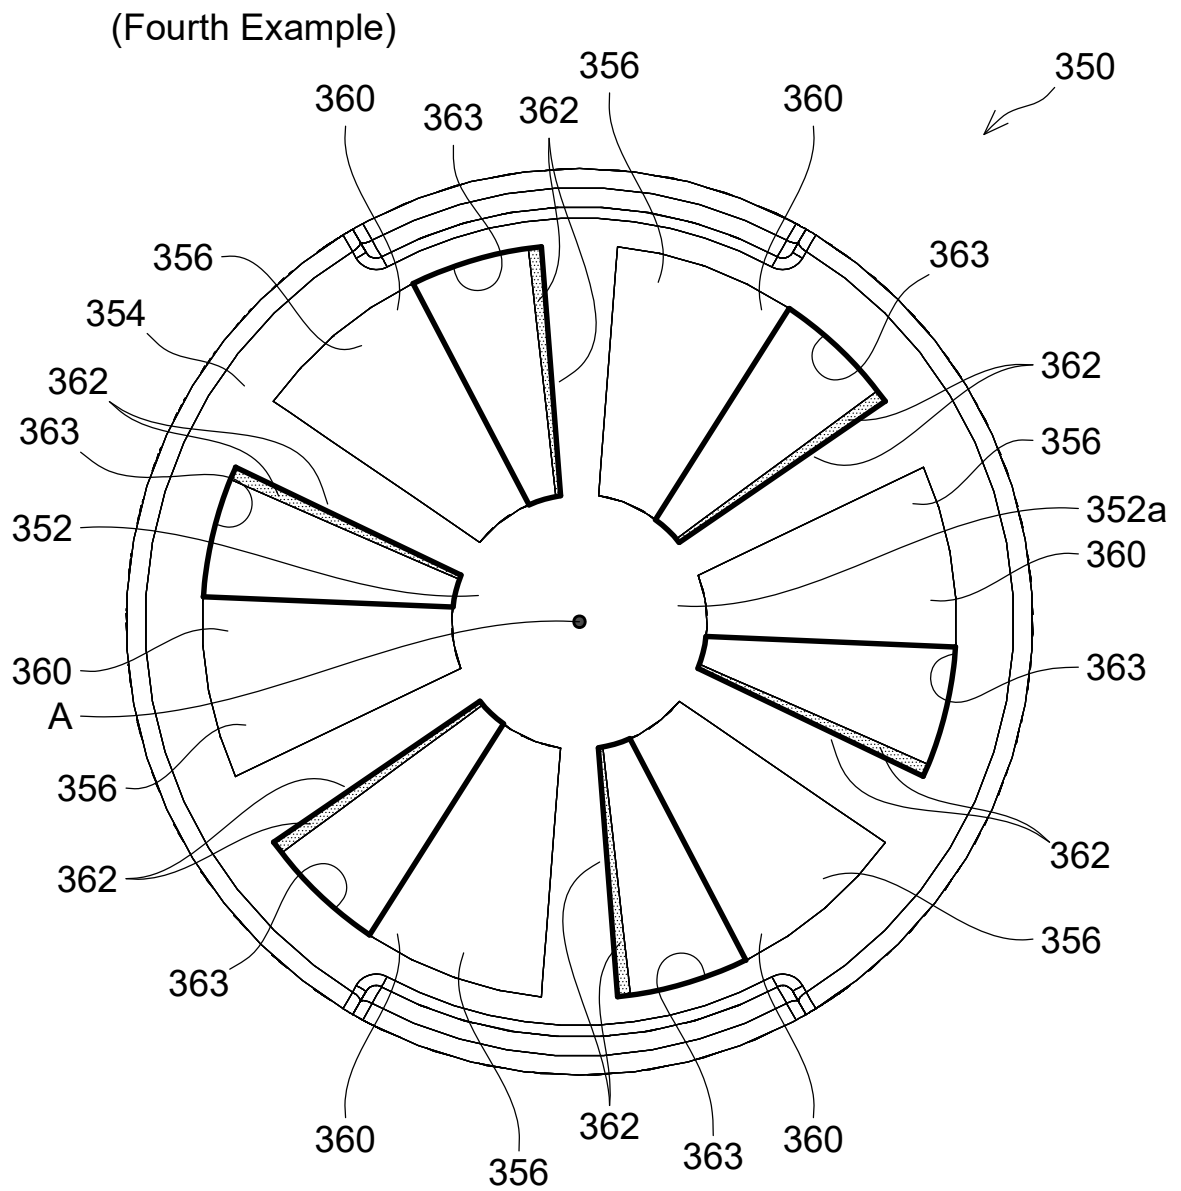


FIG. 18

(Fourth Example)

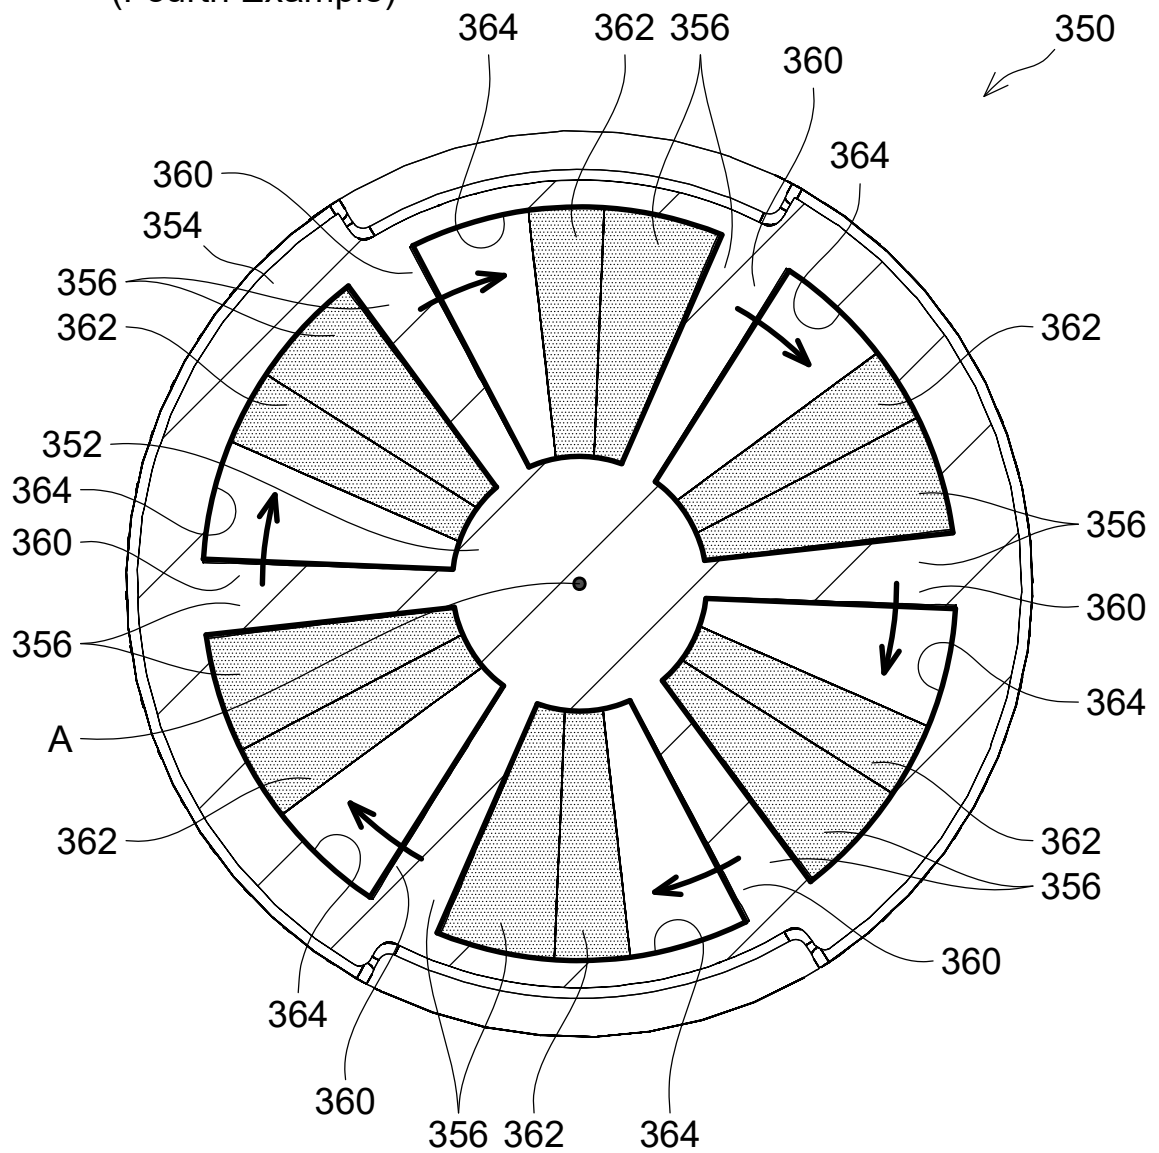


FIG. 19

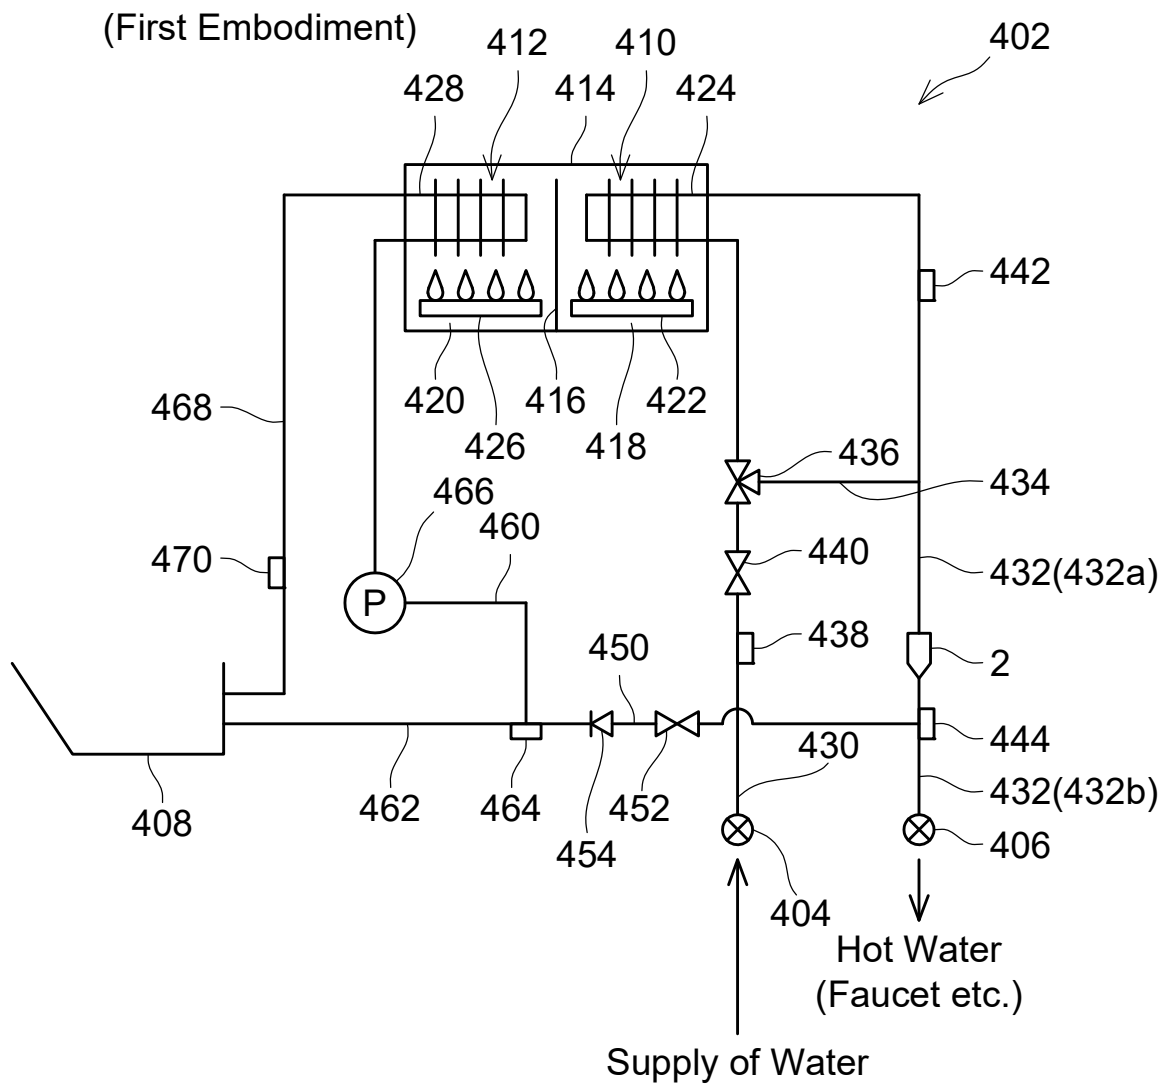


FIG. 20

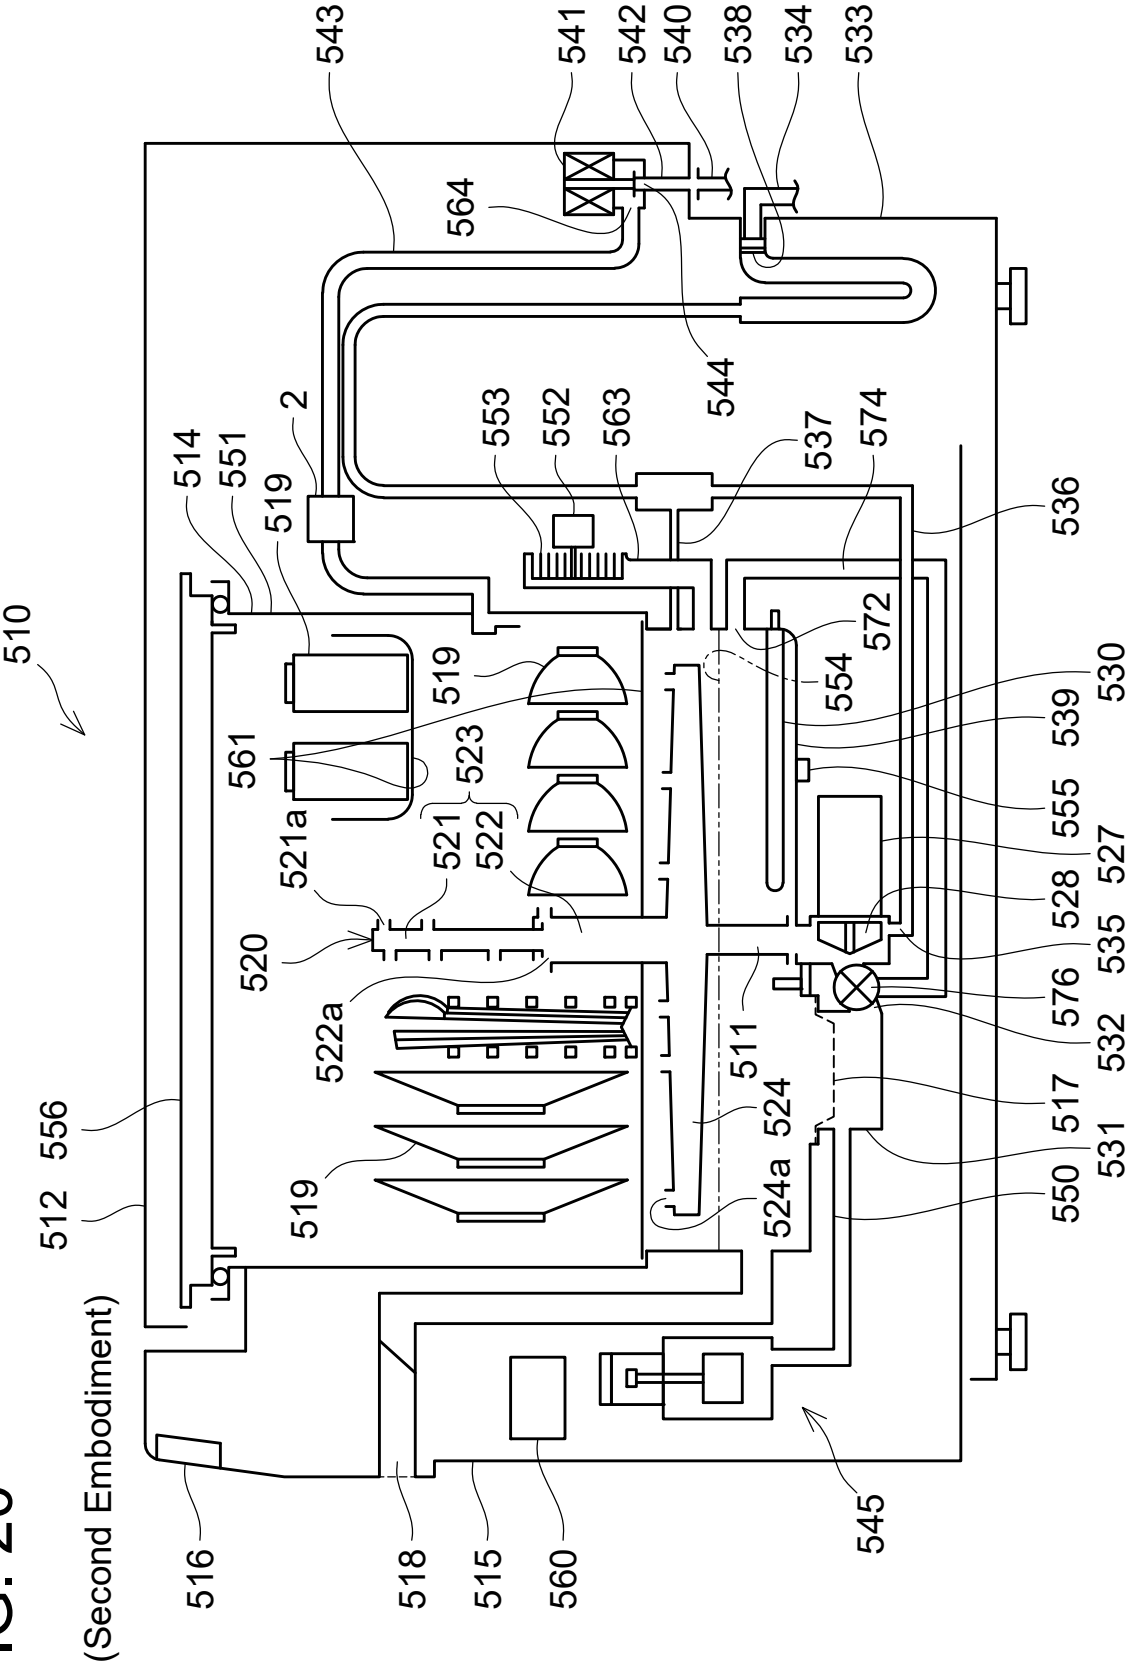


FIG. 22


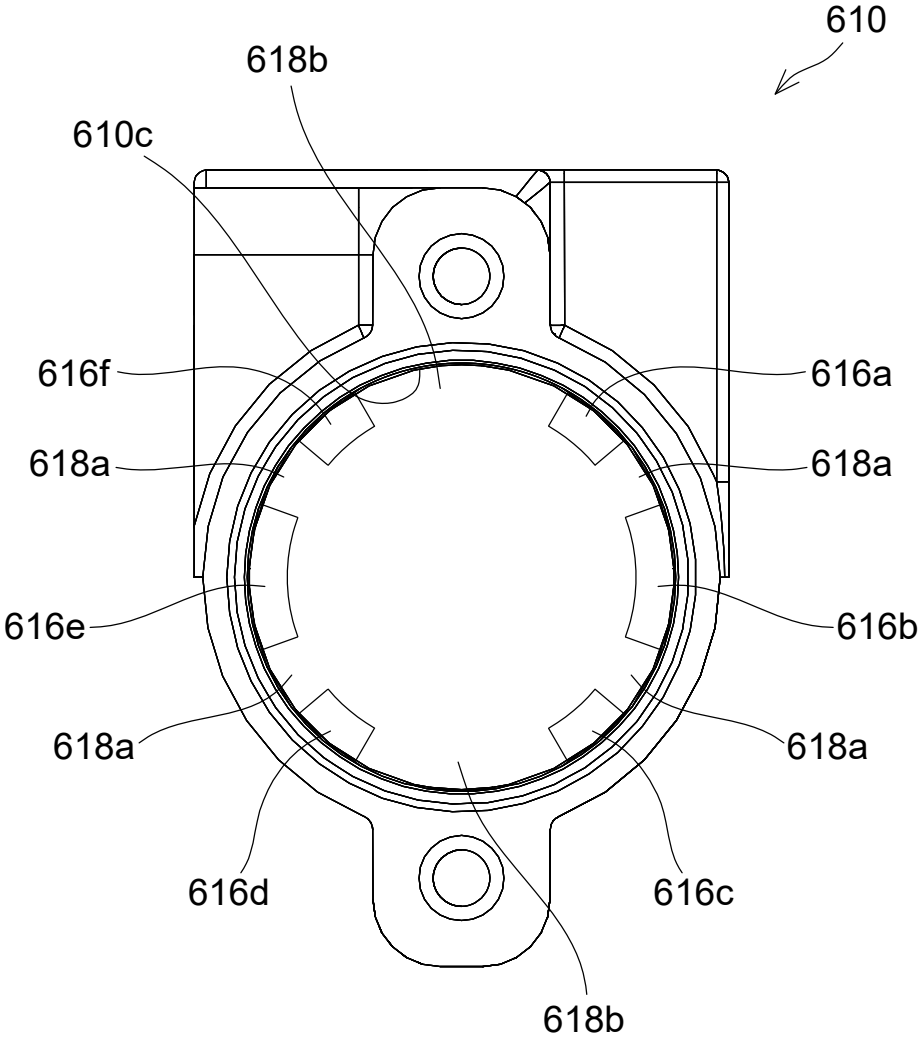


FIG. 23

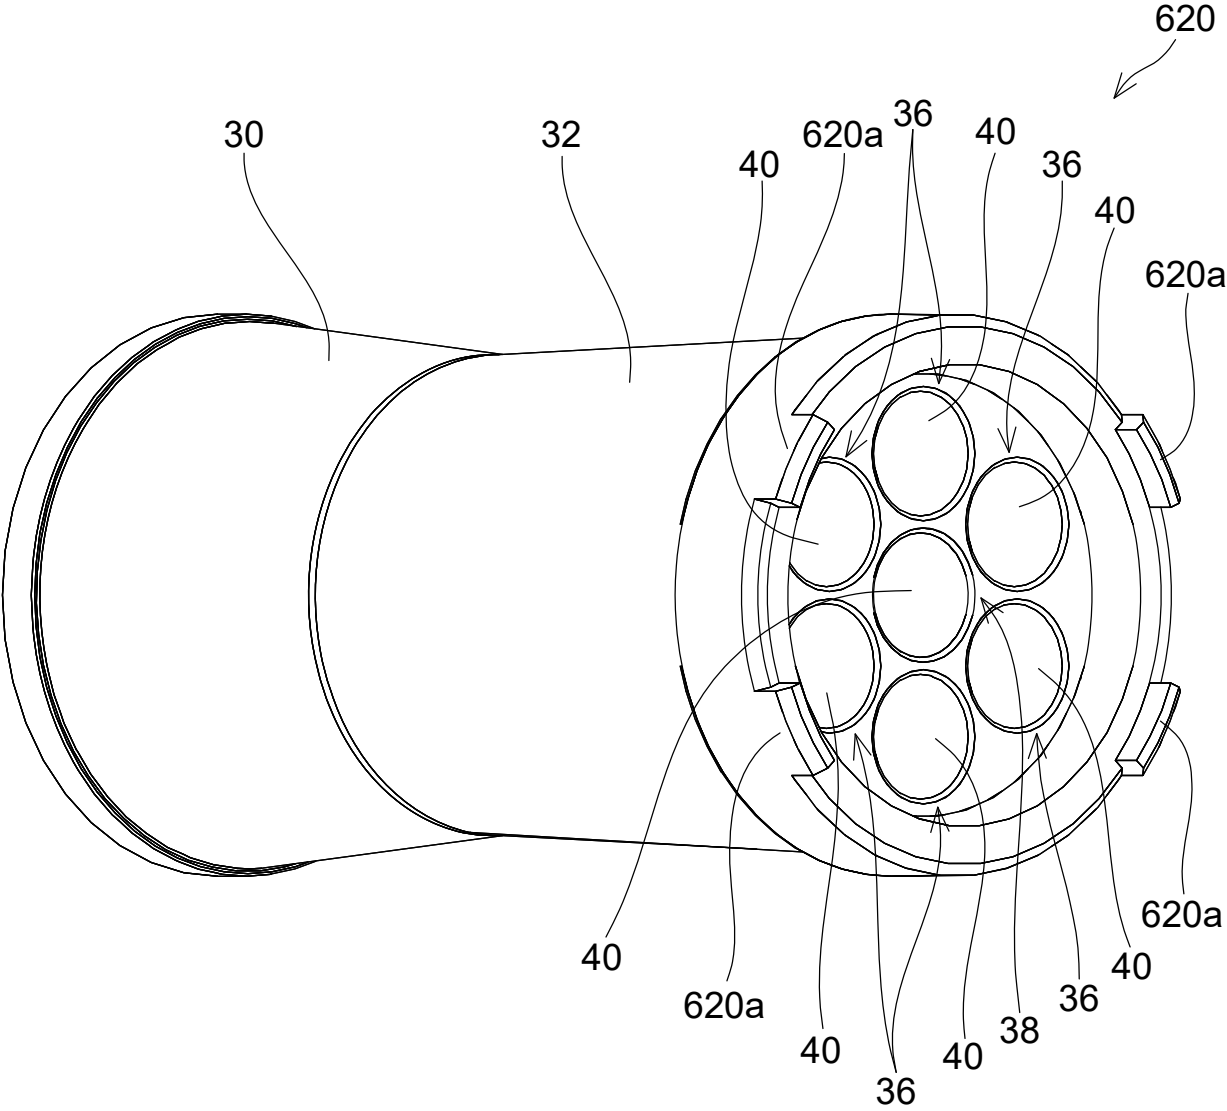

Upstream Direction $\longleftrightarrow$ Downstream Direction

FIG. 24

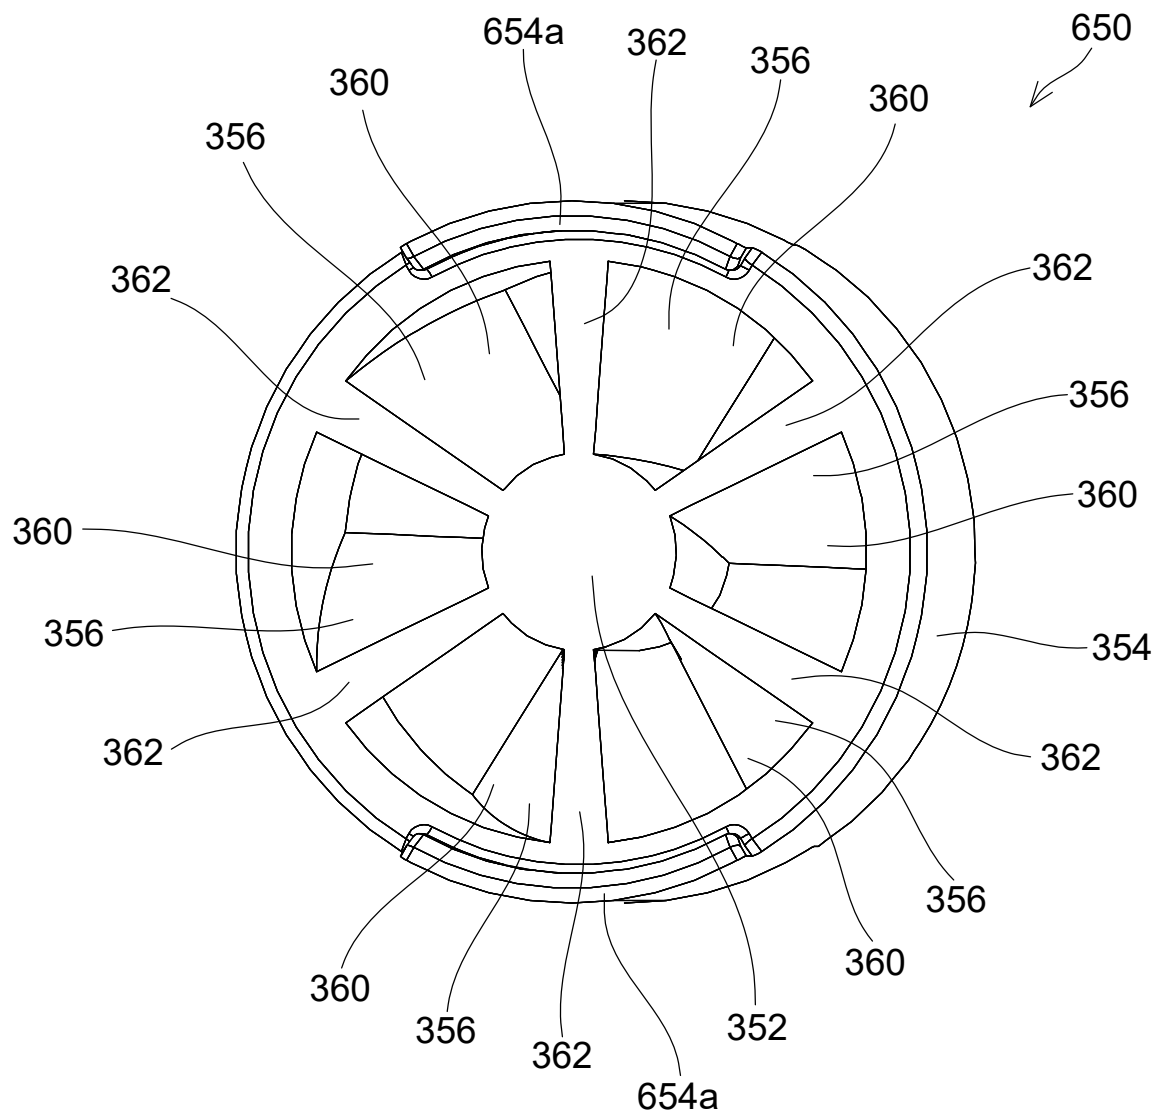


FIG. 25

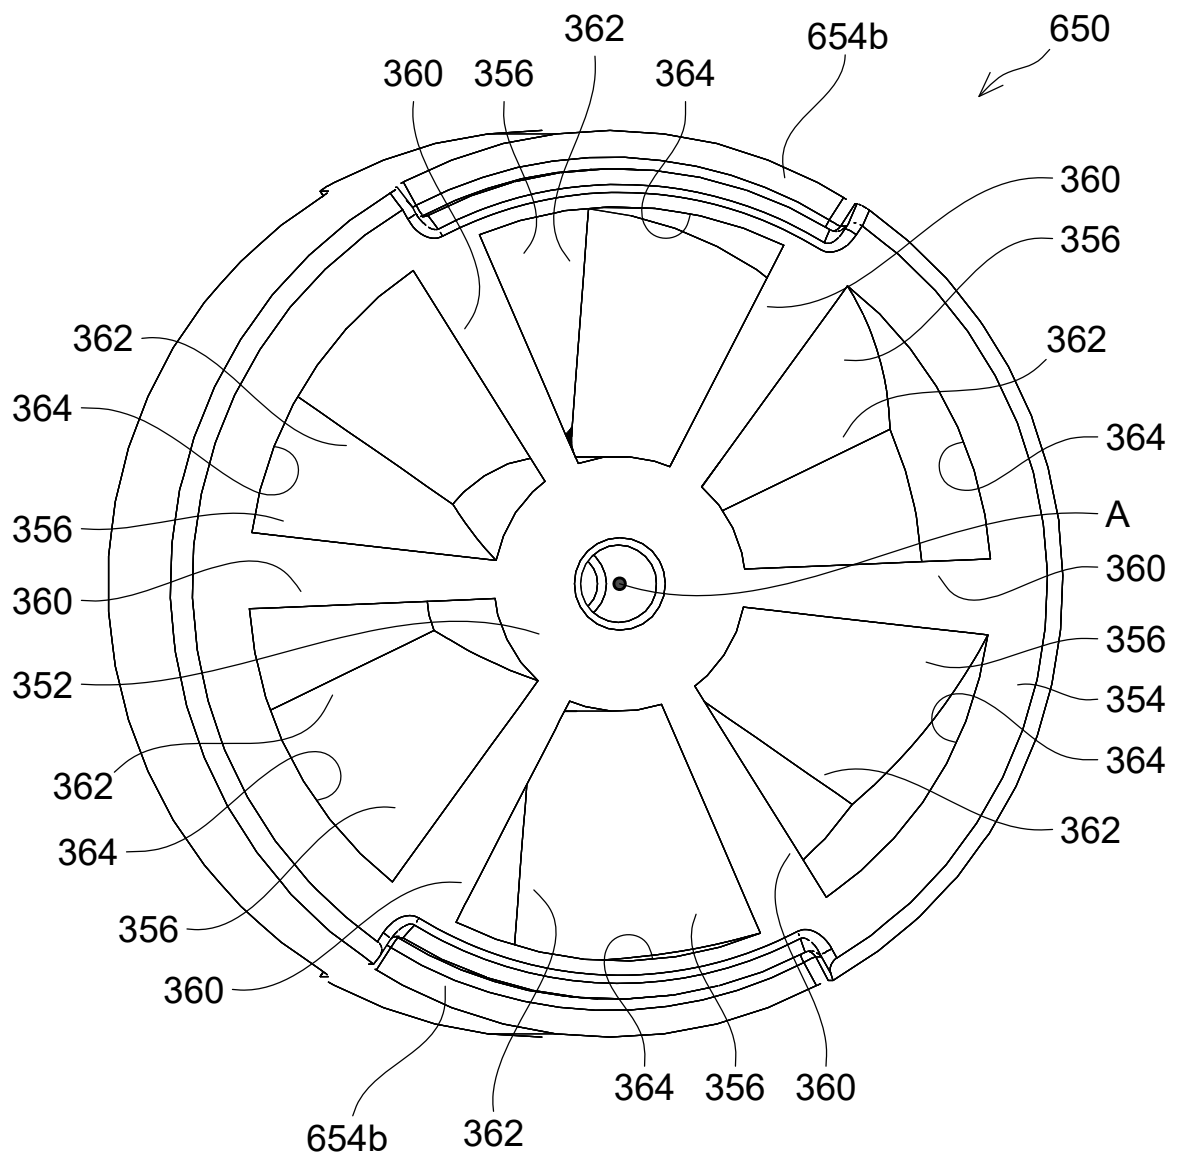


FIG. 26

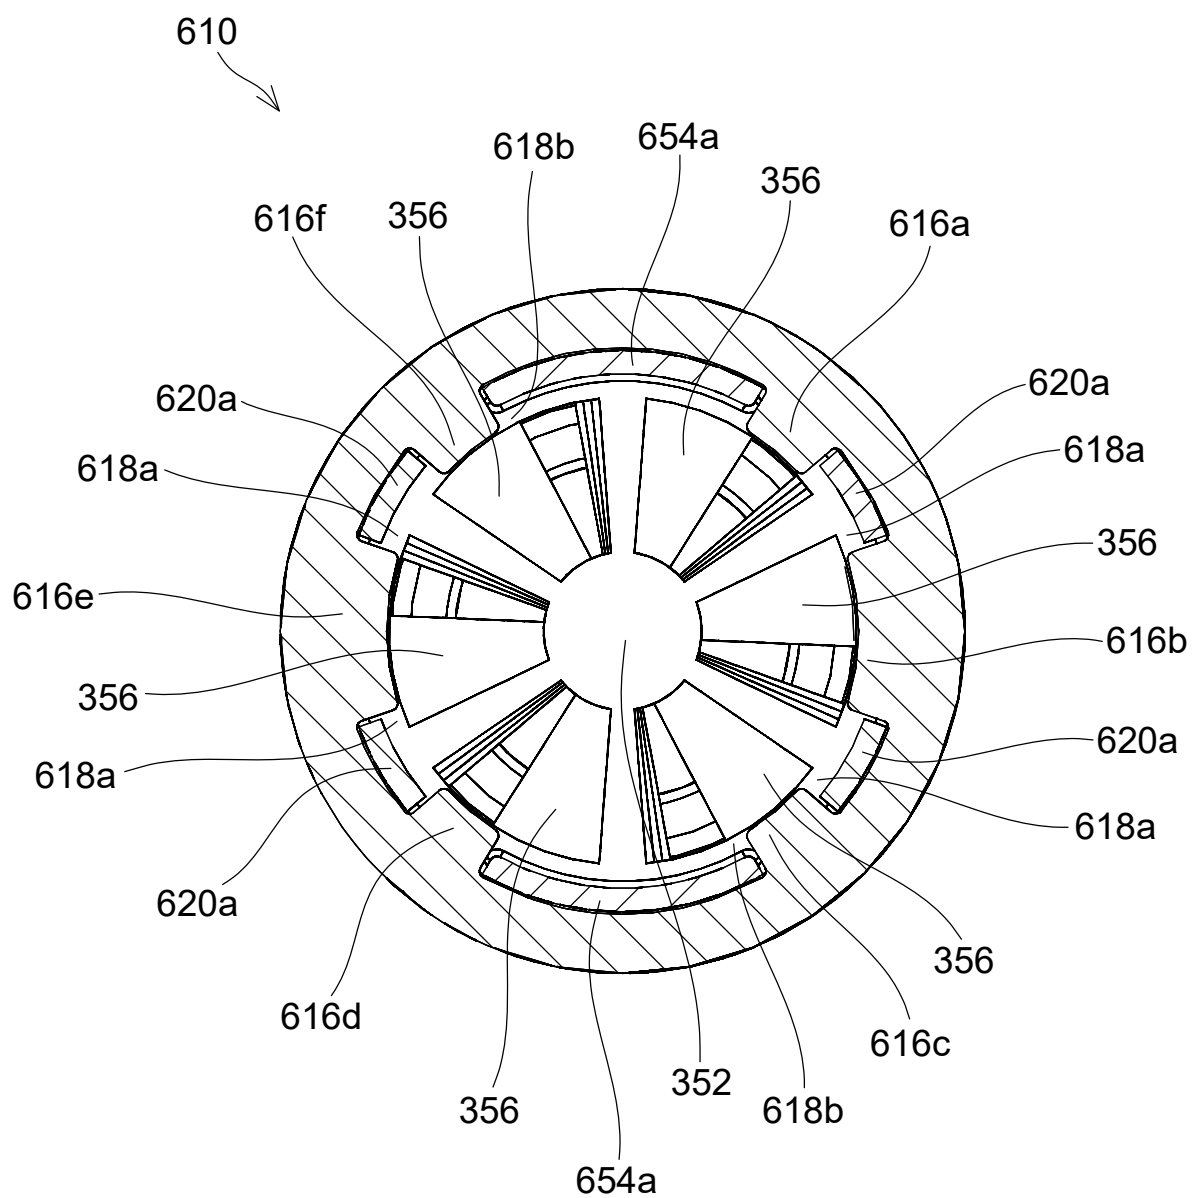


FIG. 27

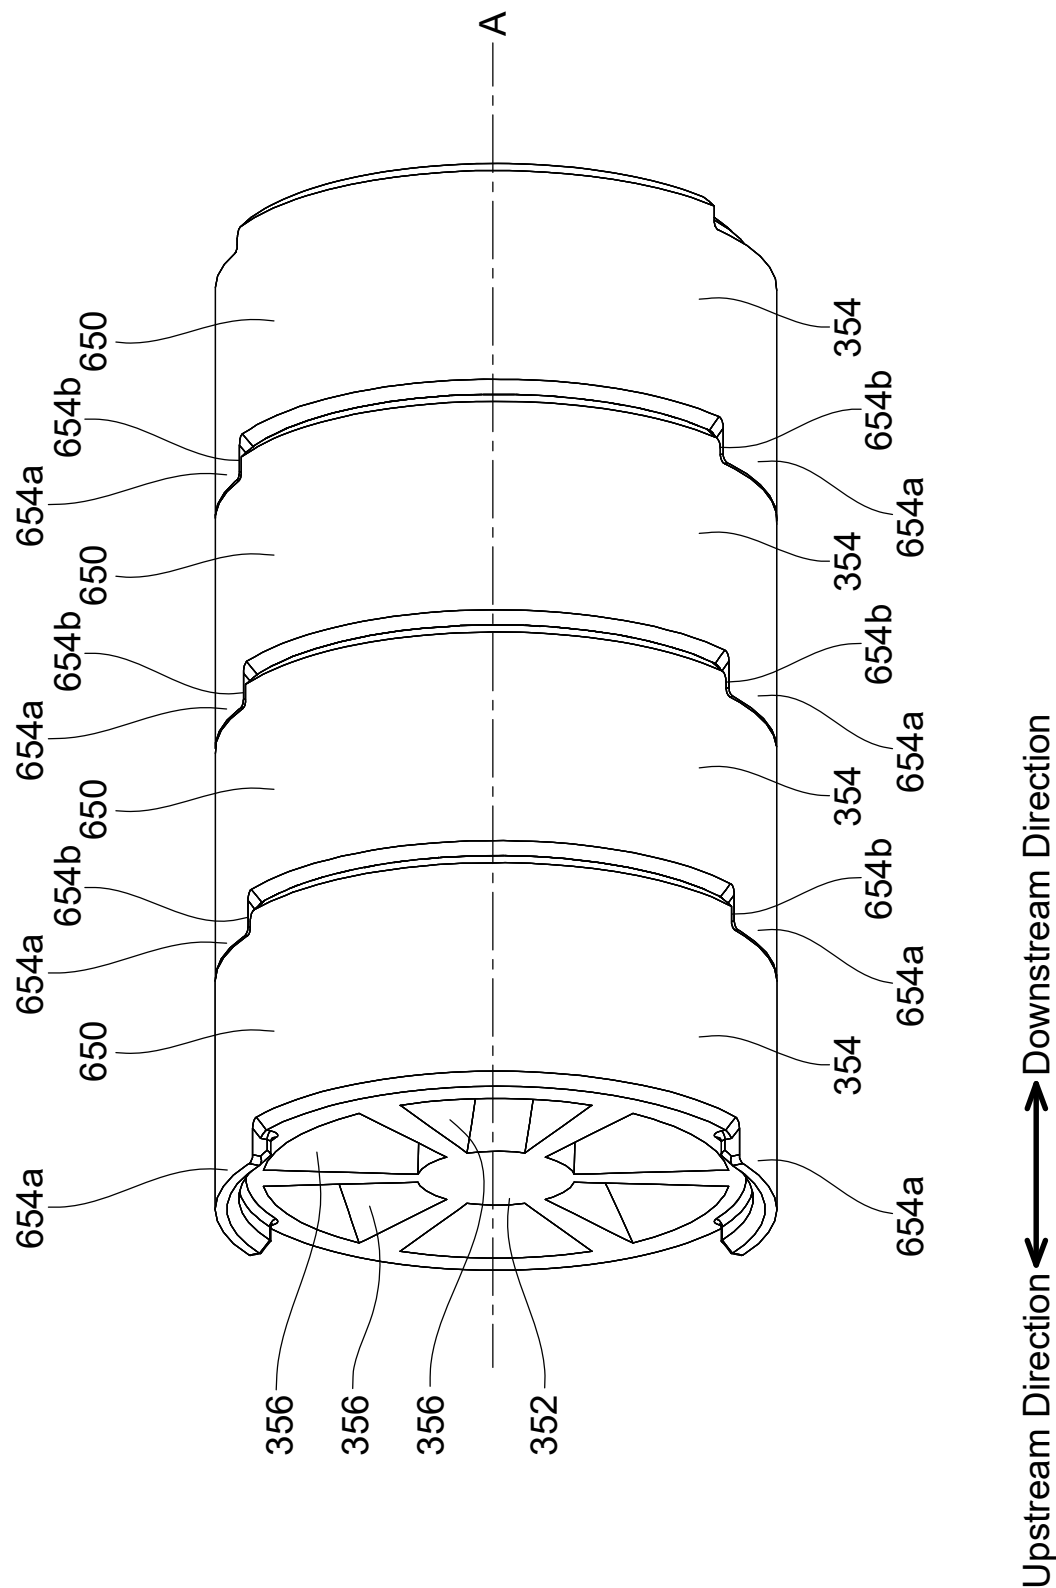


FIG. 28

(Sixth Example)


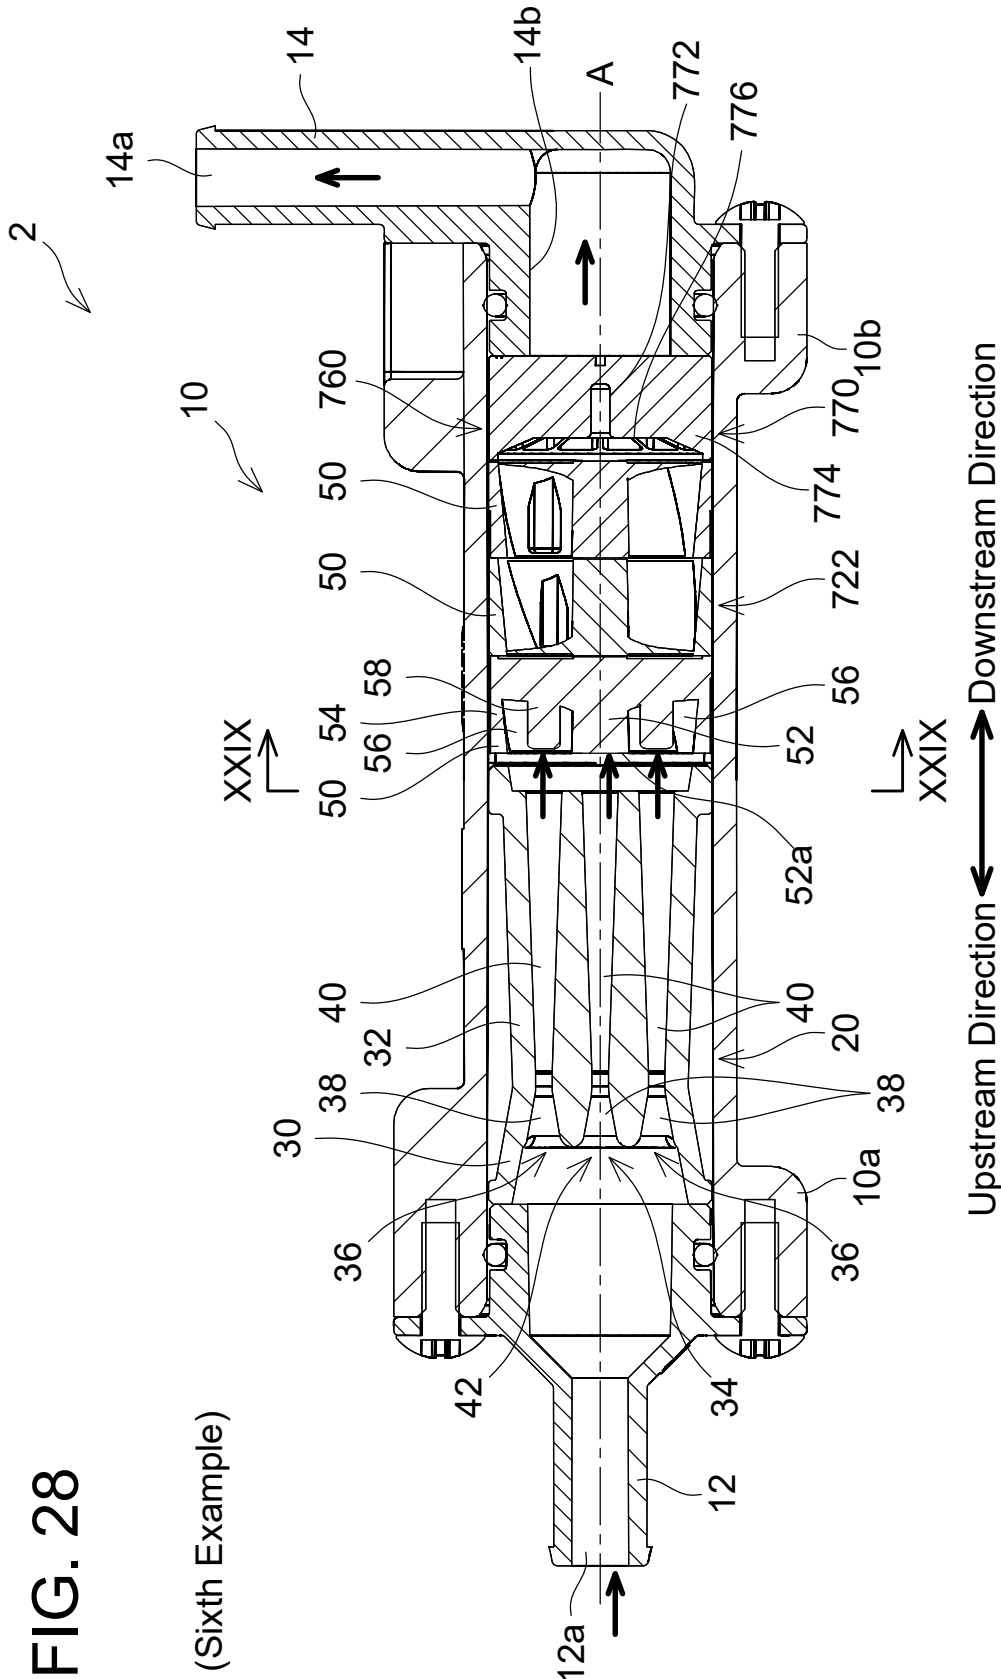


FIG. 29



Upstream Direction $\longleftrightarrow$ Downstream Direction

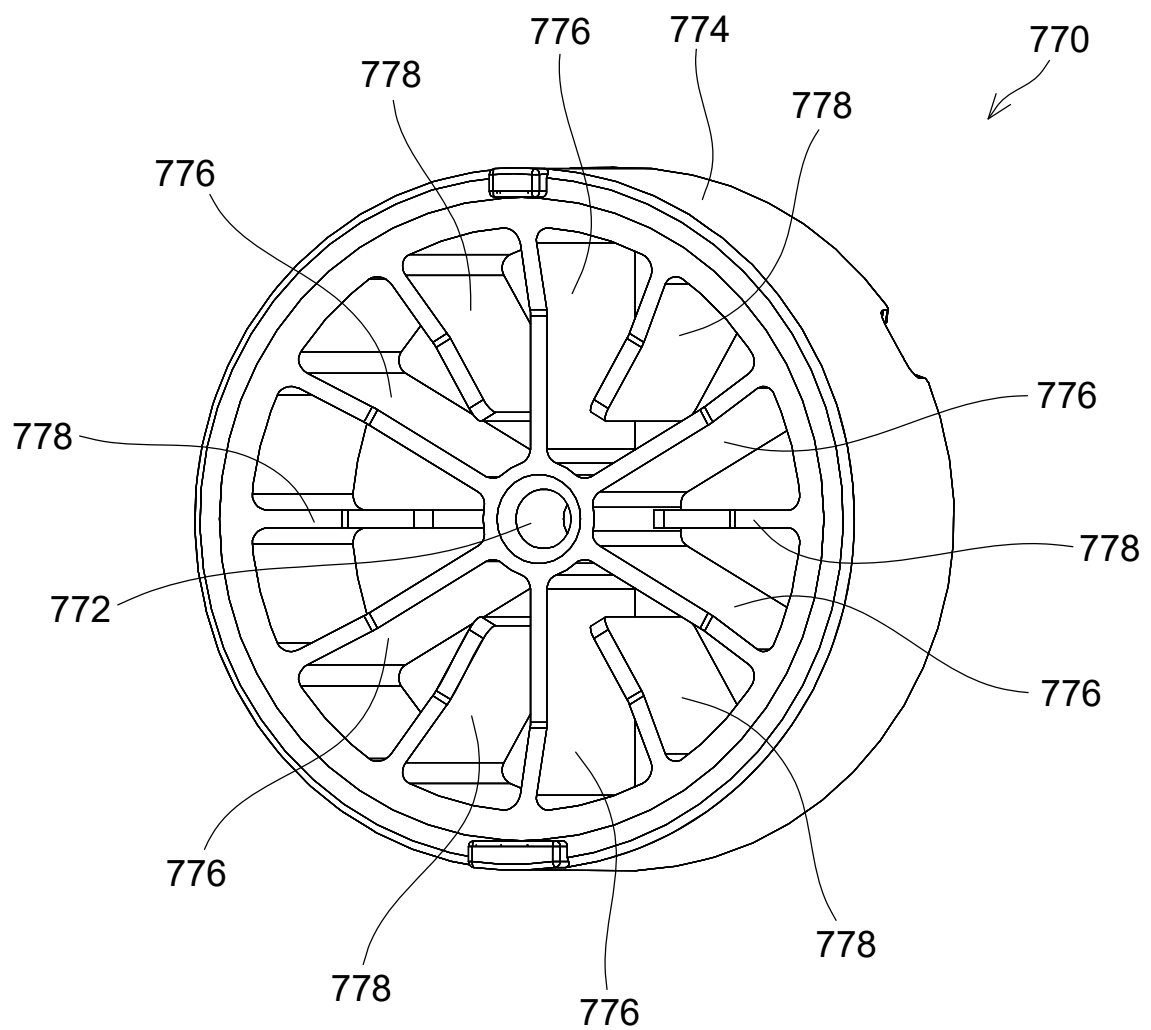