

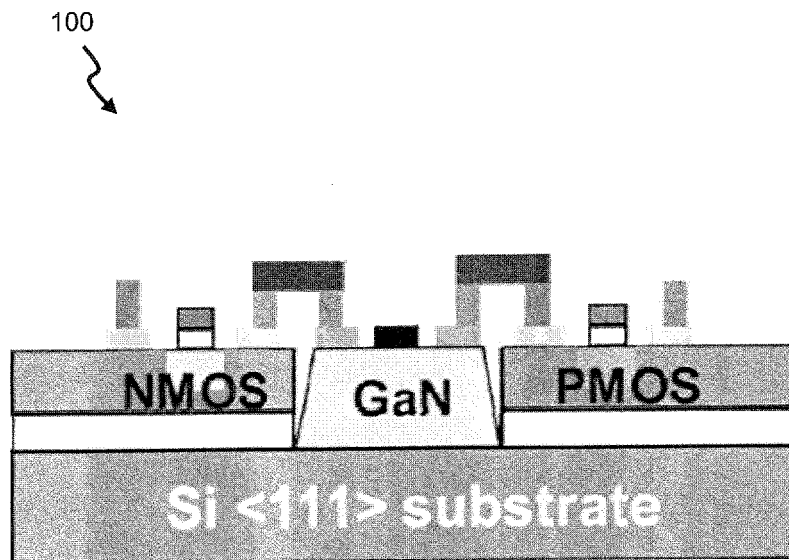


FIG. 1 (Prior Art)

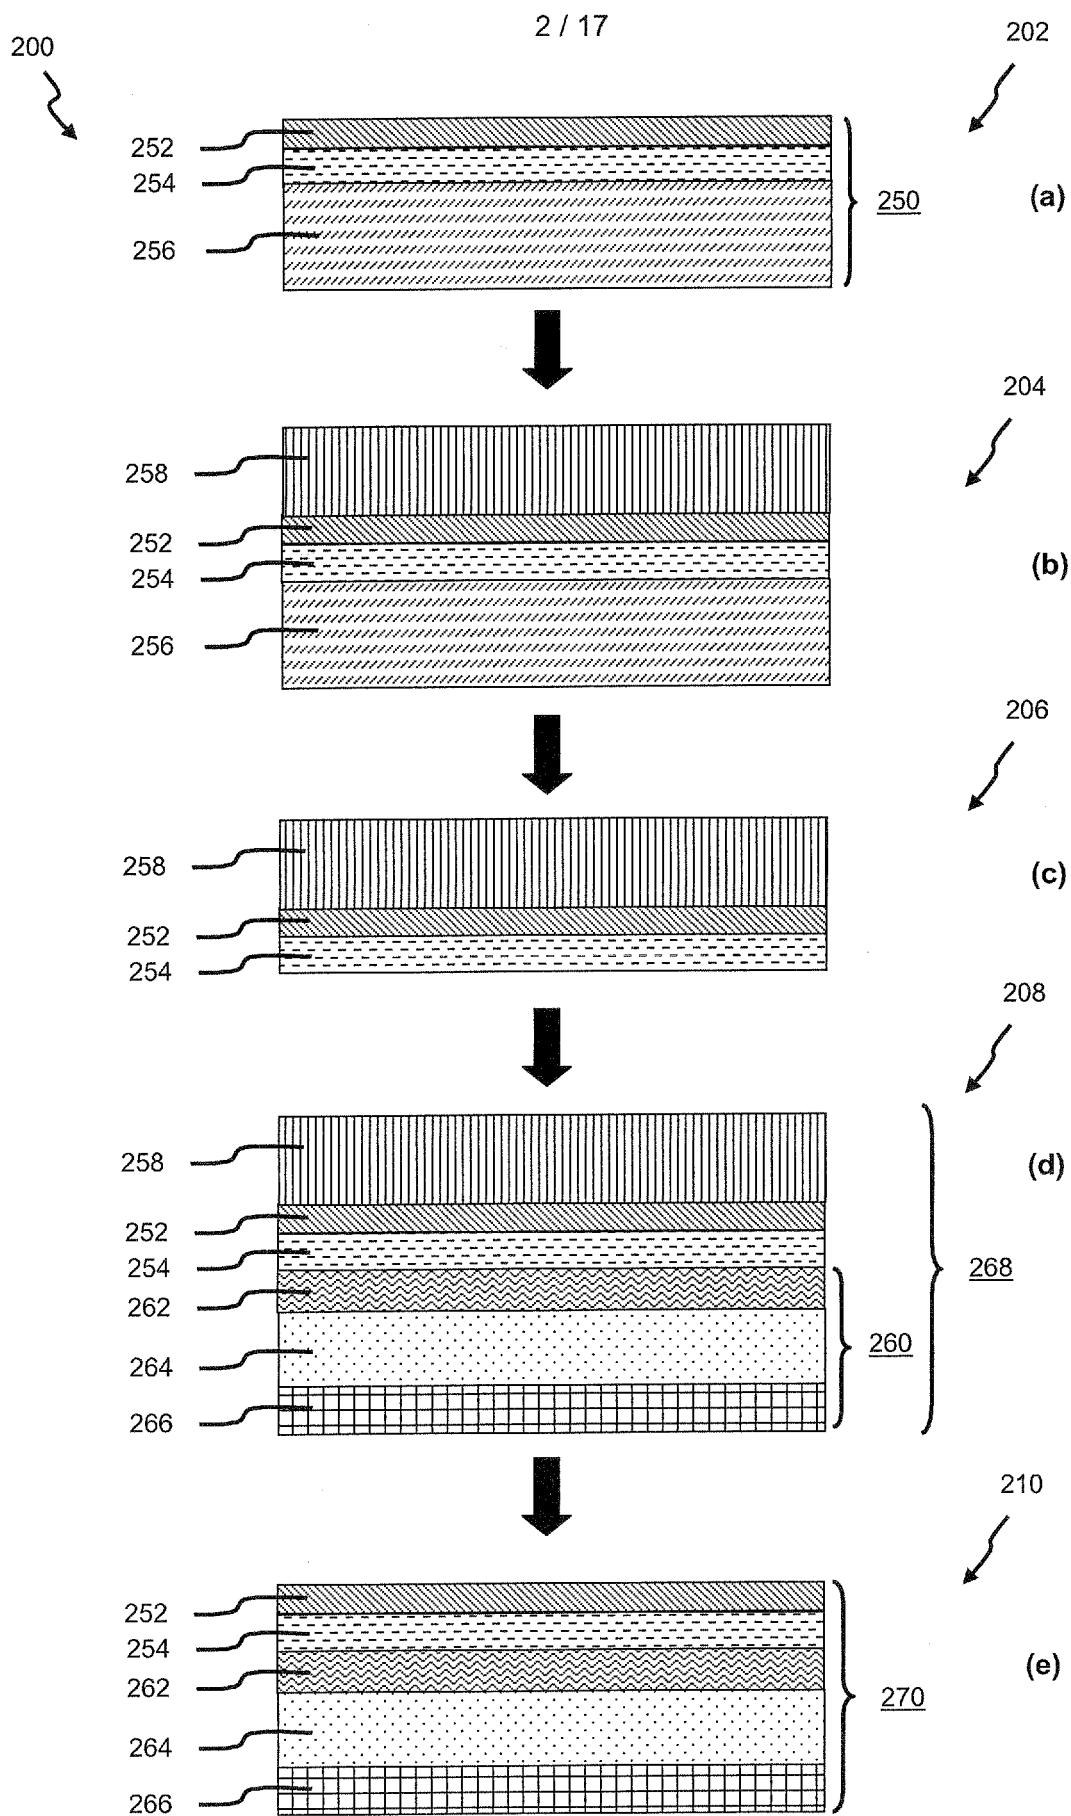


FIG. 2

300
↘


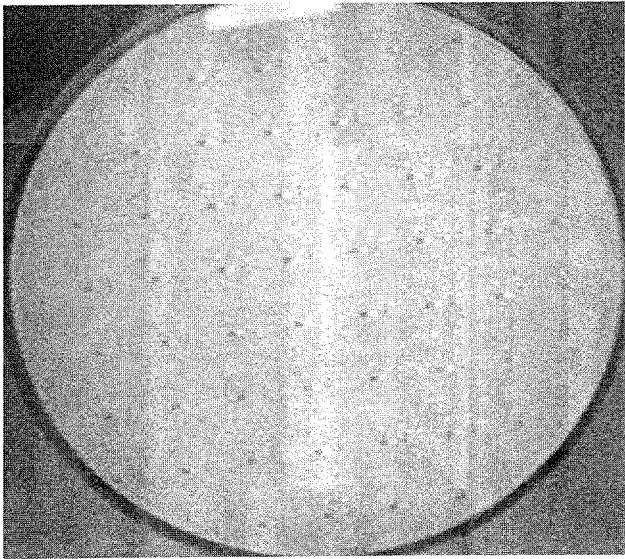



FIG. 3

400
↘

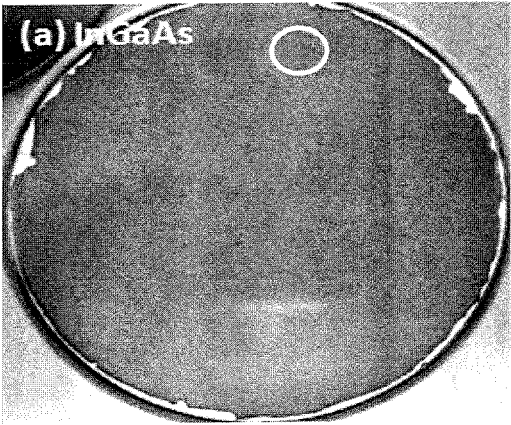

(a)

450
↘

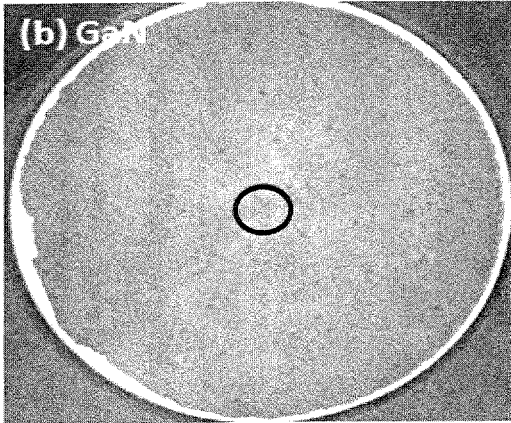

(b)

FIG. 4

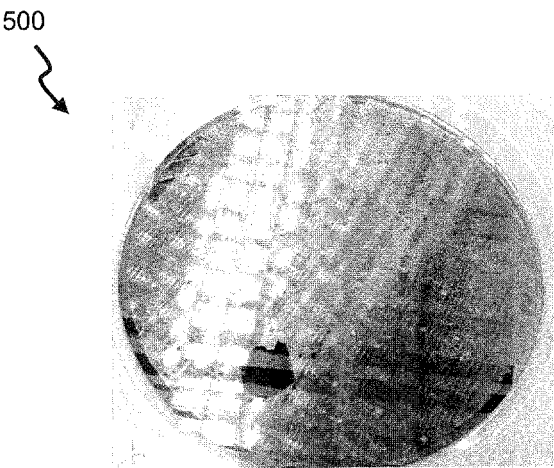


FIG. 5


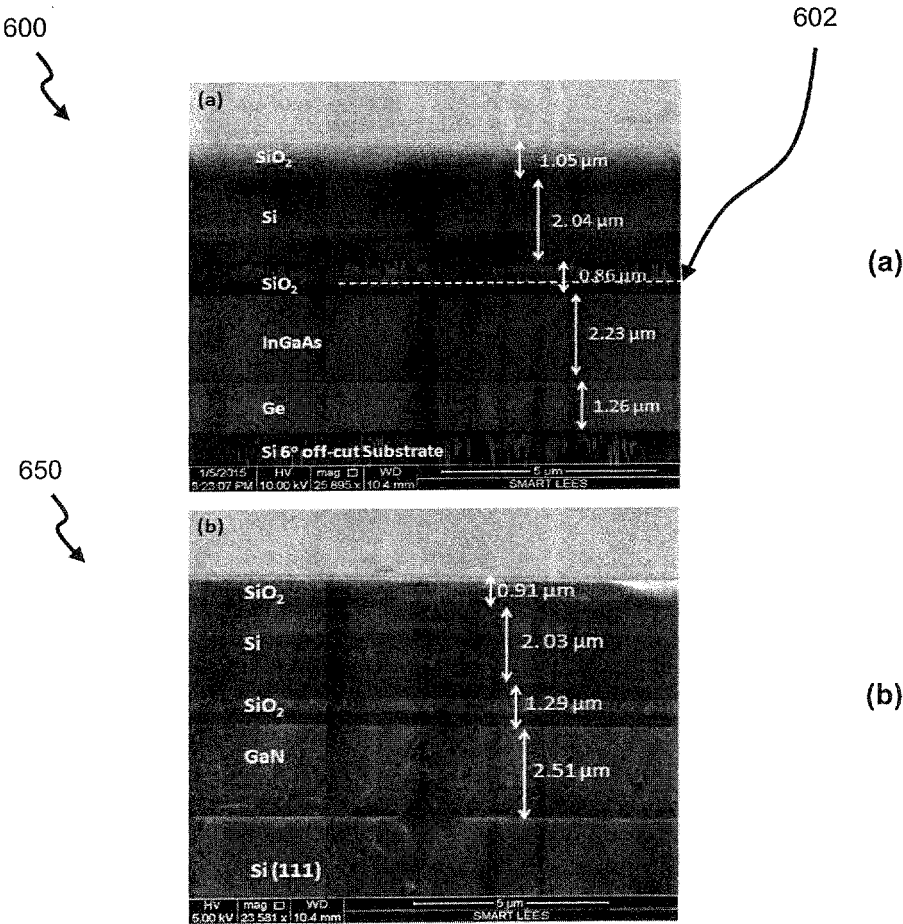



FIG. 6

700

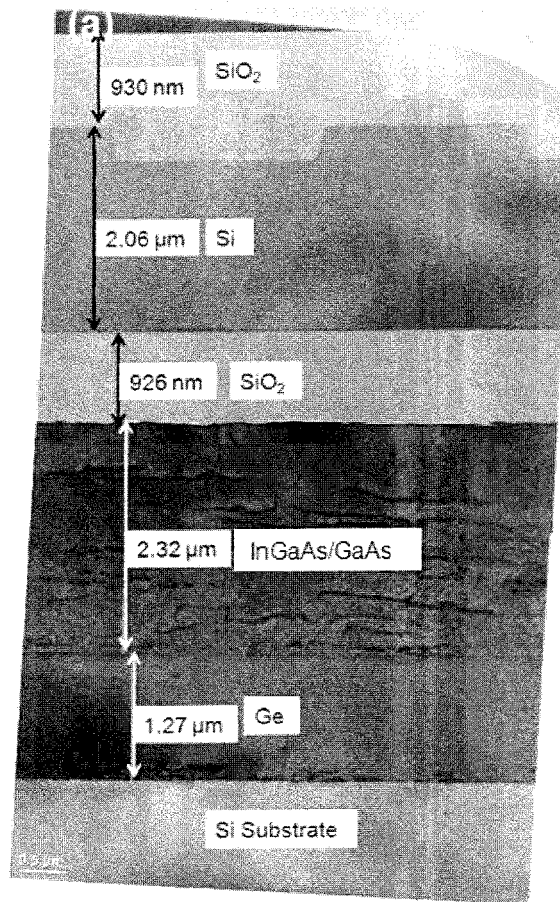



(a)

750

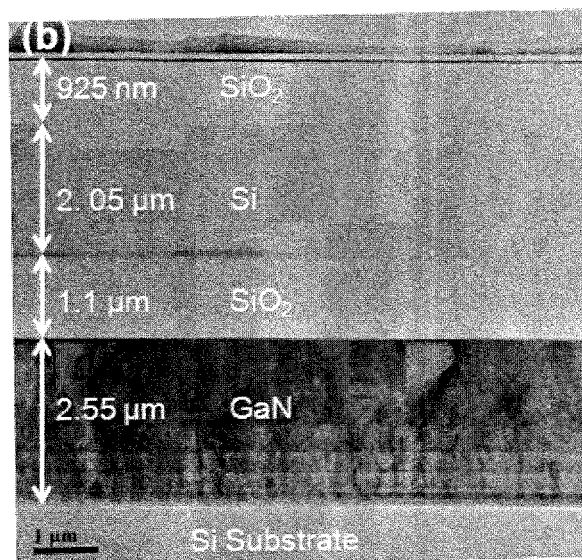


(b)

FIG. 7

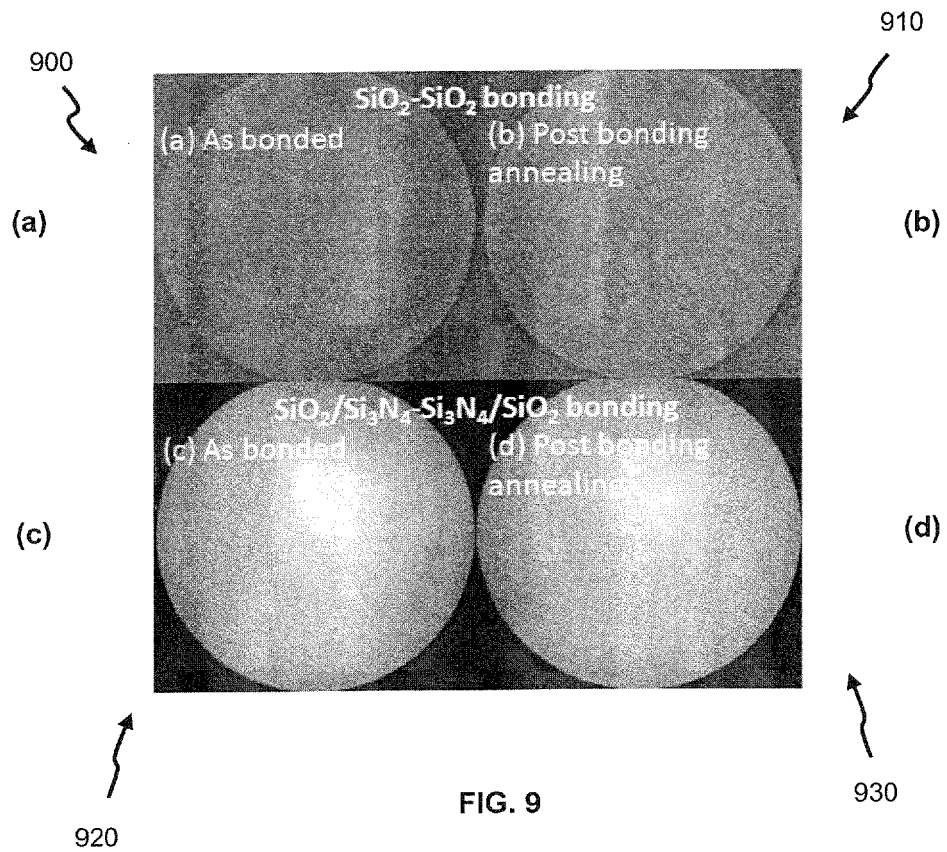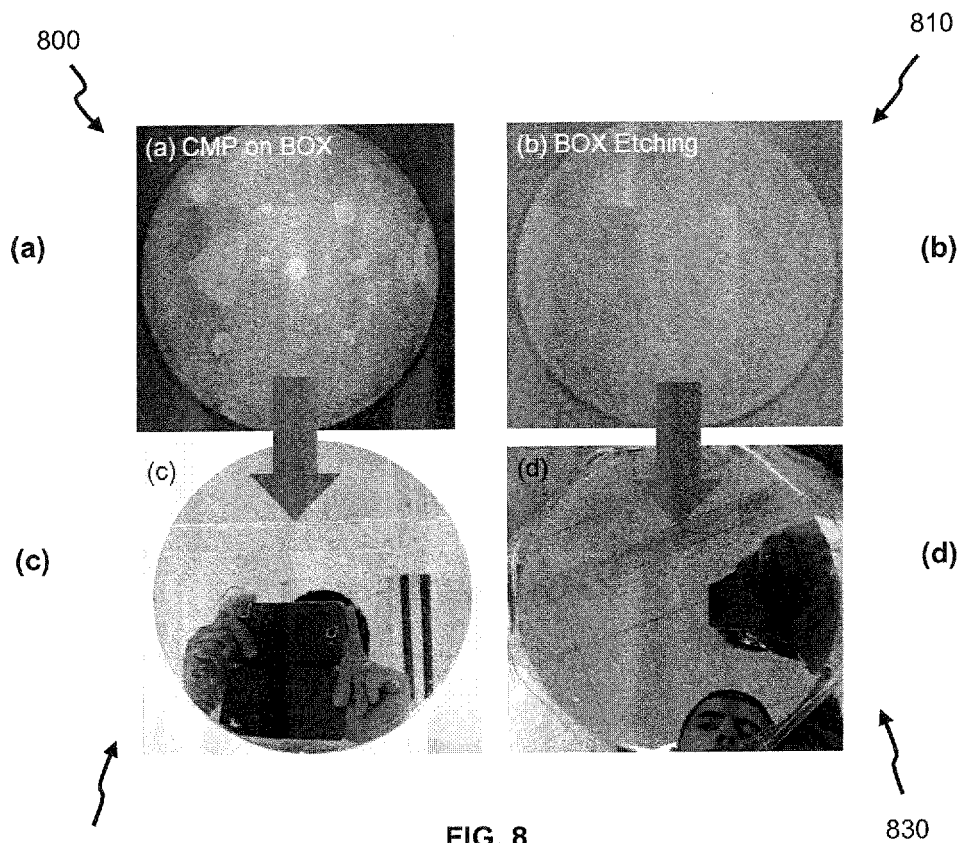

7 / 17

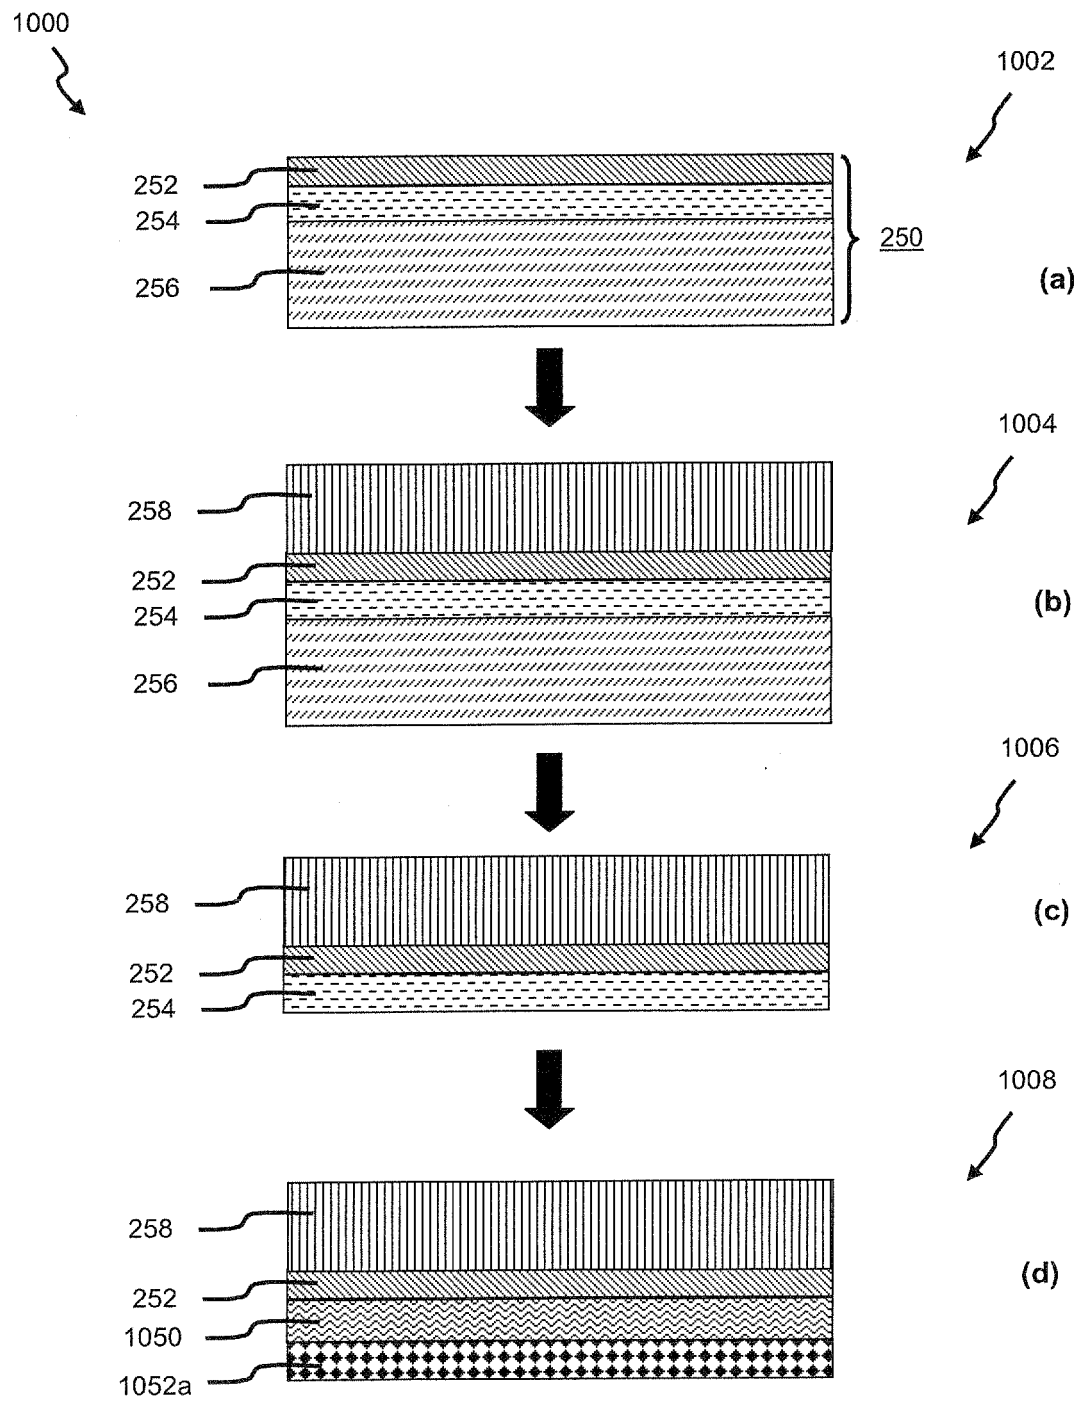

Step 1010

FIG. 10

Step 1008

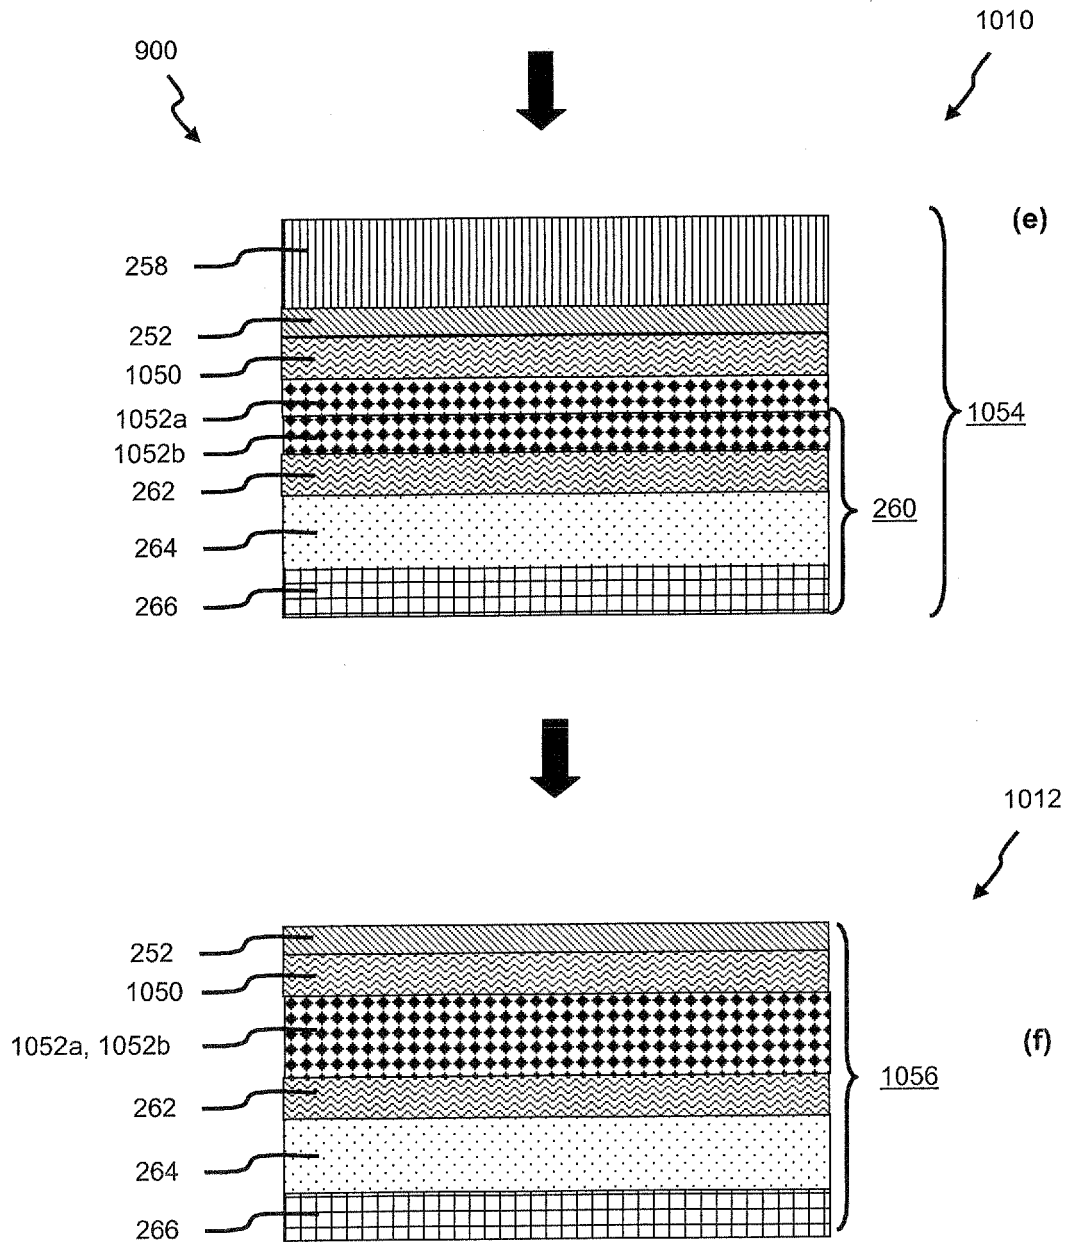


FIG. 10

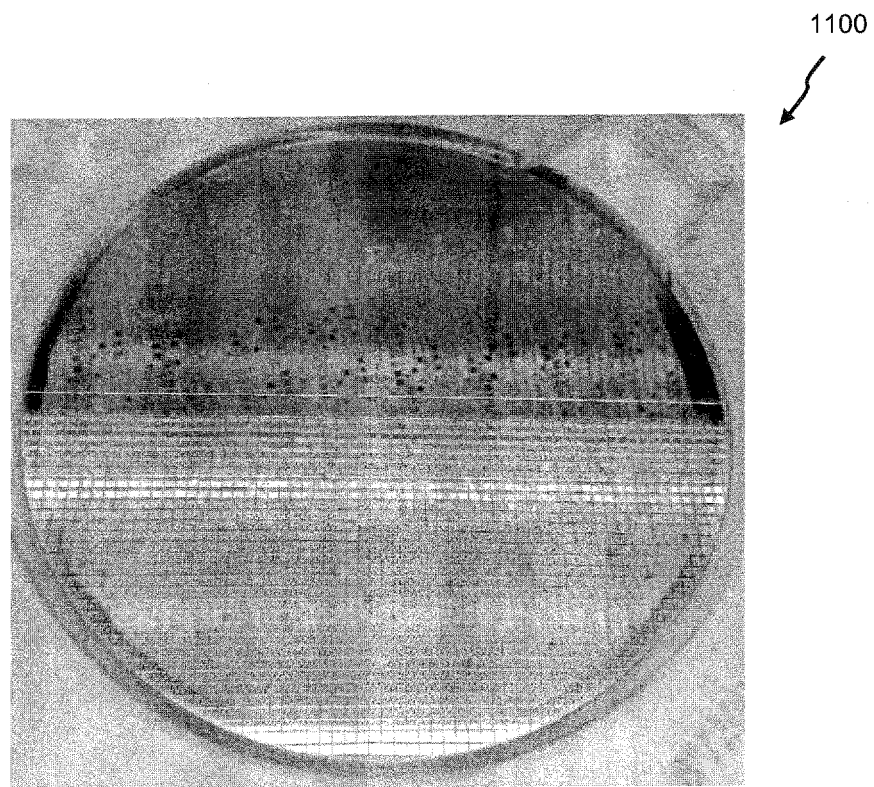


FIG. 11

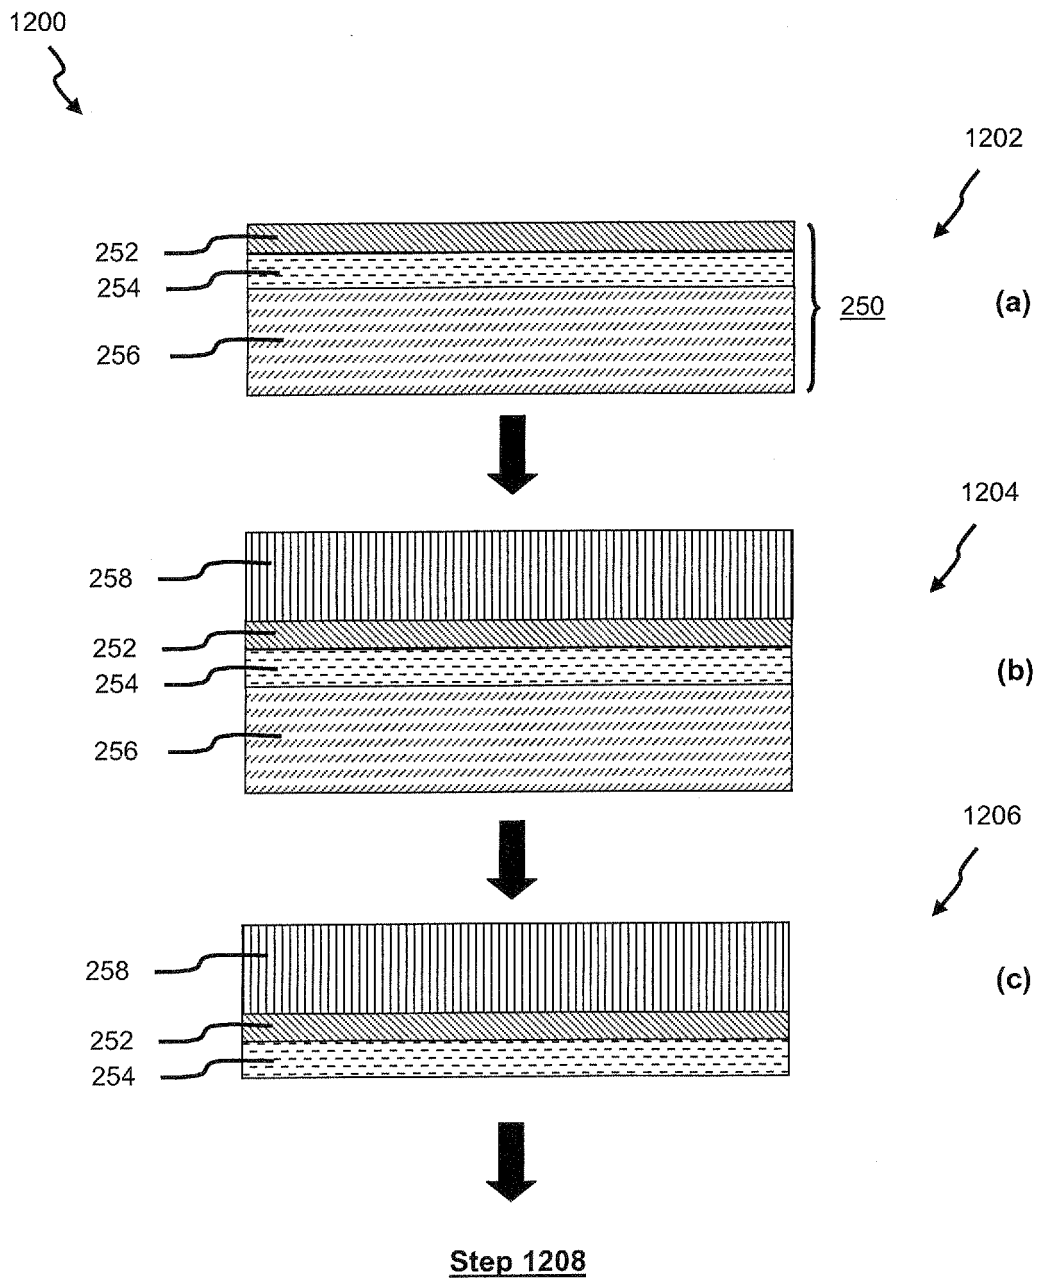


FIG. 12

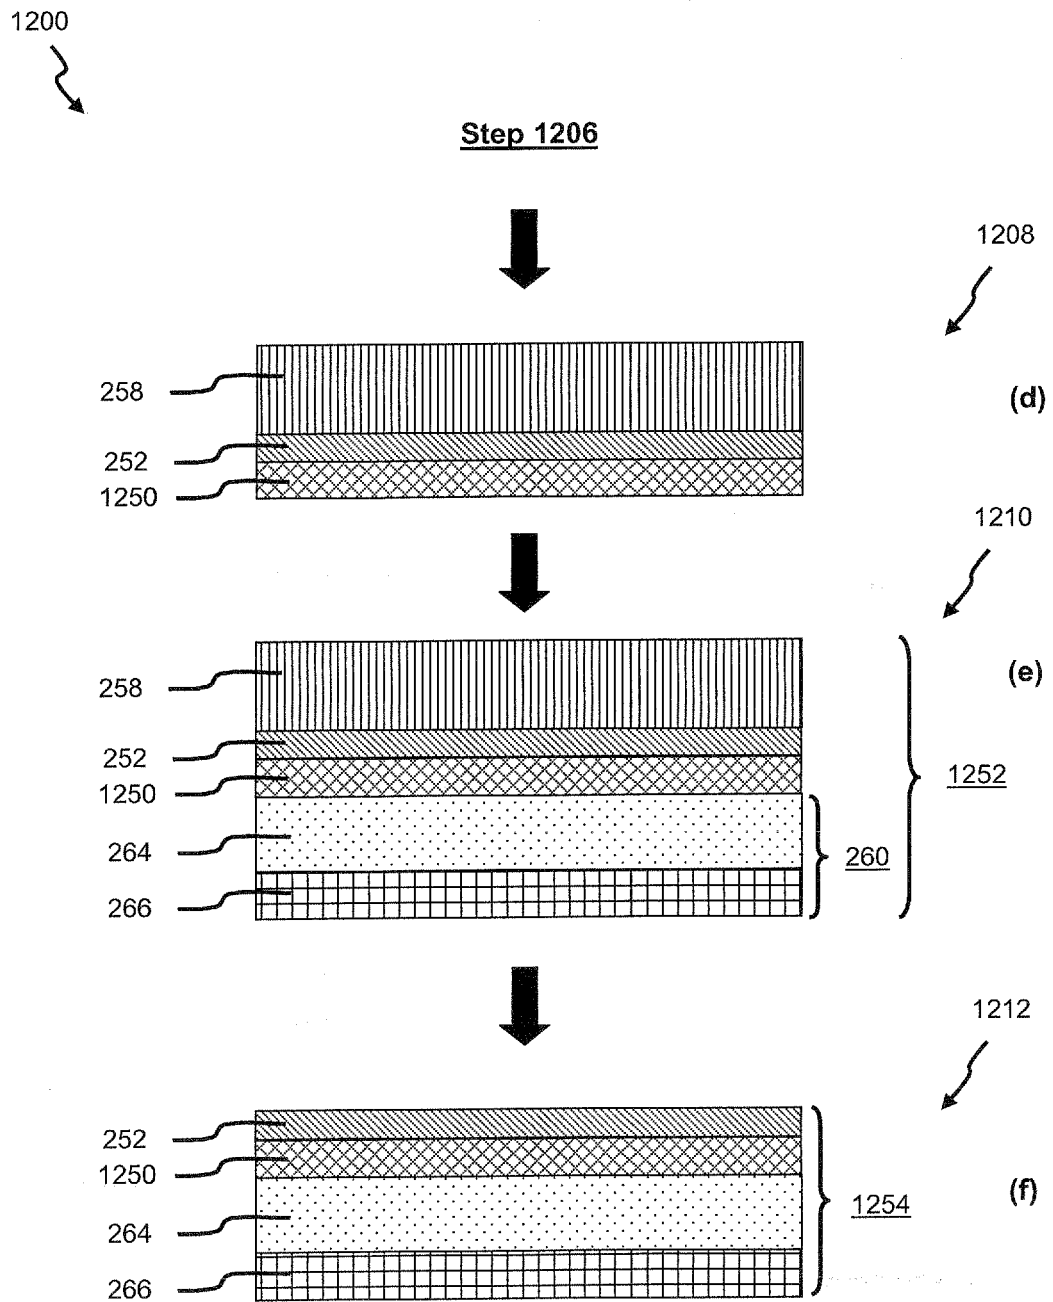


FIG. 12

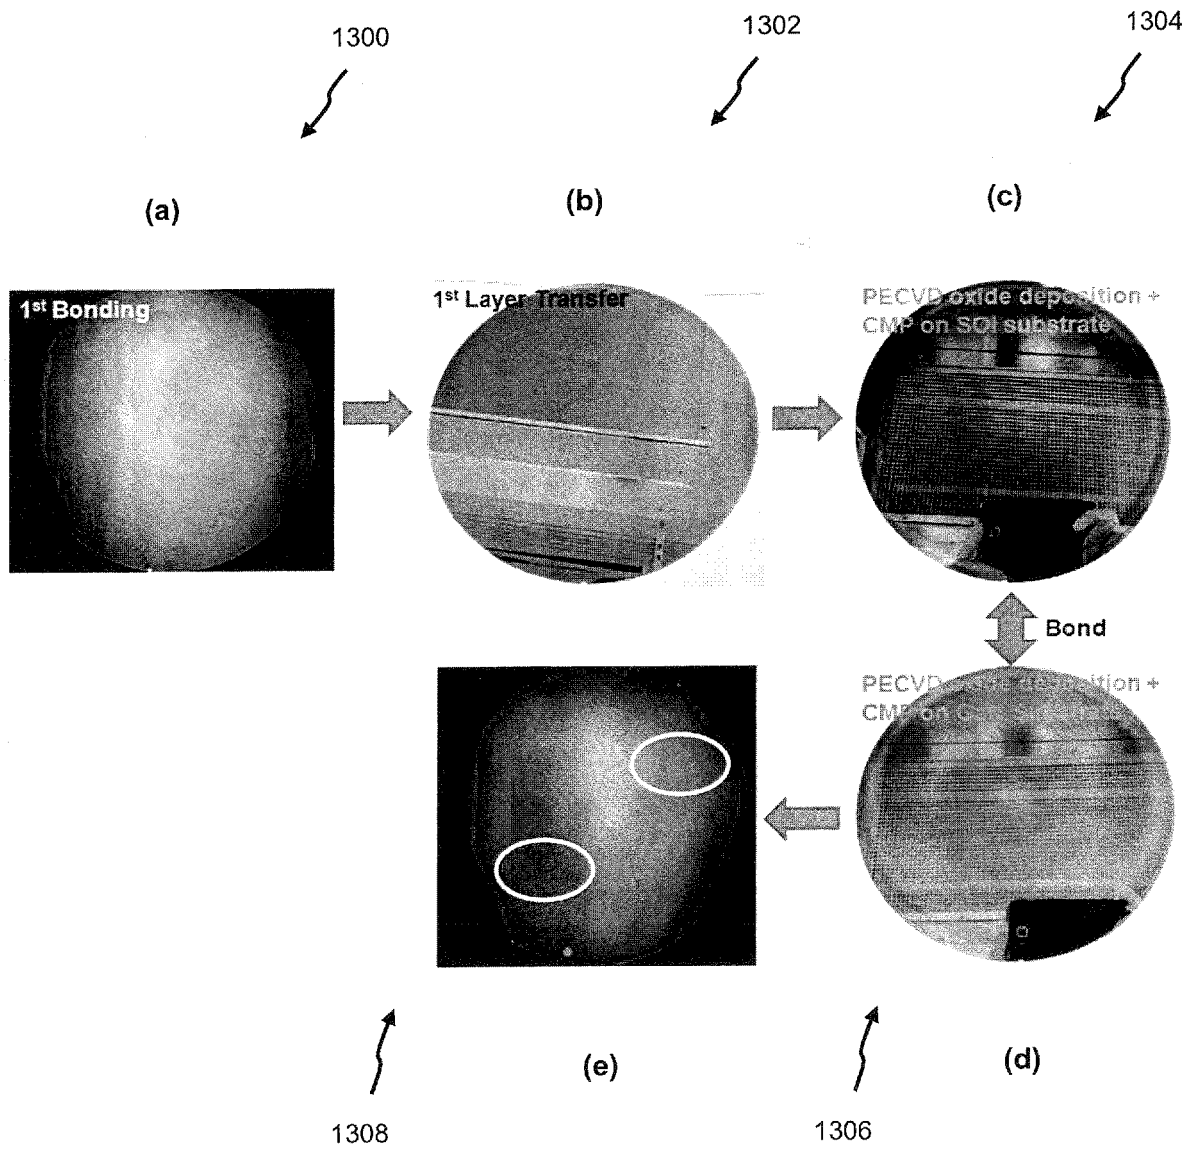


FIG. 13

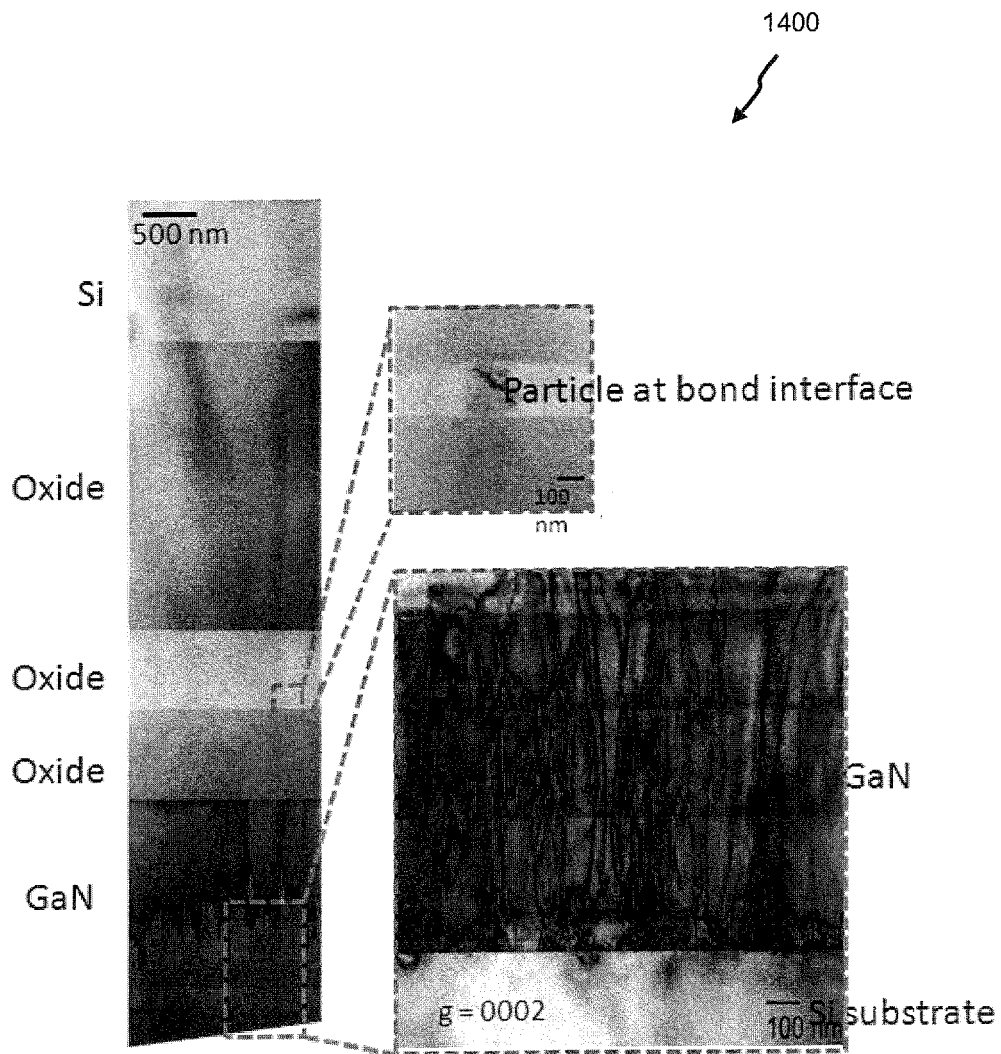


FIG. 14

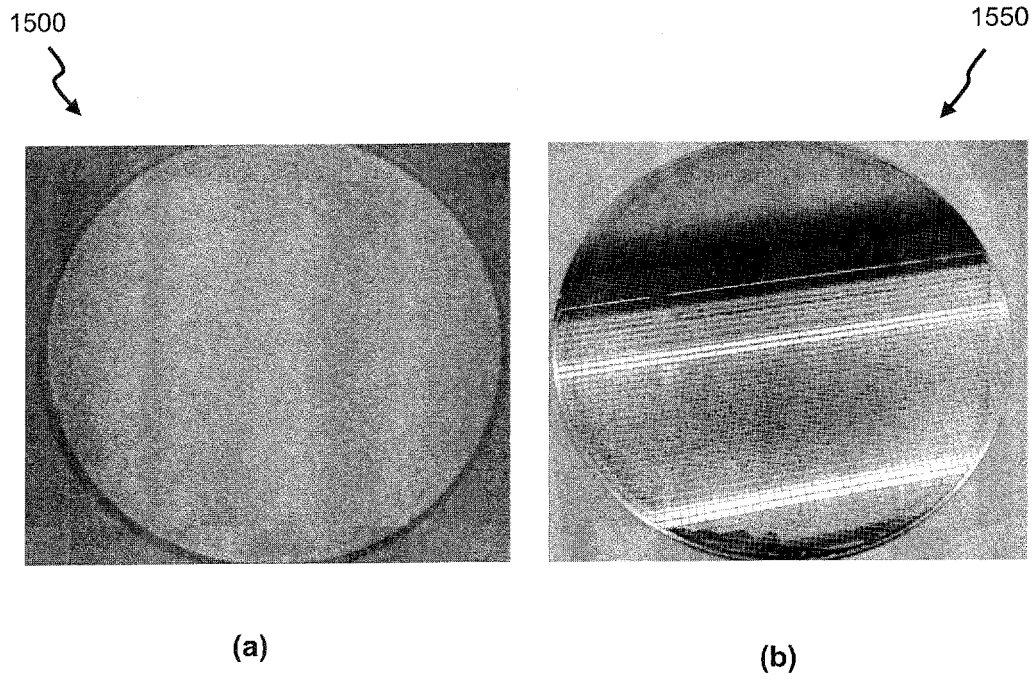


FIG. 15

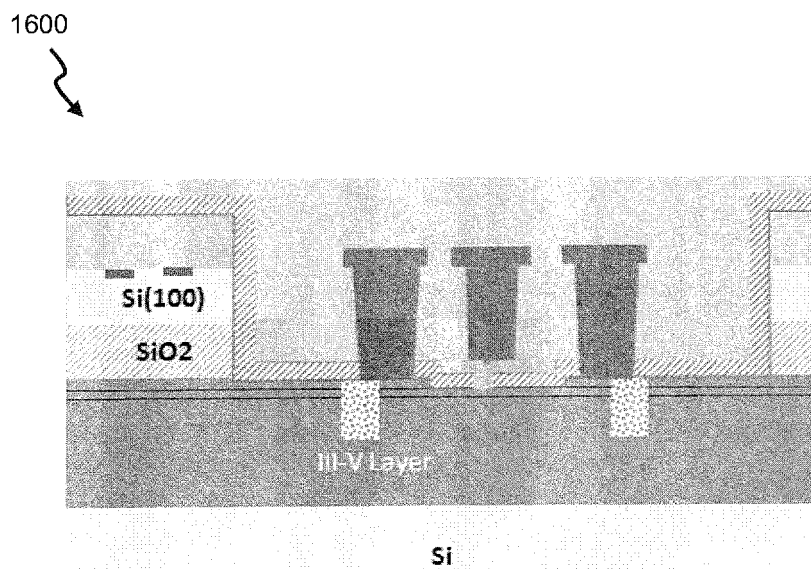


FIG. 16

15 / 17

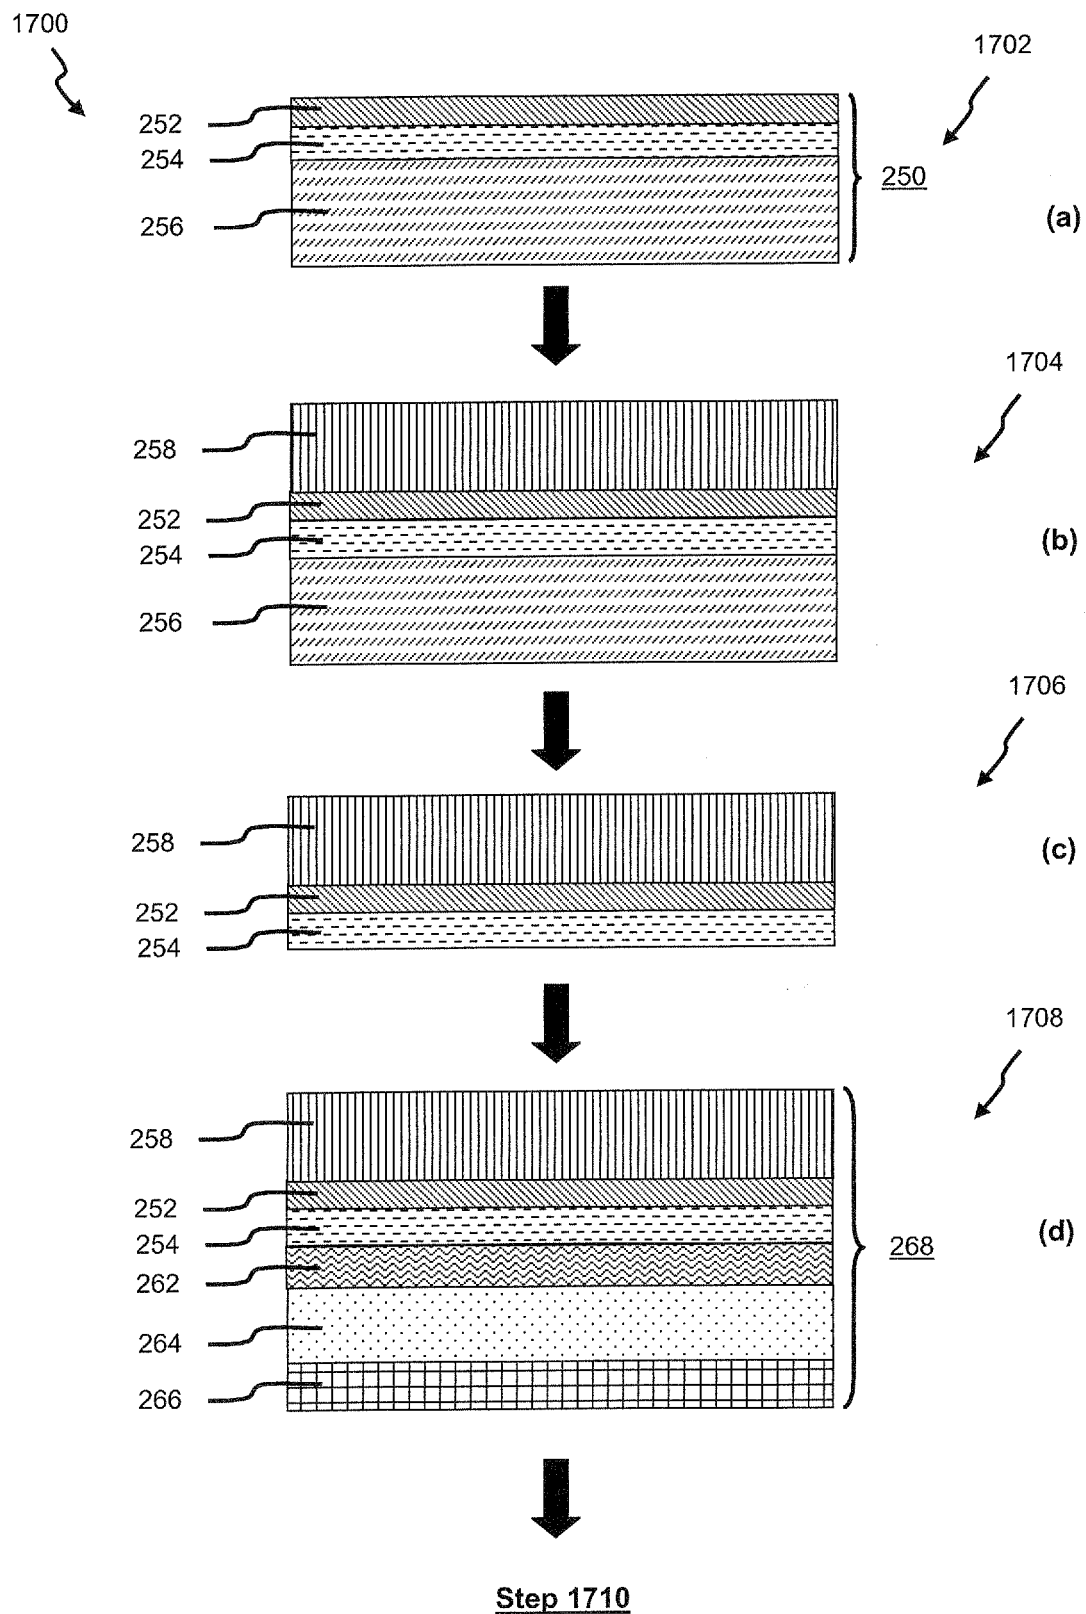


FIG. 17

16 / 17

1700

Step 1708

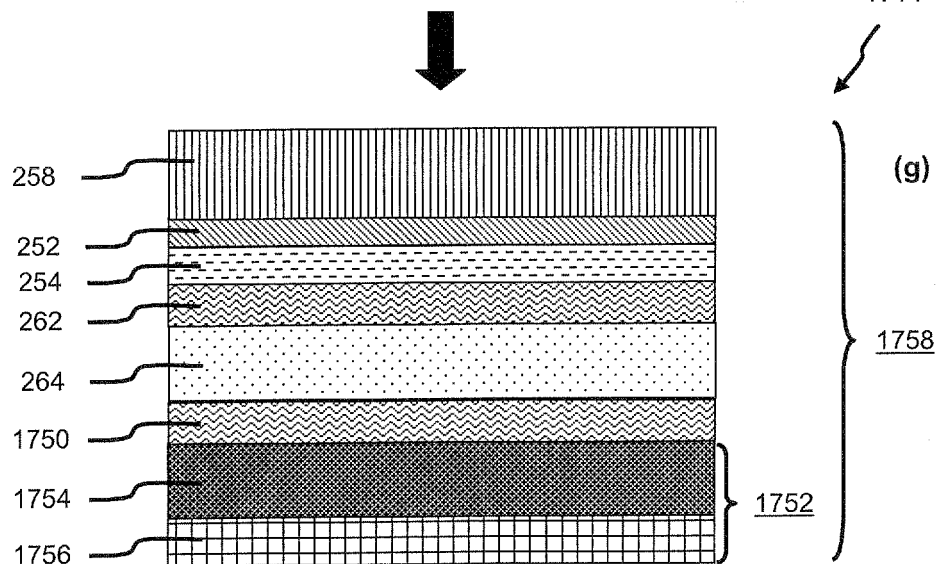
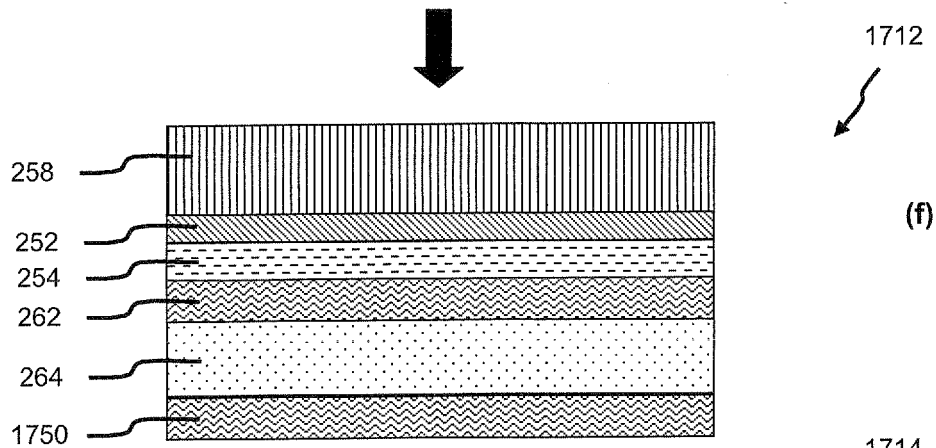
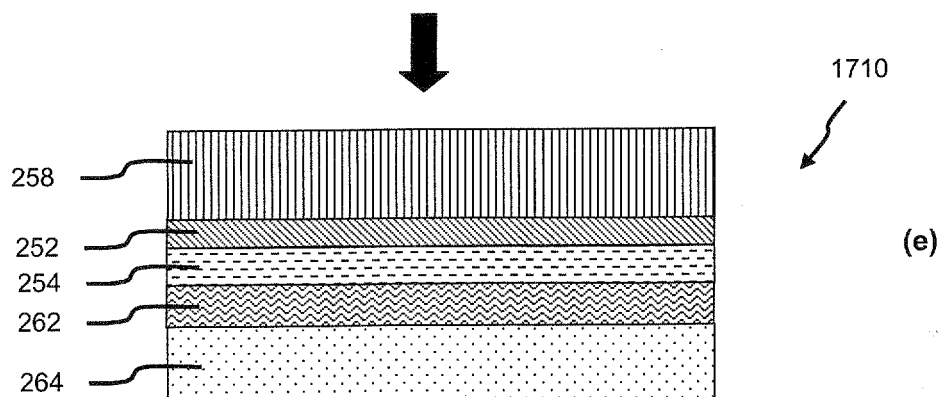


FIG. 17

Step 1716

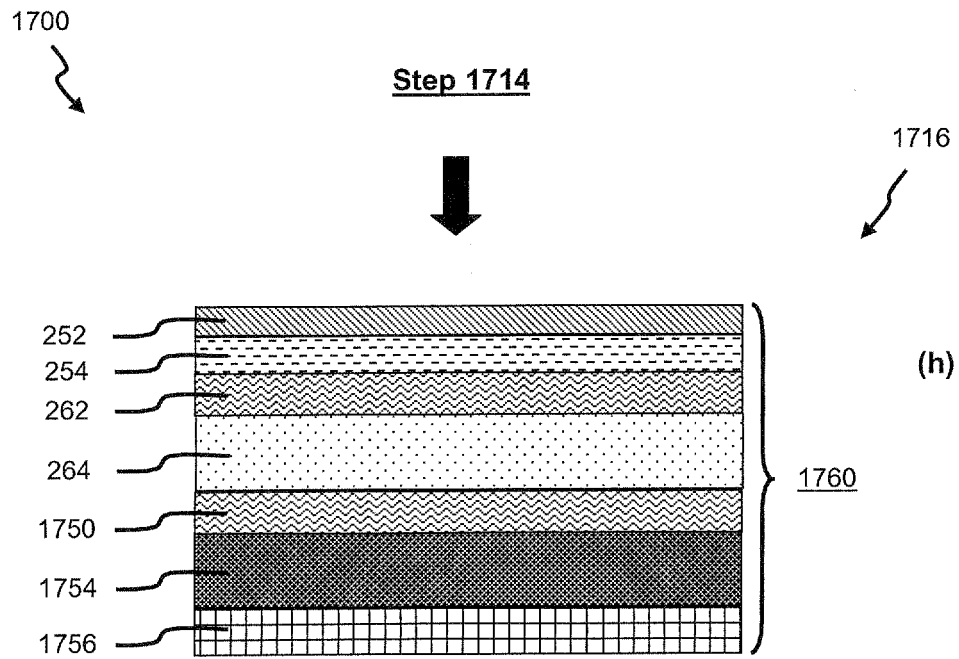


FIG. 17