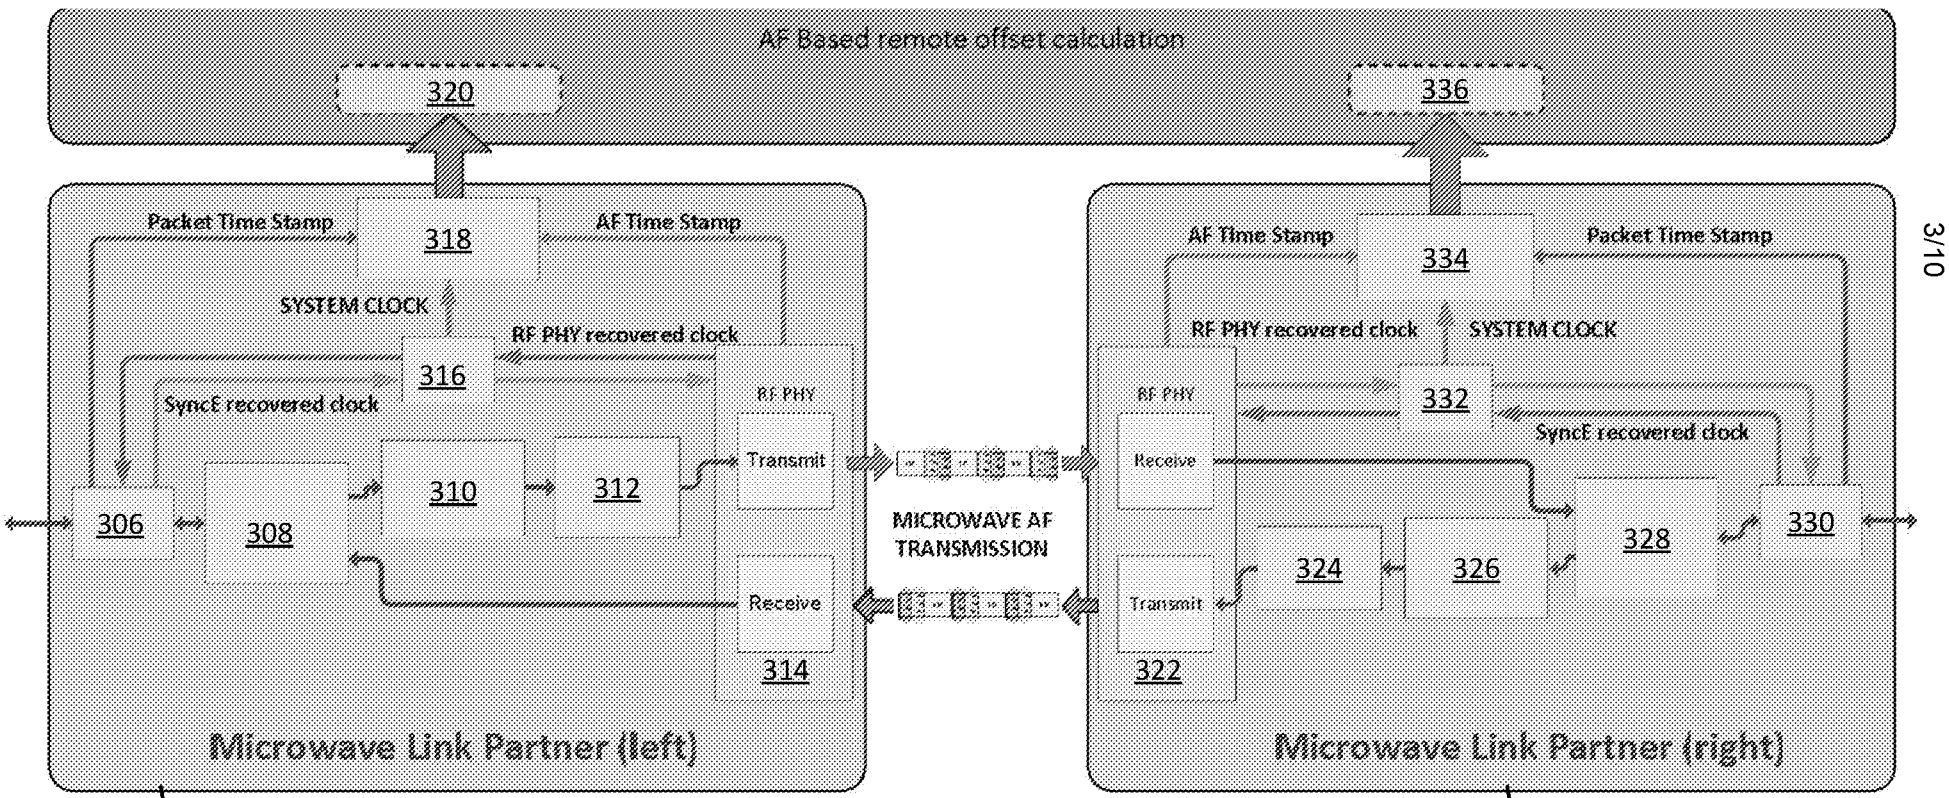

300
AF Based remote offset calculation
320
336
Packet Time Stamp
318
AF Time Stamp
SYSTEM CLOCK
RF PHY recovered clock
316
SyncE recovered clock
RF PHY
Transmit
306
308
310
312
MICROWAVE AF TRANSMISSION
Receive
314
Microwave Link Partner (left)
302
AF Time Stamp
334
Packet Time Stamp
RF PHY recovered clock
SYSTEM CLOCK
RF PHY
332
SyncE recovered clock
Receive
328
330
324
326
Transmit
322
Microwave Link Partner (right)
304

FIG. 3

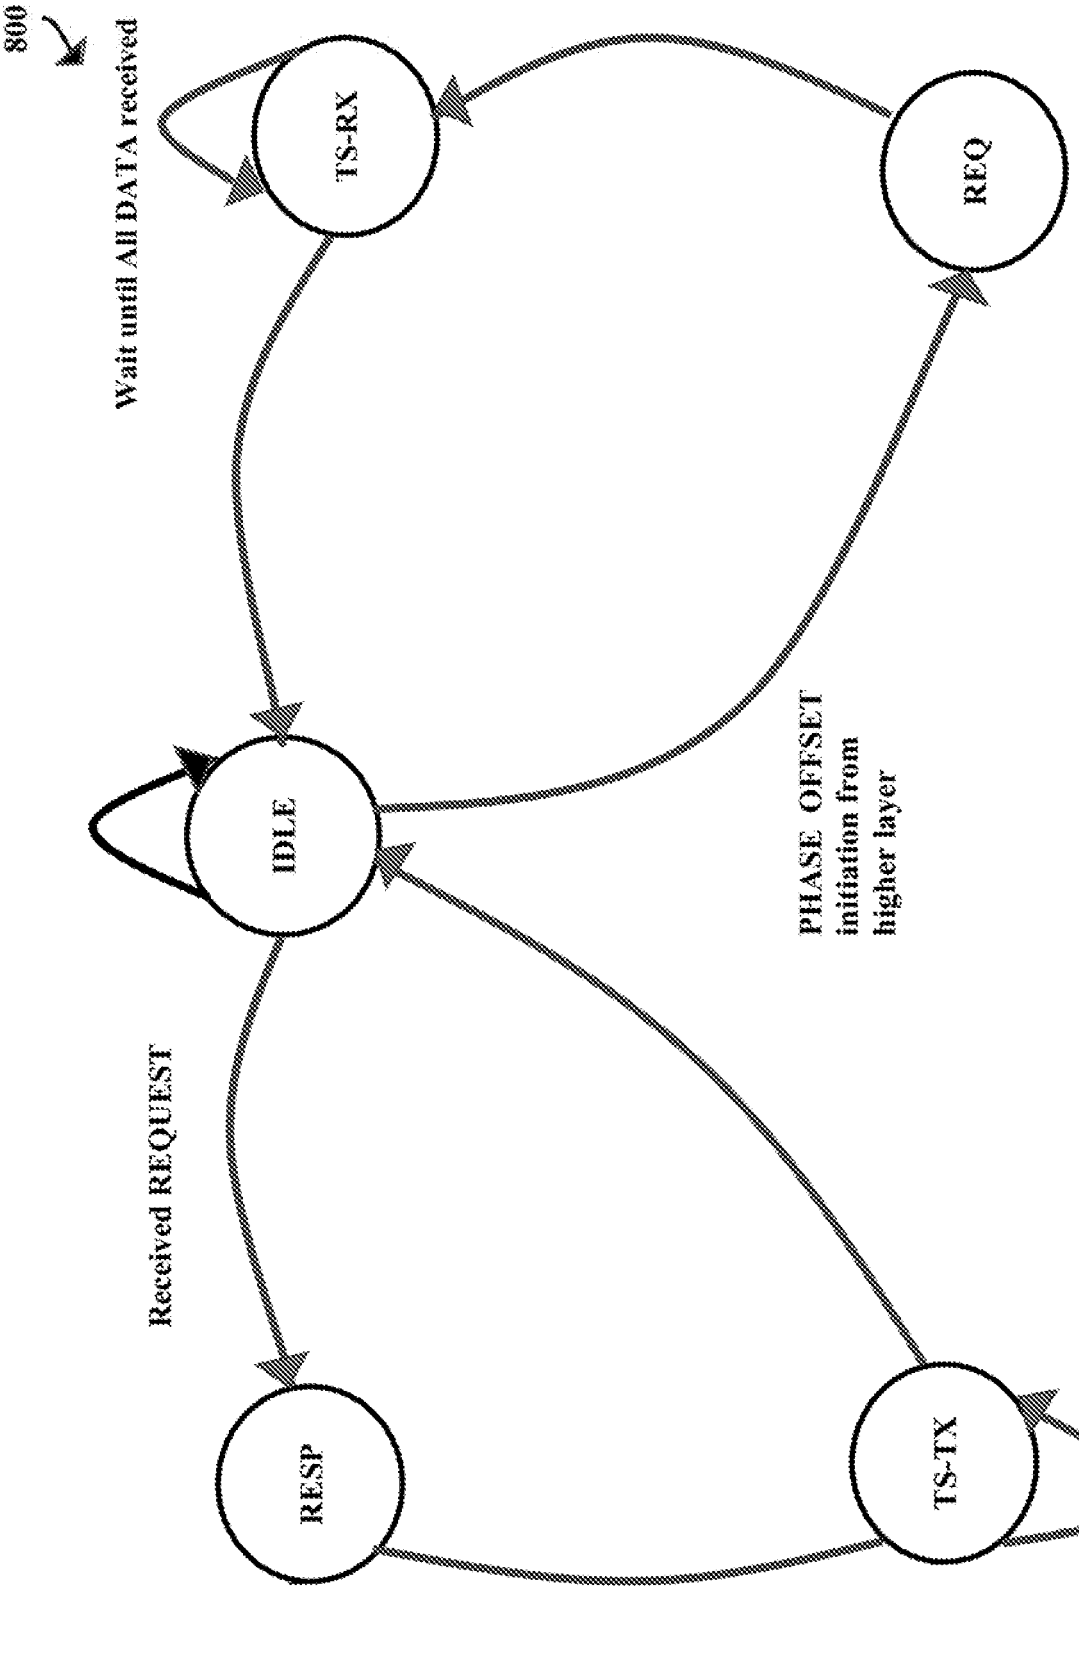

800
Wait until All DATA received
TS-RX
REQ
IDLE
PHASE OFFSET
initiation from
higher layer
Received REQUEST
RESP
TS-TX
Wait until All DATA sent

FIG. 8