


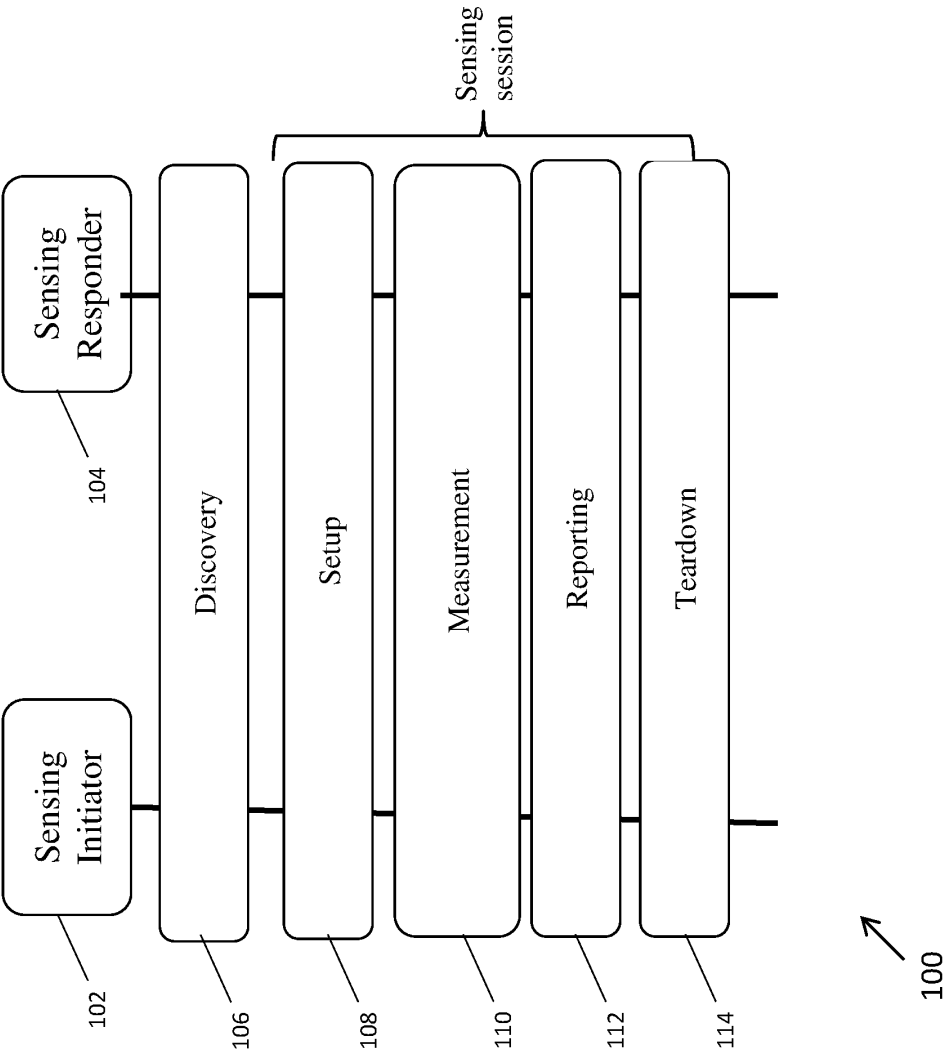


Figure 1

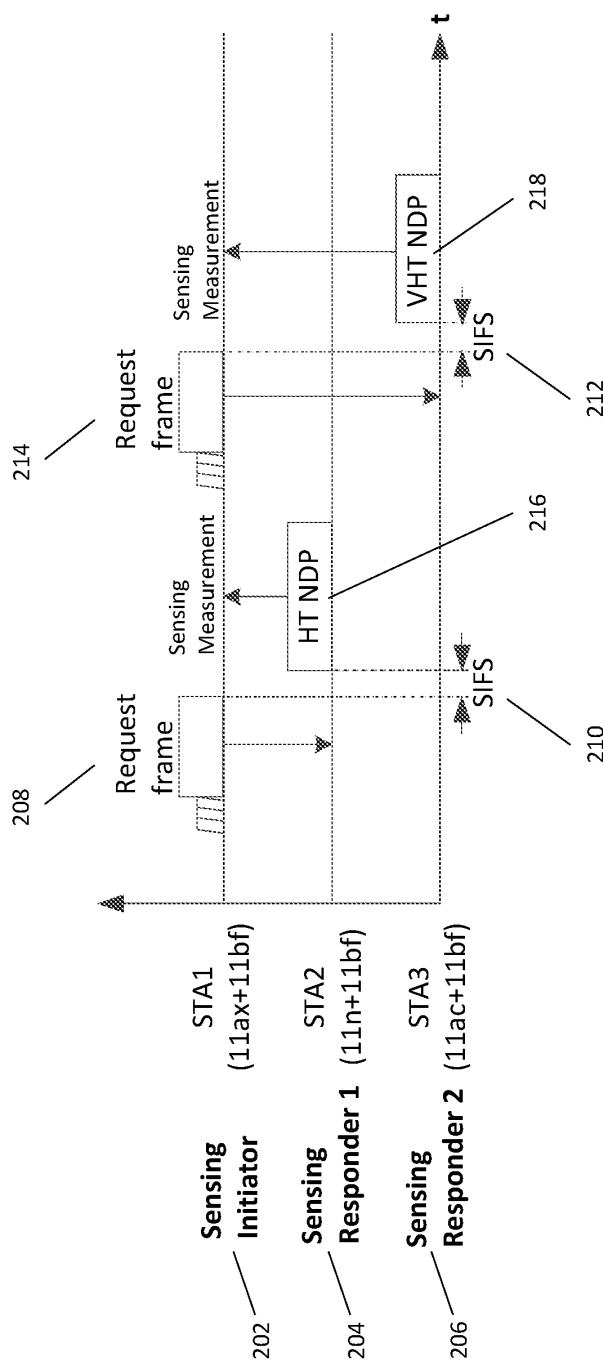

200

Figure 2



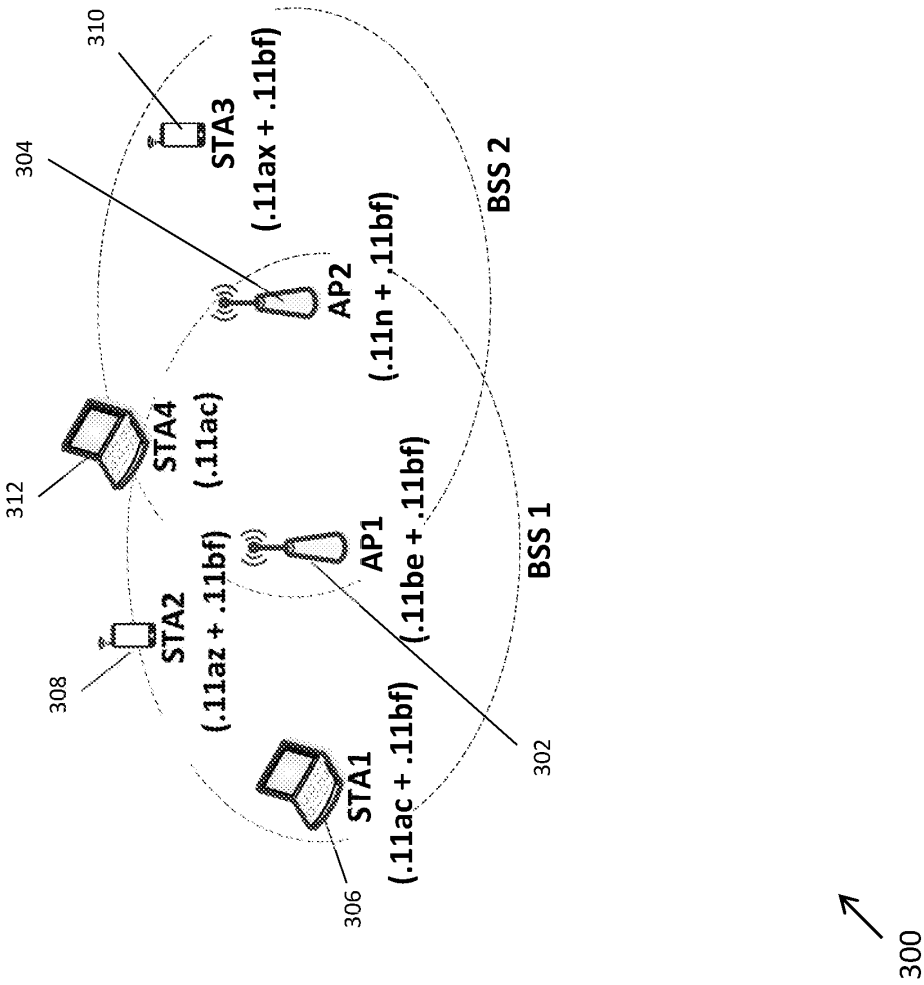


Figure 3

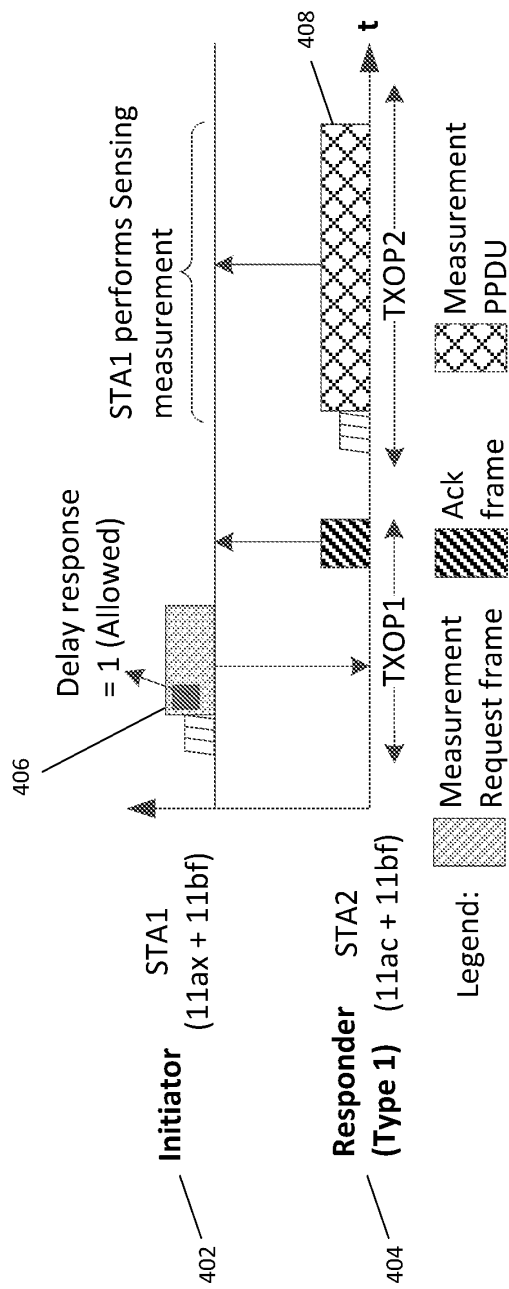

400

Figure 4

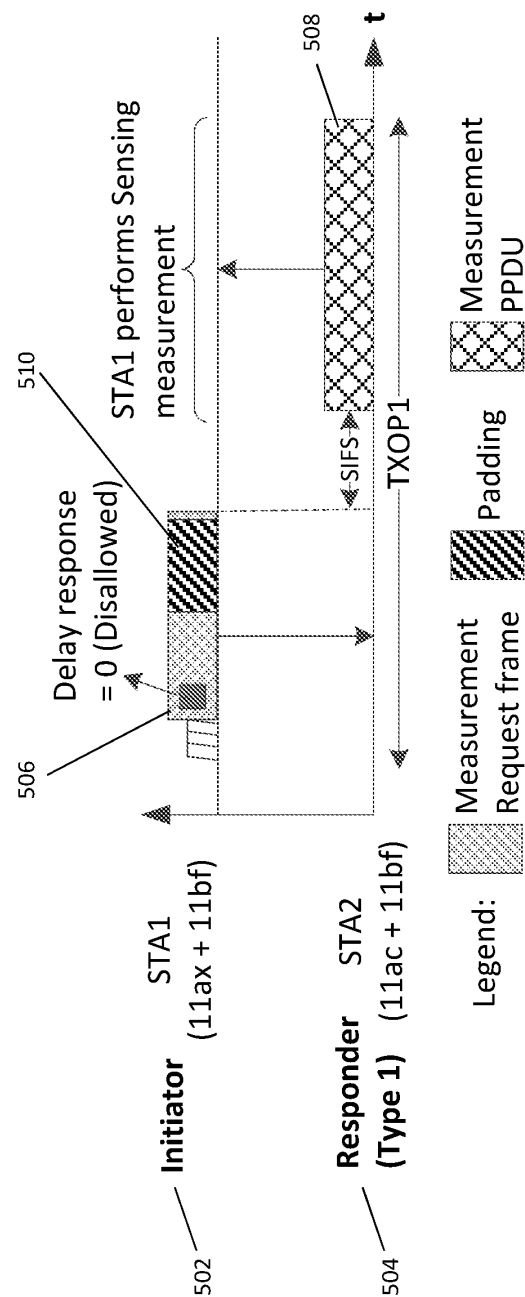

500

Figure 5

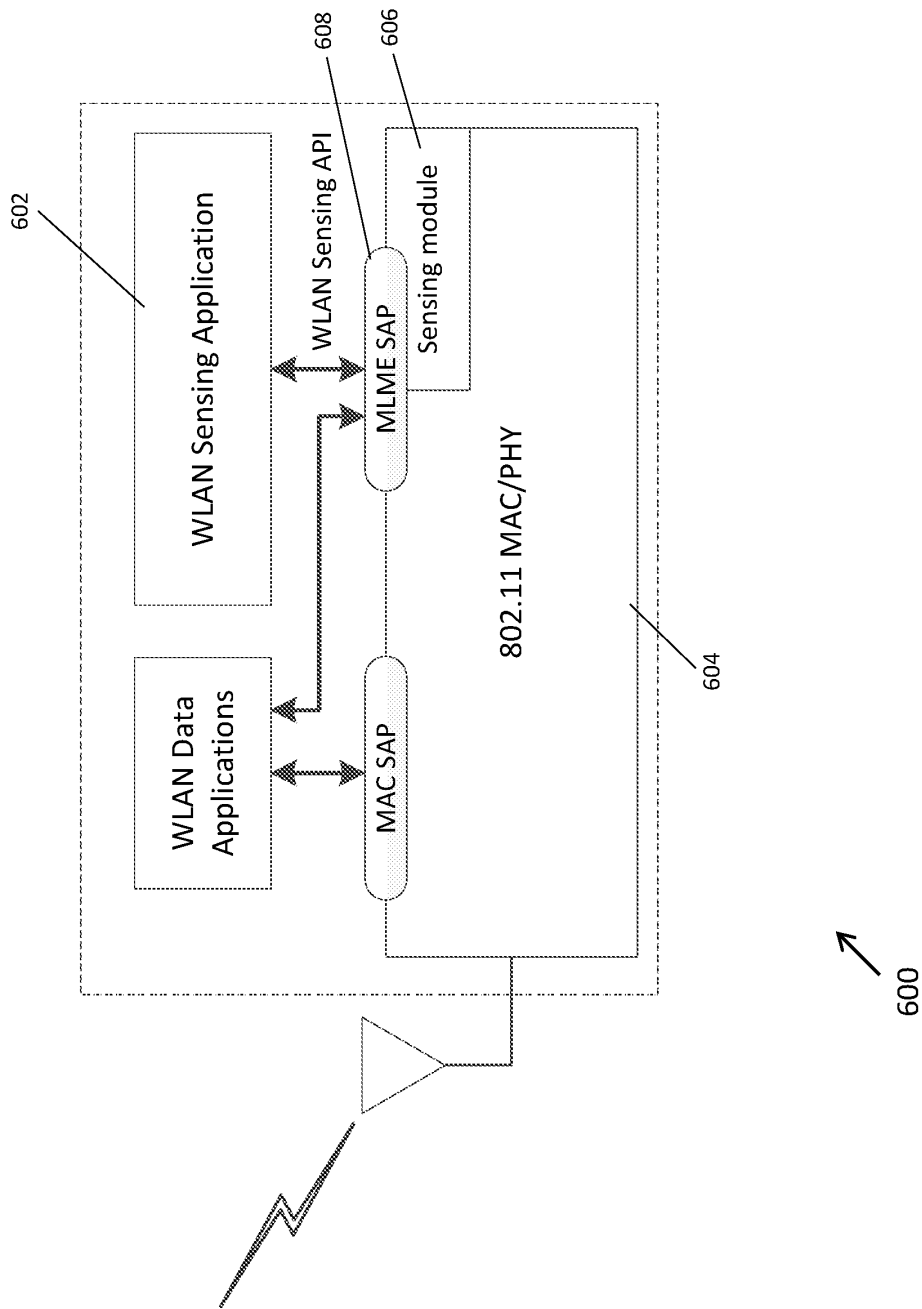


Figure 6

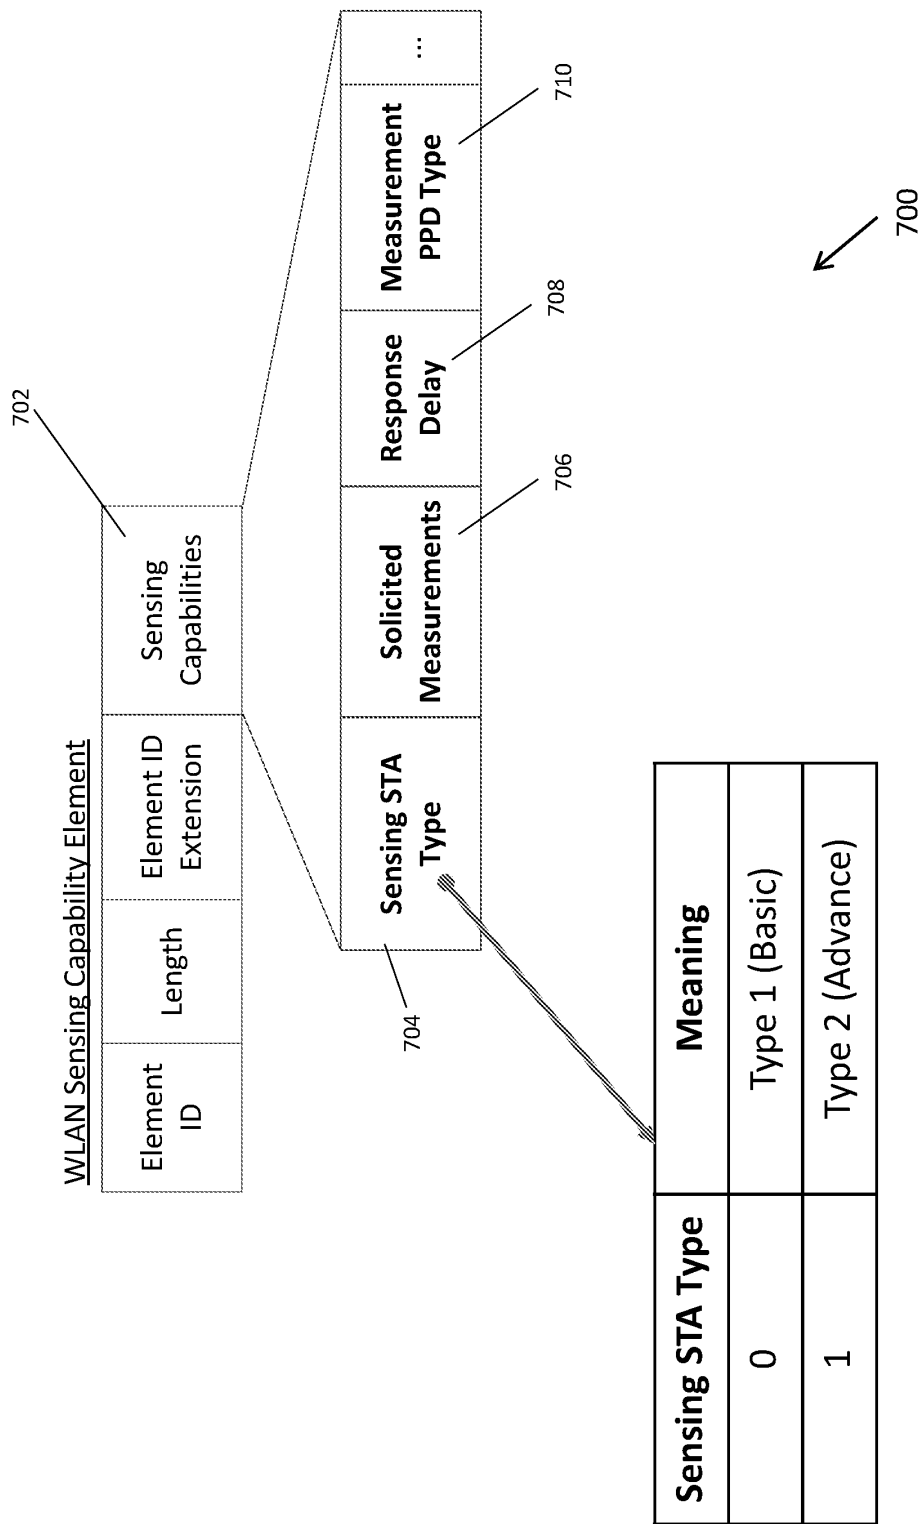


Figure 7

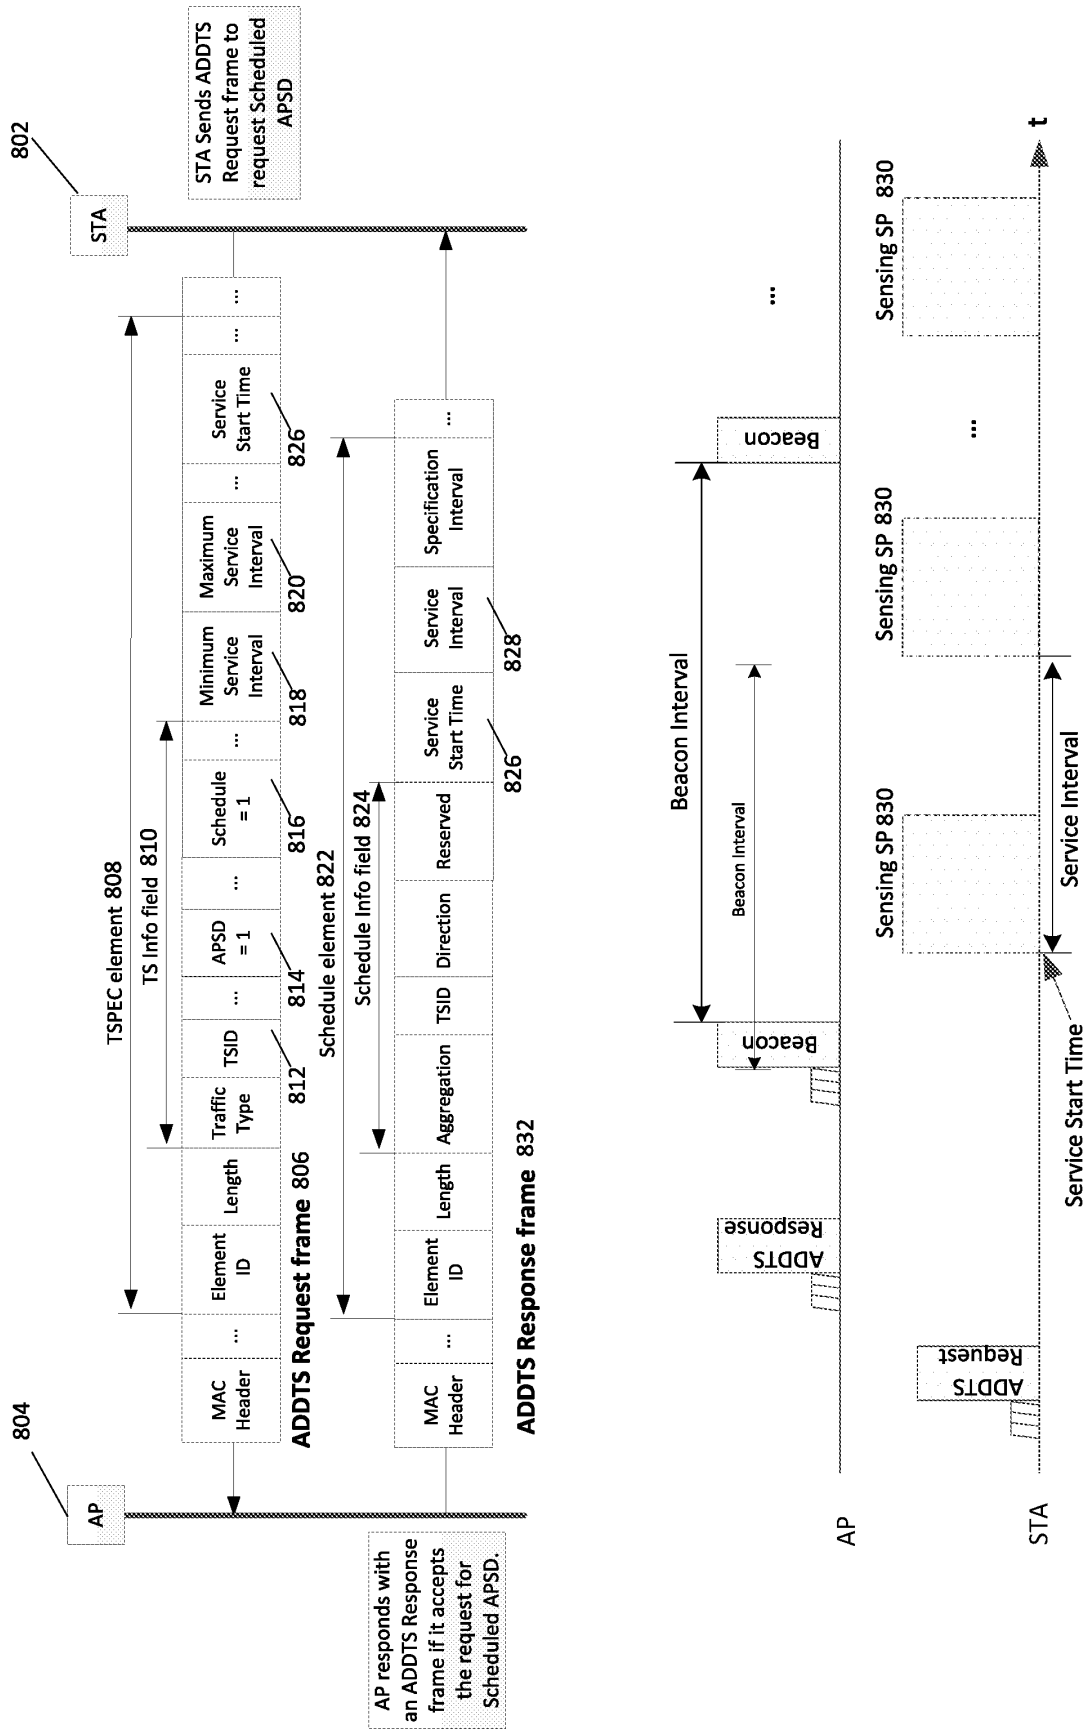


Figure 8

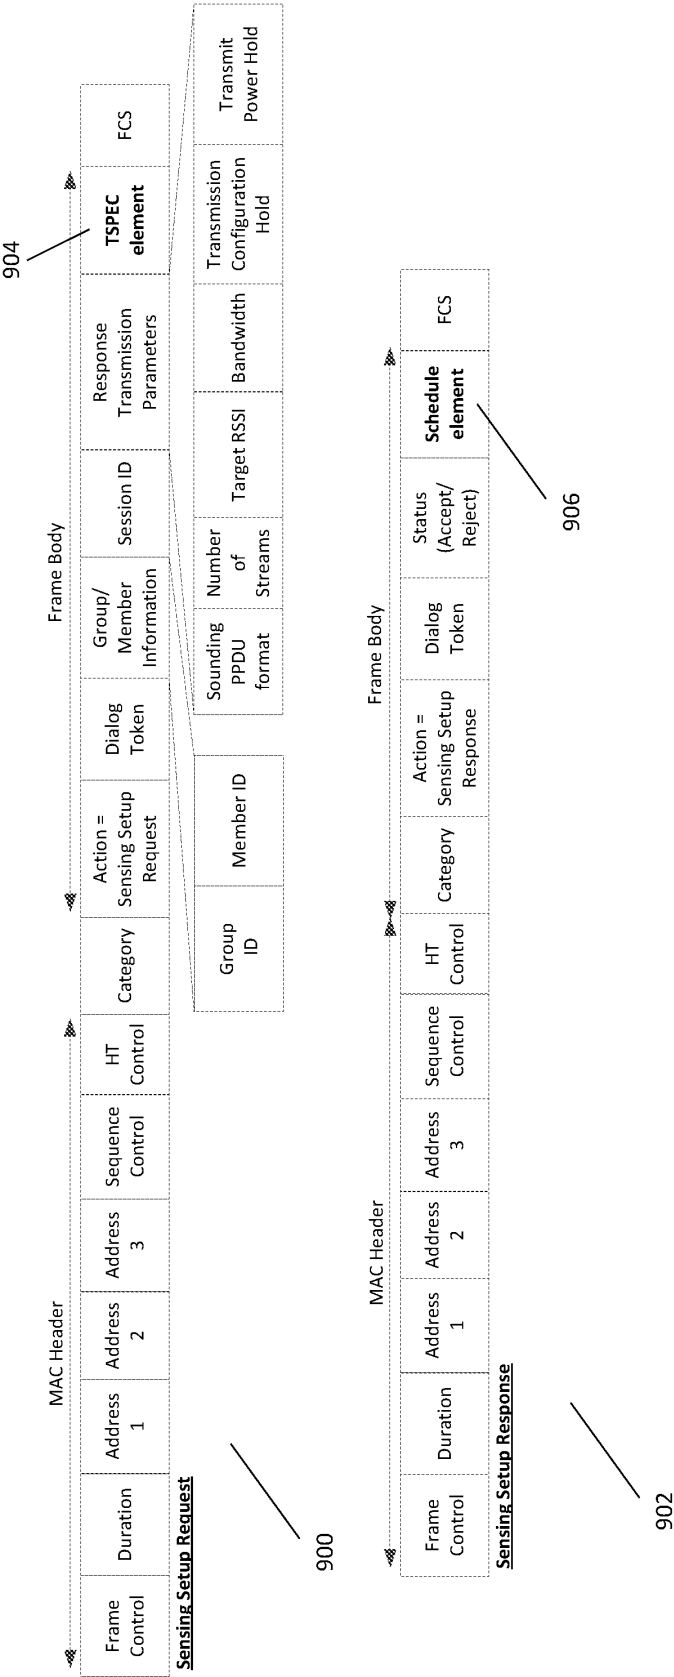


Figure 9

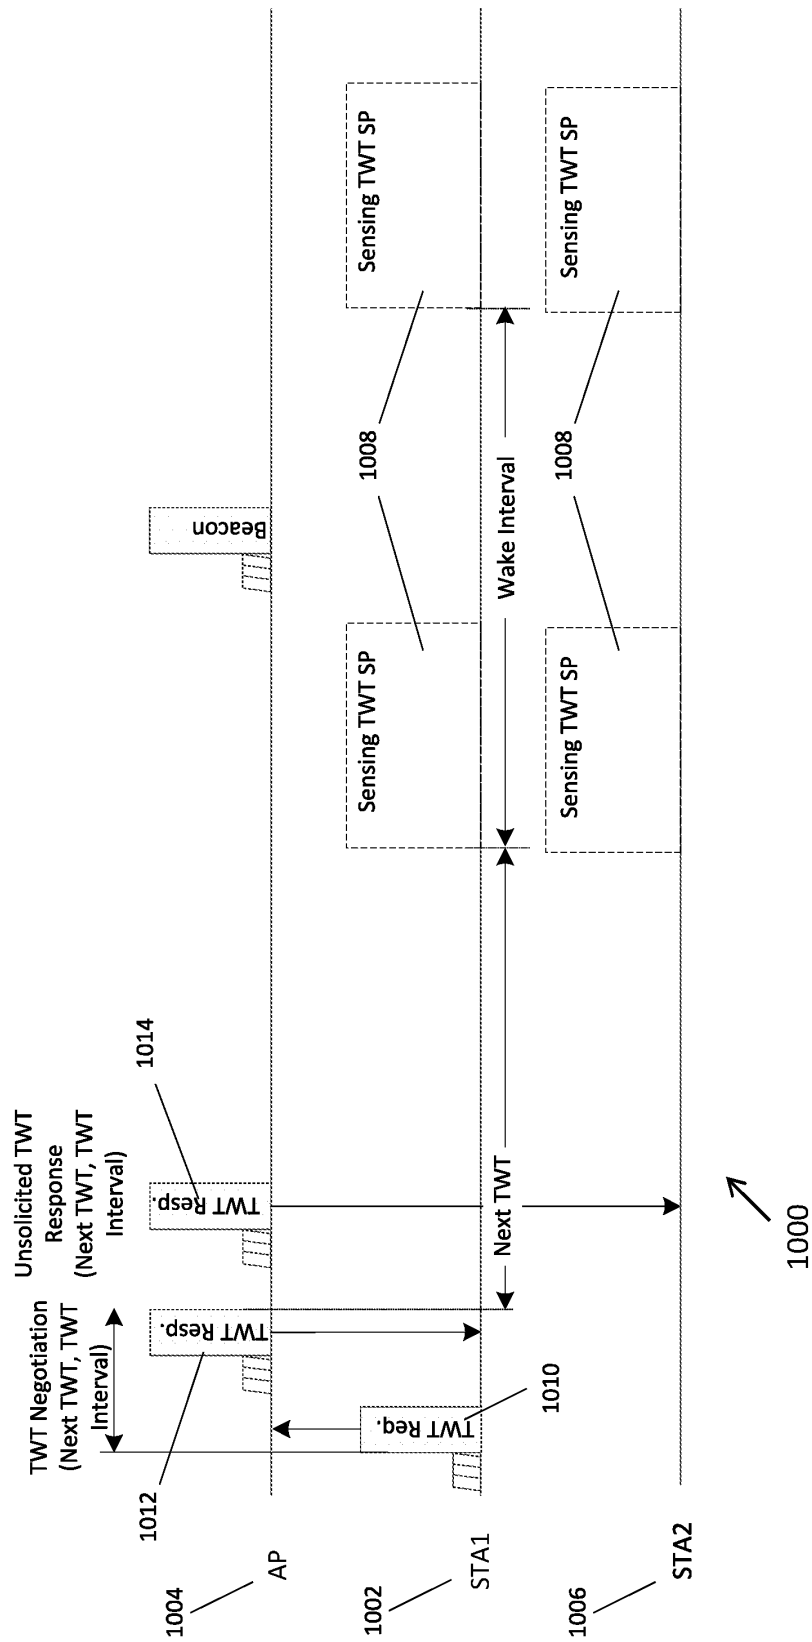


Figure 10

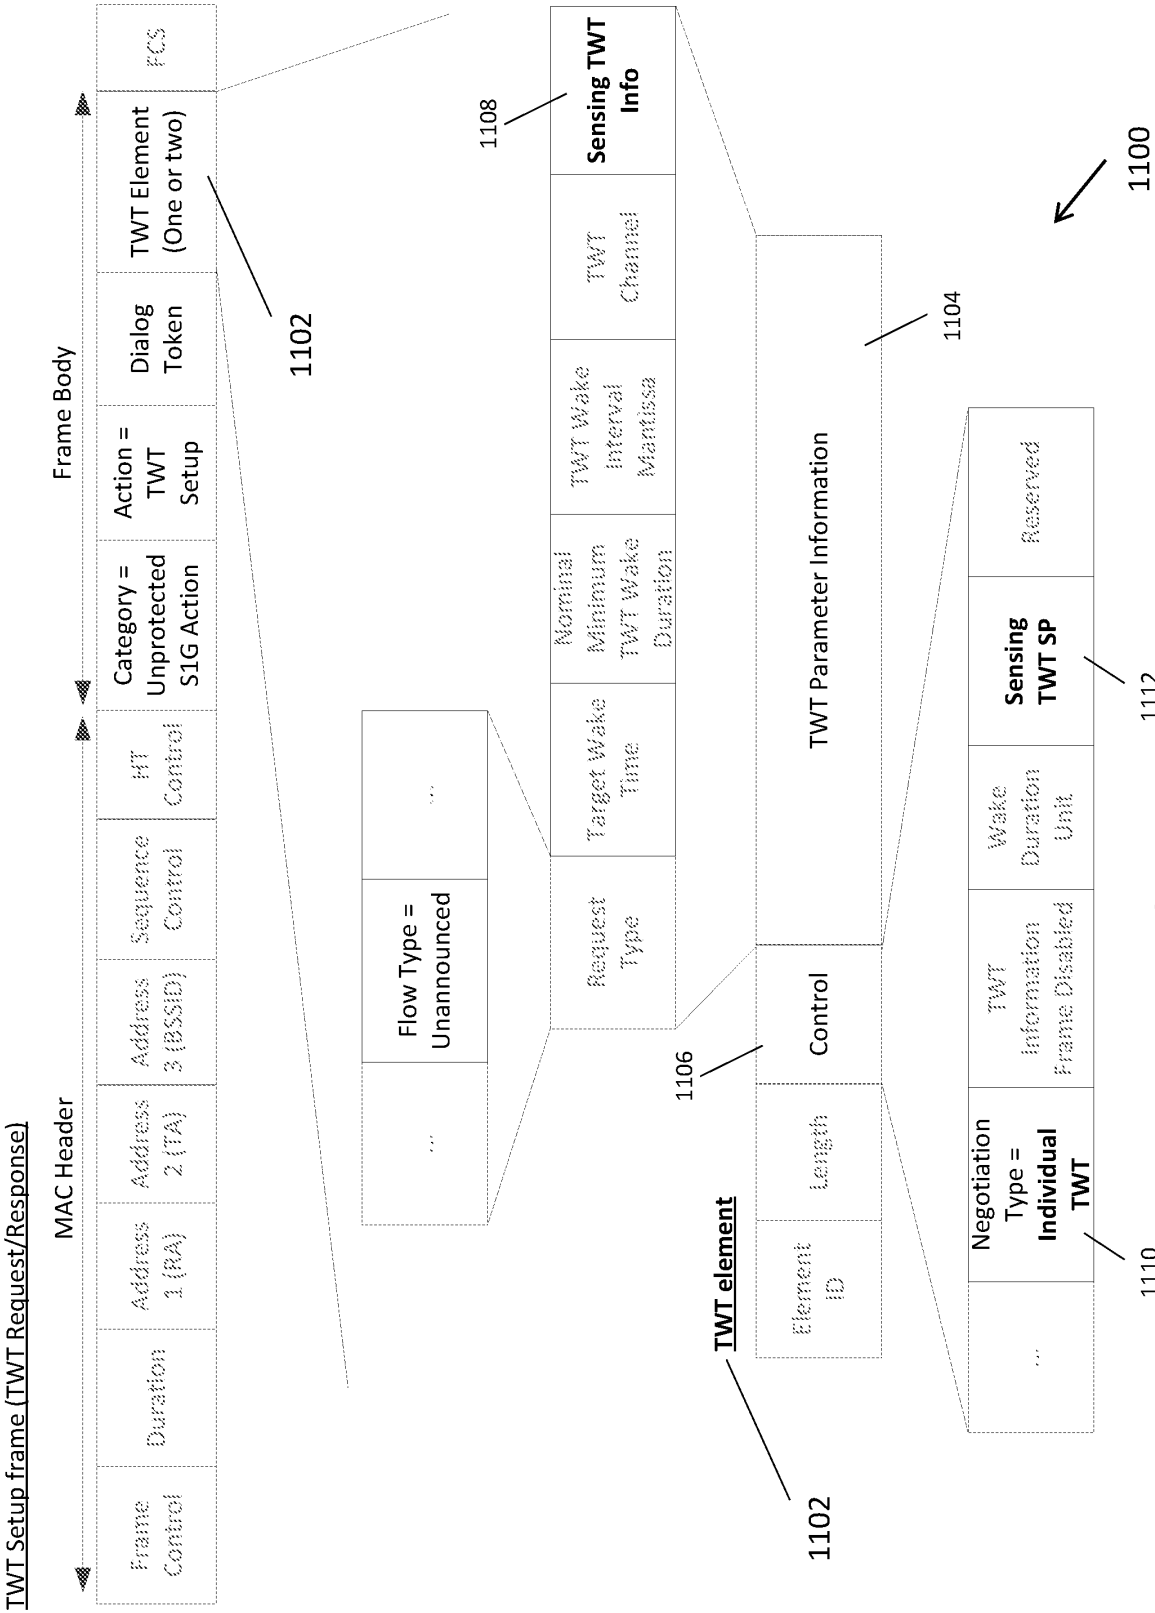


Figure 11




Figure 12

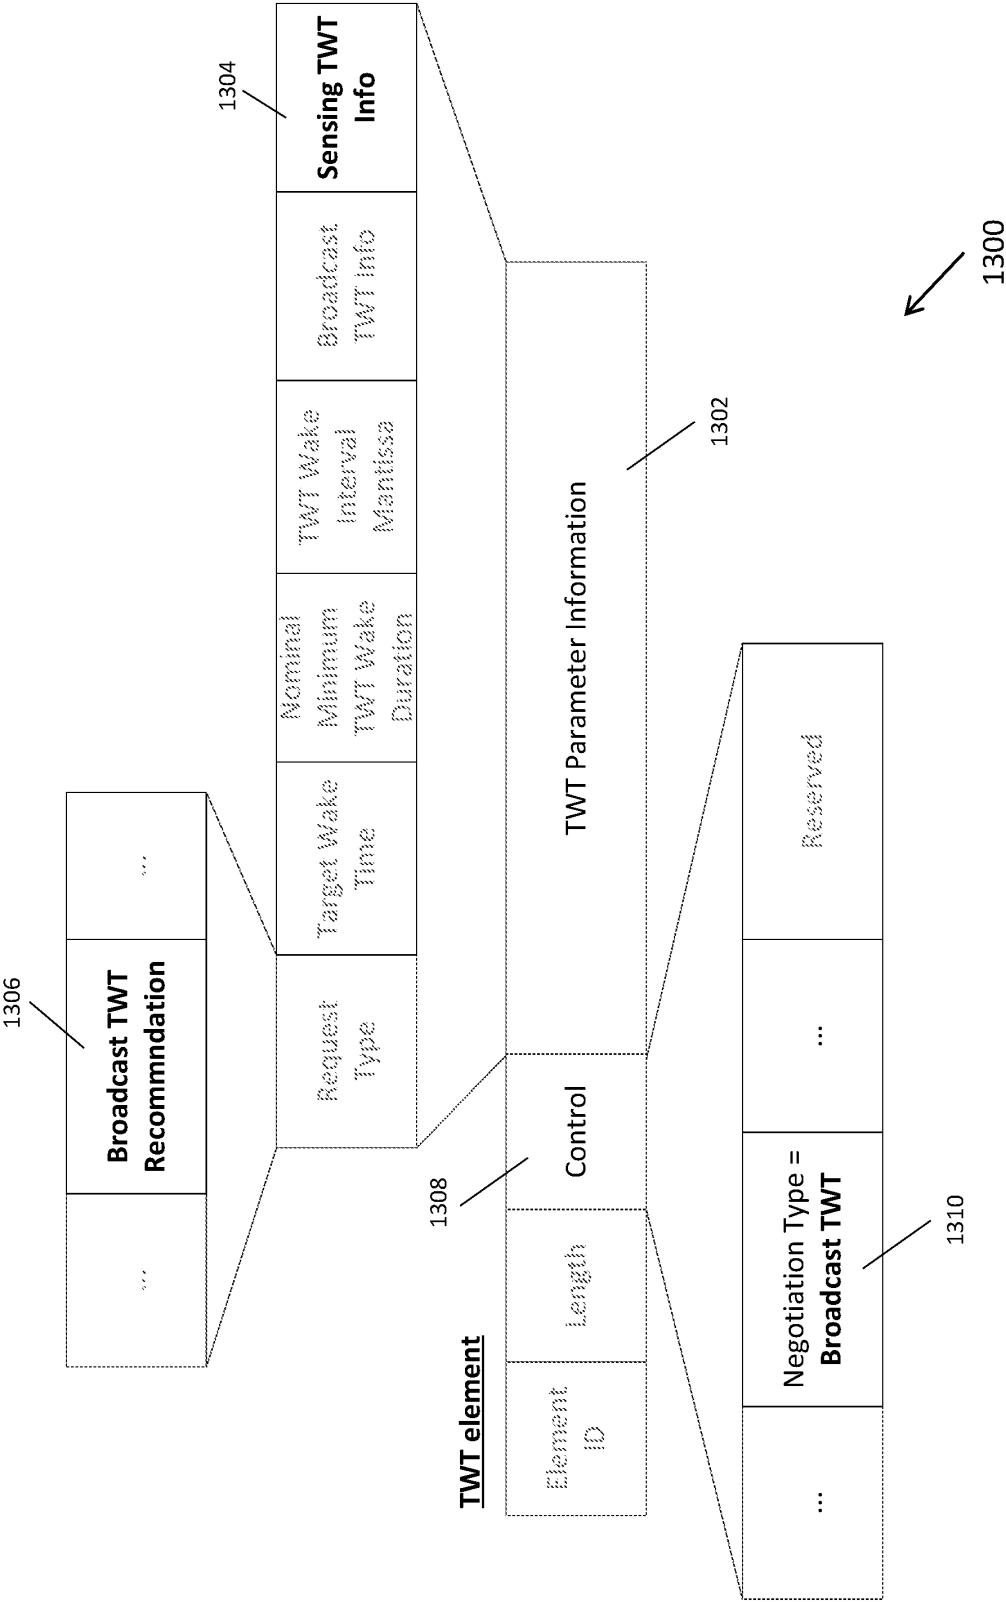


Figure 13

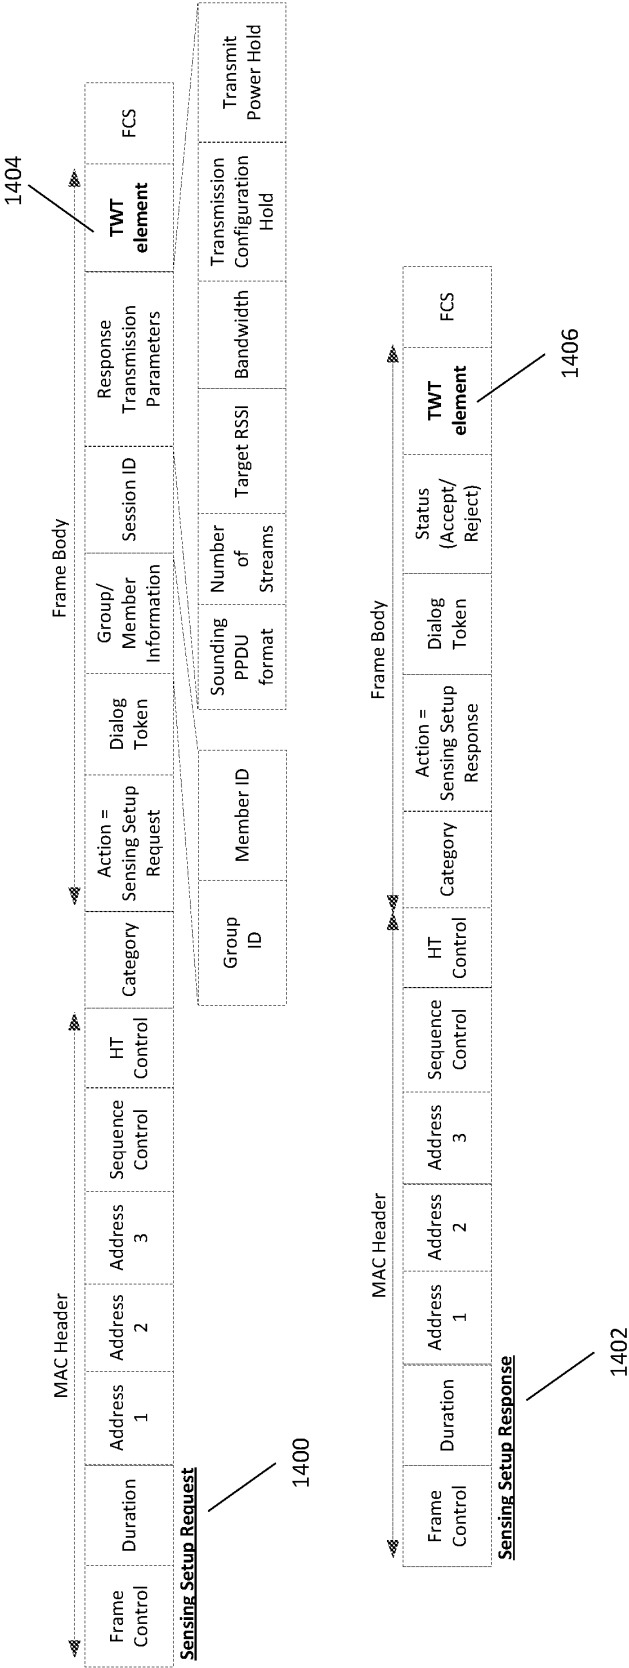


Figure 14

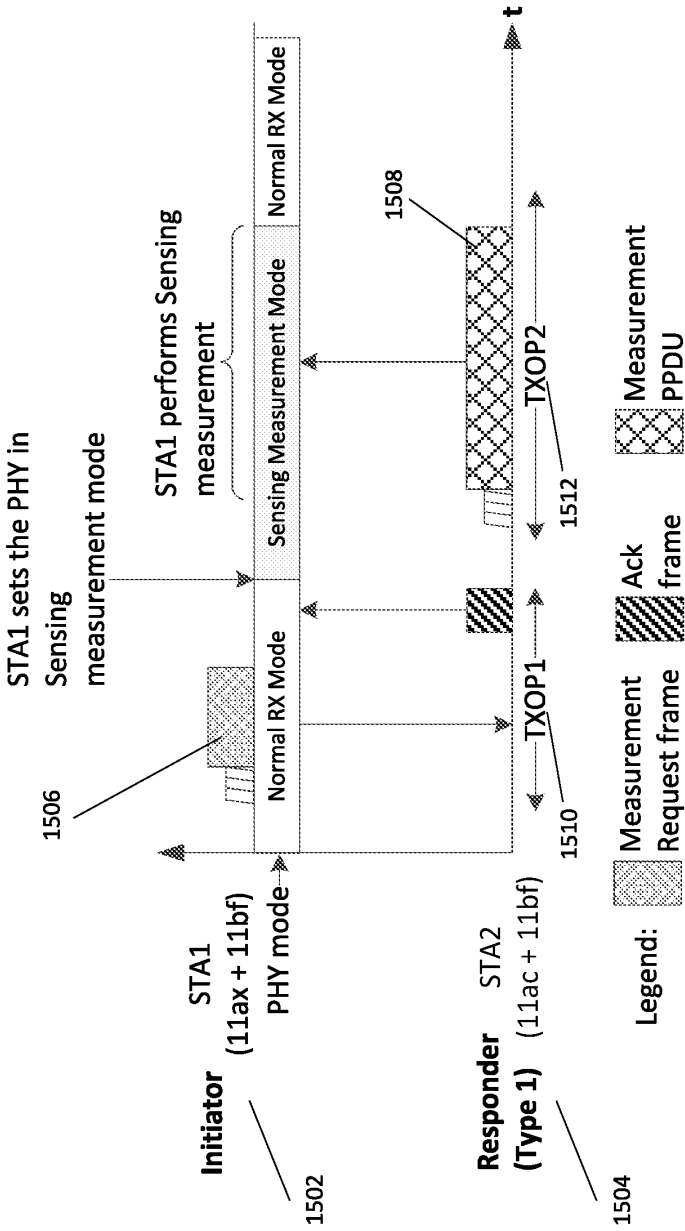


Figure 15

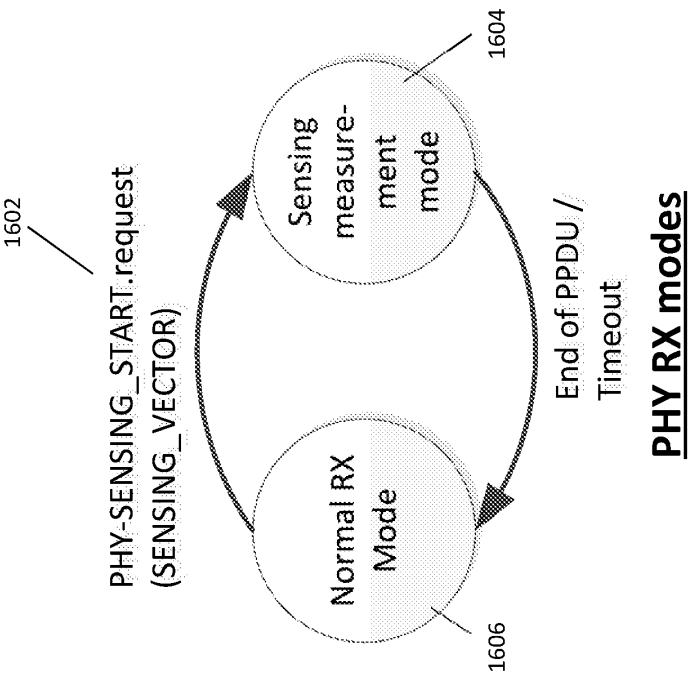


Figure 16

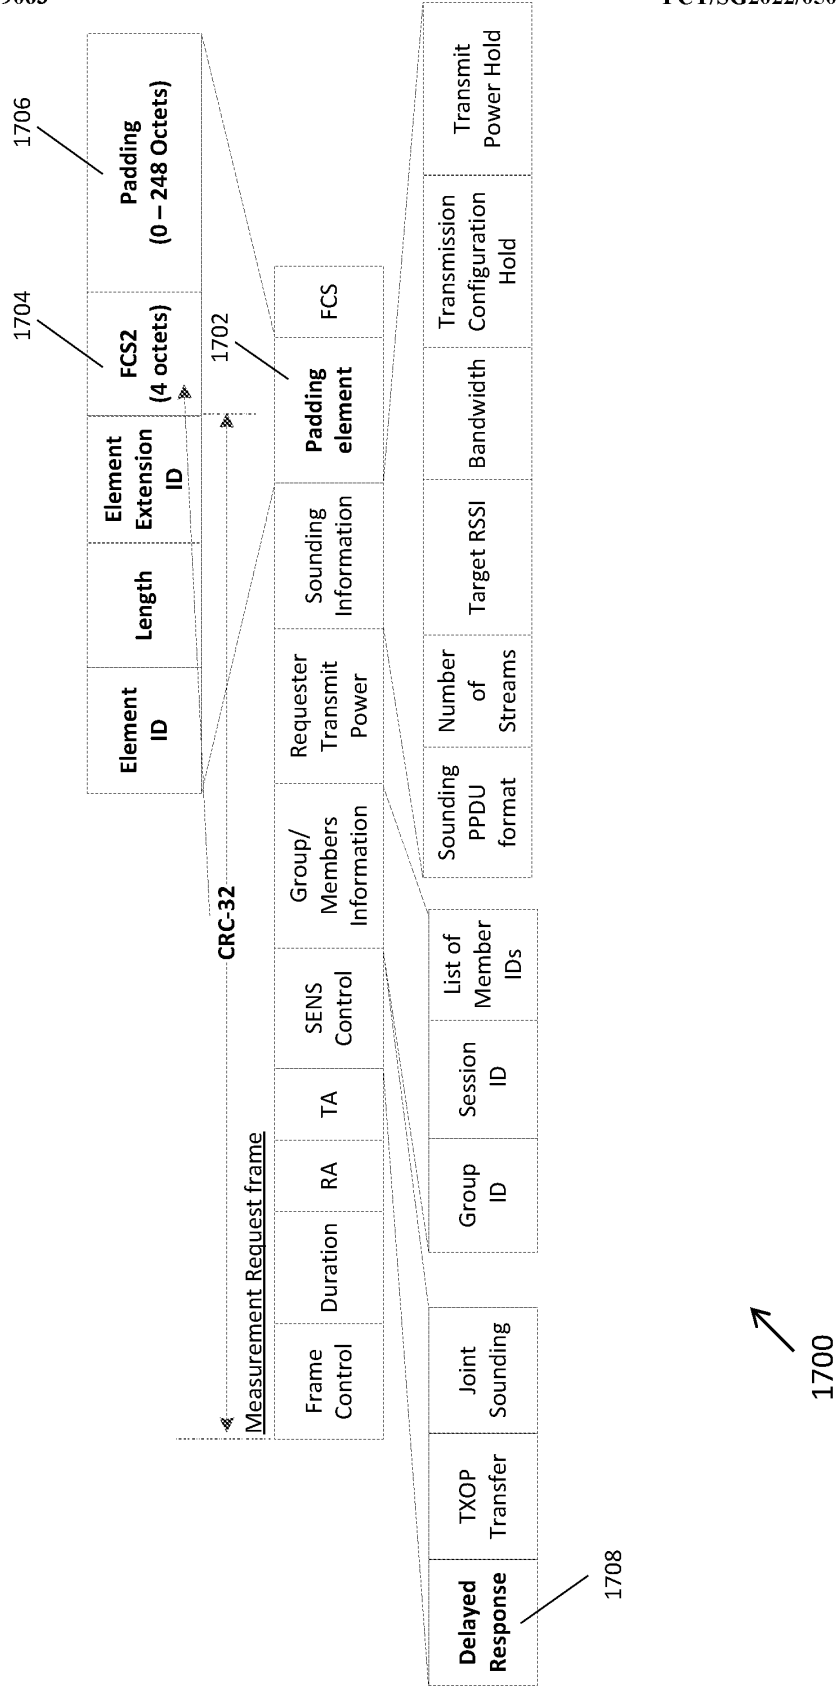


Figure 17

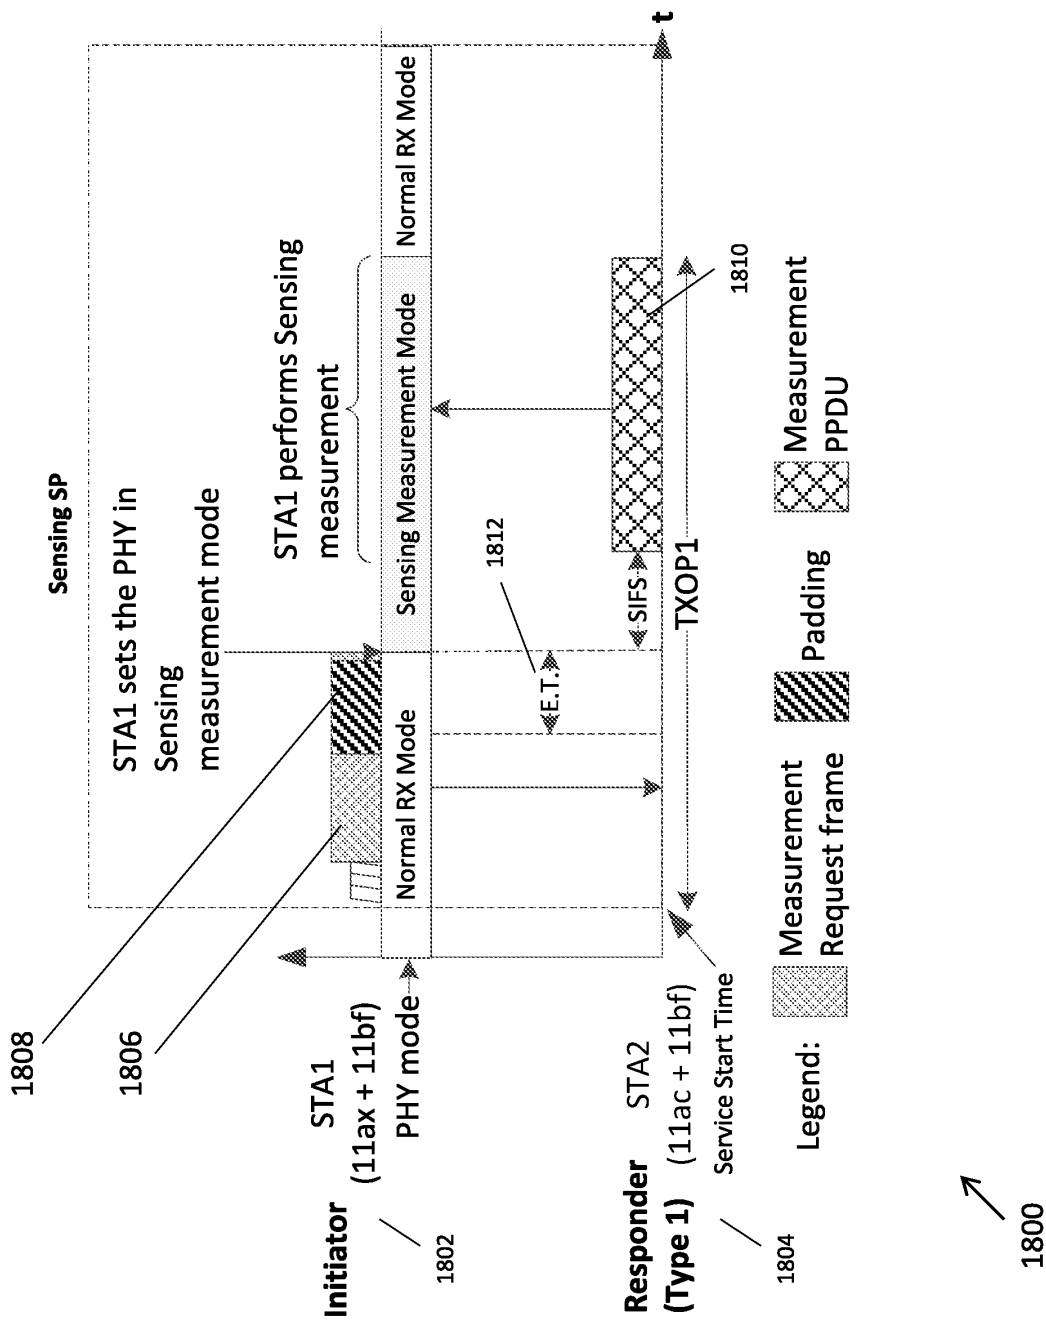


Figure 18

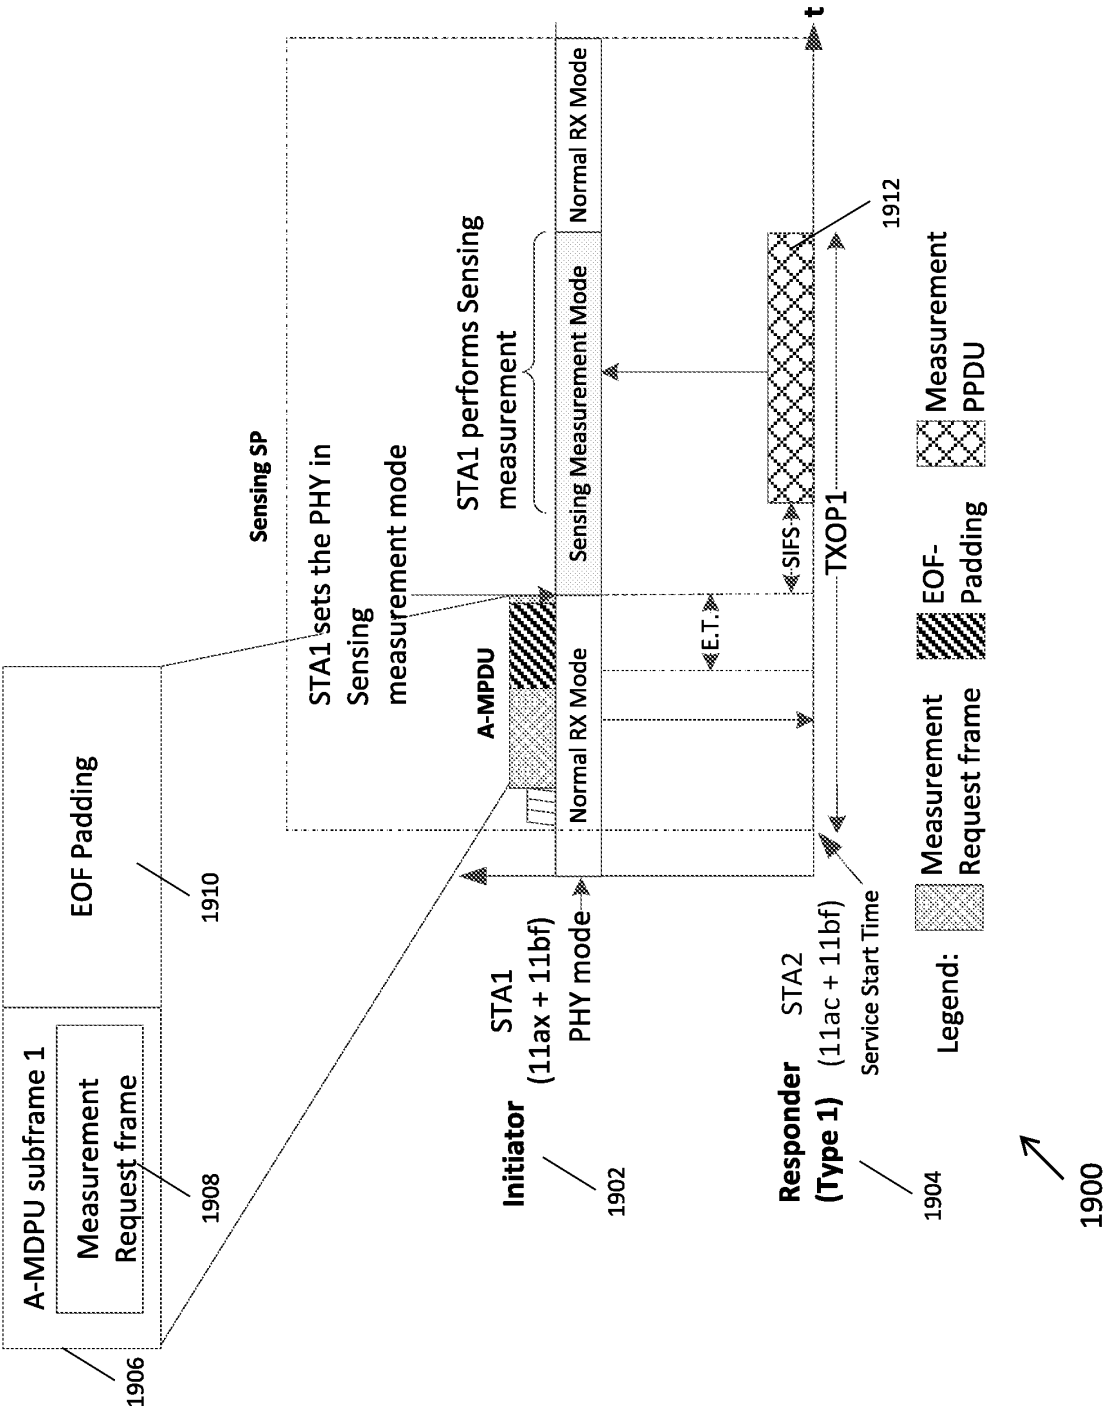


Figure 19



PHY receive procedure in the sensing measurement mode for a VHT NDP

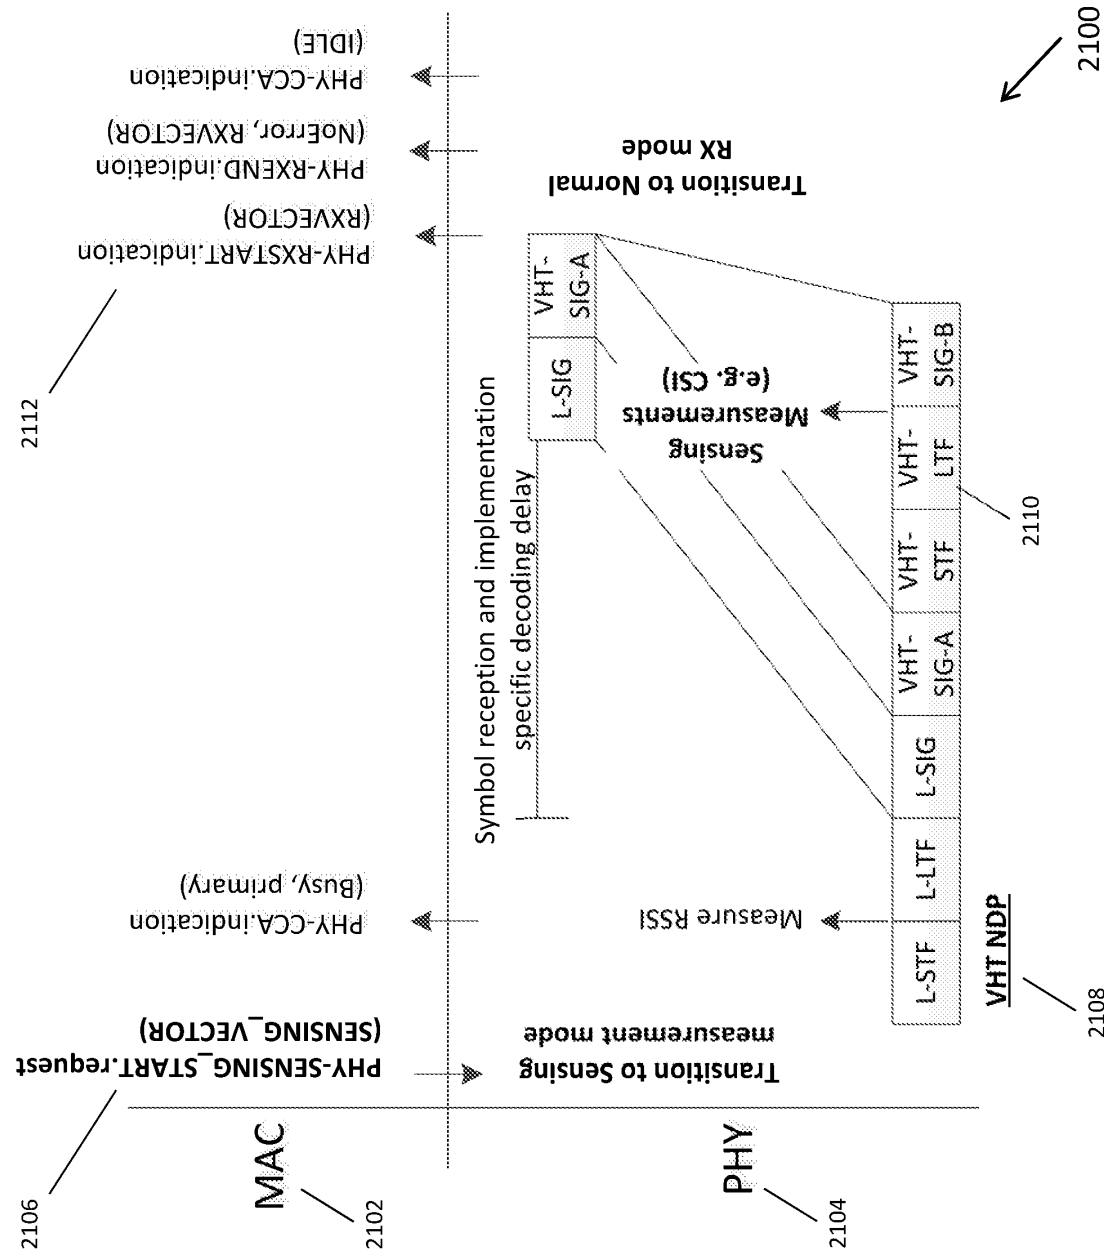


Figure 21

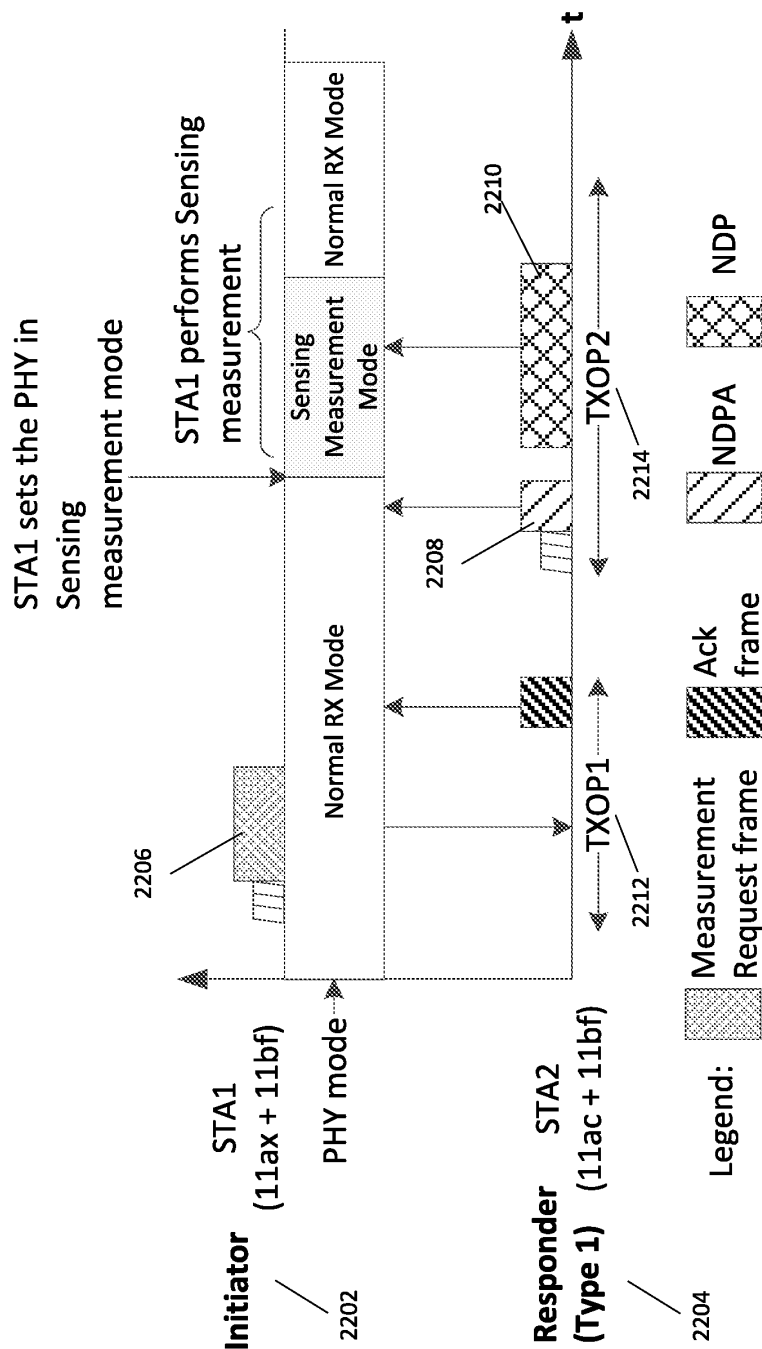


Figure 22

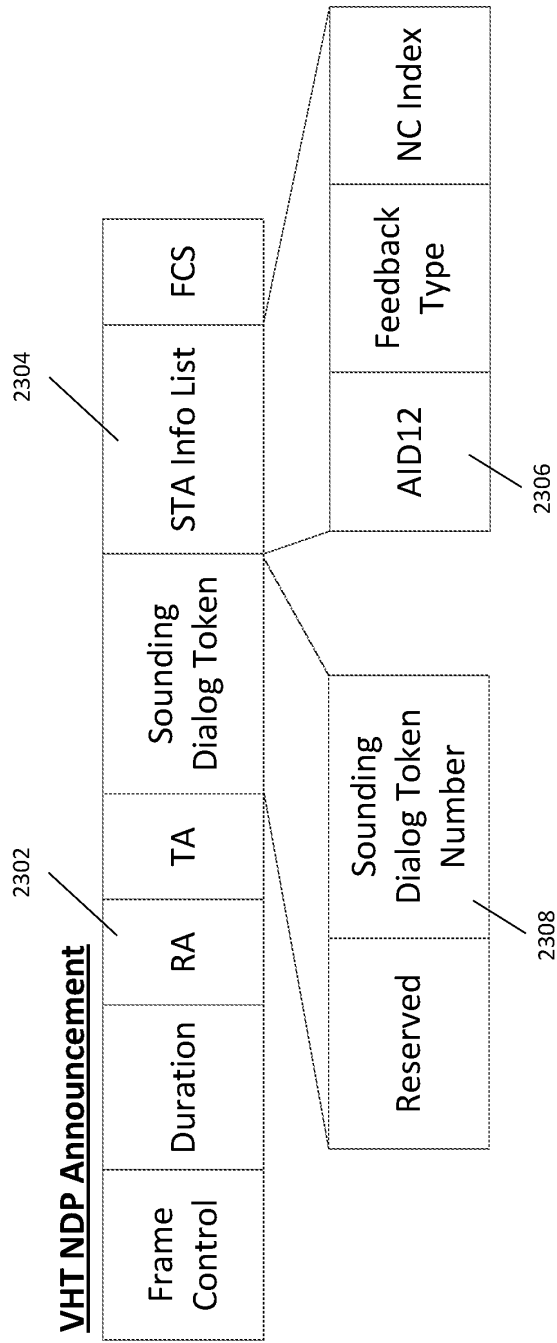


Figure 23

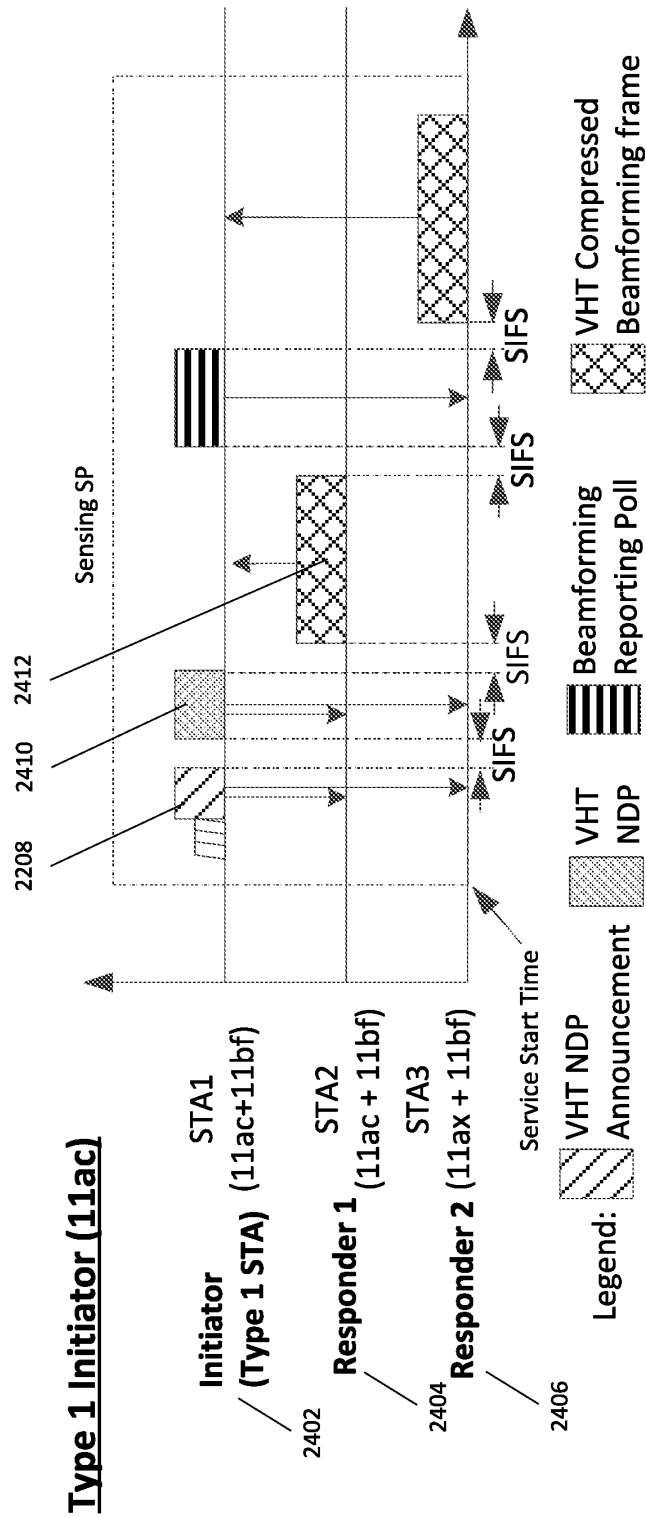


Figure 24

2400

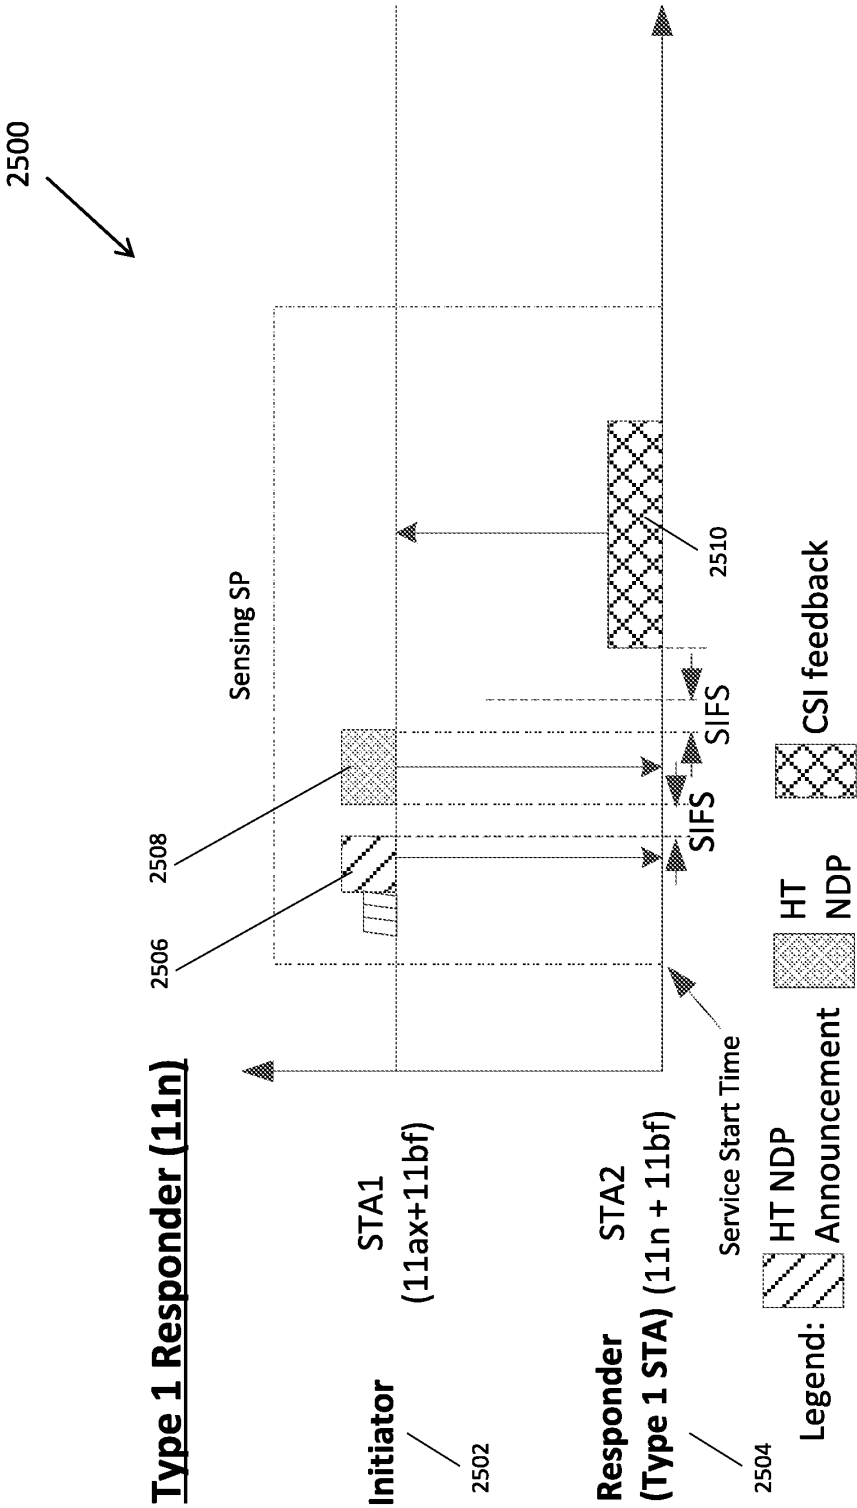


Figure 25

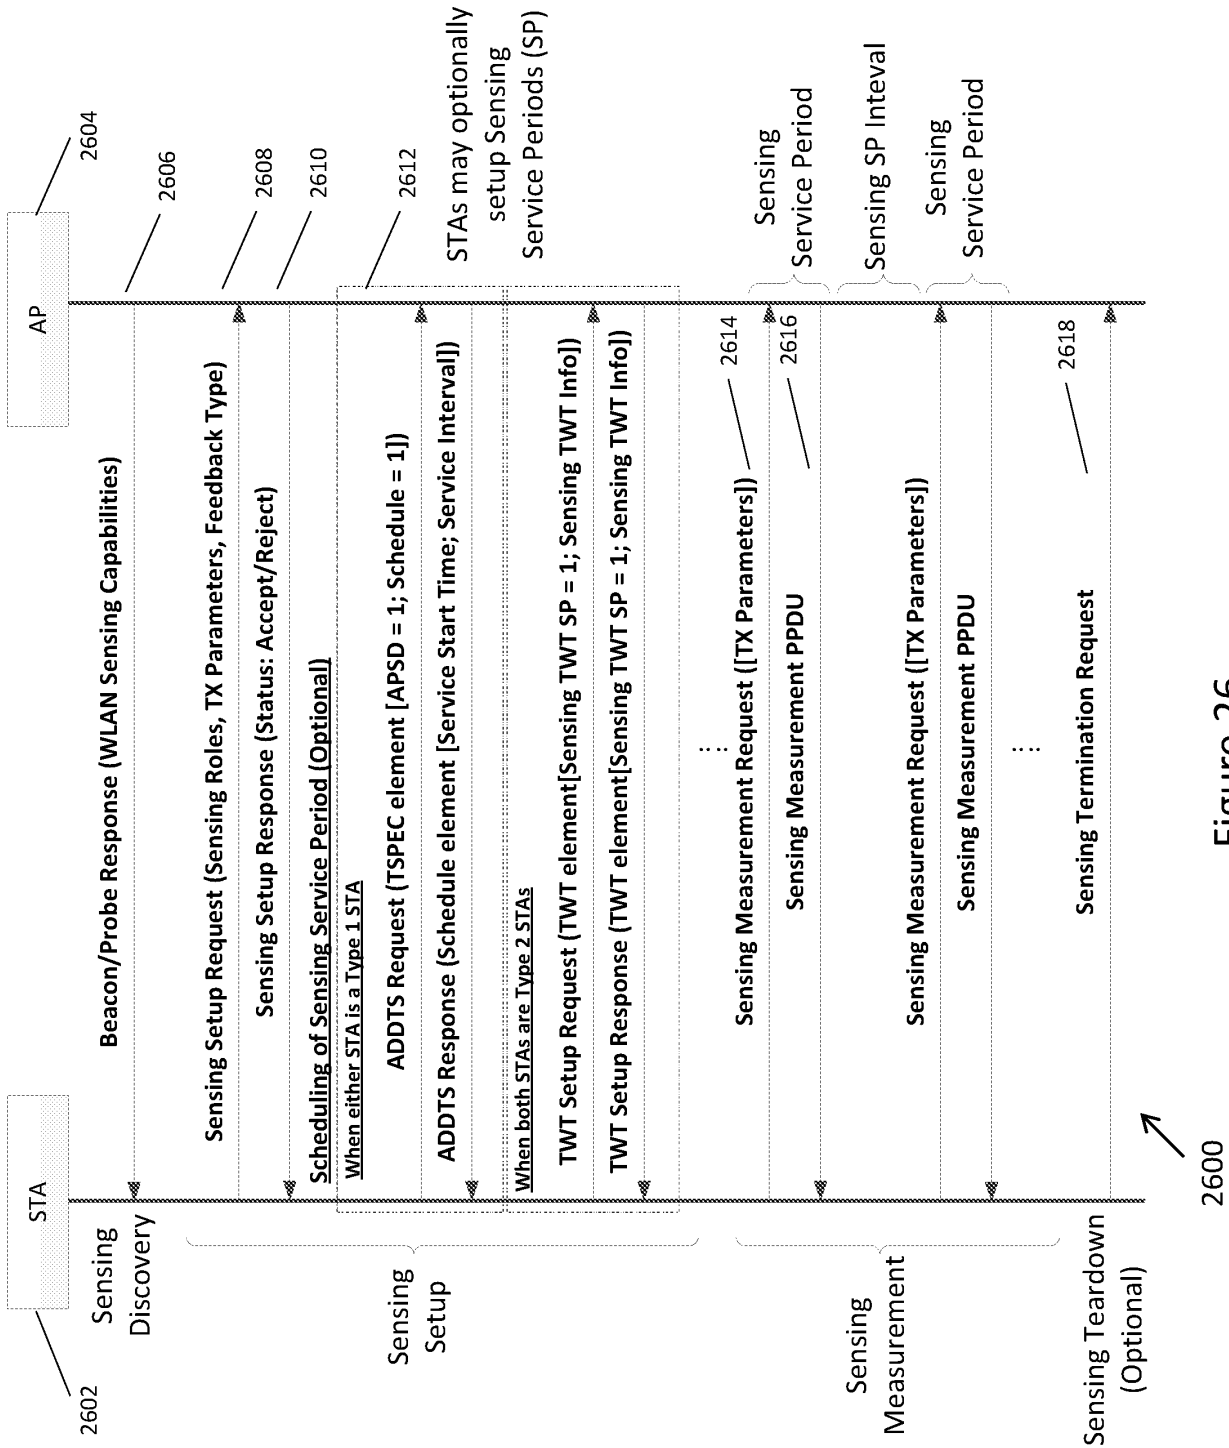


Figure 26

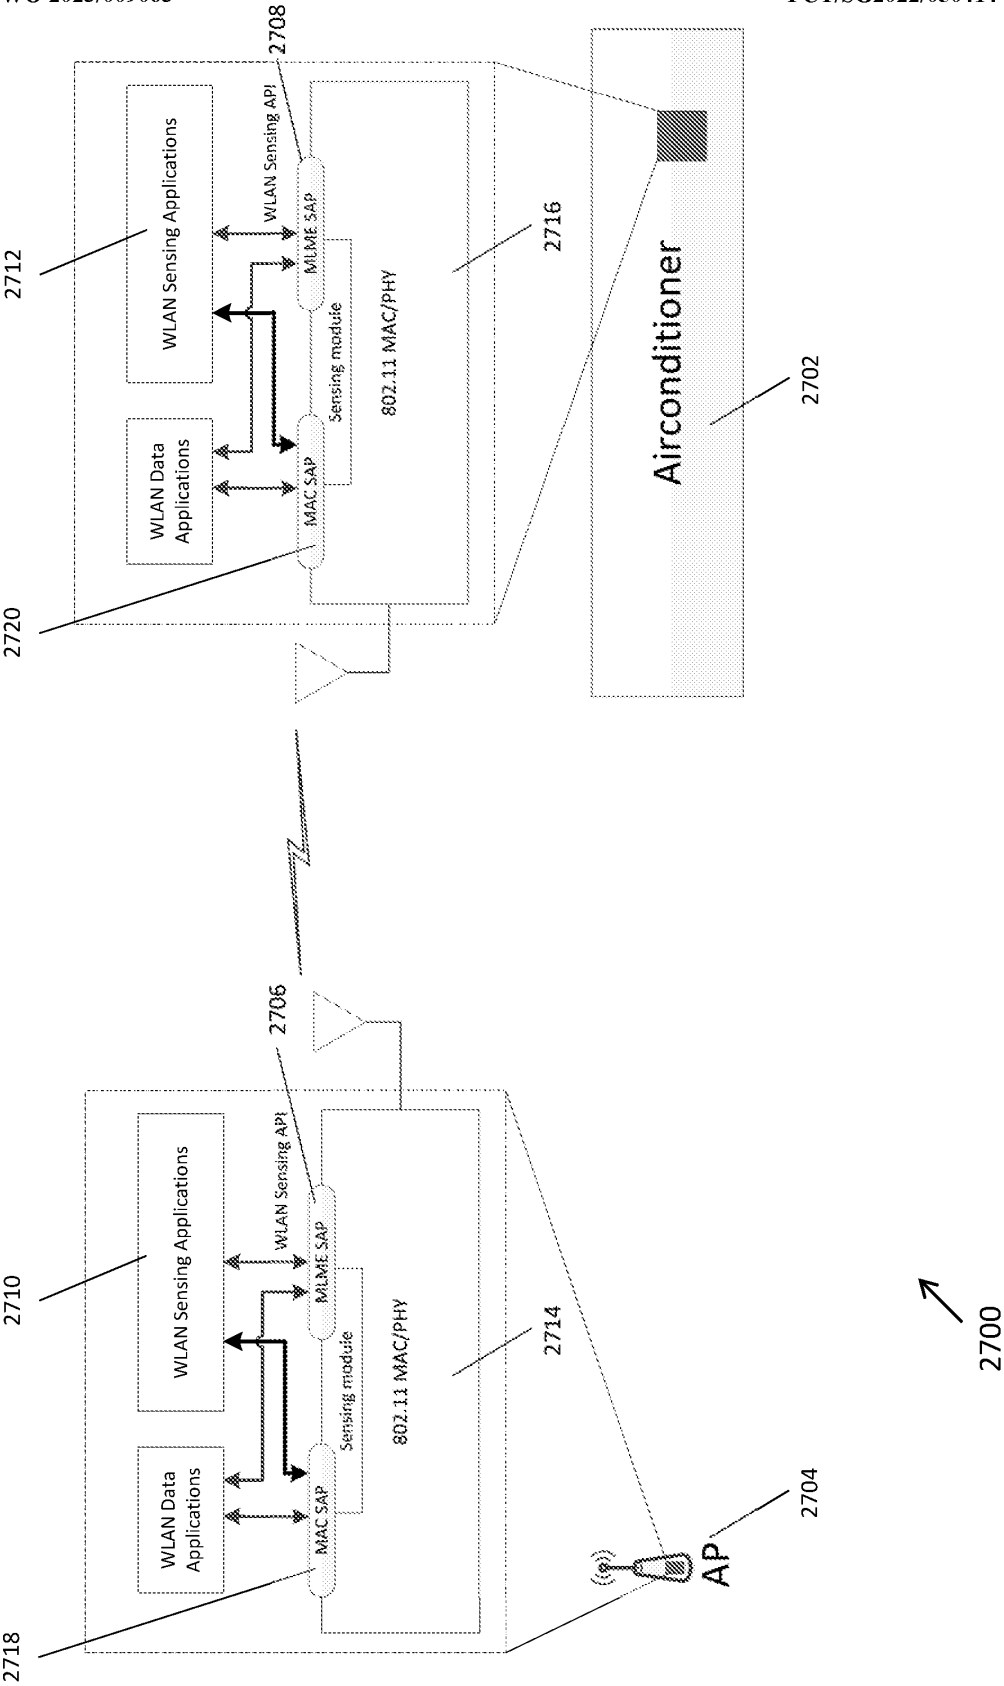


Figure 27

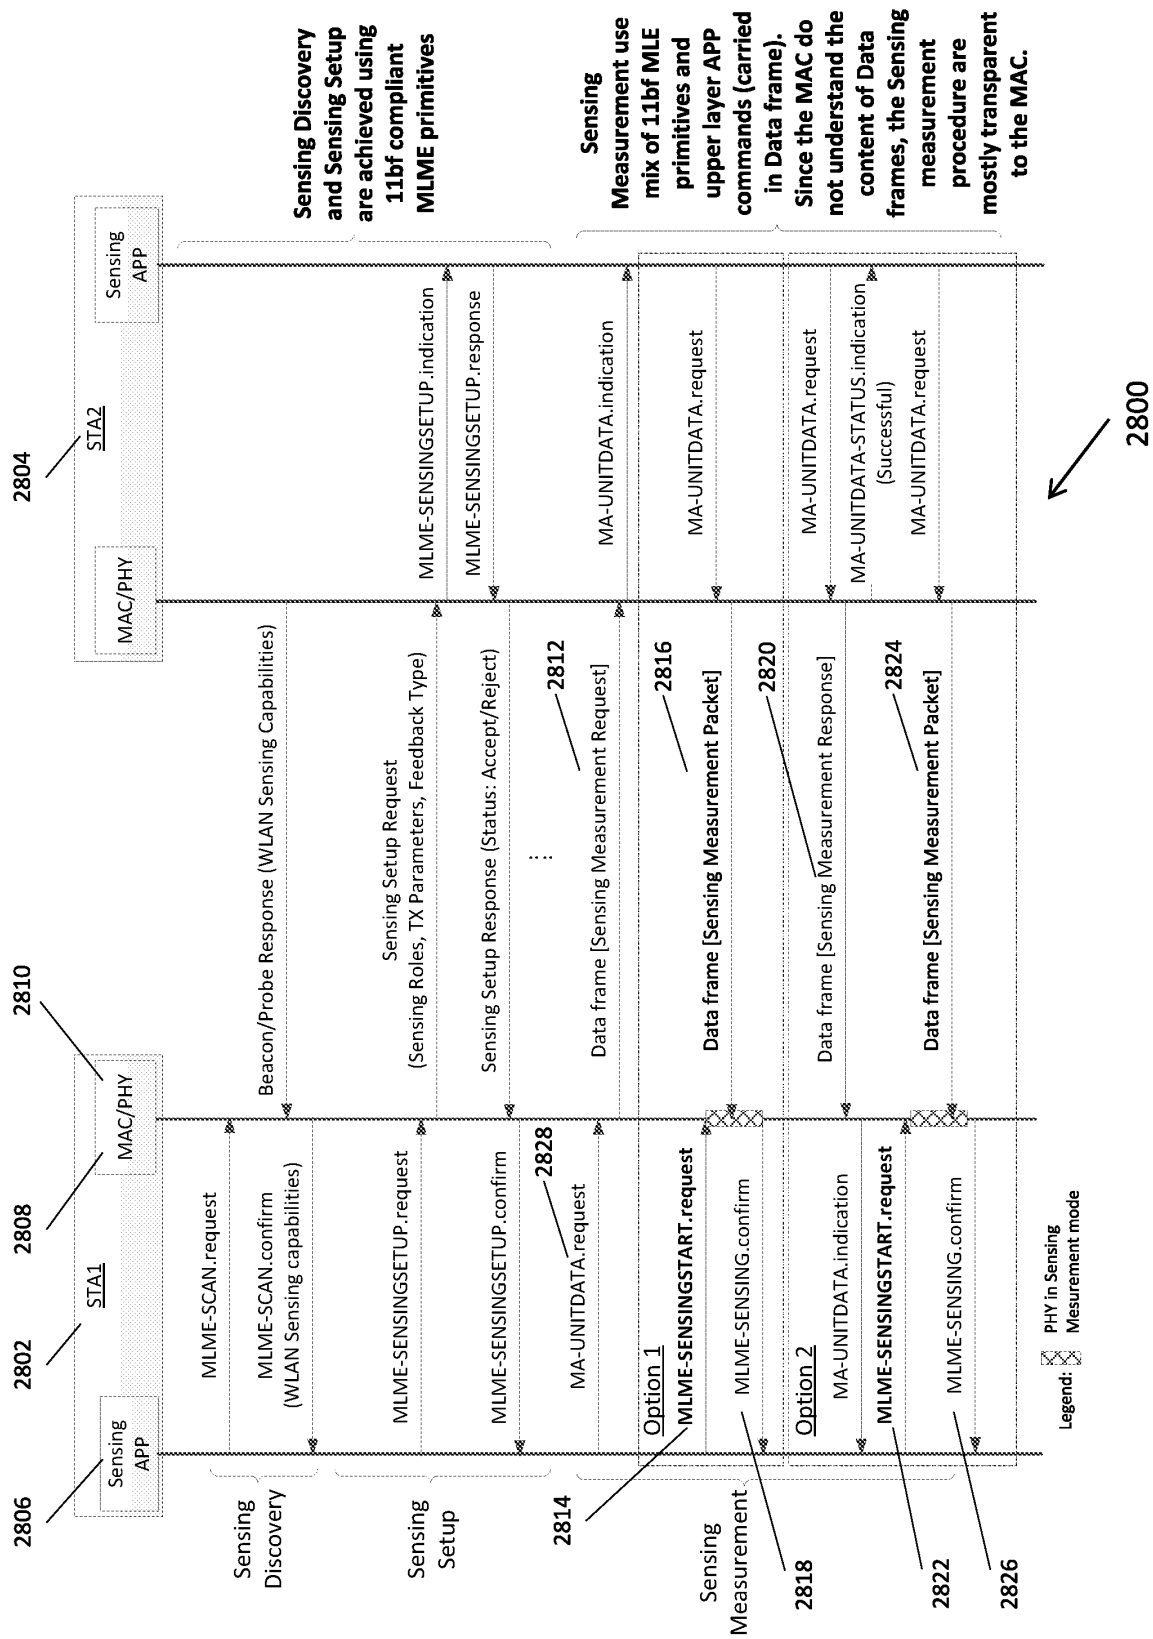


Figure 28

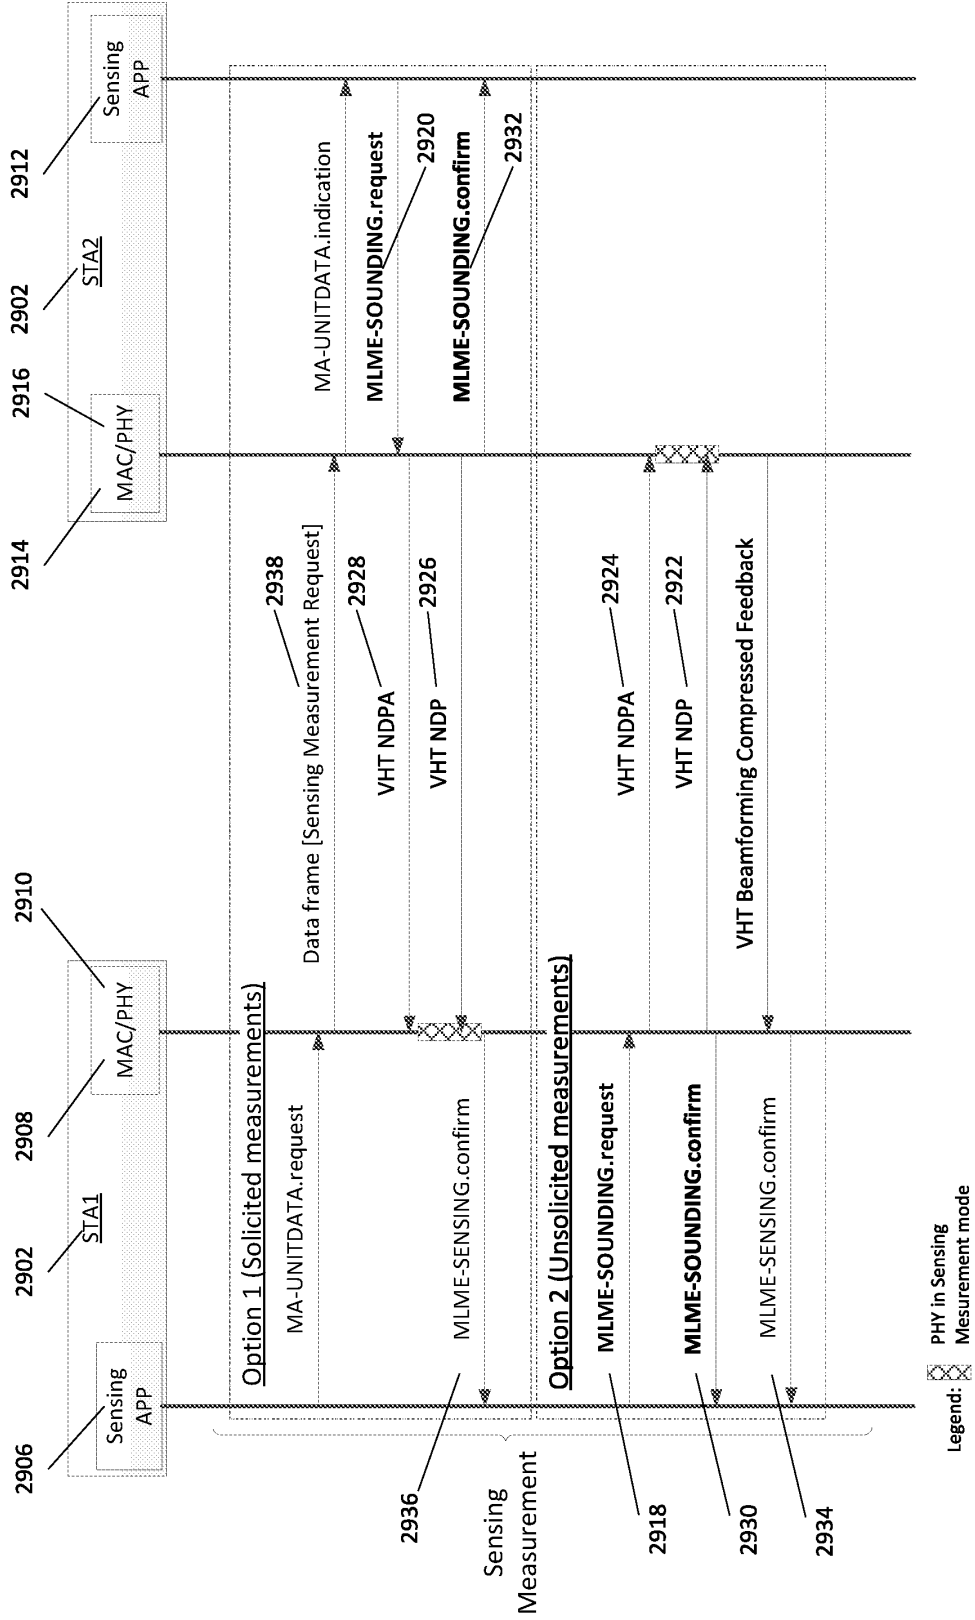


Figure 29

2900

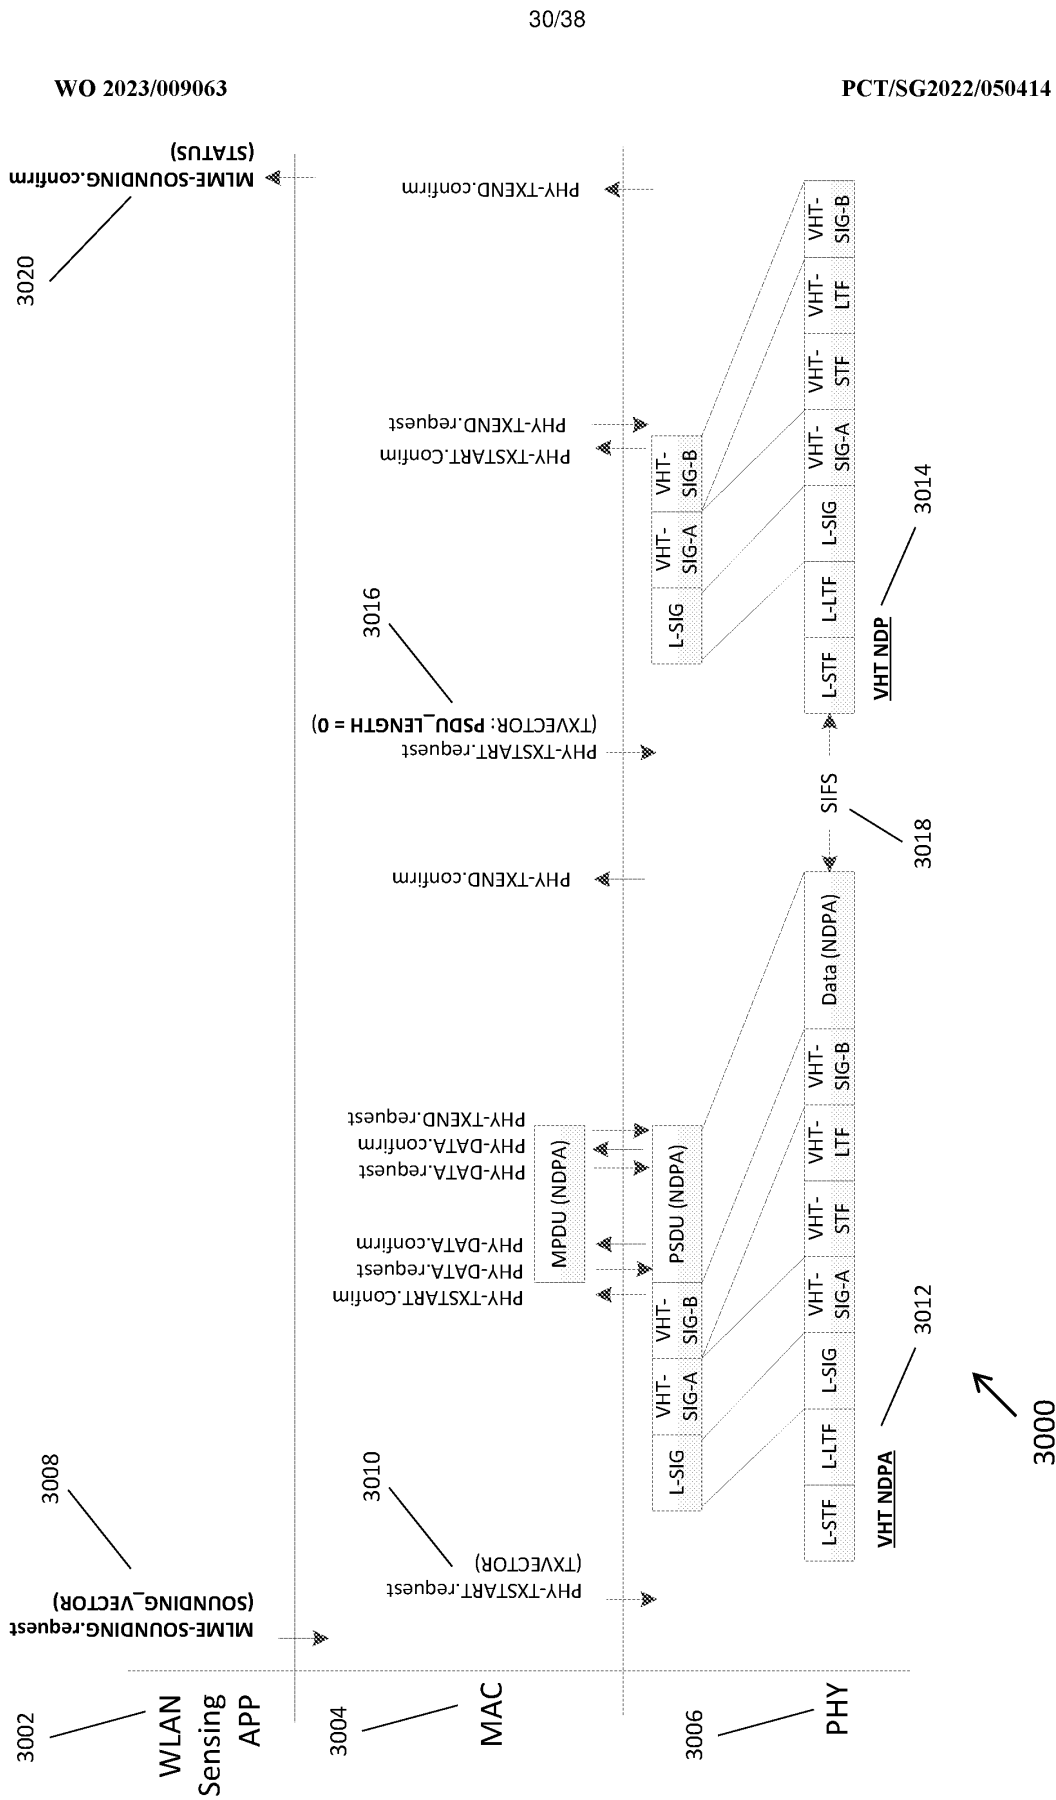


Figure 30

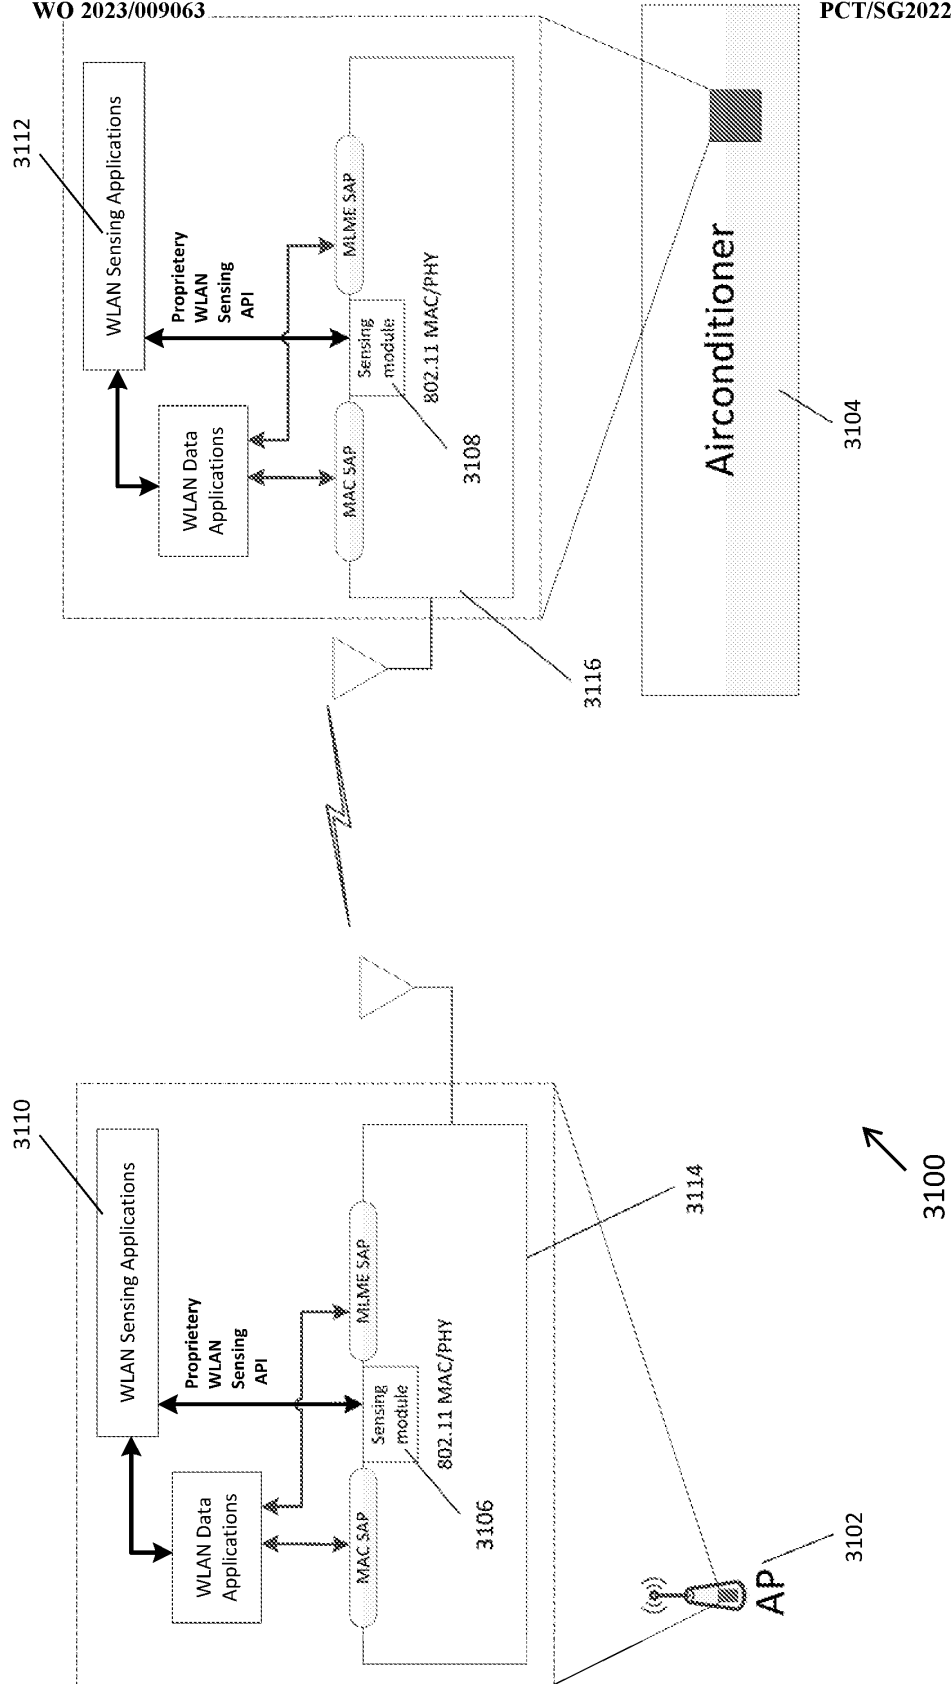


Figure 31

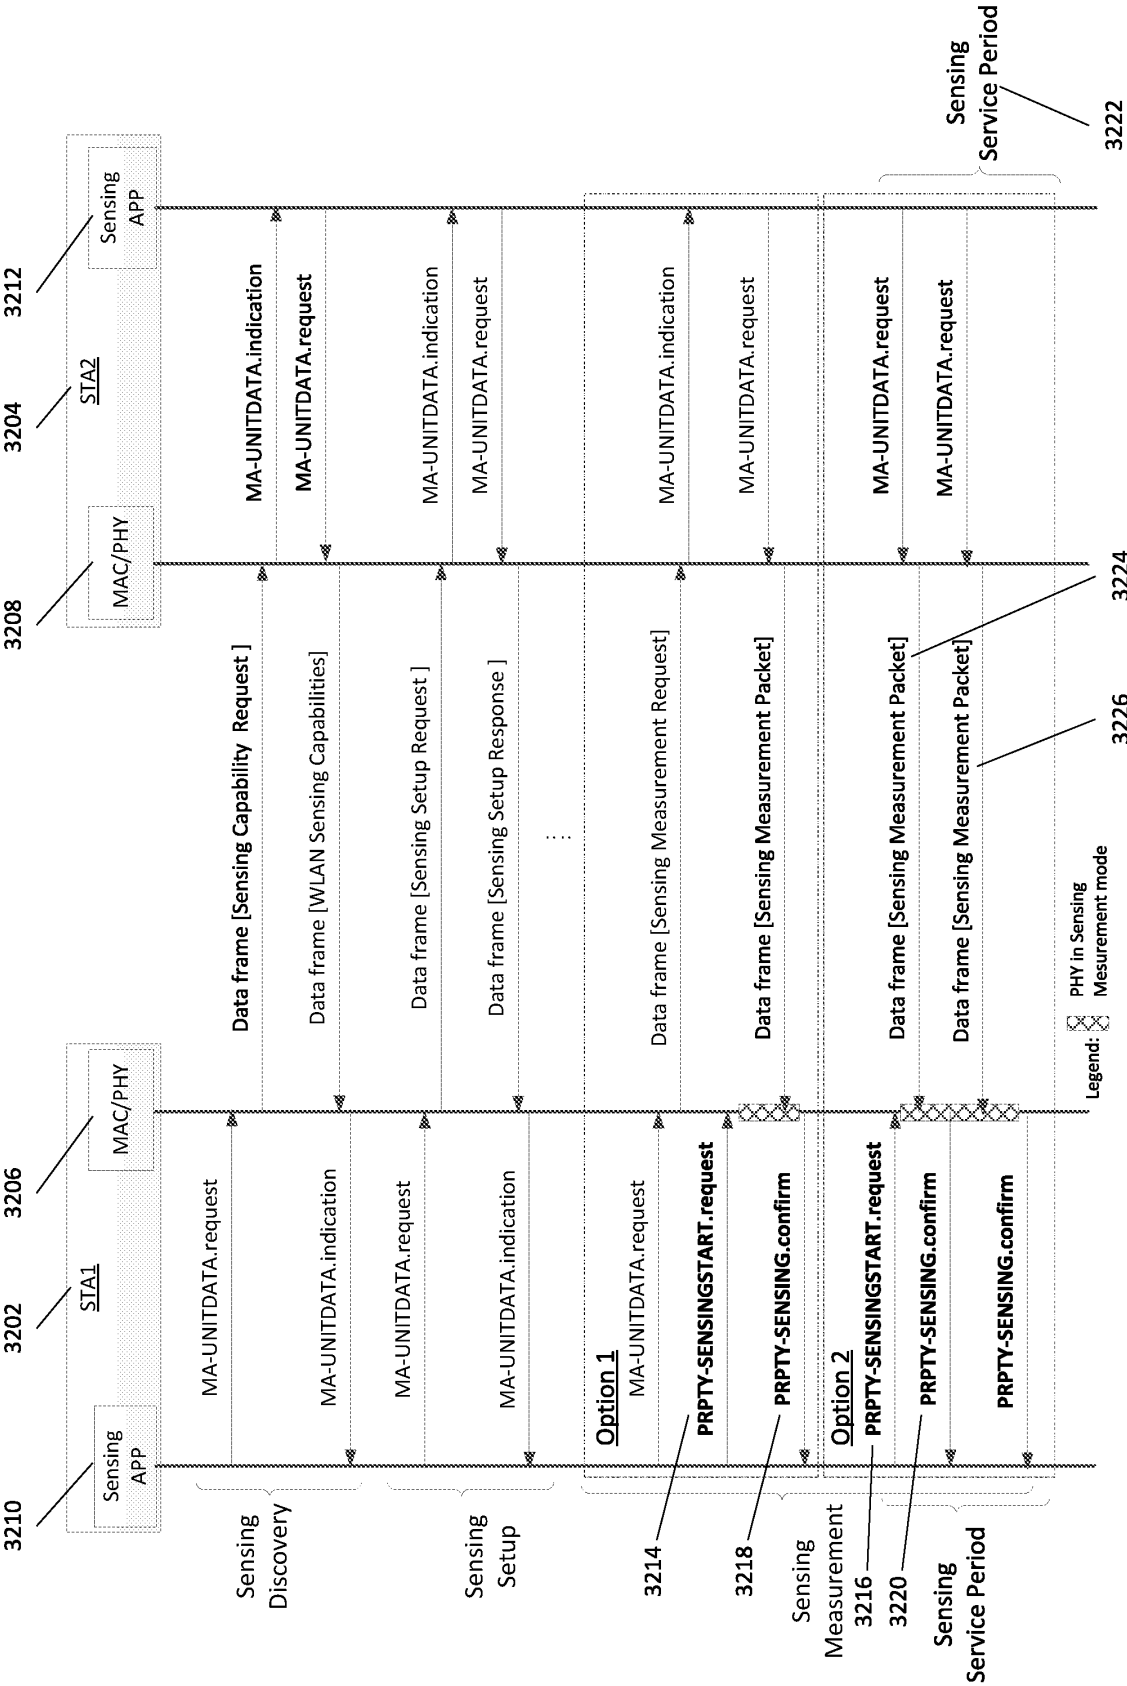


Figure 32

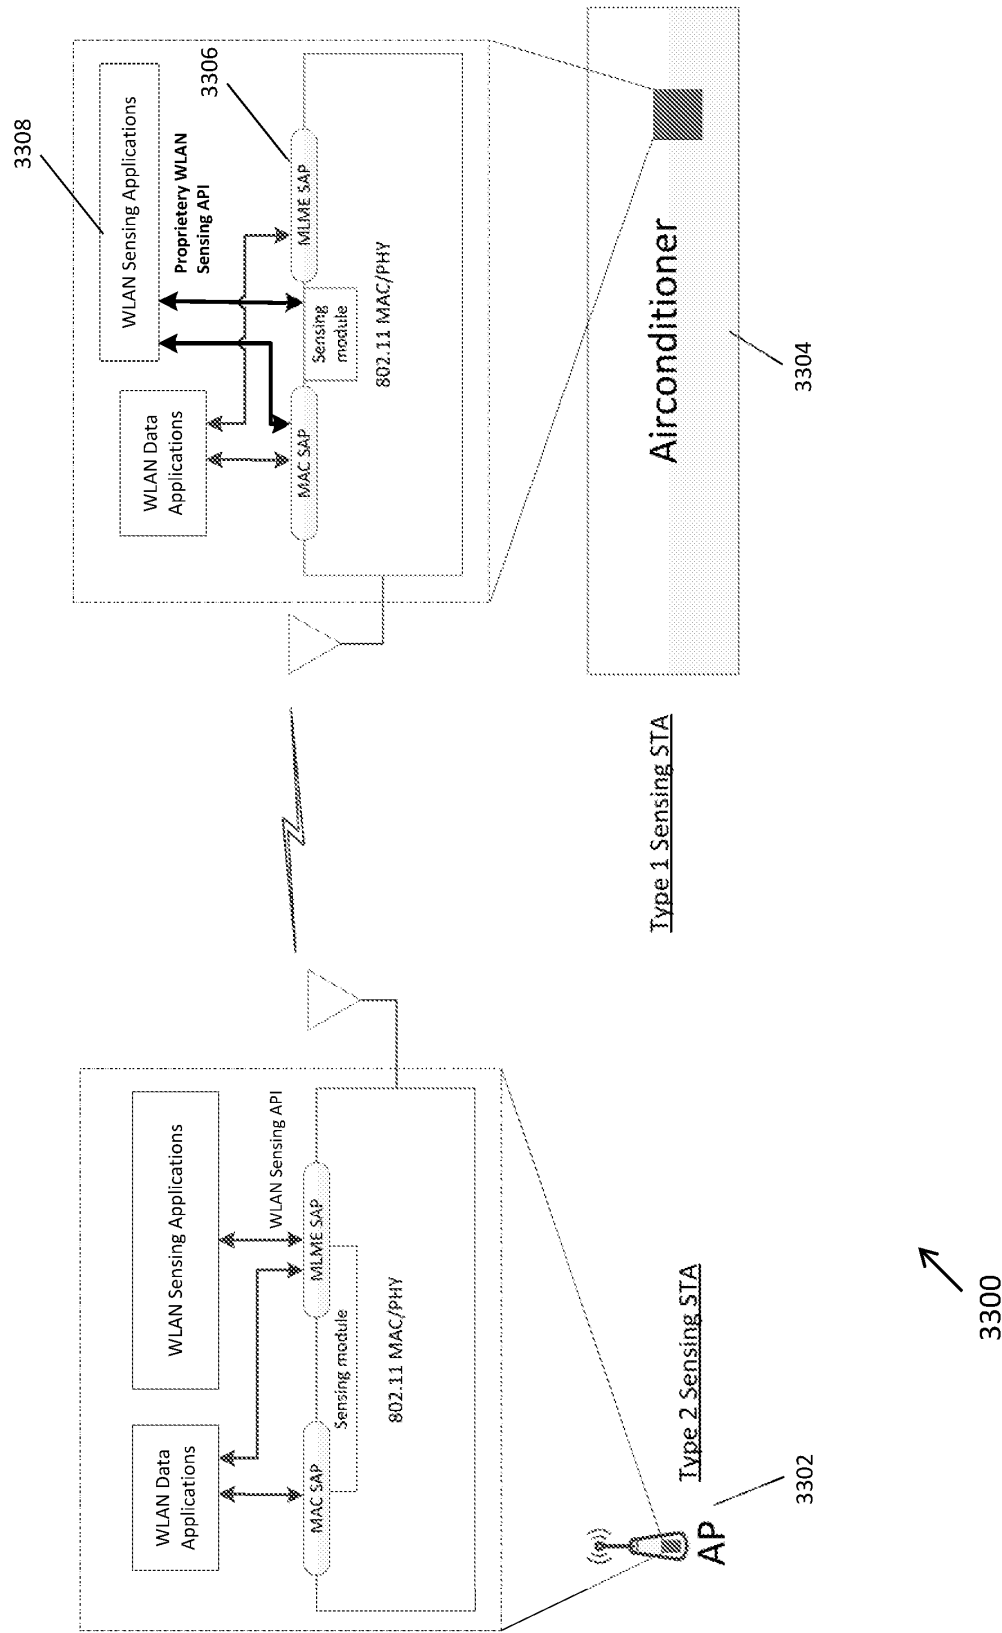


Figure 33




Figure 34

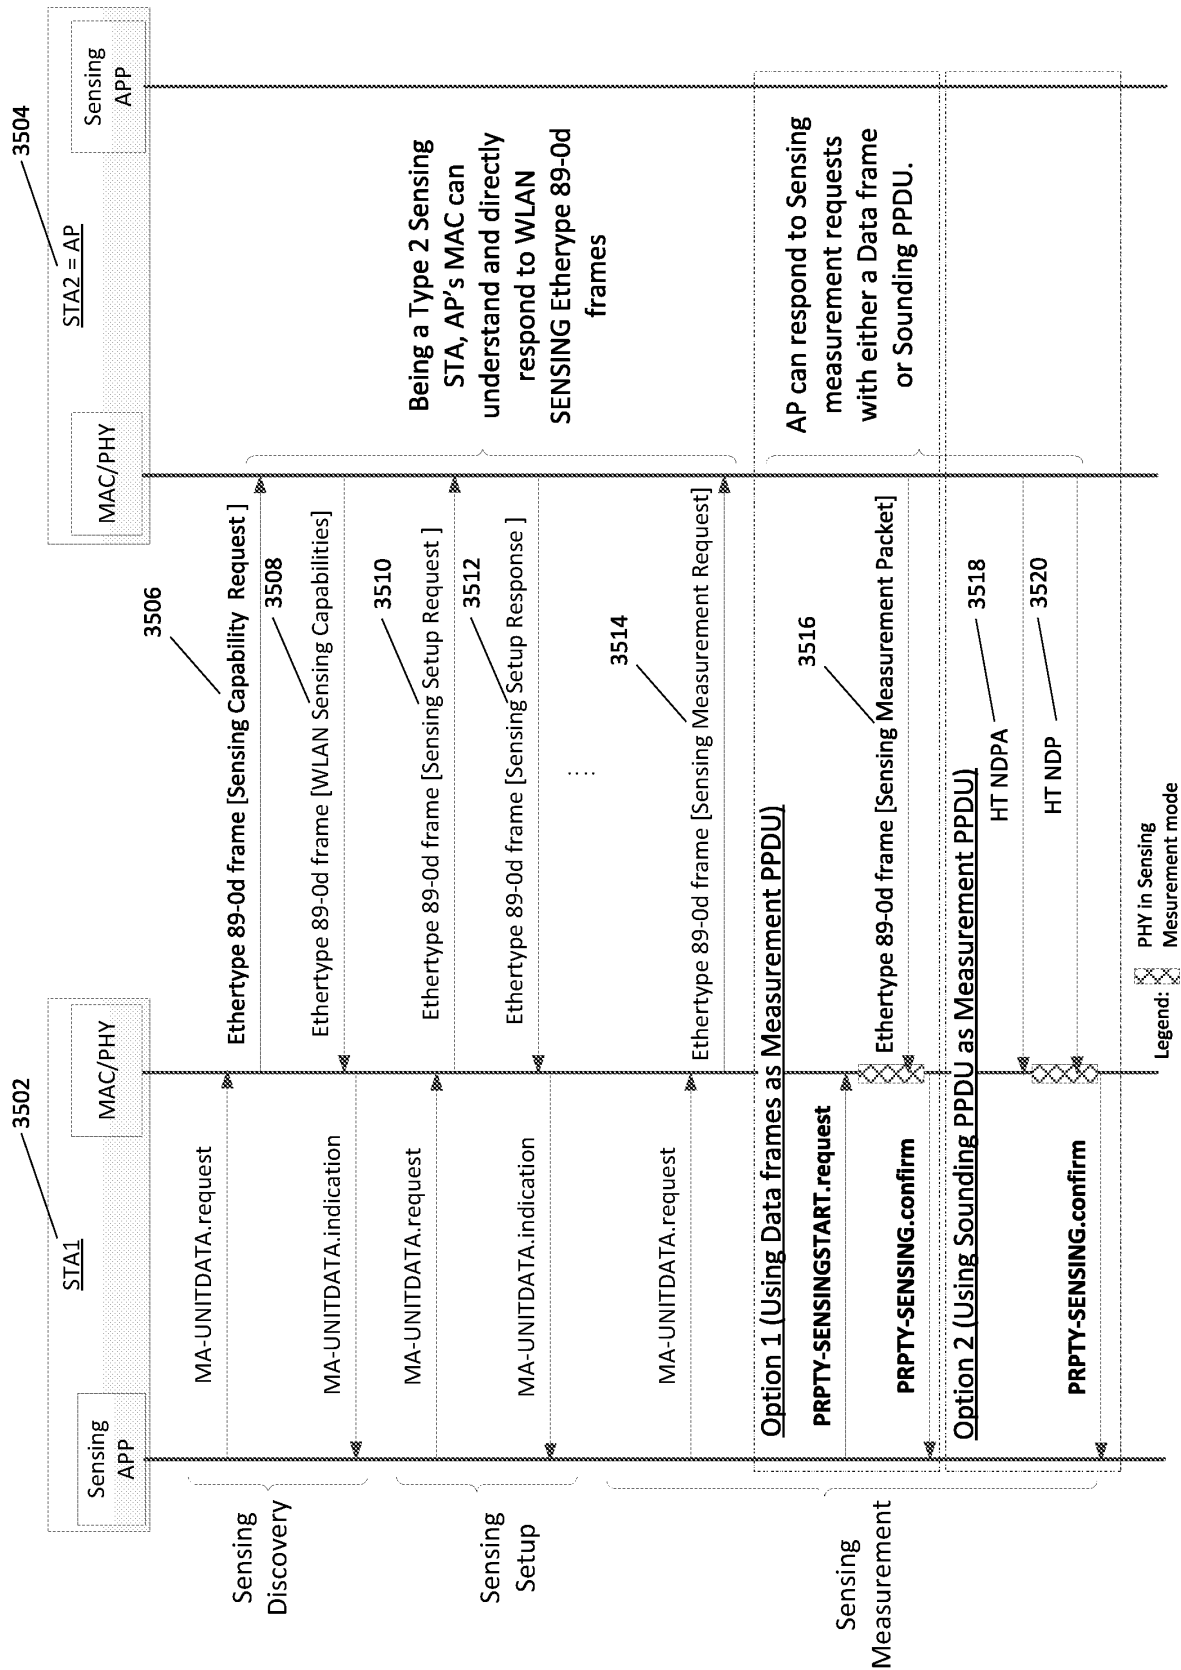
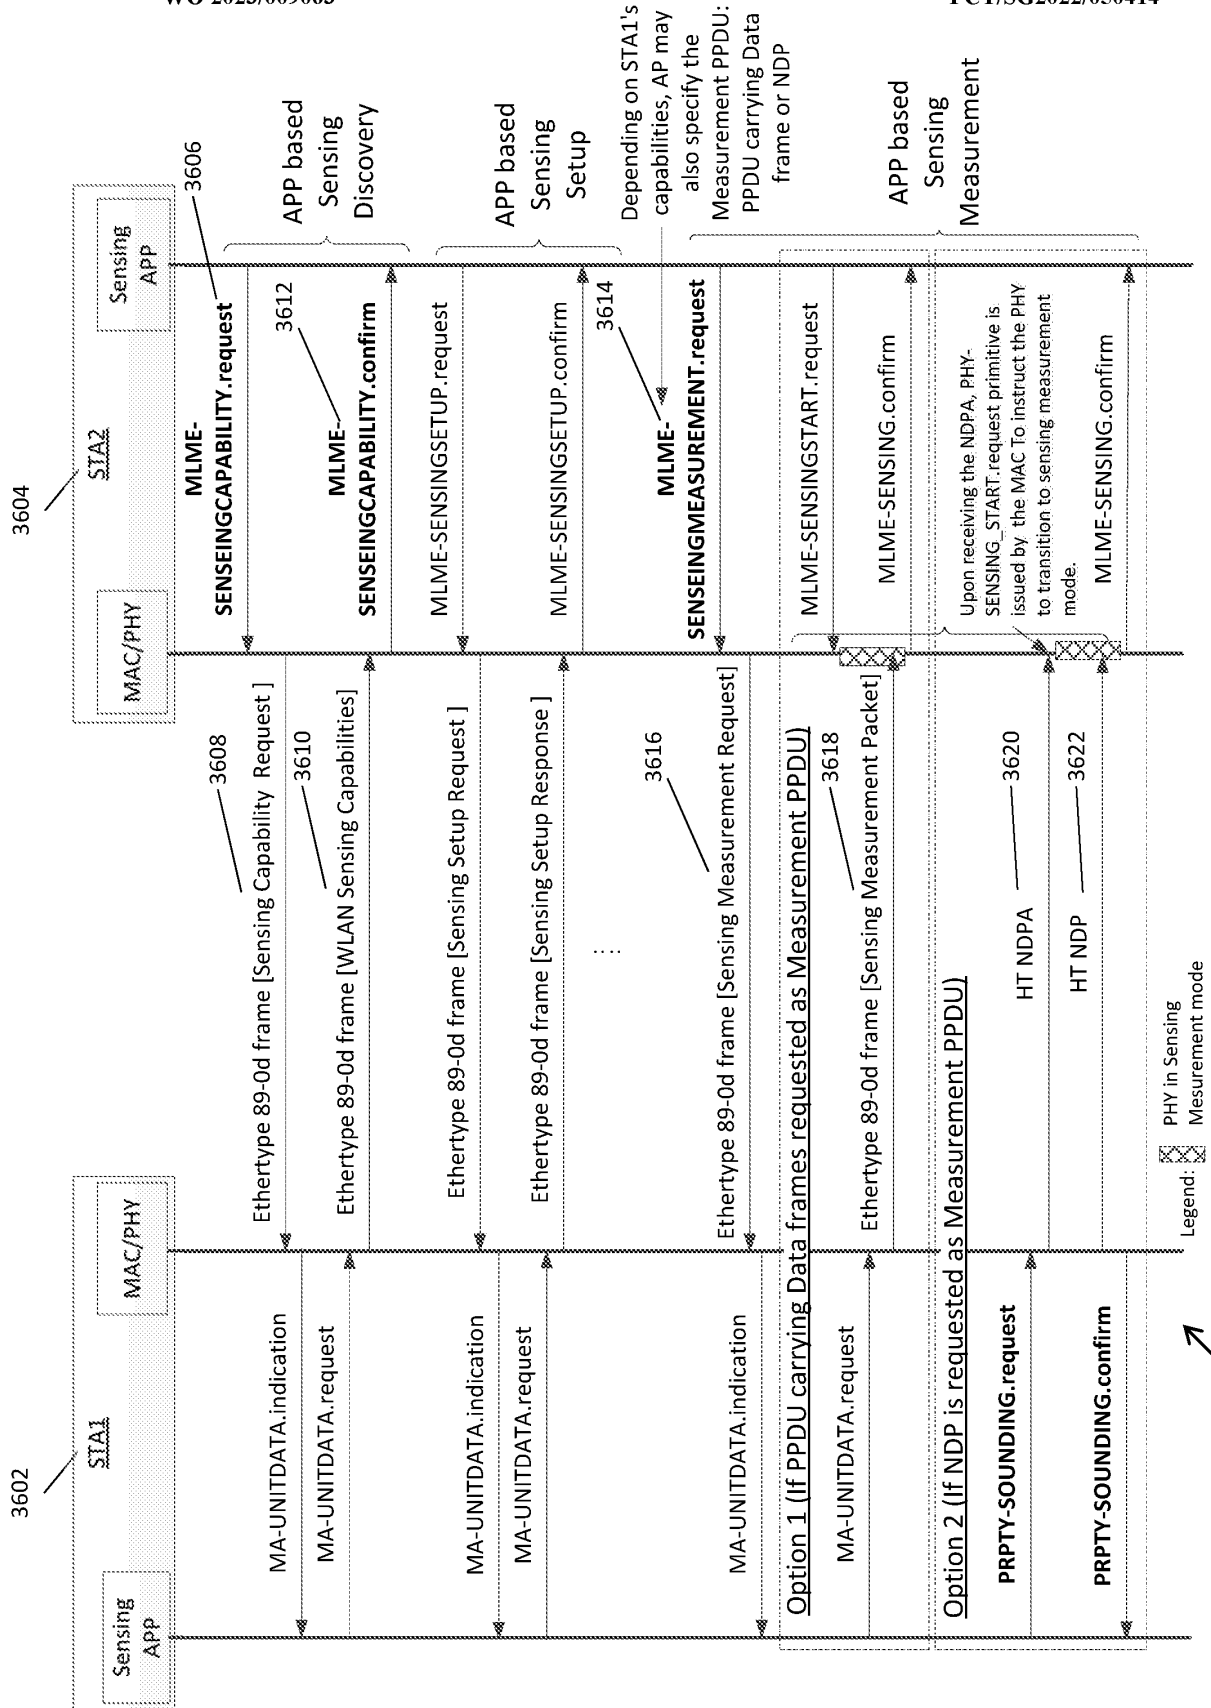


Figure 35



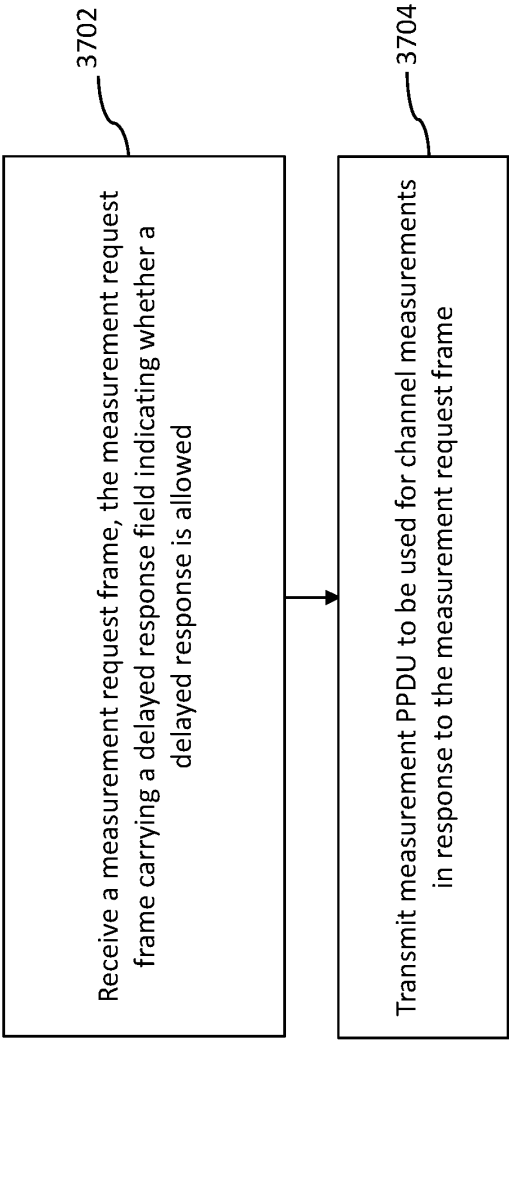


Figure 37

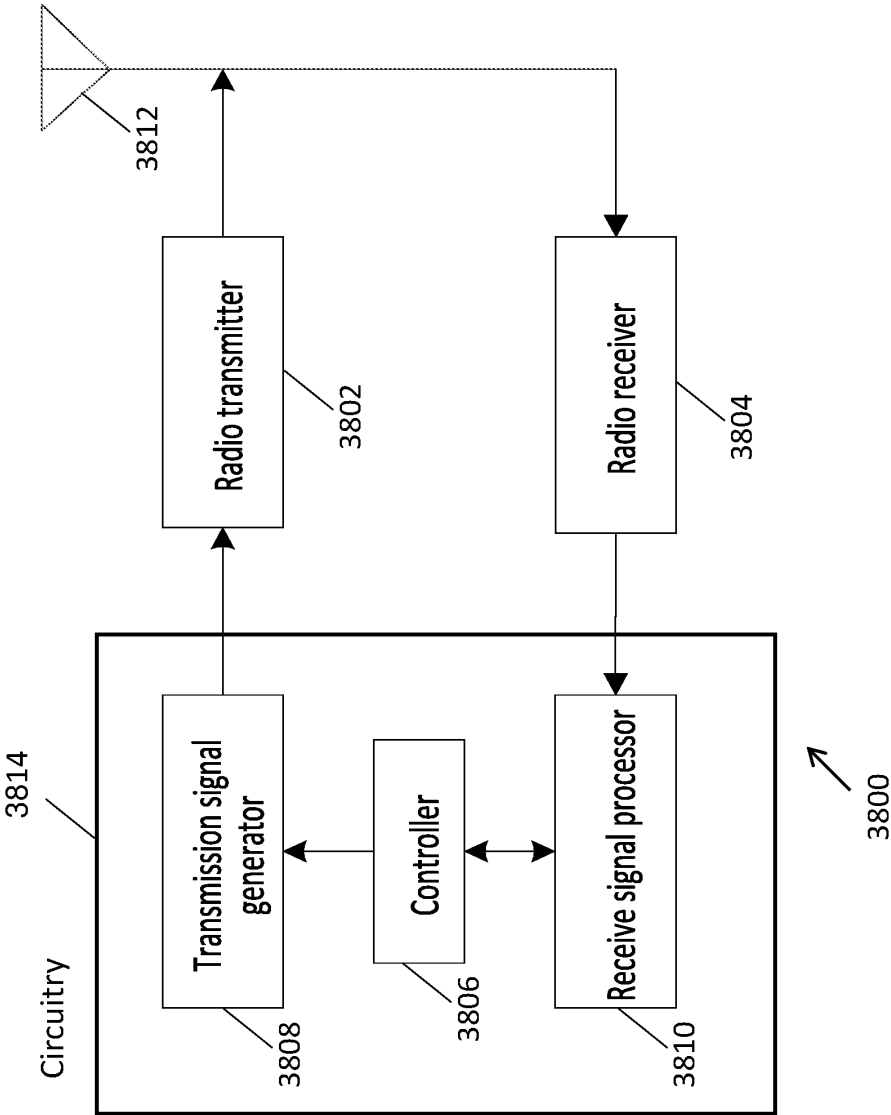


Figure 38