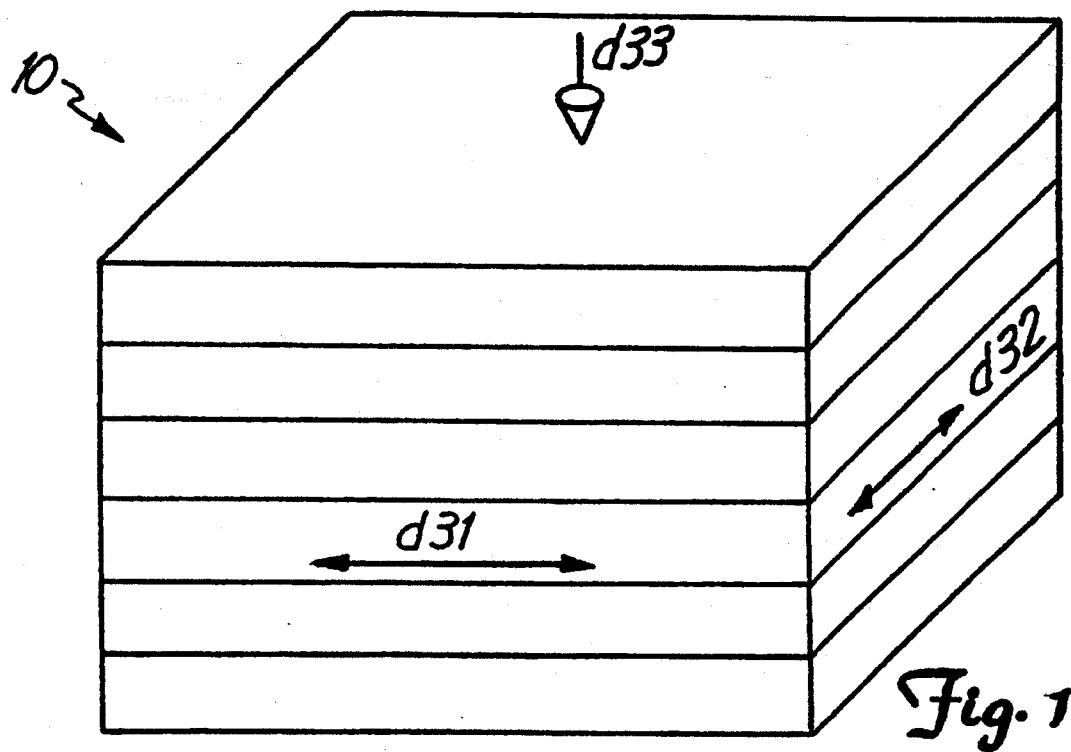




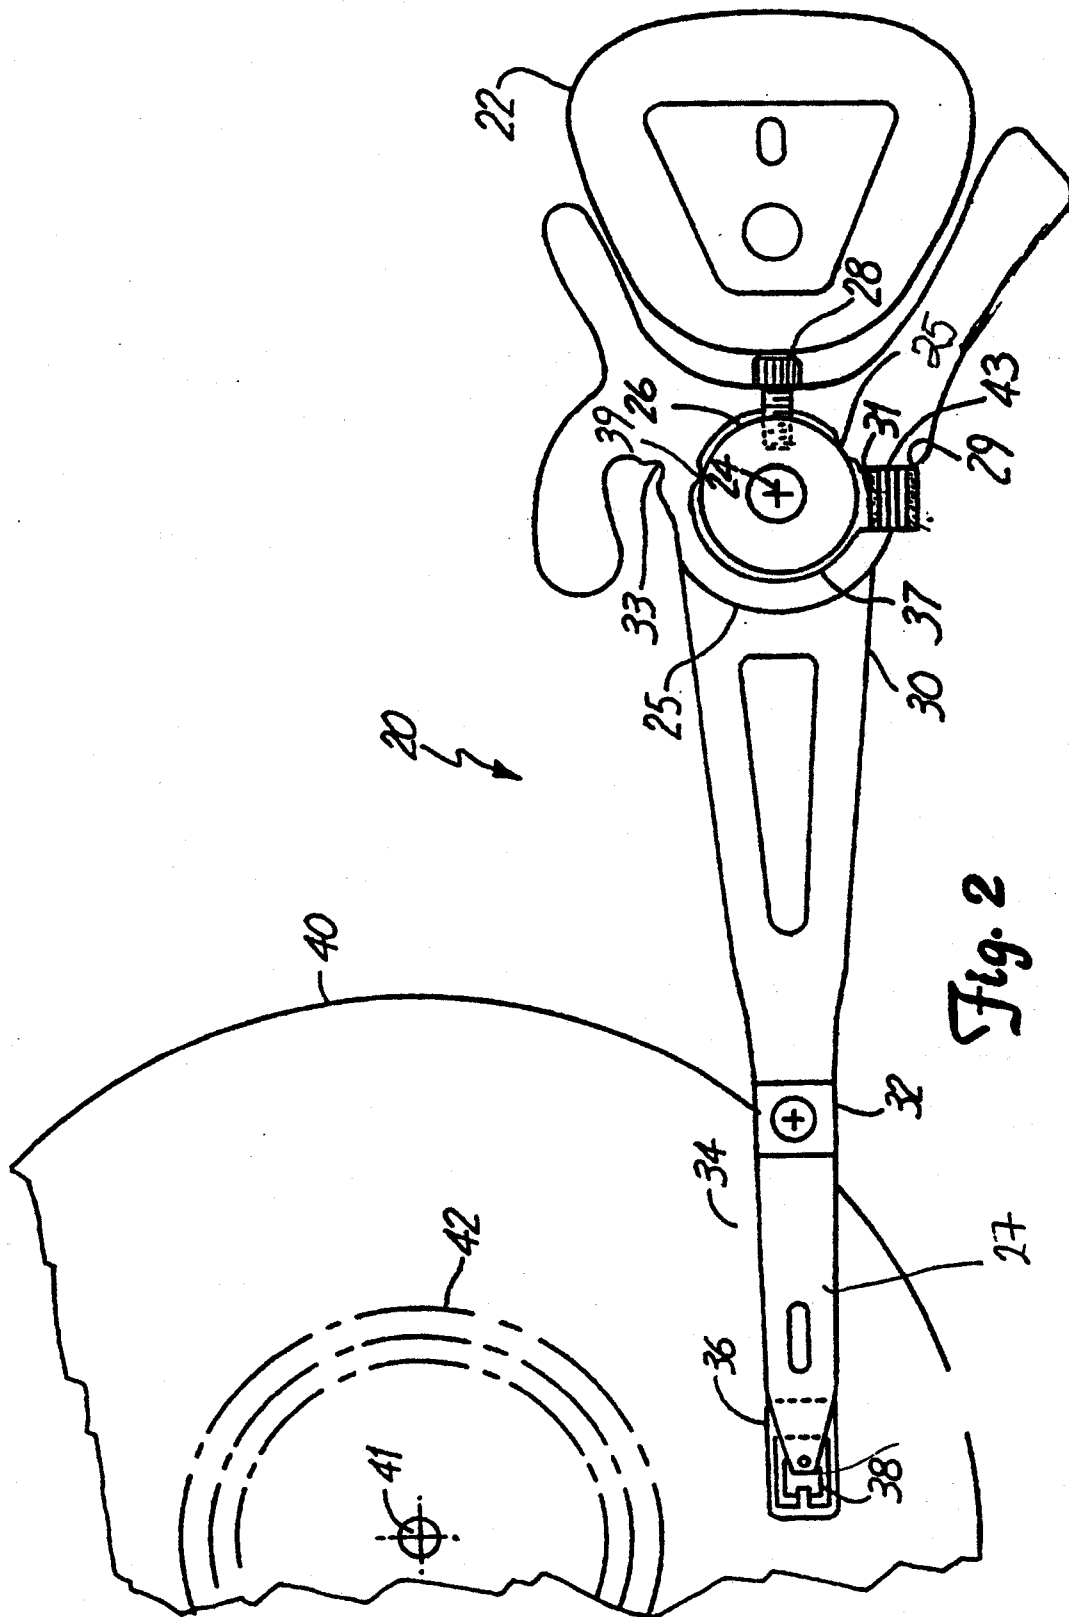


FIG 3



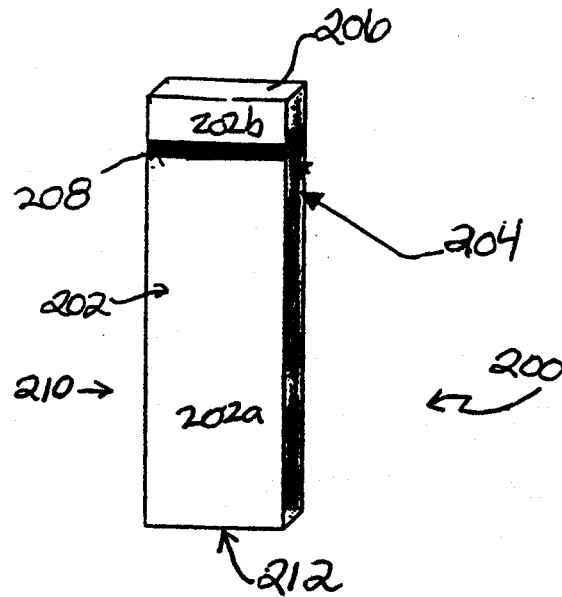


FIG. 4

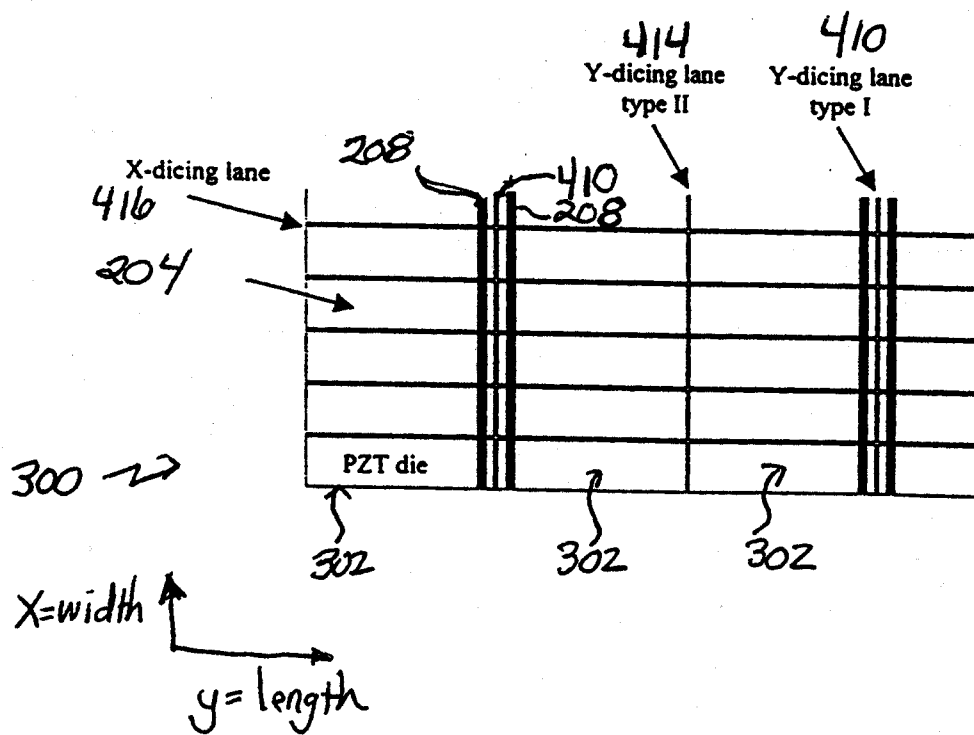


4/5


Apply photoresist to
electroded substrate

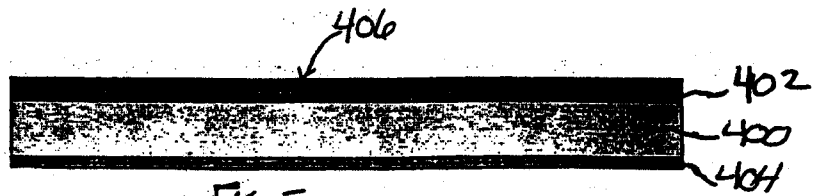


Pattern photoresist

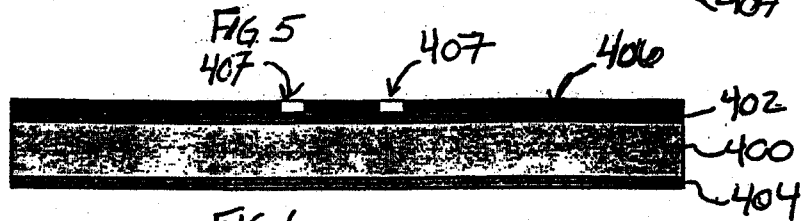


Etch the top electrode
isolation trenches

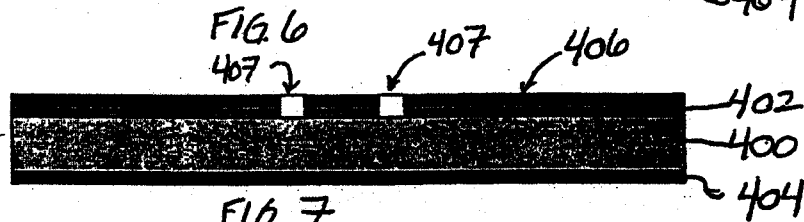

Remove first photoresist
layer and apply a second; dice
with a tapered blade

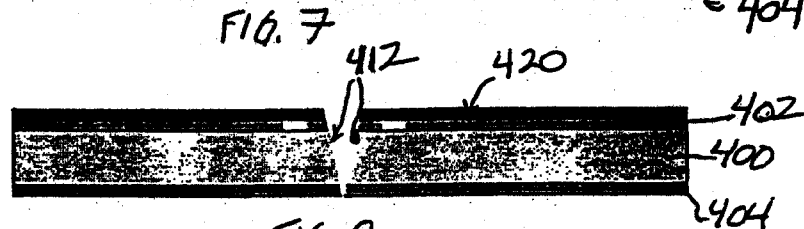

Deposit wrap around electrodes

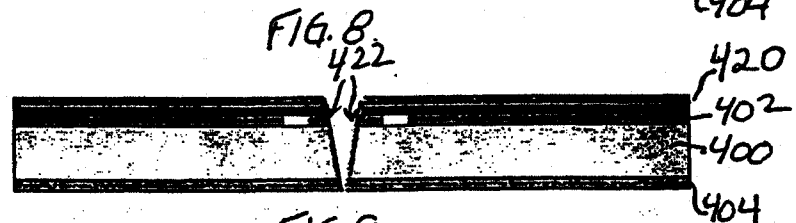

Finish dicing and strip
off photoresist

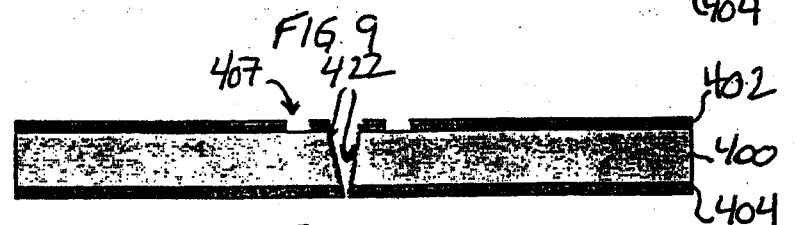


FIG. 10

