100



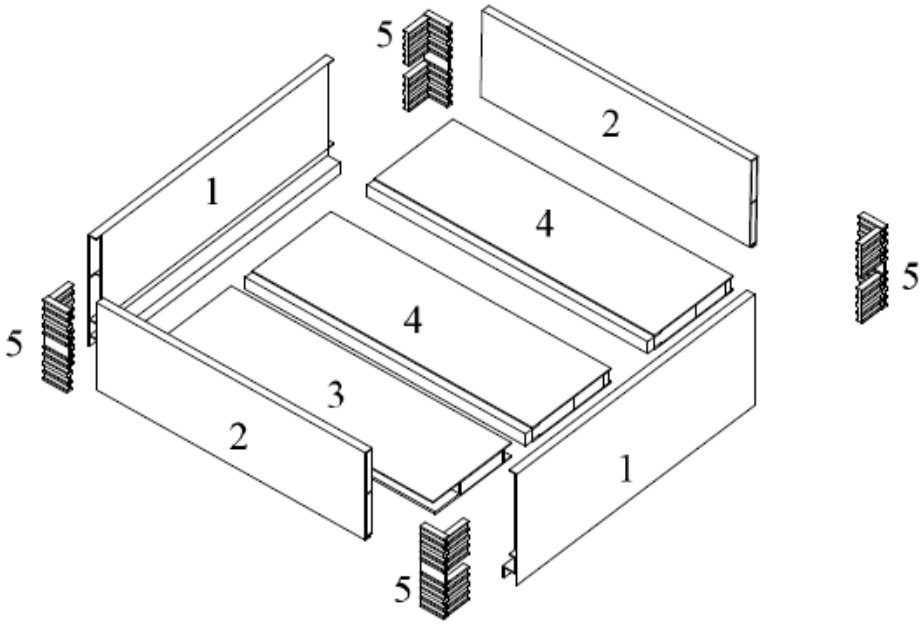


FIG. 1

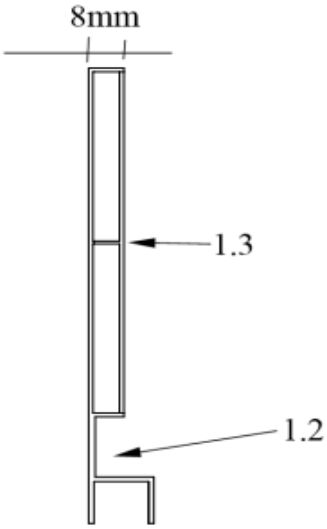

(a)

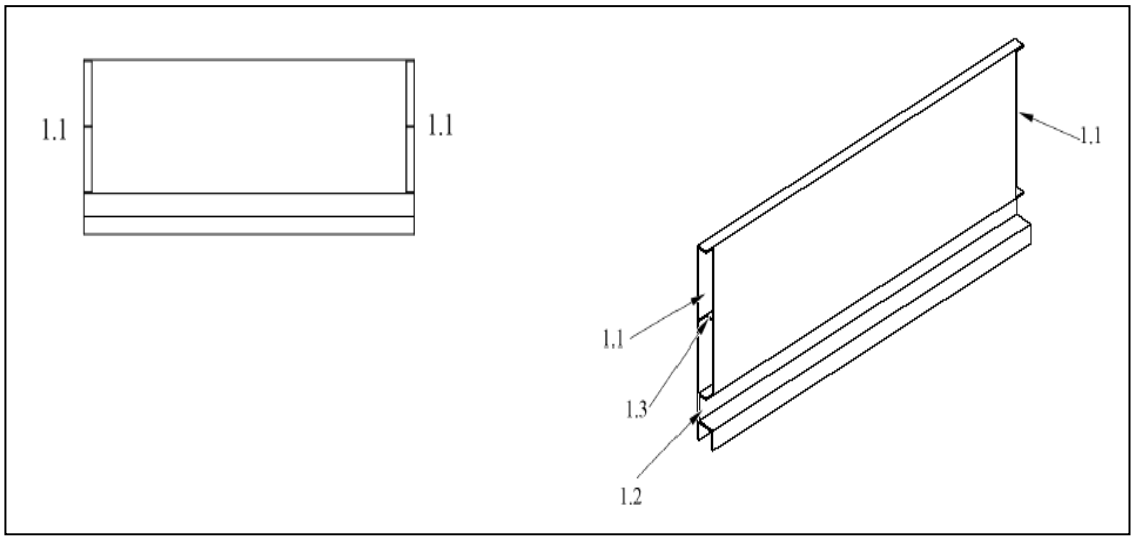

(b)

FIG. 2



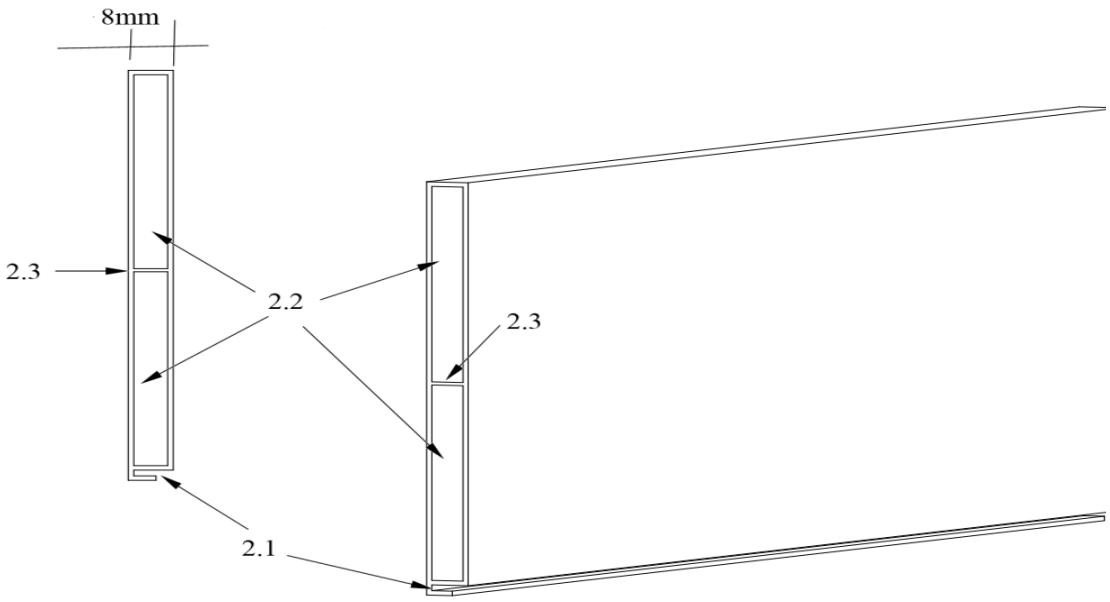



FIG. 3

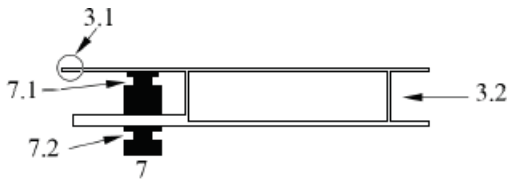

(a)

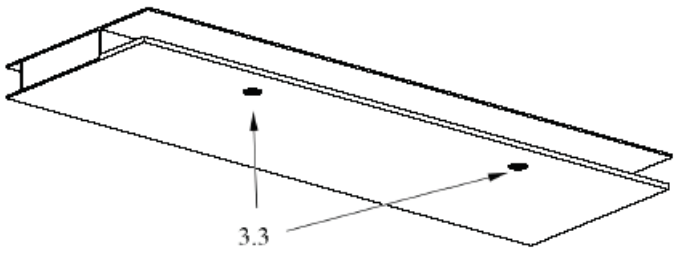

(b)

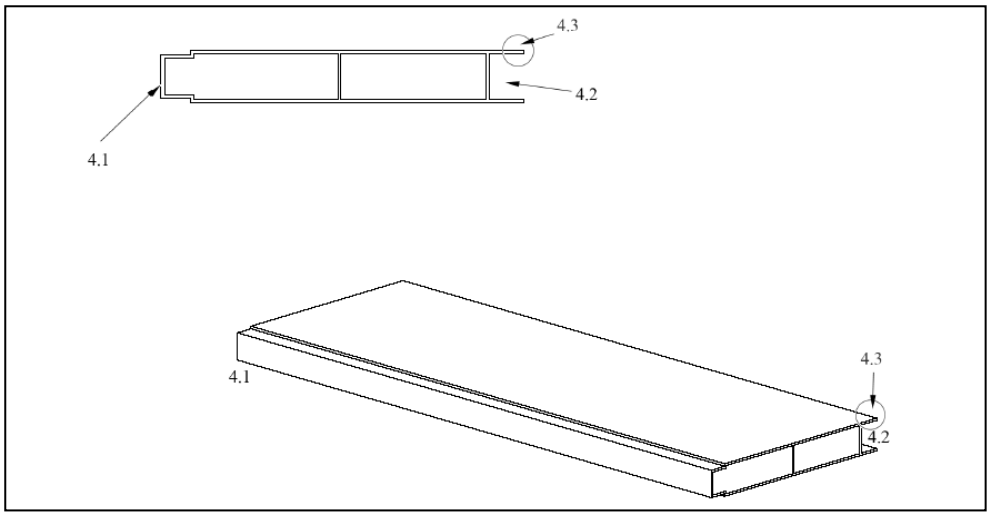

(c)

FIG. 4

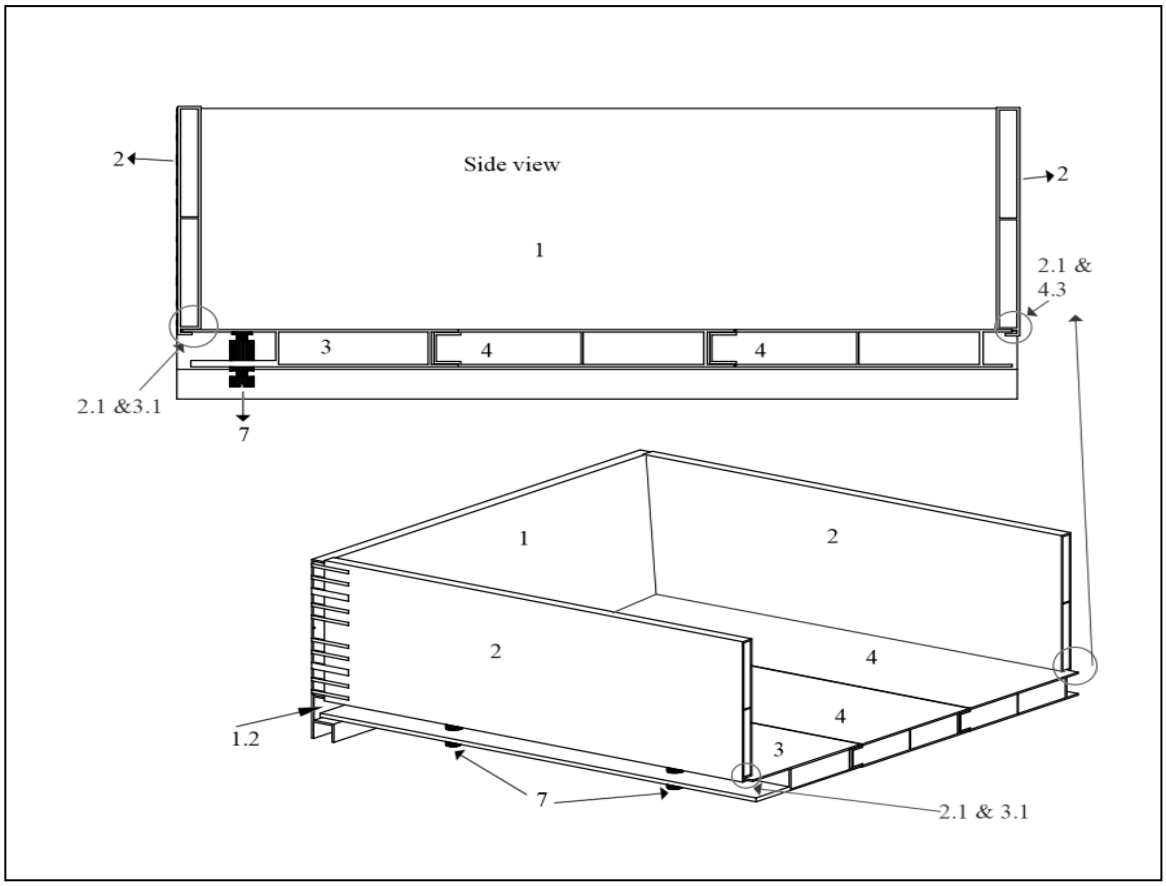


FIG. 5



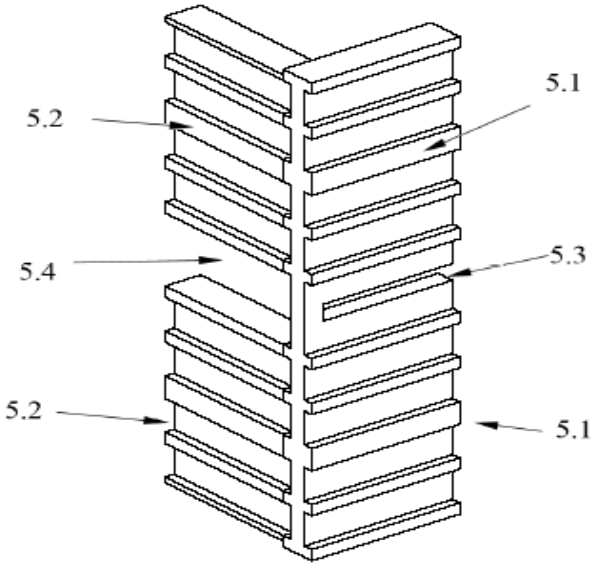


FIG. 6

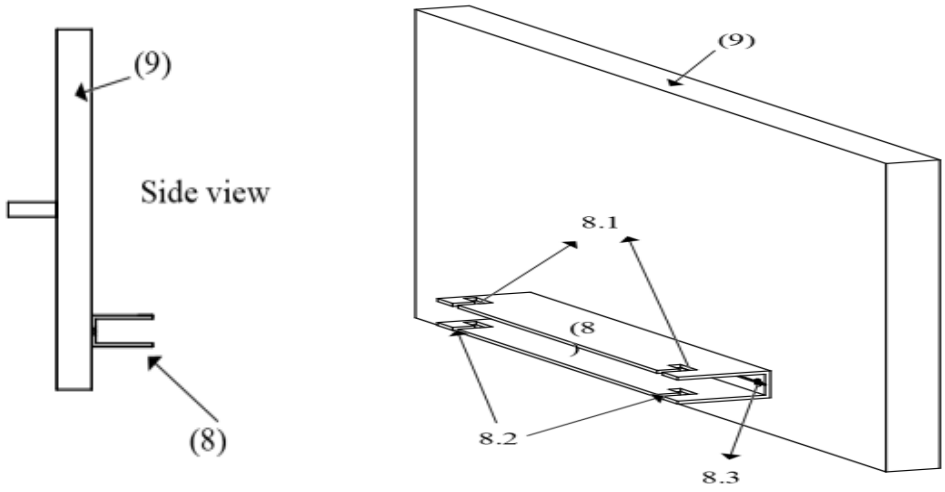

(a) **(b)**

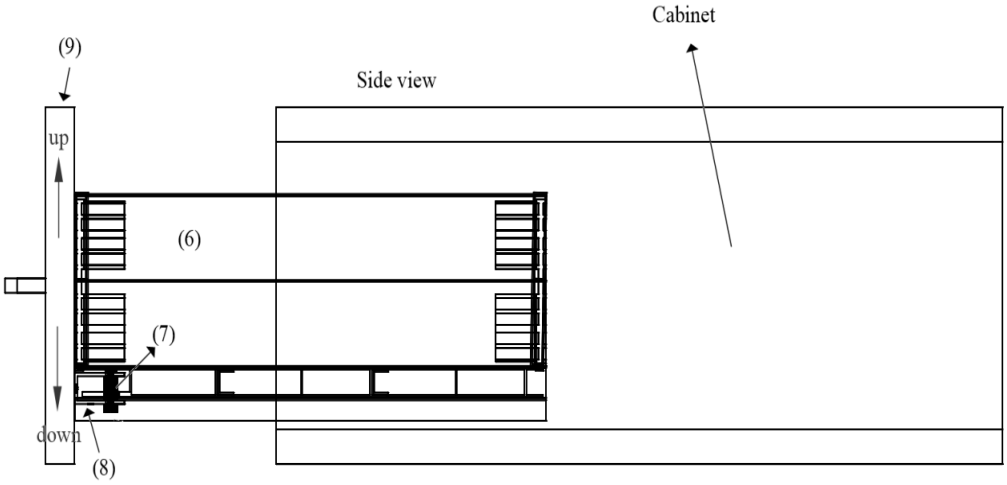

(c)

FIG. 7

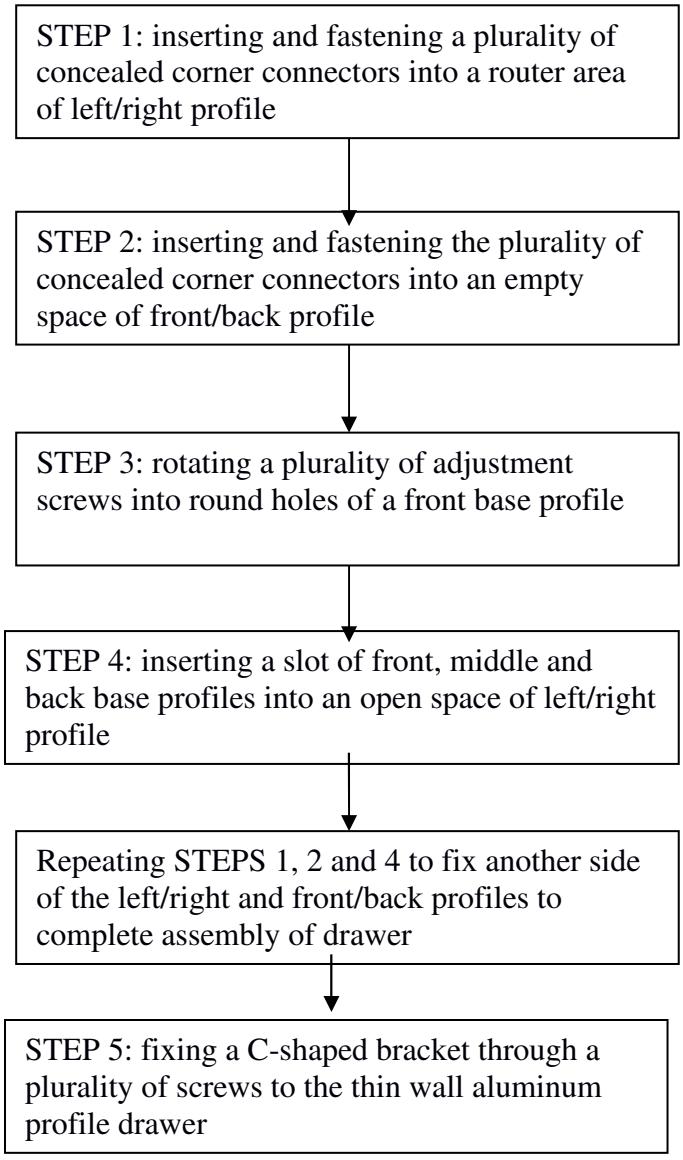

STEP 1: inserting and fastening a plurality of concealed corner connectors into a router area of left/right profile
STEP 2: inserting and fastening the plurality of concealed corner connectors into an empty space of front/back profile
STEP 3: rotating a plurality of adjustment screws into round holes of a front base profile
STEP 4: inserting a slot of front, middle and back base profiles into an open space of left/right profile
Repeating STEPS 1, 2 and 4 to fix another side of the left/right and front/back profiles to complete assembly of drawer
STEP 5: fixing a C-shaped bracket through a plurality of screws to the thin wall aluminum profile drawer

FIG. 8