

1/15

100

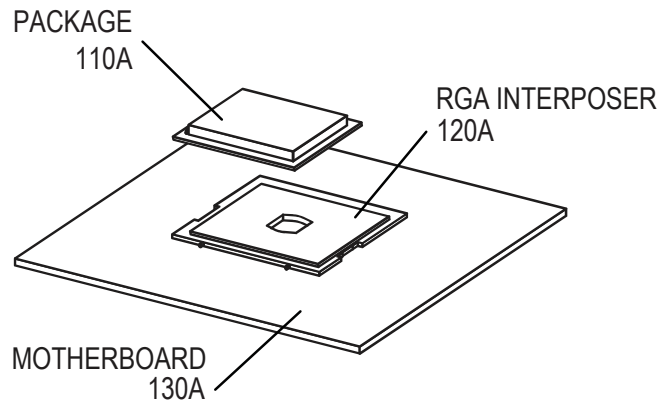


FIG. 1A

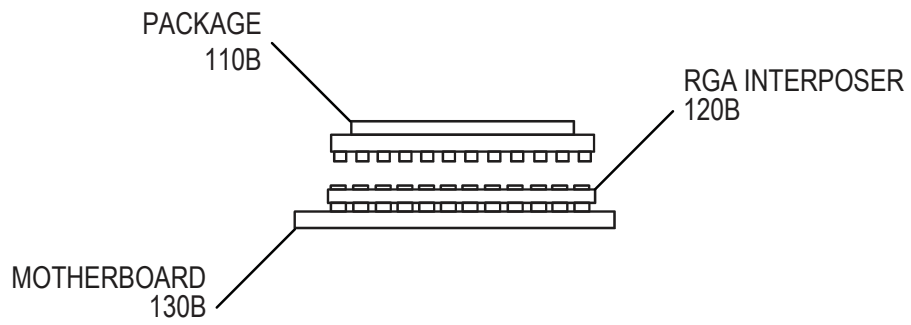


FIG. 1B

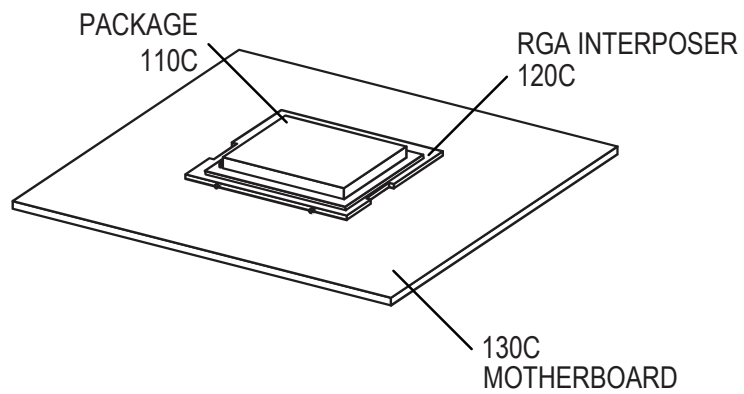
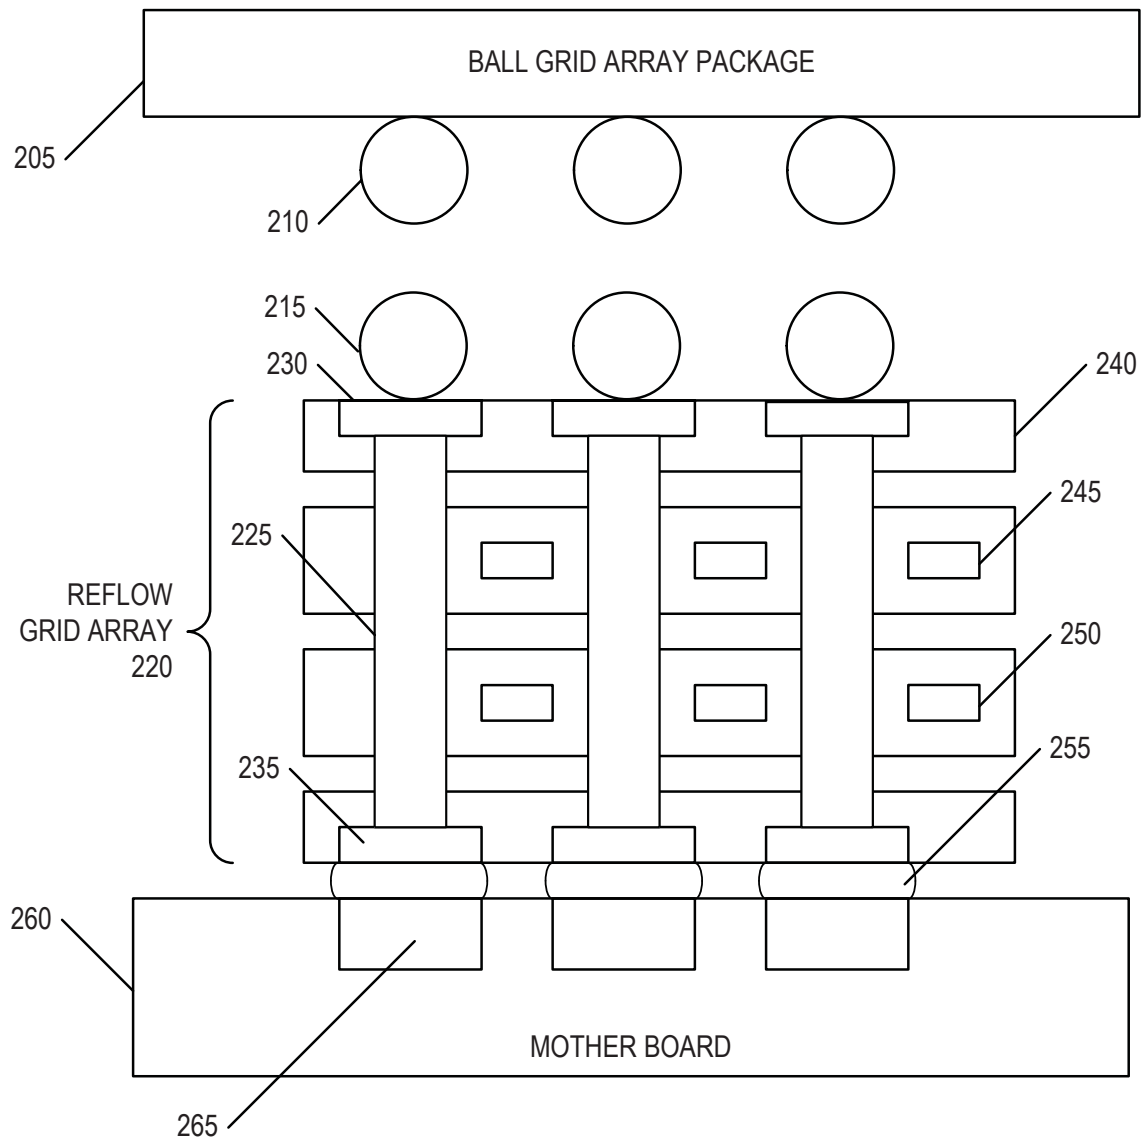
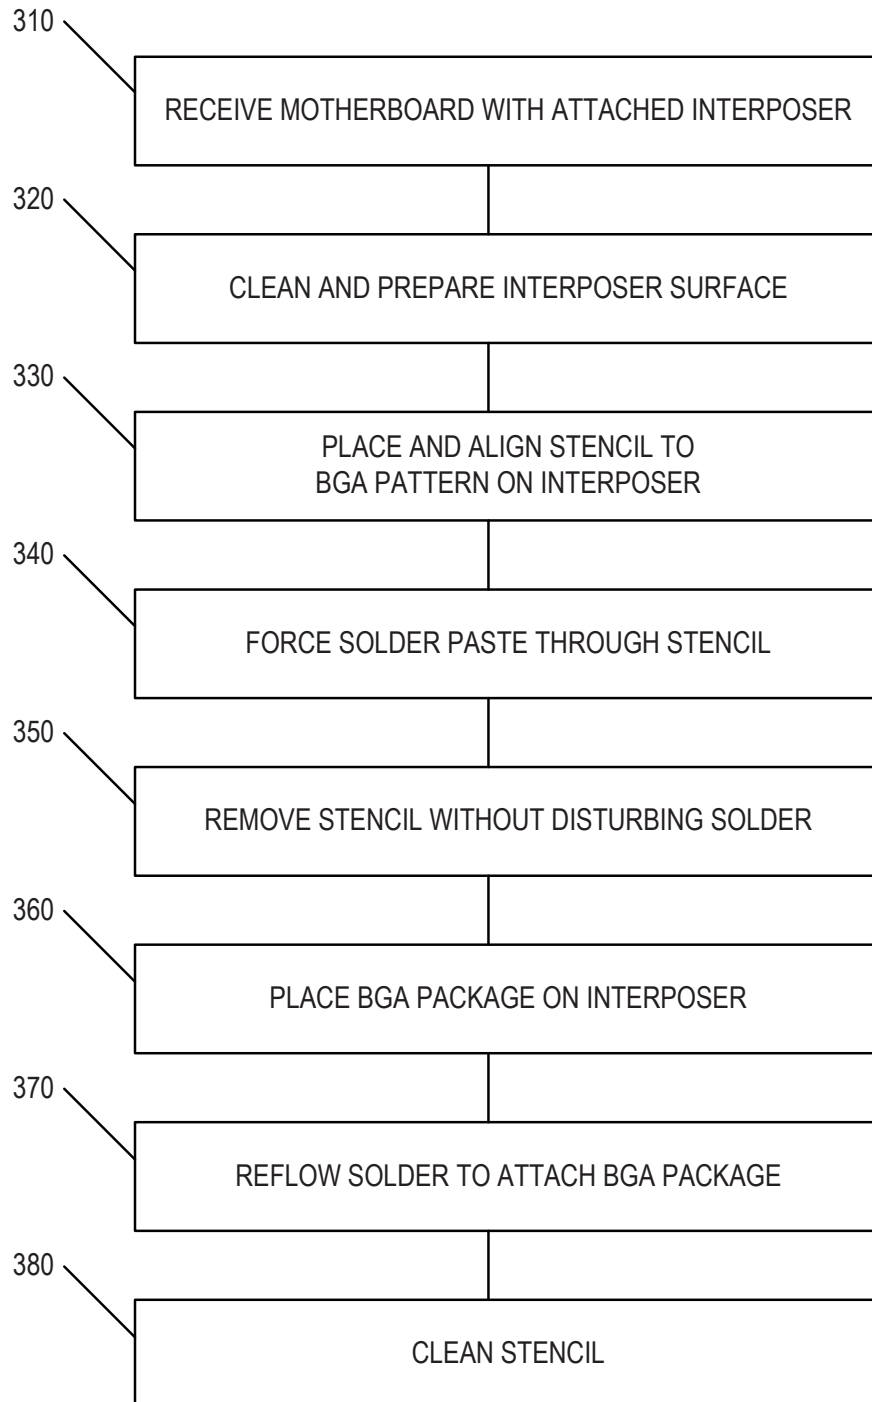


FIG. 1C

**FIG. 2**

**FIG. 3**

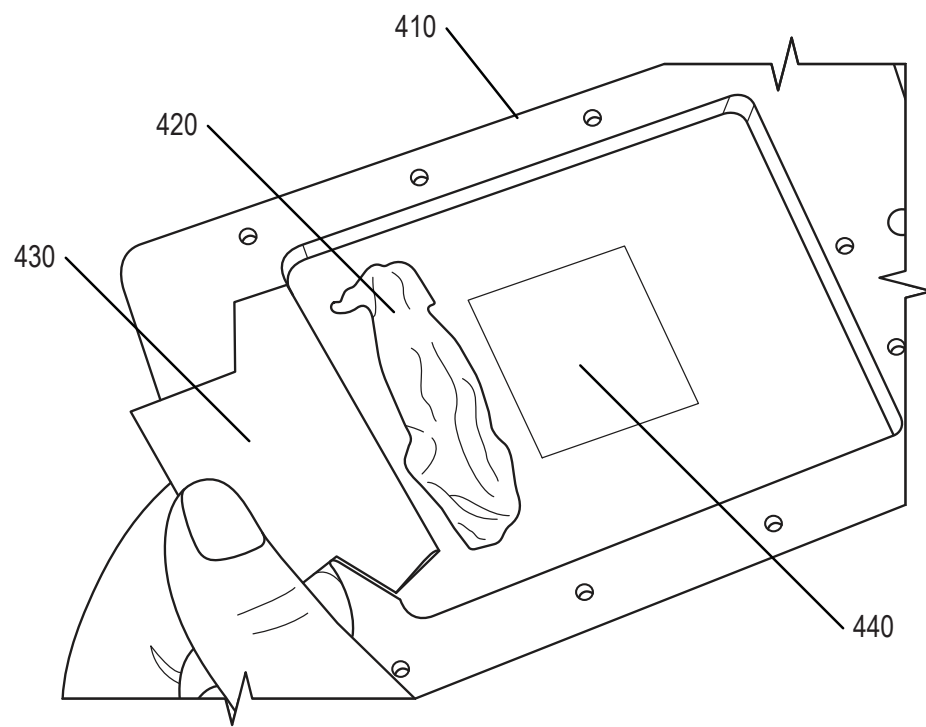
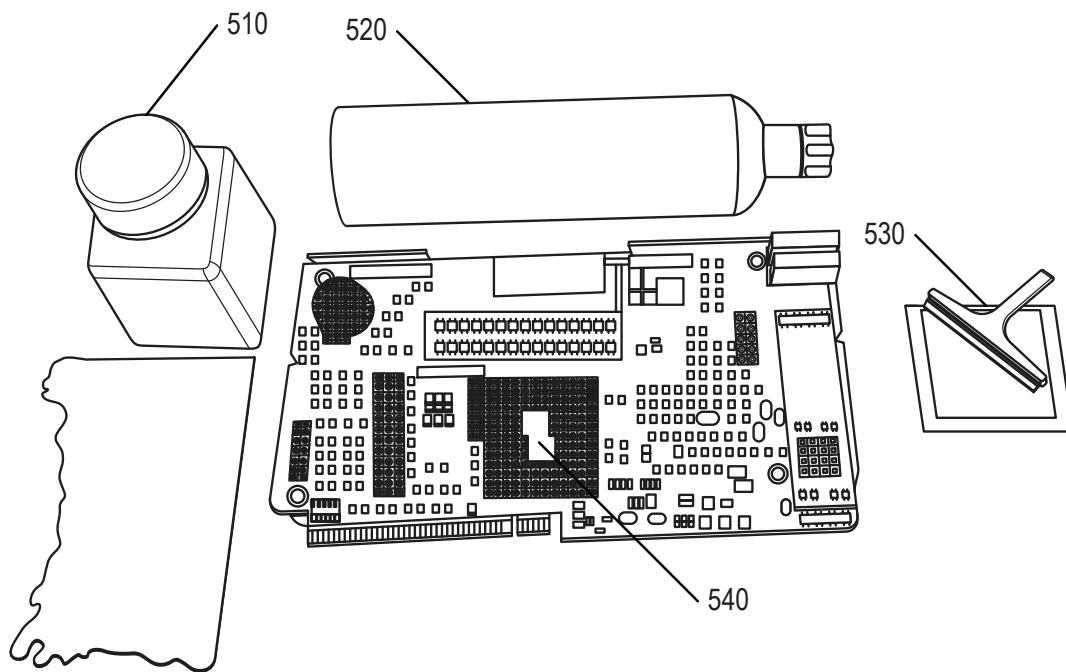


FIG. 4

**FIG. 5**

6/15

600

WET SOLDER PASTE
610

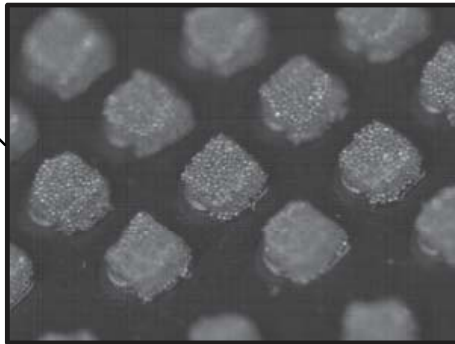
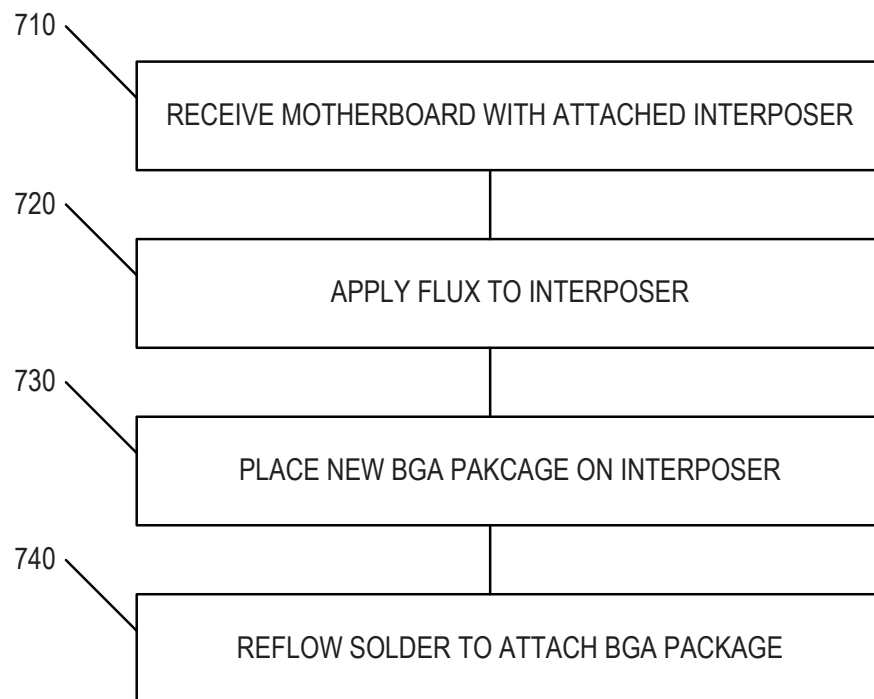


FIG. 6

**FIG. 7**

8/15

800

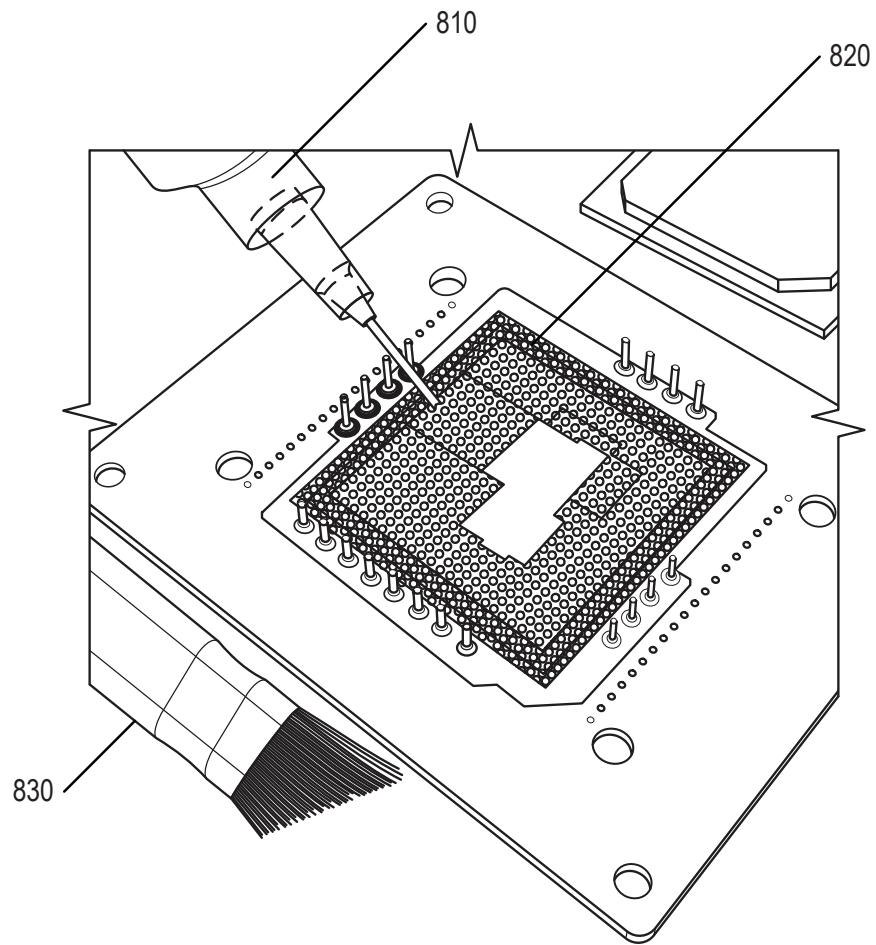


FIG. 8

9/15

900

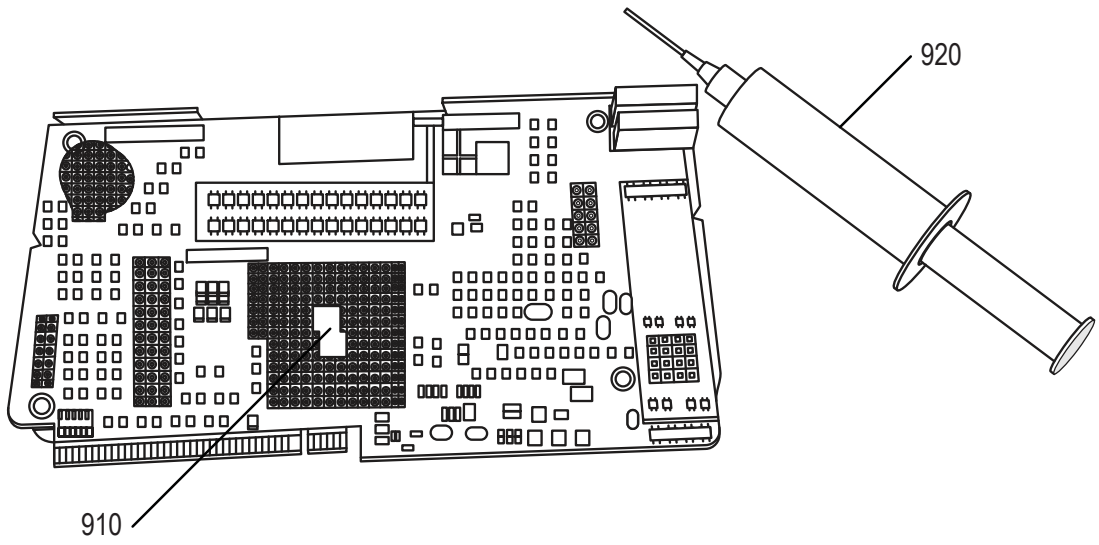


FIG. 9

10/15

1000
↙

SOLDER BUMPS
1010

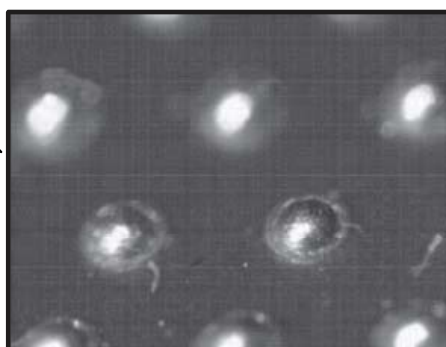


FIG. 10

11/15

1100

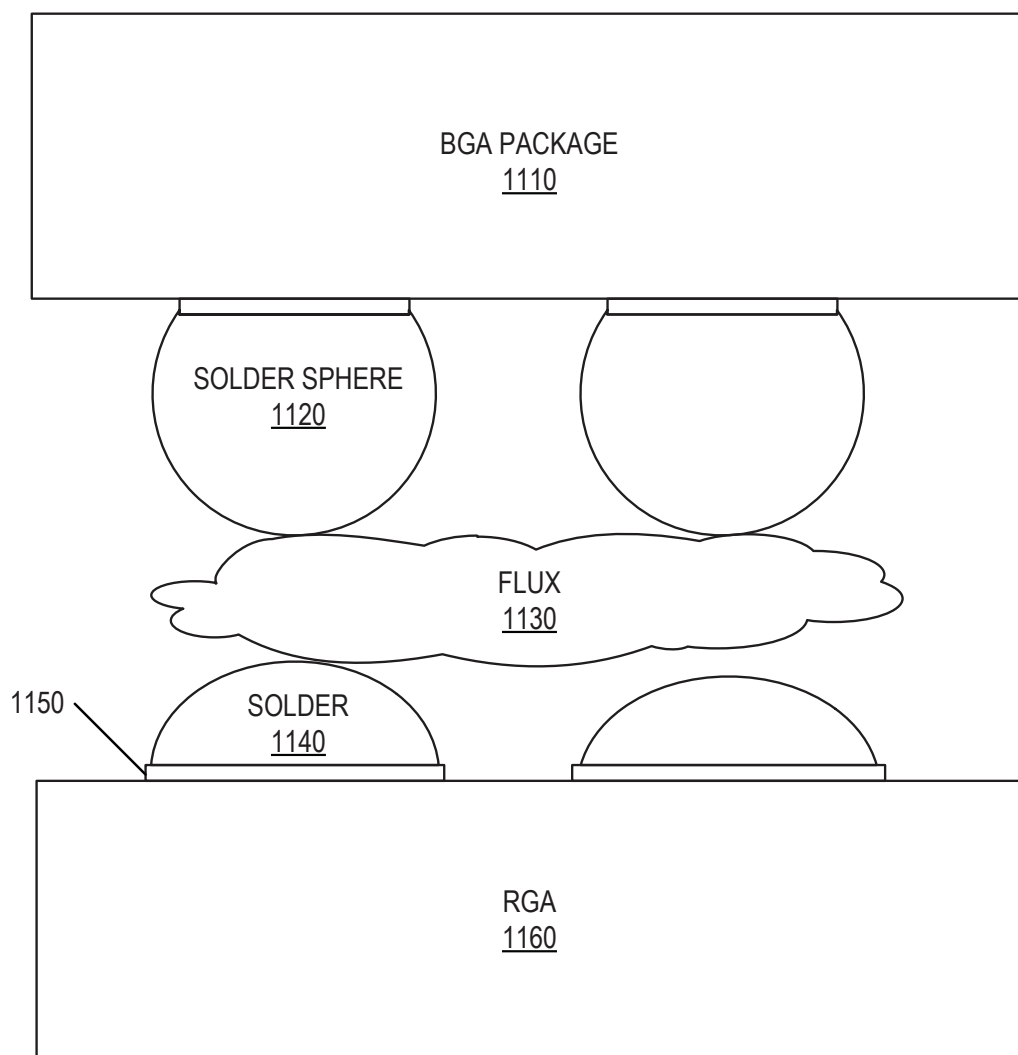


FIG. 11

12/15

1200

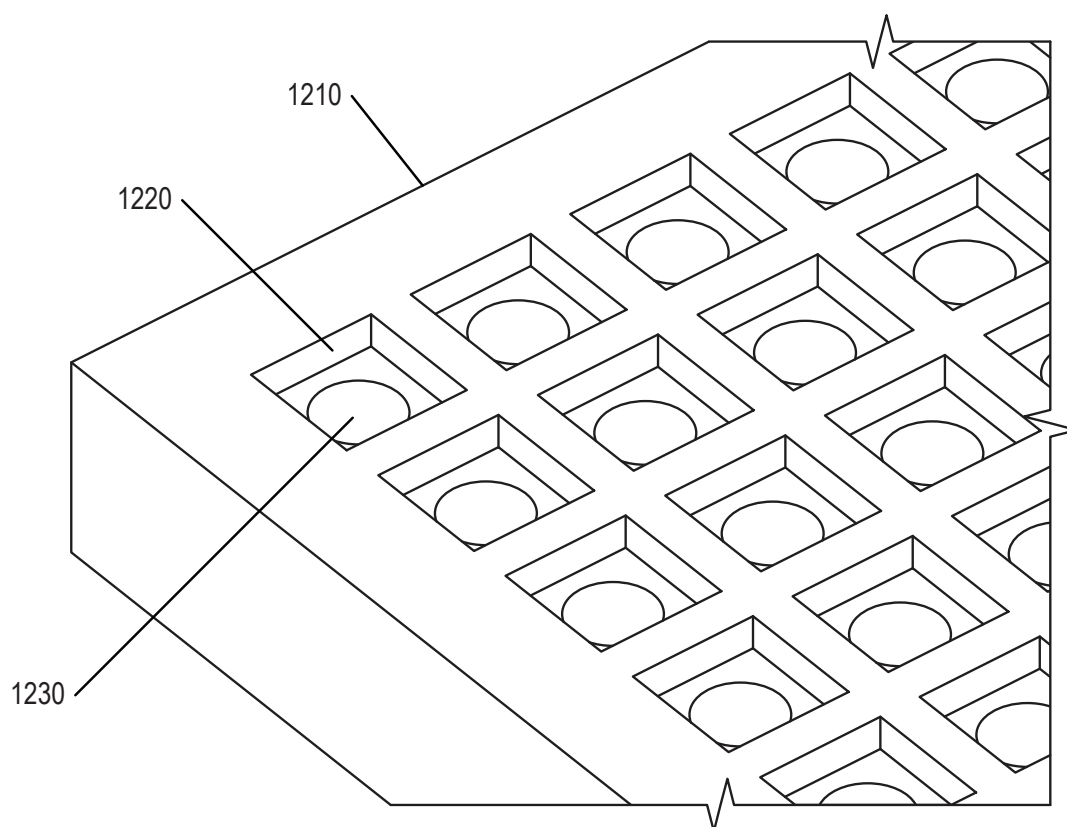


FIG. 12

13/15

1300

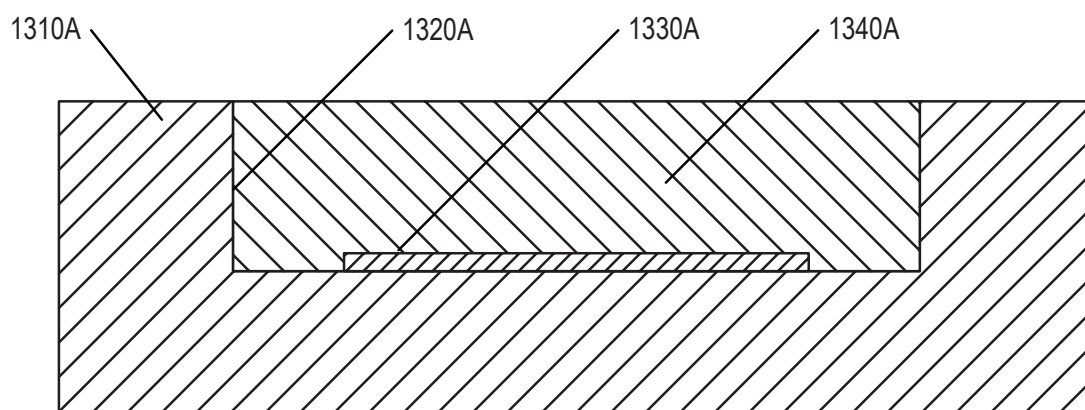


FIG. 13A

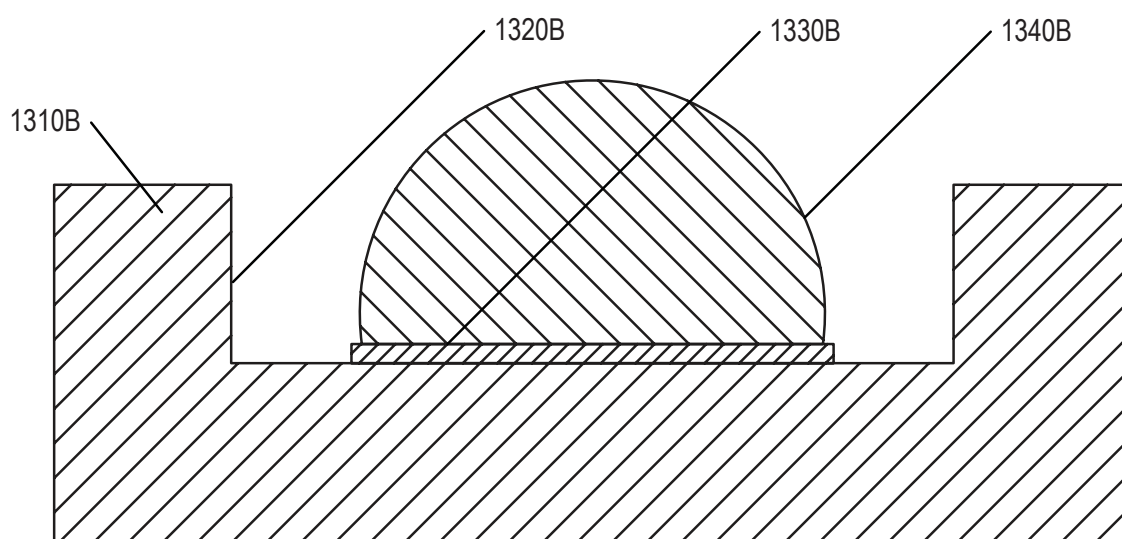
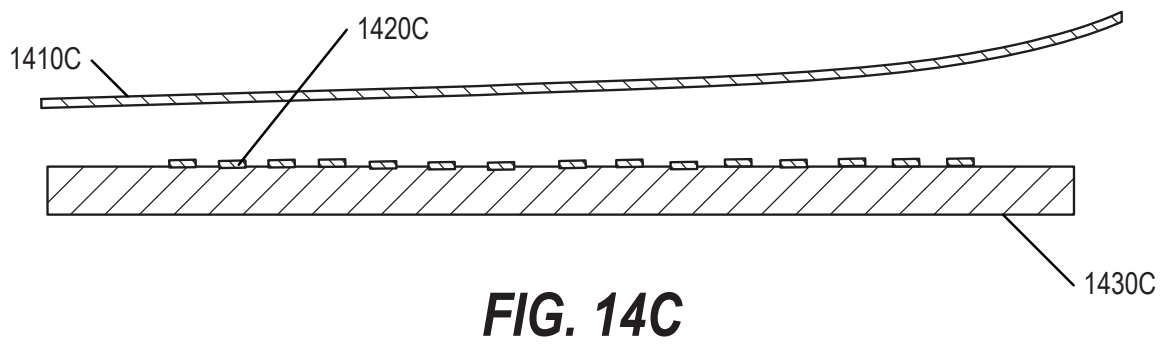
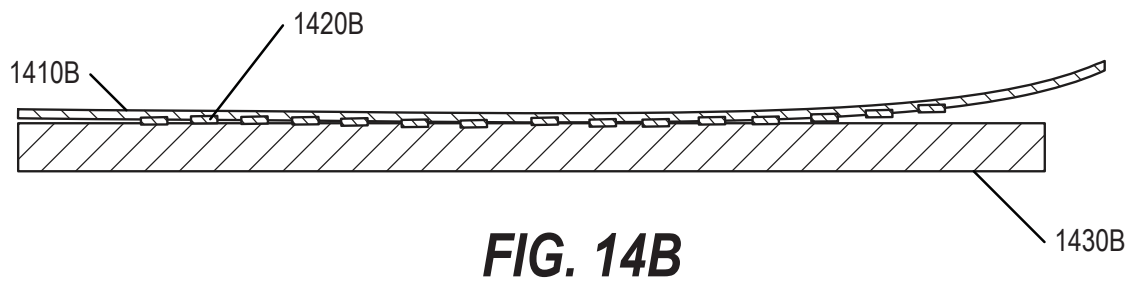
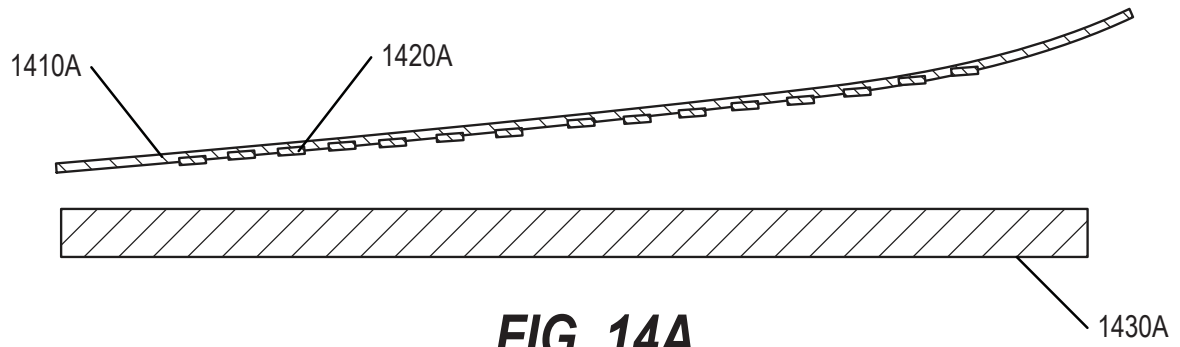
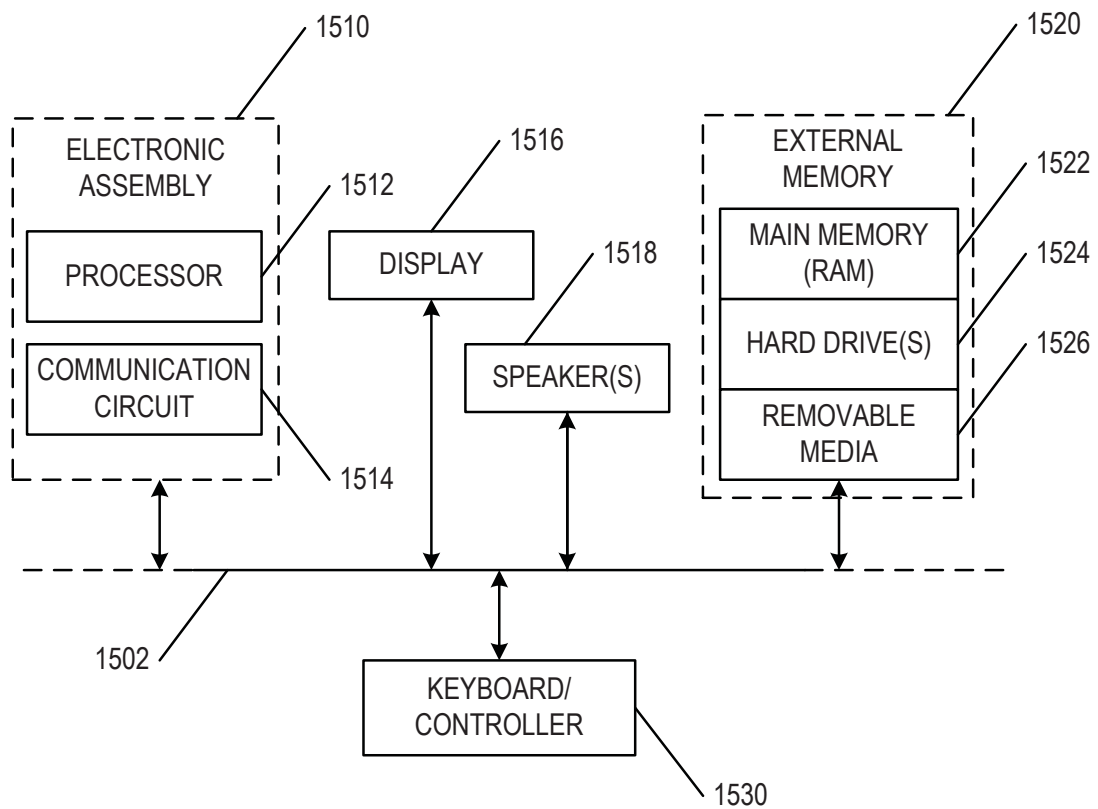


FIG. 13B

14/15

1400



**FIG. 15**