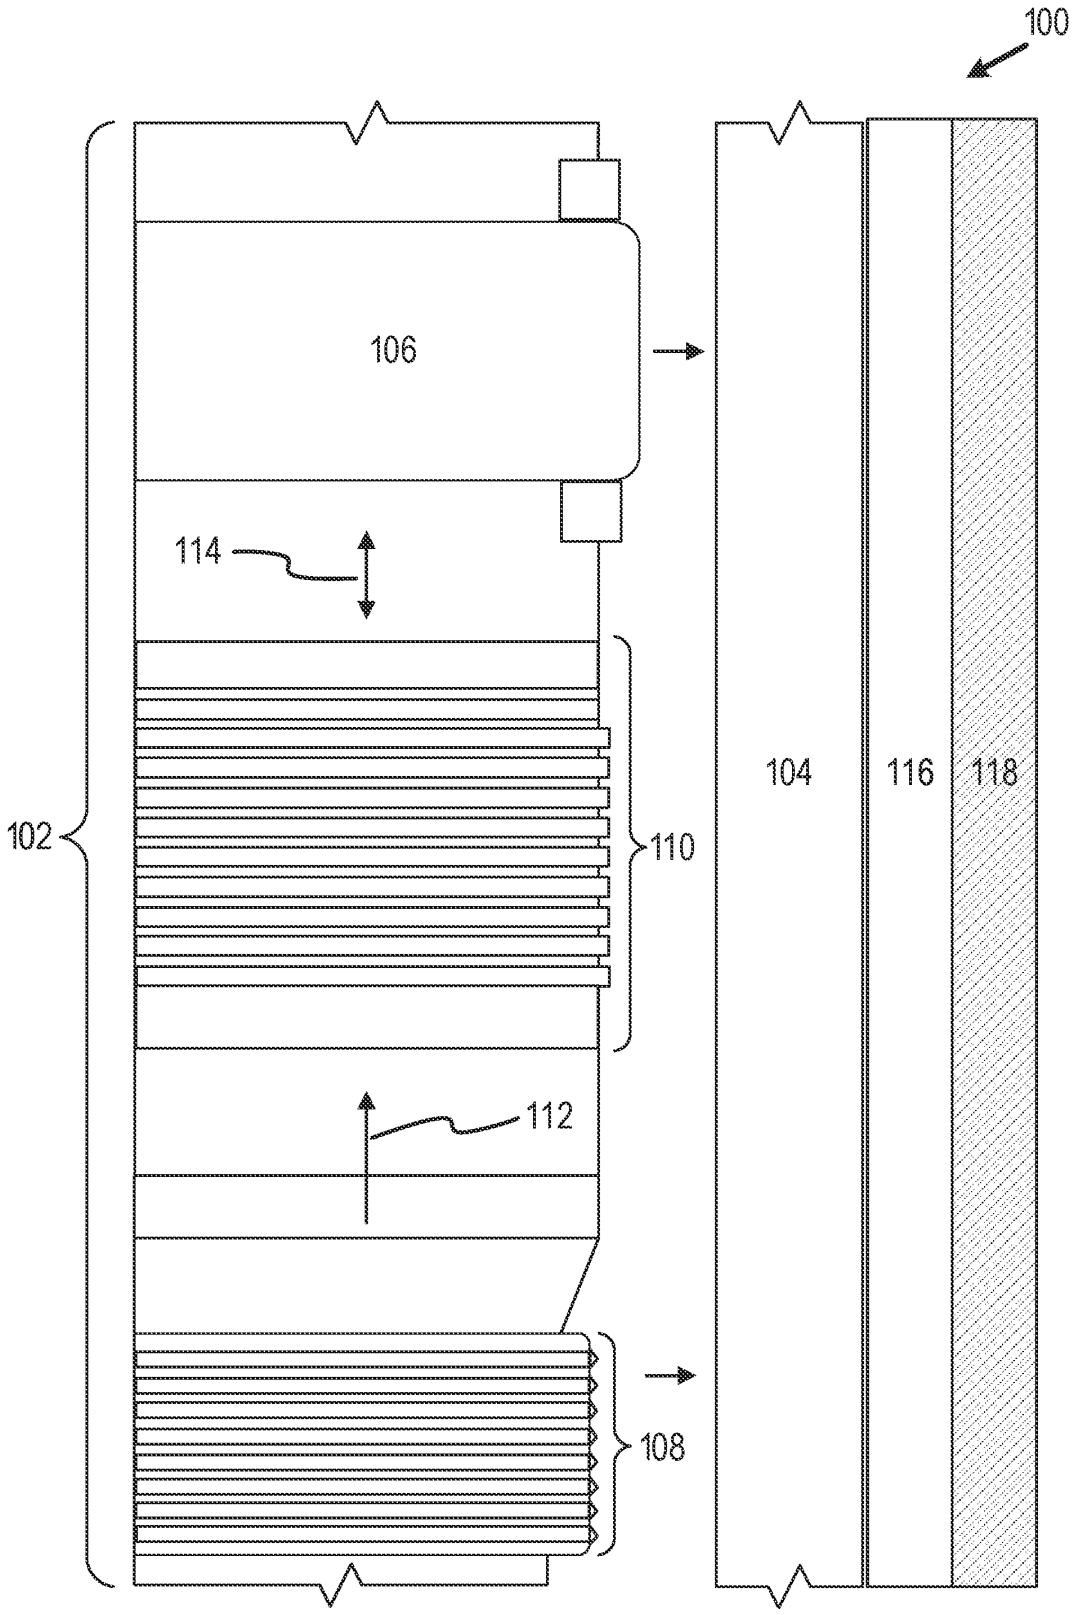


FIG. 1

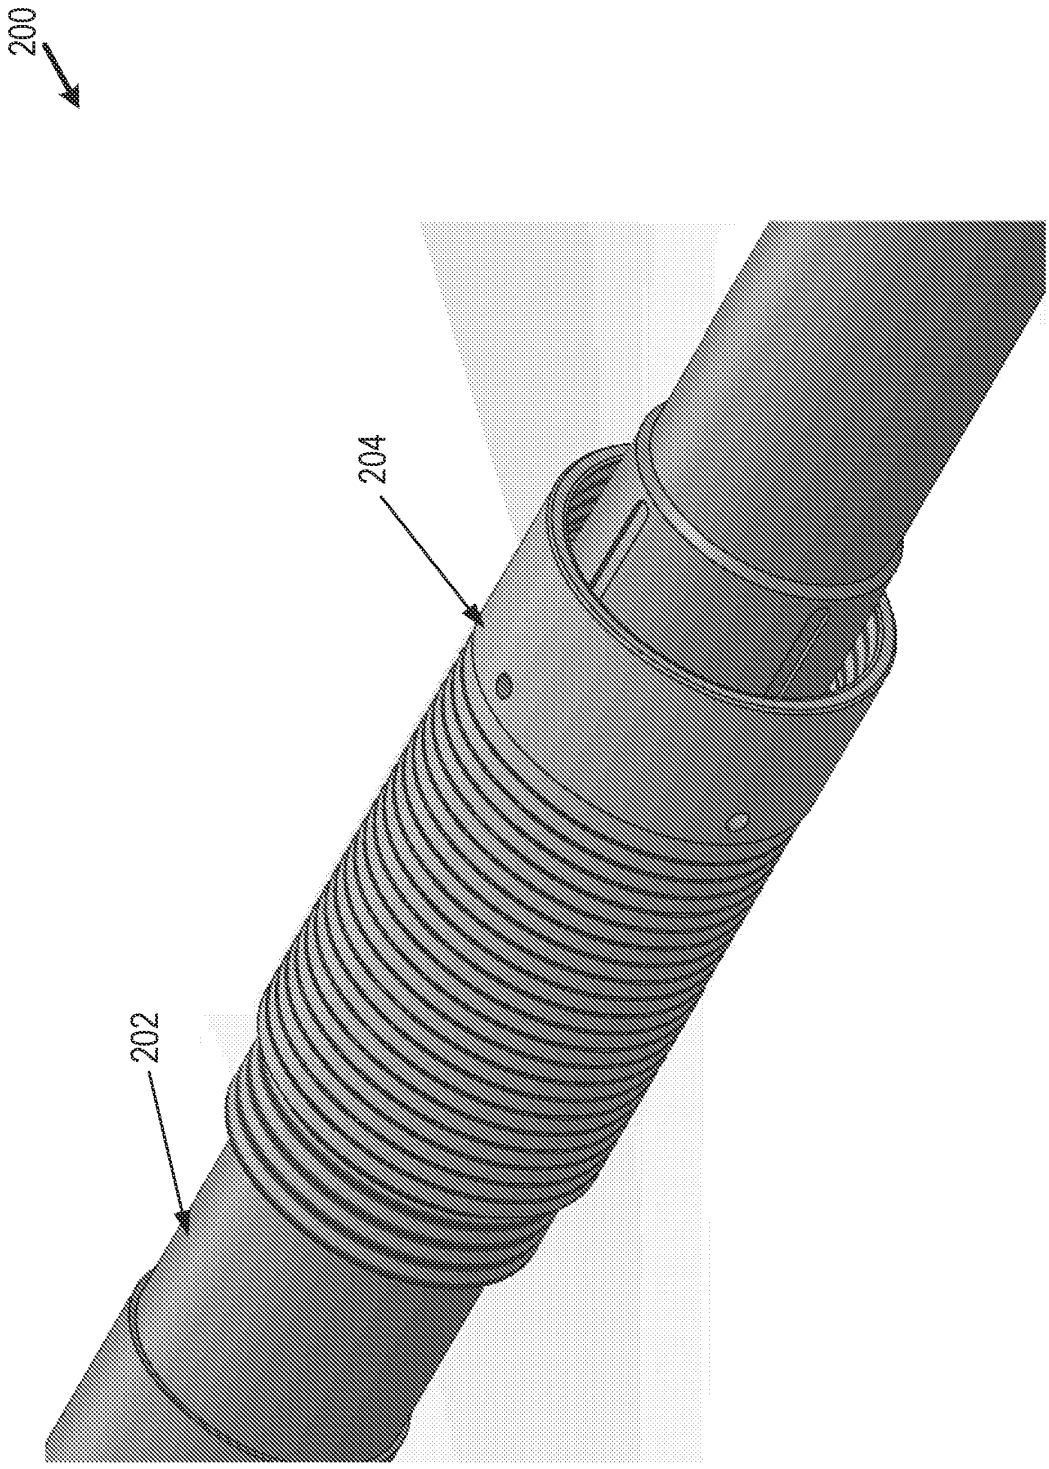


FIG. 2

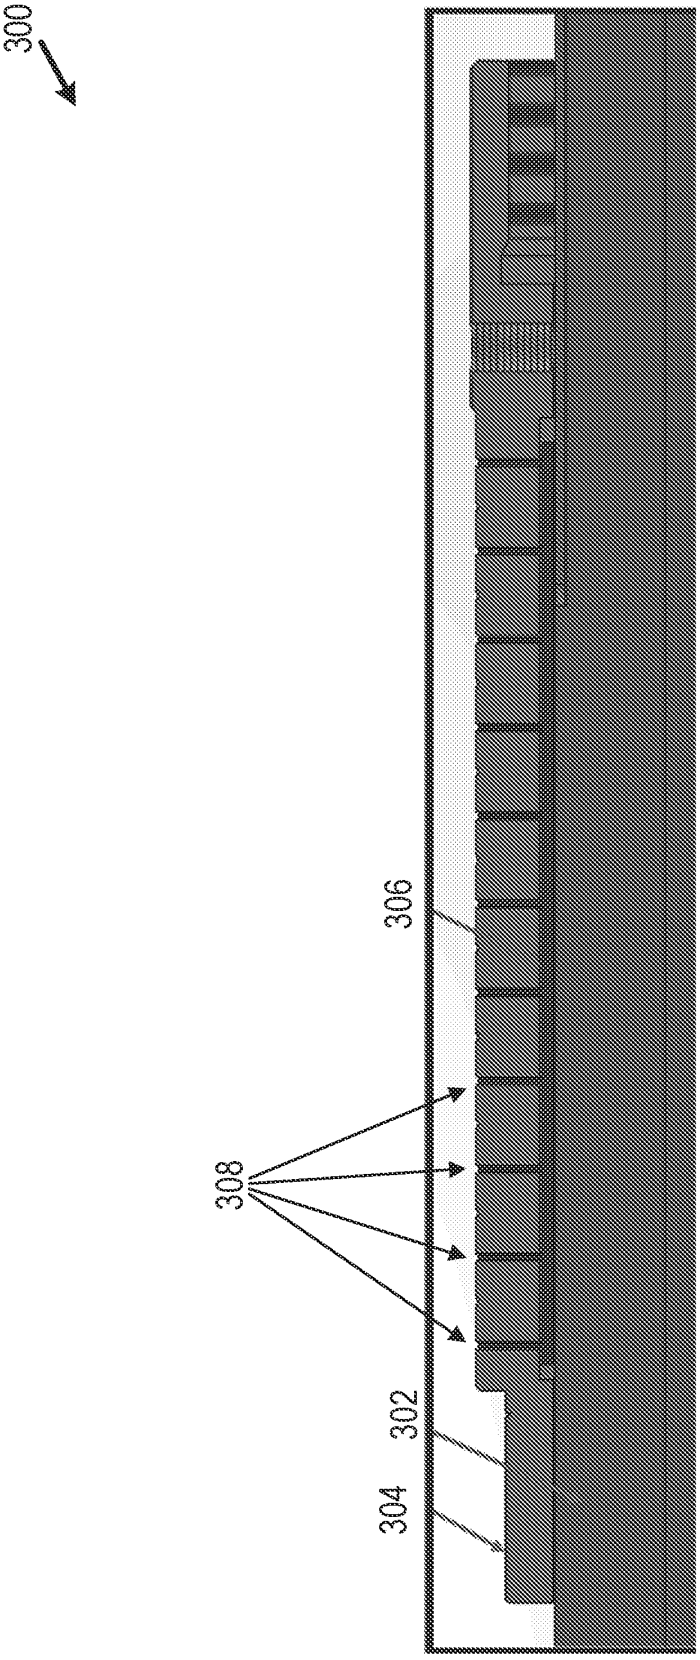


FIG. 3

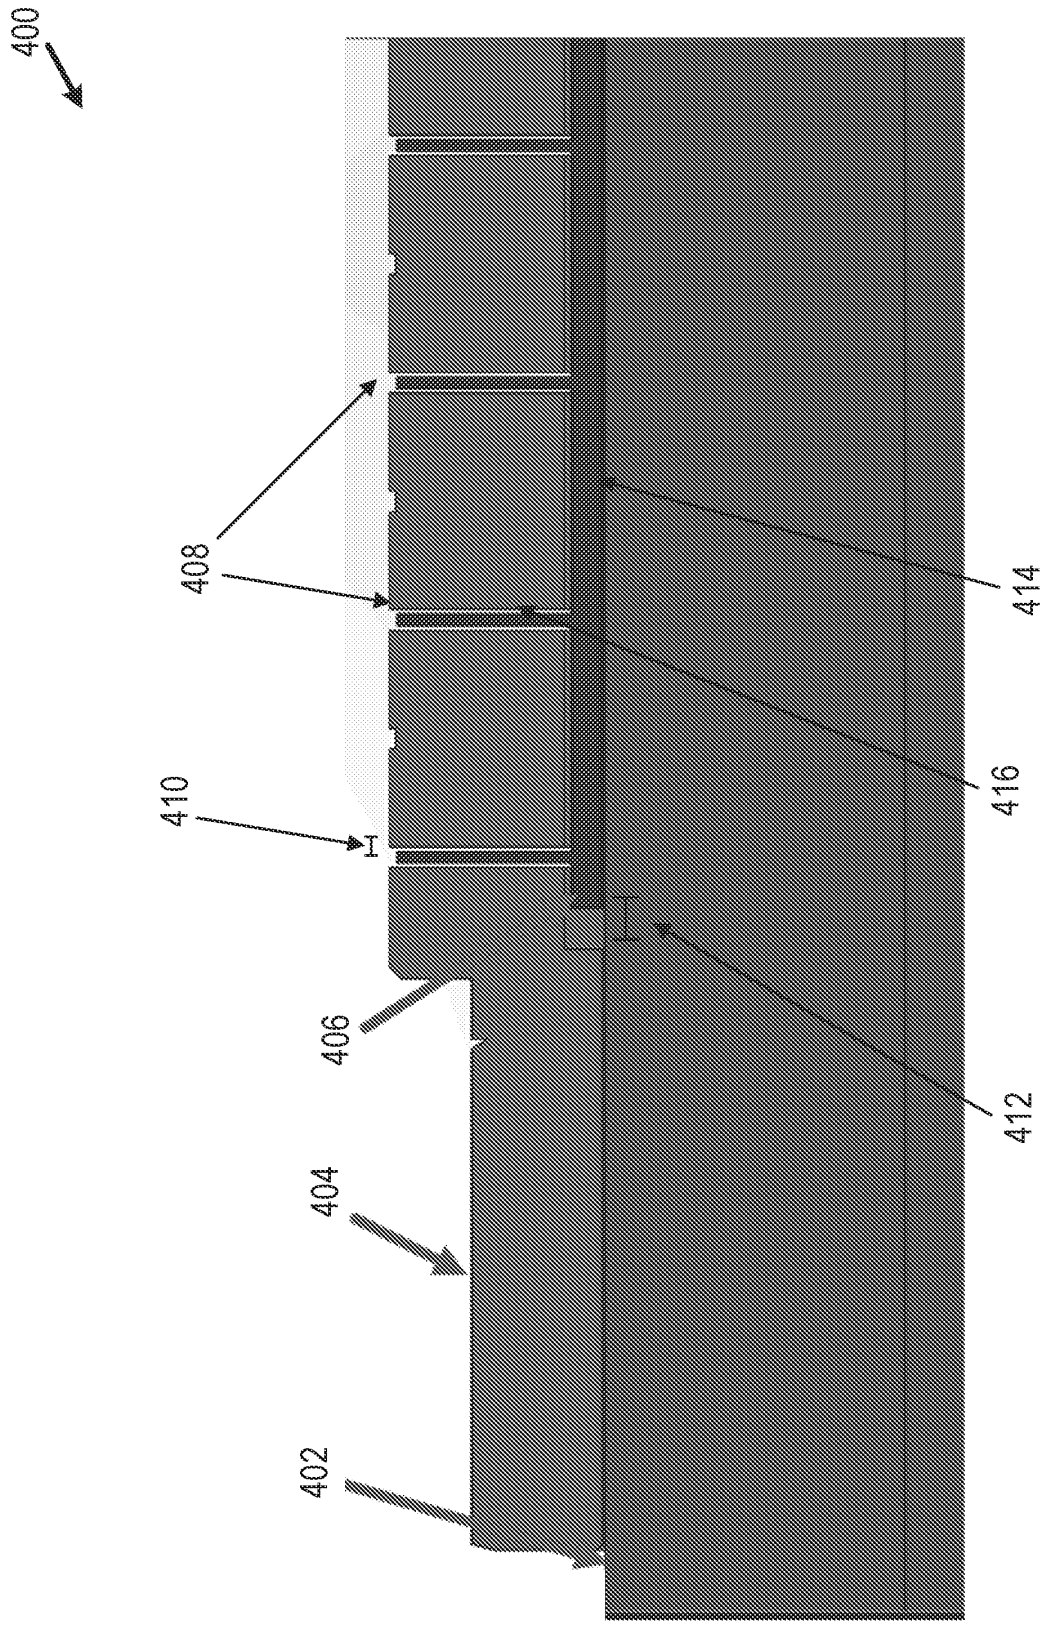


FIG. 4

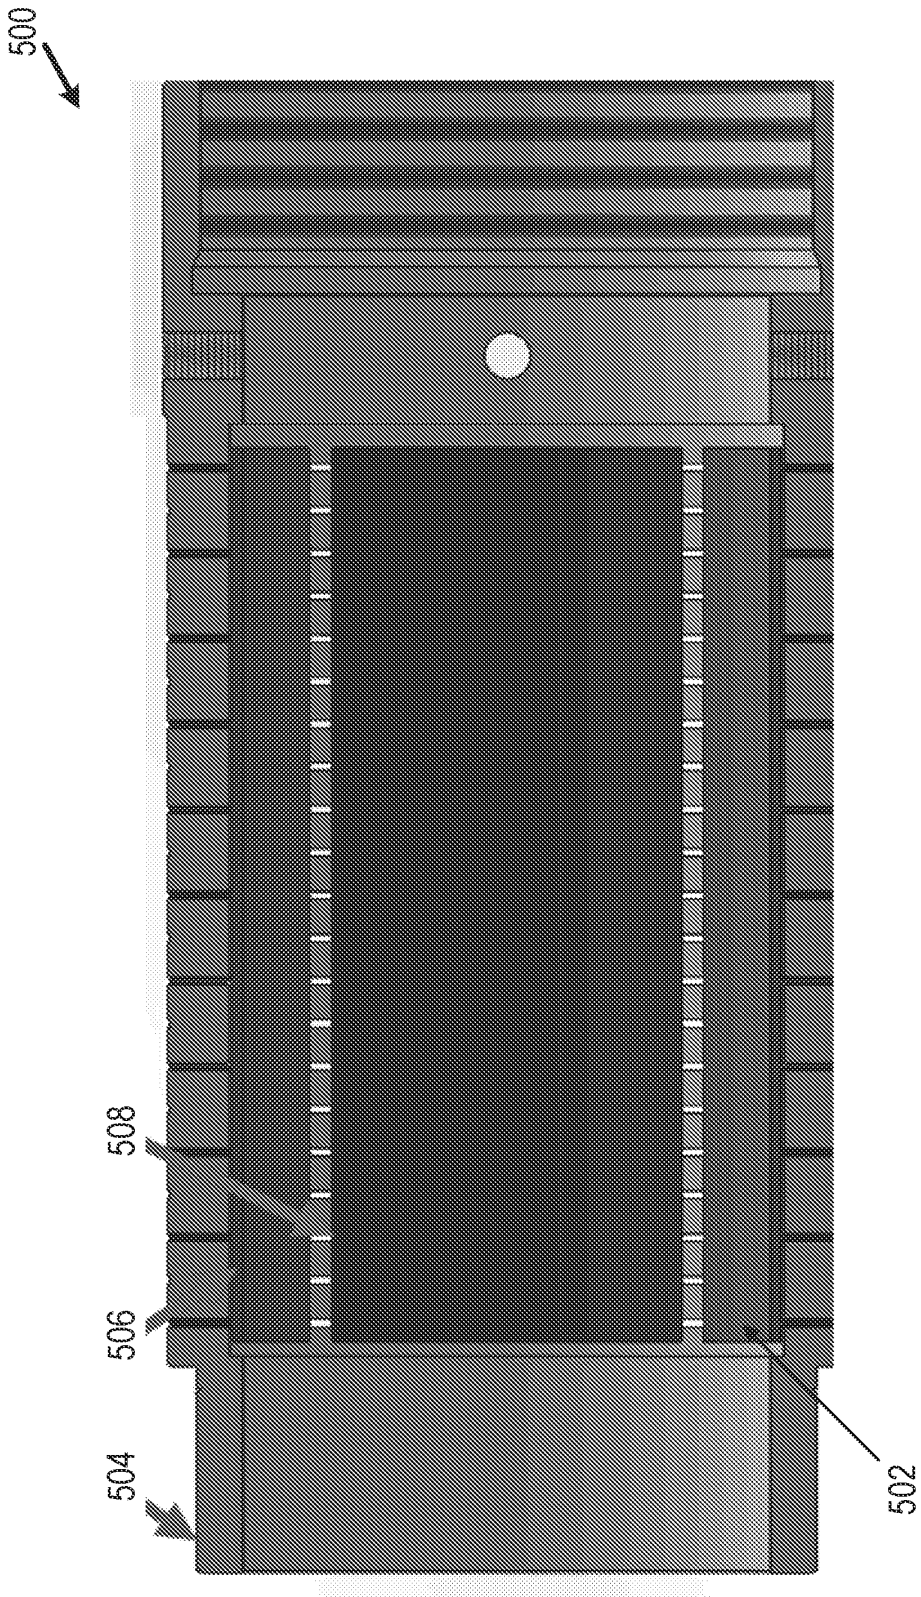


FIG. 5

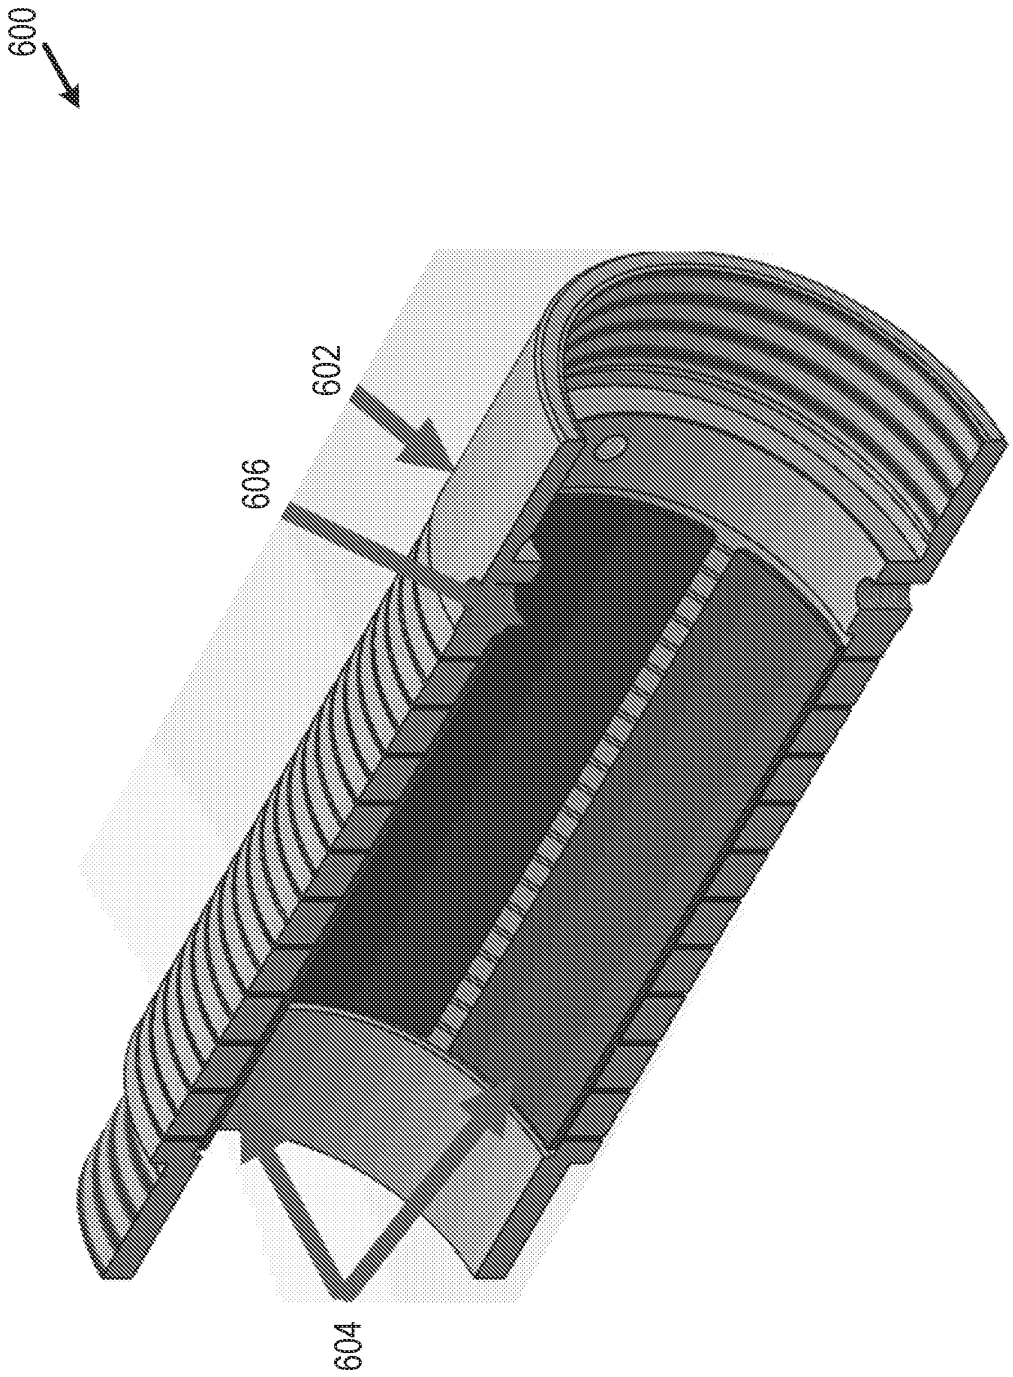


FIG. 6

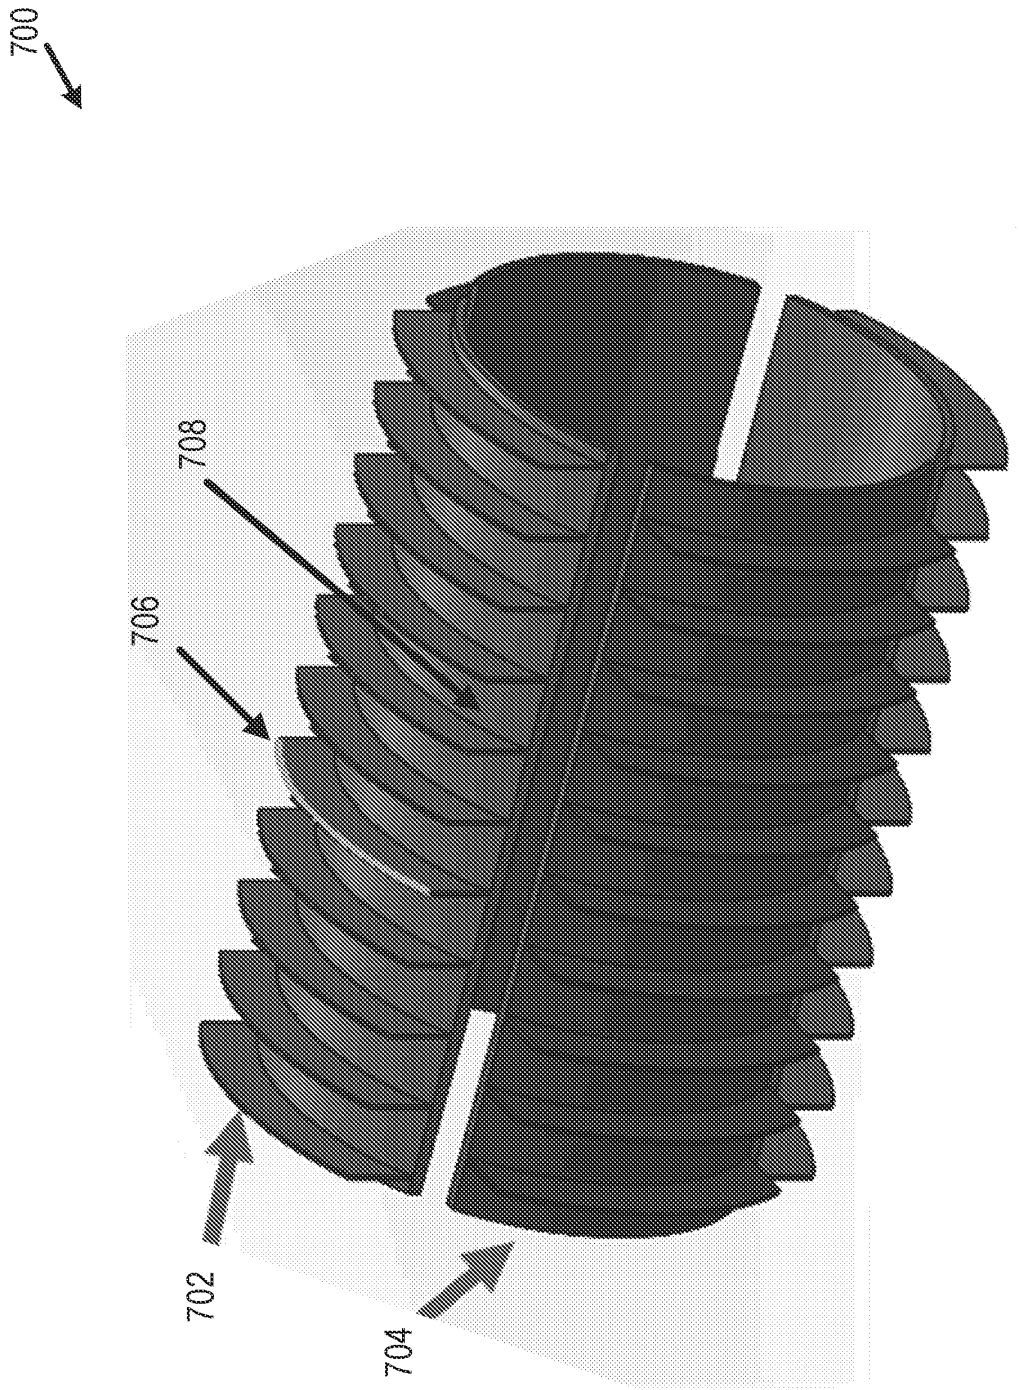


FIG. 7

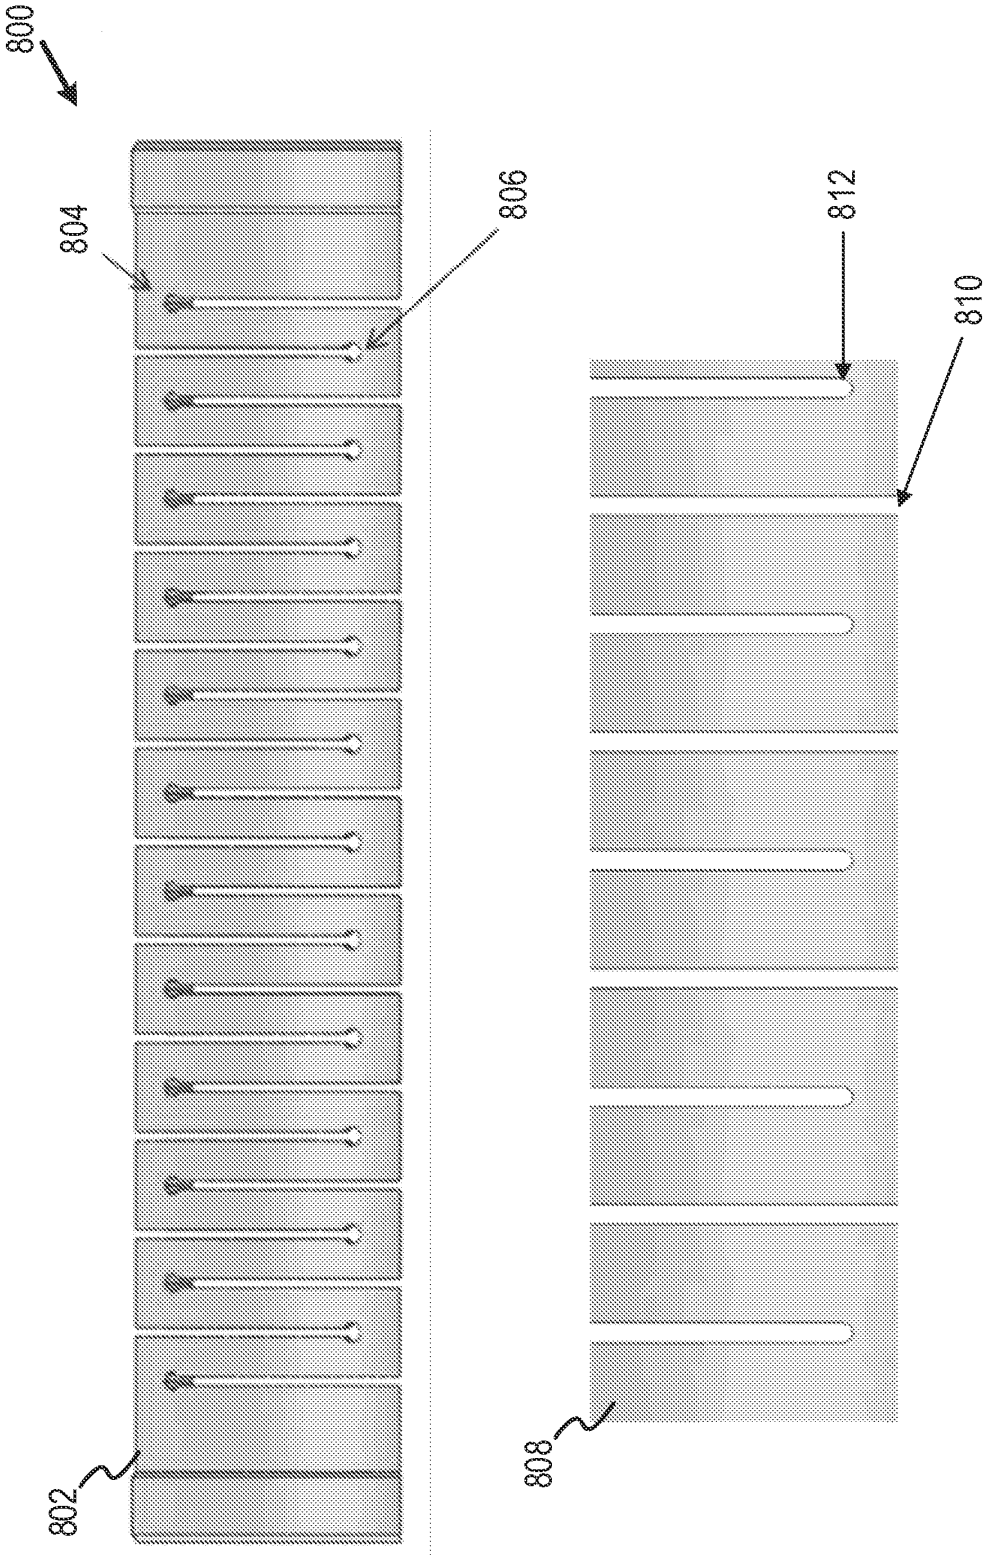


FIG. 8

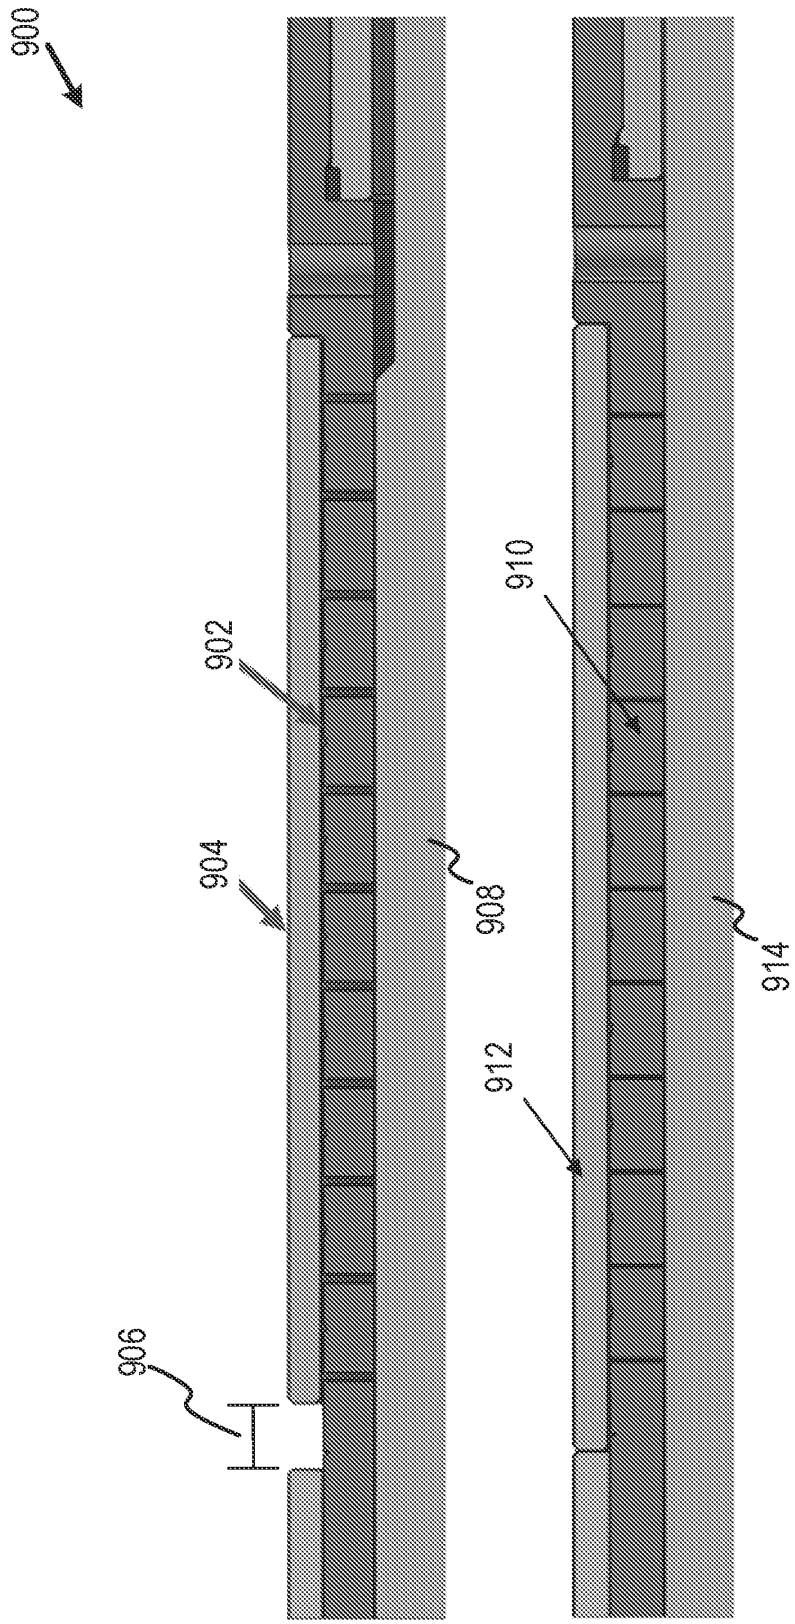


FIG. 9

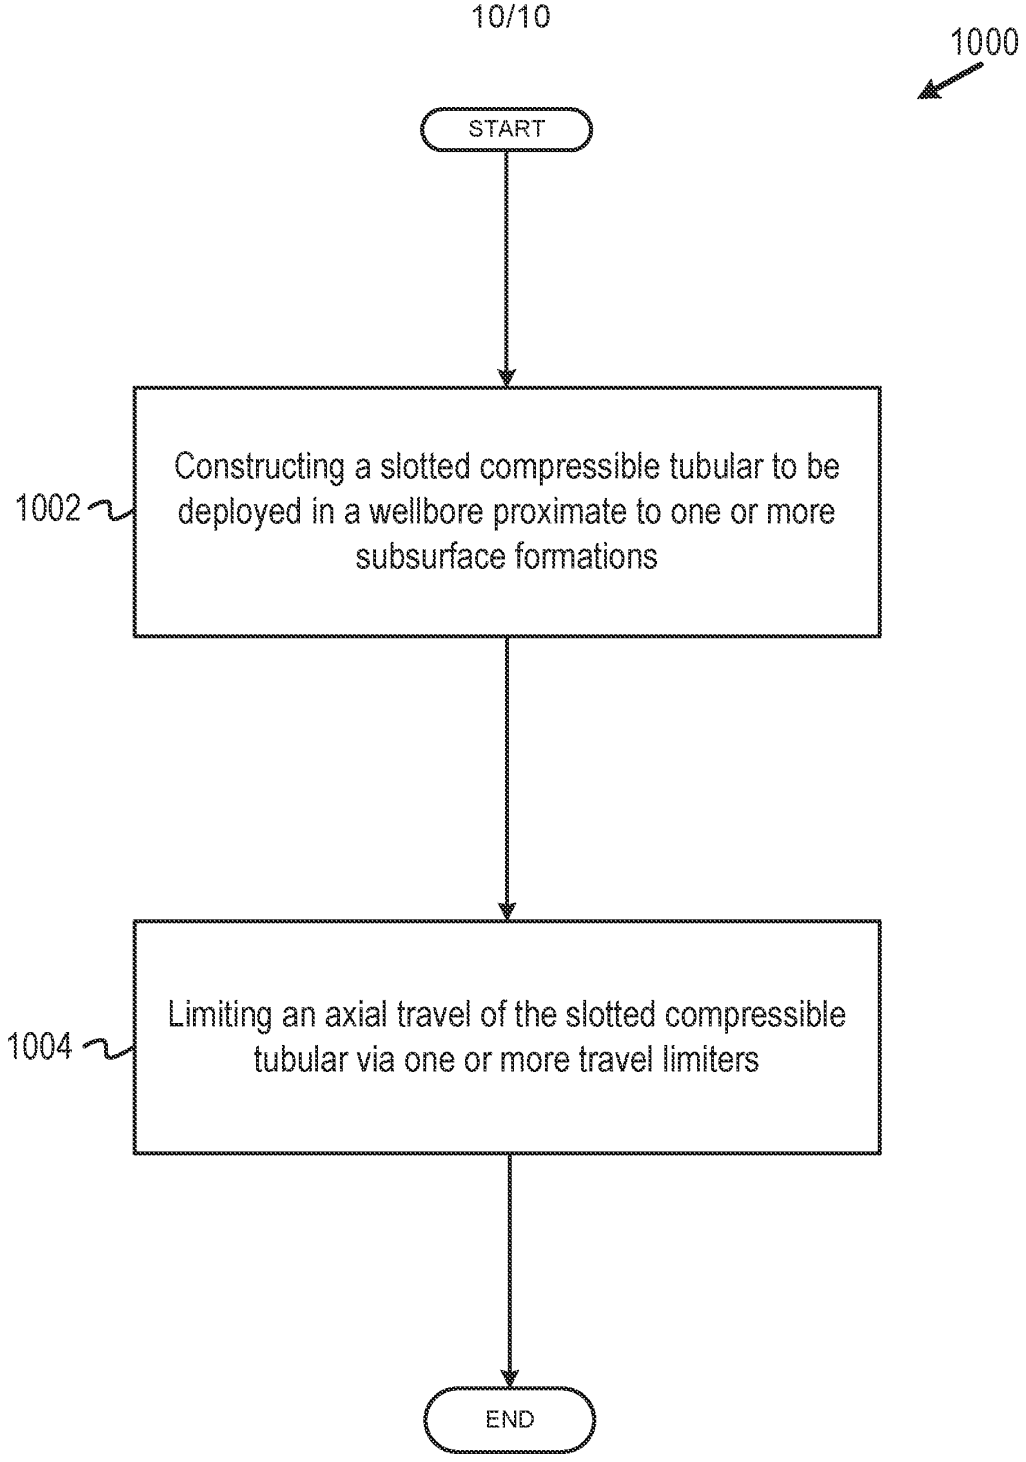

1000
START
Constructing a slotted compressible tubular to be deployed in a wellbore proximate to one or more subsurface formations
1002
Limiting an axial travel of the slotted compressible tubular via one or more travel limiters
1004
END

FIG. 10