

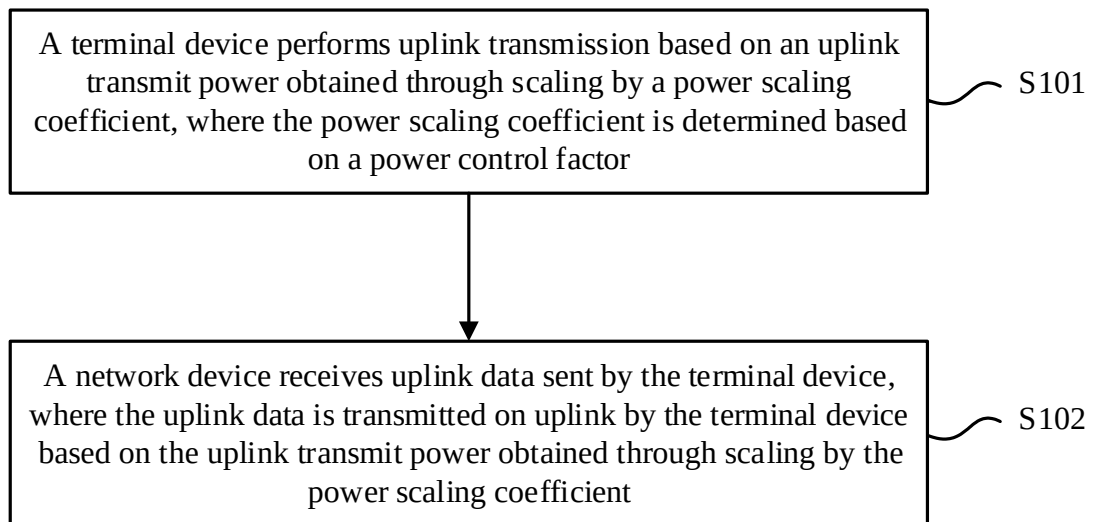


FIG. 1

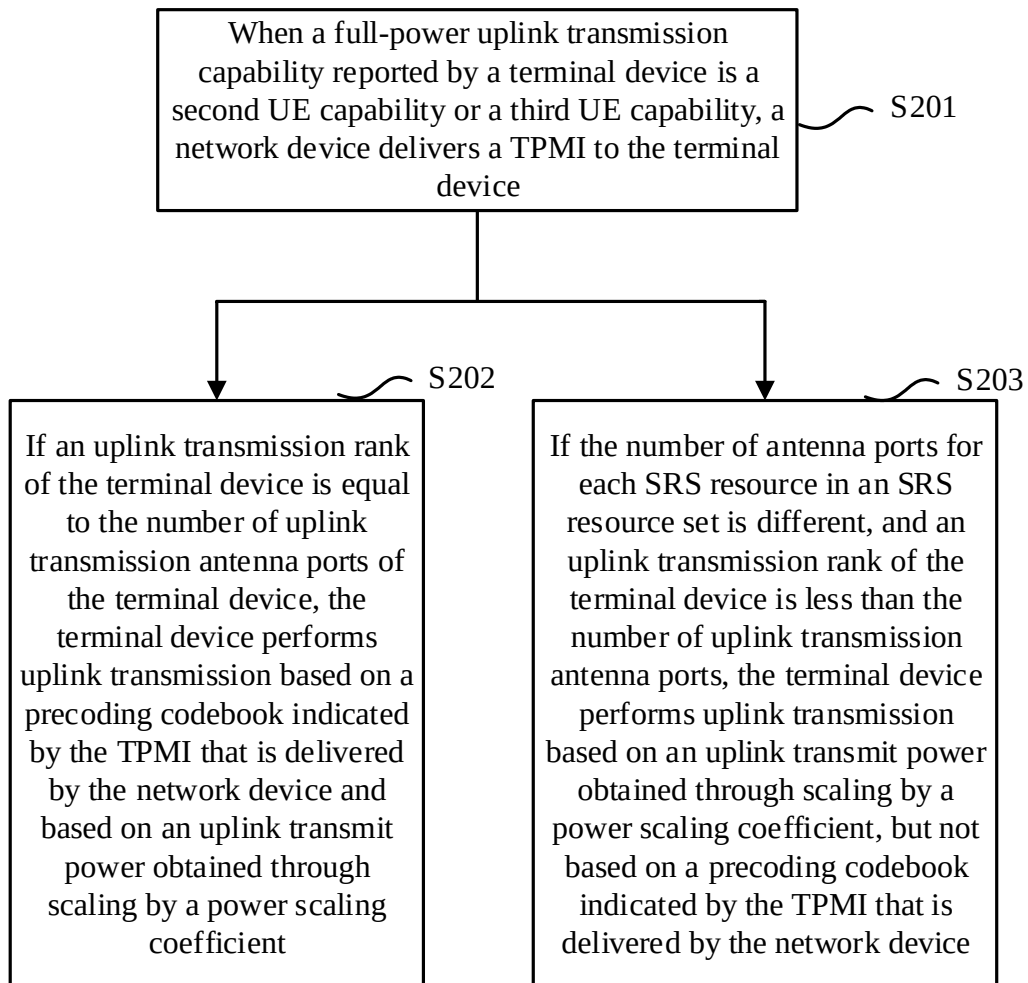


FIG. 2

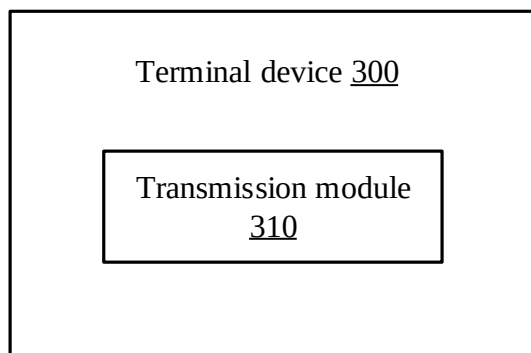


FIG. 3

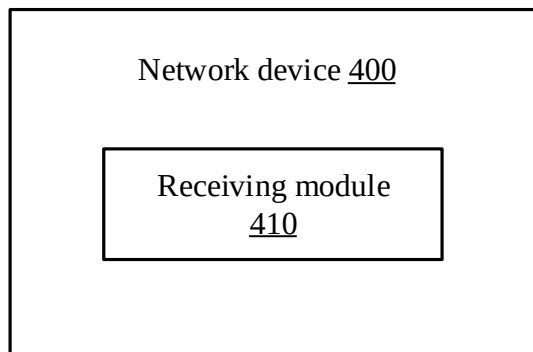


FIG. 4

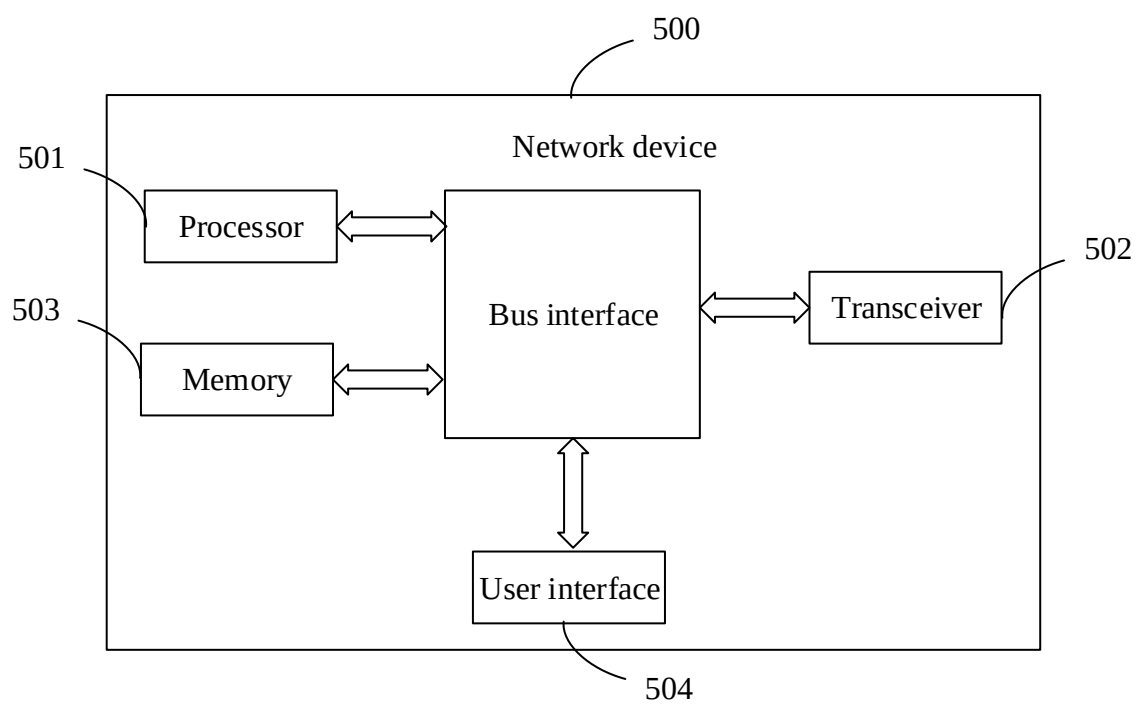


FIG. 5

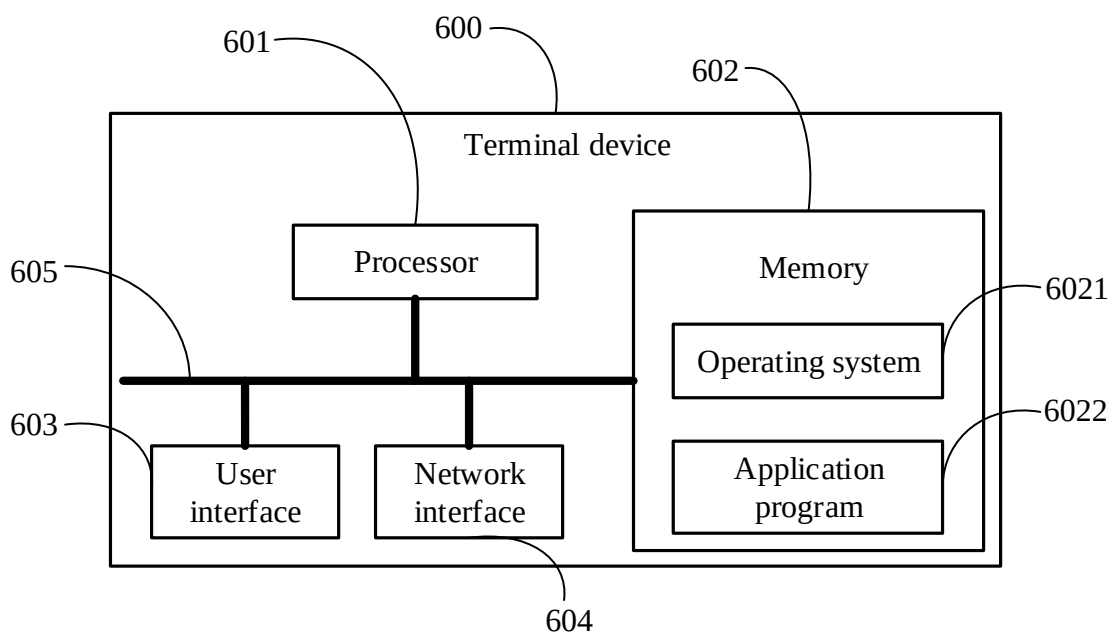


FIG. 6

If none of radio frequency branches of a terminal device supports full-power transmission or part of radio frequency branches supports full-power transmission, deliver a TPMI to the terminal device, where the delivered TPMI is used to indicate that the terminal device is to perform uplink transmission based on a precoding codebook that is determined based on an uplink transmission parameter

S701

FIG. 7