

FIG. 1

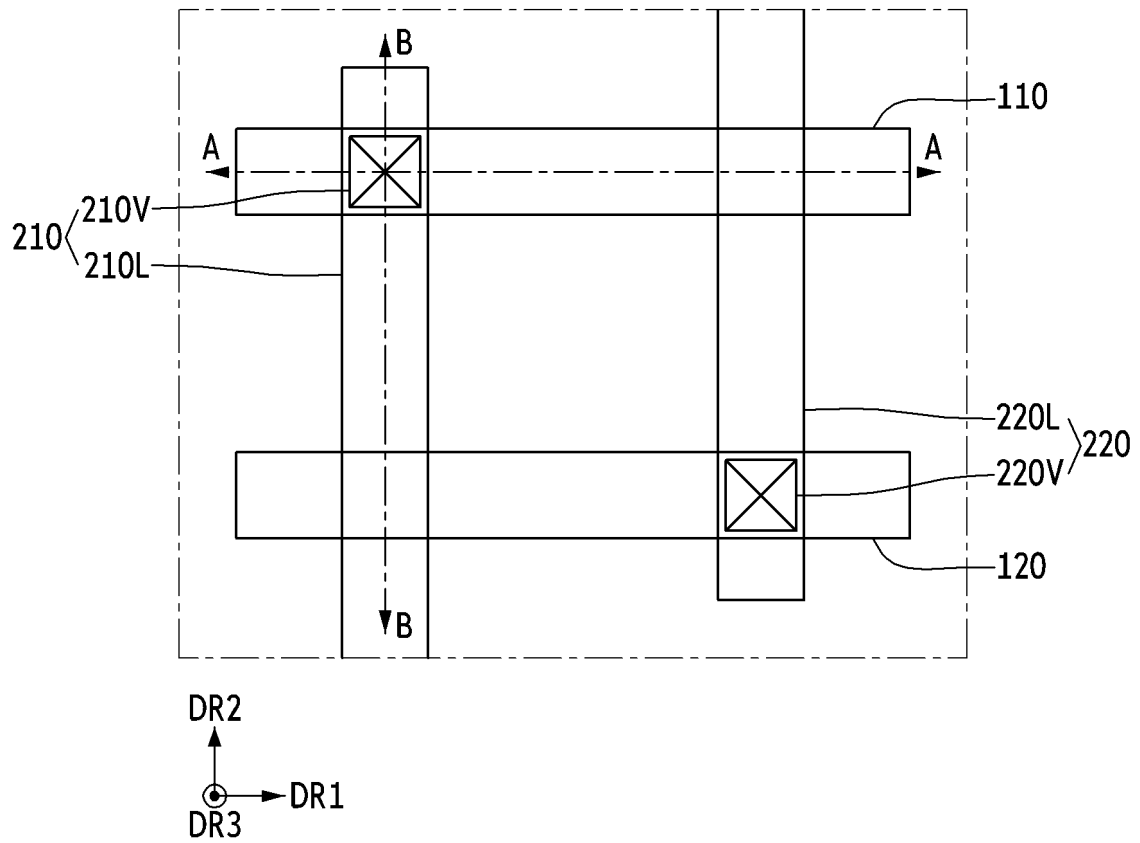


FIG. 2

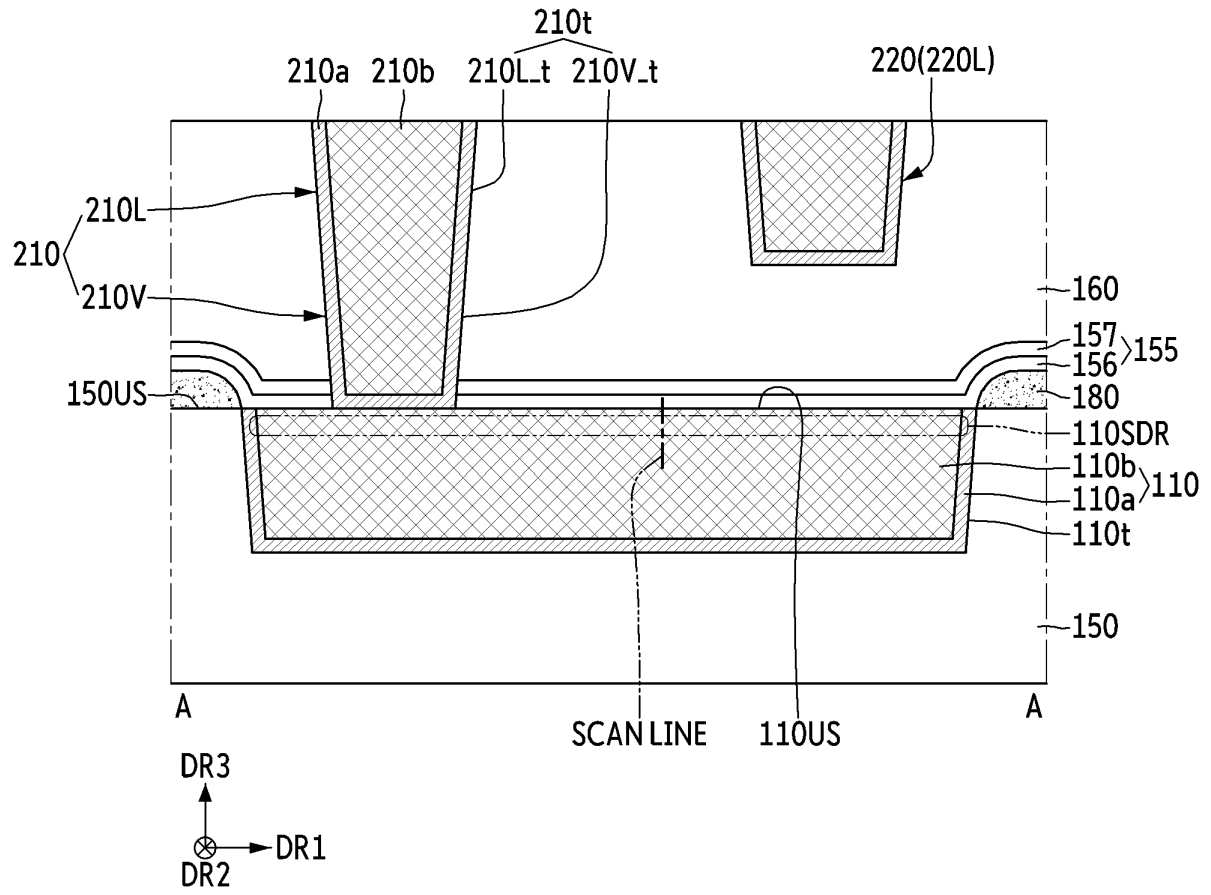


FIG. 3

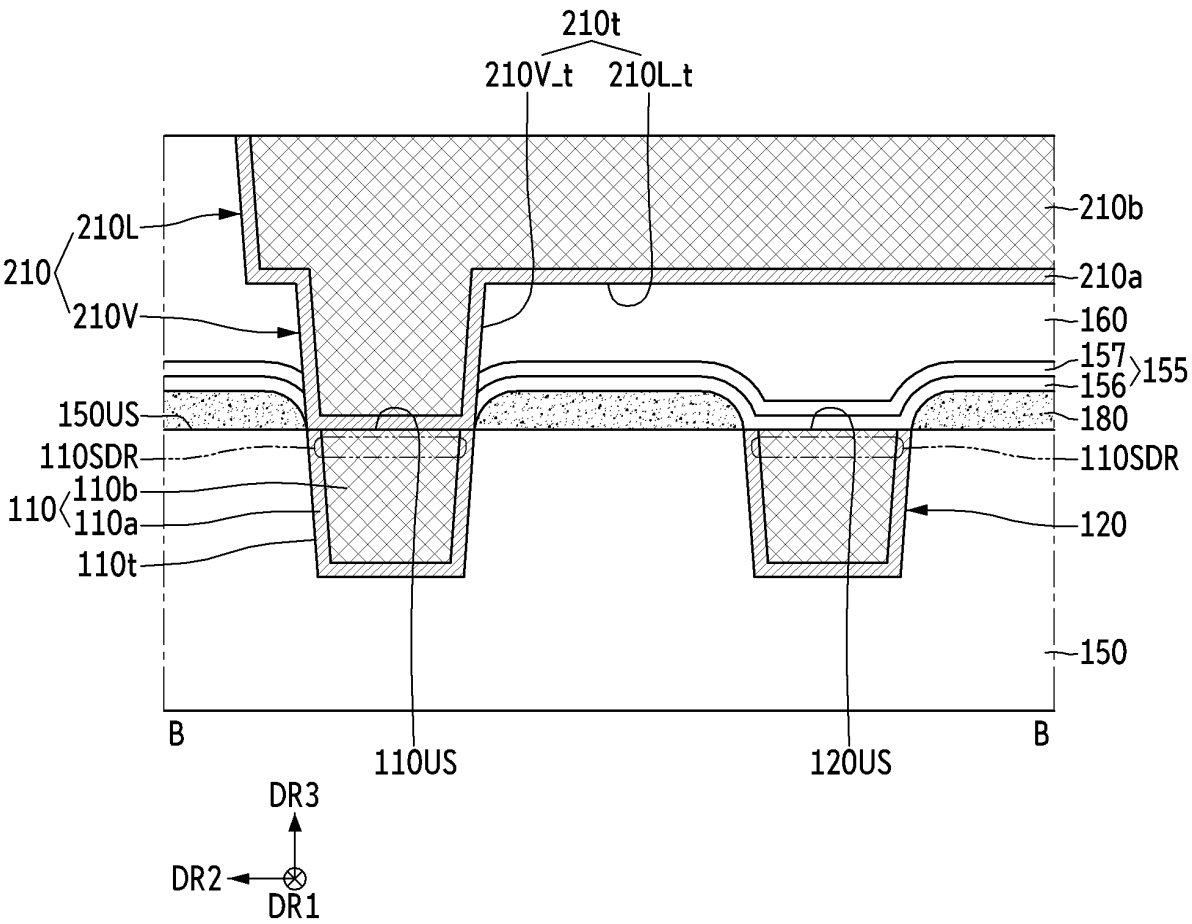


FIG. 4

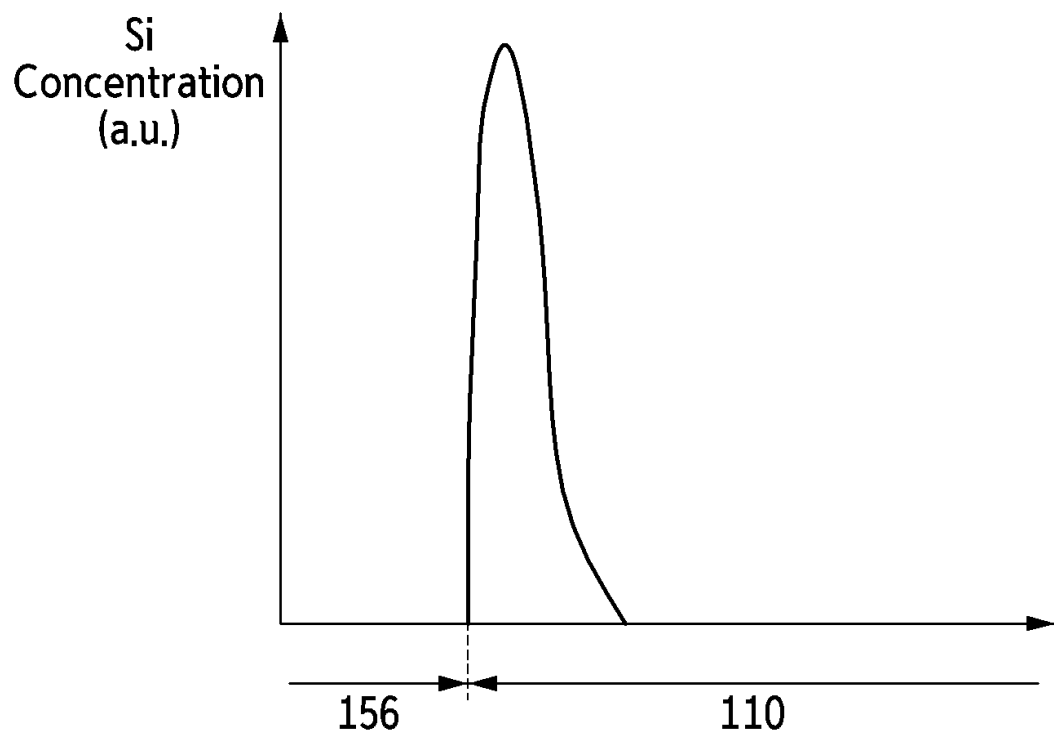


FIG. 5

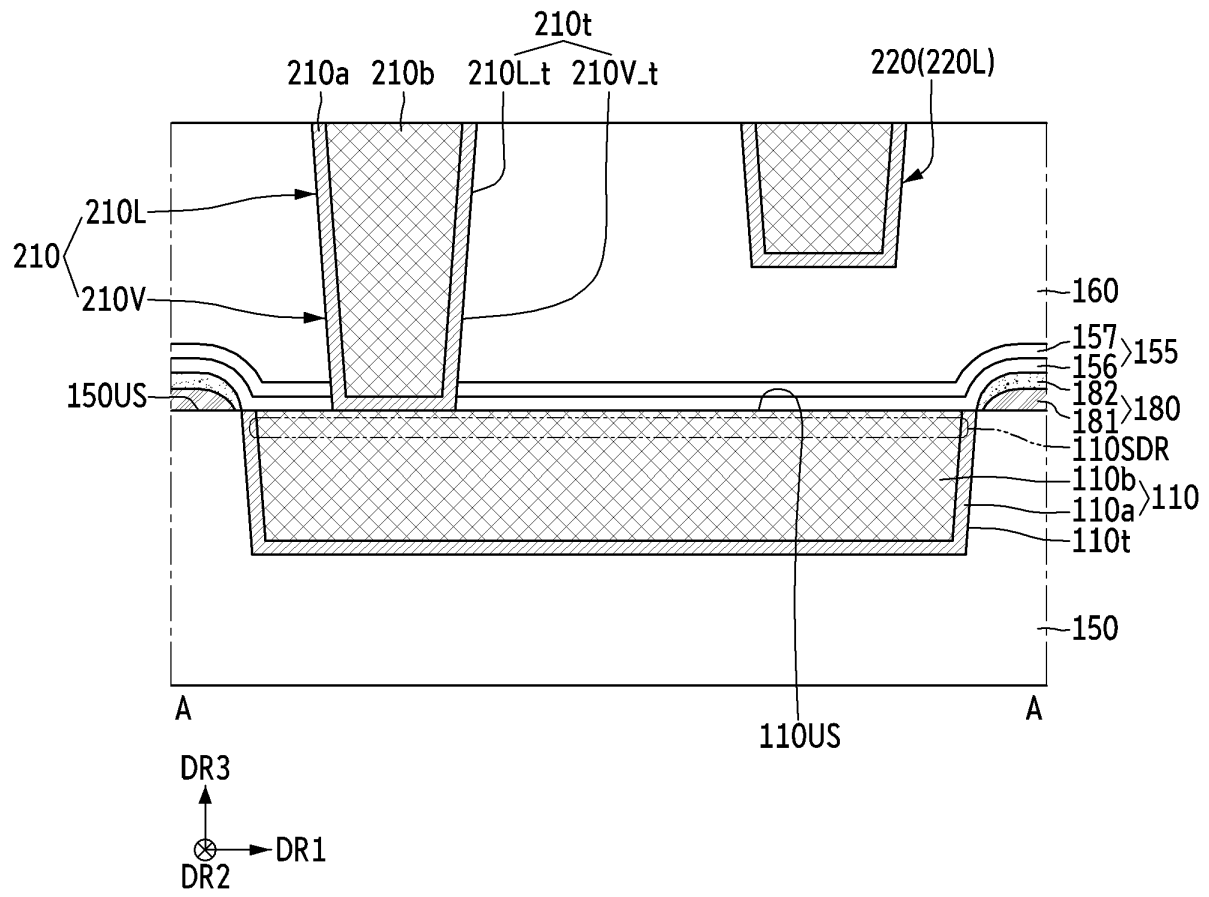


FIG. 6

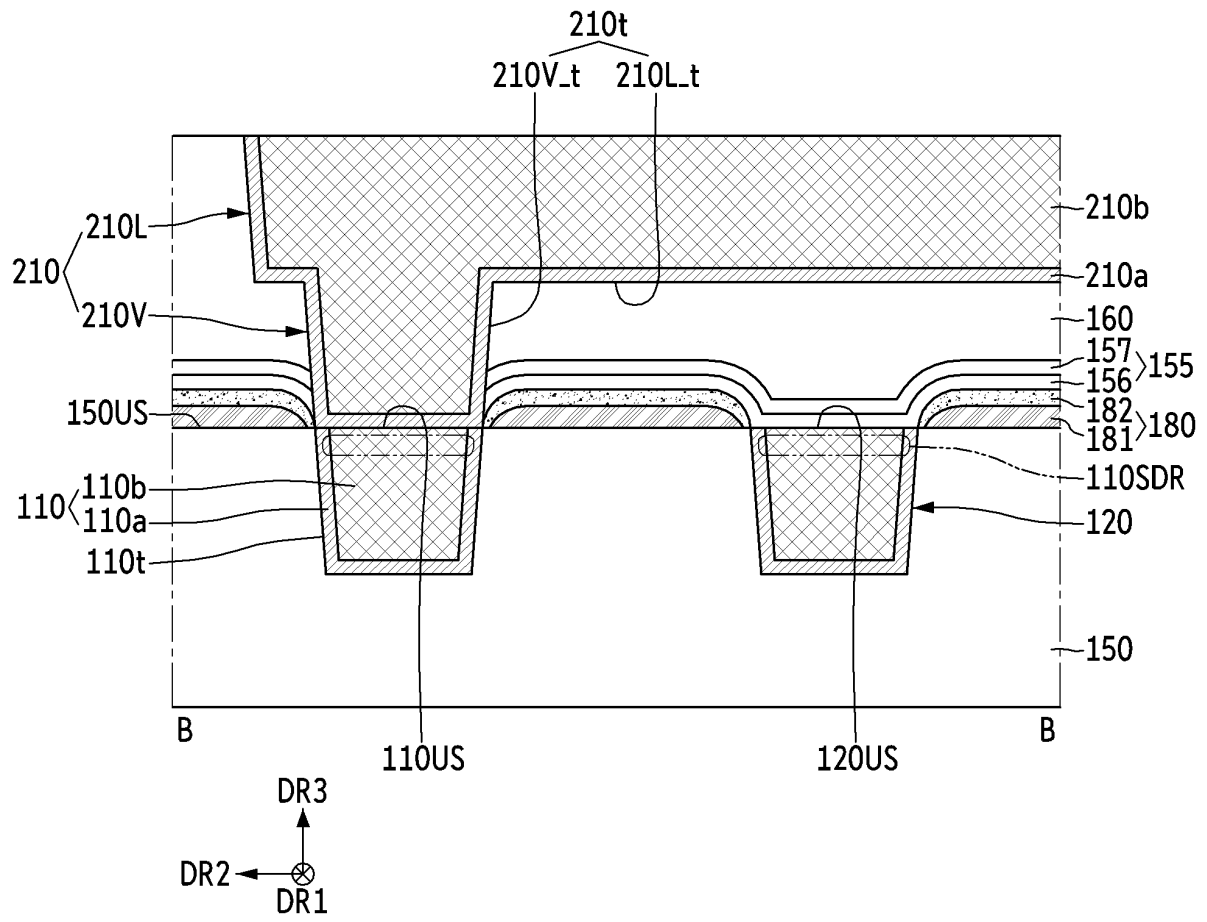


FIG. 7

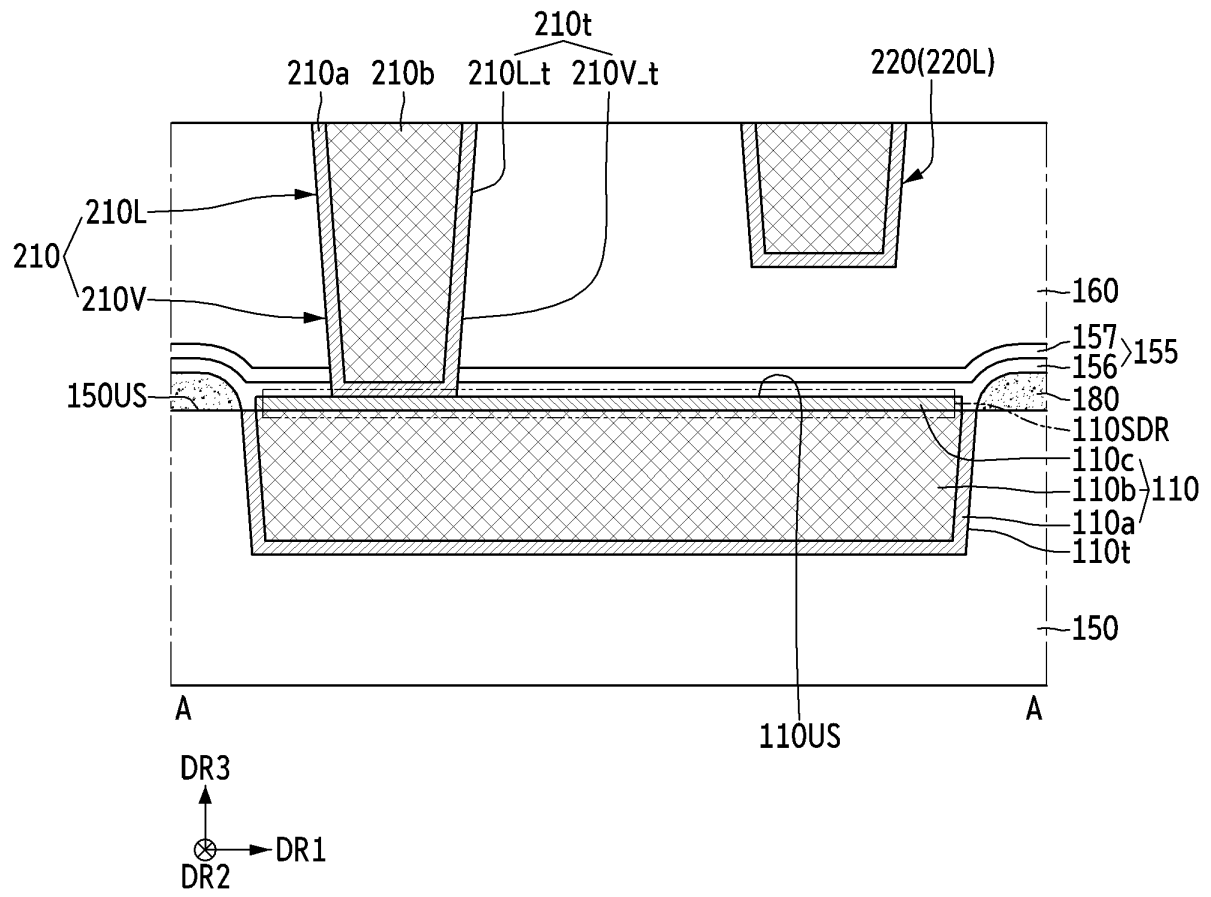


FIG. 8


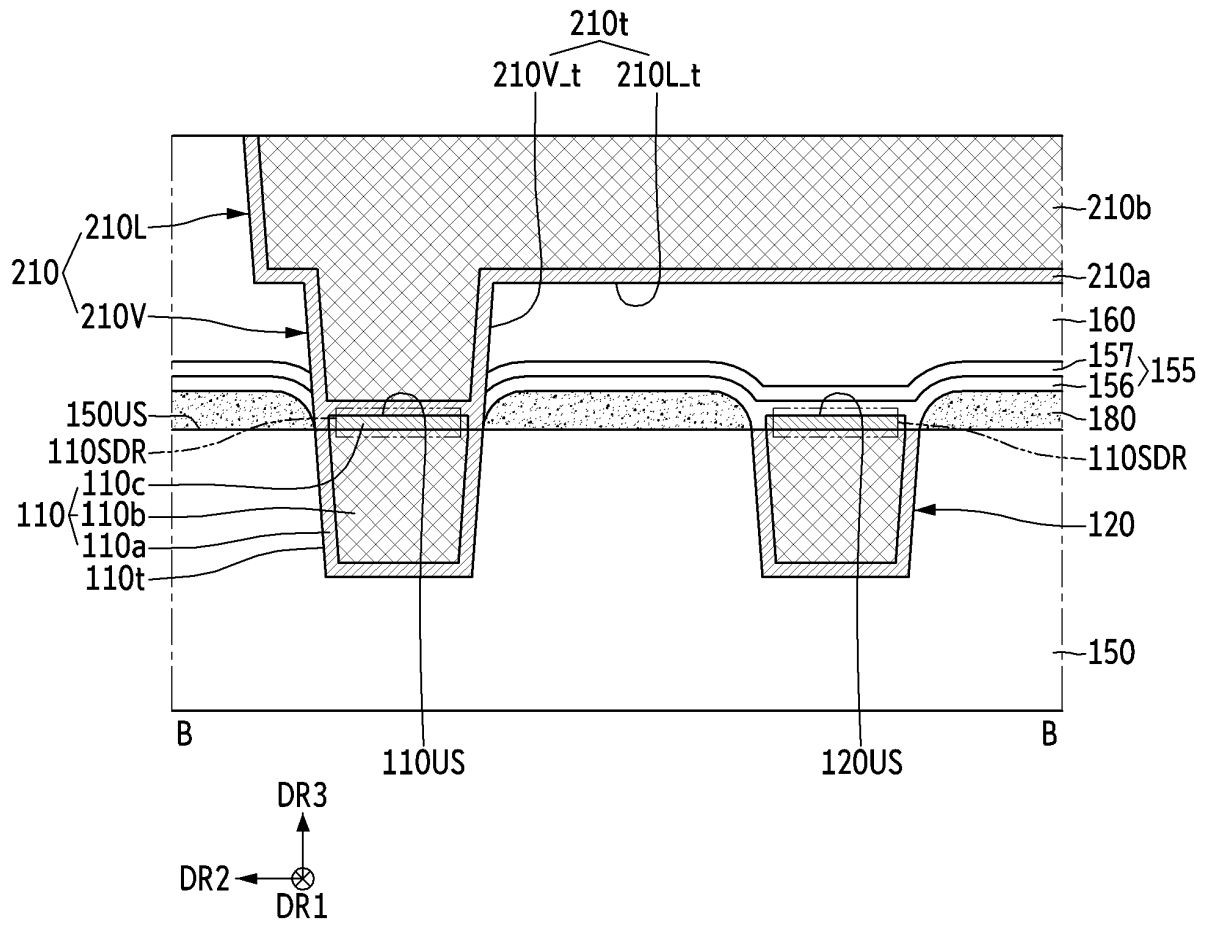


FIG. 9

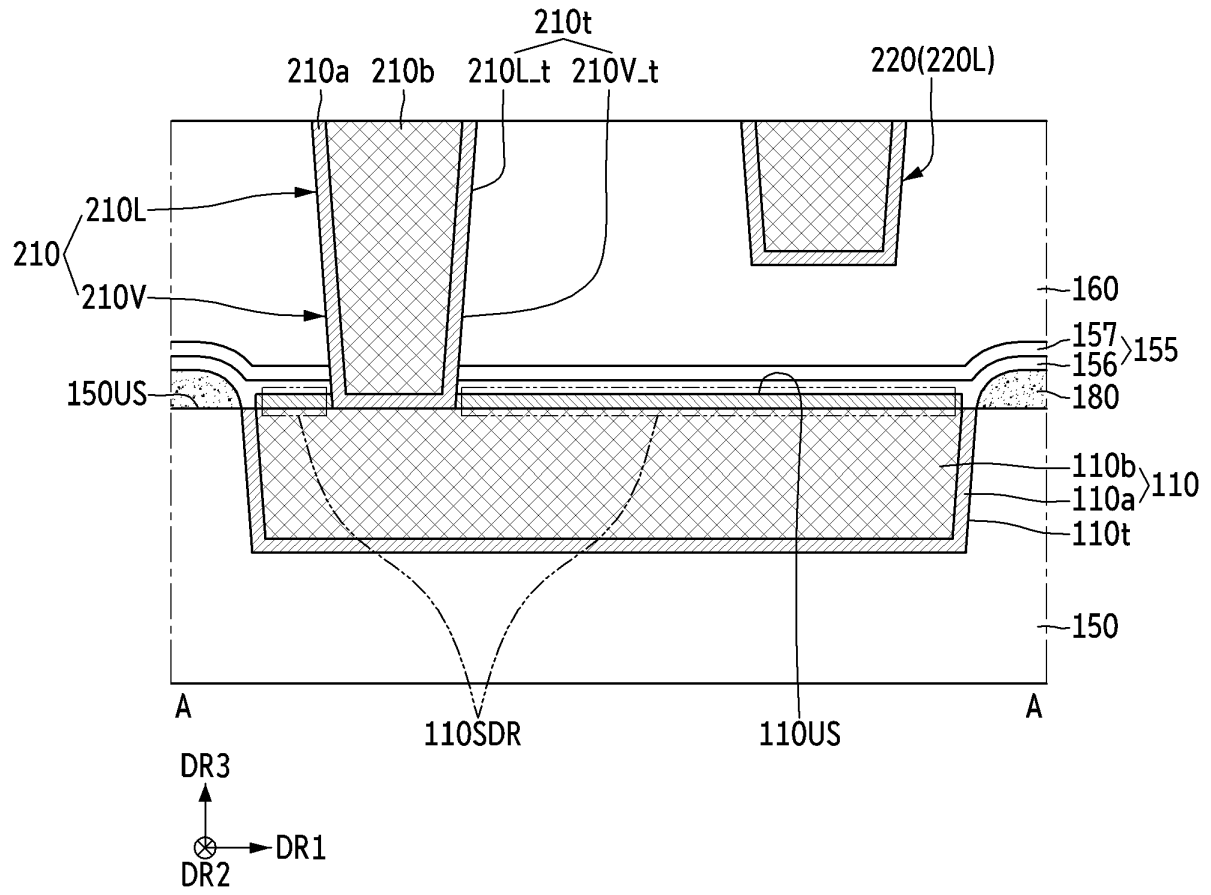

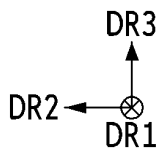
$$\begin{array}{cc} & 210t \\ & \diagdown \quad \diagup \\ 210V_t & 210L_t \end{array}$$


FIG. 11

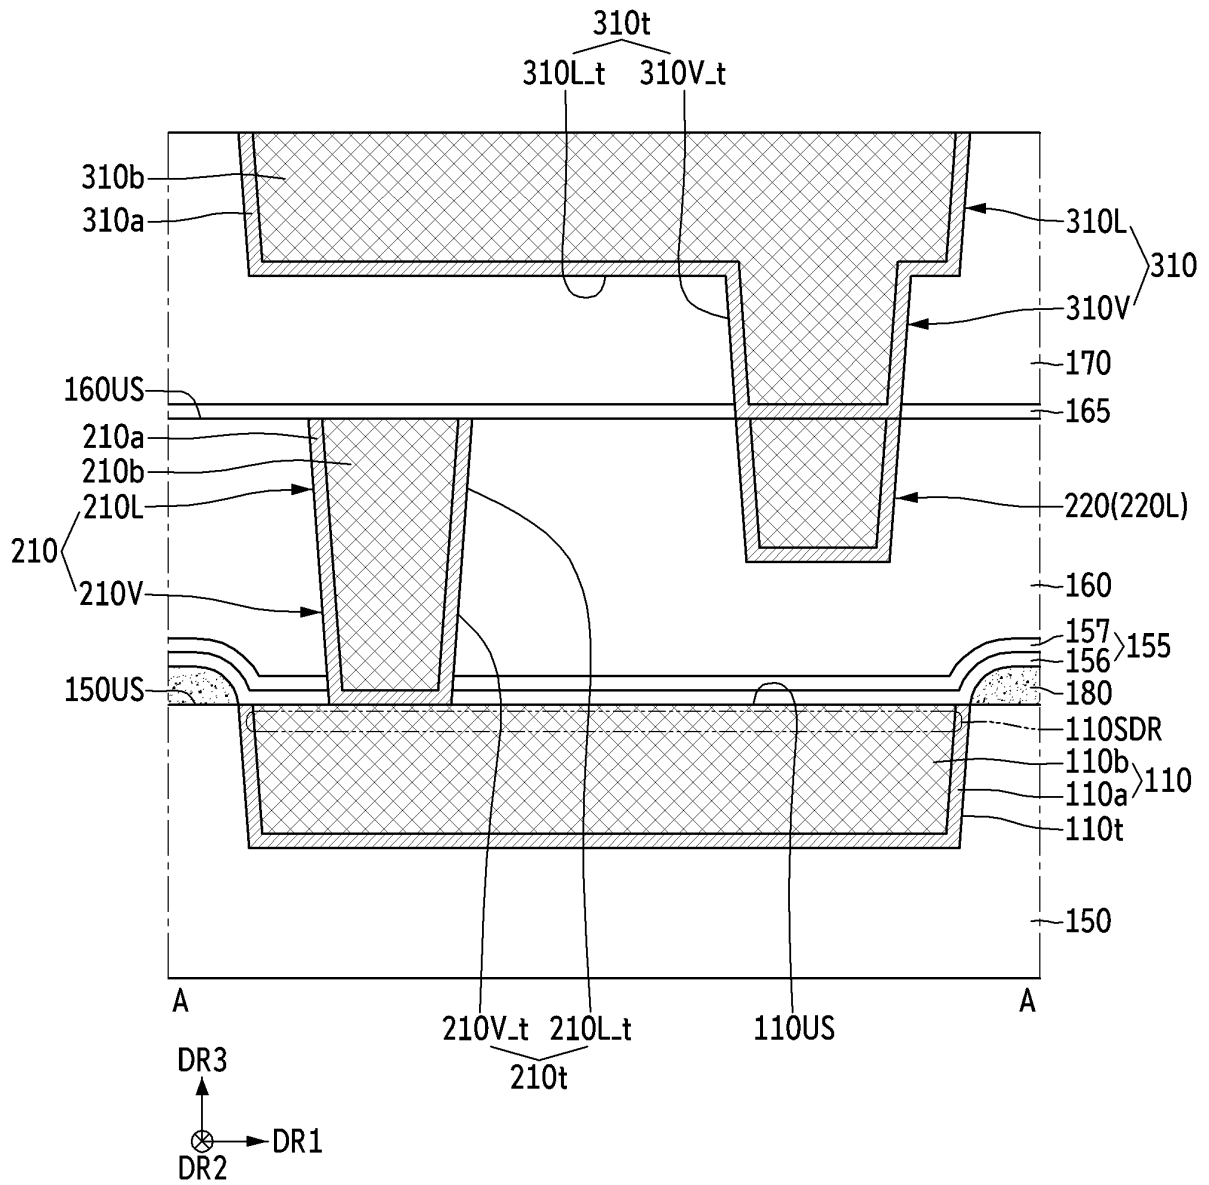


FIG. 12

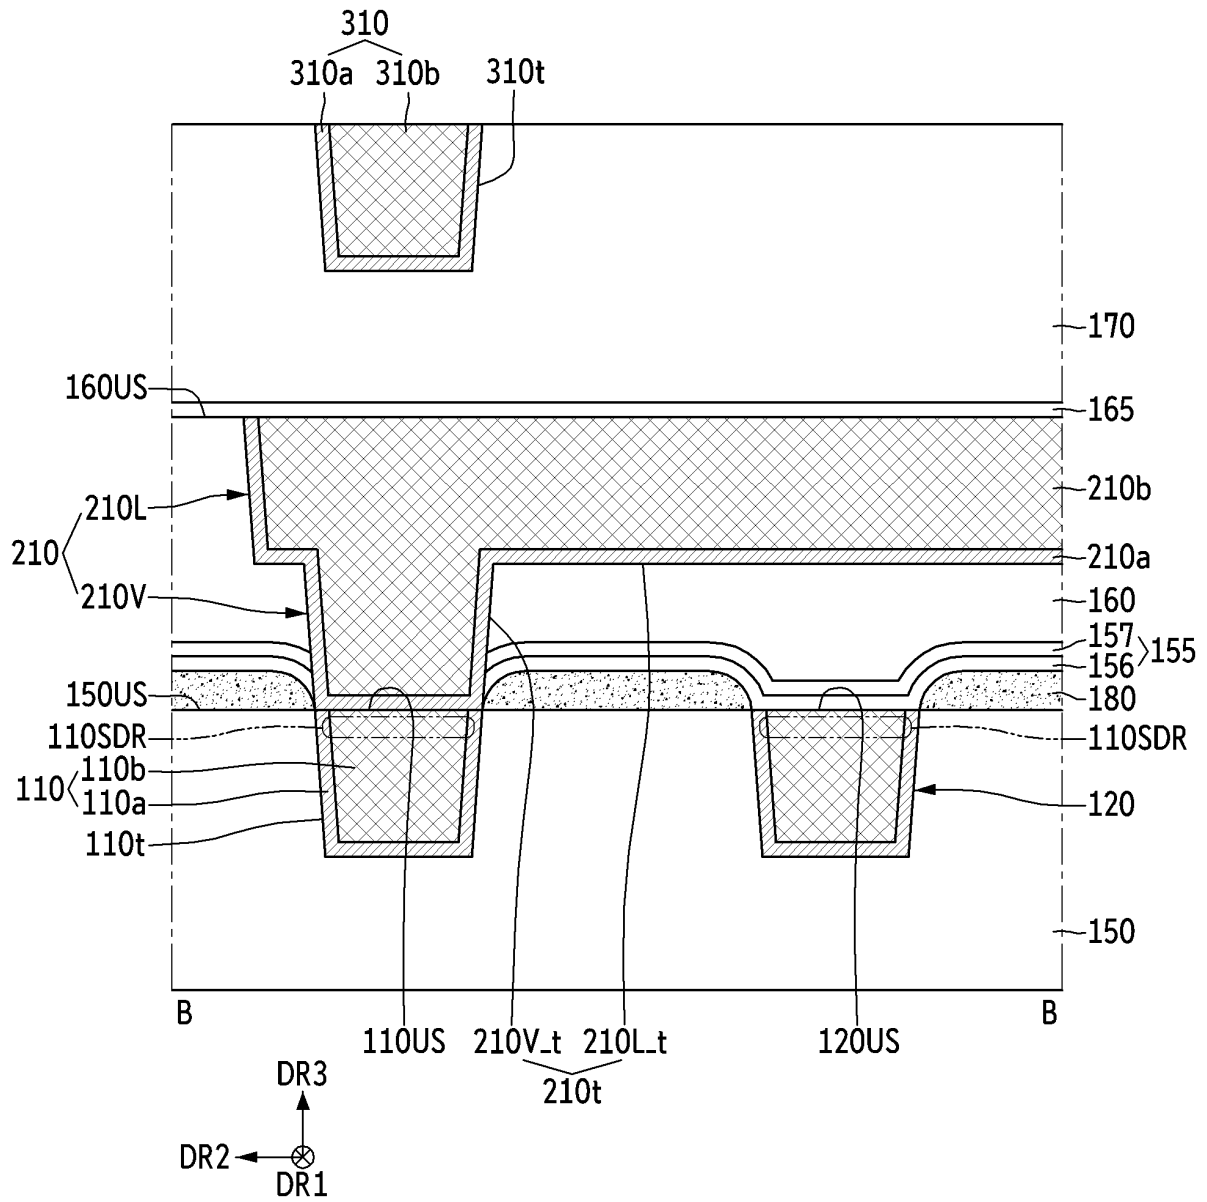


FIG. 13

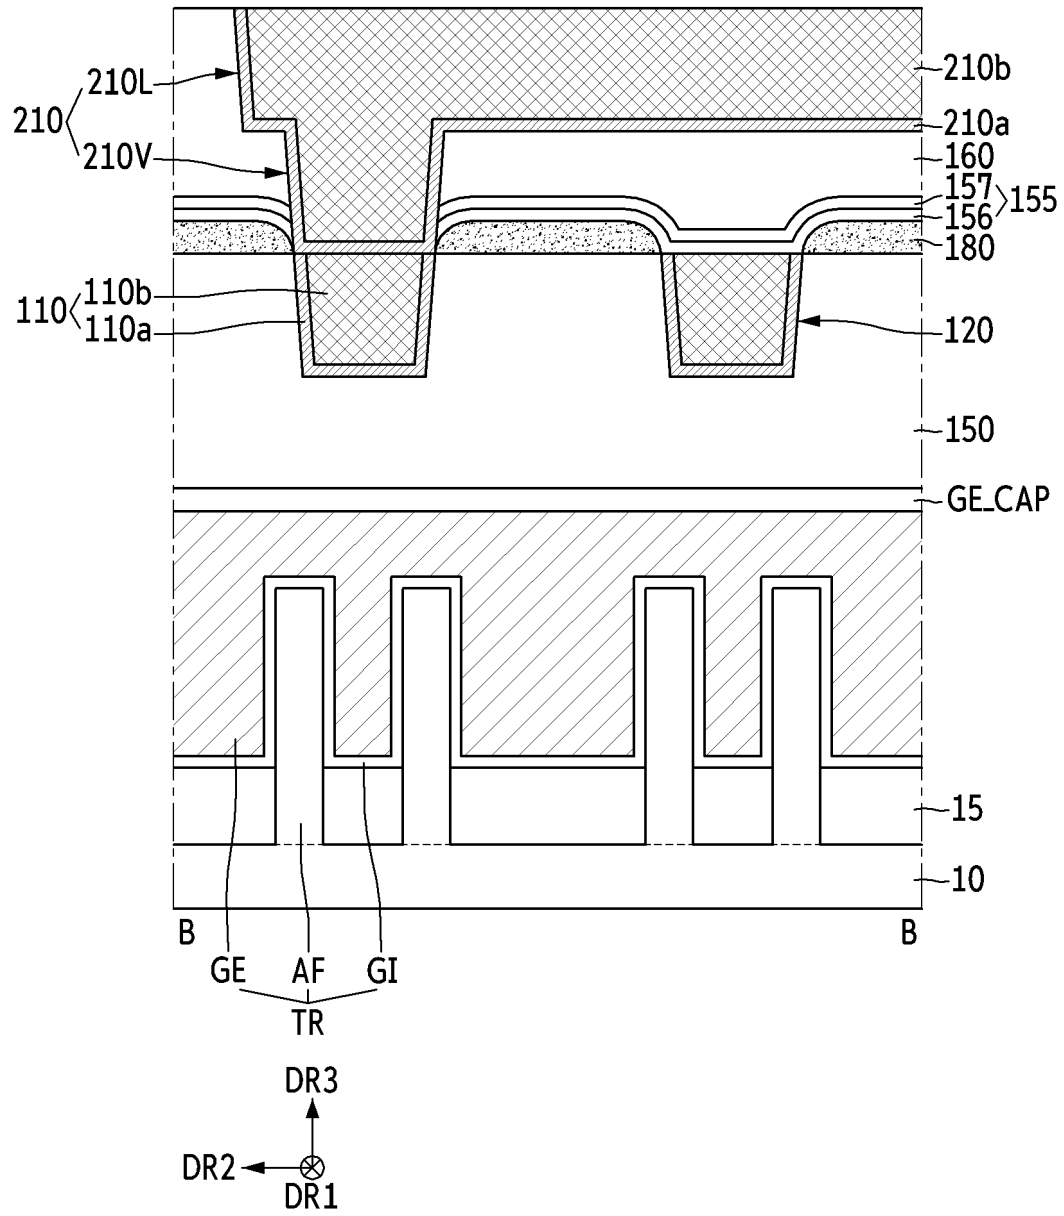


FIG. 14

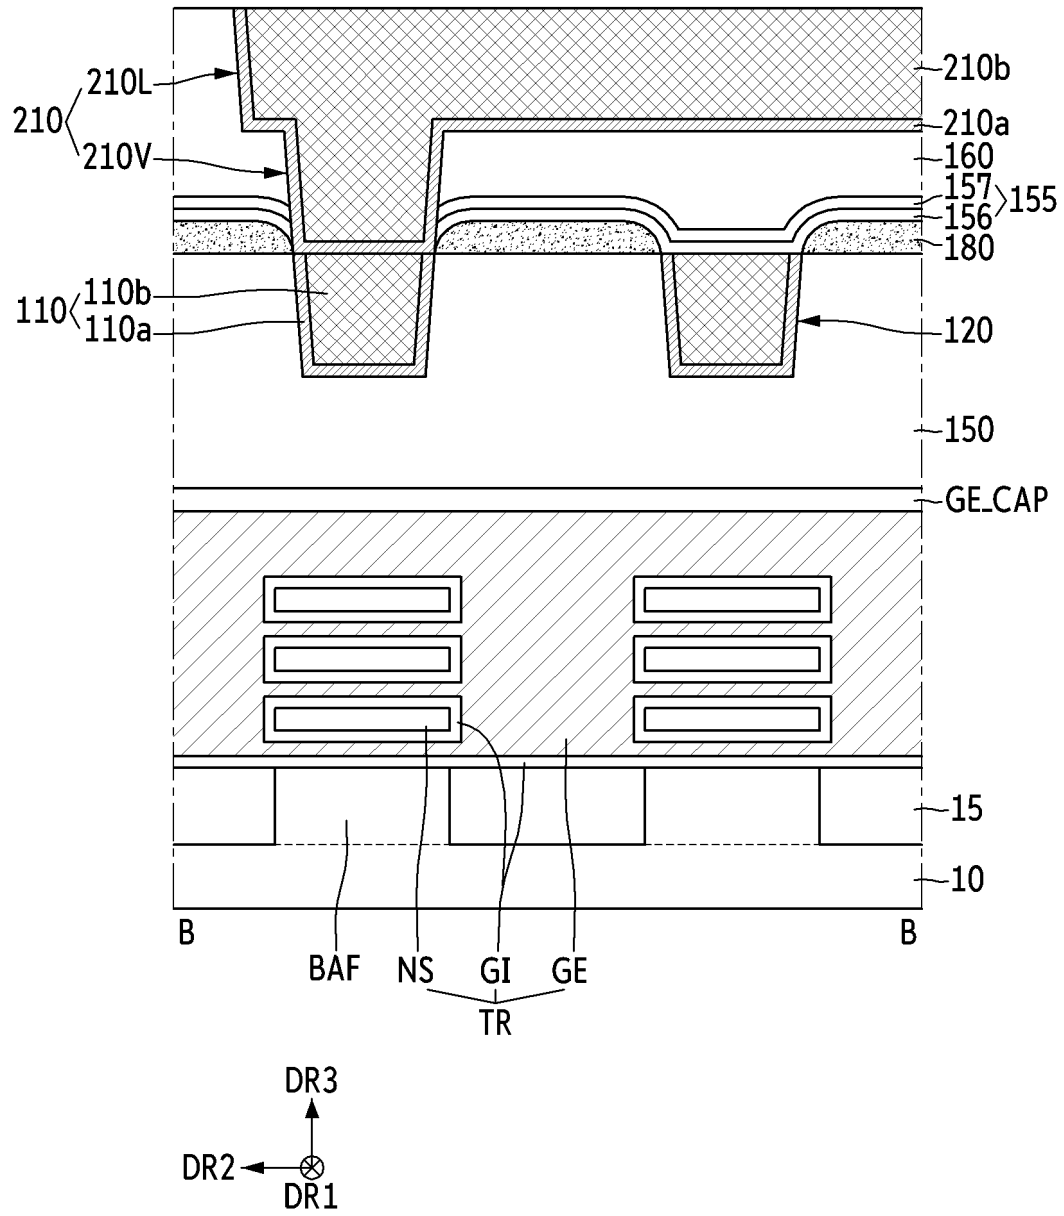


FIG. 15

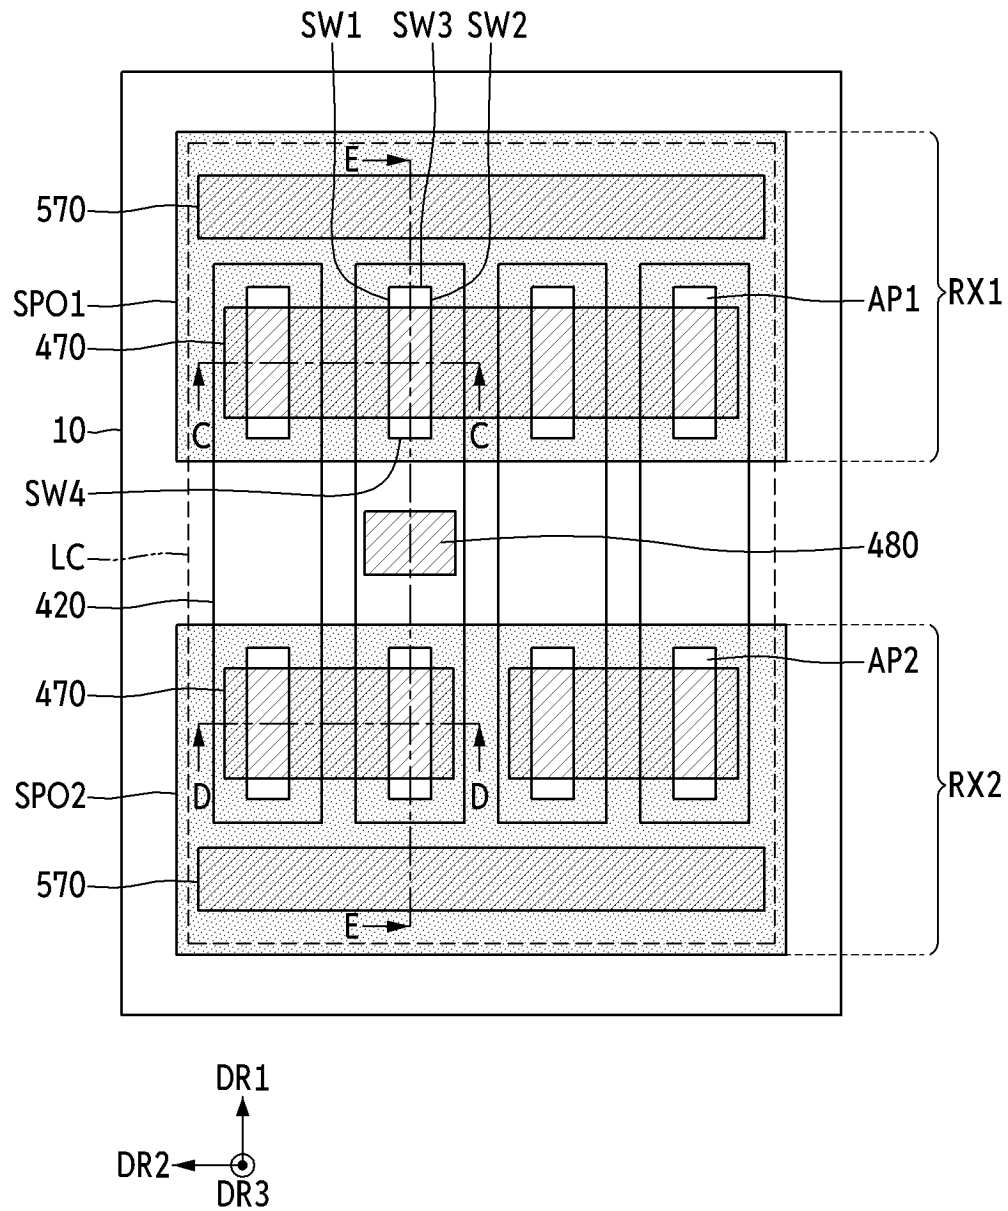


FIG. 16

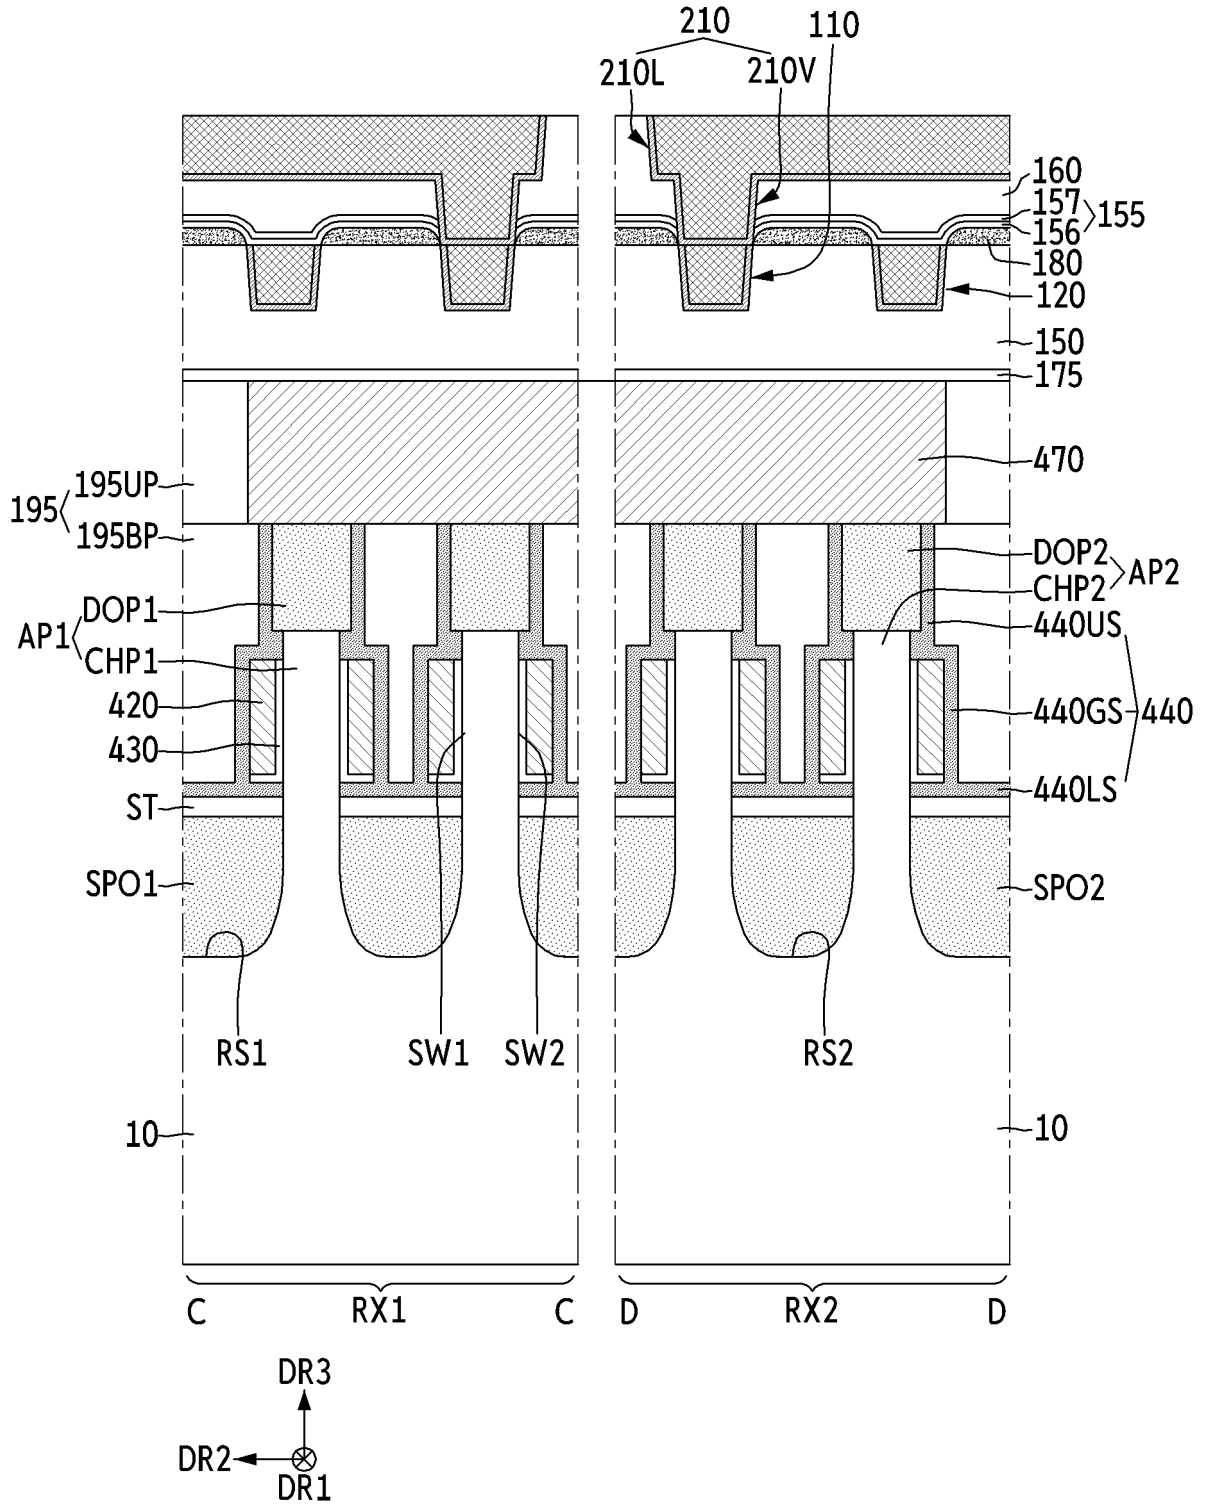


FIG. 17


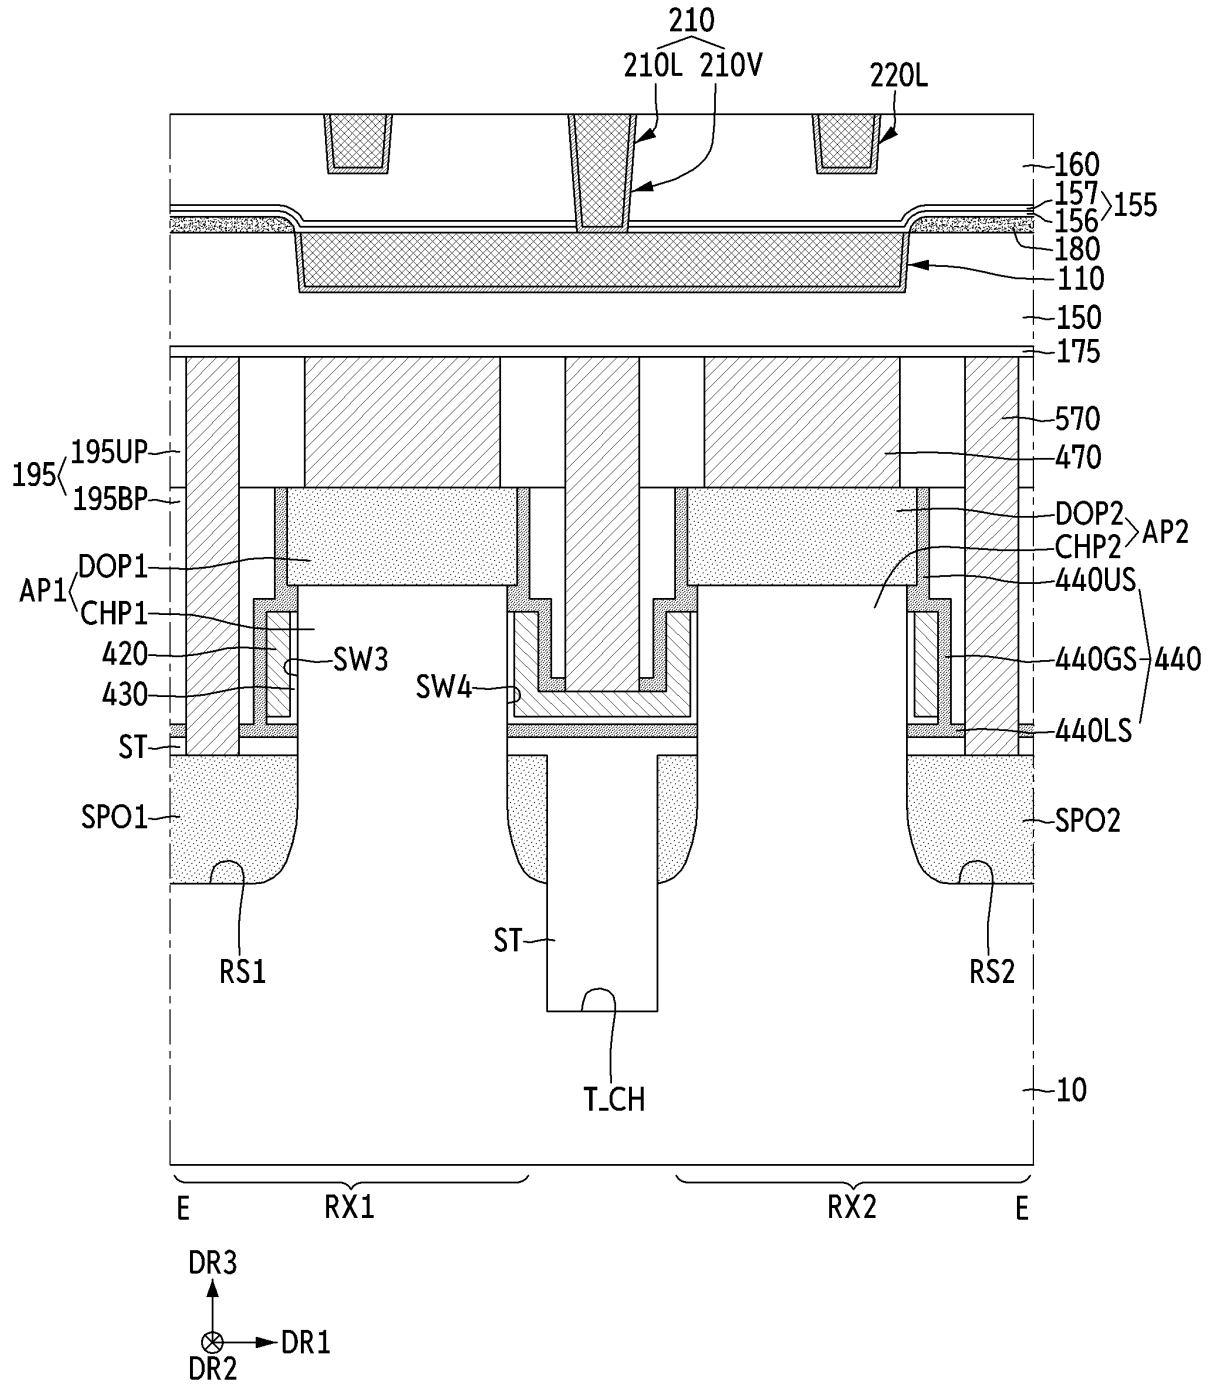


FIG. 18

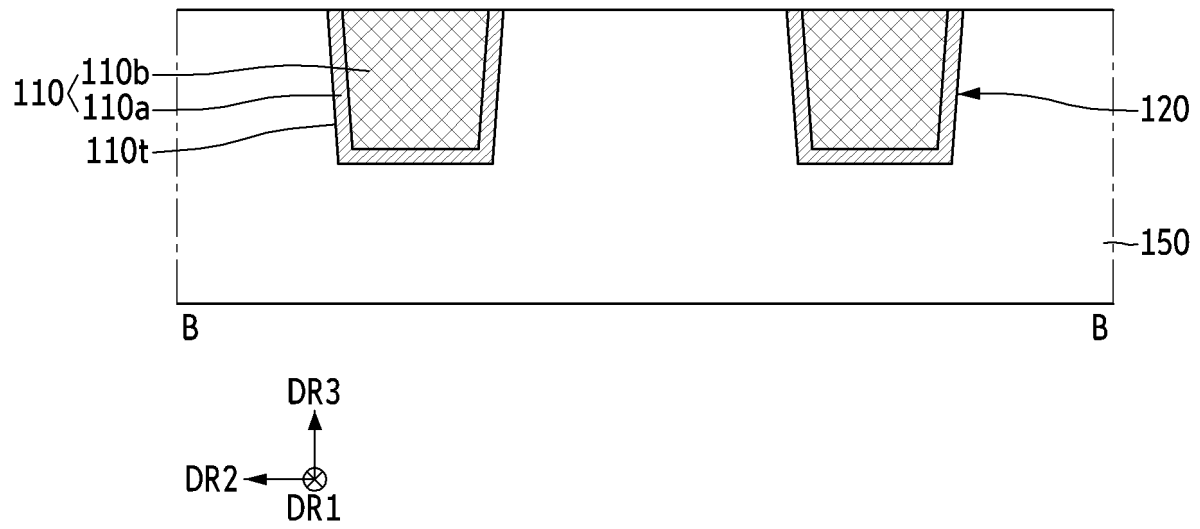

150US

110<

110b

110a

110t

110US

120US

120

150

B

B

DR3

DR2

DR1

FIG. 20

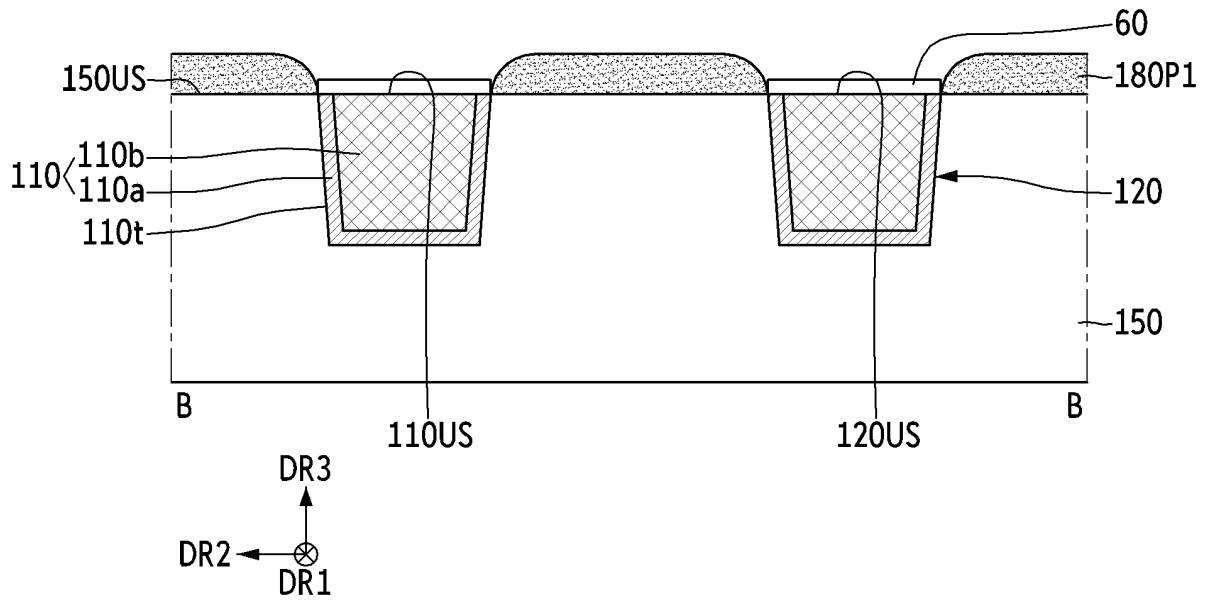


FIG. 21

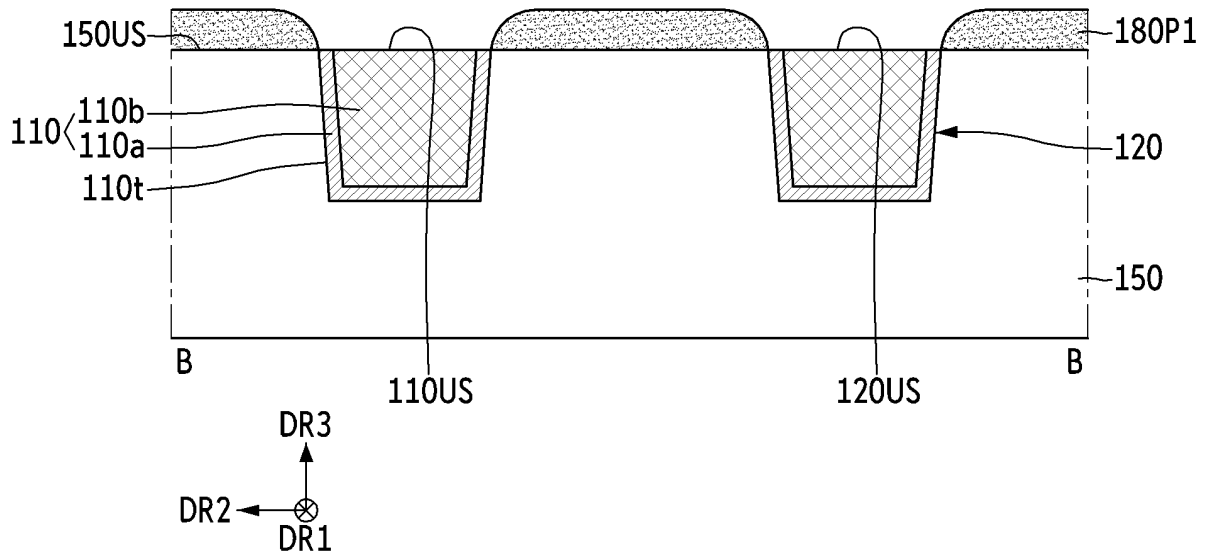


FIG. 22

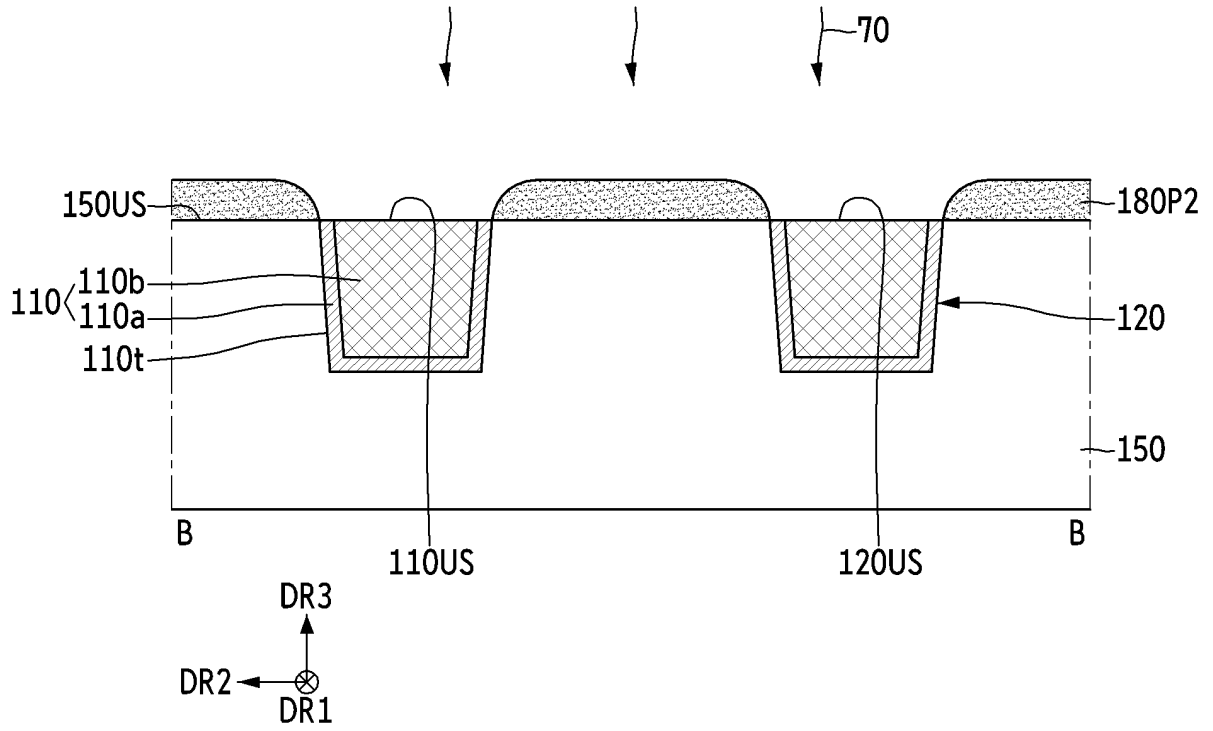


FIG. 23

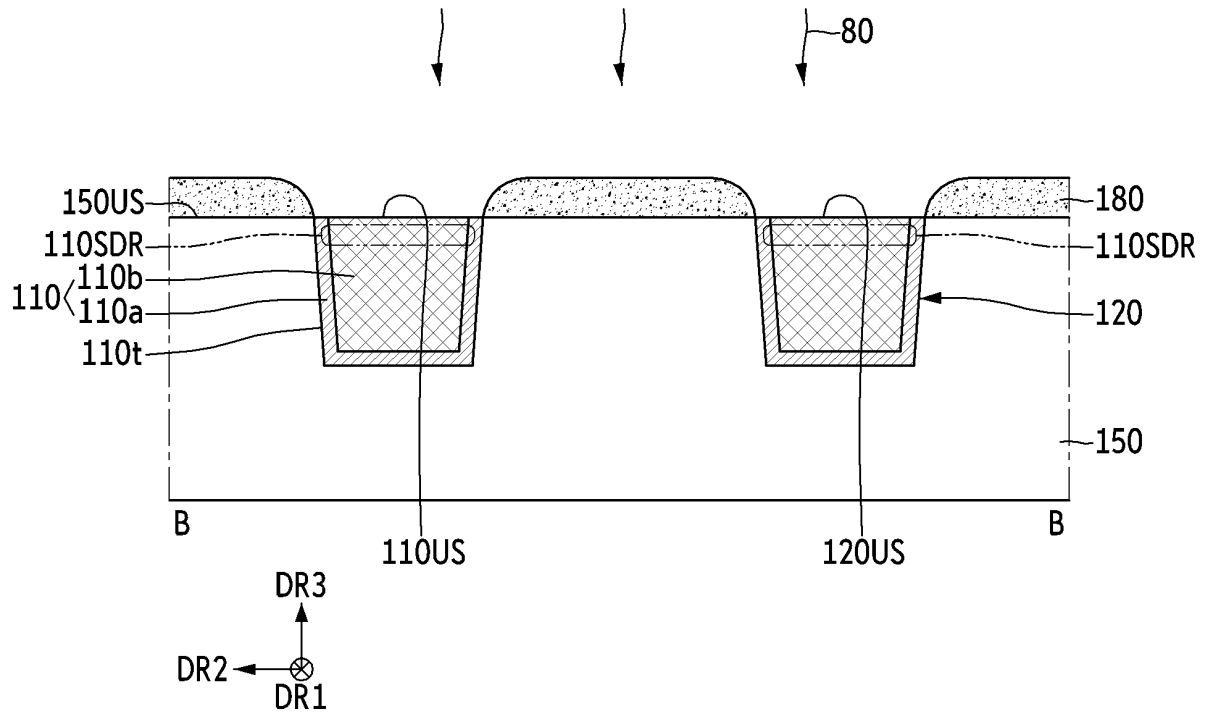


FIG. 24

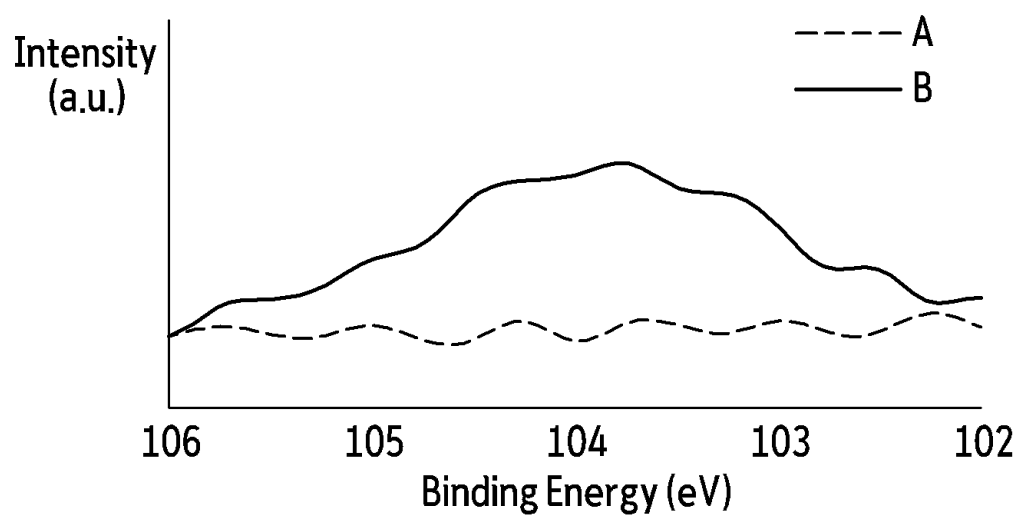


FIG. 25

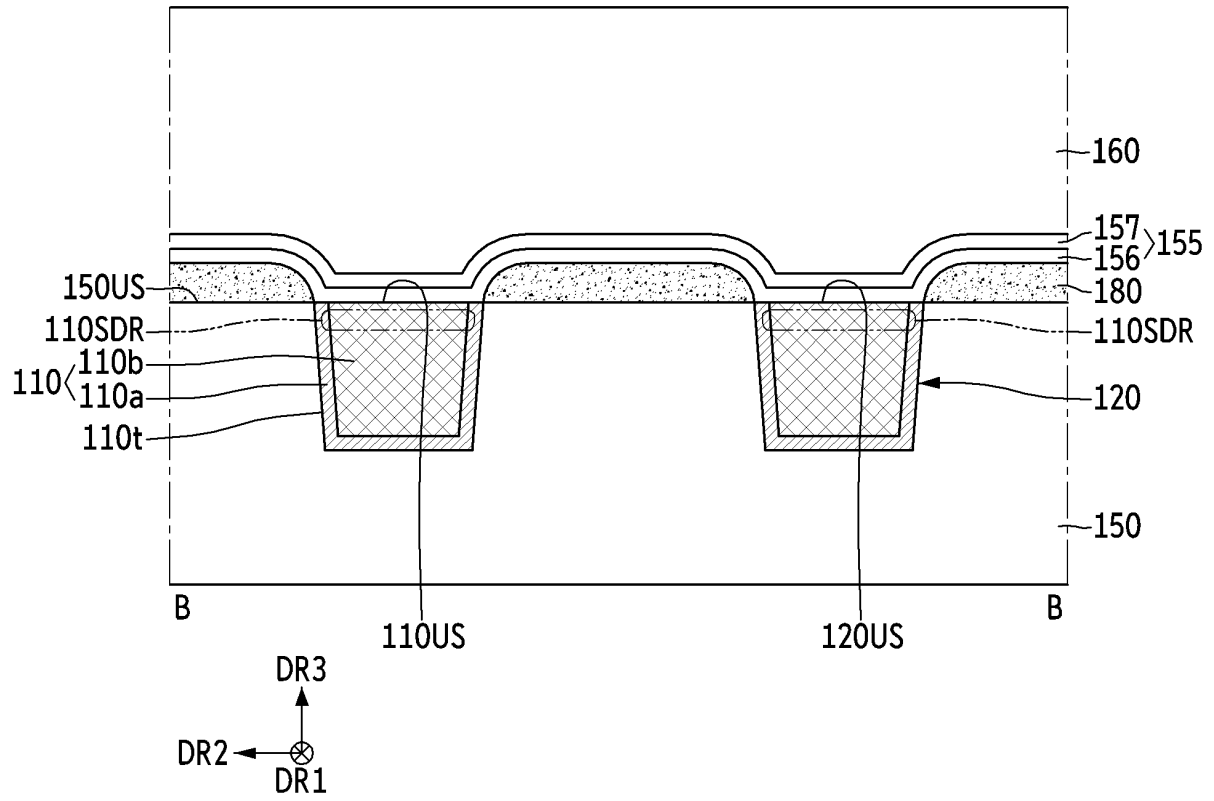


FIG. 26

