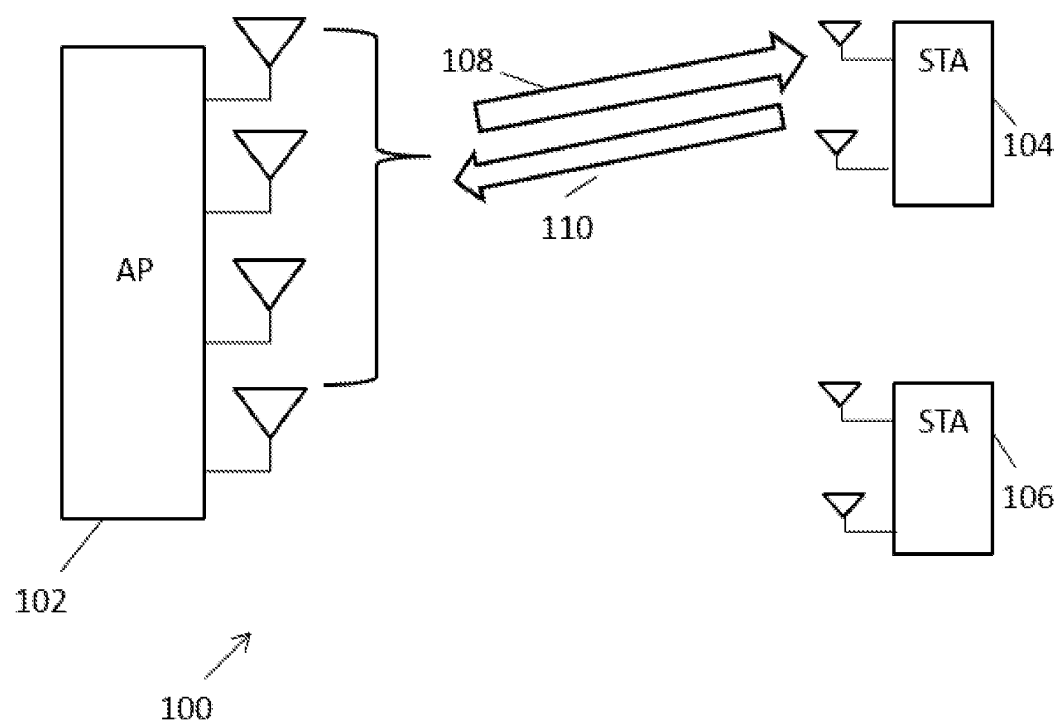
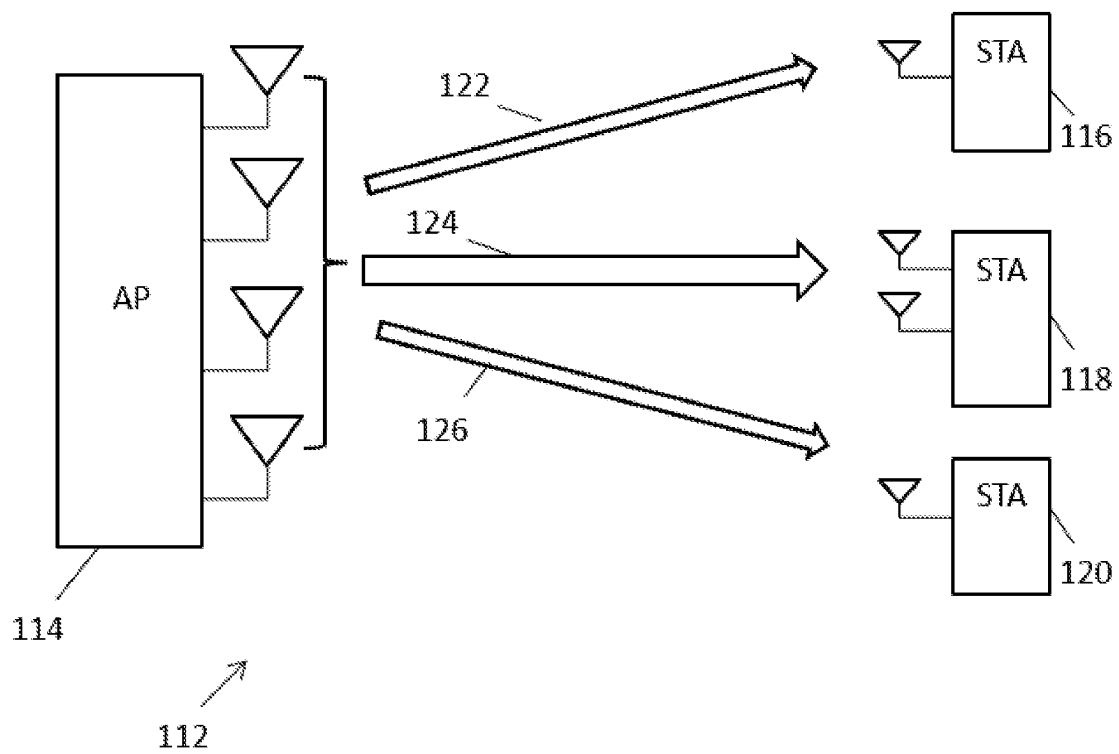
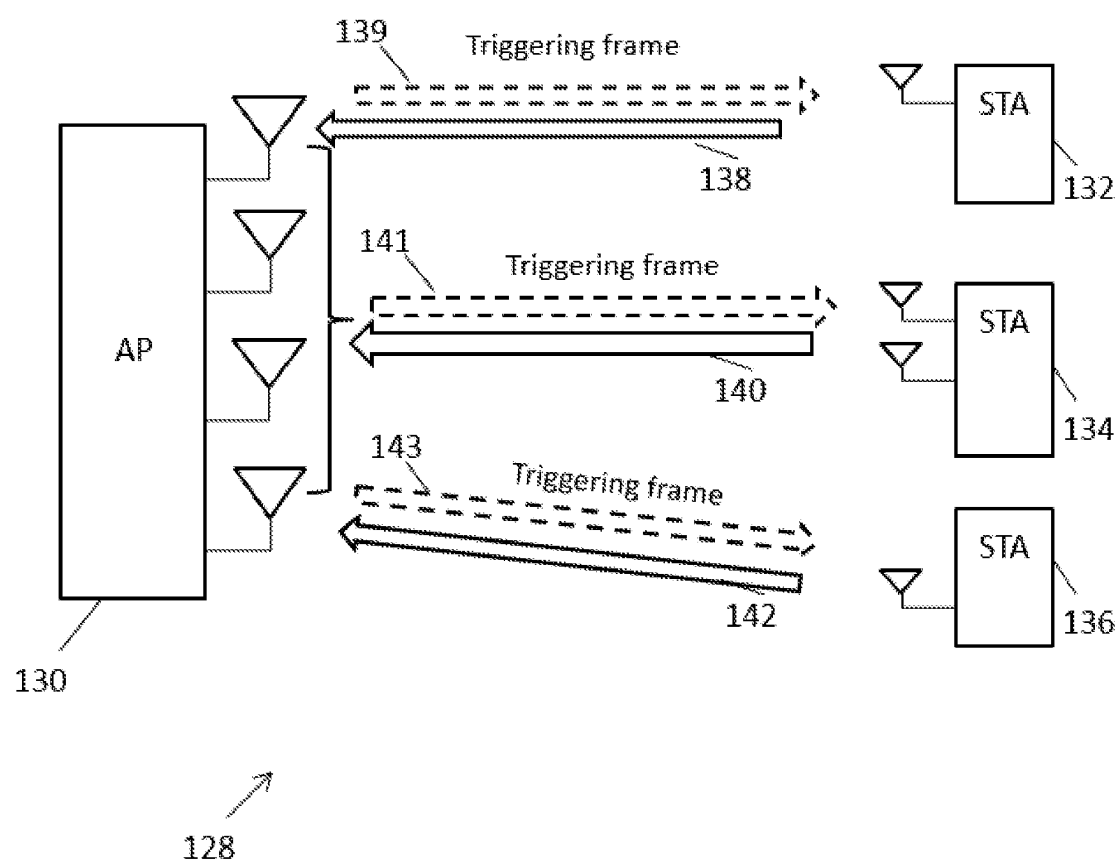
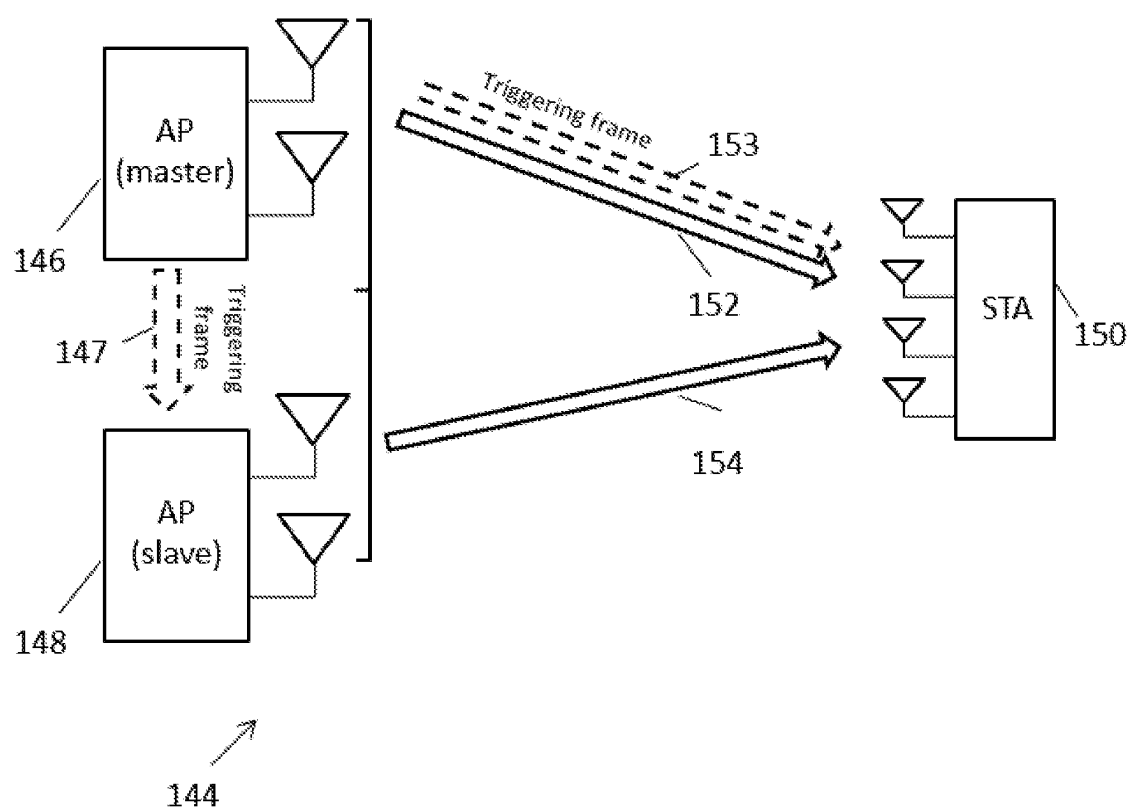


**Fig. 1A**

**Fig. 1B**

**Fig. 1C**

**Fig. 1D**

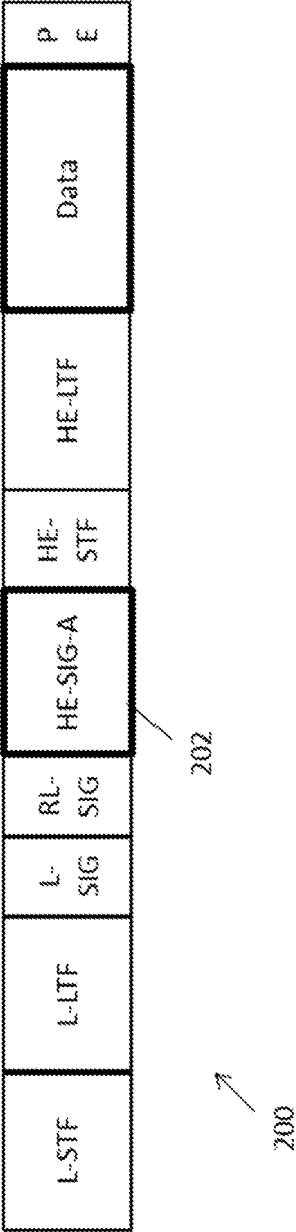


Fig. 2A

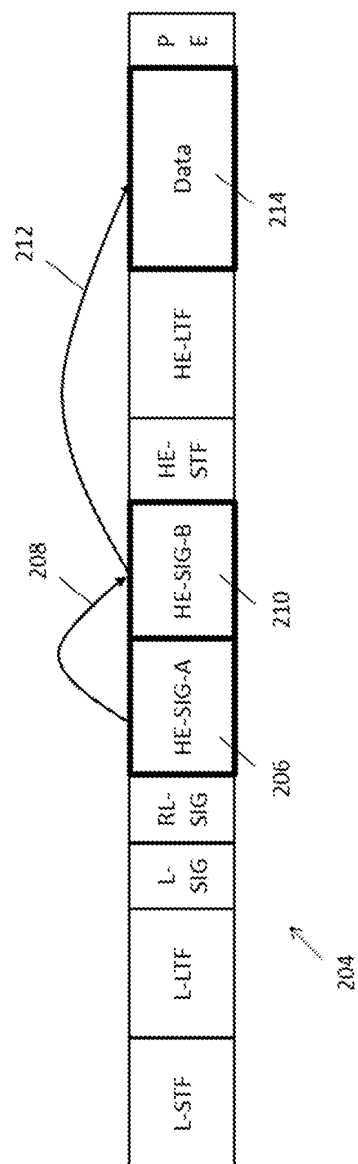
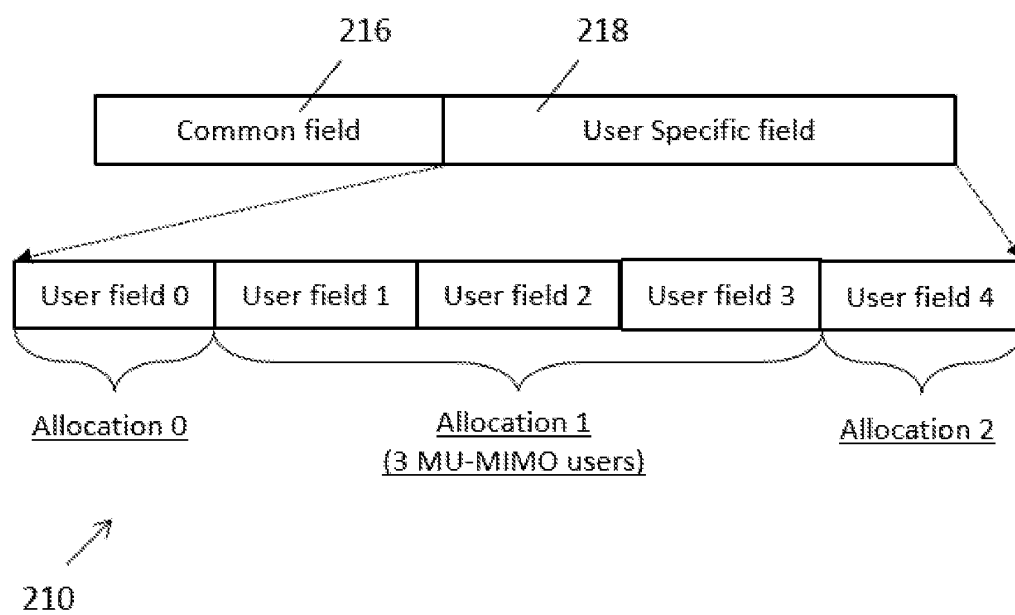


Fig. 2B

**Fig. 2C**

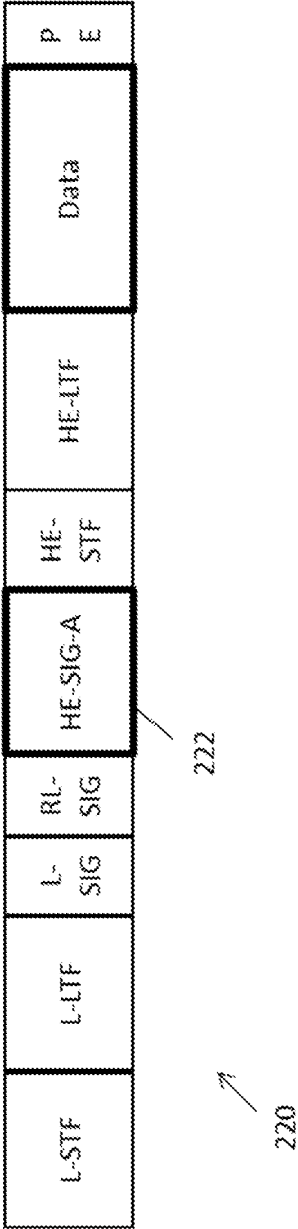


Fig. 2D

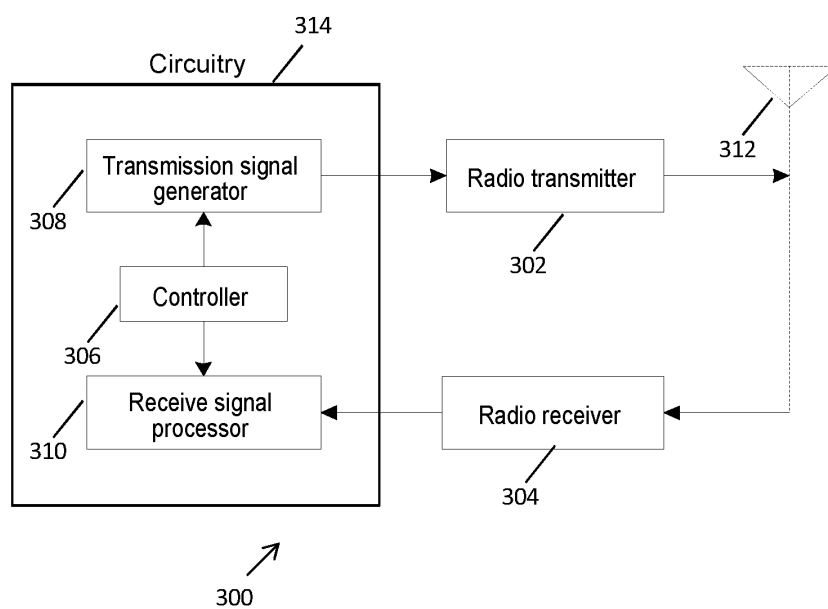


Fig. 3A

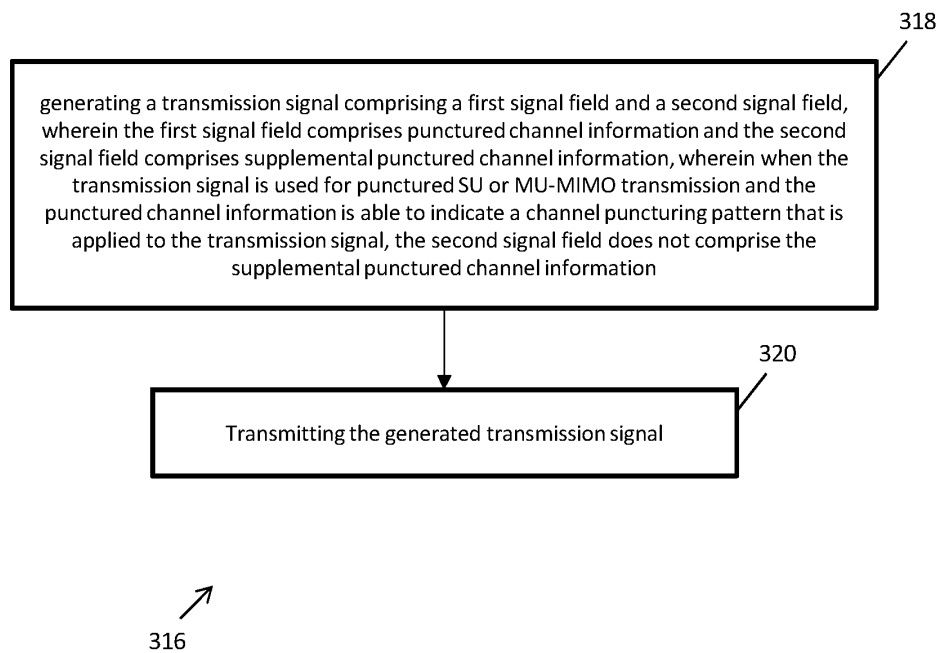
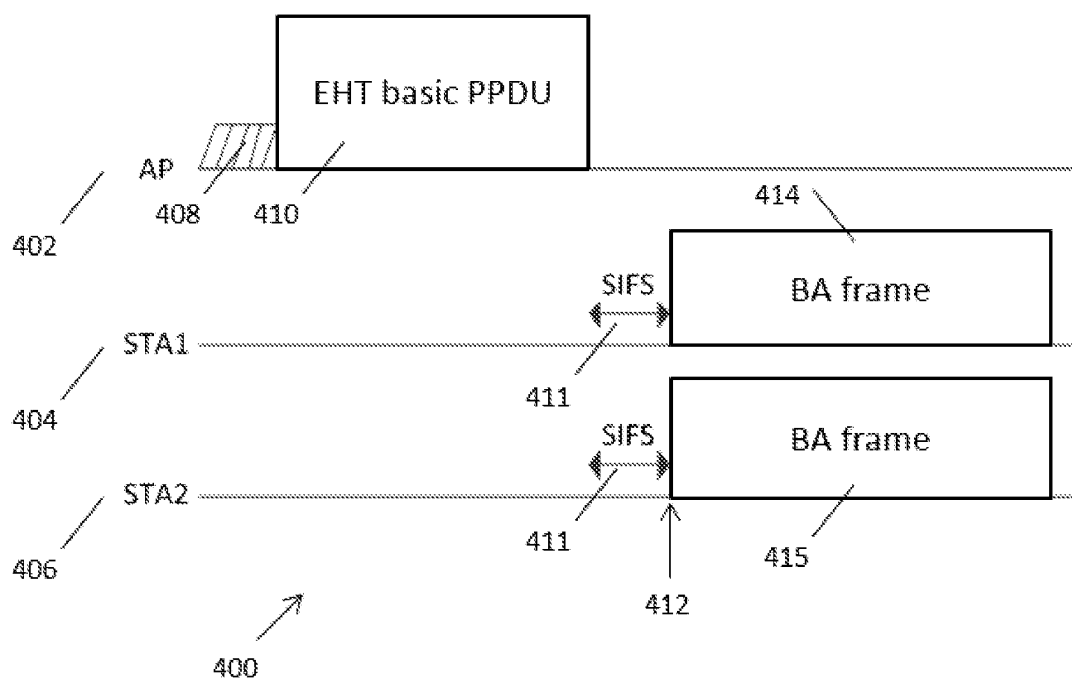


Fig. 3B

**Fig. 4**

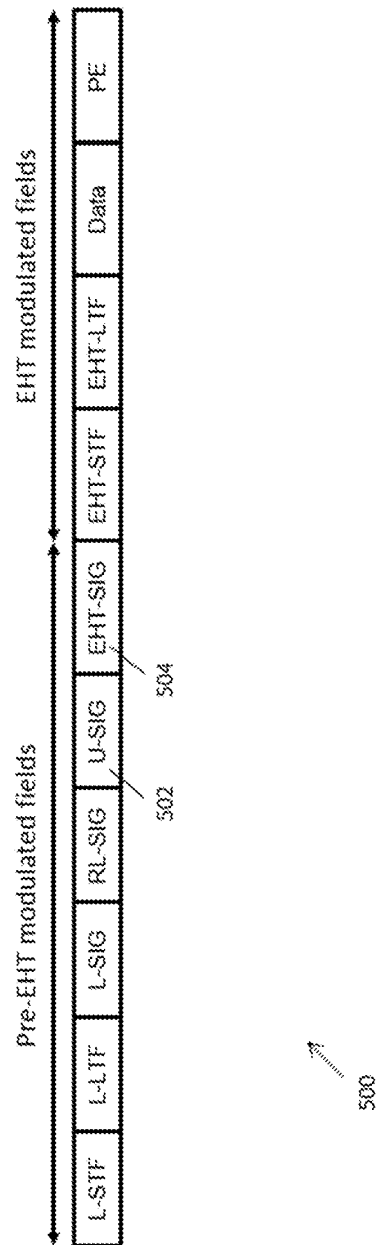
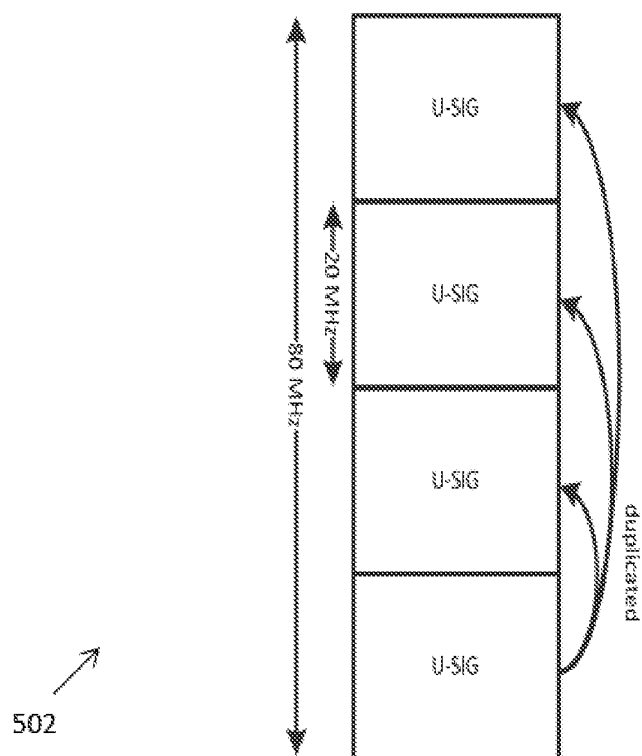


Fig. 5A

**Fig. 5B**

CBW (MHz)	L	
	1	2
20	1	N.A.
40	2	1
80	2	2
80+80, 160	2	2
160+80, 240	2	2
160+160, 320	2	2

Fig. 5C

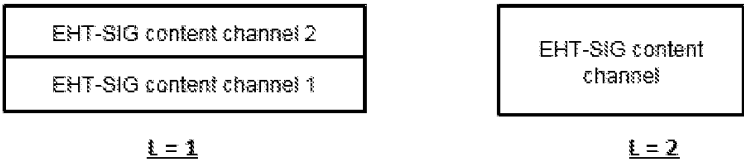


Fig. 5D

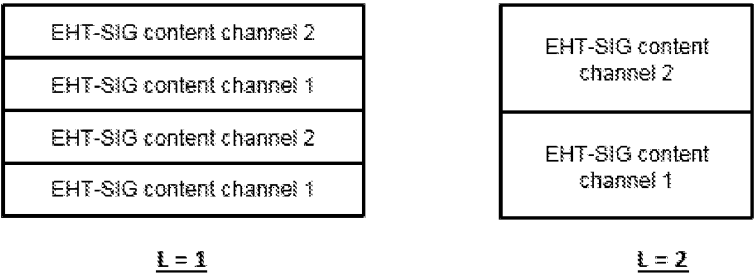


Fig. 5E

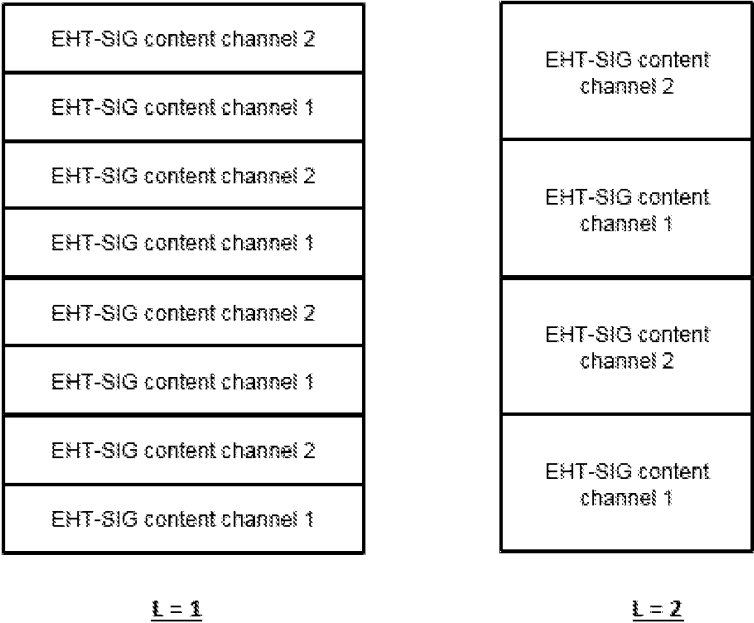


Fig. 5F

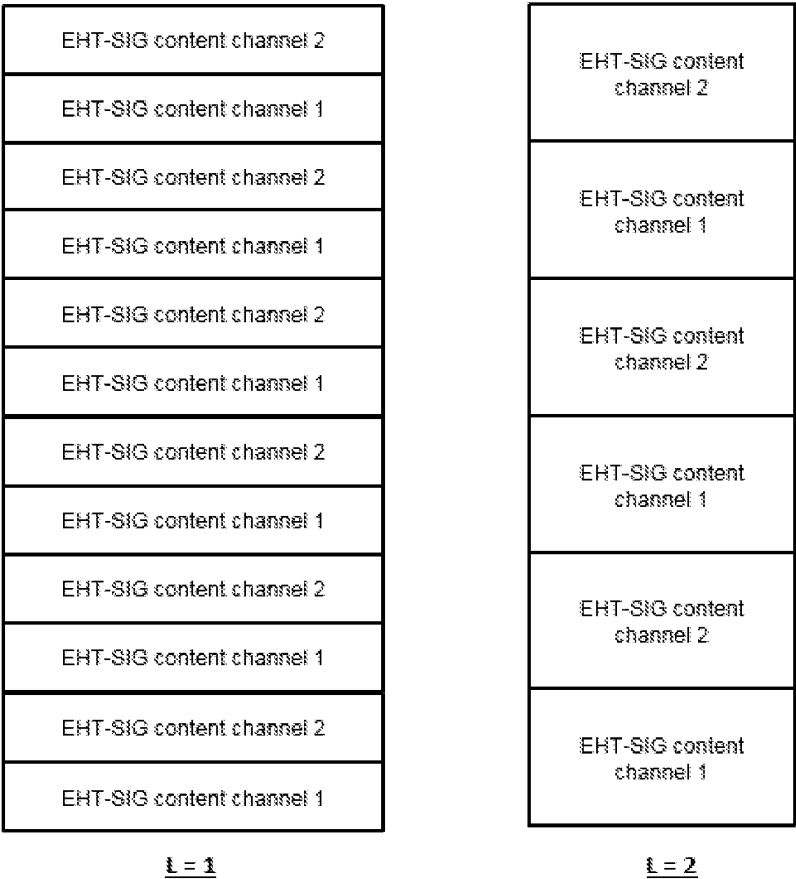


Fig. 5G

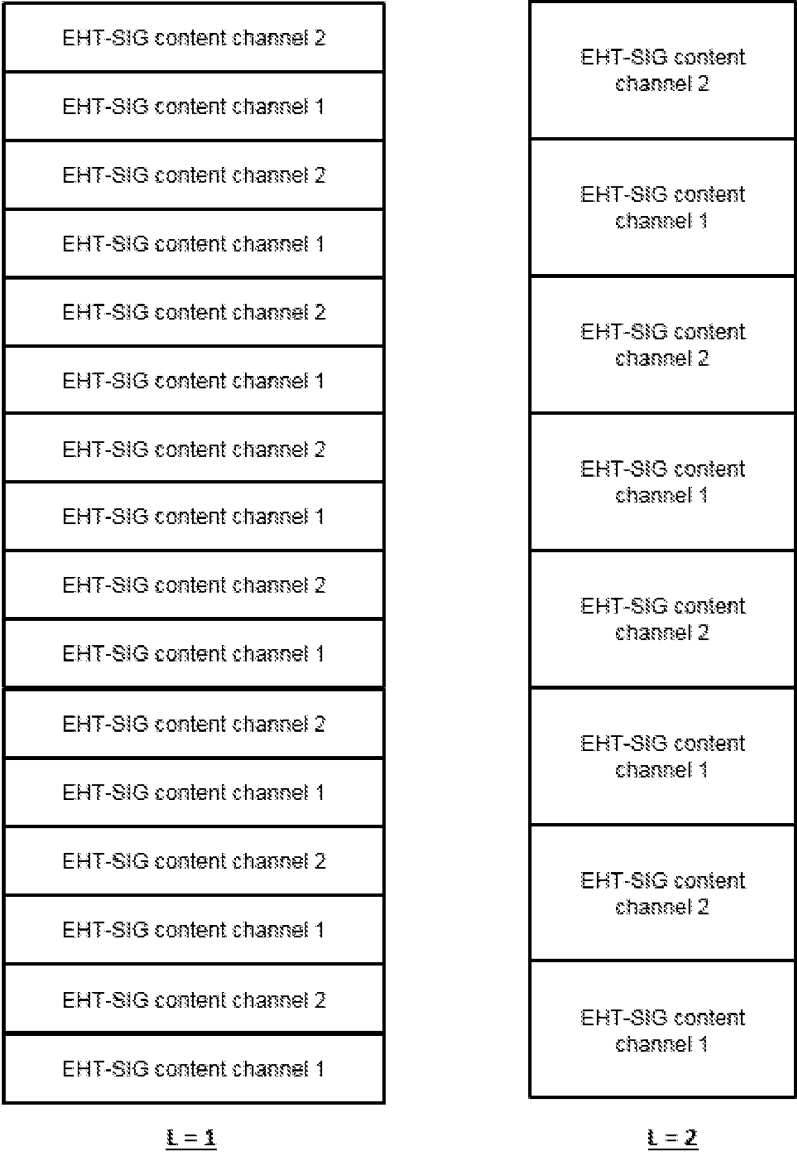
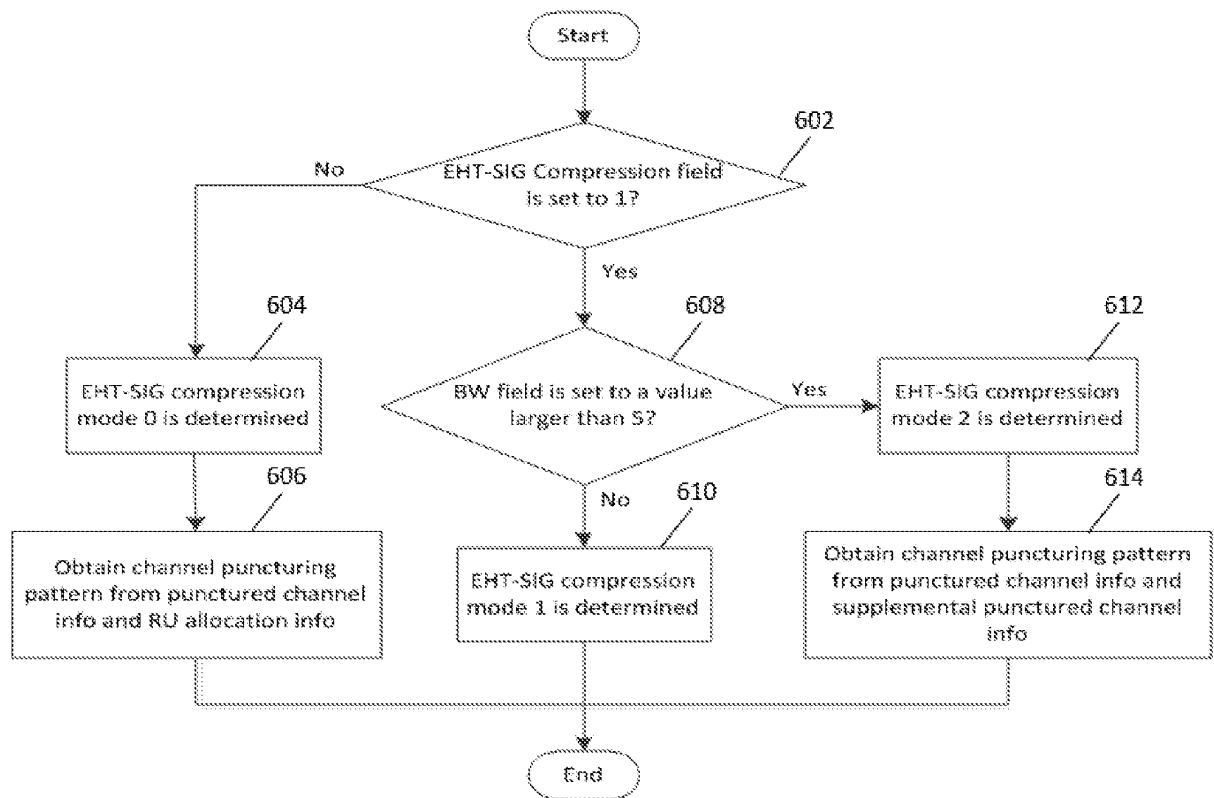


Fig. 5H

**Fig. 6**

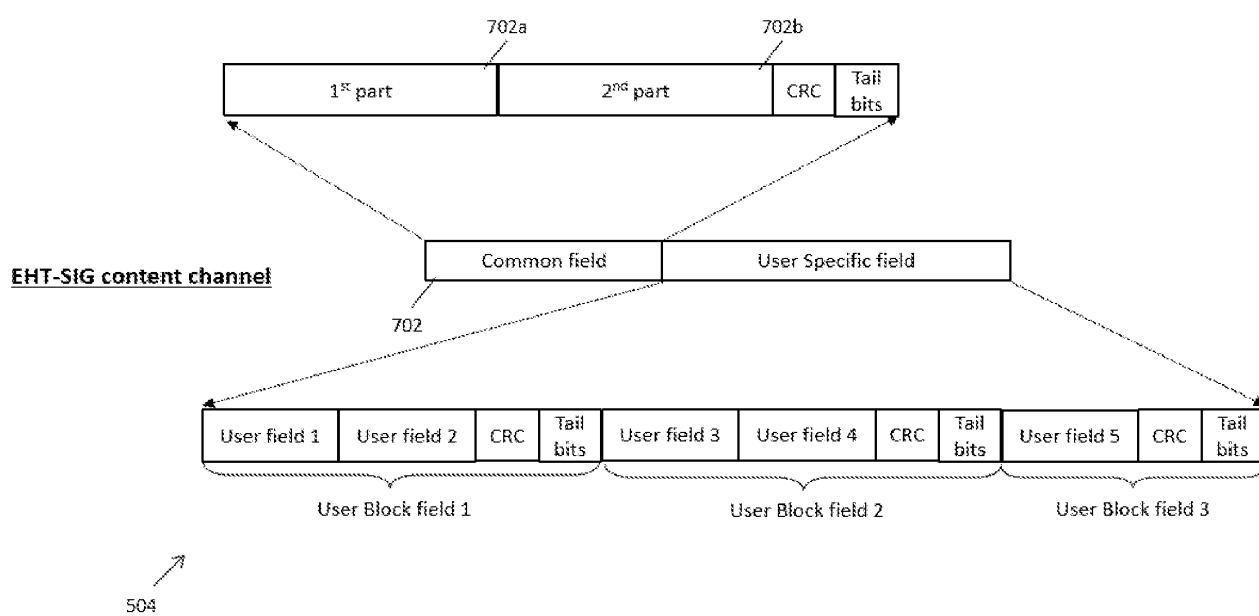


Fig. 7A

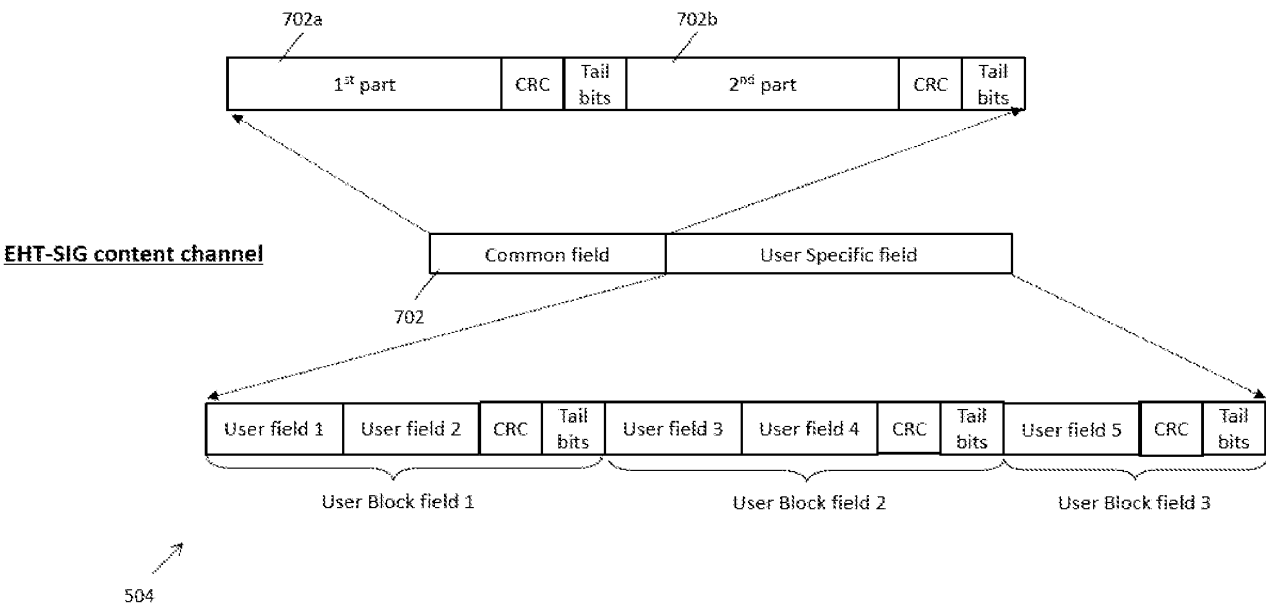


Fig. 7B

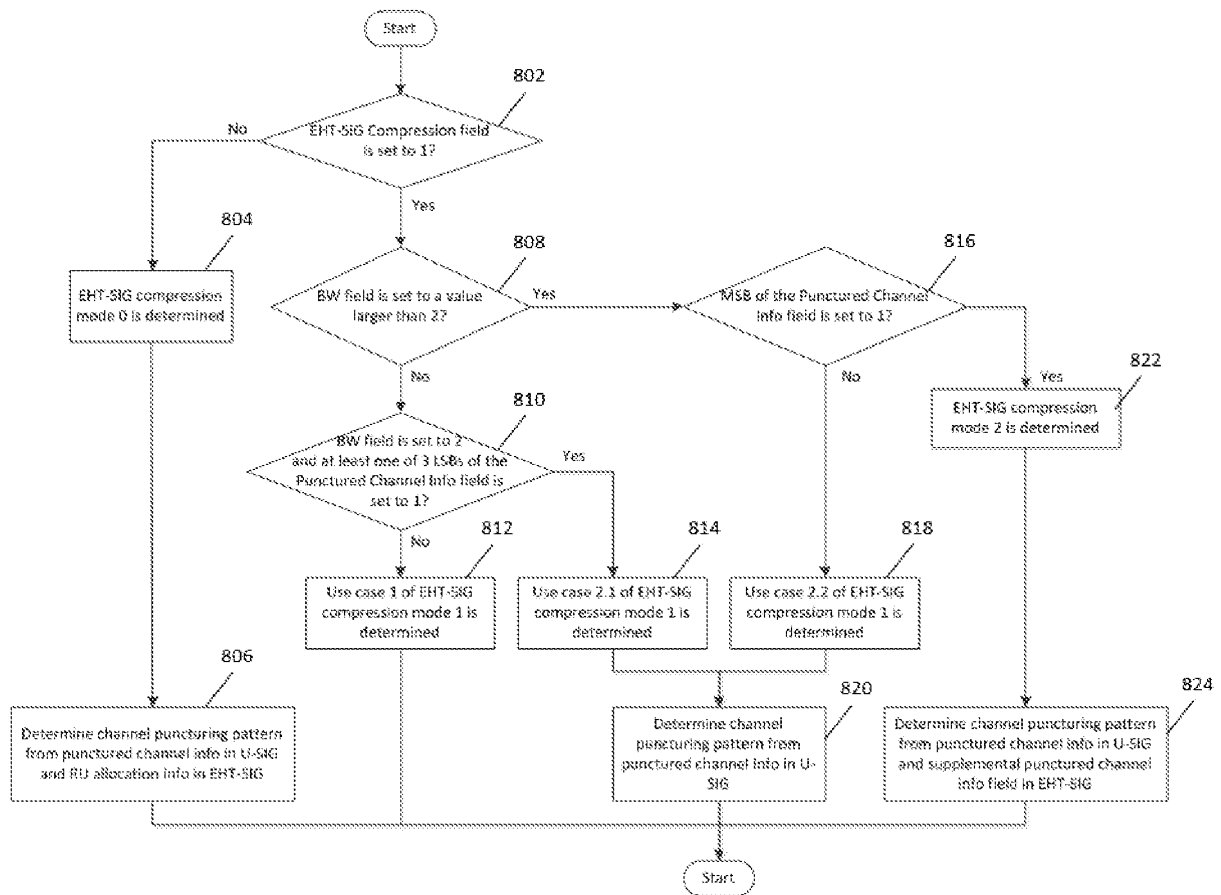


Fig. 8

800


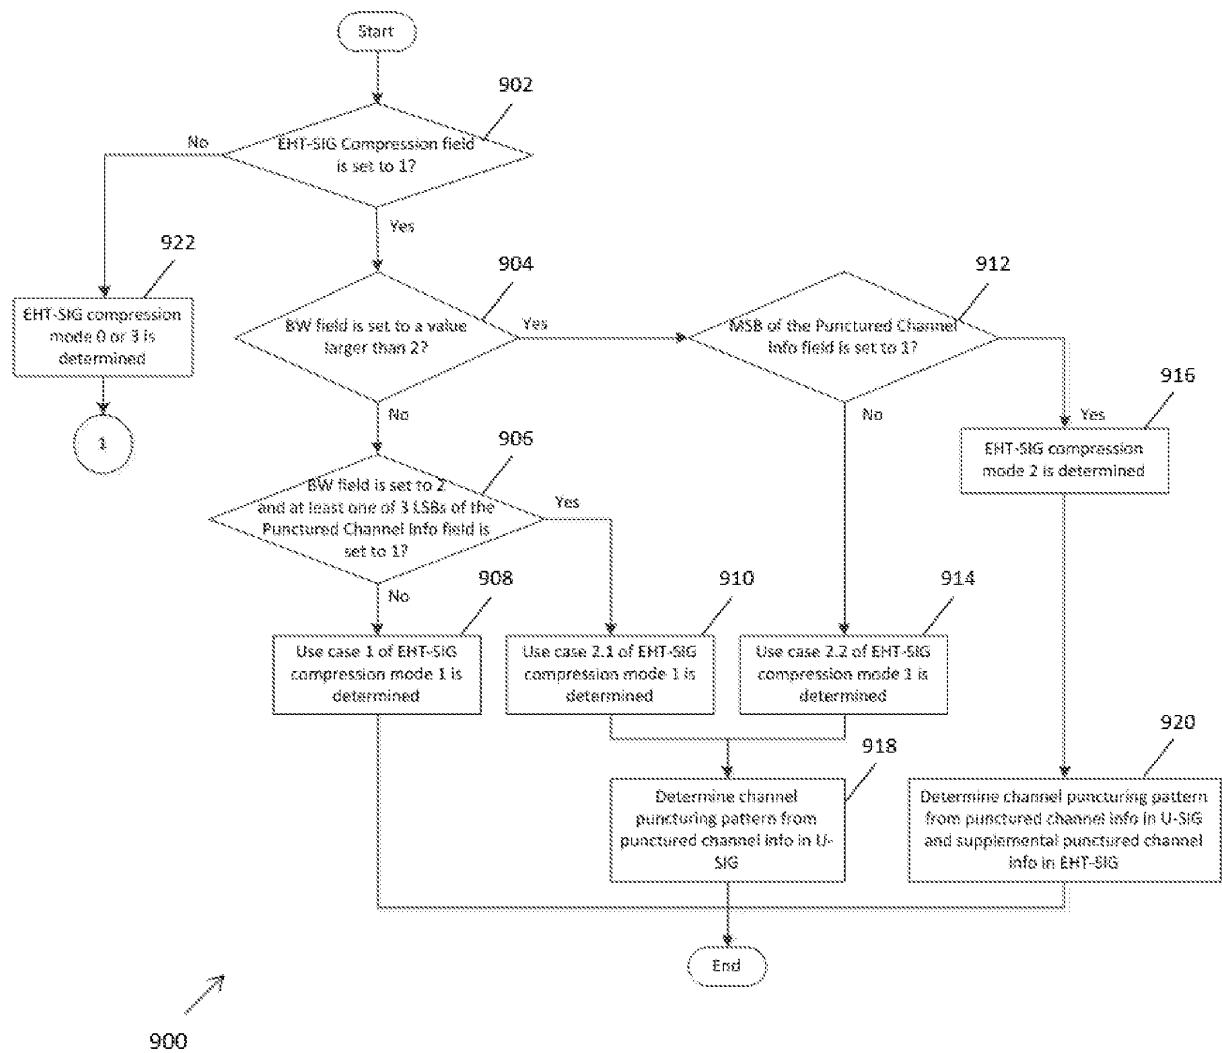


Fig. 9A

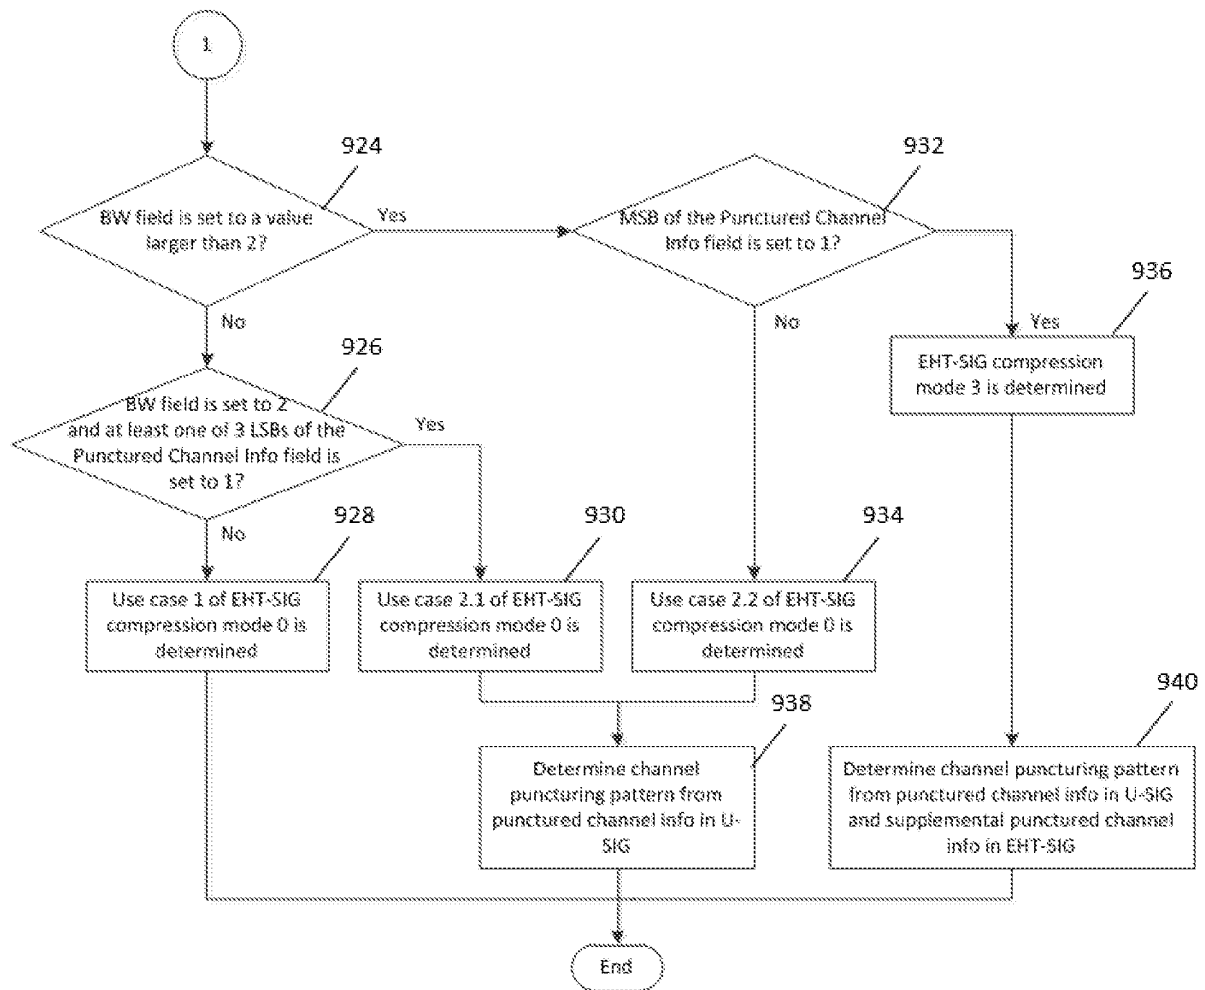

900

Fig. 9B

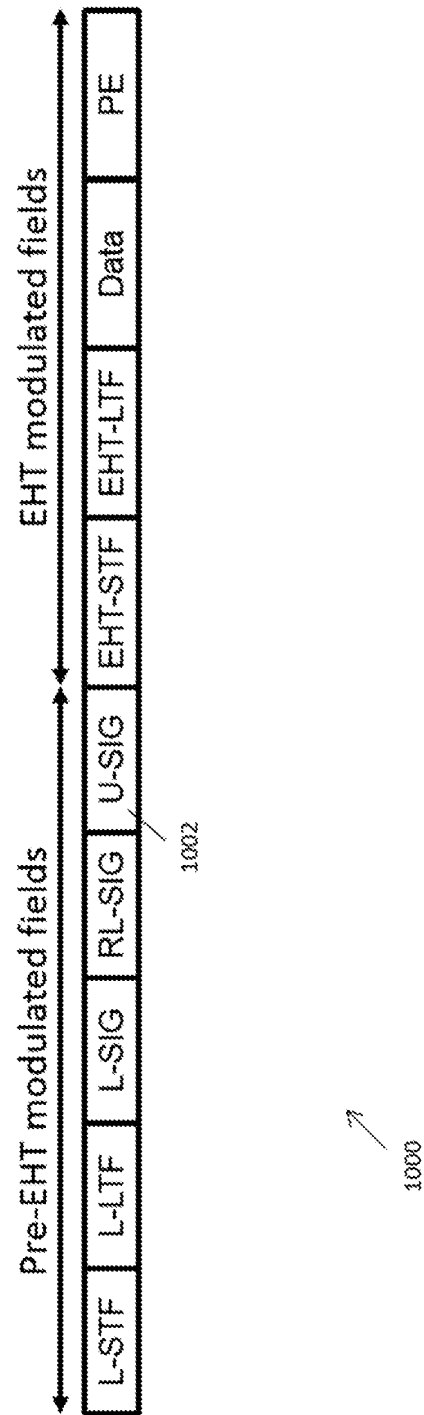


Fig. 10

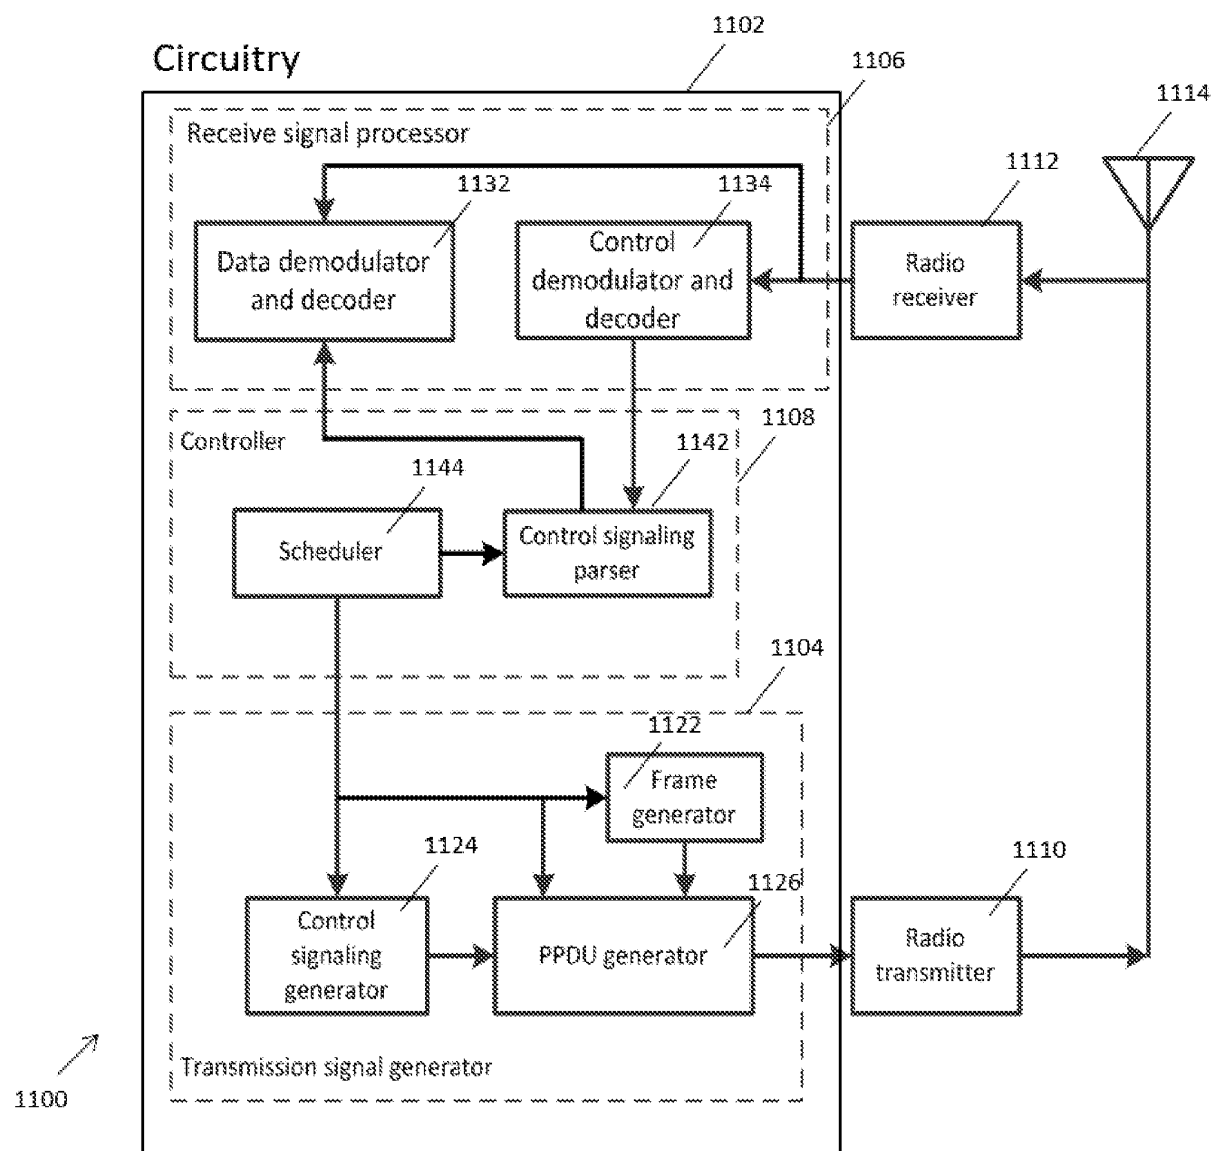


Fig. 11

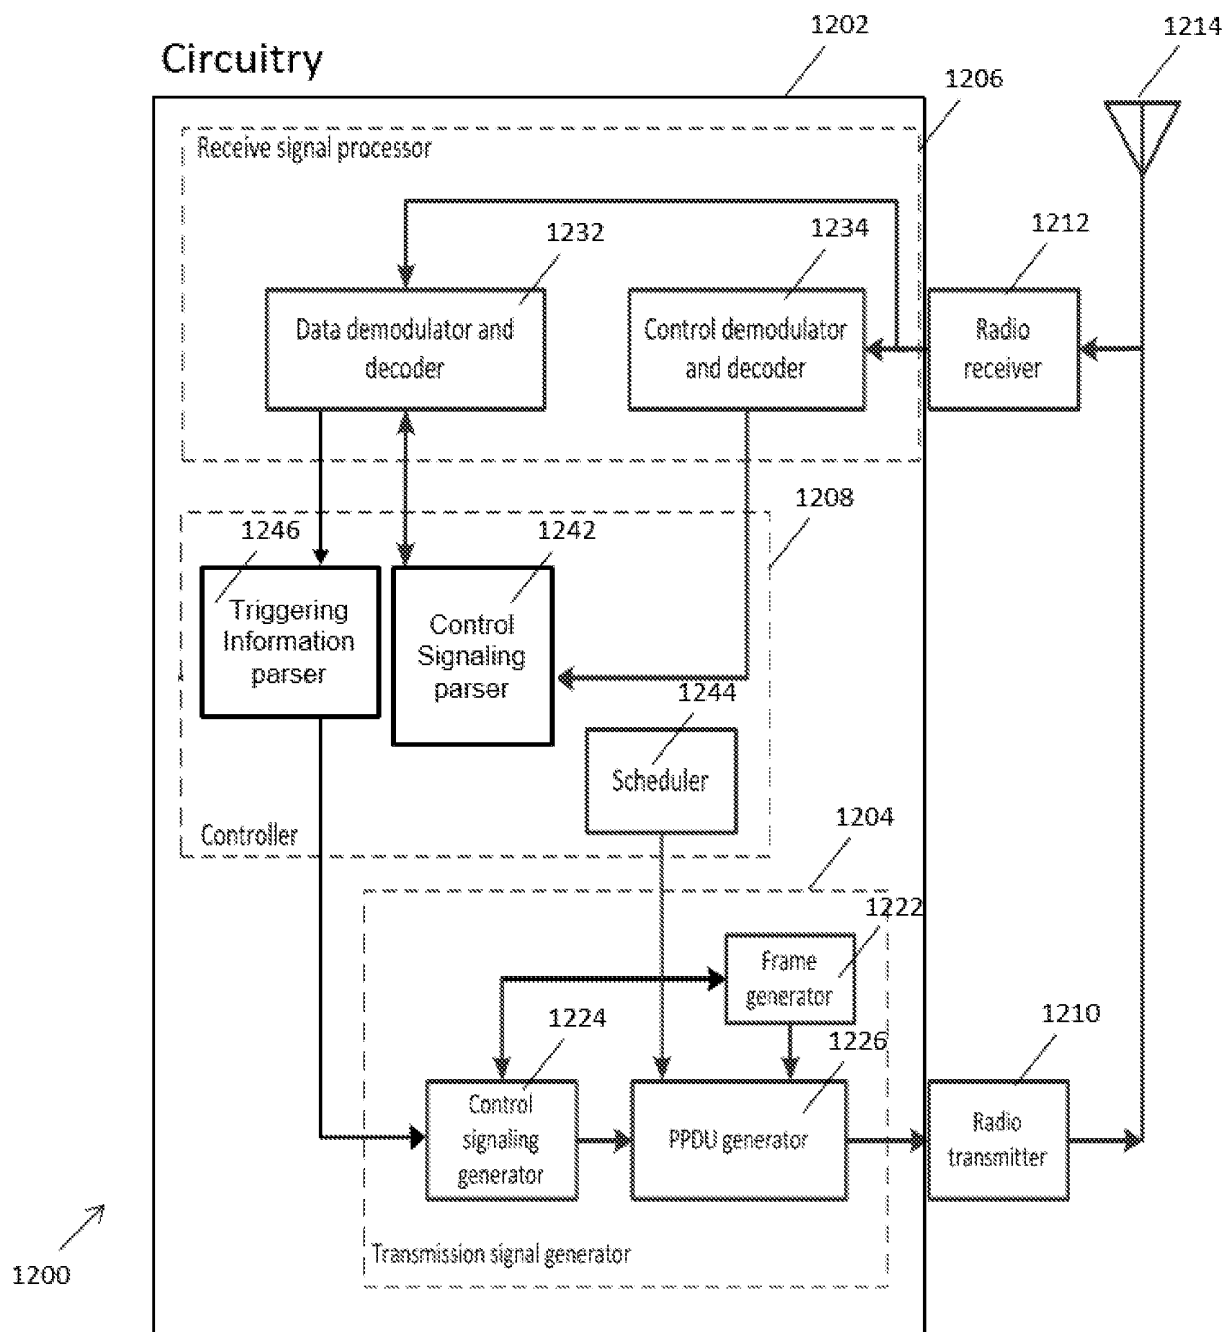


Fig. 12