

1/21

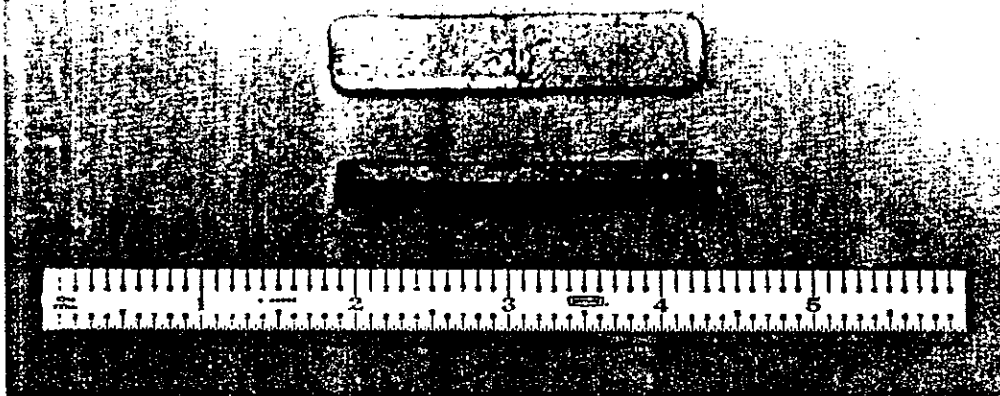


FIG.1

2/21

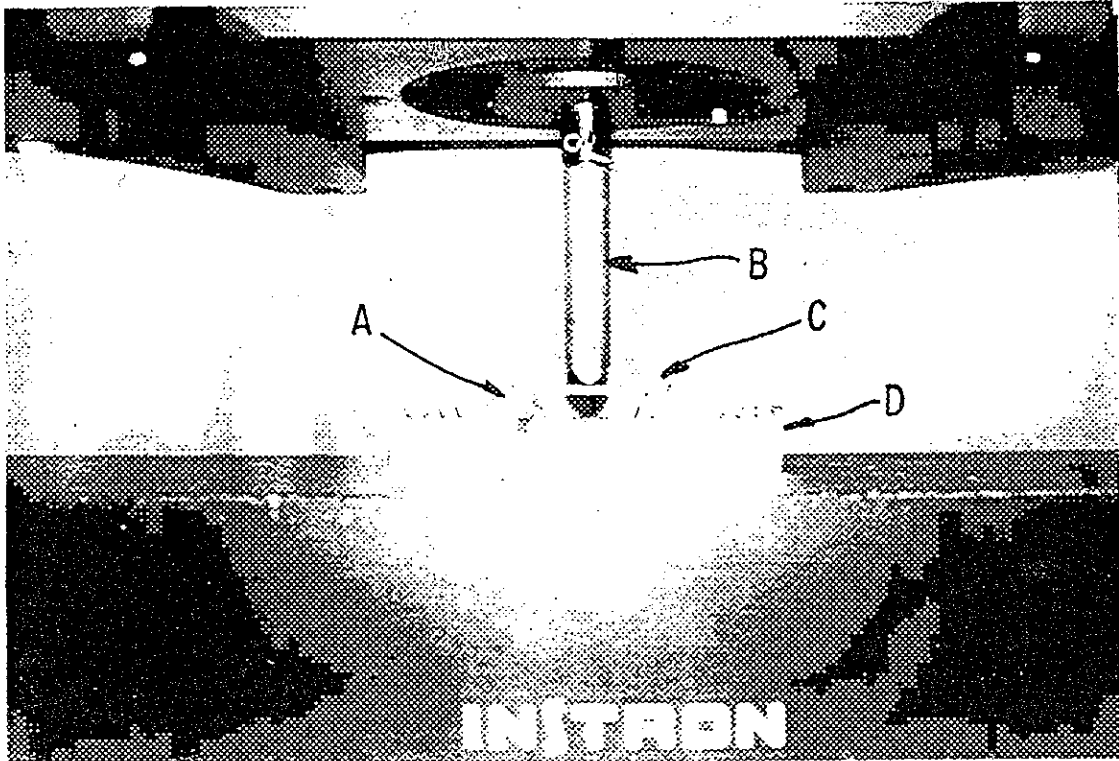


FIG.2

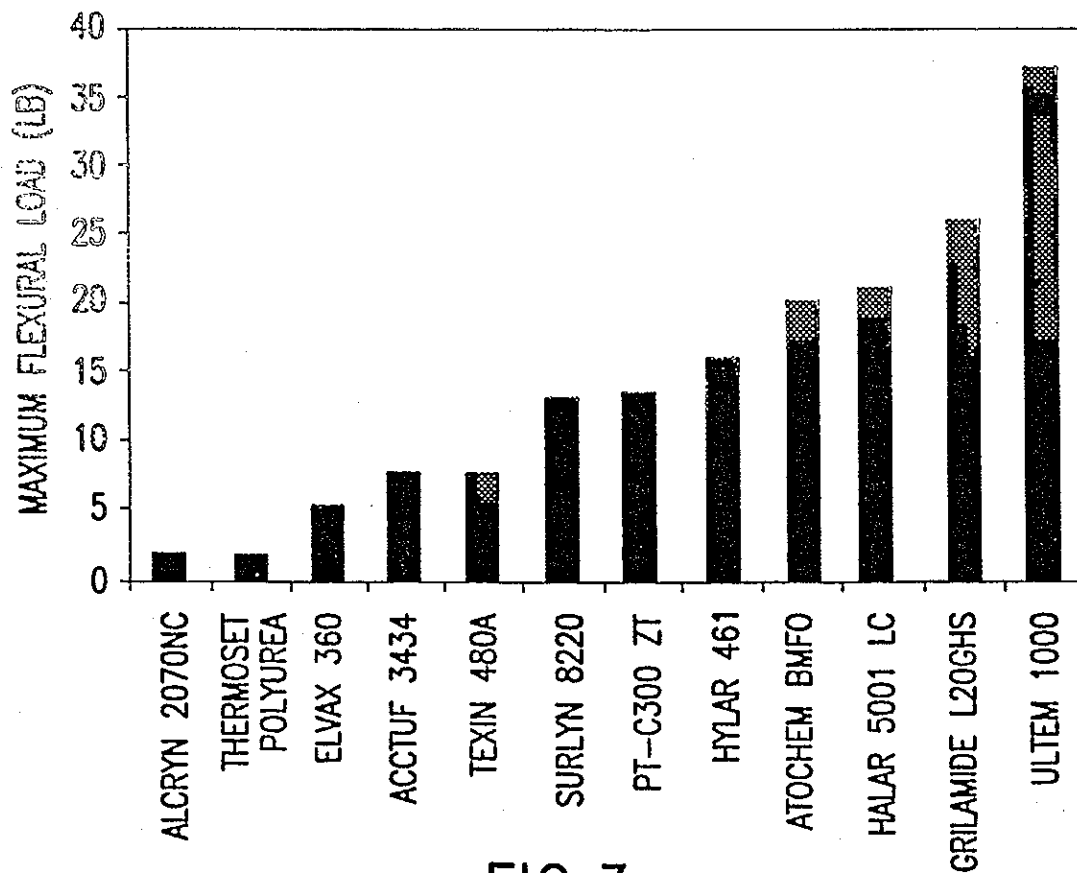


FIG.3

3/21

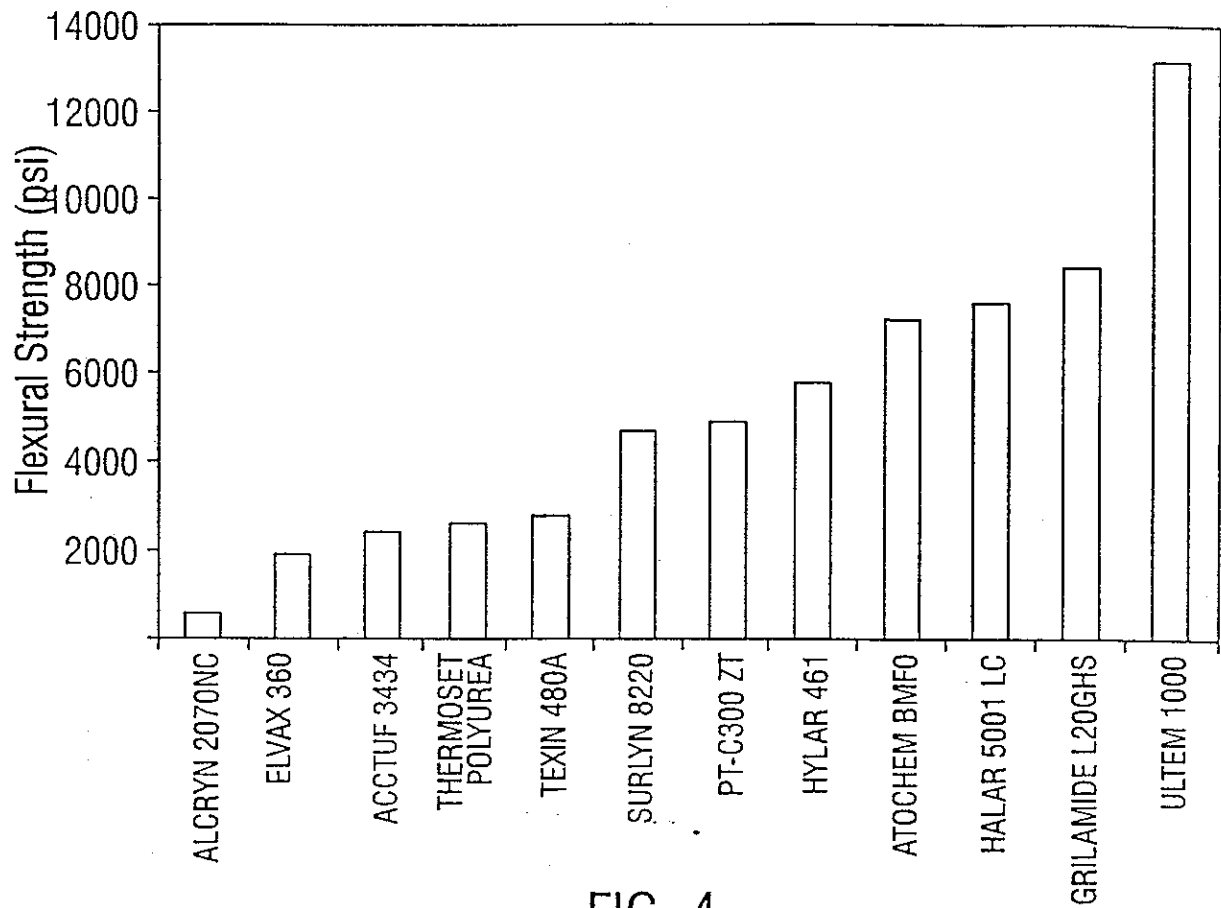


FIG. 4

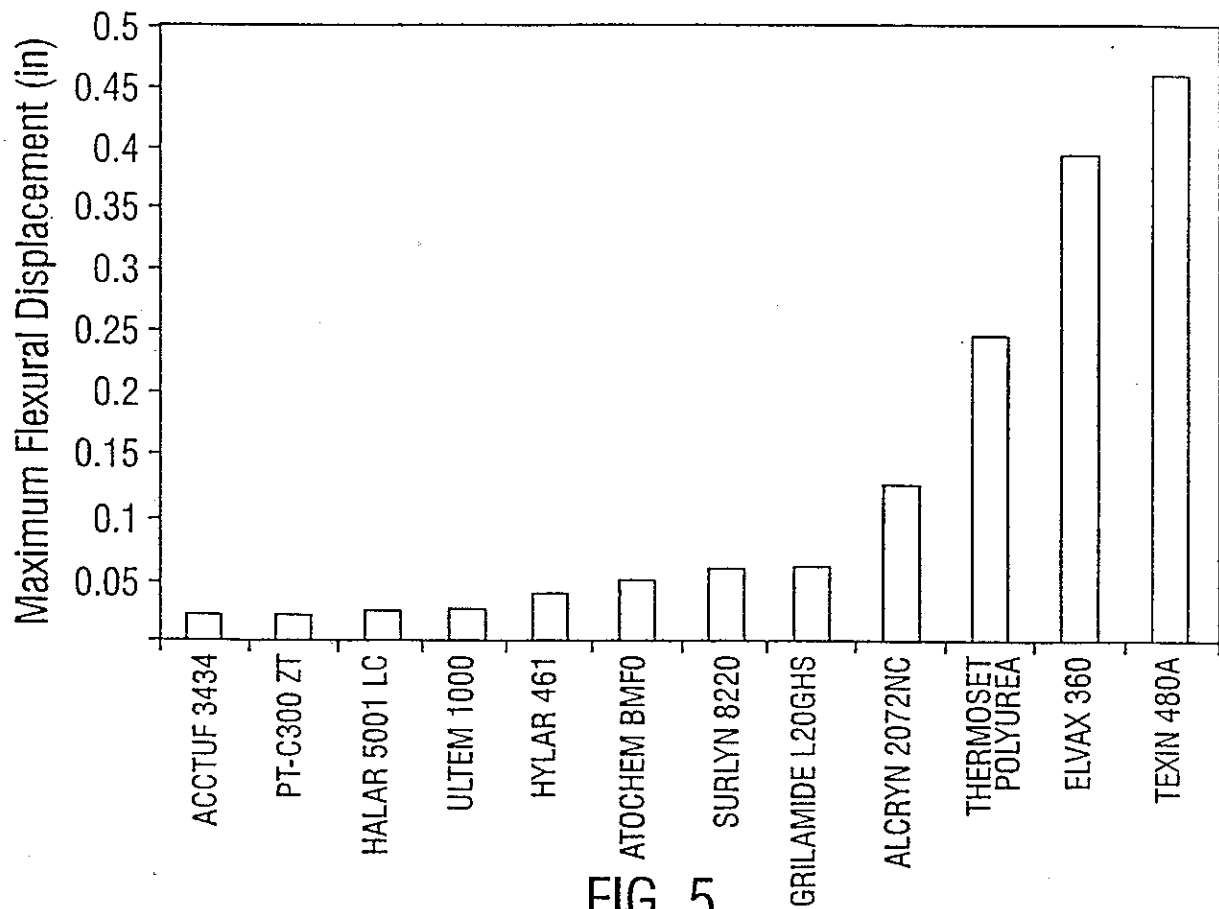


FIG. 5

4/21

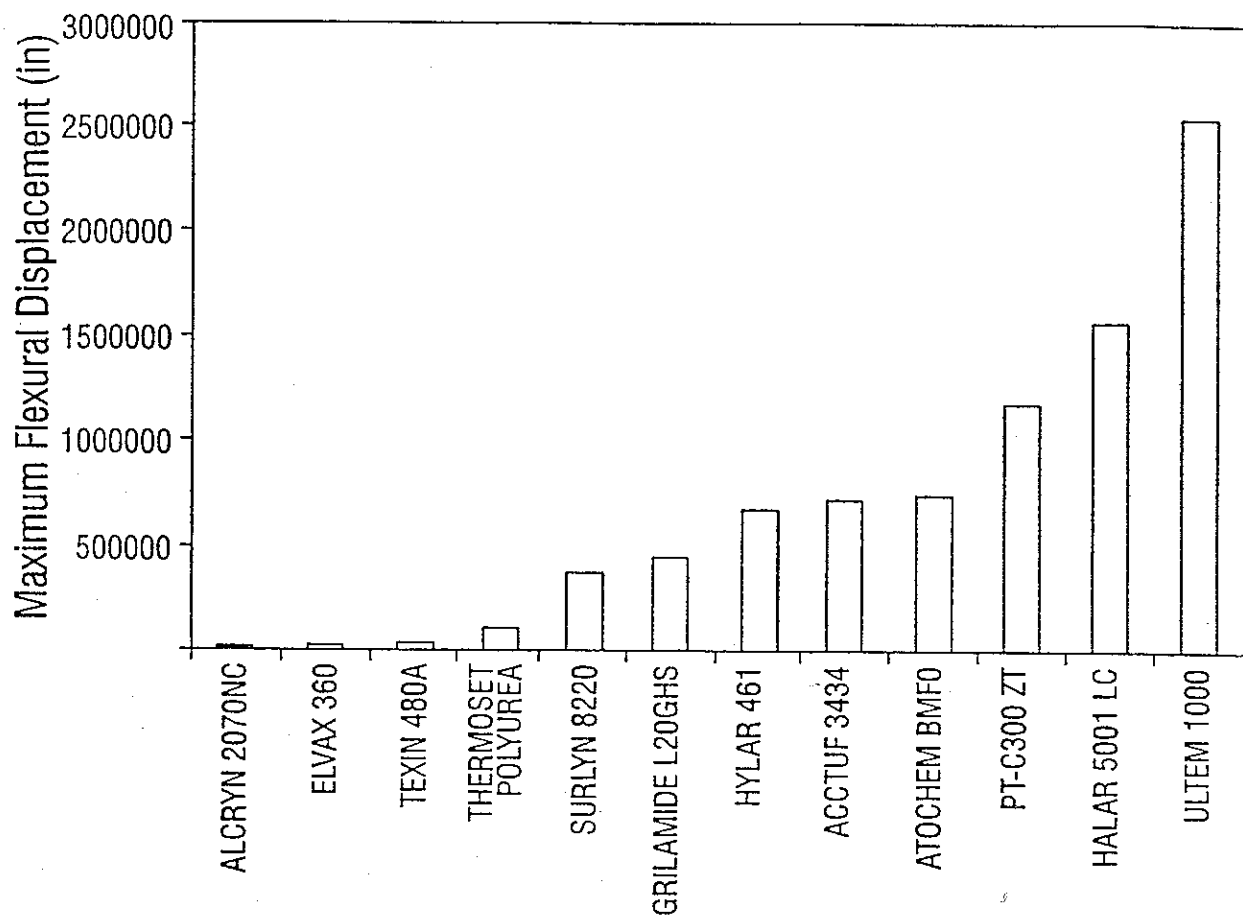


FIG. 6

5/21

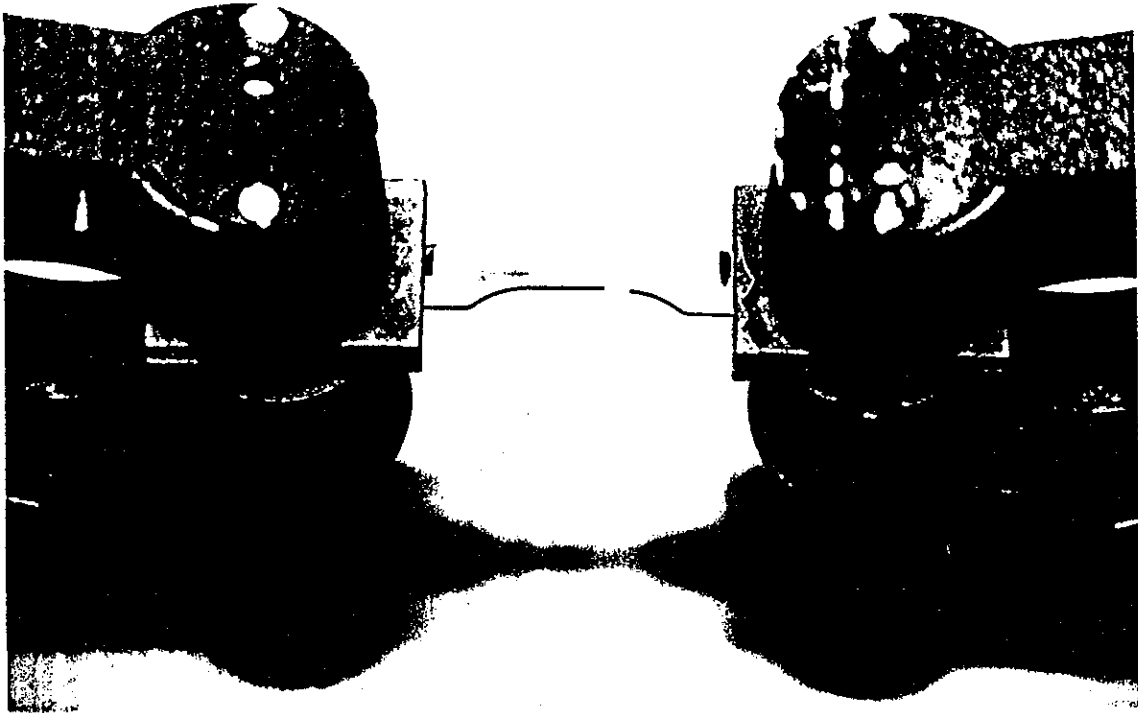


FIG.7

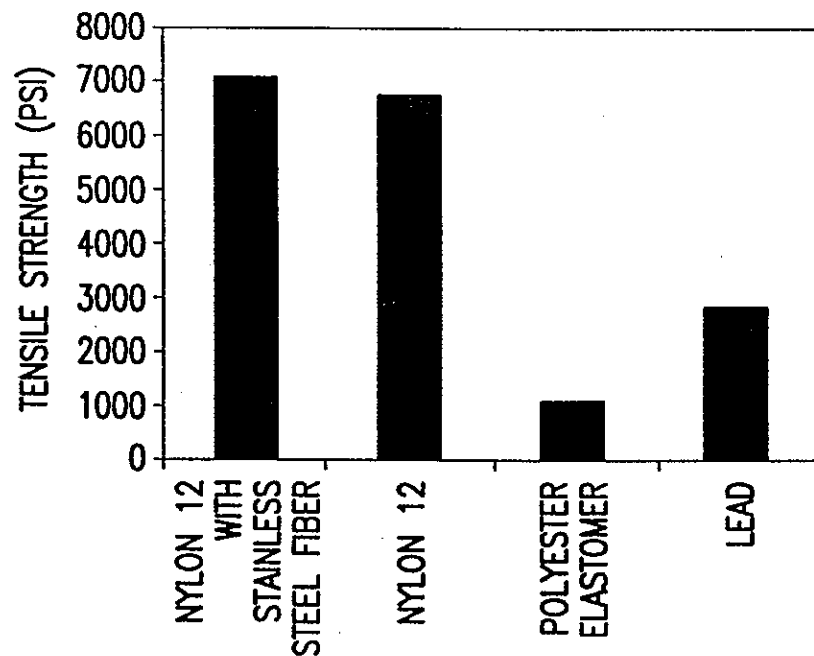


FIG.8

6/21

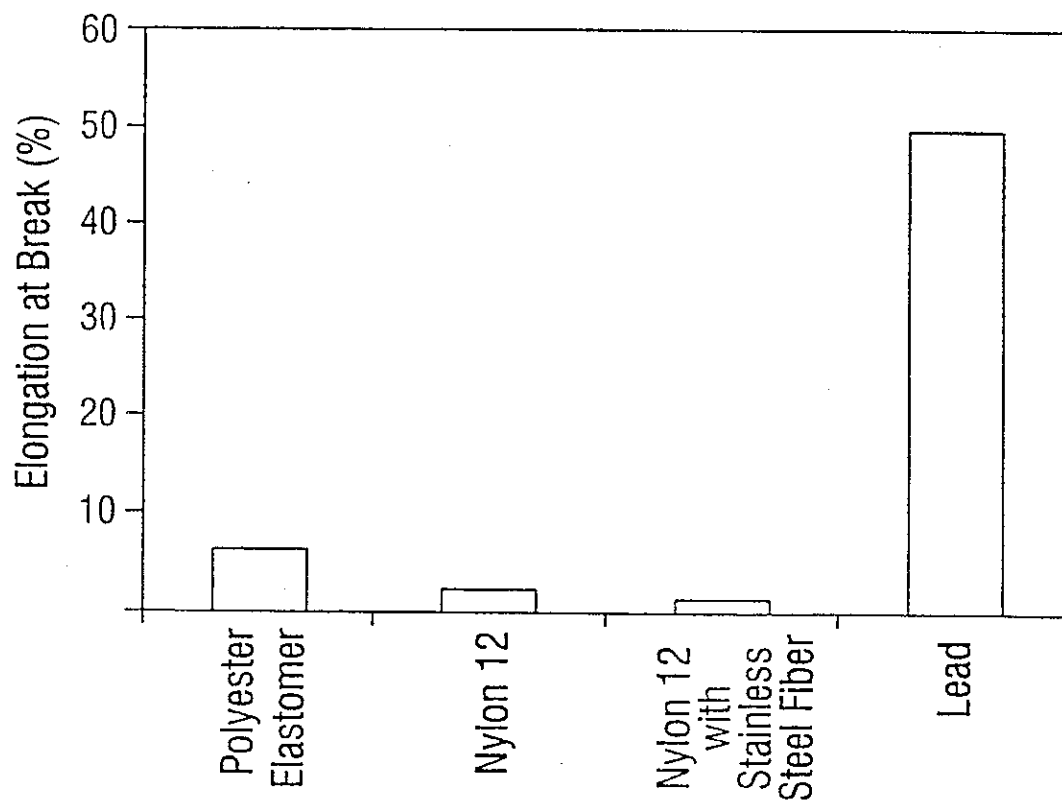


FIG. 9

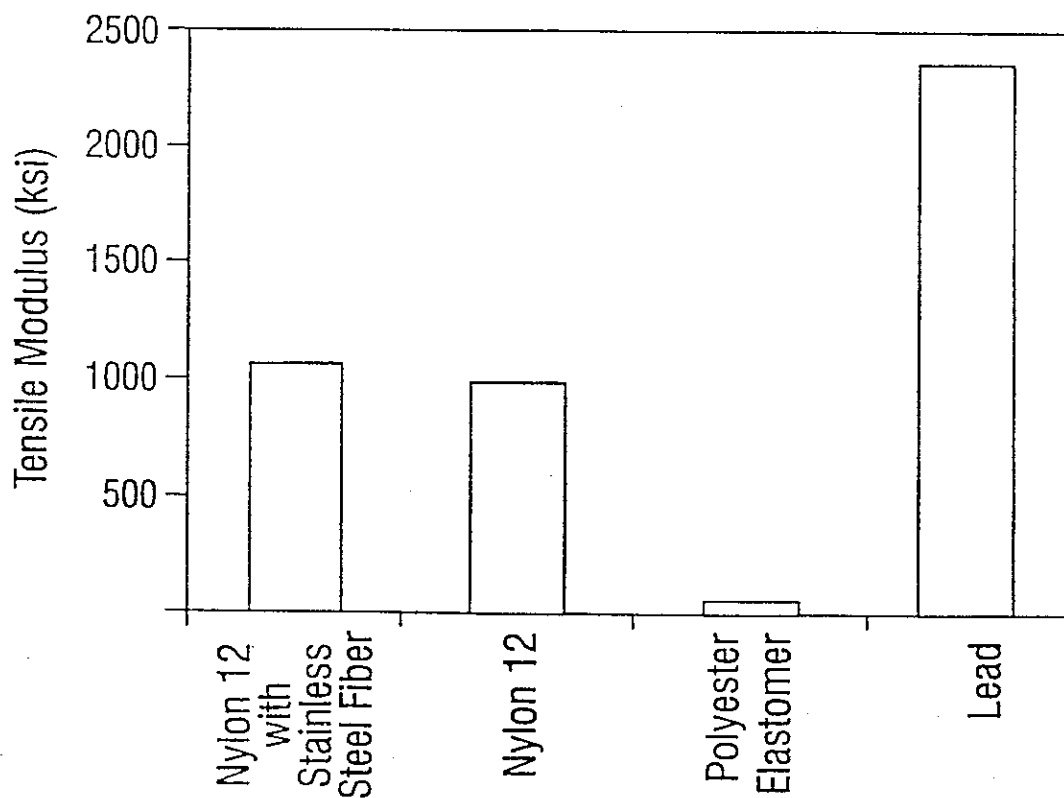


FIG. 10

7/21

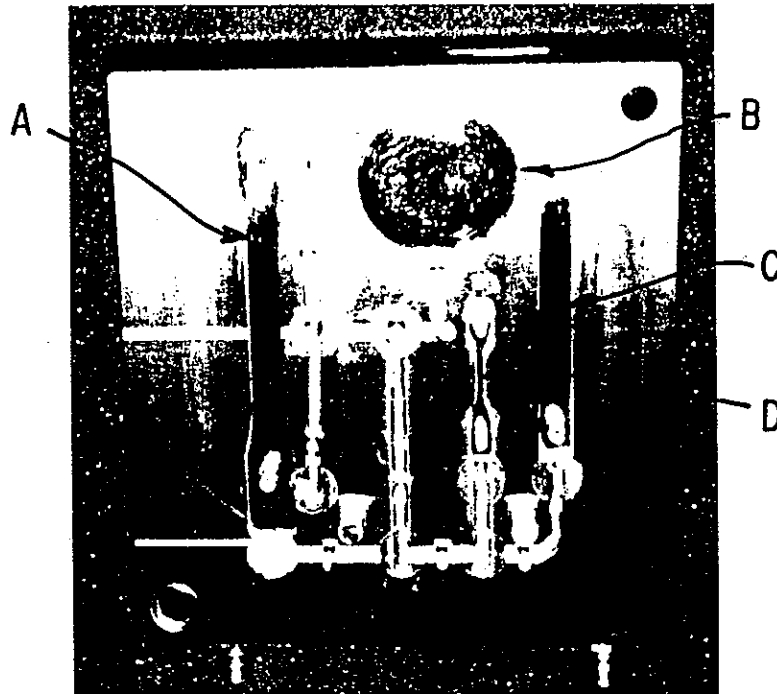


FIG. 11

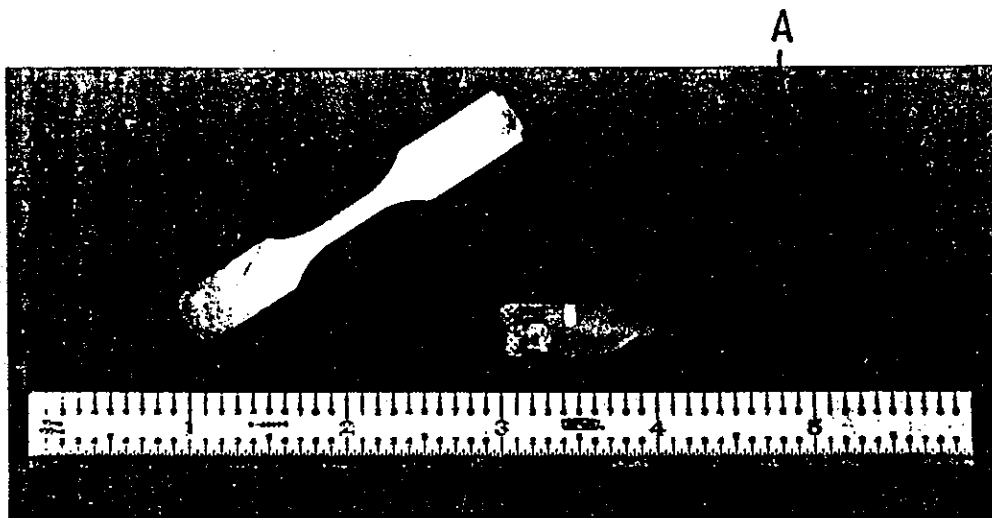


FIG. 12

8/21

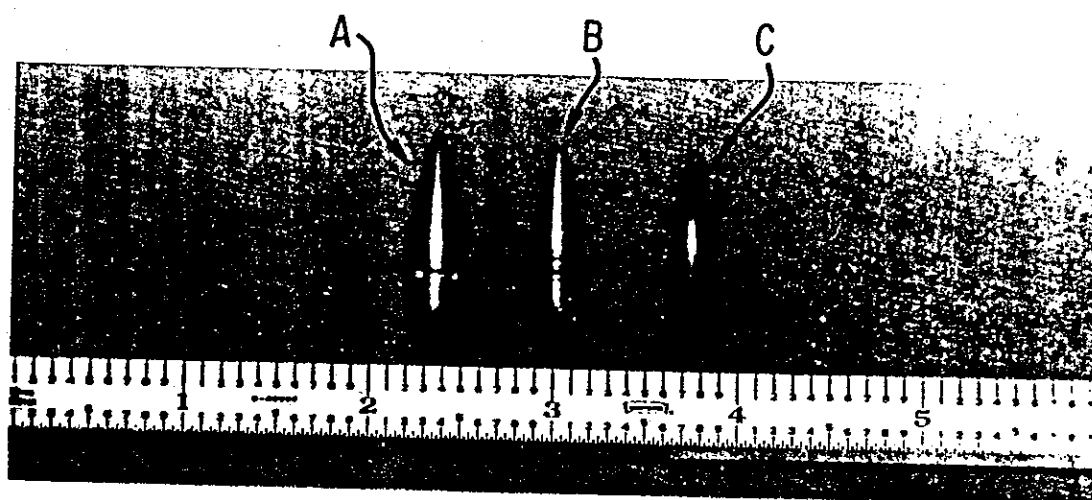


FIG.13

9/21


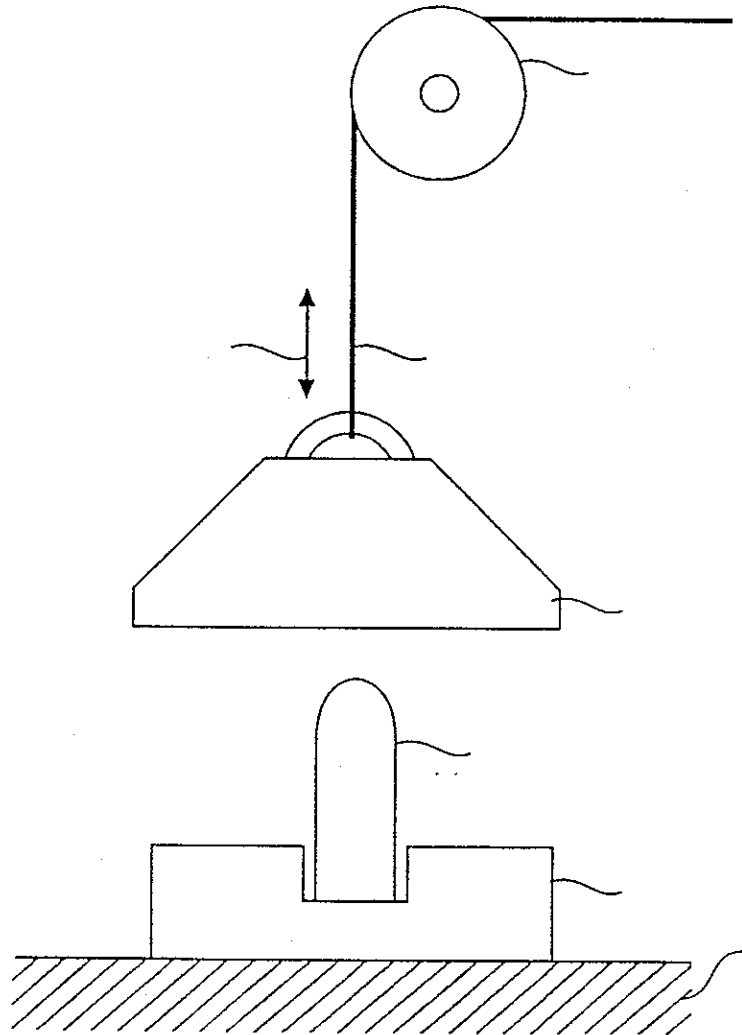



FIG. 14

10/21

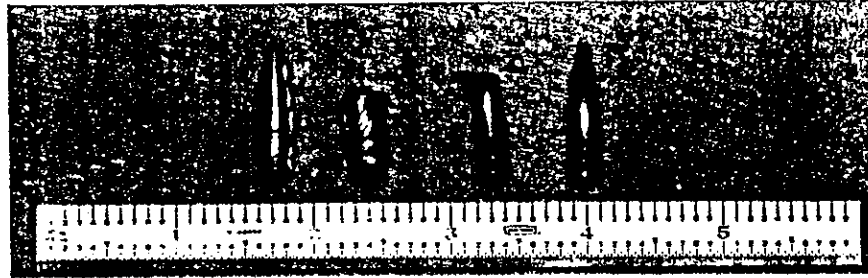

LEAD N12-TUNGSTEN
6IN DROP HEIGHT 6IN DROP HEIGHT

FIG.15

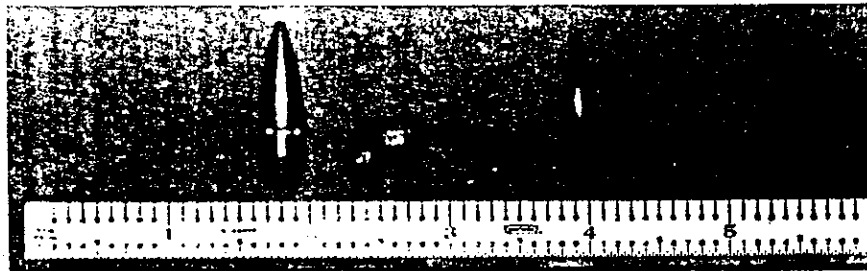

LEAD N12-TUNGSTEN
12IN DROP HEIGHT 12IN DROP HEIGHT

FIG.16



LEAD N12-TUNGSTEN
18 IN DROP HEIGHT 18 IN DROP HEIGHT


FIG.17

11/21




LEAD N12-TUNGSTEN-SS
6IN DROP HEIGHT 6IN DROP HEIGHT

FIG.18

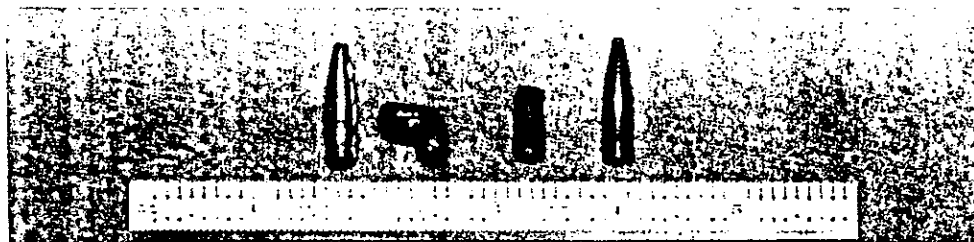

LEAD N12-TUNGSTEN-SS
12IN DROP HEIGHT 12 IN DROPHEIGHT

FIG.19

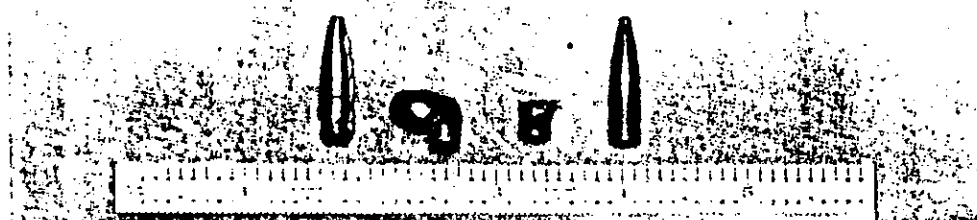

LEAD N12-TUNGSTEN-SS
18 IN DROP HEIGHT 18IN DROP HEIGHT

FIG.20

12/21



LEAD TEXIN 480A-TUNGSTEN
6IN DROP HEIGHT 6IN DROP HEIGHT

FIG.21



LEAD TEXIN 480A-TUNGSTEN
12 IN DROP HEIGHT 12 IN DROP H

FIG.22



LEAD TEXIN 480A-TUNGSTEN
18IN DROP HEIGHT 18IN DROP HEIGHT

FIG.23

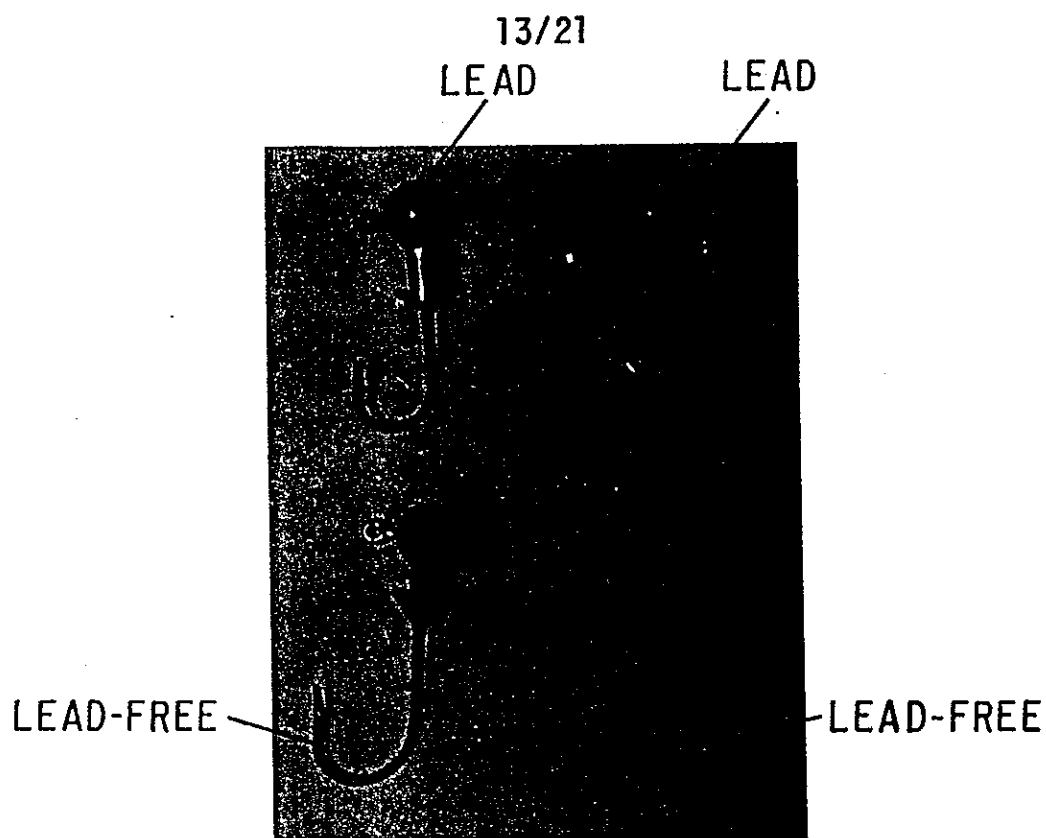


FIG. 24A

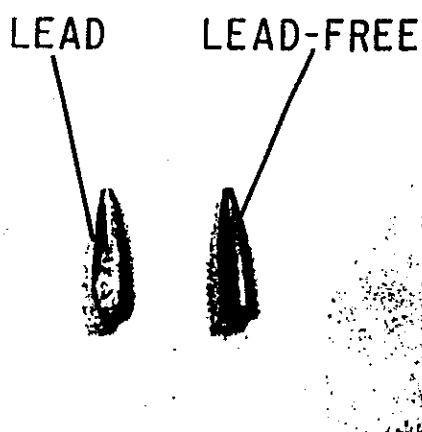


FIG. 24B

14/21

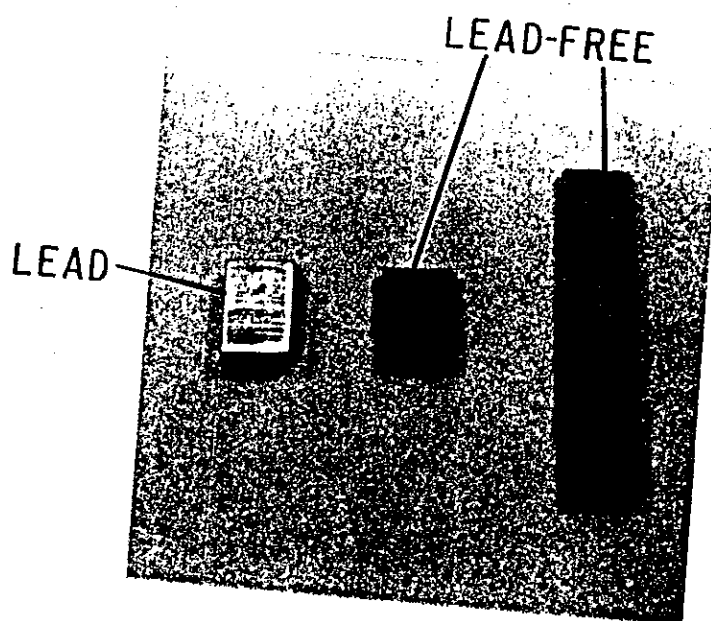


FIG.25

15/21



FIG. 26A

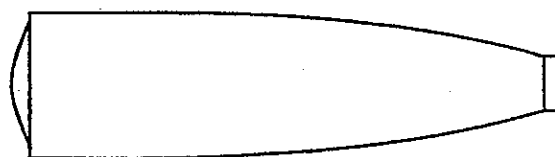


FIG. 26B

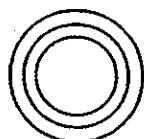


FIG. 27A

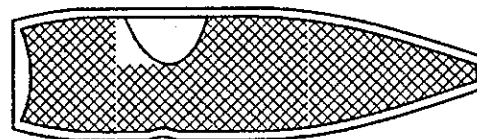


FIG. 27B



FIG. 28A

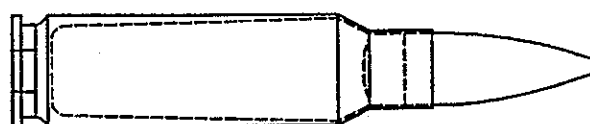


FIG. 28B

16/21

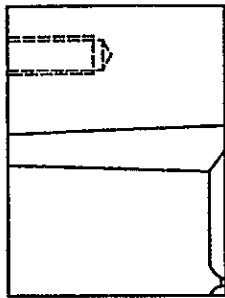


FIG. 29A

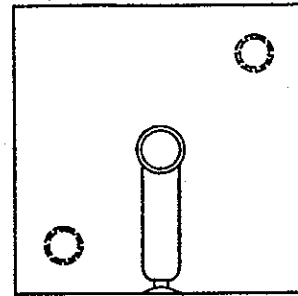


FIG. 29B

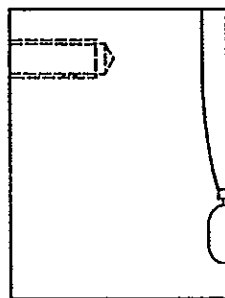


FIG. 29C

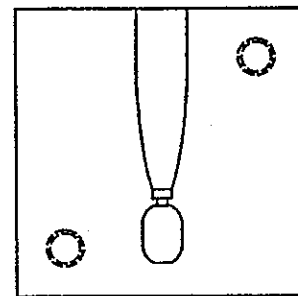


FIG. 29D

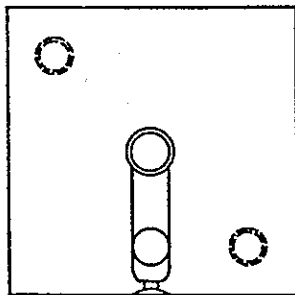


FIG. 29E

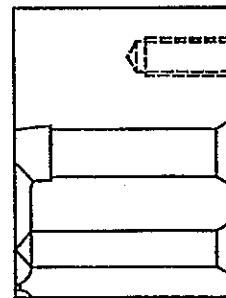


FIG. 29F

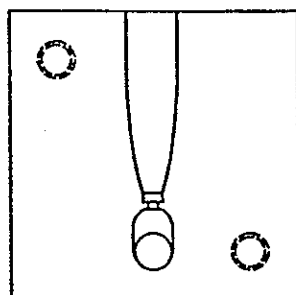


FIG. 29G


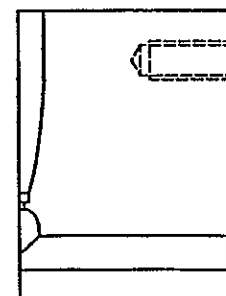


FIG. 29H


17/21

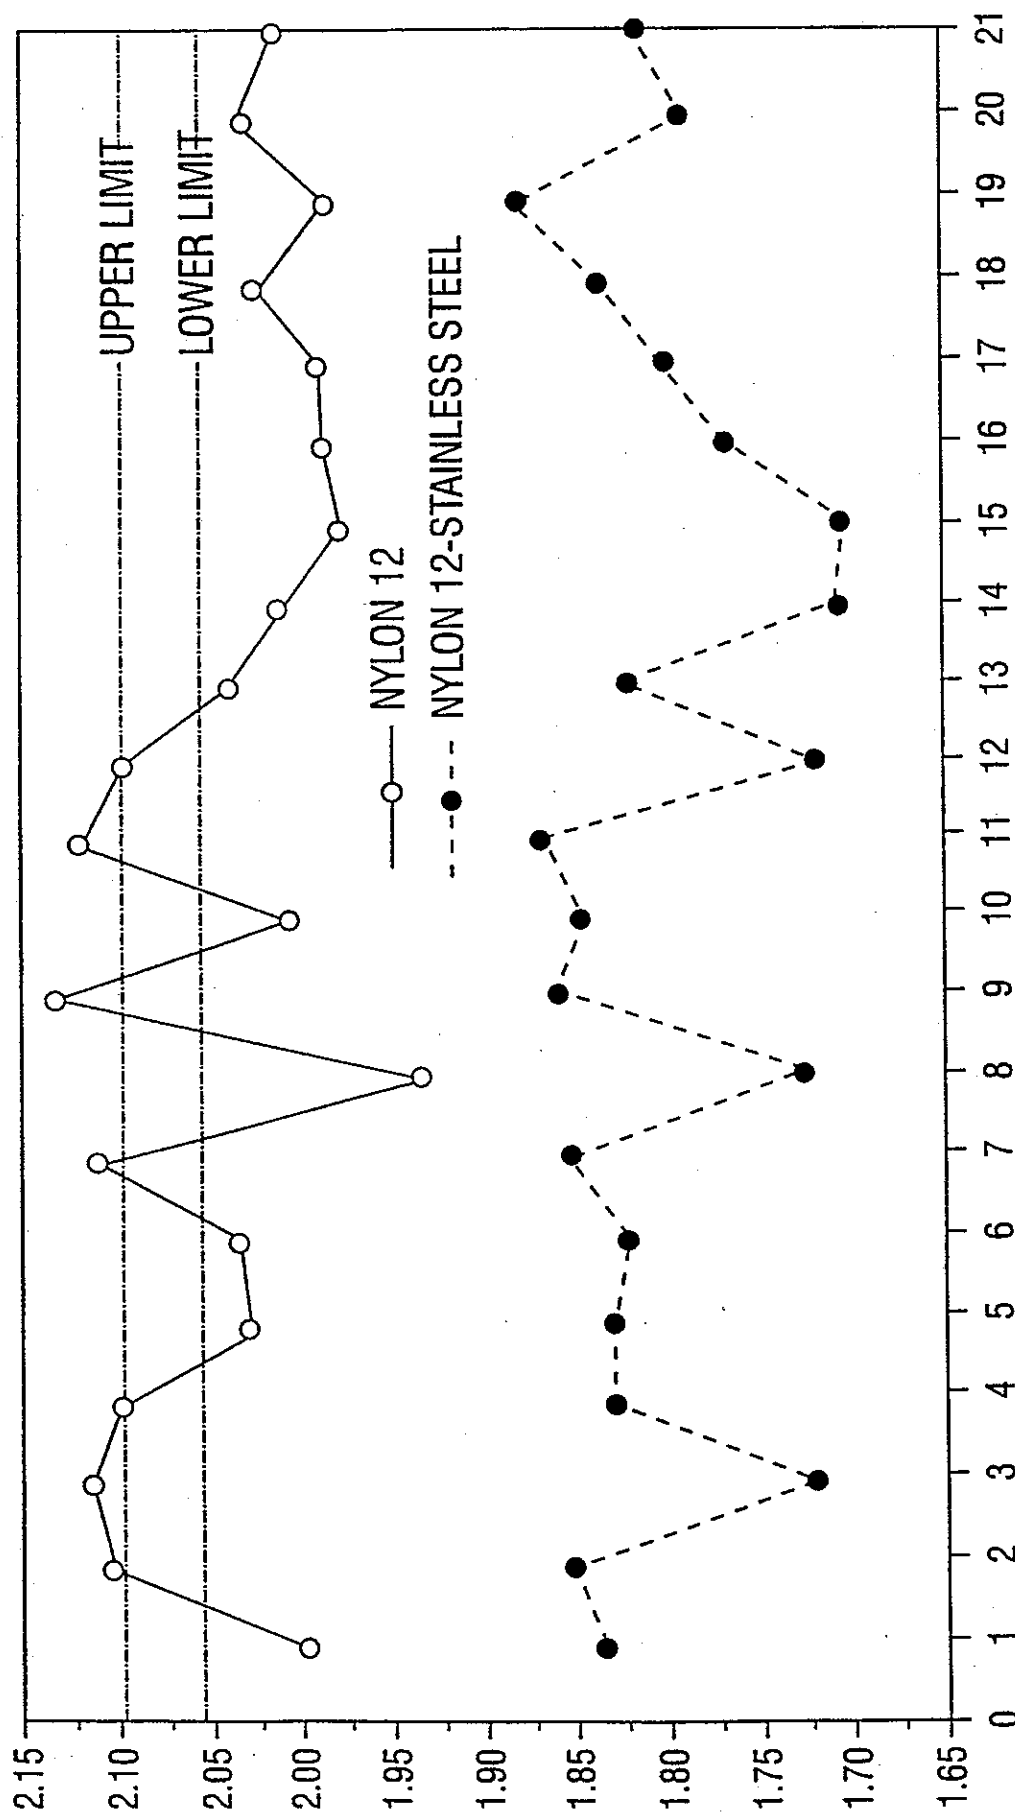

SAMPLE NO.

FIG. 30A


18/21

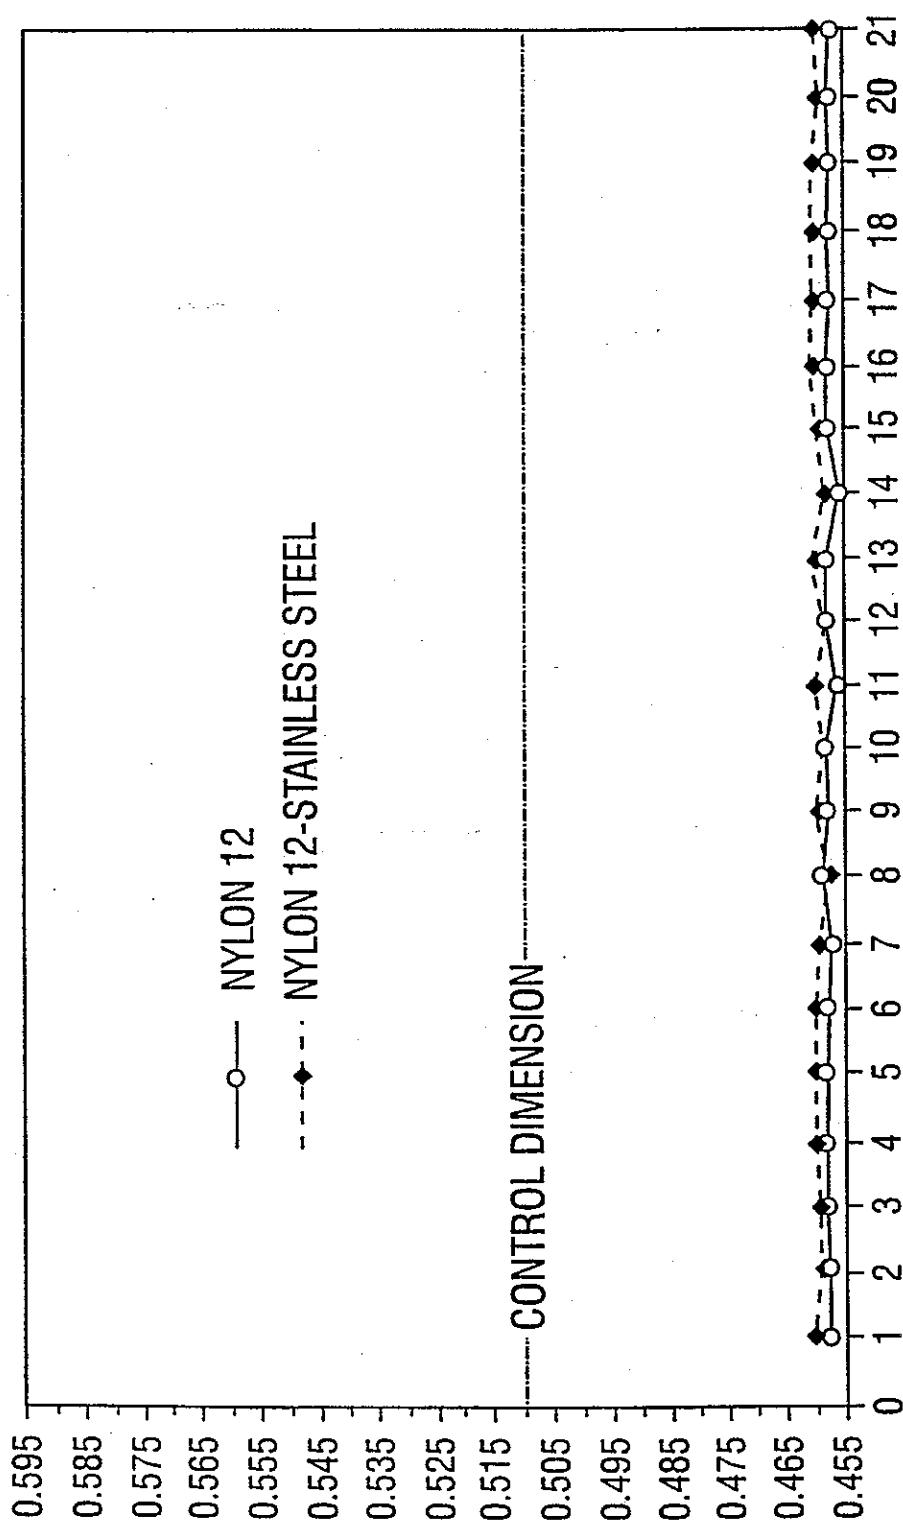

SAMPLE NO.

FIG. 30B

19/21

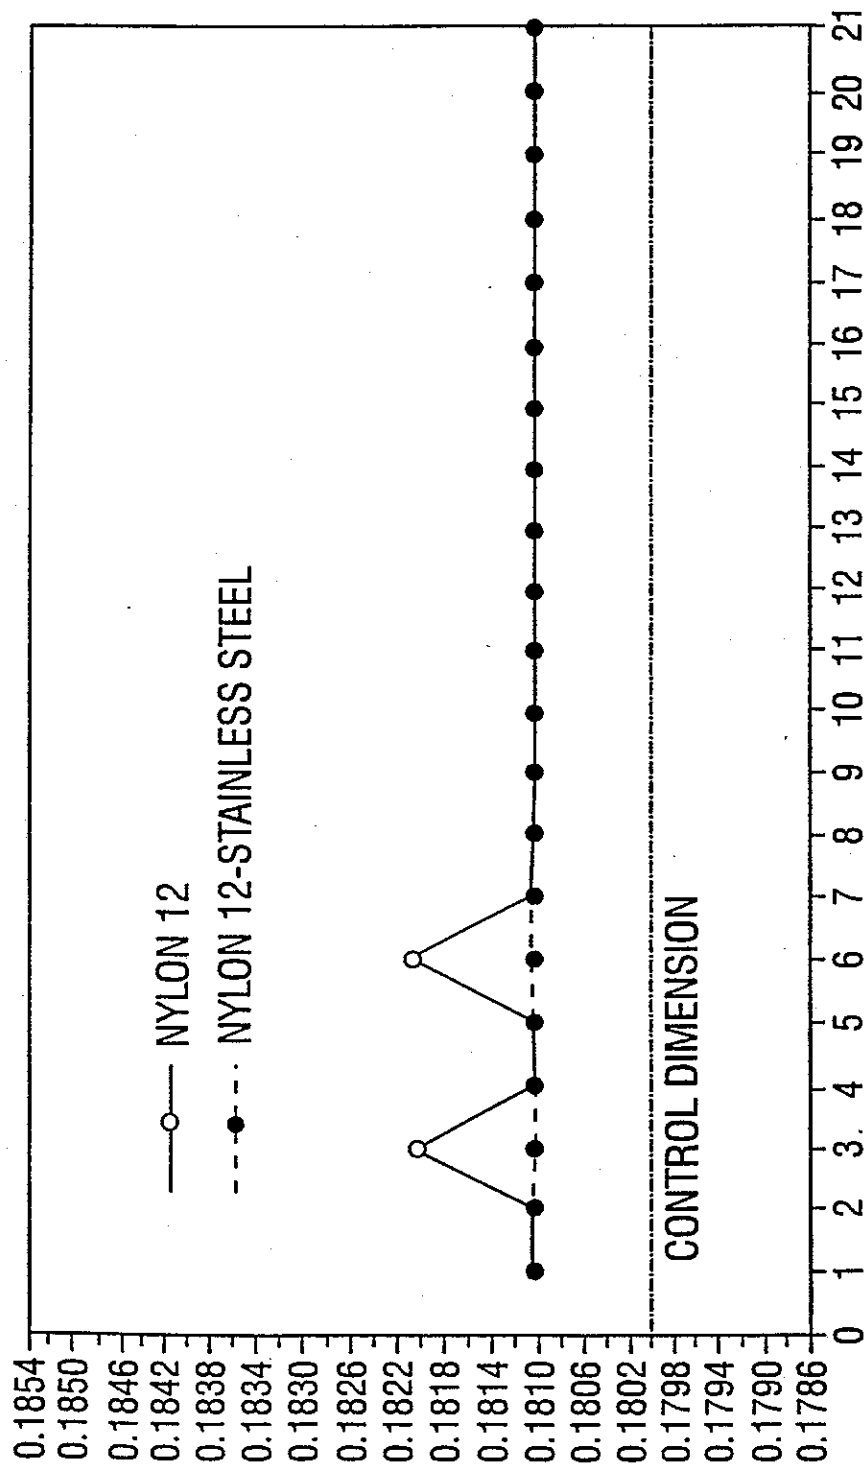

SAMPLE NO.

FIG. 30C

20/21

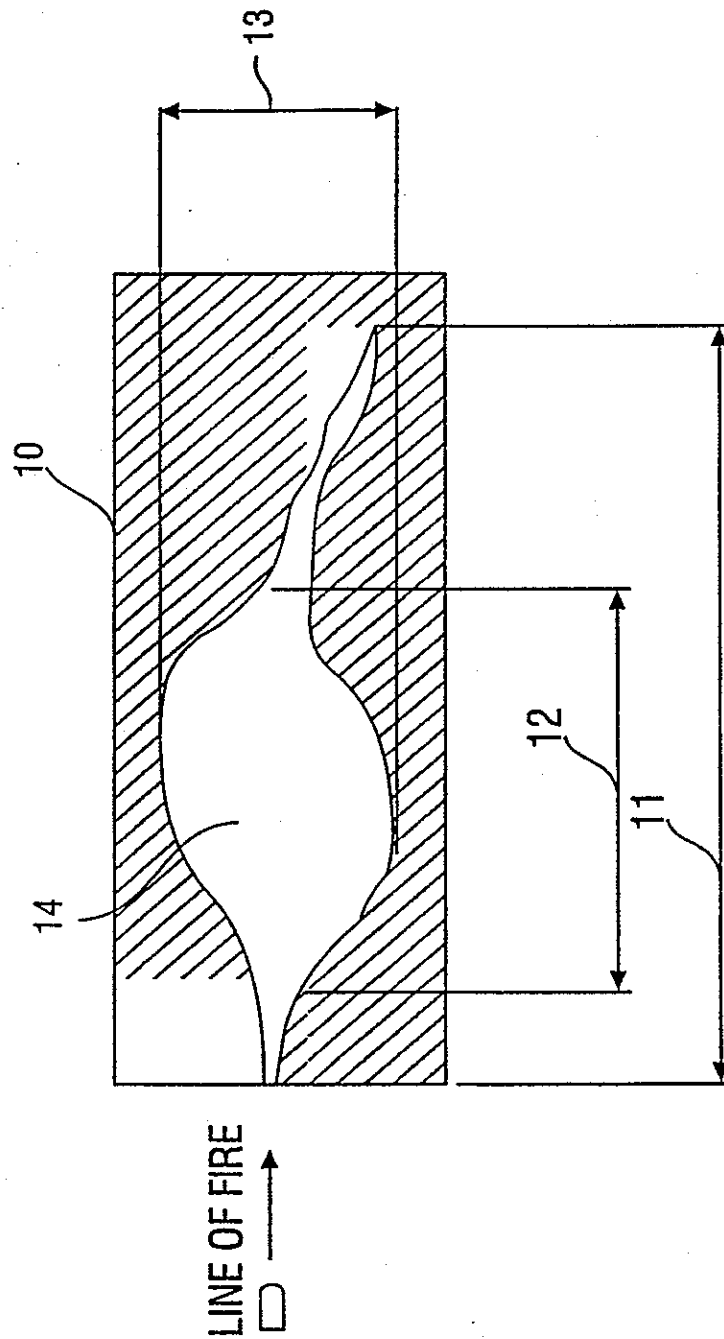


FIG. 31

21/21

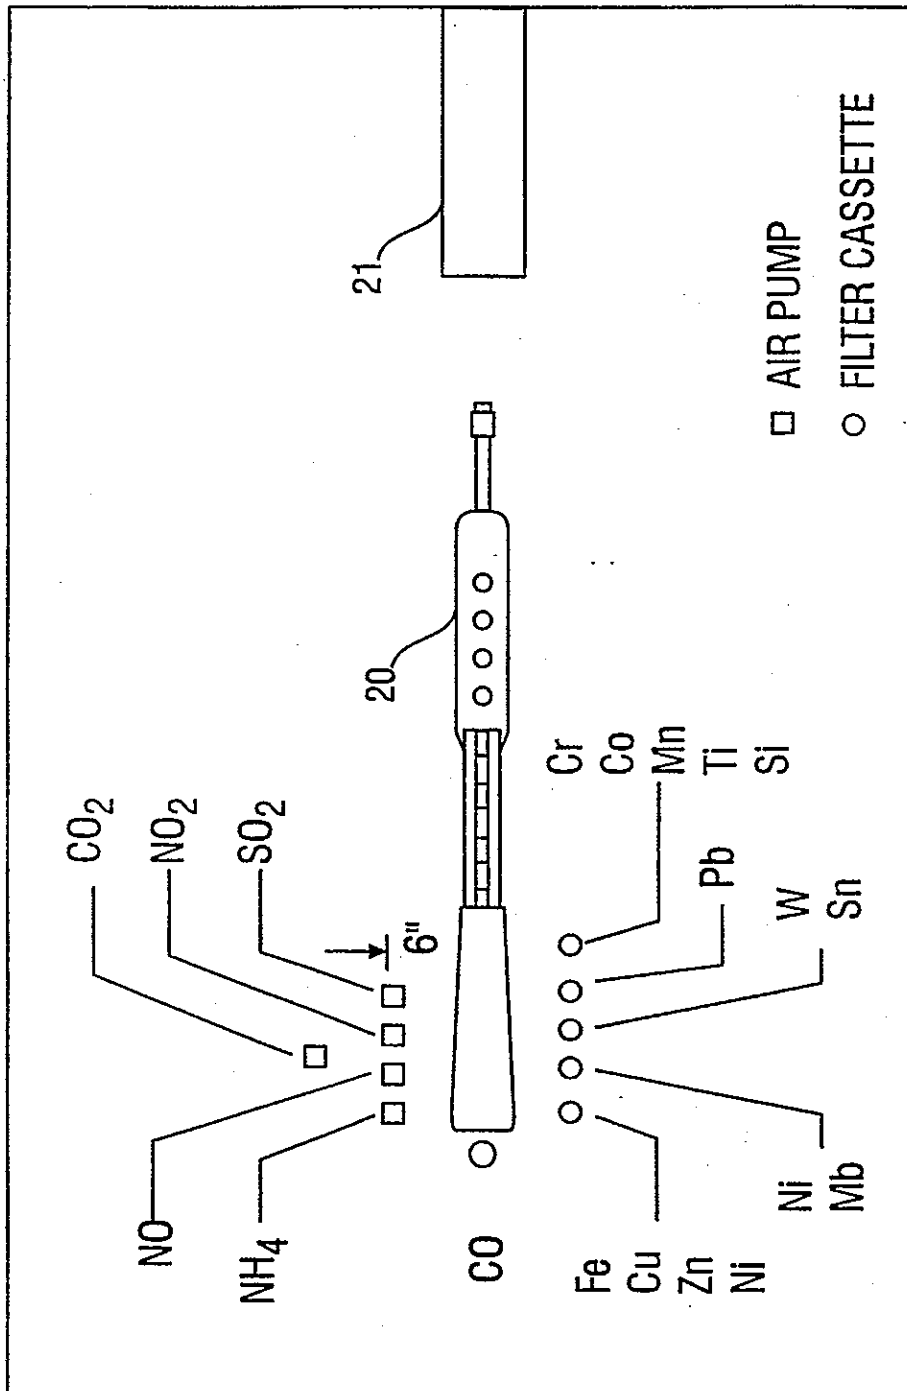


FIG. 32