

1/10

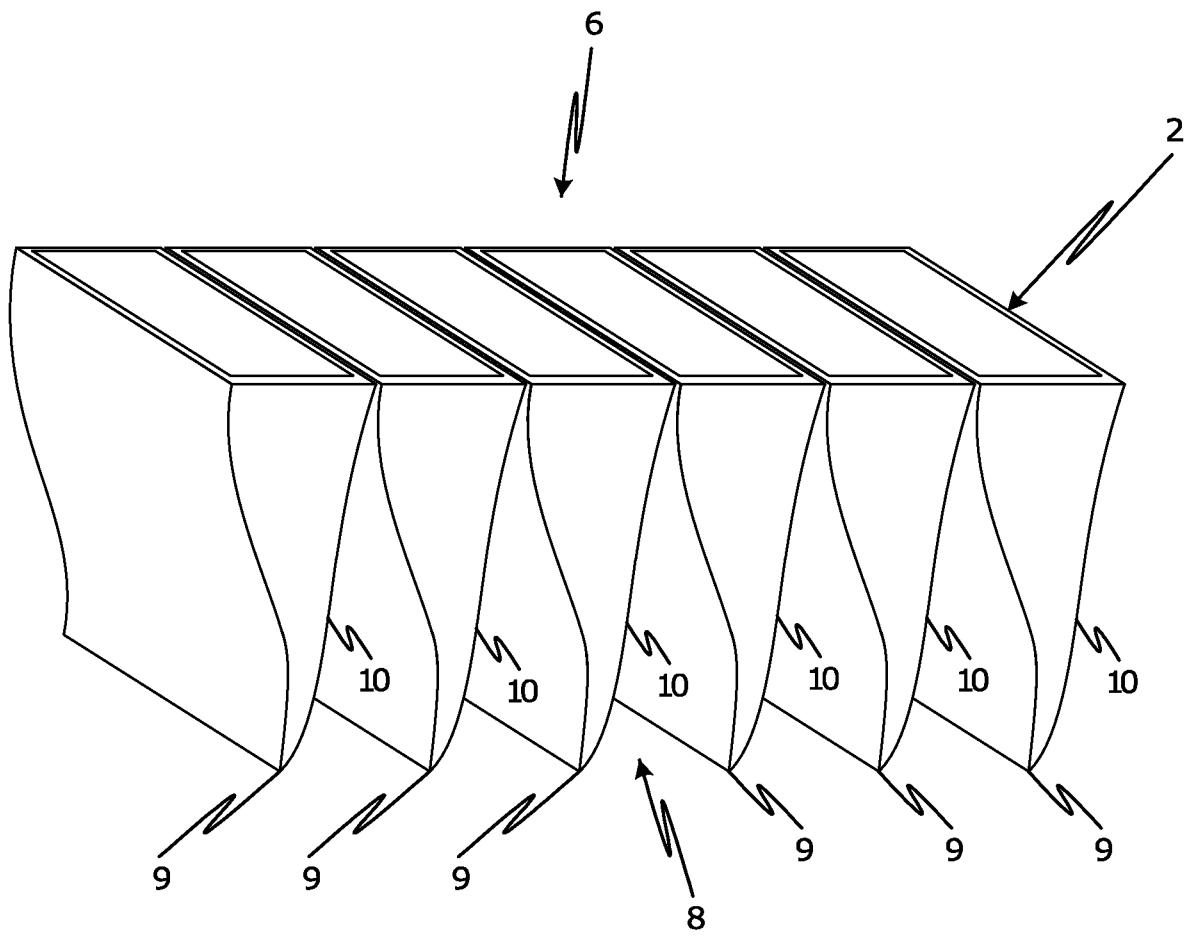


Fig. 1A

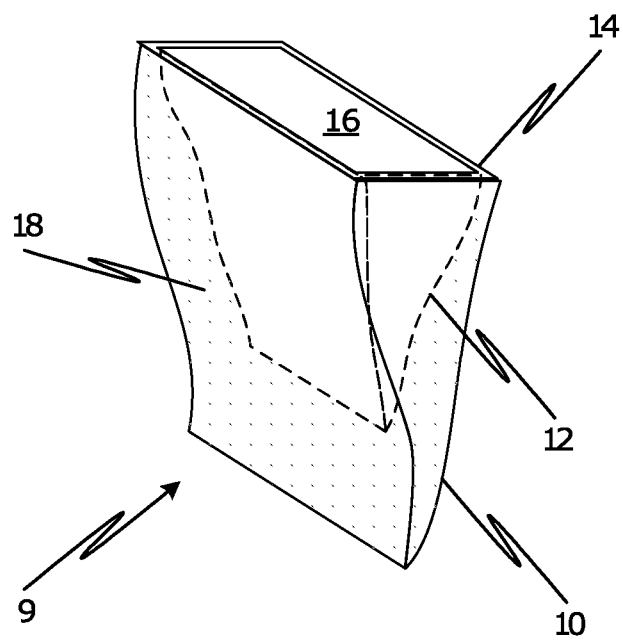


Fig. 2

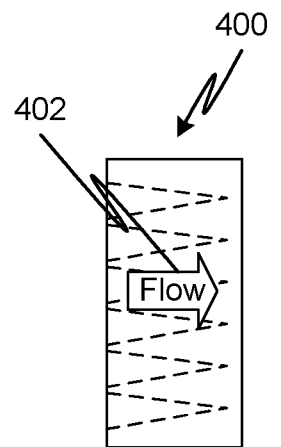


Fig. 1B

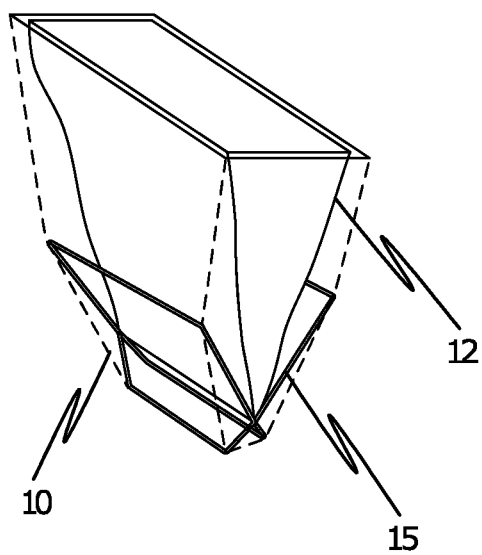


Fig. 3

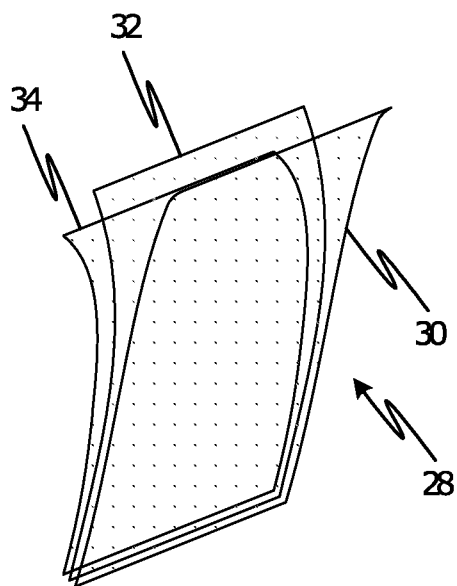
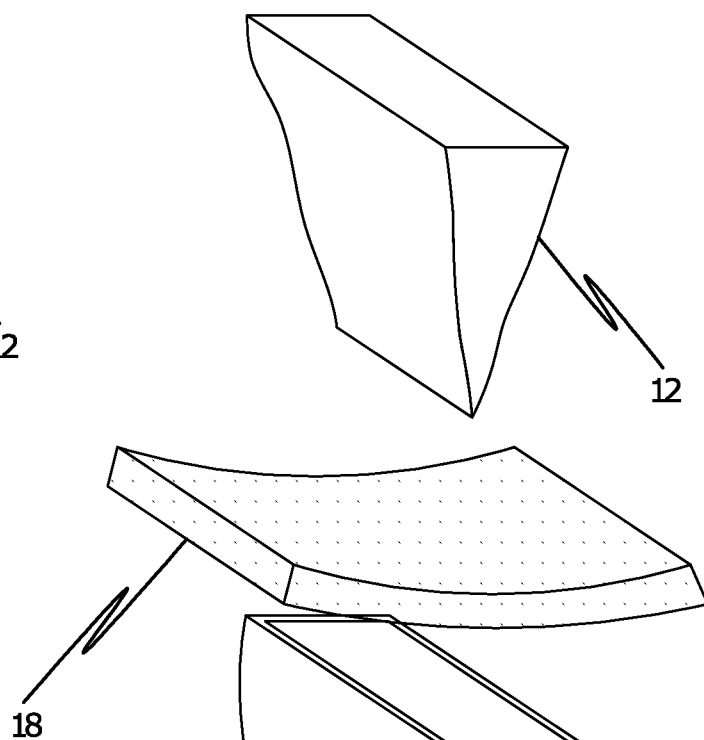


Fig. 5

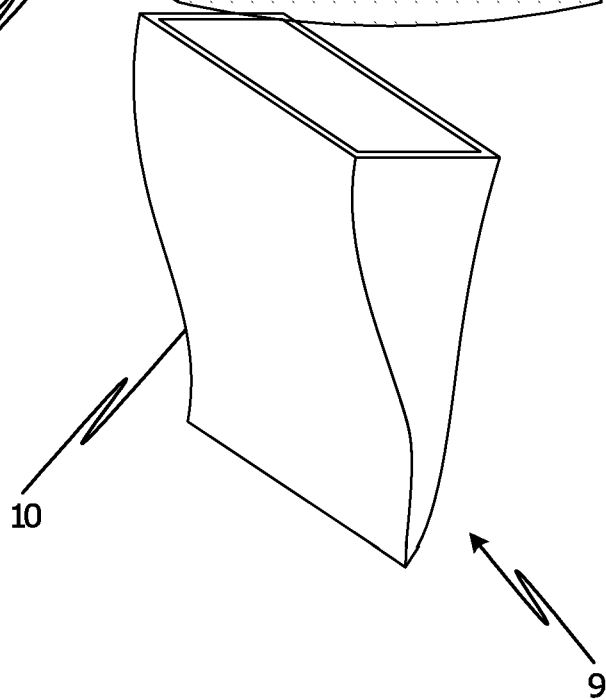


Fig. 4

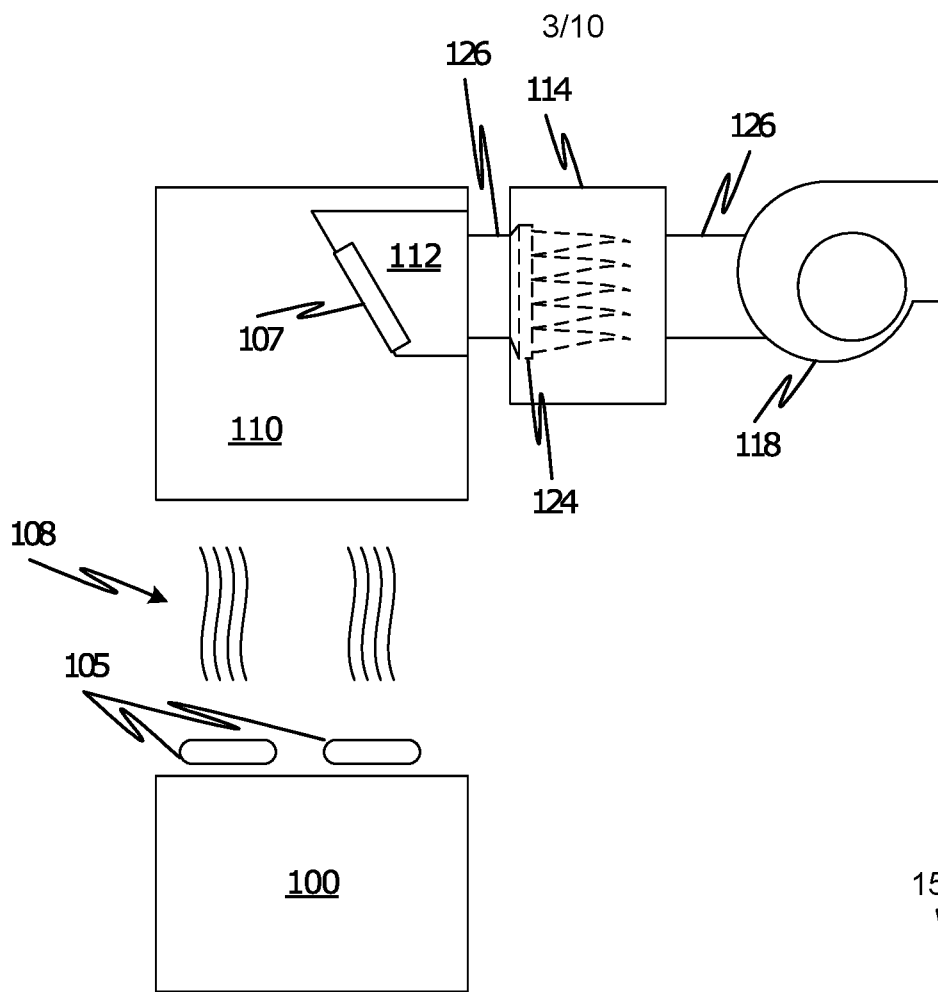


Fig. 6

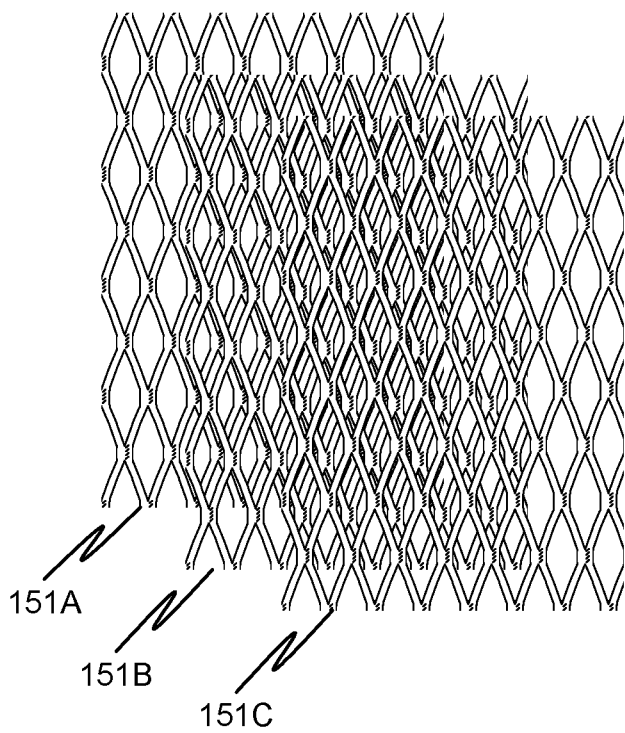


Fig. 8A


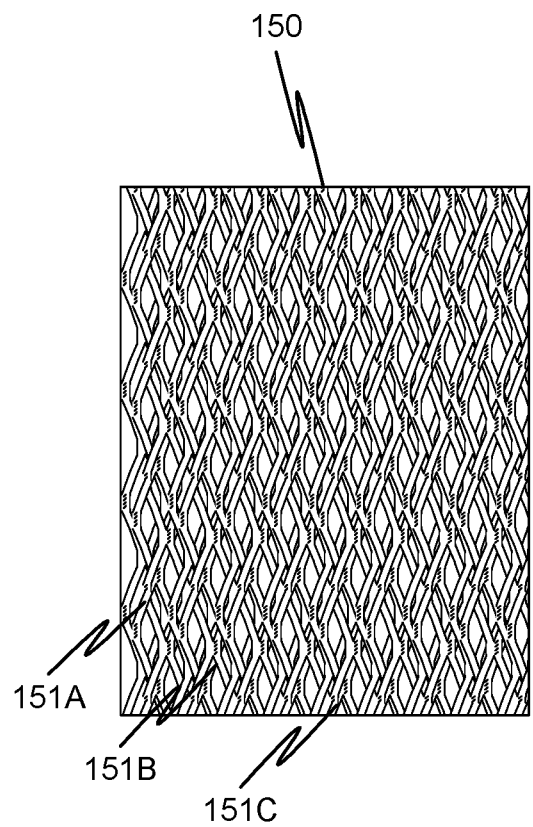


Fig. 8B

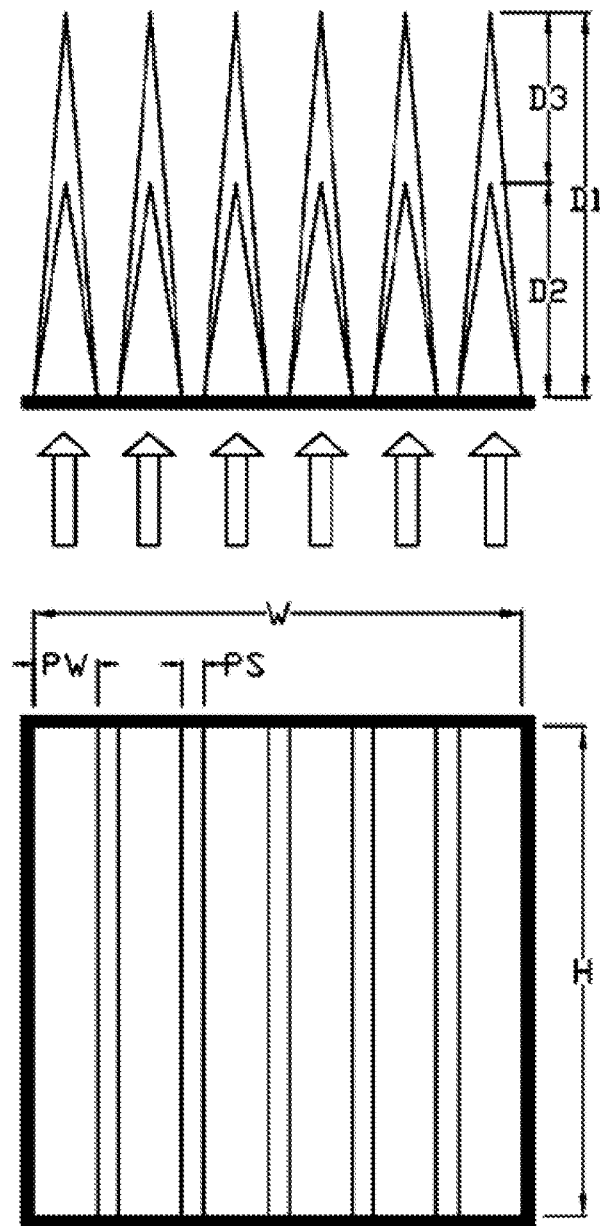

H: Height of frame
W: Width of frame
PW: Pocket width
PS: Pocket spacing
D1: Depth of primary pocket

Fig. 7

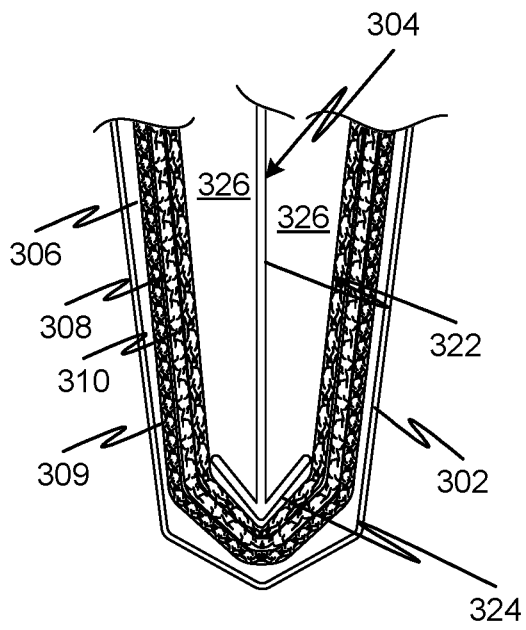


Fig. 9A

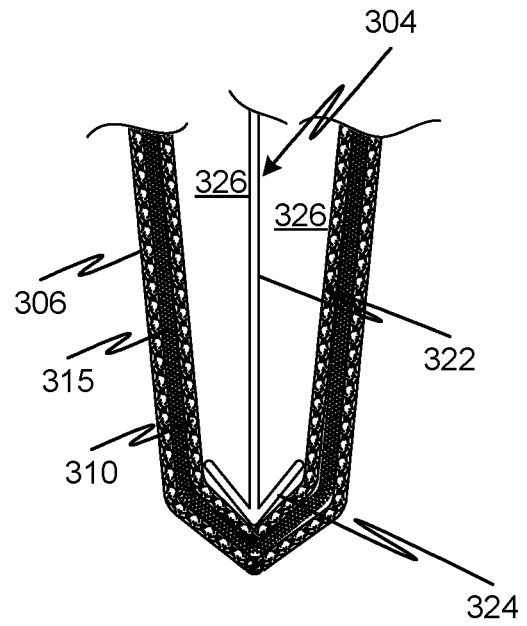


Fig. 9C

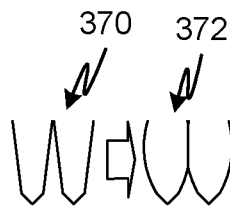


Fig. 9E

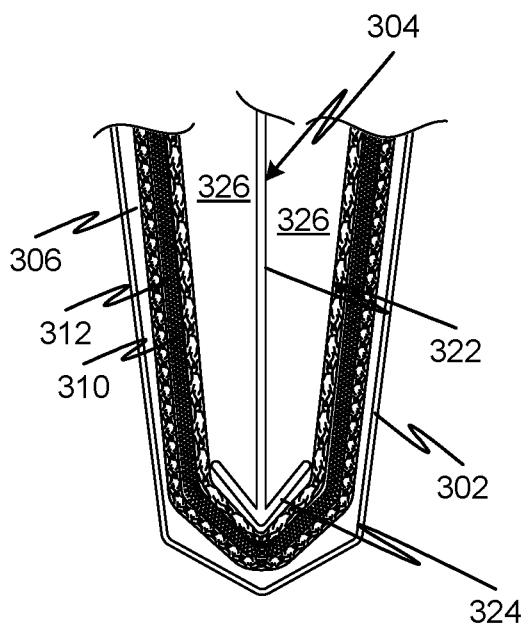


Fig. 9B

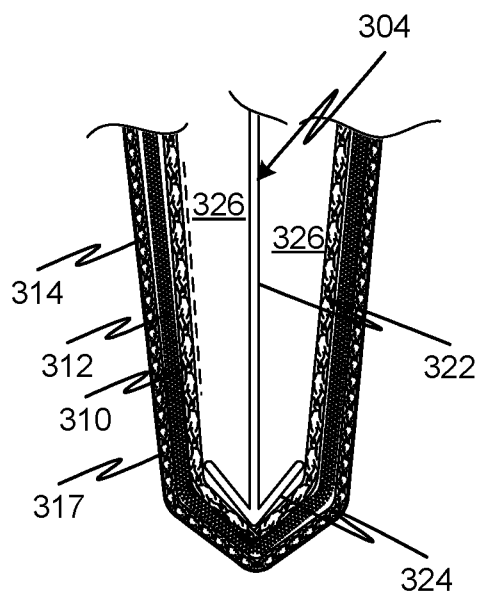


Fig. 9D

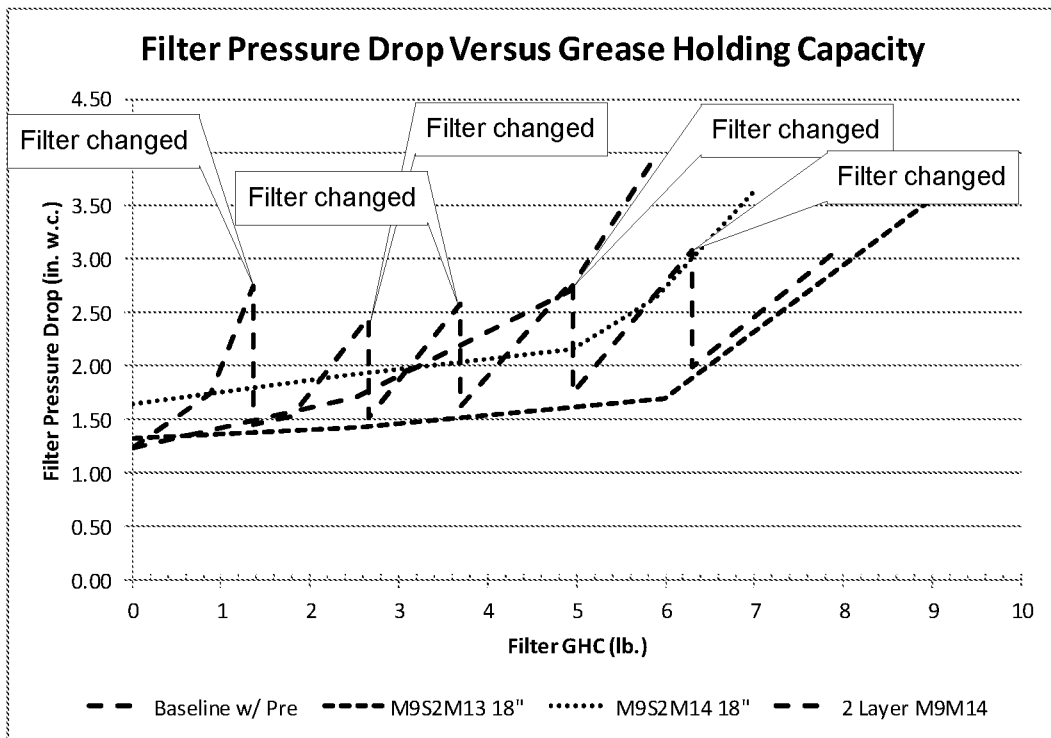


Fig. 10A

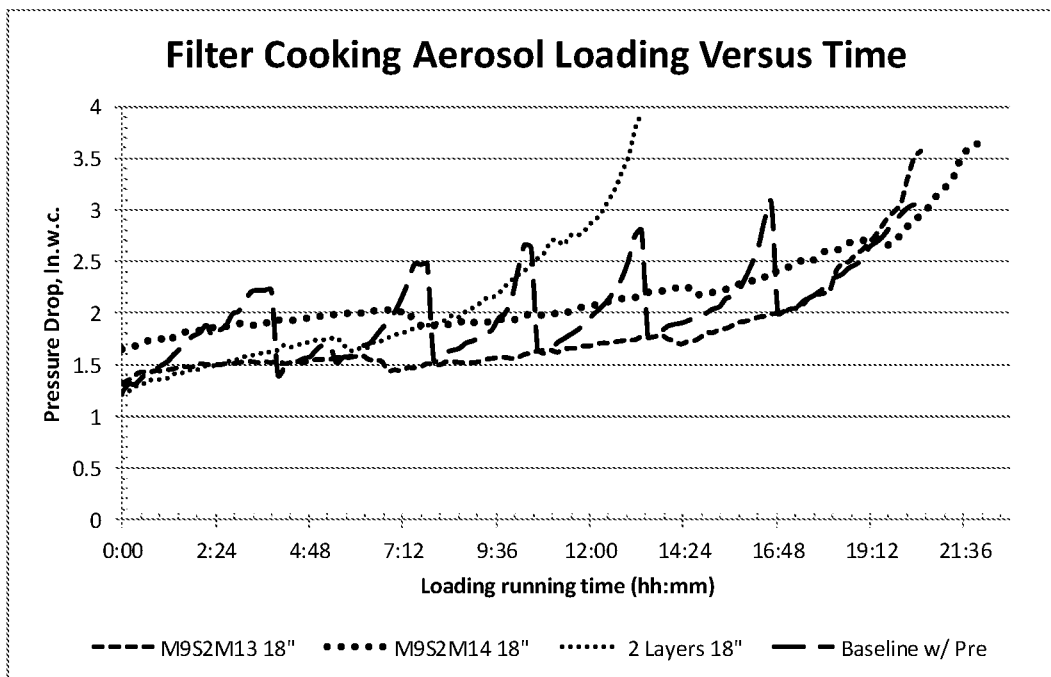
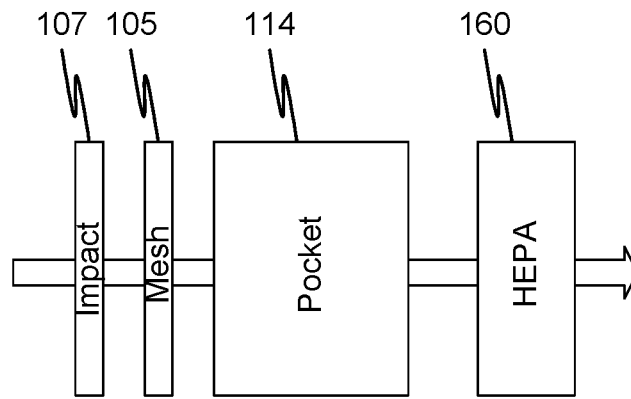
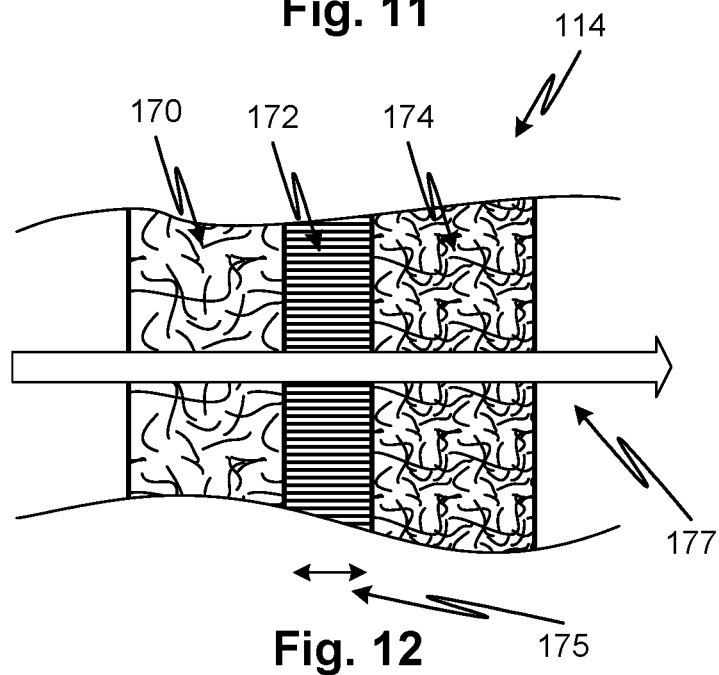
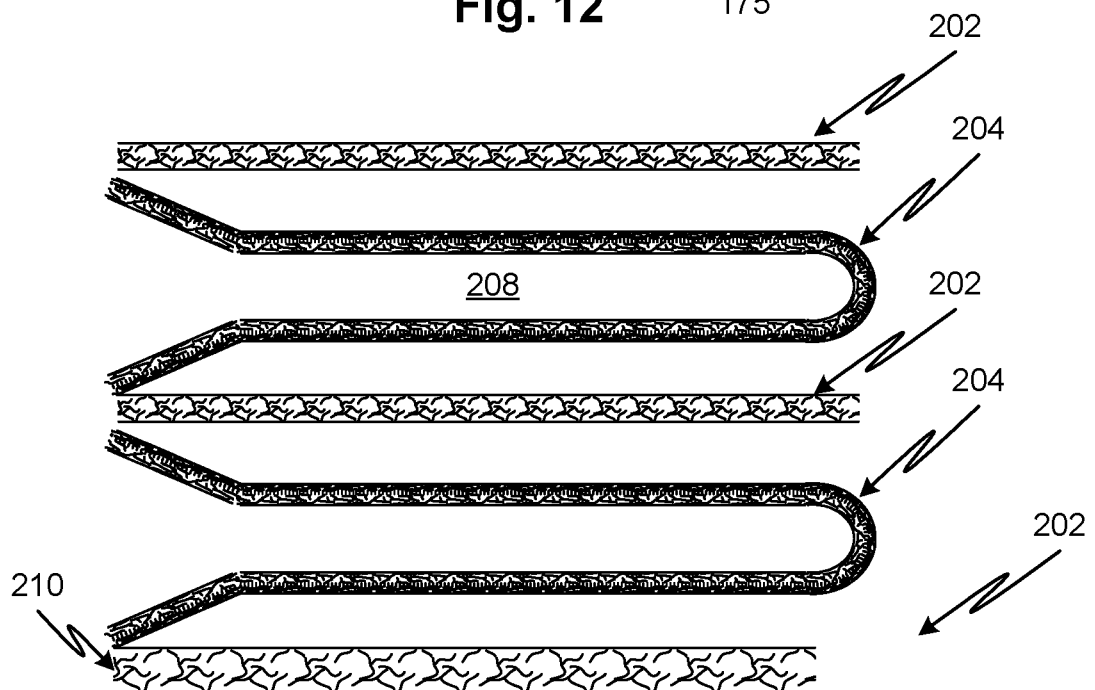


Fig. 10B

**Fig. 11****Fig. 12****Fig. 13**

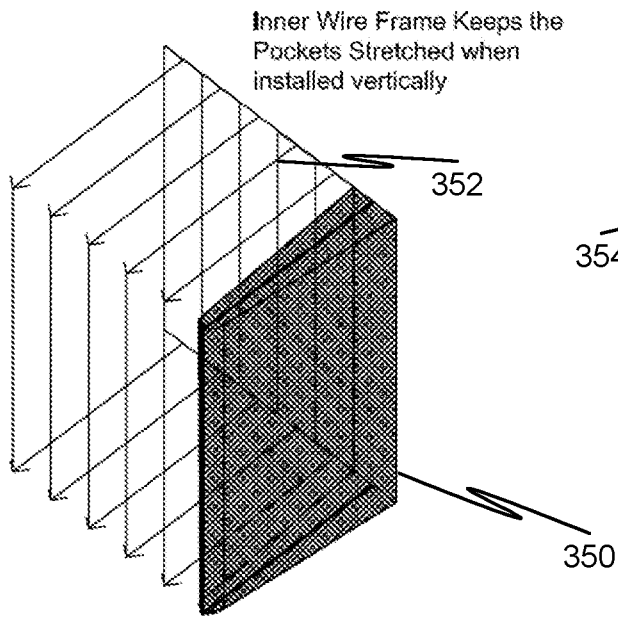


Fig. 14A

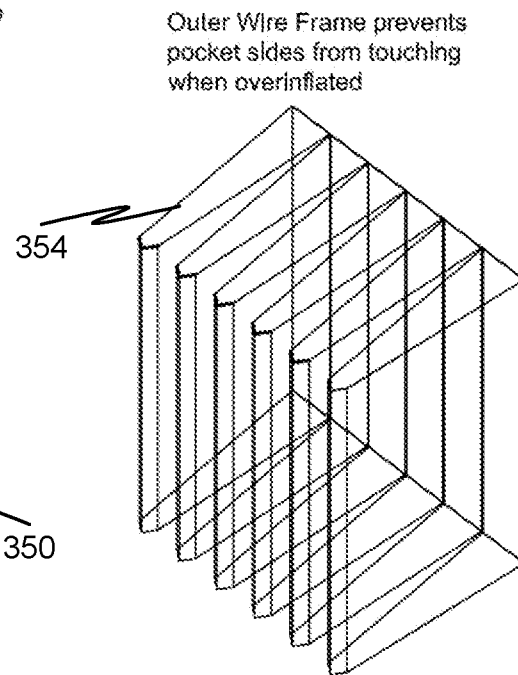


Fig. 14B

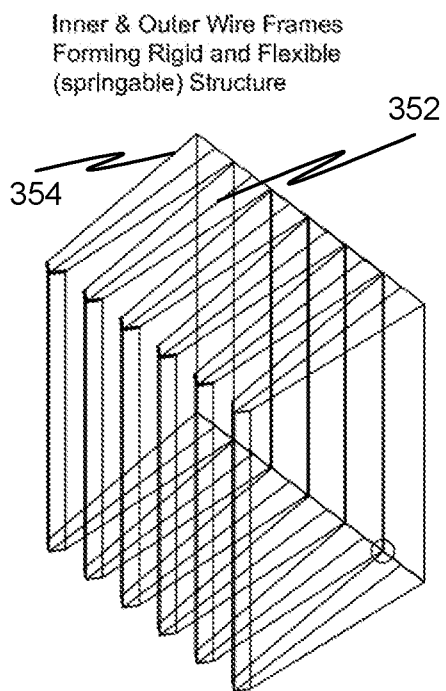


Fig. 14C

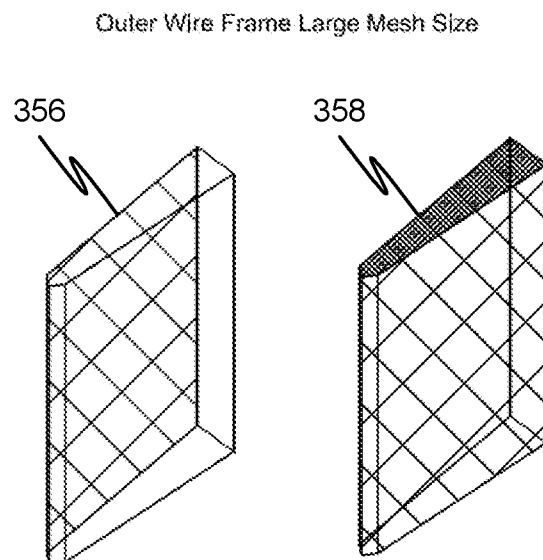


Fig. 14D

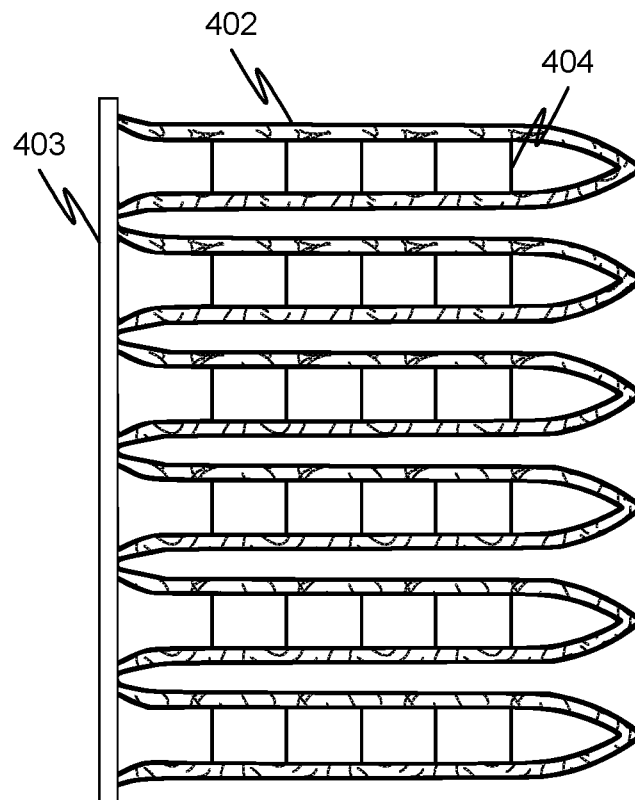


Fig. 15A

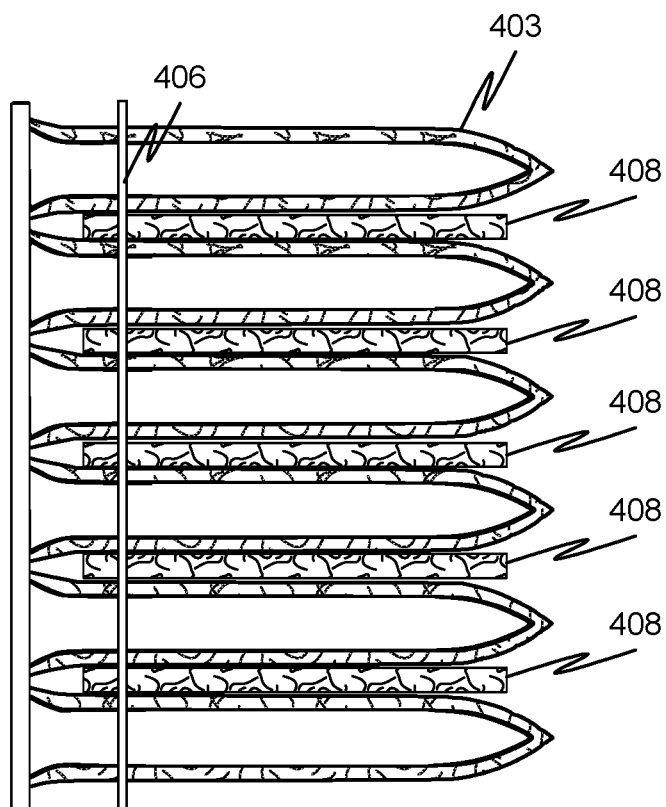


Fig. 15B

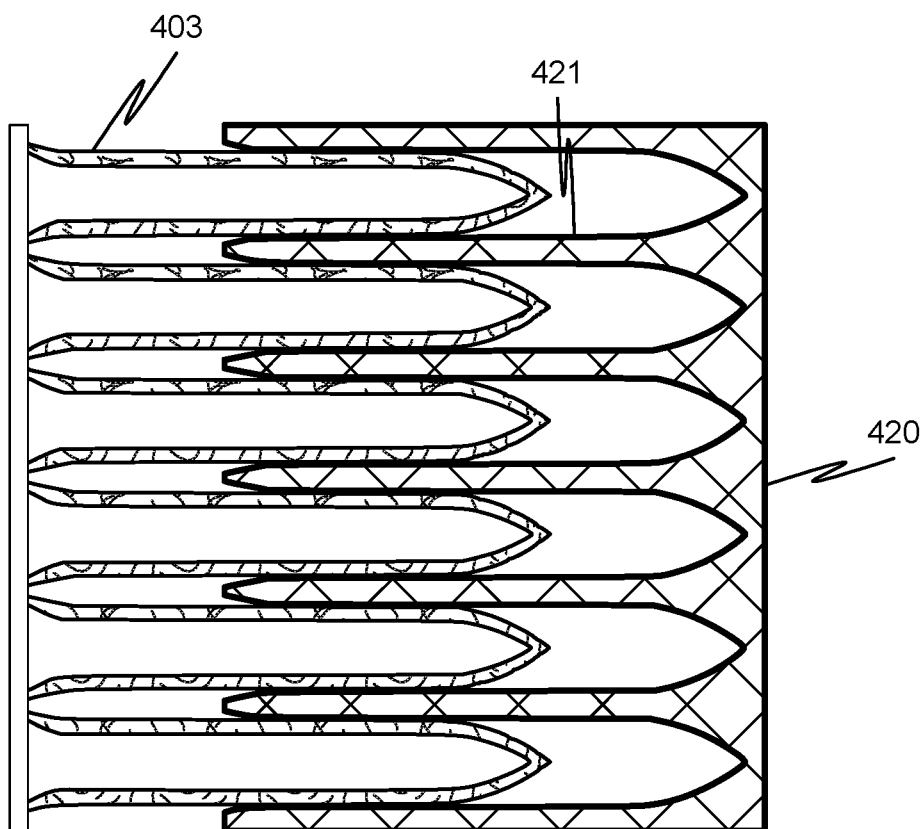


Fig. 15C

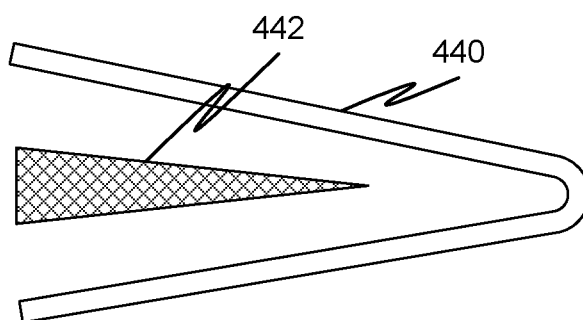


Fig. 16A

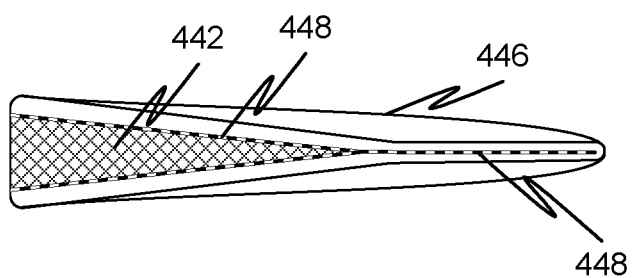


Fig. 16B