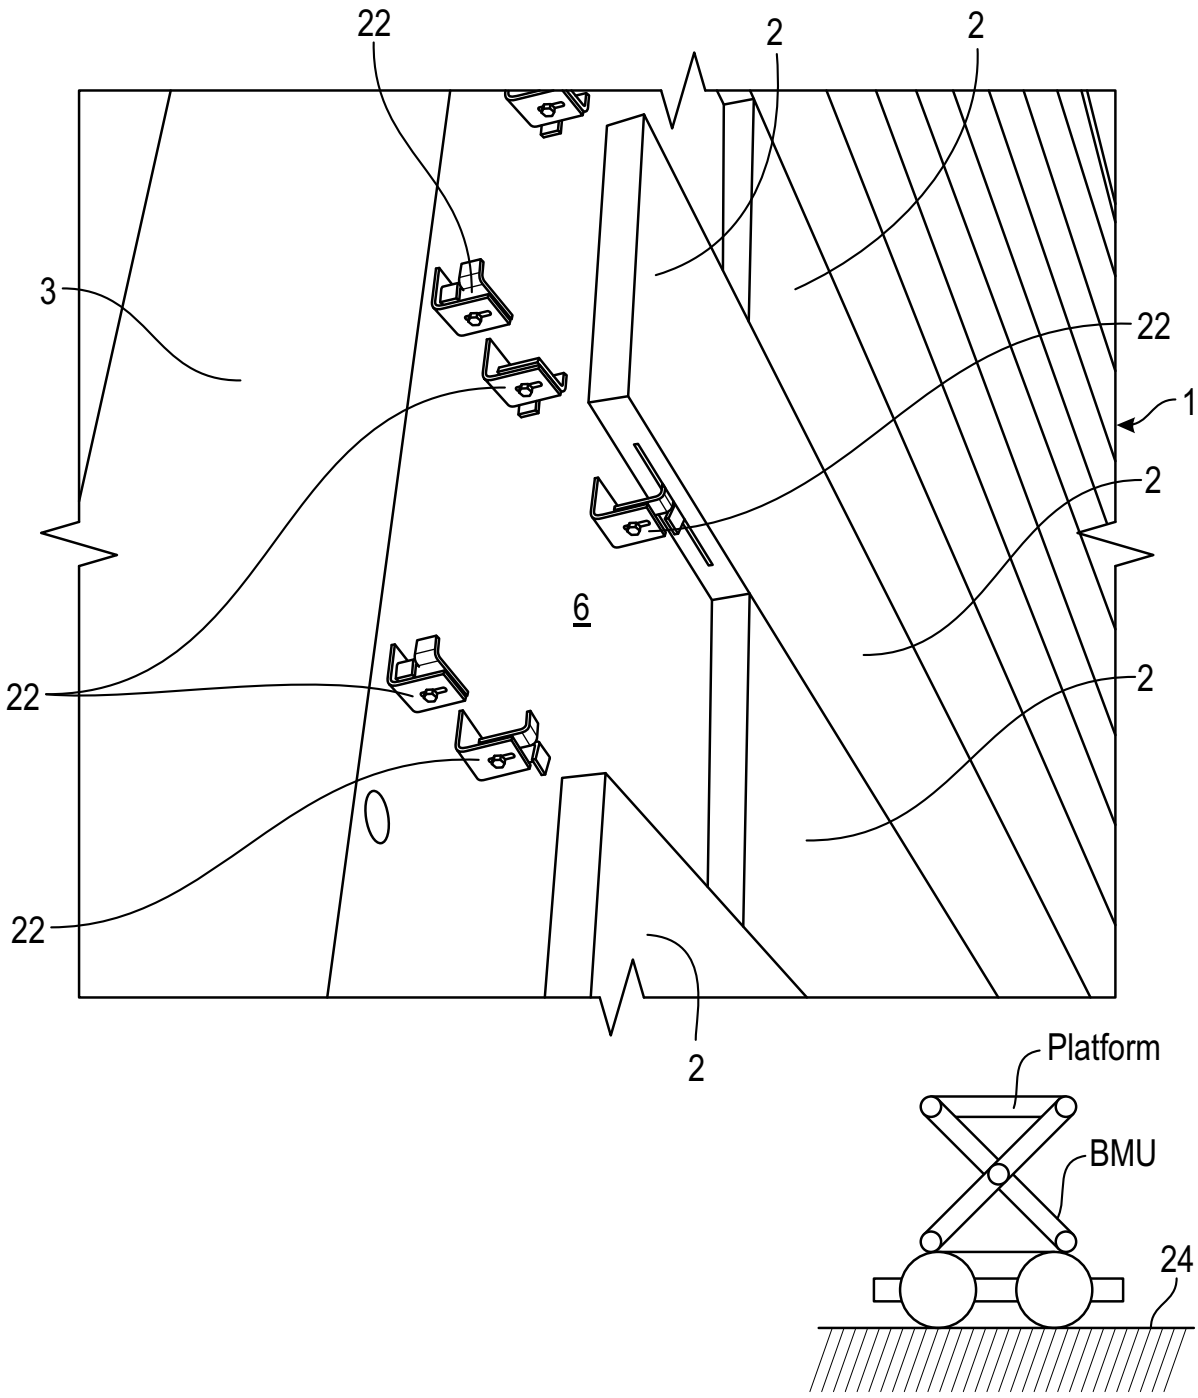


FIG. 1

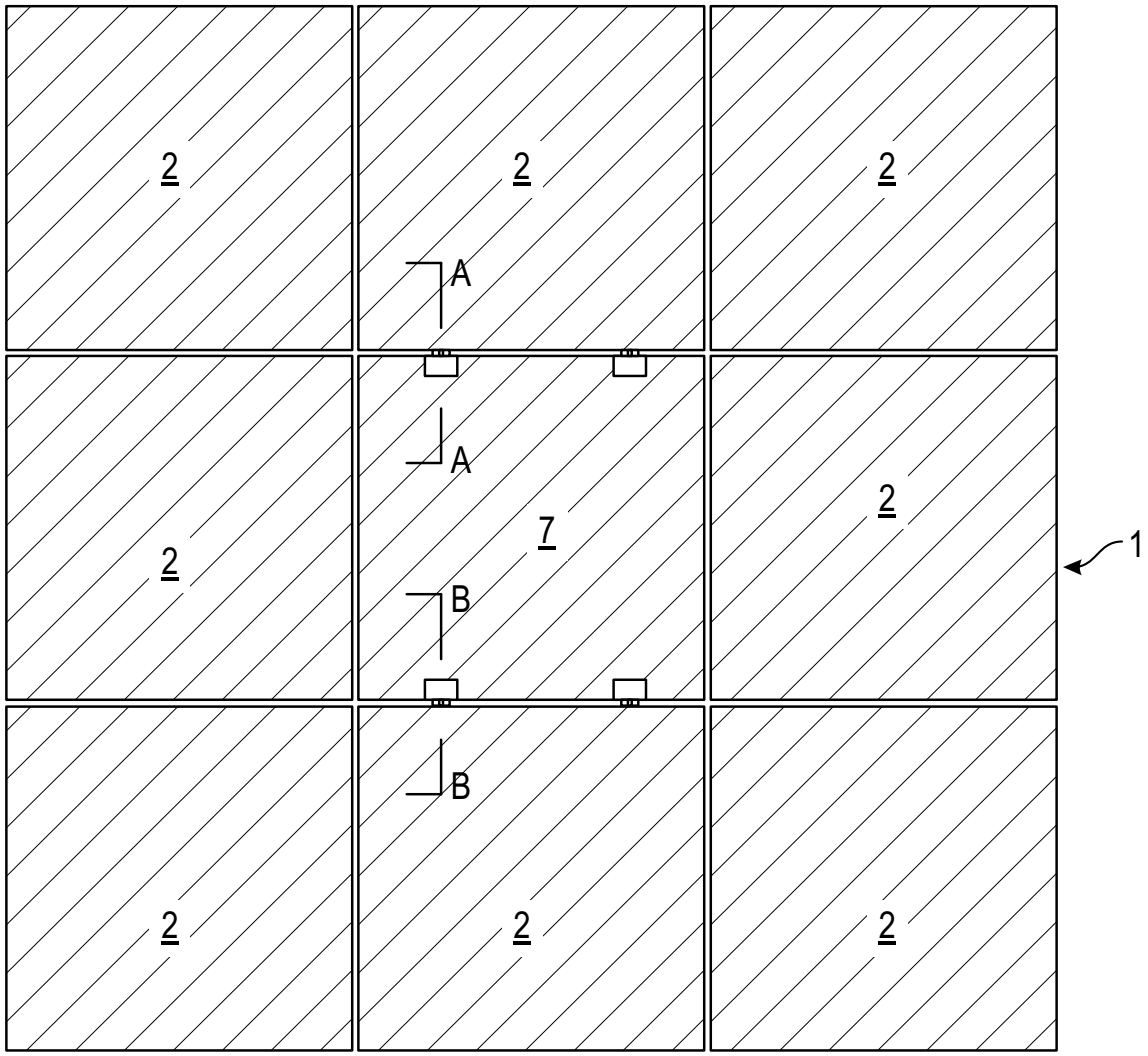


FIG. 2

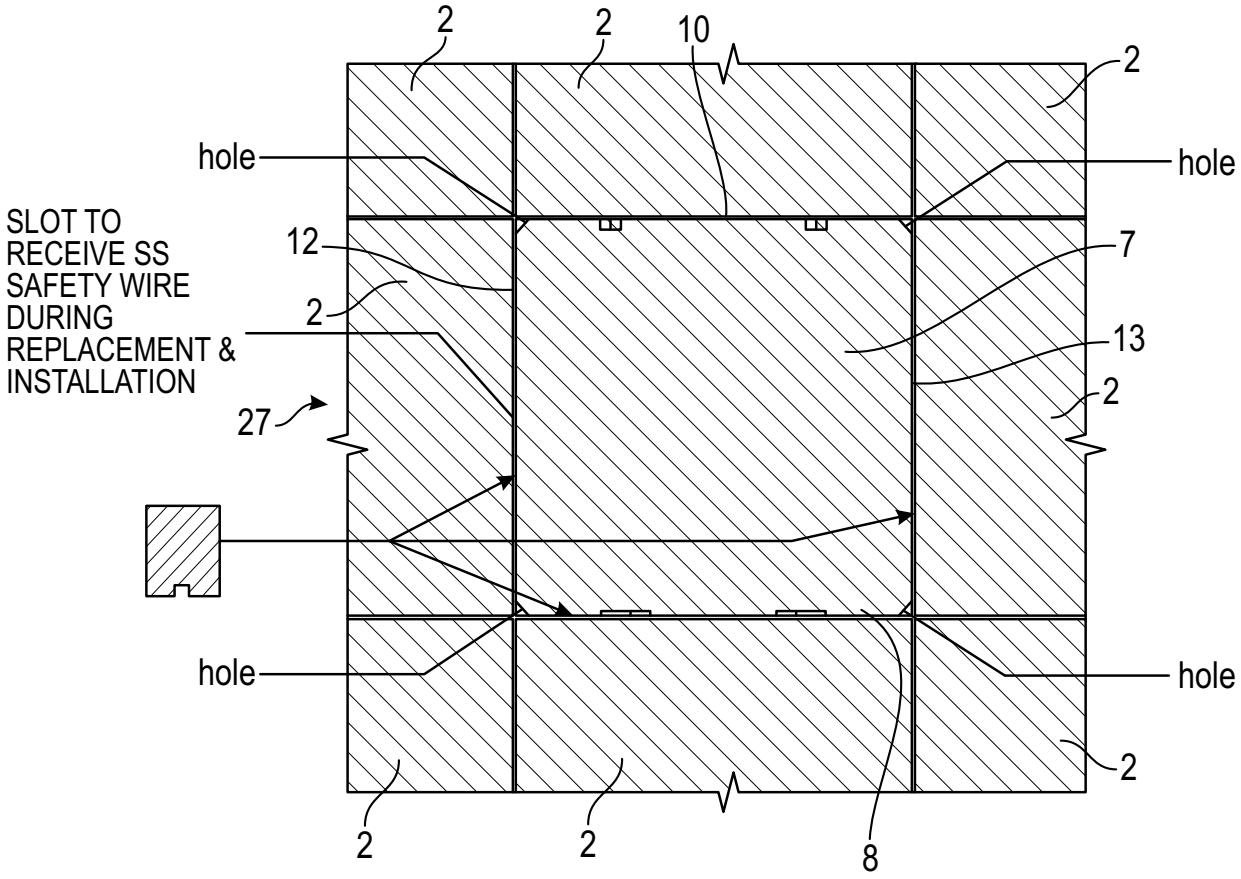
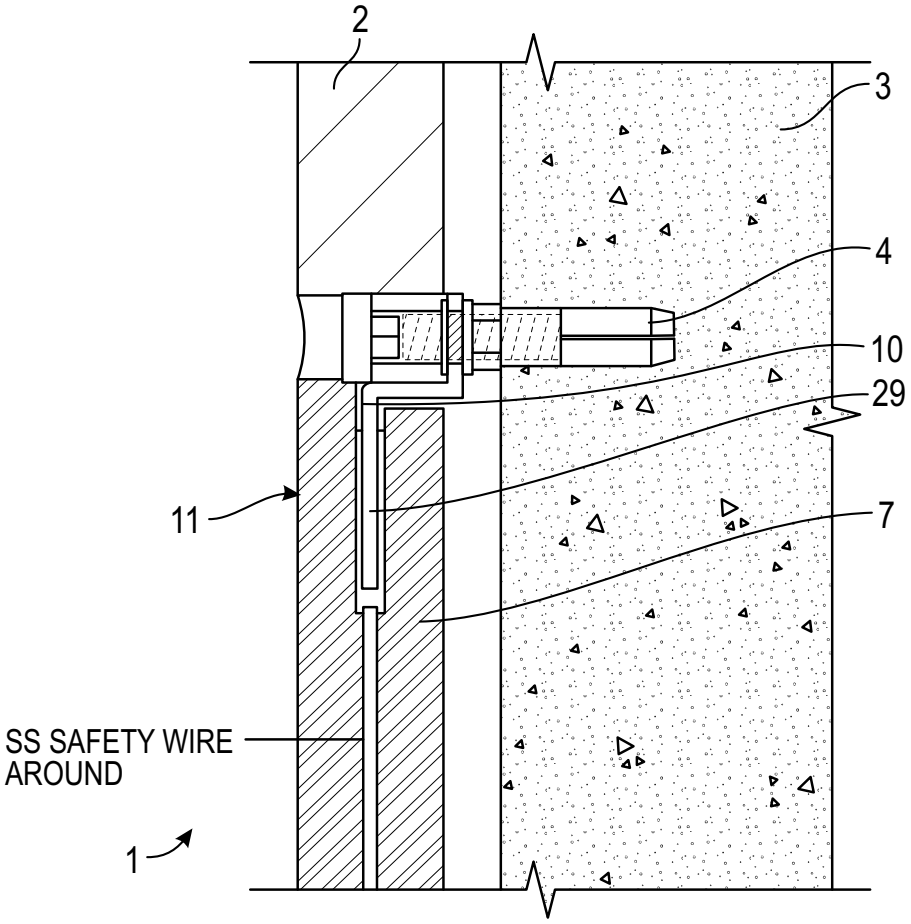

2
2
10
2
hole
hole
SLOT TO
RECEIVE SS
SAFETY WIRE
DURING
REPLACEMENT &
INSTALLATION
12
2
27
7
13
2
hole
hole
2
2
2
8

FIG. 3



SECTION A-A

FIG. 4

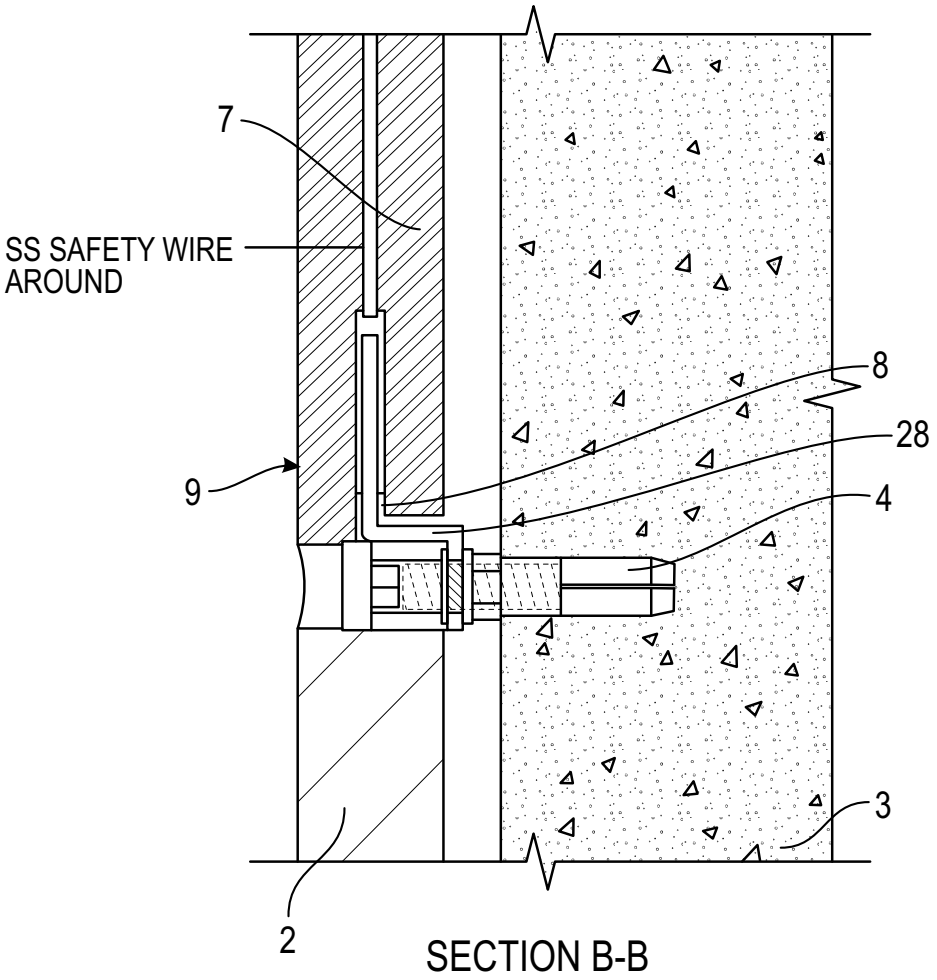


FIG. 5

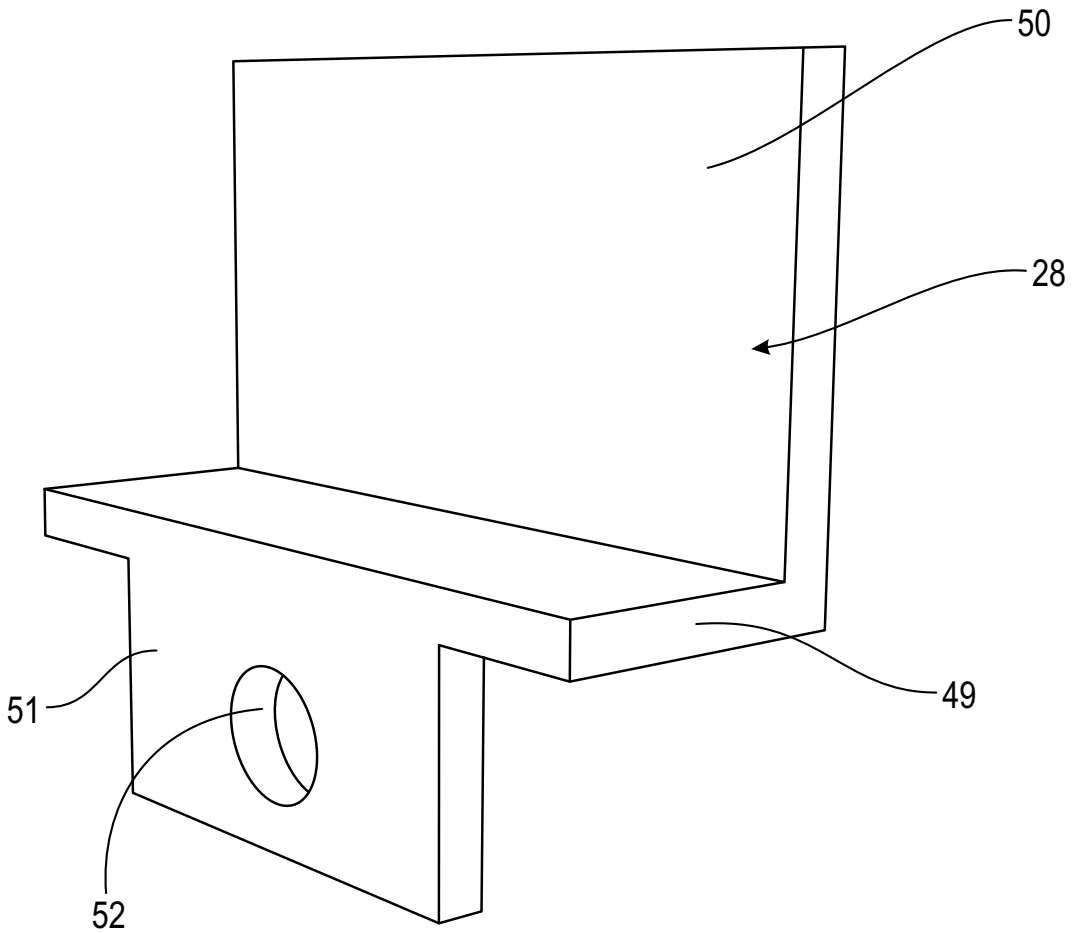


FIG. 6

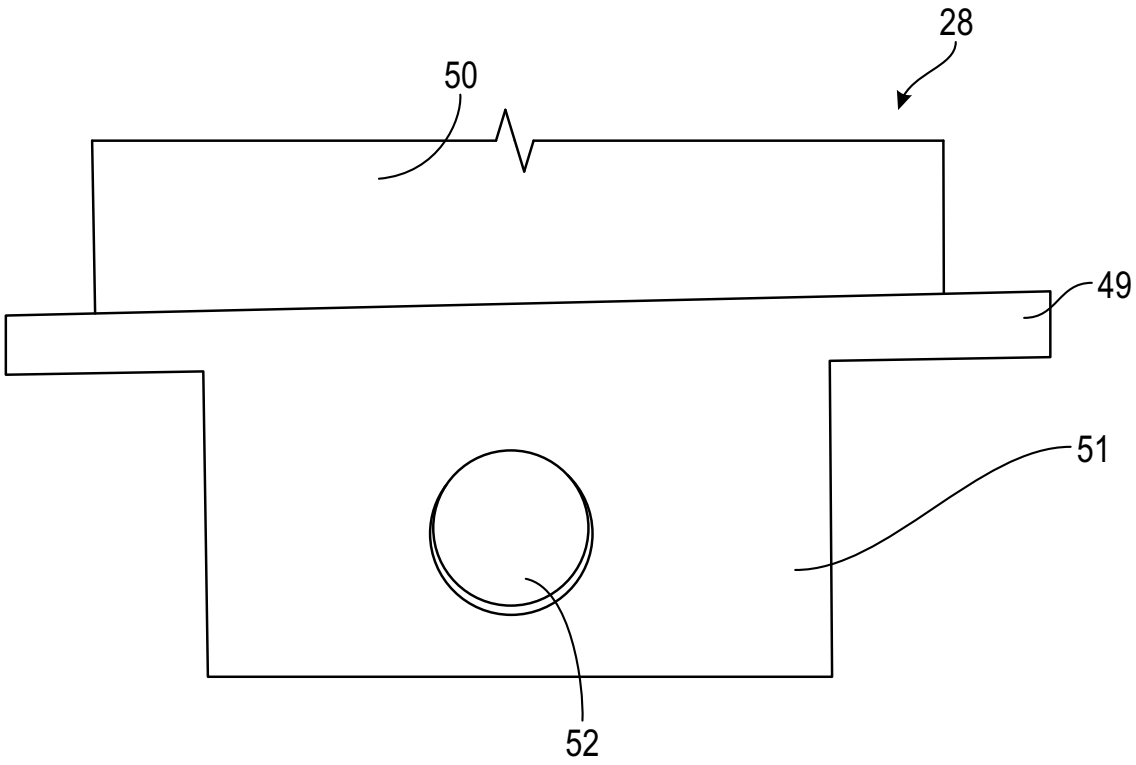


FIG. 7

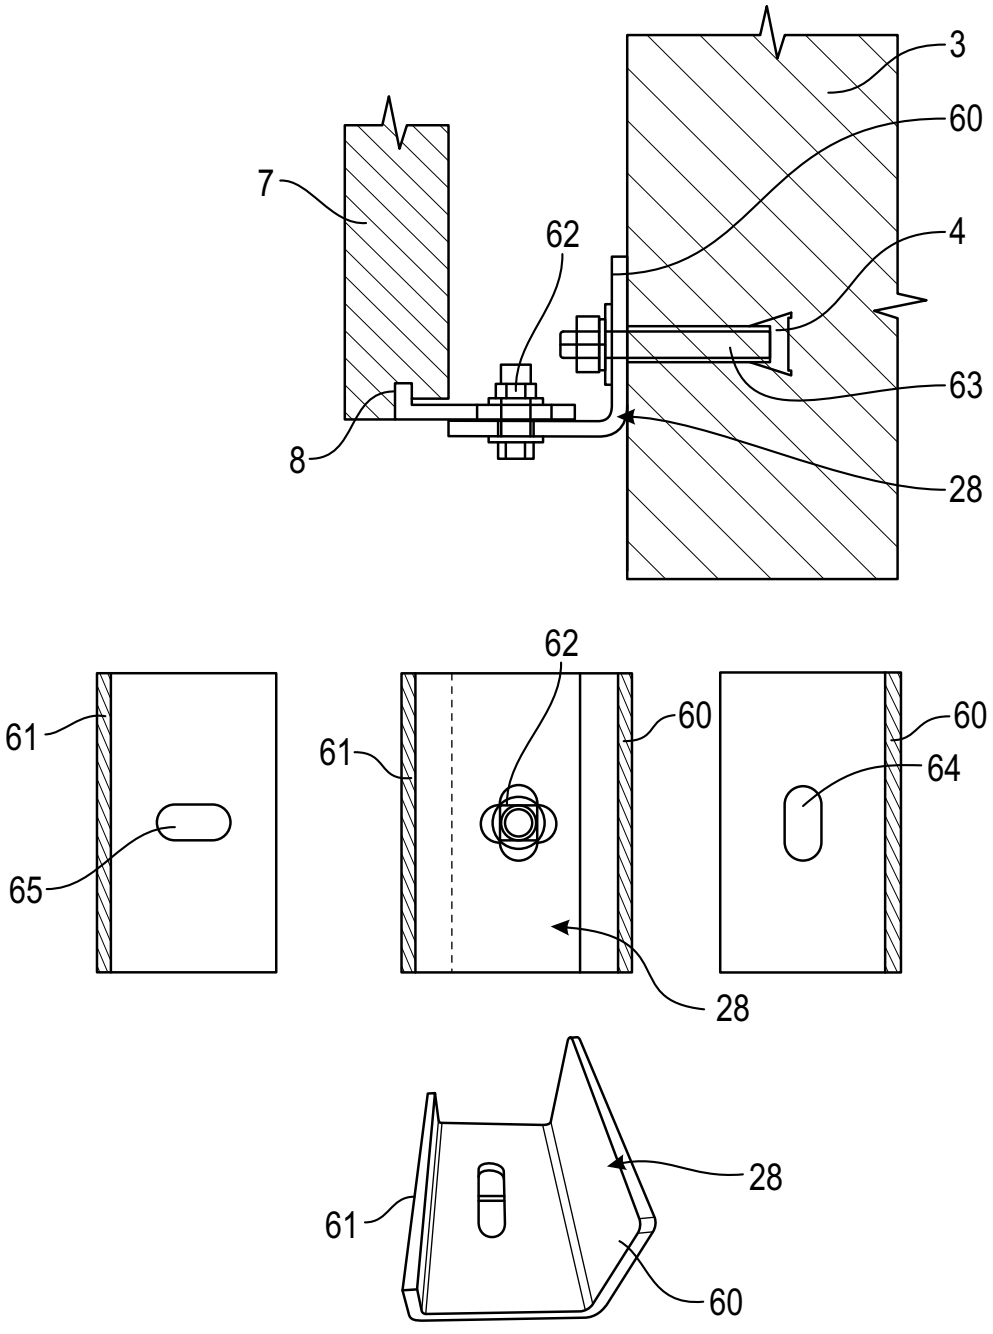


FIG. 8

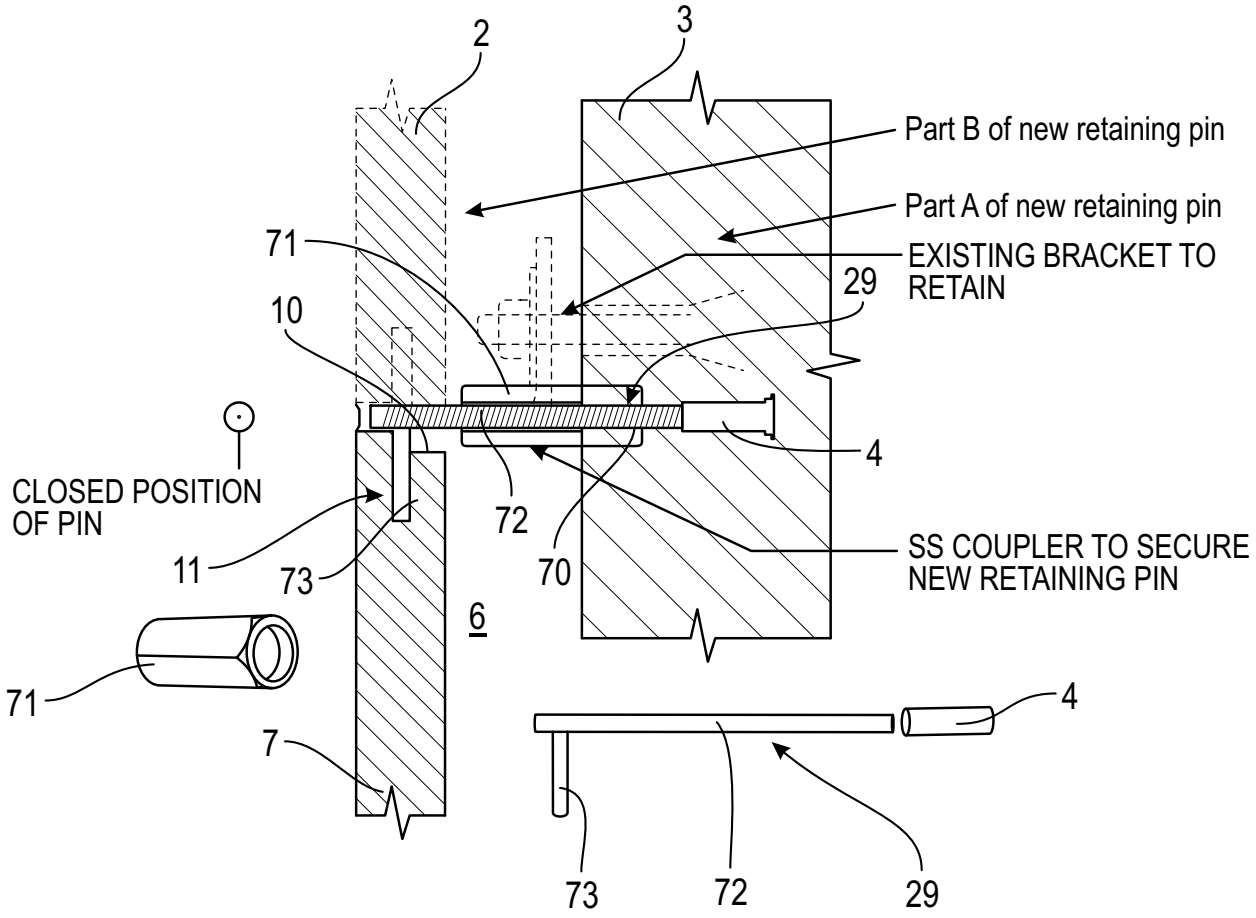

2
3
Part B of new retaining pin
Part A of new retaining pin
71
EXISTING BRACKET TO RETAIN
29
10
4
CLOSED POSITION OF PIN
72
11
73
70
SS COUPLER TO SECURE NEW RETAINING PIN
6
71
4
7
73
72
29

FIG. 9

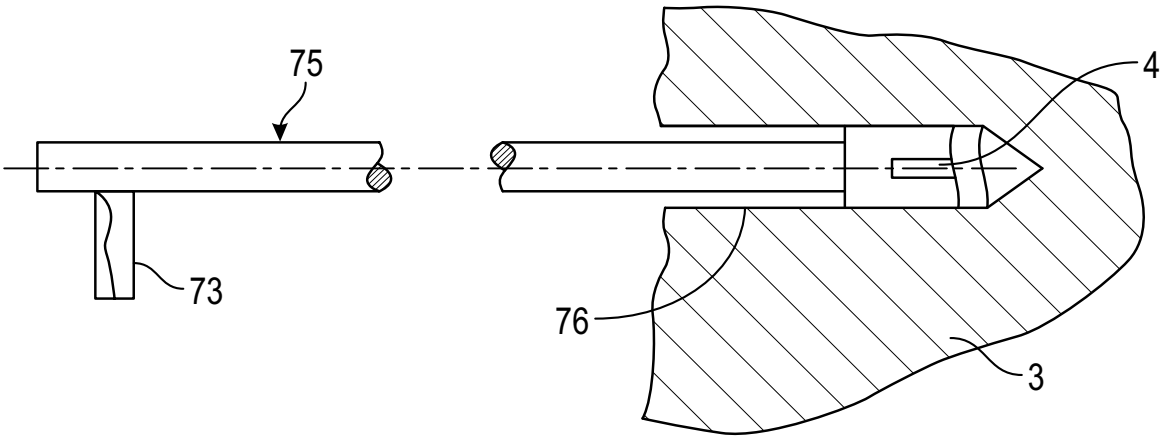


FIG. 10

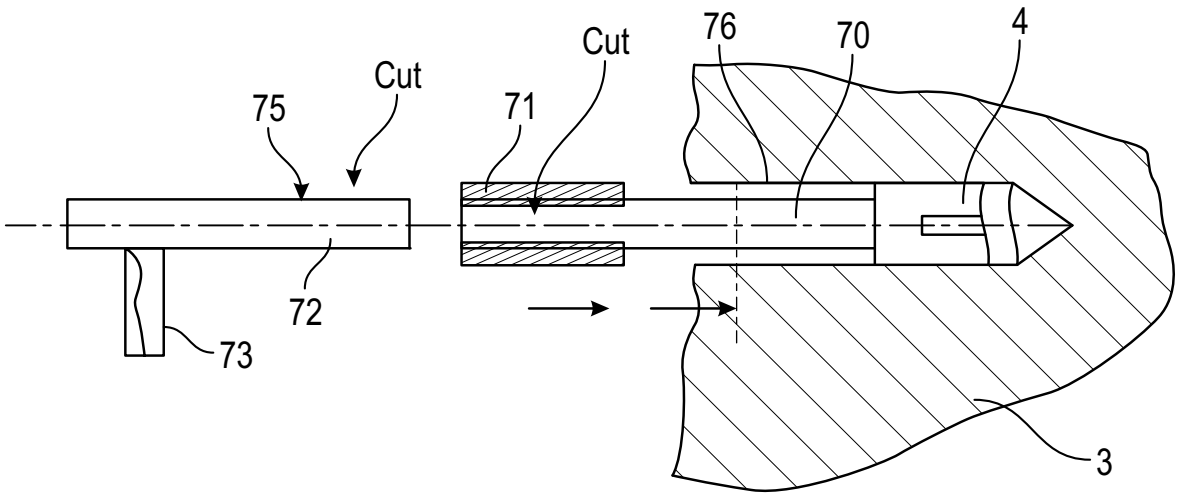


FIG. 11

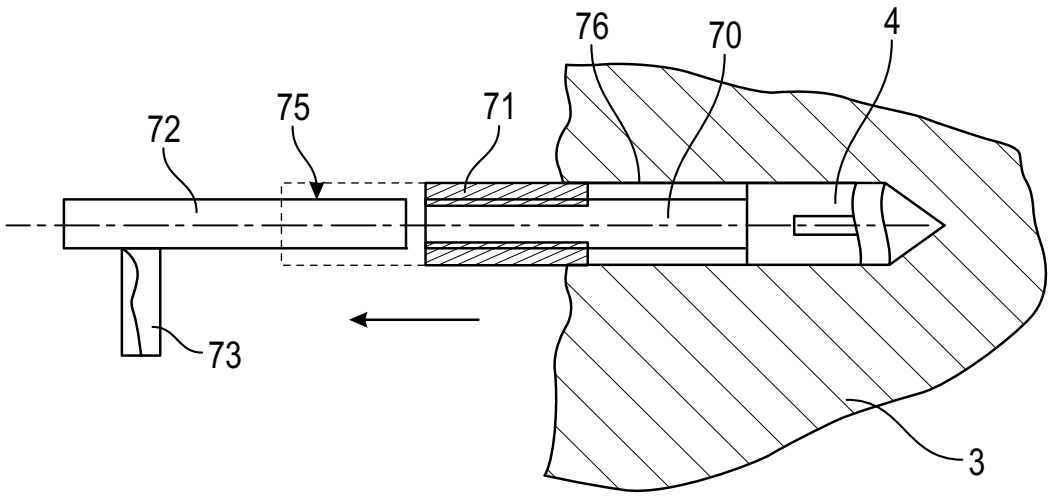


FIG. 12

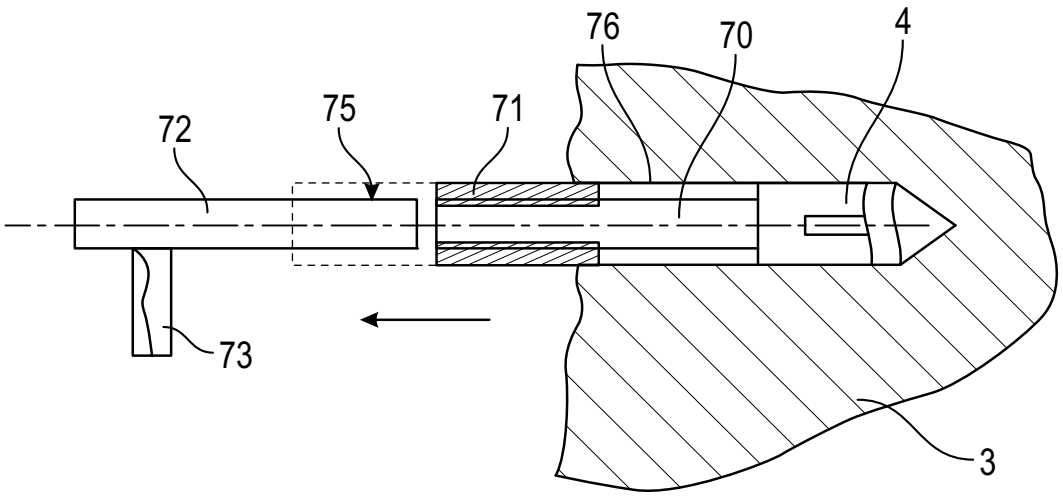


FIG. 13

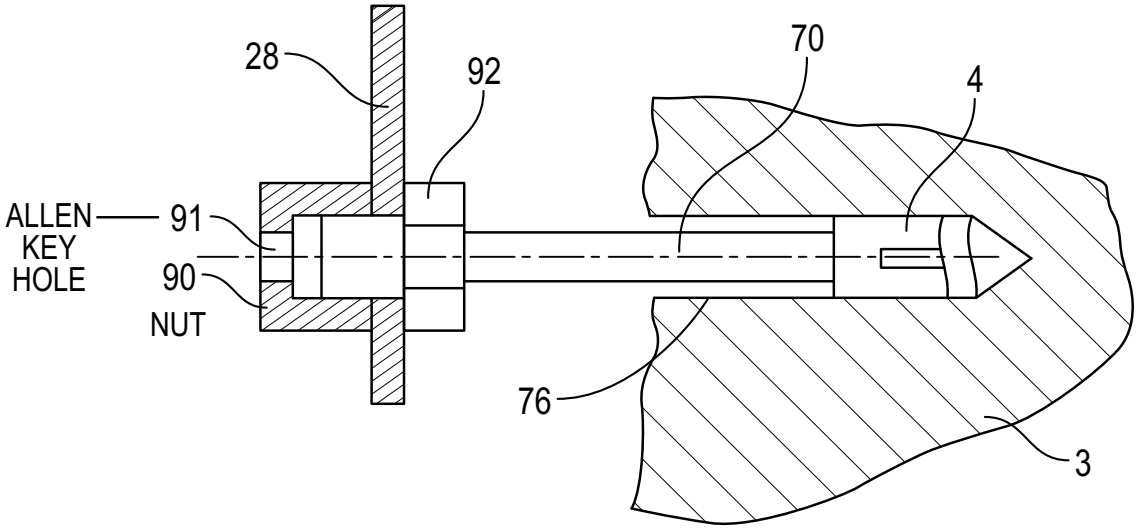


FIG. 14

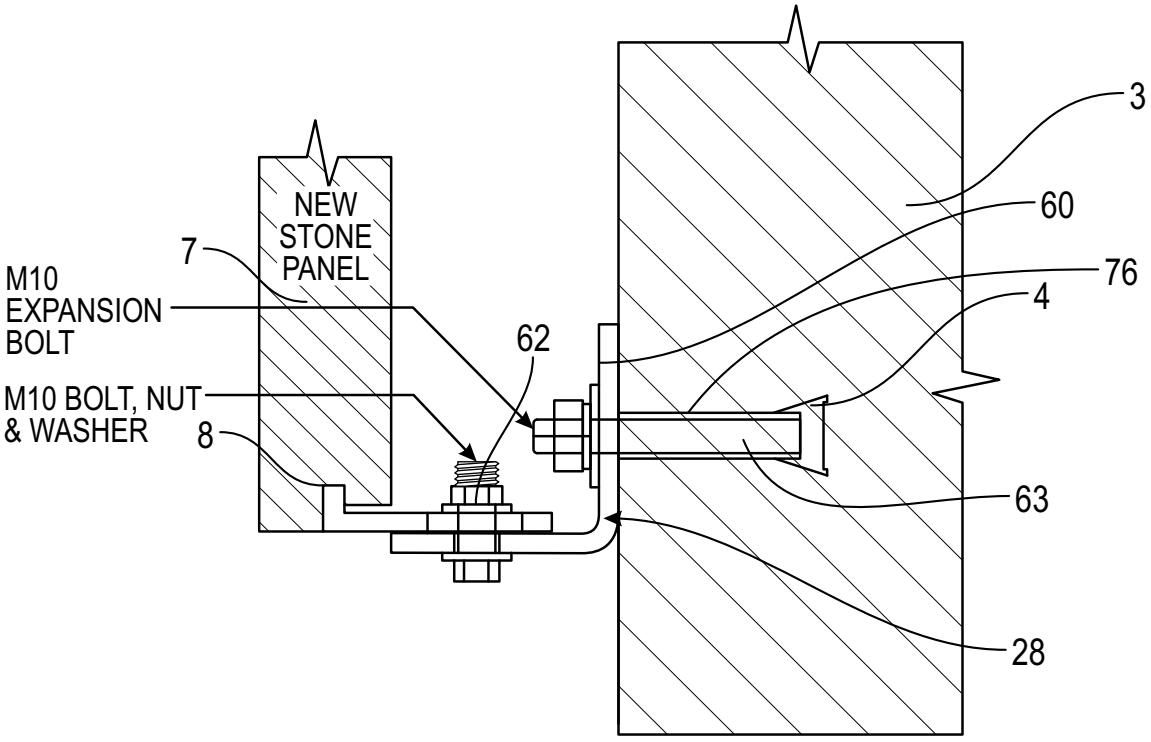

NEW
STONE
PANEL
7
M10
EXPANSION
BOLT
M10 BOLT, NUT
& WASHER
8
62
3
60
76
4
63
28

FIG. 15