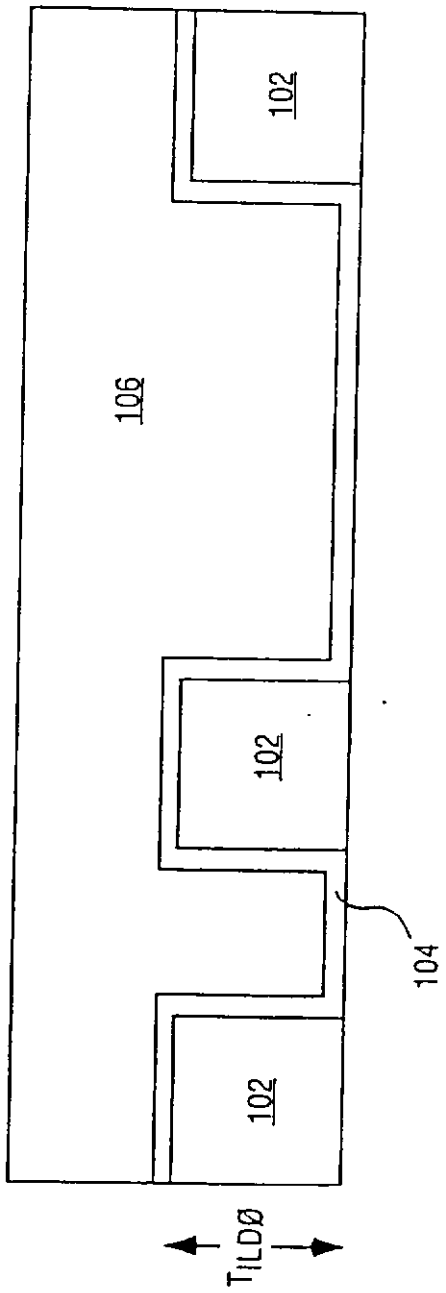


FIG. 1

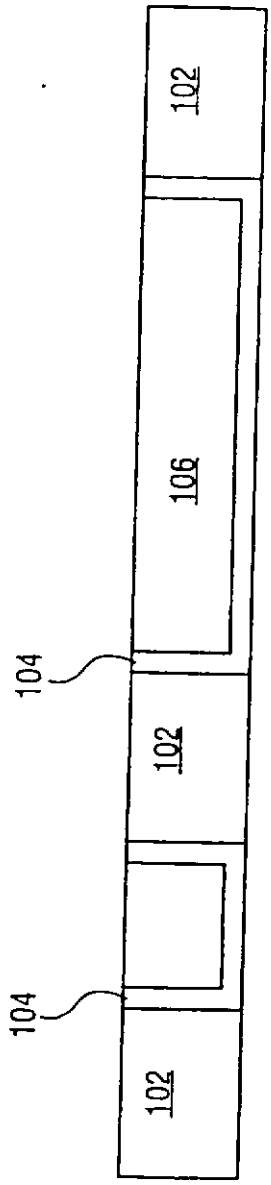


FIG. 2

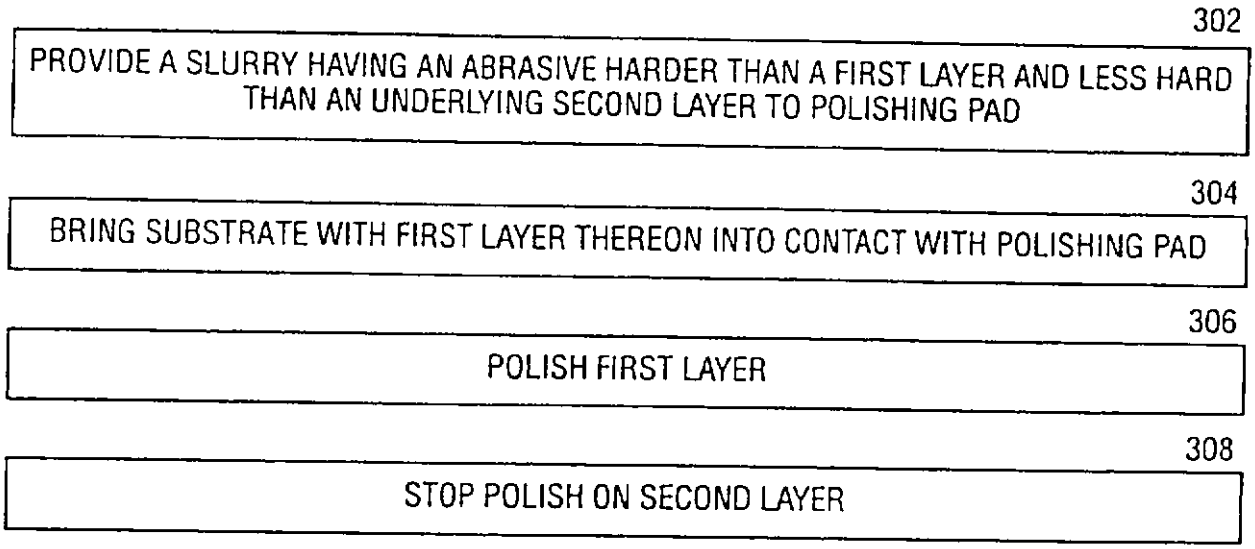

302
PROVIDE A SLURRY HAVING AN ABRASIVE HARDER THAN A FIRST LAYER AND LESS HARD THAN AN UNDERLYING SECOND LAYER TO POLISHING PAD
304
BRING SUBSTRATE WITH FIRST LAYER THEREON INTO CONTACT WITH POLISHING PAD
306
POLISH FIRST LAYER
308
STOP POLISH ON SECOND LAYER

FIG. 3