OPTICAL DISC SYSTEM HAVING SERVO MOTOR AND SERVO ERROR DETECTION ASSEMBLY OPERATED RELATIVE TO MONITORED QUAD SUM SIGNAL

BACKGROUND OF THE INVENTION

1. Field of the Invention

The present invention relates to data storage systems of the type that include a housing having an opening for receipt of a removable disc cartridge in which an information recording medium is mounted for protection. More particularly, it relates to a system for rapidly encoding and writing information onto optical disks in a high density format, and for reading and decoding the information written thereon.

2. Description of the Related Art: Overview

The demand for mass data storage continues to increase with expanding use of data processing systems and personal computers. Optical data storage systems are becoming an increasingly popular means for meeting this expanding demand. These optical data systems provide large volumes of relatively low-cost storage that may be quickly accessed.

In optical disc systems, coded video signals, audio signals, or other information signals are recorded on a disc in the form of information tracks on one or both planar surfaces of the disc. At the heart of an optical storage system is at least one laser (or other light source). In a first operating mode, the laser generates a high-intensity laser beam that is focused on a small spot on an information track of a rotating storage disc. This high-intensity laser beam raises the temperature of the recording surface of the material above its Curie Point--the point at which the material loses its magnetization and accepts the magnetization of the magnetic field in which the disc is placed. Thus, by controlling or biasing this surrounding magnetic field, and allowing the disc to cool below its Curie Point in a controlled magnetic environment, information may be recorded

9801536-5

26 JUN 1998

on the disc in the form of magnetic domains referred to as "pits" on the recording medium.

Subsequently, when the operator desired to reproduce or read the previously recorded information, the laser enters a second operating mode. In this mode, the laser generates a low-intensity laser beam that is again focused on the tracks of the rotating disc. This lower intensity laser beam does not heat the disc above its Curie Point. The laser beam is, however, reflected from the disc surface in a manner indicative of the previously recorded information due to the presence of the previously formed pits, and the previously recorded information may thereby be reproduced. Since the laser may be tightly focused, an information processing system of this type has advantages of high recording density and accurate reproduction of the recorded information.

The components of a typical optical system include a housing with an insertion port through which the user inserts the recording media into the drive. This housing accommodates, among other items, the mechanical and electrical subsystems for loading, reading from, writing to, and unloading an optical disc. The operation of these mechanical and electrical subsystems is typically within the exclusive control of the data processing system to which the drive is connected.

Within the housing of a conventional system that uses disc cartridges, a turntable for rotating a disc thereon is typically mounted on the system baseplate. The turntable may comprise a spindle having a magnet upon which a disc hub is mounted for use. The magnet attracts the disc hub, thereby holding the disc in a desired position for rotation.

In optical disc systems, as discussed above, it is necessary to magnetically bias the disc during a writing operation by applying a desired magnetic field to at least the portion of the disc being heated by the laser during the writing (recording or erasing) operation. Thus, it is necessary to mount a magnetic field biasing device where it may be conveniently placed in close proximity to the disc surface when the disc is held in position by the magnet associated with the spindle.

A variety of media or disc types are used in optical data storage systems for storing digital information. For example, standard optical disc systems may use 5 ¼ inch disks, and these optical disks may or may not be mounted in a protective case or cartridge. If the optical disc is not fixedly mounted in a protective cartridge, an operator

manually removes the disc from the protective case. The operator would then manually load the disc onto a loading mechanism, using care to prevent damage to the recording surface.

Alternatively, for purposes of convenience and protection, a disc may be mounted within an enclosure or a cartridge that is itself inserted into the insertion port of the drive and is then conveyed to a predetermined position. These disc cartridges are well known in the computer arts. The disc cartridge comprises a cartridge housing containing a disc upon which data may be recorded.

Cartridge Loading

To protect the disc when the cartridge is external from the drive, the disc cartridge typically includes at least one door or shutter that is normally closed. The cartridge shutter may have one or more locking tabs associated with it. The corresponding disc drive includes a mechanism for opening the door or shutter on the cartridge as the cartridge is pushed into the system. Such a mechanism may comprise a door link that makes contact with a locking tab, thereby unlocking the shutter. As the cartridge is inserted further into the drive, the shutter is opened to partially expose the information recording medium contained therein. This permits a disc hub to be loaded onto a spindle of a motor or other drive mechanism, and permits entry of a read-write head and a bias magnetic into the protective cartridge. The disc, when rotated by the drive mechanism, permits the read-write head to access all portions of the disc media.

To conserve space in optical storage systems, it is desirable to minimize the size required by the apparatus that loads a disc onto and unloads the disc from a spindle. Conventional loading and unloading devices vary depending upon the type of disc being used. A conventional disc loading and unloading system that uses disc cartridges is typically capable of automatically transporting a disc cartridge from a receiving port onto the spindle. When the disc is no longer required, a conventional disc loading and unloading system automatically unloads the disc from the spindle. A loading device for performing this loading and unloading of the disc is generally constructed so that during disc loading (i.e., when the disc is moved from an ejected position into the player and onto the spindle), the disc is moved horizontally, parallel to the baseplate and turntable, towards the turntable. When the disc has been positioned above the turntable, the disc is lowered vertically, perpendicular to the face of the turntable, onto the spindle. Once

on the turntable, a spindle magnet attracts the disc hub fixed to the center of the media, thereby clamping the disc in a rotatable condition for read-write operations.

When an operator is finished using the disc, the operator initiates an eject operation. The most common solution for ejecting a cartridge and disc from a spindle is the technique used in most Japanese drives. In this type of disc unloading apparatus, a cartridge "box" has four pins at its sides, and the pins ride in tracks in an adjacent sheet metal guide. During disc ejection, the cartridge box lifts the disc straight up and off the spindle. The apparatus then moves the disc horizontally, parallel to the baseplate and turntable, towards the disc receiving port in the front of the player. When the disc is thus lifted from the spindle during the unloading operation, it is necessary to generate sufficient upward force on the cartridge to overcome the magnetic clamping force holding the disc hub on the spindle magnet. The peak upward force required to overcome the magnetic clamping force may be produced by the mechanical operation of an ejection lever or by the activation of an electric ejection system.

In conventional electric ejection systems, wherein the disc cartridge unloading apparatus vertically lifts the disc cartridge to break the magnetic force between the spindle magnet and the disc hub, the electric ejection motor must generate a large load to effect removal of the disc cartridge. Consequently, when an operator opts to use the electric ejection system, a large motor having a large torque is required to generate sufficient vertical lifting force. Space must be reserved in the system housing to accommodate this large motor, thereby increasing the overall size of the housing for the cartridge-loading apparatus. In addition, the large motor consumes a considerable amount of power.

It is thus desirable to reduce the complexity of the disc player, while reducing the overall size of the player to facilitate the drive's convenient use in computer applications. In order to be able to receive a 5 ¼ inch disc cartridge and yet be small enough to be conveniently used in conjunction with a personal computer, optical disc drives must use compact and carefully located mechanical and electrical subsystems. With this in mind, it is desirable to reduce the size of the required ejection motor. One way to effect this result is to reduce the amount of force required to break the magnetic clamping force holding the disc hub on the spindle magnet. By reducing this required force, it is possible to use a smaller ejection motor in the player. It is thus desirable to design a

disc loading apparatus wherein the disc is not vertically lifted off of the spindle magnet, but is, rather, "peeled" from the magnet.

A conventional method that attempts to achieve this peeling action has the turntable and spindle swing down away from the disc. This method is discussed in U.S. Patent No. 4,791,511 granted to Marvin Davis and assigned to Laser Magnetic Storage International. It remains desirable, however, to design a drive wherein the disc is peeled from the spindle magnet.

Focus and Tracking Actuation

In order to attain a precise reading of the information stored on the disc, it is necessary to be able to move the objective lens in both a focusing (i.e., perpendicular to the plane of the disc) or Z direction in order to focus the laser beam to a small point of light on a precise location of the disc to write or retrieve information, and in a tracking (i.e., radial from the center of the disc) or Y direction to position the beam over the exact center of the desired information track on the disc. Focus and tracking corrections may be effected by moving the objective lens in either the direction of the optical axis of the lens for focusing, or in a direction perpendicular to the optical axis for tracking.

In these systems, the position of the objective lens in the focus and tracking directions is commonly adjusted by control systems. Actuators support the objective lens and convert position correction signals from the feedback control systems into movement of the objective lens. Most commonly, these actuators comprise moving coils, stationary magnets, and a stationary yoke, wherein a magnetic field is produced in an air gap between the yoke and magnets. U.S. Pat. No. 4,568,142 issued to Iguma and entitled "Objective Lens Driving Apparatus" illustrates an actuator of this type wherein the actuator includes rectangular magnets positioned within U-shaped yokes. The yokes are spaced from one another with their north poles opposing, in close enough proximity to one another to form a magnetic circuit. A square-shaped focusing coil is bonded to the outsides of a square-shaped lens frame. Four tracking coils are bonded on the corners of the focusing coil. The ends of the focusing coil are then positioned within the air gaps formed by each of the U-shaped yokes so that the focusing coil straddles the yokes. Because the focusing coil must extend around these "center" or "inner" yoke plates, the coil cannot be wound as tightly as desired and the rigidity of the coil construction is compromised. Further, in this type of closed magnetic circuit design, the

majority of coil wire is positioned outside the air gaps, significantly reducing the efficiency of the actuator.

In most optical systems, the stiffness of the coil in the air gap has to be very high and the coil decoupling resonance frequency should be above 10 kHz, and is most desirably above 25 kHz. In many types of prior actuator designs, large amounts of coil wire in the magnetic air gap are often required to achieve maximum motor performance. To place such a large amount of coil within the air gap and still conform to the limited space constraints of the actuator design, the coil must be wholly or partially "freestanding", or must be wound on the thinnest bobbin possible. These types of coil configurations have low stiffness and typically decouple at lower frequencies. The dynamic resonance behavior of many actuator designs can also cause the coil to unwind during operation.

Other actuator designs have used the same magnetic air gap to develop focus and tracking motor forces such that the tracking coil(s) is glued onto the focus(s) coil or vice versa, in an attempt to save parts, space, and weight. In these types of designs, the decoupling frequency of the tracking coil(s) glued onto a freestanding focus coil is typically around 15 kHz, significantly below the preferred decoupling frequency.

Focus Sensing

Optical recording and playback systems, such as those utilizing optical memory disks, compact disks, or video disks, require precise focusing of an illuminating optical beam through an objective lens onto the surface of an optical disc. The incident illuminating beam is generally reflected back through the objective lens, and is then used to read information stored on the disc. Subsequent to passing back through the objective lens, a portion of the reflected beam is typically directed to an apparatus designed to gauge the focus of the illuminating beam on the disc. Information extracted from the reflected beam by this apparatus may then be used to adjust the focus of the illuminating beam by altering the position of a movable objective lens relative to the disc.

A number of techniques for detecting the focus of an illuminating optical beam are known. For example, U.S. Pat. Nos. 4,423,495; 4,425,636; and 4,453,239 employ what has been termed the "critical angle prism" method of determining beam focus. In this method an illuminating beam reflected from a storage disc is made incident upon a detection prism surface which is set very close to a critical angle with respect to the

reflected illuminating beam. When the focus of the illuminating beam on the surface of the disc deviates from a desired state, the variation in the amount of optical energy reflected by the detection prism surface may be used to derive a focus error signal used to adjust the focus of the illuminating beam.

The critical angle prism method generally requires that the orientation of the detection prism surface relative to the reflected illuminating beam be precisely adjusted. This requirement arises as a result of reflectivity characteristic of the detection prism in the neighborhood of the critical angle and makes focus error detection systems based on this method extremely sensitive. However, the critical angle technique has several disadvantages. First, the focus error signal it produces depends on the light reflection at the interface between the detection prism surface and air. Thus, changes in altitude, which change the index of refraction of the air, can cause false focus readings (offsets) to occur. Also, the critical angle technique is inherently unsuitable for use in differential focus sensing systems.

Differential systems are increasingly important because they allow cancellation of certain types of noise that can occur in optical disc drives. The critical angle method is unsuited to differential operation for two reasons. First, the transmitted beam produced by the sensing prism is compressed along one axis, making it unsymmetrical with the reflected beam. Symmetry of the two beams is preferred in a differential system to optimize the noise-cancellation properties in varied environments. Second, at the point on the reflectivity curve of a critical angle prism where the intensities of the two beams are balanced, the slope is far too low to produce a useful differential focus error signal.

A focus detecting apparatus which requires somewhat less precise adjustment of the optical surface on which the reflected illuminating beam is incident, when compared to the critical angle technique is disclosed in U.S. Pat. No. 4,862,442. In particular, the optical surface described therein comprises a dielectric multi layer coating having a reflectivity which varies continuously with respect to the angle of incidence of the reflected illuminating beam. It follows that rotational maladjustment of the surface comprising the multi layer coating will have smaller effect on the value of the focus error signal, but that also the technique will have reduced angular sensitivity. Also, inaccuracies in the focus error signal produced by multi layer dielectric systems may develop in response to relatively slight changes in the wavelength of the reflected

illuminating beam. Such sensitivity to wavelength changes is undesirable since the focus error signal is designed to relate solely to the focus of the illuminating beam.

In addition, certain systems using a dielectric multi layer reflecting surface provide focus error signals having only a limited degree of sensitivity. For example, Fig. 37 of U.S. Pat. No. 4,862,442 shows a particular reflectivity characteristic for a layered dielectric reflecting surface, with the slope of the reflectivity characteristic being proportional to the sensitivity of the focus error signal. The disclosed reflected intensity ranges in value from approximately 0.75 to 0.05 over angles of incidence extending from 42 to 48 degrees. This reflectivity change of approximately 10% per degree produces a focus error signal of relatively low sensitivity.

Accordingly, a need in the art exists for an optical arrangement characterized by a reflectivity profile which allows generation of a highly sensitive focus error signal relatively immune to changes in altitude and to chromatic aberration, and which is capable of use in differential systems.

Seek Actuation

Optical data storage systems that utilize a focused laser beam to record and instantaneously playback information are very attractive in the computer mass storage industry. Such optical data storage systems offer very high data rates with very high storage density and rapid random access to the data stored on the information medium, most commonly an optical disc. In these types of optical disc memory systems, reading and writing data is often accomplished using a single laser source functioning at two respective intensities. During either operation, light from the laser source passes through an objective lens which converges the light beam to a specific focal point on the optical disc. During data retrieval, the laser light is focused on the recording medium and is altered by the information of the data storage medium. This light is then reflected off the disc, back through the objective lens, to a photo detector. It is this reflected signal that transmits the recorded information. It is thus especially important that, when information is being written to or read from the memory, the objective lens, and the exiting focused beam, be precisely focused at the center of the correct track so that the information may be accurately written and retrieved.

In order to attain a precise reading of the information stored on the disc, it is necessary to be able to move the objective lens in both a focussing (i.e., perpendicular

to the plane of the disc) or Z direction in order to focus the laser beam to a small point of light on a precise location of the disc to write or retrieve information, and in a tracking (i.e., radial) or Y direction to position the beam over the exact center of the desired information track on the disc. Focus and tracking corrections may be effected by moving the objective lens in either the direction of the optical axis of the lens for focusing, or in a direction perpendicular to the optical axis for tracking.

In these systems, the position of the objective lens in the focus and tracking directions is commonly adjusted by control systems. Actuators support the objective lens and convert position correction signals from the feedback control systems into movement of the objective lens. As will be appreciated, failure to focus the light on a small enough area of the medium will result in too large a portion of the disc being used to store a given amount of information, or in too broad an area of the disc being read. Likewise, the failure to precisely control the tracking of the laser light will result in the information being stored in the wrong location, or in information from the wrong location being read.

In addition to translation along the Z axis to effect focusing, and translation along the Y axis to effect tracking, there are at least four additional motion modes for the actuator, each of which reduces the accuracy of the reading and writing operations and is thus undesirable during normal operation of the system. These undesirable modes of motion are rotation about the X axis (an axis orthogonal to both the X direction and the Z direction), or pitch; rotation about the Z axis, referred to as yaw; rotation about the Y axis, called roll; and linear motion along the X axis, or tangential translation. Motion in these directions is often caused by motor and reaction forces acting on the carriage and/or actuator. These modes typically produce undesired movement during tracking or focussing operations which subsequently affects the alignment of the objective lens relative to the optical disc.

Anamorphic, Achromatic Prism System

Optical disc systems often employ an anamorphic prism for adjustment of laser beam ellipticity, for the removal of laser beam astigmatism, and/or for beam steering. References such as U.S. Pat. No. 4,333,173 issued to Yonezawa, et al., U.S. Pat. No. 4,542,492 issued to Leterme, et al. and U.S. Pat. No. 4,607,356 issued to Bricot, et al. describe using simple anamorphic prisms for beam shaping in optical disc applications.

Frequently, the anamorphic prism systems have an embedded thin film to reflect some or all of a returning beam (reflected from optical media) to a detection system. U.S. Pat. No. 4,573,149 to Deguchi, et al. describes the use of thin films to reflect a return beam to detection systems. Furthermore, the entrance face of the anamorphic prism is often used to reflect the returning beam to a detection system as described in U.S. Pat. Nos. 4,542,492 and 4,607,356. Often, it is advantageous to have multiple detection channels. For instance, in optical disks, one detector may provide data signals and another detector may provide control signals such as tracking and/or focus servo signals.

A typical problem with conventional prisms is that the anamorphic prism suffers from chromatic dispersion which can result in lateral chromatic aberration. In other words, when the wavelength of the light source changes, the resulting angles of refraction through the anamorphic prism also change. These changes result in a lateral beam shift when the beam is focused onto optical media such as an optical disc. In optical disc systems, a small shift in the beam may cause erroneous data signals. For instance, if the shift is sudden and in the data direction, the beam may skip data recorded on the optical disc.

If the light source (e.g., a laser) were truly monochromatic, the chromatic aberration in the prism would not cause a problem. However, several factors often cause the laser spectrum to change. For instance, most laser diodes respond with a change in wavelength when the power increases. In magneto-optic disc systems, an increase of power occurs when pulsing the laser from low to high power to write to the optical disc, as is well understood in the art. This increase in laser power often causes a wavelength shift of around 1.5 to 3 nanometers (nm) in conventional systems. Most laser diodes also respond to a change in temperature with a change in the wavelength. Additionally, random "mode-hopping" can cause unpredictable wavelength changes commonly ranging from 1-2 nanometers. RF modulation is often applied to laser diodes operating at read power in order to minimize the effect that "mode-hopping" has on the system. However, the RF modulation increases the spectral bandwidth and can change the center frequency. Moreover, RF modulation is not generally used when the laser is operating at write power. In a non-achromatic system, a sudden change in the wavelength of the incident light typically results in a lateral beam shift in the focused

spot of up to several hundred nanometers. A lateral beam shift of this magnitude could cause significant errors in the data signal.

Using multi-element prism systems to correct chromatic dispersion is known in the art of optical design. Textbooks such as Warren J. Smith, Modern Optical Engineering, McGraw-Hill, 1966, pp. 75-77 discuss this idea. Furthermore, some optical disc systems use multi-element anamorphic prism systems which are achromatic. However, typical existing multi-element prism systems require the multiple prism elements to be separately mounted. Mounting the multiple elements increases the expense and difficulty of manufacturing because each element must be carefully aligned with respect to the other elements in the system. Small deviations in alignment can cause significant variations in function. This also complicates quality control. Other existing multi-element prism systems have attached elements to form a unitary prism, but these prism systems require that the prism material of each prism be different in order for the system to be achromatic. Finally, existing systems which are achromatic do not provide return beam reflections to multiple detection systems.

Data Retrieval--Transition Detection

For many years, various types of recordable and/or erasable media have been used for data storage purposes. Such media may include, for example, magnetic tapes or disks in systems having a variety of configurations.

Magneto-optical ("MO") systems exist for recording data on and retrieving data from a magnetic disc. The process of recording in a magneto-optical system typically involves use of a magnetic field to orient the polarity of a generalized area on the disc while a laser pulse heats a localized area, thereby fixing the polarity of the localized area. The localized area with fixed polarity is commonly called a pit. Some encoding systems use the existence or absence of a pit on the disc to define the recorded data as a "1" or "0", respectively.

When recording data, a binary input data sequence may be converted by digital modulation to a different binary sequence having more desirable properties. A modulator may, for example, convert m data bits to a code word with n modulation code bits (or "binits"). In most cases, there are more code bits than data bits, that is $m < n$.

The density ratio of a given recording system is often expressed according to the equation $(m/n) \times (d + 1)$, where m and n have the definitions provided above, and d is

defined as the minimum number of zeroes occurring between ones. Thus, the RLL 2/7/1/2 code has, according to the above equation, a density ratio of 1.5, while the GCR 0/3/8/9 code has a density ratio of 0.89.

For reading data in an MO system, a focused laser beam or other optical device is typically directed at the recording surface of a rotating optical disc such that the laser beam can selectively access one of a plurality of tracks on the recorded surface. The rotation of the laser beam reflected from the recorded surface may be detected by means of Kerr rotation. A change in Kerr rotation of a first type, for example, represents a first binary value. A change in Kerr rotation of a second type represents a second binary value. An output signal is generating from the first and second binary values occurring at specified clock intervals.

Although there has been a continual demand for disc systems capable of storing increasingly higher data densities, the ability to achieve high data storage densities has met with several limitations. As a general matter, the reasonable upper limit for data density is determined in part by reliability requirements, the optical wavelength of laser diode, the quality of the optical module, hardware cost, and operating speed. Maximum data densities are also affected by the ability to reject various forms of noise, interference, and distortion. For example, the denser that data is packed, the more intersymbol interference will prevent accurate recovery of data. Moreover, because the technology for many intermediate and high performance optical disc drives has been limited by downward compatibility constraints to older models, signal processing techniques have not advanced as rapidly as they might otherwise have.

When attempting to recover stored data, existing read channels of magneto-optical and other types of disc drives commonly suffer from a number of problems due to the unintended buildup of DC components in the read signal. One cause of DC buildup results from the recording of unsymmetrical data patterns over a number of bytes or data segments. A symmetrical data pattern may be considered as one having an average DC component of zero over a region of interest. Because sequences of recorded bits may be essentially random in many modulation codes, however, localized regions of recorded data having particular patterns of 1's and 0's will produce an unsymmetrical read signal having unwanted DC components. Because the data patterns vary over time, the level of DC buildup will also vary, causing wander of the DC

baseline, reduction of threshold detection margins, and greater susceptibility to noise and other interference.

Undesired DC buildup is also caused by variance in pit size due to thermal effects on the writing laser or the storage medium. As the writing laser heats up, for example, the spot size may increase leading to wider pits. When the recorded pits are read, variations in pit size will cause an unsymmetrical input signal having DC components. Variation in pit size not only causes undesired DC buildup but also causes the relative locations of the data to appear shifted in time, reducing the timing margin and leading to possible reading errors.

Various attempts have been made to overcome the described problems. For example, various tape drive systems commonly use a DC-free code such as a 0/3/8/10 code, otherwise referred to simply as an 8/10 code. Because an 8/10 code requires 10 stored bits to yield 8 data bits, however, it is only 80% efficient which is a drawback when attempting to record high data densities.

Another method for handling DC buildup involves the use of double differentiation. This method typically involves detection of the peaks of a first derivative of the input signal by detecting zero-crossings of the second derivative of the input signal. Thus, the DC components are effectively filtered out. One drawback of this method is that differentiation or double differentiation can cause undesirable noise effects. A second drawback is that the method may decrease the timing margin to unacceptably low levels (e.g., by as much as 50 percent).

In another method for addressing DC buildup, the data to be stored is randomized prior to recording such that none of the data patterns repeat over a data sector. This method, however, may not be acceptable by ISO standards and may lack downward compatibility with previous disc drive systems. As a further drawback to this method, de-randomizing the data may be complex.

Yet another method for controlling DC buildup involves the use of so-called resync bytes between data segments. This method generally involves the examination and manipulation of data before it is recorded in order to minimize DC buildup upon readback. Before recording, two consecutive data segments are examined to determine if the patterns of 1's and 0's are such as to cause positive DC, negative DC, or no DC components when read back. If, for example, two consecutive data segments have the

same DC polarity, one of the data segments is inverted prior to being recorded on the medium. In order to stay within the constraints of the particular encoding system, however, a resync byte between the segments may need to be written so that the pattern of contiguous bits and of flux reversals is proper. A drawback of such a method is that it will not necessarily reduce all DC buildup, and time constants must be determined such that the predictable DC buildup will not affect performance. Further, the method requires additional overhead including the examination of data segments to determine their relative polarity.

It would therefore be advantageous to have a method and device for reading stored data from a medium without suffering the undesirable effects of DC buildup, without creating unacceptable levels of noise or significantly reducing timing margins, without the requirement of large amounts of overhead or de-randomizing algorithms, and while providing high data storage efficiency.

Data Storage and Other Aspects of Data Retrieval

Recordable/erasable optical disks are currently available for use as data storage media. Magneto-optical recording is the technique commonly used to store the data on and/or retrieve the data from the disc. During recording, a magnetic field orients the polarity of a generalized area on the disc, while a laser pulse heats a localized area thereby fixing the polarity of the smaller area. The localized area with fixed polarity is commonly called a pit. Some encoding systems use the existence or absence of a pit on the disc to define the recorded data as a "1" or "0", respectively. The most commonly used encoding system for this pit-type recording is the run length limited (RLL) 2,7 code because it gives the highest data-to-pit ratio. This type of recording, however, does not lead to higher density because amplitude and timing margins deteriorate very rapidly as frequency is increased.

SUMMARY OF THE INVENTION

There is disclosed a digital servo lead/lag compensation circuit, for use with servo mechanisms. The compensation circuit has a minimal impact on phase, and a notch filter at a frequency of one-half the digital sampling frequency. The compensation circuit uses a single lead, and a complex lag. The values of the compensation circuit, and of

the digital sampling frequency, can be chosen such that the compensation circuit has a filter notch frequency at the mechanical resonance frequency of the servo mechanism.

In particular, the optical drive system according to the present invention includes an optical assembly, a light source capable of transmitting light through the optical assembly, an objective lens subassembly for directing light from the light source between the optical assembly and a respective information storage medium, an objective lens disposed in the objective lens subassembly, an actuator assembly which suspends the objective lens subassembly for relative motion thereof with respect to the actuator assembly, a first servomotor for moving the objective lens subassembly in a tracking direction relative to the actuator assembly, a second servomotor for moving the objective lens subassembly in a focusing direction relative the actuator assembly, a third servomotor for moving the actuator assembly in the tracking direction relative the respective medium, first electronic means for controlling the first, second, and third servomotors, a motor for moving the respective medium relative to the objective lens subassembly, the motor having a hub assembly for supporting the respective medium, a photo detector disposed in a path of light returning from the respective medium, second electronic means responsive to an output signal of the photo detector for decoding information carried in the light returning from the respective medium, third electronic means for enabling the light source to emit light at a first intensity level to encode information on the respective medium and at a second intensity level to read information encoded thereon, data receiving means for accepting data that is storable on the respective medium, data encoding means being responsive to the data receiving means for representing the data to be stored in a predetermined format, the data encoding means also for directing data to the third electronic means, a magnetic field generator for producing a magnetic field on a portion of the respective medium and for coacting with the third electronic means and the light source to write and erase information on the respective medium, a cartridge loading assembly for removably positioning the respective medium on the hub assembly of motor, servo error detecting means coupled to the first electronic means and disposed in the path of light returning from the respective medium for detecting a characteristic of the light returning that varies with a position of the objective lens relative to the respective medium, and a housing structure for positioning components of the optical drive system with respect to one

another. The respective medium may be in the form of a disc having a plurality of data sectors thereon.

The first intensity level of the optical drive system according to one embodiment of the present invention comprises a first write intensity level, a second write power level, and a third write power level. In accordance with another embodiment of the present invention, the third electronic means includes a preamplifier for driving the light source at a read level. Other embodiments of the optical system according to this invention include a mechanical isolator for absorbing mechanical energy, the mechanical isolator having a means for receiving a pole piece assembly for motion therewith and a crash stop for contacting structure moving relative to the isolator. In accordance with one embodiment of the mechanical isolator of the present invention is provided with a shoe carrying therein a portion of a structure to be protected within the housing structure, a crash stop for contacting an object moving relative to the isolator, or both such a shoe and crash stop. The shoe according to this invention may include a compression rib provided thereon for absorbing compression forces acting upon the shoe.

The present optical drive system may alternatively be provided with a mechanical isolator having a first means for mitigating the effects of undesired mechanical forces upon ã movable disc drive component, and a second means for supporting the first means between the drive component and a source of the undesired mechanical forces thereby providing mechanical isolation of the drive component. In this embodiment, the first means is a shock absorbing bumper and may be provided with at least one compression rib, and second means includes a housing that may be adapted to fit to an end of a pole piece assembly. The first means is preferably comprised of a material that exhibits minimum creep and may be selected from the group consisting of silicon rubber, polyurethane, and injection molded plastics. The first means also provides shock absorption and mechanical isolation in the form of the crash stop adapted to prevent a moveable carriage from impacting a solid surface. Thermal expansion is also accommodated in practicing this aspect of the present invention.

According to another aspect of one of the embodiments of the present optical drive system, the third electronic means further includes a Colpitts type oscillator having a load circuit with increased resistance. The load circuit may preferably include an

inductance. This embodiment of the oscillator has an increased supply voltage whereby increased R.F. modulation amplitude and decreased ringing is facilitated. The third electronic means may also include a transistor having an emitter, a base, and a collector; an electrical voltage supply; and a load resistance connected in series between the collector and the voltage supply so that oscillator ringing is mitigated when write pulses are supplied to the oscillator. A load inductance is preferably provided in series with the load resistance while the write pulses are supplied to the junction between the load resistance and the load inductance. One embodiment of the third electronic means is provided with a split capacitor tank connected between the collector and ground, across the emitter and the collector of the transistor. The light source employed in conjunction with this embodiment of the present invention is a laser while the third electronic means further includes a switch for passing electrical current to the laser, and digital logic means for power switching the switch to drive the laser so that electrical power is consumed only when the laser is energized and enhanced rise and fall switching characteristics are achieved.

In a specific practical application, the first electronic means and the servo error detection means further include an analog to digital converter having a reference voltage input, a clock input, an analog input, and a digital output; an information detection device having multiple detection outputs controlling the first, second, and third servomotors based on information being detected; a signal summing circuit having a sum signal output connected to the reference voltage input of the analog to digital converter and having multiple inputs connected to the multiple detection outputs of the detection device; a servo error signal circuit having a servo error signal output and multiple inputs, wherein the multiple inputs are connected to the multiple detection outputs of the detection device, the servo error signal output being a combination of the multiple inputs and a portion of the sum signal output, the servo signal output being connected to the analog input of the analog to digital converter for conversion; a sampling clock connected to the clock input for controlling the converter to convert the servo error signal to a digital signal that is normalized to sum signal output; and a processing circuit having an input connected to the digital output of the analog to digital converter and an output for controlling the servomotors.

In an alternative preferred embodiment the first electronic means and the servo error detection means include an analog to digital converter having a reference voltage input, a clock input, an analog input, and a digital output; a switch including first and second inputs, an output and a control input for alternately connecting the first second inputs to the output, the output being applied to the reference voltage input; an information detection device having multiple detection outputs controlling the first, second, and third servomotors based on information being detected; a signal summing circuit having a sum signal output connected to the first input of the switch and having multiple inputs connected to the multiple detection outputs of the detection device; a direct current voltage reference connected to the second input of the switch; a control clock connected to the control input of the switch for activating the switch, at a predetermined rate, thereby multiplexing the sum signal and the direct current voltage reference on the reference voltage input; a servo error signal circuit having a servo error signal output and multiple inputs, wherein the multiple inputs are connected to the multiple detection outputs of the detection device, the servo error signal output being a combination of the multiple inputs and a portion of the sum signal output, and the servo signal output being connected to the analog input of the analog to digital converter for conversion; a sampling clock connected to the clock input for controlling the converter to convert the servo error signal to a digital signal that is normalized to the sum signal output when the switch connects the first input to the output; and a processing circuit having an input connected to the digital output of the analog to digital converter and an output for controlling the servomotors. According to one aspect of this embodiment of the present invention, the converter further includes multiple analog inputs and a selection input for selecting one of the analog inputs for conversion. Preferably, the rate of the control clock is substantially equal to the sampling clock rate and the analog inputs of the converter are selected in conjunction with the control clock so that servo error signals are selected for conversion and normalization to the sum signal at every other sampling clock cycle.

A compression rib is preferably provided on the shoe for absorbing compression forces acting thereon, and the oscillator has an increased supply voltage whereby increased R.F. modulation amplitude and decreased ringing is facilitated.

In another embodiment of the optical drive system according to this invention, the system includes an optical assembly, a light source capable of transmitting light through optical assembly, an objective lens subassembly for directing light from the light source between the optical assembly and a respective information storage medium, an objective lens disposed in the objective lens subassembly, light detection means disposed in a path of light returning from the respective medium for measuring total light received from the respective medium, an actuator assembly which suspends the objective lens subassembly for relative motion thereof with respect to the actuator assembly, means for monitoring a Quad Sum signal, a first servomotor for moving the objective lens subassembly in a tracking direction relative to the actuator assembly and for moving, during focus capture, the objective lens to a first position, for moving the lens away from the first position towards the respective medium being read while searching for a maximum Quad Sum signal, and for moving the lens back away from the respective medium, a second servomotor for moving the objective lens subassembly in a focusing direction relative the actuator assembly, a third servomotor for moving the actuator assembly in the tracking direction relative the respective medium, first electronic means for controlling the first, second, and third servomotors, a motor for moving the respective medium relative to the objective lens subassembly, the motor having a surface for supporting the respective medium, second electronic means responsive to an output signal of the light detection means for decoding information carried in the light returning from the respective medium, third electronic means for enabling the light source to emit light at a first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon, data receiving means for accepting data that is storable on the respective medium, data encoding means being responsive to the data receiving means for representing the data to be stored in a predetermined format, the data encoding means also for directing data to the third electronic means, write means, coacting with the third electronic means, for writing information on the respective medium, a cartridge loading assembly for removably positioning the respective medium on the surface of the motor, servo error detecting means coupled to the first electronic means and disposed in the path of light returning from the respective medium for determining when the total light exceeds one-half the peak value measured, for searching for a first zero crossing determining when

the Quad Sum signal exceeds one-half peak amplitude, and for indicating to the first electronic means to direct close of focus by the second servomotor when the Quad Sum signal exceeds one-half peak amplitude, and a housing structure for positioning components of the optical drive system with respect to one another. In one preferred embodiment of this aspect of the invention, the digital logic means includes CMOS buffers that are connected between electrical ground and full supply voltage, and the switch includes pass transistors. In the embodiment employing the disc medium, an amplifier is provided for evaluating a particular one of the sectors to determine whether the particular sector is blank and also provided is a means for inhibiting the amplifier from operating at maximum gain while the particular sector is being evaluated. In practice, the means for inhibiting the amplifier may include a microprocessor for setting an AGC level for the amplifier.

In this embodiment of the present invention, the first electronic means and the servo error detection means may be implemented as described above. In either embodiment, the optical drive system according to the present invention may include a bias coil apparatus for use in a magneto motive generator. This bias coil apparatus would include a winding; a return yoke having a body portion and a tip, wherein the winding is wound about the body portion, the tip having flanges that project beyond the body portion to overlap a surface of the winding; a first plate disposed on the winding and having a first flange extending thereabout substantially perpendicular to the first plate; and a second plate disposed on the winding in a magnetic circuit with the first plate and the return yoke, whereby the first flange radiates thermal energy that is produced by the apparatus when the winding is connected to a source of power.

In the embodiments employing this aspect of the invention, the return yoke projects above the surface of the winding, the first plate has an aperture that admits the projecting return yoke therethrough, and at least one of either the first plate or the second plate includes a plurality of side flanges. Preferably, the side flanges are blackened to increase heat radiation therefrom.

Alternatively, the different embodiments of the optical drive system according to this invention may include a magnetic bias field generating apparatus for directing a magnetic field through a region of space. This magnetic bias field generating apparatus would similarly include a winding for carrying an electrical current; a return yoke having

a body portion and a tip, wherein the winding is wound about the body portion, and the tip has a flange that extends beyond the body portion to overlap a surface of the winding; a first plate disposed on the winding and having a plurality of vertical fingers extending about the winding, wherein the vertical fingers radiate thermal energy; a second plate disposed below the winding; a first pole piece in magnetic flux communication with the first plate; and a second pole piece in magnetic flux communication with the second plate, a first end portion of the second pole piece opposing a first end portion of the first pole piece across a region of space to be subjected to a magnetic field. For embodiments employing this aspect of the invention, the first and second plate contact second end portions of the first pole piece and the second pole piece respectively, whereby the winding, the return yoke, the first plate, and the second plate are remote from the subject region of space. Preferably, the return yoke projects above the surface of the winding, the first plate has an aperture that admits the projecting return yoke therethrough, and the first plate includes a plurality of side flanges. The side flanges of the first plate are preferably align with the side flanges of the second plate. According to one specific implementation, the return yoke includes an elongated bar, and the tip comprises a first end flange attached to a first end of the bar, and a second end flange attached to a second end of the bar.

Additional objects, advantages and features of the present invention will further become apparent to persons skilled in the art from a study of following description and of the accompanying drawings.

BRIEF DESCRIPTION OF THE DRAWING

Fig. 1 is an isometric view of an optical disk drive embodying the present invention;

Fig. 2 is a top view of the disk drive of Fig. 1, with the housing of the drive removed;

Fig. 3 is a cross-sectional view of the disk drive of Fig. 1, taken in the direction of arrows 3-3 in Fig. 1;

Fig. 4A is a top view of an optics module of the disk drive of Fig. 1;

Fig. 4B is a diagram of the optical path of the disk drive of Fig. 1;

Fig. 5 is a system block diagram of the electronics of the disk drive of Fig. 1;

Fig. 6 is another isometric view of a disc drive with a disc cartridge about to be inserted therein;

Fig. 7 is an exploded isometric view of the disc drive of Fig. 6, depicting the major subassemblies thereof;

Figs. 8A and 8B are isometric views of the baseplate depicted in Fig. 7;

Fig. 9 is a top elevation view of the drive of Fig. 6 with some features removed to better show the tiller, the tiller-driving gears, the motor that drives these gears, and the operative relationship between these features;

Figs. 10A-10F are elevation and isometric views of a tiller;

Figs. 11A-11C comprise elevation and isometric views of a left slider;

Figs. 12A-12E are elevation and isometric views of a right slider;

Fig. 13 is a top plan view of the parking arm in two positions, one drawn in phantom, showing its action of parking the carriage at the back of the drive while the drive is at rest;

Fig. 13A is a perspective view of the disk drive of Fig. 1, illustrating in particular the fine actuator assembly carriage which supports the optics used to focus the laser beam on the data track of the optical disk;

Figs. 14A-14C comprise elevational and isometric views of a parking arm;

Figs. 15A and 15B are isometric views of a cartridge receiver;

Fig. 16A and 16B are elevational views, during insertion of a disc cartridge, of the drive of Fig. 6 with some features removed to better show the trip lug on the right door link, the latch, and the operative relationship between these features;

Figs. 17A and 17B are isometric views of a latch that holds the cartridge receiver in the up position;

Fig. 18 is an isometric view of a bias coil assembly clamp;

Fig. 19 is an isometric view of a bias coil assembly;

Fig. 20 is an exploded isometric view of the major components comprising the bias coil assembly;

Fig. 21 is an isometric view of a pivot bar or rail that rotatably supports the bias coil assembly;

Fig. 22 is an isometric view of the bias coil assembly flexure to which the bias coil assembly is mounted and which is, in turn, mounted to the pivot bar depicted in Fig. 21;

Fig. 23 is an elevational view of the right side of the cartridge receiver and the cartridge just before initiation of an cartridge-eject cycle, depicting the disc mounted in operating position on the spindle;

Fig. 24 is an elevational view of the right side of the cartridge receiver and the cartridge during the cartridge-eject cycle, depicting the cartridge being tipped and the disc being peeled off the spindle;

Fig. 25 is an elevational view of the right side of the cartridge receiver and the cartridge during the cartridge-eject cycle, depicting the cartridge loading system in the up position and the disc starting to be ejected from the disc drive;

Fig. 26 is a schematic perspective view of an actuator in accordance with the present invention;

Fig. 27 is a perspective view of the lens holder for the actuator of Fig. 26;

Fig. 28 is a perspective view of the actuator of Fig. 26 within a magnetic field housing as employed in conjunction with a recording system;

Fig. 29 is a top plan view of the recording system of Fig. 28;

Fig. 30 is a right side elevational view of the recording system of Fig. 28;

Fig. 31 is a front elevational view of the recording system of Fig. 28;

Fig. 32 is a schematic perspective view illustrating the magnetic fields produced by the magnet pairs of the actuator of Fig. 26;

Fig. 33 is a perspective view of the focus coils and permanent magnets of the actuator of Fig. 26;

Fig. 34 is a schematic cross-sectional view of the focus coils and permanent magnets of the actuator of Fig. 26 taken along section lines 34-34 of Fig. 33 illustrating the focus forces acting on the actuator;

Fig. 35 is a schematic cross-sectional view of the tracking coil and permanent magnets of the actuator of Fig. 26 illustrating the tracking forces acting on the actuator;

Fig. 36 is a block diagrammatic presentation of a preferred embodiment of the beam focus sensing apparatus of the present invention;

Fig. 37 is a magnified top cross-sectional view of a differential version of the inventive beam separation module (FTR prism);

Fig. 38 is an illustrative front view of the first and second quad detectors included within the inventive focus sensing apparatus;

Fig. 39 is a graph showing the reflectivity of the FTR prism as a function of the angle of incidence of the servo beam;

Fig. 40 is a graph of the value of a differential focus error signal generated by a preferred embodiment of the apparatus of the present invention as a function of the position of the objective lens relative to an optical disc;

Fig. 41 schematically illustrates an exemplary optical read/write system in which the carriage and actuator assembly of the present invention may be used;

Fig. 42 is a perspective view of the carriage and actuator assembly;

Fig. 43 is an exploded view of the carriage and actuator assembly;

Fig. 44 is an exploded view of the actuator;

Fig. 45 is a schematic top view illustrating the coarse tracking forces acting on the assembly;

Fig. 46 is a side schematic view further illustrating the coarse tracking forces;

Fig. 47 is an exploded view which illustrates the focus forces acting on the actuator;

Fig. 48 is an exploded view which illustrates the fine tracking forces acting on the actuator;

Fig. 49A is a schematic top view illustrating the symmetry of coarse tracking forces in the horizontal plane;

Fig. 49B is a schematic side view illustrating the symmetry of coarse tracking forces in the vertical plane;

Fig. 50A is a schematic top view illustrating the symmetry of fine tracking forces in the horizontal plane;

Fig. 50B is a schematic end view illustrating the alignment of the net fine tracking force with the center of mass of the fine tracking motor;

Fig. 51A is a schematic top view illustrating the symmetry of fine tracking reaction forces in the horizontal plane;

Fig. 51B is a schematic end view illustrating the alignment of the net fine tracking reaction force with the center of mass of the fine tracking motor;

Fig. 52A is a schematic side view illustrating the symmetry of focus forces in the horizontal plane;

Fig. 52B is a schematic end view illustrating the alignment of the net focus force with the optical axis of the objective lens;

Fig. 53A is a schematic side view which illustrates the symmetry of focus reaction forces in the horizontal plane;

Fig. 53B is a schematic end view which illustrates the alignment of the net focus reaction force with the optical axis of the objective lens;

Fig. 54 is a schematic top view illustrating the flexure forces and fine motor reaction forces generated in response to the flexure forces;

Fig. 55A is a schematic side view which illustrates the symmetry of carriage suspension forces in the horizontal plane;

Fig. 55B is a schematic end view illustrating the alignment of the net carriage suspension force with the optical axis of the objective lens;

Fig. 56A is a schematic top view which illustrates the symmetry of friction forces in the horizontal plane;

Fig. 56B is a schematic side view illustrating the alignment of the friction forces with the center of mass of the carriage;

Fig. 57 is a schematic end view which illustrates the net inertial forces acting at the center of mass of the fine motor and center of mass of the carriage in response to a vertical acceleration;

Fig. 58A is a schematic side view illustrating the alignment of the net inertial force of the fine motor with the optical axis of the objective lens;

Fig. 58B is a schematic side view illustrating the alignment of the net inertial force of the carriage with the optical axis of the objective lens;

Fig. 59A is a schematic top view which illustrates the inertial forces acting on components of the carriage and actuator assembly for horizontal accelerations;

Fig. 59B is a schematic top view illustrating the net inertial forces for horizontal accelerations;

Fig. 60A is a schematic end view which illustrates the fine motor and carriage inertial forces for accelerations above the flexure arm resonance frequency;

Fig. 60B is a schematic end view which illustrates the fine motor and carriage inertial forces for accelerations below the flexure arm resonance frequency;

Figs. 61A-61D are diagrams illustrating the relationship between the fine tracking position versus fine motor current;

Figs. 62A-62C illustrate the effects of asymmetrical focus forces acting on the assembly;

Fig. 63 illustrates an alternative embodiment of a carriage and actuator assembly;

Fig. 64 illustrates the operation of the actuator to move the lens holder in a focusing direction;

Fig. 65 illustrates the operation of the actuator to move the lens holder in a tracking direction;

Fig. 66 depicts a simple anamorphic prism and illustrates the effect of chromatic aberration in the prism;

Fig. 67 depicts an existing multi-element anamorphic prism system;

Fig. 68 depicts an exemplary air-spaced prism system according to the present invention;

Figs. 69 and 69A depict one embodiment of an air-spaced, multi-element prism system of the present invention;

Figs. 70, 70A, and 70B depict side, bottom, and top plan views, respectively, of the plate prism of the prism system embodiment depicted in Fig. 69;

Figs. 71, 71A, and 71B depict side, top, and bottom plan views, respectively, of the trapezoidal prism of the embodiment of the prism system shown in Fig. 69;

Figs. 72 and 72A depict a side view and a plan view of one optical surface, respectively, of an embodiment of the chromatic correcting prism of the prism system embodiment shown in Fig. 69;

Fig. 73 depicts an alternative embodiment of an air-spaced, multi-element prism system of the present invention;

Figs. 74, 74A, and 74B depict side, top and bottom plan views, respectively, of the quadrilateral prism of the alternative embodiment illustrated in Fig. 73;

Fig. 75 is a block diagram showing an optical data storage and retrieval system;

Fig. 76 is a series of sample waveforms;

Figs. 77A and 77B are waveform diagrams of a symmetrical and unsymmetrical input signal, respectively;

Fig. 78 is a block diagram of a read channel;

Fig. 79A is a more detailed block diagram of various stages of a read channel;

Fig. 79B is a detailed circuit diagram of a partial integrator stage;

Figs. 80A-80E are frequency response diagrams of various stages of a read channel;

Fig. 80F is a plot of group delay for a combination of stages in a read channel;

Figs. 80G(1)-80G(4) are waveform diagrams showing signal waveforms at various stages in the read channel;

Fig. 81 is a block diagram of a peak detection and tracking circuit;

Fig. 82 is a schematic diagram of the peak detection and tracking circuit of Fig. 81;

Fig. 83 is a waveform diagram showing tracking by a threshold signal of the DC envelope of an input signal;

Figs. 84A-84D are diagrams showing exemplary waveforms at various points in a read channel;

Fig. 85 is a block diagram showing the optical data storage and retrieval system;

Fig. 86 is a series of waveforms showing uniform laser pulsing under a pulsed GCR format and nonuniform laser pulsing under an RLL 2,7 format;

Fig. 87 is a series of waveforms showing laser pulsing for various data patterns adjusted by the write compensation circuit;

Fig. 88 is a schematic diagram showing the write compensation circuit;

Fig. 89 is a series of waveforms showing laser pulsing for amplitude asymmetry correction;

Fig. 90 is a schematic diagram showing the amplitude asymmetry correction circuit;

Fig. 91 is a block diagram showing the basic relationship of elements of the pulse slimming means;

Fig. 92 is a series of waveforms showing threshold adjustments by the dynamic threshold circuit;

Fig. 93 is a schematic diagram for the dynamic threshold circuit;

Fig. 94 is a schematic block diagram of an optical data storage and retrieval system incorporating downward compatibility;

Fig. 95 is a diagram of the track layout of the high-density optical disks;

Fig. 96 is a diagram of the sector format of the high-density optical disks;

Fig. 97 is a block diagram in more detail showing the read/write circuitry of Fig. 94;

Fig. 98 is a table depicting, for each of the 21 zones in the preferred format of the high-density optical disc, the tracks within the zone, the number of sectors per track within the zone, the total number of sectors in the zone, and the write frequency of the data recorded in the zone;

Fig. 99 provides a table of the equations used to compute the CRC bits of the ID field;

Fig. 100A is the first half of a table (Hex 00 to 7F) showing how the 8-bit bytes in the three address fields and in the data field, except for the resync bytes, are converted to channel bits on the disc;

Fig. 100B is the second half of a table (Hex 80 to FF) showing how the 8-bit bytes in the three address fields and in the data field, except for the resync bytes, are converted to channel bits on the disc;

Figs. 101A-119 are schematic diagrams of the electronic circuitry in a preferred embodiment of the invention;

Fig. 120 is an isometric view of a mechanical isolator and a pole piece in accordance with a first preferred embodiment;

Fig. 121 is an isometric view of the mechanical isolator in a second preferred embodiment;

Fig. 122 is a state diagram of the read mode firmware module employed in conjunction with the present invention;

Fig. 123 is a state diagram of the write mode firmware module utilized in conjunction with this invention;

Fig. 124 shows a Nyquist diagram of the focus loop transfer function for selected amounts of closed loop peaking;

Fig. 125 is a graphical representation of magnitude responses of the focus loop transfer function for open and closed conditions;

Fig. 126 is a graphical representation of phase responses of the focus loop transfer function for open and closed conditions;

Fig. 127 illustrates the magnitude response curves for focus compensation transfer functions; and

Fig. 128 shows the phase response curves for focus compensation transfer functions.

DESCRIPTION OF THE PREFERRED EMBODIMENTS

System Overview: Main Optical, Electrical, and Mechanical Components

Referring initially to Fig. 1, there is shown an optical disk drive 10 having a housing 14. Disk drive 10 plays and/or records on a disk (not shown) that is housed in removable disk cartridge 12. Alternatively, the disk could be contained within the housing 14 of disk drive 10.

Referring now to Figs. 2 and 3, wherein Fig. 2 shows a top view of the drive 10 with the housing 14 removed to reveal certain important mechanical, electrical, and optical components of the drive 10. Fig. 3 is a cross-sectional view of the drive 10, taken in the direction of section lines 3-3 of Fig. 1. In Fig. 2 there is shown a base plate 16, a spindle 17, a linear actuator assembly 20, an objective lens carriage assembly 22, an optics module 24, a drive circuit board 26, and a flexible circuit connector 28. Fig. 3 shows a main circuit board 30, a spindle motor 18, an optics module circuit board 27, and the drive circuit board 26.

In brief, the base plate 16 acts as a base for the other components of the drive 10, positioning and aligning the components with respect to each other. Preferably the base plate 16 is made of cast steel for low cost.

As shown in Fig. 2, the linear actuator assembly 20 includes a pair of linear voice coil actuators 23. Each voice coil actuator 23 consists of a rail 34 that is rigidly attached to the base plate 16. The rails 34 are substantially parallel to each other. Adjacent each rail 34 is a pole piece 32. Surrounding a portion of each pole piece 32 is one of the actuator coils 23. Each actuator coil 23 is attached to an opposite portion of lens carriage assembly 22, so that when the coils 23 are selectively energized, the lens carriage assembly 22 moves along the rails 34. The actuator coils 23 are driven by signals from the drive circuit board 26, which result in linear motion of the lens carriage assembly 22 relative to the optics module 24, and relative to a respective disk (not shown) inserted in the drive 10. In this manner, the lens carriage assembly 22 enables coarse tracking of the disk.

The optics module 24 and lens carriage assembly 22 together contain the principle optics of the drive 10. Optics module 24 is rigidly attached to the base plate 16, and contains a laser, various sensors, and optics (not shown). In operation, the laser directs

a beam (not shown) from the optics module 24 towards the lens carriage assembly 22, and optics module 24 in turn receives a return beam (not shown) from the lens carriage assembly 22. The lens carriage assembly 22 is attached to the linear actuator assembly 20, as described above. The lens carriage assembly 22 contains a pentaprism (not shown), an objective lens (not shown), servomotors (not shown) for focusing the objective lens, and servomotors (not shown) for fine adjustments of the objective lens position relative to the position of the linear actuator assembly 20 and to the inserted disk, to enable fine tracking of the disk. Electrical information and control signals are transferred between the lens carriage assembly 22 and the main circuit board 30 on the one hand, and the drive circuit board 26 on the other hand by means of the flexible circuit connector 28.

The optics module circuit board 27 contains a laser driver and preamplifiers (not shown). The drive circuit board 26 controls the spindle motor 18, the linear coil actuators 23 of the linear actuator assembly 20, and the servomotors of the lens carriage assembly 22. The drive circuit board 26 is controlled by the main circuit board 30. The main circuit board 30 includes most of the electronic components that various design considerations (e.g., noise reduction, EMI and power loss) do not require to be located on the optics module circuit board 27, or the drive circuit board 26.

The spindle motor 18 is rigidly attached to the base plate 16. Motor 18 directly drives the spindle 17, which in turn spins the disk.

Optics: Optics module and Objective Lens Assembly

With reference now to Fig. 4A, there is shown a top cross-sectional view of the optics module 24. Optics module 24 includes a housing 40, a semiconductor laser diode 42, a collimating lenses 44, an achromatizing prism 46, an anamorphic expansion prism 48, a leaky beamsplitter 49, a DFTR prism 50, cylinder lenses 51, a read lens 52, a microprism 54, servodetector sensors 56 and 58, a forward sensor 60, and a data detector sensor 62. These elements are also shown in Fig. 4B, which presents a diagram of the optical path followed by a laser beam 64. Fig. 4B shows the optical elements of the optics module 24 in conjunction with a pentaprism 66 and an objective lens 68 of the lens carriage assembly 22. For ease of illustration in Fig. 4B, a portion 70 of the laser beam 64 between the pentaprism 66 and the objective lens 68 is shown to lie in the same plane as the portions of the laser beam 64 that pass through the optics

module 24. Actually, the pentaprism 66 is positioned to direct the laser beam portion 70 perpendicular relative to the portions of the laser beam 64 that pass through the optics module 24.

With continuing reference to Fig. 4B, it is to be understood that in operation the laser beam 64 is a collimated beam produced by the lenses 44 from the diverging beam emitted by the laser diode 42. The beam 64 transmits through the prisms 46 and 48, transmits through the beamsplitter 49 and exits the optics module 24 toward the lens carriage assembly 22. There it passes through the pentaprism 66 and is focused onto the disk surface by the objective lens 68.

Upon reflection from the disk, a reflected portion of the laser beam 64 returns through the objective lens 68 and the pentaprism 66 to re-enter the optics module 24. A first portion of the beam 64 reflects on the beamsplitter interface between the prism 48 and the beamsplitter 49, transmits through and is focused by the read lens 52, and enters the microprism 54. There the beam is split into two parts according to polarization, and each part is detected by a separate element of data detector sensor 62.

A second portion of the beam 64 transmits through the beamsplitter 49 and is internally reflected in the anamorphic prism 48. This second portion of the beam 64 exits the anamorphic prism 48 and enters the DFTR prism 50. There this second portion of the beam 64 is divided into two parts, which are each focused by the cylinder lenses 51 onto the respective surfaces of corresponding servo sensors 56 and 58. In response, the sensors 56 and 58 generate signals that are directed to the optics module circuit board 27, where the signals are used to generate tracking and focus error signals.

Electronic Systems: Main Circuit Board, Drive Circuit Board, and Optics Module Circuits

Referring now to Figs. 1, 2, 4A, and 5, there is shown in Fig. 5 a system block diagram of the electronic subsystems of the drive 10 in which a block 80 encompasses a read sensor preamplifier 82, a laser driver 84, and servo sensor preamplifiers 86. As represented by Figs. 4A and 5, the read sensor preamplifier 82 is connected to the data detector sensor 62, and amplifies the signal generated by data detector 62. Similarly, the servo sensor preamplifiers 86 are connected to the servo detectors 56 and 58, and amplifies the signal generated by servo detectors 56 and 58. The laser diode 42 is

connected to the laser driver 84, which provides signals that drive the laser 42. The subsystems 82, 84, and 86 of the block 80 are grouped together on the optics module circuit board 27 that is positioned in close proximity to the optics module 24. This minimizes the distance that signals must travel from the sensors 62 to the preamplifier 82, and from the sensors 56 and 58 to the preamplifiers 86, to reduce the adverse effect of noise on these signals. Since the signal that the laser driver 84 generates to drive laser diode 42 is of a relatively high frequency, good design practice requires the laser driver 84 to be positioned close to laser diode 42.

Block 88 of Fig. 5 encompasses a spindle motor interface 90, a mechanical subassembly (MSA) interface 92, a position sensor interface 94, and an assembly of switches and displays 96. The components 90, 92, 94, and 96 of block 88 all reside on the drive circuit board 26. The spindle motor interface 90 controls the spindle motor 18. The MSA interface 92 interfaces with the various displays and switches 96, including the front panel displays, the eject circuit, and switches related to the disk cartridge 12. Position sensor interface 94 connects to the coil actuators 23 of actuator assembly 20, which are powered by power amplifiers 102.

The remaining subsystems of the system block diagram of Fig. 5 reside on the main circuit board 30 illustrated in Fig. 3. These subsystems include an analog read channel 100, a encoder/decoder 104, an SCSI chip set 106, a buffer dram 108, and a GLIC interface 110 and an associated EEPROM 112. The main circuit board 30 also includes an analog interface circuit 114, a Digital Signal Processor (DSP) 116, an embedded controller 118 and its associated RAM/EPROM 120. Note that for optical drives 10 that are MO recordable drives, power amps 102 also drive a bias coil 122.

Cartridge Loading Apparatus

Referring first to Fig. 6, there is shown a magnetic disc storage system, generally designated 1-10. Fig. 6 depicts a replaceable disc cartridge 1-13 positioned for insertion into the disc drive 1-10 incorporating the cartridge loading and unloading apparatus of the instant invention. The disc drive 1-10 includes a bottom housing 1-16 and a face plate 1-19. The face plate 1-19 includes a disc receiving port 1-22, a drive activity indicator light 1-25, and an ejection button 1-28.

The optical disc system 1-10 is of the type having a focusing mechanism and a tracking mechanism, a lens and a disc to be read, wherein the mechanisms are

controlled by a feedback loop, which advantageously includes an electronic circuit for generating a servo signal for effecting corrections of the focusing mechanism and the tracking mechanism; first means for mitigating the effects of undesired mechanical forces upon a movable disc drive component; and second means for supporting the first means between the component and a source of the undesired mechanical forces, whereby mechanical isolation of is component is provided. These aspects of the present invention will be described in further detail below under headings corresponding to specific features of this invention.

The outer housing of the disc cartridge 1-13, which is of a conventional type, includes a upper planar surface 1-31 and a lower planar surface 1-32 which is shown in Fig. 25. The disc cartridge 1-13 also has a forward-facing label end 1-34. In the preferred embodiment, the forward-facing label end 1-34 of the disc cartridge 1-13 remains visible to a user while the disc cartridge 1-13 is inserted in the disc drive 1-10. Side walls, for example, side wall 1-37, extend between the upper planar surface 1-31 and the lower planar surface 1-32, and the cartridge further comprises a rear wall 1-38 extending between the upper planar surface 1-31 and the lower planar surface 1-32 parallel to the forward-facing label end 1-34. Near the label end 1-34 of the side walls 1-37 are channels 1-40 to accommodate cartridge locating pins 1-43 (Figs. 8A-8B) located on a base plate 1-46.

The disc cartridge 1-13 also includes a cartridge door or shutter 1-49. The shutter 1-49 is spring-loaded in a closed position (Figs. 6, 7, and 16). When the shutter 1-49 is open, it rests in a recessed portion 1-52 of the upper planar surface 1-31. Since the disc drive 1-10 of the preferred embodiment reads two-sided disc cartridges 1-13, a similar shutter and recessed portion exists on the lower planar surface 1-32, but these features are not shown in the figures. The shutter typically has a shutter latch 1-55 (not shown) on the rear wall 1-38 of the disc cartridge 1-13.

Protected within the disc cartridge 1-13 is a disc 1-14 (Figs. 23-25), having a metallic disc hub 1-15. As known in the relevant arts, the disc 1-14 may be formed as a rigid substrate having a magnetic material coating thereon. Embedded in the magnetic material coating are tracks in the form of concentric or spiraling rings. The magnetic coating may be on either one or both surfaces of the rigid substrate, and the coating enables data to be magnetically recorded on the disc 1-14 by magnetic

transducers, typically referred to as heads. At the center of the rigid substrate is the metallic disc hub 1-15.

Referring now to Fig. 7, the primary component groups within the disc drive 1-10 of the instant invention include the following. There is the bottom housing 1-16 in which the base plate 1-46 rests. In Fig. 7, a spindle motor 1-61 is shown mounted on the base plate 1-46. The spindle motor 1-61 includes a spindle magnet 1-63 which attracts the metallic disc hub 1-15 of the disc 1-14 (Figs. 23-25) when the disc cartridge 1-13 is installed in the disc drive 1-10. An ejection mechanism according to the present invention is generally referenced 1-67. The ejection mechanism 1-67 includes a left slider 1-70, a right slider 1-73, and a tiller 1-76. The ejection mechanism 1-67 is described more fully below. A parking arm 1-79 is also depicted in Fig. 7 in its position above the left slider 1-70. A cartridge receiver is shown generally at 1-82. Also shown in Fig. 7 are a left door link 1-85, a right door link 1-88, and a receiver door 1-91, each of which is pivotally attached to the cartridge receiver 1-82. The drive face plate 1-19 is depicted in front of the cartridge receiver 1-82. Finally, a rotatable, magnetic bias coil assembly 1-94 is depicted attached to a bias coil arm 1-97, with bias coil clamps 1-100 depicted above the bias coil arm 1-97. Further details about each of these primary component assemblies will next be provided.

With continuing reference to Fig. 7, it is illustrated that the bottom housing 1-16 includes side walls 1-103 and a back wall 1-106. On the inside base of the bottom housing 1-16 are four mounting stations 1-109 to which the base plate 1-46 is secured. The bottom housing 1-16 would also encase the control electronics, which are not depicted in the figures.

In reference to Figs. 8A and 8B, further details of the construction of the base plate 1-46 will now be provided. The base plate 1-46 is mounted on the four mounting stations 1-109 (Fig. 7) of the bottom housing 1-16. The base plate 1-46 has many components either molded into, embedded into, attached to, or associated with it. Base plate 1-46 is the "glue" that brings the many components of this invention together and permits them to interact. Around the periphery of the base plate 1-46 there is a forward wall 1-112, a left outer side wall 1-115, a left inner side wall 1-118, a right outer side wall 1-121, a right inner side wall 1-124, and a rear vertical wall 1-127. The left and right outer side walls 1-115, 1-121, respectively, each include a vertical slot 1-130, 1-133,

respectively. The left vertical slot 1-130 accommodates a left lift pin 1-136 (Fig. 15A) on the cartridge receiver 1-82 when the cartridge receiver 1-82 is in place around the base plate 1-46. The right vertical slot 1-133 similarly accommodates a right lift pin 1-139 (Fig. 15B) of the cartridge receiver 1-82.

The two cartridge locating pins 1-43, Fig. 8B, are positioned near the forward ends of the left and right outer side walls 1-115, 1-121, respectively. These locating pins 1-43 are adapted to engage the cartridge channels 1-40 (Fig. 6). When the pins 1-43 are located in the channels 1-40, the pins 1-43 hold the disc cartridge 1-13 and prevent it from moving both laterally (i.e., side-to-side) and longitudinally (i.e., forward and backward).

A spindle motor mount 1-142 is molded into the bottom of the base plate 1-46. The spindle motor 1-61 (Fig. 7) may be held on the spindle motor mount 1-142 by, for example, spring clips (not shown) attached to an intermediate rib 1-145.

The base plate 1-46 has various axes and mounting pins associated therewith. For example, a tiller pivot axis 1-148 is mounted on the base plate 1-46 adjacent to the spindle motor mount 1-142. A tiller-spring pin 1-151 is fixed to the bottom of the base plate 1-46 near the forward wall 1-112 (Fig. 8A). The other pins attached to the bottom of the base plate 1-46 near the forward wall 1-112 act as pivot shafts for the gears in the ejection gear train. The base plate 1-46 also includes a left slider channel 1-154 and a right slider channel 1-157. The slider channels 1-154, 1-157 extend along the sides of the base plate 1-46. The left slider channel 1-154 is formed between the left outer side wall 1-115 and the left inner side wall 1-118. When in position, the left slider 1-70 is sandwiched between the left inner side wall 1-118 and the left outer side wall 1-115, and rides in the left slider channel 1-154 (see Figs. 9, 13, and 16A). Similarly, the right slider channel 1-157 is formed between the right outer side wall 1-121 and the right inner side wall 1-124. When in position, the right slider 1-73 is sandwiched between the right inner side wall 1-124 and the right outer side wall 1-121, and rides in the right slider channel 1-157. The left and right sliders 1-70, 1-73, respectively, may be held in their respective channels 1-154, 1-157 by, for example, "ears" on the spring clips (not shown) that hold the spindle motor 1-61 in position on the spindle motor mount 1-142.

At the end of the right slider channel 1-157, adjacent to the rear vertical wall 1-127, a socket 1-160 is formed in the base plate 1-46 where the rear of the right inner side

wall 1-124 merges with the rear of the right outer side wall 1-121. This socket 1-160 accommodates a pivot pin 1-163 (Figs. 17B and 17A) of a receiver latch 1-166. The receiver latch 1-166 has a vertical surface 1-169 (Fig. 17B) upon which a latch-release trip lug 1-172 (Figs. 7 and 16A), which is fixed to the right door link 1-88, impacts to release the receiver latch 1-166.

The base plate 1-46 has a port 1-175 in the rear vertical wall 1-127. The laser diode 42 (not shown), which would be located behind the rear vertical wall between a left corner pillar 1-178 and a right corner pillar 1-181, shines through the port 1-175 and into a carriage 1-184 (best shown in Figs. 9, 13, 13A, 16A, and 16B), which contains the optics that focus the laser beam on an information track on the disc 1-14. The carriage 1-184 is discussed further below.

The base plate 1-46 also has a hole 1-187 molded therein to accommodate a pivot shaft 1-190 (Fig. 14B) of the parking arm 1-79. This hole 1-187 is molded as an integral part of the left inner side wall 1-118. Fig. 9, for example, shows the parking arm 1-79 in place with its pivot shaft 1-190 in the hole 1-187. The disc drive 1-10 includes an optics module 1-189 which performs similarly to the optics module 24 discussed above.

Referring now to Figs. 14A through 14C, further features of the parking arm 1-79 will be described. In addition to the pivot shaft 1-190, the parking arm 1-79 includes a pressing end 1-193. The parking arm 1-79 has a jaw 1-196 formed on the end remote from the pressing end 1-193. The jaw 1-196 has a long side 1-199 and a short side 1-202. When the parking arm 1-79 is in position, the jaw 1-196 straddles a lug 1-205 (Fig. 11C) on the left slider 1-70. The parking arm 1-79 in position, with its jaw 1-196 straddling the lug 1-205 of the right slider 1-70, may be seen to best advantage in Figs. 9, 13, 16A and 16B. The position of the parking arm 1-79 is thereby dictated by the location of the left slider 1-70 in the left slider channel 1-154.

As seen to best advantage in Fig. 13, the parking arm 1-79 parks the carriage 1-184. The carriage 1-184 focuses the laser beam coming through the port 1-175 (Figs. 8A and 8B) in the rear vertical wall 1-127 of the base plate 1-46. In particular, the carriage positions the laser beam over the center of a data track containing data to be read. The carriage 1-184 rides on support rails 1-208, Fig. 9. A conventional magnetic arrangement drives the carriage 1-184 along the rails 1-208. When the cartridge receiver 1-82 is in the up condition, the parking arm 1-79, which is powered by the left

slider 1-70, holds the carriage 1-184 toward the rear of the drive. This condition is illustrated in Figs. 9 and 16A, and is illustrated in Fig. 13 by the parking arm 1-79 shown in solid lines. When the left slider 1-70 is driven forward by the tiller 1-76 during ejection of the disc cartridge 1-13, the parking arm 1-79 is rotated by the lug 1-205 pressing against the short side 1-202 of the jaw 1-196 until the pressing end 1-193 of the parking arm 1-79 holds the carriage 1-184 toward the back of the disc drive 1-10. When the cartridge receiver 1-82 is in its down position, the left slider 1-70 has been driven toward the rear of the disc drive 1-10 by the tiller 1-76. Under this scenario, the lug 1-205, which was driven rearward with the left slider 1-70, has rotated the parking arm 1-79 toward the front of the disc drive 1-10. With the left slider 1-70 and parking arm 1-79 in these positions, the carriage 1-184 is not influenced by the pressing end 1-193 of the parking arm 1-79 and may move freely below the disc 1-13 in the disc drive 1-10.

The ejection mechanism 1-67, which may be seen to best advantage in Figs. 7 and 9, includes the following key features. An ejection motor 1-209 powers the ejection mechanism. In particular, the ejection motor 1-209 powers a gear train that powers the output cam which, in turn, forces the tiller 1-76, Fig. 9, to rotate in a first direction (counterclockwise in Fig. 9), thereby ejecting a disc cartridge 1-13 from the disc drive 1-10. When the ejection process is initiated, the motor 1-209 drives a corresponding worm gear 1-211. The worm gear 1-211 is fixed to the central shaft of the ejection motor 1-209. This worm gear 1-211 drives a first large gear 1-214 about a first axis 1-217. This rotation of the first large gear 1-214 rotates a first small gear 1-220, which is fixed to the bottom of the first large gear 1-214 for rotation therewith about the first gear axis 1-217. The first small gear 1-220 drives a second large gear 1-223 about a second gear axis 1-226. A second small gear 1-229 is fixed to the top of the second large gear 1-223 for rotation therewith about the second gear axis 1-226. The second small gear 1-229, in turn, drives a third large gear 1-232 about a third gear axis 1-235. The third large gear 1-232 drives a cam 1-238 that forces the tiller 1-76 to rotate about the tiller axis 1-148.

The tiller 1-76 will now be described with reference to Figs. 10A-10F and Fig. 9. The tiller 1-76 is pivotally attached to the base plate 1-46 by the tiller axis 1-148. A tiller-spring hook 1-239 is molded on the slender portion of the tiller 1-76. A tiller spring 1-241 (Fig. 9) is attached between the tiller-spring hook 1-239 and the tiller-spring pin 1-151.

The tiller-spring 1-241 biases the tiller 1-76 in a second direction (clockwise in Fig. 9) about the tiller axis 1-148. This is the cartridge-loading direction, which drives the right slider 1-73 forward and the left slider 1-70 rearward, to seat the disc cartridge 1-13 on the spindle motor 1-61. The tiller further includes a tiller skirt or webbed portion 1-244 that rides on top of the tiller gear train and thereby helps to contain the ejection gears in position on their respective gear axes. The end of the tiller near the tiller skirt 1-244 comprises a U-shaped jaw 1-247, and the tiller end remote from the skirt 1-244 comprises a similar U-shaped jaw 1-250. The U-shaped jaw 1-247 fits rotatably around a cylindrical connection post 1-253 of the left slider 1-70 (Fig. 11C). Similarly, the U-shaped jaw 1-250 of the tiller 1-76 fits rotatably around the cylindrical connection post 1-256 (Fig. 12E) of the right slider 1-73. The tiller 1-76 is thereby pivotally connected to the forward ends of the left and right sliders 1-70, 1-73, respectively. In addition, since the left and right sliders 1-70, 1-73 are held in their respective slider channels 1-154, 1-157 by the spring clips (not shown) which also hold the spindle motor 1-61 in position, the tiller 1-76 is held on the tiller axis 1-148 by the interaction between the U-shaped jaws 1-247, 1-250 and the cylindrical connecting posts 1-253, 1-256.

When the tiller 1-76 rotates in a first direction (counterclockwise in Fig. 9), the left slider 1-70 is driven forward in the left slider channel 1-154, while the right slider 1-73 is simultaneously driven rearward in the right slider channel 1-157. Thus, rotation of the tiller 1-76 in the first direction (counterclockwise in Fig. 9) raises the cartridge receiver 1-82 so that a disc cartridge 1-13 may be ejected from or loaded into the disc drive 1-10. On the other hand, when the tiller 1-76 rotates in a second direction (clockwise in Fig. 9), the left slider 1-70 is driven rearward in the left slider channel 1-154, while the right slider 1-73 is simultaneously driven forward in the right slider channel 1-157. Rotation of the tiller 1-76 in this direction lowers the cartridge receiver 1-82, placing the disc on the spindle motor. The raising and lowering of the cartridge receiver 1-82 by the rotation of the tiller 1-76 is discussed further below.

As discussed above, the left slider 1-70 rides in the left slider channel 1-154, and the right slider 1-73 rides in the right slider channel 1-157 under the influence of the tiller 1-76. Further details concerning the sliders 1-70, 1-73 is provided next.

Referring now to Figs. 11A-11C, the features of the left slider 1-70 are as follows. The left slider includes the cylindrical connecting post 1-253 on its forward end. The

parking arm lug 1-205 exists on a first recessed portion 1-259. The parking arm 1-79 slides along the first recessed portion 1-259 of the left slider 1-70 under the influence of the lug 1-205. An S-shaped slot 1-262 is formed into the left slider 1-70. When the left slider 1-70 is in position in the left slider channel 1-154, the S-shaped slot 1-162 opens toward the left outer side wall 1-115, adjacent to and behind the left vertical slot 1-130. When the cartridge receiver 1-82 is in position around the base plate 1-46, the left lift pin 1-136 (Fig. 15A) of the cartridge receiver 1-82 rides in the left vertical slot 1-130 of the base plate 1-46. The left lift pin is longer than the left outer side wall 1-115 is thick. Therefore, the left lift pin 1-136 projects through the left vertical slot 1-130 and rides in the S-shaped slot 1-262 in the left slider 1-70. When the cartridge receiver 1-82 is thus positioned about the base plate 1-46, with the left lift pin 1-136 riding in the vertical slot 1-130 and the S-shaped slot 1-262, the cartridge receiver 1-82 is restricted from traveling forward or backward and may only travel up and down vertically. The vertical slot 1-130 restricts the forward-to-backward movement of the cartridge receiver 1-82, while the S-shaped slot 1-262 in the left slider 1-70 defines the vertical height of the cartridge receiver. In other words, depending upon which portion of the S-shaped slot 1-262 is behind the vertical slot 1-130 at any particular moment, the cartridge receiver 1-82 may be in its highest position, its lowest position, or at some position between its highest and lowest positions.

A second recessed portion 1-265 is present on the top of the left slider 1-70. A horizontal pin (not shown) may be attached to the base plate 1-46 so as to slip along the second recessed portion 1-265. This horizontal pin (not shown) would limit the most forward and most rearward positions of the left slider 1-70 because the pin would impact the edges of the second recessed portion 1-265 upon reaching one of the extreme positions of the left slider.

The rear-most end of the left slider 1-70 includes a notch 1-268, which is best illustrated in Figs. 11B and Fig. 7. The notch 1-268 is located on a displaced end portion 1-272 of the left slider 1-70. The notch 1-268 receives a lever arm 1-275 of the bias coil arm 1-97, Fig. 7. This lever arm 1-275 rotates the bias coil arm 1-97 depending upon the position of the left slider 1-70, and in particular, the position of the notch 1-268. The displaced end portion 1-272 of the left slider 1-70 rides in a recess 1-278 (Fig. 8B) in the left outer side wall 1-115 of the base plate 1-46.

Referring now to Figs. 12A-12E, the features of the right slider 1-73 will be presented. As stated above, the tiller 1-76 is connected to the right slider 1-73 via the cylindrical connection post 1-256. The right slider 1-73 has an S-shaped slot 1-281 formed therein. This S-shaped slot 1-281 is a flipped version of the S-shaped slot 1-262 in the left slider 1-70. This is best shown in Fig. 7. Upon close consideration of Fig.7, it becomes apparent that, when the sliders 1-70, 1-73 are connected to the tiller 1-76, the S-shaped slots 1-262, 1-281 are flipped mirror images of each other. This arrangement is necessary since the sliders 1-70, 1-73 move in opposite directions under the influence of the tiller 1-76. The S-shaped slot 1-281 in the right slider 1-73 also opens toward the right outer side wall 1-121 when the right slider 1-73 is in its operating position in the right slider channel 1-157. Similar to what was described above with reference to the left slider 1-70, when the cartridge receiver 1-82 is in position around the base plate 1-46, the right lift pin 1-139 (Fig. 15B) rides in the right vertical slot 1-133 (Fig. 8B). Since the right lift pin 1-139 is longer than the right outer side wall 1-121 is thick, the right lift pin 1-139 projects through the right outer side wall 1-121 at the right vertical slot 1-133 and rides in the S-shaped slot 1-281 in the right slider 1-73. The right vertical slot 1-133 restricts the right lifting pin 1-139 from traveling parallel to the longitudinal axis of the base plate 1-46 (i.e., parallel to a line passing perpendicularly through the forward wall 1-112 and the rear vertical wall 1-127). Since the right lift pin 1-139 rides in the S-shaped slot 1-281, the vertical height of the cartridge receiver 1-82 is defined by the location of the right lift pin 1-139 in the S-shaped slot 1-281. The S-shaped slot 1-281 in the right slider 1-73 travels behind the right vertical slot 1-133 at the same rate that the S-shaped slot 1-262 in the left slider 1-70 passes behind the left vertical slot 1-130, but in an opposite direction. The flipped mirror image design of the S-shaped slots 1-262, 1-281, however, ensures that the left and right lift pins 1-136, 1-139, respectively, are held at substantially the same vertical height above the bottom of the base plate 1-46 at any particular time.

Still referring primarily to Figs. 12A-12E, the right slider 1-73 includes the following additional features. A recessed portion 1-284 is provided on the top surface of the right slider 1-73. A pin (not shown) may be mounted horizontally across the right slider channel 1-157 so as to slide along the recessed surface 1-284. The horizontal pin sliding along the recessed surface 1-284 would limit the maximum forward and rearward

travel of the right slider 1-73 since the horizontal pin would hit the edges of the recess 1-284 at the extremes of travel of the right slider 1-73. The right slider 1-73 also includes a notched region 1-287 to accommodate a paw 1-290 (Figs. 17A and 17B) of the receiver latch 1-166. A raised portion 1-293 is provided on the rear end of the right slider 1-73. When the tiller 1-76 rotates in the first direction (counterclockwise in, for example, Fig. 13), driving the right slider 1-73 rearward in the right slider channel 1-157, a latching action takes place between the paw 1-290 of the receiver latch 1-166 and the raised portion 1-293 of the right slider 1-73. In particular, a first slipping surface 1-296 (Fig. 17A), which is located on the paw 1-290, slides past a second slipping surface 1-299 (Figs. 12C and 12E), which is on the raised portion 1-293 of the right slider 1-73. When the surfaces 1-296 and 1-299 slip past each other, the paw 1-290, which is spring-loaded in the direction indicated by arrow 1-302 in Fig. 17A, enters the notched region 1-287 of the right slider 1-73, which holds the right slider 1-73 in the rearward position and, consequently, holds the cartridge receiver 1-82 in its uppermost position. When the cartridge receiver is in this position, any disc cartridge 1-13 in the drive 1-10 would be ejected, or, alternatively, a disc cartridge 1-13 could be loaded into the disc drive 1-10.

The S-shaped slots 1-262 and 1-281 in the left and right sliders 1-70, 1-73, respectively, play a significant role in generating the peeling action accomplished by the instant invention when loading a disc cartridge onto and unloading a disc cartridge from the spindle motor. This role of the S-shaped slots 1-262, 1-281 in facilitating the peeling action generated by the instant invention is discussed further below.

Referring now to Figs. 15A and 15B, the cartridge receiver 1-82 and the components attached thereto will be described. The cartridge receiver 1-82 is a one-piece, injection molded piece of plastic to which the left door link 1-85 (Fig. 7) and right door link 1-88 are added. When the disc drive 1-10 is fully assembled, the cartridge receiver 1-82 rides on the outside of the left and right outer side walls 1-115, 1-121 of the base plate 1-46. The cartridge receiver 1-82 travels vertically up and down as the lift pins 1-136, 1-139 move up and down as they follow their respective S-shaped slots 1-262, 1-281. The cartridge receiver 1-82 also pitches slightly up and down about an imaginary lateral axis passing through the left and right lift pins 1-136, 1-139. It is this slight pitching motion in conjunction with the up and down motion that generates the

beneficial peeling action achieved by the instant invention. The cartridge receiver 1-82 may be snapped or lifted off of the remainder of the mechanism if the cover of the disc drive 1-10 is removed.

The cartridge receiver 1-82 has a left cartridge receiving channel 1-305 and a right cartridge receiving channel 1-308 formed therein. A stop bumper 1-311 is positioned in the rear of the right cartridge-receiving channel 1-308 to prevent improper insertion of a disc cartridge 1-13. As may be seen in Figs. 6 and 7, the disc cartridge 1-13 has a pair of slots 1-314 molded into the side walls 1-37. If the disc cartridge 1-13 is inserted correctly, with its rear wall 1-38 entering the disc receiving port 1-22 first, one of the slots 1-314 in the disc cartridge 1-13 will accommodate the stop bumper 1-311 and permit the cartridge 1-13 to be fully inserted into the drive 1-10. If, on the other hand, the user inserts the disc cartridge 1-13 with the forward-facing label end 1-34 entering the disc receiving port 1-22 first, the stop bumper 1-311 will impact the label end 1-34 of the disc cartridge 1-13, thereby preventing full insertion of the disc cartridge 1-13 into the disc drive 1-10. A rear wall 1-317 of the cartridge receiver 1-82 has a notched region 1-320 formed therein. This notched region 1-320 permits the latch-release trip lug 1-172 (Fig. 16) fixed to the right door link 1-88 to impact the vertical surface 1-169 (Fig. 17B) of the receiver latch 1-166. Since the left and right door links 1-85 and 1-88, respectively, are rotated toward the rear of the disc drive 1-10 as the disc cartridge 1-13 is inserted in the cartridge receiver 1-82, as the disc cartridge 1-13 approaches full insertion, the trip lug 1-172 trips the receiver latch 1-166 by pressing against the vertical surface 1-169 to rotate the receiver latch 1-166. This rotation of the receiver latch 1-166 frees the paw 1-290 from its latched position around the raised portion 1-293 of the right slider 1-73. When the receiver latch 1-166 is tripped in this manner, the cartridge receiver 1-82 can be lowered, placing the disc cartridge 1-13 in operating position on the spindle motor 1-61.

Referring to Figs. 7, 15A, 15B, 16A and 16B, the attachment of the left door link 1-85 and the right door link 1-88 to the receiver cartridge 1-82 will now be described. The left and right door links 1-85 and 1-88, respectively, are attached to the rear corners of the cartridge receiver 1-82, near the rear wall 1-317. Specifically, the left door link 1-85 is rotatably mounted to the cartridge receiver 1-82 at a first pivot point 1-323, and the right door link 1-88 is rotatably mounted to the cartridge receiver 1-82 at a second

pivot point 1-326. The door links 1-85 and 1-88 are biased by a spring (not shown) toward the face plate 1-19 of the disc drive 1-10. In operation, one or the other of the door links 1-85, 1-88 unlatches the cartridge shutter lock and opens the cartridge shutter 1-49 as the disc cartridge 1-13 is inserted into the drive 1-10. Whether the left door link 1-85 or the right door link 1-88 opens the cartridge shutter 1-49 is determined by which side of the disc cartridge 1-13 is facing up when the cartridge 1-13 is inserted into the drive 1-10. If the disc cartridge 1-13 is inserted with a first side up, the right door link 1-88 operates the shutter latch and opens the shutter 1-49. If the disc cartridge 1-13 is inserted with its other side up, the left door link 1-85 operates the shutter latch and opens the shutter 1-49. When no disc cartridge 1-13 is in the drive 1-10, the door links 1-85 and 1-88 rest against door link stops 1-329, which are integrally formed as part of the cartridge receiver 1-82. These door link stops 1-329 ensure that free ends 1-332 of the door links 1-85 and 1-88 are properly positioned to release the shutter latch and open the shutter 1-49 as the disc cartridge 1-13 is inserted into the drive 1-10.

With reference now to Figs. 18-22, the rotatable, magnetic bias coil assembly 1-94 will be more fully described. The bias coil assembly 1-94 is used during writing and erasing operations of the disc drive 1-10. The bias coil assembly 1-94 includes a steel bar 1-335 wrapped in a coil of wire 1-338. When the bias coil assembly 1-94 is positioned over a disc 1-14, as best shown in Fig. 23, it extends radially across the disc 1-14 and is thus capable of generating a strong magnetic field over a radial strip of the disc 1-14, extending from near the spindle 1-62 (Figs. 23-25) to the edge of the disc 1-14. When the disc 1-14 is rotated under the bias coil assembly 1-94 by the spindle motor 1-61, it is possible to generate a magnetic field over the entire surface of the disc 1-14, thus enabling the user to write information to all portions of the disc 1-14 from its innermost to its outermost tracks. The coil 1-338 and bar 1-335 are covered by a bias coil housing top 1-341, which is mounted to a bias coil housing bottom 1-344.

The bias coil assembly 1-94 is mounted to a bias coil flexure 1-347, Fig. 22, which is, in turn, mounted on the bias coil arm 1-97, Fig. 21. The bias coil arm 1-97 straddles the width of the base plate 1-46 and is rotatably held by a pair of the bias coil clamps 1-100, Fig. 18, to the corner pillars 1-178 and 1-181, Figs. 8A and 8B, of the base plate 1-46. The bias coil clamps 1-100 thus act as bearing blocks under which the bias coil arm 1-97 can rotate. The bias coil clamps 1-100 include a stop ledge 1-350, Fig. 18,

which terminates the upward travel of the cartridge receiver 1-82 during an ejection operation, as discussed more fully below with reference to Figs. 23-25. As previously discussed, the bias coil arm 1-97 includes the lever arm 1-275 in operative association with the notch 1-268 on the rearward end of the left slider 1-70 to lift and lower the bias coil assembly 1-94. Since the lever arm 1-275 engages the notch 1-268 in the left slider 1-70, the left slider 1-70 controls when the bias coil assembly 1-97 is rotated onto or off of the disc cartridge 1-13.

The bias coil assembly 1-94 may tilt or rotate about a point 1-353 near its center, and it is spring-loaded downward. In this manner, the bias coil assembly 1-94 can remain parallel to the disc cartridge 1-13 when in the down condition (i.e., the position depicted in Fig. 23, wherein the disc cartridge 1-13 is fully loaded), and when in the up condition (i.e., the position depicted in Fig. 25, wherein the disc cartridge 1-13 is unloaded). The ability of the bias coil assembly 1-94 to remain parallel to the disc cartridge 1-13 when in the up condition provides the clearance needed for the drive 1-10 to be able to complete a disk-ejection operation, as discussed below. When in the down condition and loaded in the disc cartridge 1-13, the bias coil assembly 1-94 rests on the disc cartridge 1-13 in three places.

With further reference now to Figs. 23-25, the ejection of a disc cartridge 1-13 from the disc drive 1-10 will be described. Fig. 23 depicts a disc cartridge 1-13 with the disc hub 1-15 fully loaded onto the spindle 1-62 of the spindle motor 1-61. In this configuration, the bias coil assembly 1-94 is loaded into the disc cartridge 1-13 through the open shutter 1-49. When the disc cartridge 1-13 is fully loaded in this manner, the left slider 1-70 has been slid to its most rearward position by the tiller 1-76. The lever arm 1-275 of the bias coil arm 1-97 has been rotated toward the rear of the disc drive 1-10. It is this rotation of the lever arm 1-275 which has installed the bias coil assembly 1-94 into the disc cartridge 1-13. Since the lift pins 1-136 and 1-139 of the cartridge receiver 1-82 are restrained to only vertical movement by the vertical slots 1-130 and 1-133 (Figs. 8A and 8B), when the left slider 1-70 has been driven toward the rear of the disc drive 1-10 by the tiller 1-76, as depicted in Fig. 23, the cartridge receiver 1-82, via its lift pins 1-133 and 1-136, has been driven to the lowest point in the S-shaped slots 1-262 and 1-281.

An intermediate stage of the ejection cycle will now be described with reference to Fig. 24. After a user initiates the ejection of the disc cartridge 1-13 from the disc drive 1-10, the ejection motor 1-208, Fig. 9, rotates the tiller 1-76 in a first direction (counterclockwise in Fig. 9). This rotation of the tiller pulls the left slider 1-70 toward the front of the drive 1-10, as illustrated in Fig. 24. As the left slider 1-70 slides forward, the notch 1-268 rotates the lever arm 1-275 forward, thereby lifting the bias coil assembly 1-94 out of the disc cartridge 1-13. As may also be seen in Fig. 24, the lift pins 1-136 and 1-139, which are fixed to the cartridge receiver 1-82, are being forced up the S-shaped slots 1-262 and 1-281 by the motion of the tiller 1-76. Since the lift pins 1-136 and 1-139 are positioned on the cartridge receiver at a point where a lateral axis passing through both lift pins 1-136 and 1-139 would not also pass through the spindle 1-62, a "peeling" action for removal of the disc hub 1-15 from the spindle magnet 1-64 is achieved as the cartridge receiver 1-82 is raised. In other words, as shown in Fig. 24, the disc 1-14 is not lifted vertically from the spindle 1-62 during the ejection cycle. Rather, due to the location of the lift pins 1-136, 1-139 on the cartridge receiver 1-82, the rear portion of the disc cartridge 1-13 is lifted before the forward end of the disc cartridge 1-13 as the lift pins 1-136 and 1-139 follow their respective S-shaped slots 1-262 and 1-281. This peeling action lowers the peak force required to remove the disc hub 1-15 from the magnetic clamp 1-64 of the spindle motor 1-61.

Referring still to Fig. 24, it is apparent that after the cartridge receiver 1-82 has been lifted a predetermined amount by the motion of the sliders 1-70 and 1-73, a lip 1-356, Fig. 15A, on the rear wall 1-317 of the cartridge receiver 1-82 impacts the lower surface of the stop ledge 1-350, Fig. 18, on the bias coil clamps 1-100. This contact between the bottom surface of the stop ledge 1-350 and the top surface of the lip 1-356, in conjunction with the continued rotation of the tiller 1-76 and the resulting longitudinal motion of the sliders 1-70 and 1-73, causes the cartridge receiver 1-82 to pitch slightly upward in Fig. 24. This occurs substantially about the point of contact between the stop ledge 1-350 and the lip 1-356, as the lift pins 1-136, 1-139 continue to pick up the receiver. This slight pitching motion of the cartridge receiver 1-82 effects the "peeling" action referred to above.

Fig. 25 depicts the configuration of the disc drive 1-10 after the slight upward pitching of the cartridge receiver 1-82 is complete and the cartridge receiver 1-82 has

impacted the stops adjacent to the disc receiving port 1-22. At this point, the left slider 1-70 has reached its furthest forward position and has pulled the lever arm 1-275 to its furthest forward position, thereby rotating the bias coil assembly 1-94 out of the disc cartridge 1-13. The bias coil assembly is thus parked parallel to and above the disc cartridge 1-13, substantially against the inside of the top surface of the disc drive 1-10 or substantially against a printed circuit board located against the inside of the top surface of the disc drive 1-10. The bias coil assembly 1-94 travels vertically preferably about 9mm from its loaded position in the disc cartridge 1-13 to its just-described raised position.

As the cartridge receiver 1-82 is raised to its highest position (about 5mm above its lowest position), the right slider 1-73 of Figs. 12A-12E is latched in its rear-most position by the receiver latch 1-166, Figs. 17A and 17B, as fully described above. When the cartridge receiver 1-82 is in the up position depicted in Fig. 25, the cartridge receiver 1-82 is positioned parallel to the base plate 1-46, ready for the cartridge 1-13 to be ejected. The spring force of the door links 1-85 and 1-88, which are biased toward the forward end of the disc drive 1-10 as described above, and the spring force of the cartridge shutter 1-49, which is biased toward a closed position, cause the disc cartridge 1-13 to be ejected from the disc drive 1-10, as shown in Fig. 25.

The disc loading process is essentially the reverse of the above described ejection process. Therefore, a detailed description of the disc insertion process will not be provided.

In the present invention, where the disc hub 1-15 is peeled from the spindle magnet 1-64, the required ejection force is effectively reduced by the manner in which the disc 1-14 is moved from the loaded position to the unloaded position. Through the use of the "peeling" motion employed in accordance with this invention, a smaller force is required to remove the disc hub 1-15 than is required in conventional, vertical-lifting systems. In addition, the design conserves overall drive height. The above-described design accomplishes the peeling of the disc hub 1-15 from the spindle magnet 1-64 with a mechanism that uses available space at the sides of the drive 1-10, rather than requiring parts that straddle the width of the base plate 1-46 to tie the motion of both sides of a cartridge receiver 1-82 together and using additional height to do so. Another advantageous feature of the design is the noncritical nature of most of the dimensions

required. Further, the bias coil actuating mechanism that loads the bias coil assembly into the cartridge 1-13 is simple and has a minimum number of wear points. The entire design is easy to assemble and for the most part, can be manufactured using simple and easy to fabricate parts.

While what has been described above is a preferred embodiment of this invention, it will be obvious to those skilled in the art that numerous changes may be made without departing from the spirit or scope of the invention. For example, the present invention may be used for media systems which do not require the bias coil assembly 1-94 (i.e., phase change or write once systems), by eliminating the parts used to operate the bias coil arm 1-97. In addition, although in the preferred embodiment the storage media is a 5 ¼ inch magneto-optic disc cartridge, the present invention is applicable to all types of media and all sizes of drives.

Two-Axis Moving Coil Actuator

Fig. 26 schematically illustrates a two-axis electromagnetic actuator 2-10 constructed in accordance with the present invention. The actuator 2-10 includes an objective lens 2-12 positioned within a lens holder 2-14. A radial or tracking coil 2-16 is wound around and affixed to the lens holder 2-14 so as to be generally positioned perpendicular to the Z axis. First and second focus coils 2-18 and 2-20 are positioned at the sides of the lens holder 2-14 and are affixed to the tracking coil 2-16 so as to be generally positioned perpendicular to the Y axis. A first pair of permanent magnets 2-22 is positioned adjacent the first focus coil 2-18 and a second pair of permanent magnets 2-24 is positioned adjacent the second focus coil 2-20.

As shown in Fig. 27, the lens holder 2-14 includes a generally rectangular collar 2-30 having a circular aperture 2-32 centered therein. The objective lens 2-12 is glued into position on top of the circular aperture 2-32 in the collar 2-30. The collar 2-30 is supported by a generally I-shaped platform 2-34 having a pair of grooves 2-44 formed at the edges thereof to align and secure the tracking coil 2-16 therein when it is wound around the platform. A base 2-36 supporting the platform 2-34 includes first and second T-shaped sections 2-46 and 2-48 having a slot 2-50 formed therebetween. As will be explained in more detail below, this base 2-36 acts as a mass balance for the lens holder 2-14. The collar 2-30, platform 2-34, and base 2-36 are aligned on two sides to form first and second opposing faces 2-52 and 2-54 of the lens holder.

The focus coils 2-18 and 2-20 are affixed to the tracking coil 2-16 such that the central axes of the focus coils are coincident, intersect, and preferably perpendicular to the central axis of the tracking coil. The focus coils 2-18 and 2-20 are preferably formed from thermally bonded wire having a bond material layer thereon and are preferably wound on a suitable tool or support. The coils 2-18 and 2-20 are preferably wound around the support as tight as possible without deforming the wire. As those skilled in the art will appreciate, this tightness will vary with the type of wire. During the winding process, the focus coils 2-18 and 2-20 are preferably heated to melt the bond material layer on the wire, advantageously increasing the solidity and rigidity of the wound coils. The temperature is advantageously selected so as to be high enough to melt the bond material, but not so high as to melt the insulation. After cooling, the coils 2-18 and 2-20 are removed from the support and these freestanding coils are then affixed to the tracking coil 2-16 in a well-known manner using a suitable adhesive.

Each freestanding focus coils 2-18 and 2-20 is oval in shape and has two elongate sides 2-56 joined by a pair of shorter ends 2-58. The sides 2-56 and ends 2-58 of the coils 2-18 and 2-20 surround an open or hollow annular center 2-60. The tracking coil 2-16 is wound around the I-shaped platform 2-34 of the lens holder 2-14 such that the coil is received by and secured within the grooves 2-44 and positioned against the opposed faces 2-52 and 2-54 of the lens holder. Referring to both Fig. 26 and Fig. 27, the two focus coils 2-18 and 2-20 are affixed to the tracking coil 2-16 such that the tracking coil is positioned within the center 2-60 of each focus coil. The focus coils 2-18 and 2-20 are further positioned such that each coil abuts the opposed faces 2-52 and 2-54 of the lens holder 2-14. In this manner, the tracking coil 2-16 and focus coils 2-18 and 2-20 are rigidly secured to the lens holder 2-14, thereby creating a more rigid driven unit that behaves as a single lumped mass.

Referring to Figs. 28, 29, 30, and 31, in operation, a light source element (not shown), typically a laser diode, emits a laser light beam 2-70, Fig. 31. The beam 2-70 is incident upon a prism 2-72 which orthogonally reflects the light beam upward toward the objective lens 2-12. The lens 2-12 converges the beam 2-70 to a precise focal point or optical spot 2-74 on the surface of a recording medium, such as an optical disc 2-76. Upon striking the disc 2-76, the light beam 2-70 is altered by the information stored on the disc 2-76 and is reflected as a divergent light beam carrying information identical to

that encoded on the disc 2-76. This reflected beam re-enters the objective lens 2-12 where it is collimated and is again reflected by the prism 2-72 to a photo detector (not shown) which detects the data stored on the disc 2-76. In addition, if the light beam falling on the photodetector is out of focus or misaligned, the amount of misalignment or defocusing is measured electronically and used as feedback for a servo system (not shown) well-known in the art which properly realigns the objective lens 2-12 relative to the disc 2-76.

It is these feedback signals which determine the amount and direction of movement of the actuator 2-10 and objective lens 2-12 carried thereon needed to bring the light beam into the desired focus condition with respect to the disc 2-76. When radial or tracking movement is required to position the objective lens 2-12 beneath the center of a selected track on the optical disc 2-76, current is applied to the tracking coil 2-16. The current interacts with the magnetic field produced by the permanent magnet pairs 2-22 and 2-24 to produce forces which move the actuator 2-10 in the tracking direction. The forces are generated according to the Lorentz law $F = B \cdot X \cdot I \cdot 1$, wherein F represents the force acting on the tracking coil 2-16, B represents the magnetic flux density of the magnetic field between the permanent magnet pairs 2-22 and 2-24, I represents the current through the tracking coil 2-16, and 1 represents the length of the coil 2-16. When the current I applied to the tracking coil 2-16 travels through the coil in a counterclockwise direction, relative to the orientation of Fig. 29, a force is produced which moves the actuator 2-10 to the right. This rightward movement is indicated in Fig. 31 by arrow 2-15. When the current applied to the coil 2-16 travels through the coil in the opposite, or clockwise direction, a force is produced which moves the actuator 2-10 to the left as indicated in Fig. 31 by arrow 2-17. In this manner, the actuator 2-10 is moved radially to position the objective lens 2-12 beneath the center of a desired information track on the surface of the optical disc 2-76.

Movement of the actuator 2-10 to effect focusing is produced when current is generated in the two focus coils 2-18 and 2-20 affixed to the tracking coil 2-16 at the sides of the lens holder 2-14. When the current through these coils 2-18 and 2-20 is applied so that the current travels in a counterclockwise in the plane of Fig. 30, a force is produced which acts to move the lens holder 2-14 and objective lens 2-12 upward, as shown by arrow 2-19 in Fig. 31, towards the surface of the optical disc 2-76.

Conversely, when current is applied such that current travels through the coils 2-18, 2-20 in a direction clockwise in the plane of Fig. 30, a force is produced which moves the lens holder 2-14 downward, as shown in Fig. 31 by the arrow 2-21, or farther away from the surface of the disc 2-76.

Because the tracking coil 2-16 is coupled to the lens holder 2-14, and, in turn, the focus coils 2-18 and 2-20 are coupled directly to the tracking coil 2-16, the coils and lens holder behave as a "lumped mass" and the frequencies at which the coils decouple with respect to the lens holder are significantly increased. Decoupling frequencies of up to 30 kHz have been measured with the actuator design of the present invention.

With reference now to Figs. 28 and 29, the magnet pairs 2-22 and 2-24, remain stationary during movement of the lens holder 2-14 and are affixed within a generally rectangular housing or base 2-80. Two pairs of suspension wires 2-82 and 2-84 are provided to suspend the objective lens holder 2-14 between the magnet pairs 2-22 and 2-24. The wire pairs 2-82 and 2-84 are attached to a stationary printed circuit board 2-85 which is positioned vertically with respect to the lens holder 2-14 and acts as a support for the wire pairs 2-82 and 2-84. The wire pairs 2-82 and 2-84 are further attached to electrical contacts on a moving circuit board 2-87 which is attached to the lens holder 2-14, again in a vertical orientation. In particular, a free end of each focus coil 2-18 and 2-20 is soldered to electrical contacts 2-86 such that current is supplied to the focus coils 2-16 and 2-18, through the second or bottom wire pair 2-84 which is also soldered to the contacts 2-86. The other free end of each focus coil 2-18 and 2-20 is soldered to the circuit board 2-87 and joined along an electrical contact 2-88. The free ends of the tracking coil 2-16 and the first or top suspension wire pair 2-82 are soldered to electrical contacts 2-89 on the moving circuit board 2-87 such that current is supplied to the coil through the top pair of wires. The base 2-36 of the lens holder 2-14 acts as a mass balance by offsetting the weight of the objective lens 2-12 and the circuit board 2-87 to which the lens holder 2-14 is attached.

Alternatively, four flexures could be used to suspend the lens holder 2-14. The flexures would desirably act as parallel leaf springs which permit the objective lens holder 2-14 to move up-and-down for focusing while prohibiting changes in the orientation of the optical axis of the lens 2-12. In this manner, the objective lens 2-12 will not be canted with respect to the surface of the optical disc 2-76 as the lens holder

2-14 is moved in the focusing direction. Each flexure further includes narrow portions which operate as a hinge so as to allow some movement of the lens holder 2-14 in a side-to-side direction for tracking adjustments.

In addition to accomplishing fine focusing and tracking movements of the lens holder 2-14, it is often desirable to detect the position of the lens holder 2-14 with respect to the base 2-80. To ascertain the position of the objective lens 2-12 in both a tracking and/or a focusing direction, the actuator 2-10 is equipped with a position sensor 2-90. Preferably, a light emitting diode (LED) 2-92 is positioned on one side of the actuator 2-10, opposite the sensor 2-90, such that when the objective lens holder 2-14 is centered within the base 2-80, light emitted by the LED 2-92 will shine through the slot 2-50 in the lens holder 2-14 to illuminate a portion of the sensor 2-90. A position sensitive detector is advantageously implemented as the sensor 2-90 and the sensor is positioned such that when the lens holder 2-14 is centered within the base 2-80, light emitted by the LED 2-92 will pass through the slit 2-50 and will be distributed on the detector. Thus, as the lens holder 2-14 moves in a side-to-side direction, i.e., the tracking direction, various portions of the sensor 2-90 will be illuminated, indicative of the position of the lens holder 2-14 in the tracking direction. Consequently, when the lens holder 2-14 is not centered with respect to the base 2-80, a portion of the light emitted from the LED 2-92 will be blocked by the lens holder 2-14, causing an unequal distribution of light on the sensor 2-90. This unequal distribution may then be analyzed to determine the position of the lens holder 2-14 with respect to the base 2-80 by well-known circuitry and methods.

When a control signal is generated by the servo system, a given current is applied to the tracking coil 2-16 and/or the focus coils 2-18 and 2-20 depending on the direction in which the displacement of the lens holder 2-14 and objective lens 2-12 attached thereto is required. Such servo systems and feedback circuits which control the amount of current are well known in the art. As discussed above, this current interacts with the electromagnetic field produced by the permanent magnet pairs 2-22 and 2-24 to create a force which displaces the lens holder 2-14 and objective lens 2-12 attached thereto in the appropriate focusing or tracking direction.

The operation and structure of the focus and tracking mechanism will now be described in greater detail. As illustrated in Figs. 32 and 33, the permanent magnet

pairs 2-22 and 2-24, are oriented with opposite poles opposing each other. More specifically, the first pair of magnets 2-22 includes a first or top magnet 2-100 and a second or bottom magnet 2-102 in a stacked relationship joined along a planar interface, such that the north pole of the top magnet 2-100 and the south pole of the bottom magnet 2-102, as represented in Fig. 33, are positioned adjacent the lens holder 2-14. The second pair of magnets 2-24 includes a third or top magnet 2-104 and a fourth or bottom magnet 2-106 in a stacked relationship joined along a planar interface having the opposite orientation, such that the south pole of the top magnet 2-104 and the north pole of the bottom magnet 2-106, as represented in Fig. 33, are positioned adjacent the lens holder 2-14. As shown in Fig. 32, the field lines produced by this orientation originate at the north pole of each magnet pair 2-22 and 2-24, and terminate at the south pole of each magnet pair. Iron plates 2-110 (shown in phantom for clarity) may be attached to each magnet pair 2-22 and 2-24 on the sides of the permanent magnets opposite the lens holder 2-14. The iron plates 2-110 effectively "shunt" the magnetic flux emanating from the sides of the magnets 2-100, 2-102, 2-104, and 2-106 opposite the lens holder 2-14, thereby increasing the magnetic flux adjacent the lens holder and producing a corresponding increase in actuator power.

The focus forces acting on the actuator 2-10 are illustrated in more detail in Fig. 34. When a current I is applied to the focus coils 2-18 and 2-20 in the direction indicated, i.e., out of the plane of the drawing sheet adjacent the top magnets 2-100, 2-104 and into the plane of the drawing sheet adjacent the bottom magnets 2-102 and 2-106, forces F_{FOCUS1} and F_{FOCUS2} are generated which are translated to the lens holder 2-14 to accelerate or decelerate the moving mass (lens holder) and to the suspension wire pairs 2-82 and 2-84, bending the suspension wires to move the lens holder 2-14 and associated objective lens 2-12 closer to the optical disc 2-76. Because the lines of magnetic flux curve as described above, the direction of the magnetic field varies vertically in the focus coils 2-18, 2-20. For example, for the focus coil 2-18 positioned adjacent the first magnet pair 2-22, in the plane of Fig. 34 which vertically bisects the coil adjacent the top magnet 2-100, the magnetic field has a first direction at the top of the coil 2-18 given by B_1, and a second direction in the bisecting plane adjacent the bottom magnet 2-102 at the bottom of the coil 2-18 given by B_2. In accordance with the Lorentz law F = B·X·I·1, the current interacts with the magnetic field B1 to produce a first

force component F1 acting on the portion of the focus coil 2-18 adjacent the top magnet 2-100, and interacts with the magnetic field B2 to produce a second force component F2 acting on the portion of the focus coil adjacent the bottom magnet 2-102. As the magnitude of the horizontal portions of the force components F1 and F2 are equal in magnitude but opposite in direction, these horizontal force components cancel one another in accordance with the rules of vector addition to produce the resultant force F_{Focus1} which is vertically upward in the plane of Fig. 34. Similarly, the horizontal force components throughout the rest of the coil 2-18 are canceled, giving a vertical resultant force which is strictly vertically upward (i.e., is vertically upward and has effectively no horizontal component) and therefore moves the lens holder 2-14 closer to the surface of the optical disc 2-76.

As the lines of flux generated by the second magnet pair 2-24 curve oppositely of those generated by the first magnet pair 2-22, the direction of the magnetic field at any point in the focus coil 2-20 is different than the direction of the field at the corresponding point in the focus coil 2-18. Again, because the flux lines curve, the direction of the field acting on the coil 2-20 varies vertically along the coil. In the plane of Fig. 34 which vertically bisects the coil adjacent the top magnet 2-104 of the second magnet pair 2-24, the magnetic field direction is given by B_3 at the top of the coil 2-20 and a force is generated in accordance with Lorentz law in the direction F_3, while in the bisecting plane adjacent the bottom magnet 2-106, the magnetic field direction is given by B_4 at the bottom of the coil 2-20 and a force F_4 is generated. The forces add to produce a resultant force F_{Focus2}, which, as shown, is strictly vertically upward.

Thus, it can be seen that the forces F_{Focus1} and F_{Focus2}, act on the focus coils 2-18 and 2-20, respectively, to move the lens holder 2-14 upward. Conversely, if the current was applied to the focus coils 2-18 and 2-20, in the opposite direction, forces would be generated to move the lens holder 2-14 downward, or farther away from the surface of the optical disc 2-76. By moving the objective lens 2-12 closer to or farther away form the surface of the optical disc 2-76, the focus coils 2-18 and 2-20 act to precisely focus the laser beam exiting the objective lens 2-12 on the disc 2-76.

As illustrated in Fig. 35, movement of the actuator 2-10 to effect fine tracking is produced when current is generated in the tracking coil 2-16 affixed to the lens holder 2-14. In the plane of Fig. 35 which horizontally bisects the tracking coil 2-16, a magnetic

field having direction B1 acts on the cross-section of the coil 2-16 located closest to the first magnet pair 2-22 and a magnetic field having the direction B2 acts on the cross-section of the coil located closest to the second magnet pair 2-24. If, for example, a current I is applied in a counterclockwise direction around the tracking coil 2-16, a force F1 acts on the portion of the tracking coil adjacent the first magnet pair 2-22 and a force F2 acts on the portion of the tracking coil adjacent the second magnet pair 2-24. These forces add under the laws of vector addition to produce a resultant force F_{TRACK} which acts to move the lens holder 2-14 to the right in the plane of Fig. 35. When the forces act on the tracking coil 2-16 in this manner, they are translated through the lens holder 2-14 to accelerate or decelerate the moving mass (lens holder), and into the suspension wire pairs 2-82 and 2-84 which bend in the corresponding direction to move the objective lens 2-12 and precisely center the laser beam exiting therefrom within the center of a selected data track on the surface of the optical disc 2-76. Conversely, if a current I is applied in a clockwise direction around the coil 2-16, a resultant force is produced which moves the lens holder 2-14 to the left in the plane of the Fig. 35.

Thus, it can be seen that the coupling arrangement of the present invention further reduces the distance between the resultant forces acting on the coils 2-16, 2-18, and 2-20 and the optical axis of the objective lens 2-12, decreasing adverse modes of motion such as pitch, roll, and yaw during focusing and tracking operations.

With the actuator design of the present invention, only two pair of permanent magnets, i.e., four total magnets, and three coils are required to effect movement in both the tracking and focusing directions, thereby reducing both the size and weight of actuator and yielding higher decoupling frequencies. As the component count for the actuator is low, the actuator is easy to manufacture and assemble as compared to prior actuator designs having many more coils, magnets, and pole pieces. In addition, because the tracking and focus coils 2-16, 2-18, and 2-20 are coupled directly to the lens holder 2-14 and are not wound around yokes or poles, coil rigidity and resonance frequency response is significantly improved. Furthermore, direct coupling of the coils 2-16, 2-18, and 2-20, reduces the distance between the point where the effective tracking and focus forces are generated and the optical axis of the objective lens, thereby decreasing adverse motions such as pitch, roll, and yaw.

The present invention improves motor performance. Values of merit as high as 130 m/s^2 /sq. rt. (W) for the focus direction and 70 m/s ^{2}/sq. rt. (W) for the radial direction have been measured for actuators constructed in accordance with the present invention. These values are significantly higher than previously realized. As those skilled in the art will recognize, the design of the present invention also ensures that approximately 40% of the coil wire is utilized, thereby increasing the efficiency of the actuator over prior designs.

The preferred embodiment of the two-axis electromagnetic actuator 2-10 has been described with reference to the coordinate system illustrated in Fig. 26 wherein the optical disc 2-76 is positioned above the objective lens 2-12 such that focusing is effected by moving the actuator 2-10 up and down along the Z-axis and tracking movement is effected by moving the actuator in a side-to-side motion along the Y-axis. Those skilled in the art will recognize, however, that the actuator 2-10 of the present invention could also be incorporated in optical systems having different orientations than those illustrated.

Focus Sensing Apparatus

Fig. 36 is a block diagrammatic representation of a preferred embodiment of the beam focus sensing apparatus 3-10 of the present invention. The apparatus 3-10 includes an optical arrangement 3-12 for providing a servo beam S indicative of the focus of an illuminating beam I upon an optical disc 3-14. The servo beam S comprises a portion of the illuminating beam I reflected by the disc 3-14. Techniques for generating such a servo beam are well known to those skilled in the art. For example, an optical system such as the optical arrangement 3-12 for generating the servo beam S is described in U.S. Pat. No. 4,862,442, which is herein incorporated by reference. A brief summary of the operation of the optical arrangement 3-12 is set forth below.

As shown in Fig. 36, the optical arrangement 3-12 includes a laser source 3-16 which generates a linearly polarized beam B. The beam B is collimated by a collimating lens 3-18, and the collimated beam is directed by an optical beamsplitting arrangement 3-20 to an objective lens 3-24. The collimated beam is then converged by the objective lens 3-24 onto the surface of the optical disc 3-14. The optical disc may, for example, comprise a compact disc, video disc, or optical memory disc. The disc 3-14 reflects the illuminating beam focused thereon back through the objective lens 3-24 to the

beamsplitting arrangement 3-20. Those skilled in the art will appreciate that the beamsplitting arrangement 3-20 may include a first beamsplitter (not shown) to redirect a first portion of the reflected illuminating beam in order to form the servo beam S. The beamsplitting arrangement 3-20 will also generally include a second beamsplitter (not shown) to redirect a second portion of the reflected illuminating beam to create a data beam. Such a data beam carries information stored on the optical disc 3-14. The servo beam S is intercepted by an FTR prism 3-30, the design and construction of which is discussed more fully hereinafter.

As is also described more fully below, the servo beam S is divided into a transmitted beam T and a reflected beam R by the FTR prism 3-30. In the embodiment of Fig. 36, the transmitted and reflected beams T and R are of substantially equal cross section and intensity. The transmitted beam T is incident on a first quad detector 3-32, while the reflected beam R is incident on a second quad detector 3-34. Electrical signals produced by the quad detectors 3-32 and 3-34 in response to the intensity distributions of the transmitted and reflected beams T and R, are utilized by a control unit 3-37 to generate a differential focus error signal (DFES) indicative of the focus of the illuminating beam I on the disc 3-14. One preferred embodiment of the control unit 3-37 and associated method for generating the DFES is discussed hereinafter. The focus error signal may, for example, be used to control a mechanical arrangement (not shown) disposed to adjust the focus of the illuminating beam I by altering the displacement of the objective lens 3-24 relative to the disc 3-14.

Fig. 37 shows a magnified top cross-sectional view of the FTR prism 3-30. The prism 3-30 includes first and second optical members 3-35 and 3-36 which sandwich a separation layer 3-38. The optical members 3-35 and 3-36 may be formed from glass having an index of refraction larger than that of the separation layer 3-38. For example, in one preferred embodiment, the optical members 3-35 and 3-36 may be manufactured from glass having an index of refraction of 1.55, while the separation layer 3-38 is composed of a solid such as either magnesium fluoride (MgF_2) or fused silica (SiO_2) having indices of refraction of 1.38 and 1.48, respectively. The separation layer 3-38 need not consist of a solid, and may be formed from a liquid or air provided that the optical members 3-35 and 3-36 are of a larger index of refraction.

A brief description of the physics of the interaction of the light in beam S with layer 3-38 is as follows. If layer 3-38 and optical member 3-35 are not present, the well-known phenomenon of total internal reflection takes place at the hypotenuse face of optical member 3-36, sending all of beam S in the direction of beam R. However, some light energy exists behind the hypotenuse face of optical member 3-36 in the form of "evanescent waves", which do not propagate. When optical member 3-35 is brought close enough to optical member 3-36, this energy is coupled without loss into member 3-35 and propagates in the direction of beam T. This phenomenon is known as frustrated total reflection (FTR). In this condition, if the FTR prism is disposed with respect to beam S such that the incidence angle A of beam S at separation layer 3-38 is close to the region of frustrated total reflection, the transmission and reflection curves will have very steep slopes (angular sensitivities). This allows the fabrication of a very sensitive focus sensing system. Furthermore, the transmission and reflection curves for such a system based on the FTR principle will be relatively insensitive to the wavelength of the light in beam S, as compared to the curves of a multilayer structure.

The prism 3-30 may be fabricated by first depositing the separation layer on either of the optical members via conventional thin film techniques. The complementary optical member may then be affixed to the exposed surface of the separation layer with an optical glue. Although the indices of refraction of the first and second optical members 3-35 and 3-36 will generally be chosen to be identical, differing indices of refraction may also be selected. In the preferred embodiment, the first and second optical members have identical indices of refraction in such a geometry that the transmitted and reflected beams T and R are of substantially equal cross-section.

As shown in the illustrative front view of Fig. 38, the first quad detector 3-32 includes first, second, third, and fourth photodetective elements 3-40, 3-42, 3-44, and 3-46, respectively, which produce electrical signals hereinafter referred to as T1, T2, T3, and T4 in response to the intensity of the transmitted beam T impinging thereon. Similarly, the second quad detector 3-34 includes fifth, sixth, seventh, and eighth photodetective elements 3-50, 3-52, 3-54, and 3-56, respectively, which provide electrical signals hereinafter referred to as R1, R2, R3, and R4 in response to incidence of the reflected beam R. The photodetective elements may be PIN diodes, wherein the

level of the electrical output from each diode is proportional to the optical energy received thereby.

When the objective lens 3-24 of Fig. 36 is situated relative to the disc 3-14 such that the illuminating beam I is properly focused, the rays included within the servo beam S are well collimated (i.e., substantially parallel) and are therefore incident on the separation layer 3-38 at a substantially identical angle A shown in Fig. 37. Contrary to this, when the objective lens 3-24 does not focus the illuminating beam in the plane occupied by the surface of the disc 3-14, the rays comprising the servo beam S will be either mutually convergent or divergent. It follows that all rays within the servo beam S will impinge on the separation layer 3-38 at the substantially same angle when the illuminating beam I is suitably focused, while rays of a different range of angles of incidence will address the separation layer 3-38 when the beam I is out of focus. The prism 3-30 is designed such that the reflectivity and transmissivity of the separation layer 3-38 is extremely sensitive to the angle at which optical energy is incident on the separation layer 3-38. Thus, the spatial distribution in the intensity of the transmitted and reflected beams T and R will vary as the focus position of the illuminating beam I varies relative to the surface of the disc 3-14. That is, an illuminating beam I which is properly focused gives rise to a well collimated servo beam S such that all the rays thereof experience the same degree of reflection by the separation layer 3-38. Accordingly, the transmitted and reflected beams T and R will be of substantially uniform intensity when the illuminating beam I is appropriately focused. Conversely, a convergent or divergent servo beam S will engender transmitted and reflected beams T and R of nonuniform spatial intensity distributions since the rays within the servo beam S will be subject to a variety of degrees of reflection by the separation layer 3-38. By detecting these spatial variations in the intensity of the transmitted and reflected beams, the photo detectors 3-32 and 3-34 produce electrical signals which may be utilized to produce a DFES indicative of the focus position of the illuminating beam I.

The manner in which a DFES may be synthesized in response to the degree of collimation of the servo beam S may be further understood with reference to Fig. 39. Fig. 39 is a graph showing the reflectivity (intensity of beam R ÷ intensity of beam S) of the FTR prism 3-30 as a function of the angle of incidence of rays within the servo beam S relative to the separation layer 3-38. Specifically, the graph of Fig. 39 depicts the

reflectivities Rs and Rp of the prism 3-30 in response to illumination by both s-polarized and p-polarized optical energy of wavelength 0.78 microns. The reflectivity profiles of Fig. 39 pertain to a FTR prism 3-30 having a separation layer 3-38 with a thickness of 4.5 microns and an index of refraction of 1.38, with the separation layer being sandwiched by glass members having an index of refraction of 1.55. As represented in Fig. 39, the prism 3-30 is preferably positioned relative to the servo beam S at an angle of incidence A_1 such that the prism 3-30 is operative about a working point P. That is, at the working point P, the prism 3-30 is positioned such that an illuminating beam I properly focused on the disc 3-14 engenders a well collimated servo beam S having rays which impinge on the separation layer 3-38 at the angle A_1. Since the reflectivity of the prism 3-30 is approximately 0.5 at the operating point P, the transmitted and reflected beams produced by the optical arrangement 3-12 including the prism 3-30 are of substantially identical average intensity.

When the separation between the objective lens 3-24 and the disc 3-14 varies such that the servo beam S decollimates in either a convergent or divergent manner, a first portion thereof will impinge on the separation layer 3-38 at an angle of incidence larger than the angle A_1. For example, at an angle of incidence of A2, Fig. 39, a corresponding portion of the servo beam will experience a reflectivity of approximately 0.7. Since the first servo beam portion is subject to a reflectivity of only 0.5 when the servo beam S is well collimated, the regions of the detectors 3-32 and 3-34 which receive the parts of the reflected and transmitted beams R and T derived from the first servo beam portion will collect more and less optical energy, respectively, than when the illumination beam I is properly focused. Similarly, the areas of the detectors 3-32 and 3-34 in optical alignment with parts of the transmitted and reflected beams T and R arising from a second portion of the servo beam S incident on the separation layer 3-38 at an angle of incidence A_3, which is smaller than the angle A_1, will be illuminated by more and less optical energy, respectively, than in a condition of proper focus. The DFES is produced in response to electrical signals engendered by the photodetectors 3-32 and 3-34 indicative of this spatial nonuniformity in the intensity distribution of the transmitted and reflected beams T and R. Moreover, since in the preferred embodiments described herein, the prism 3-30 is optically nonabsorbing, variation in the intensity of the transmitted beam T arising from a change in the angle of incidence of

a portion of the servo beam S is mirrored by an equal, oppositely directed variation in the magnitude of the part of the reflected beam R engendered by the identical servo beam portion. Non-differential error signals may be generated independently from either the transmitted or reflected beam, using the equations:

(1) FES (transmitted) = (T1+T2)-(T3+T4)

(2) FES (reflected) = (R1+R2)-(R3+R4)

In the differential system, the differential focus error signal (DFES) is generated by the control unit 3-37 in accordance with the following expression:

(3) DFES = (R1+R2+T3+T4)-(T1+T2+R3+R4)

The control unit 3-37 includes circuitry suitable for carrying out the arithmetic operations of equation (3) and for generating a DFES based on these operations. Preamplifiers (not shown) are included to amplify the electrical signals from the photodetectors 3-32 and 3-34 prior to processing by the control unit 3-37.

Utilizing the dual quad photodetector arrangement described herein leads to the synthesis of differential focus error signals having a reduced sensitivity to certain beam imperfections not induced by inaccuracies in the focus position of the illuminating beam relative to the disc 3-14. Since a localized decrease in the intensity of the servo beam S unrelated to the focus position of the illuminating beam affects the detectors 3-32 and 3-34 in a substantially similar manner, such a decrease does not affect the value of the DFES due to the corresponding cancellation which occurs in equation (3).

As mentioned above in the Background of the Invention, prior focusing systems were generally ill-equipped to implement the differential focus sensing scheme described by equation (3). In particular, a feature of the present invention lies in the ability of the FTR prism 3-30 to provide transmitted and reflected beams of substantially similar cross section and intensity such that both may effectively contribute to the synthesis of a DFES.

In addition to providing a DFES for maintaining the focus of the illuminating beam I in the direction normal to the surface of the disc 3-14, the electrical outputs from the photodetectors 3-32 and 3-34 may also be used by the control unit 3-37 to generate a tracking error signal (TES). The TES is indicative of the radial position of the illuminating beam I relative to the conventional spiral or concentric guiding tracks (not shown) imprinted on the surface of the disc 3-14. The TES enables the beam I to follow

the guiding tracks despite eccentricities therein by controlling a mechanical arrangement (not shown) operative to adjust the radial position of the objective lens 3-24 relative to the disc 3-14. The TES is calculated by the control unit 3-37 on the basis of electrical outputs from the photodetectors 3-32 and 3-34 in accordance with the following equation:

$$(4) \quad TES = (T1+T3+R3+R1)-(T2+T4+R2+R4)$$

Again, the manner in which a tracking error signal may be derived from the relationship existing between spatial intensity changes of the servo beam and the tracking position of the illuminating beam is disclosed in, for example, U.S. Pat. No. 4,707,648.

In perhaps the majority of systems operative to control the focus of an illuminating beam relative to an optical disc, it will be desired to generate both tracking and focus error signals in response to the electrical outputs of the photodetective elements. Since generation of both the focus and tracking error signals is known to generally require at least one quad photodetector, the embodiments of the present invention disclosed herein have been described with reference to quad photodetectors. It is also known, however, that a focus error signal may be derived on the basis of electrical signals produced by photodetectors having only two independent photosensitive regions (bicell detectors). Accordingly, in applications requiring only the generation of a focus error signal, a single photodetective element could be substituted for the first and second elements 3-40 and 3-42 of the photodetector 3-32, and a single photodetective element could replace the third and fourth elements 3-44 and 3-46. Similarly, a single photodetective element could be used in lieu of the fifth and sixth elements 3-50 and 3-52 of the photodetector 3-34; and a single element could be substituted for the seventh and eighth elements 3-54 and 3-56.

The slope of the reflectivity profile of Fig. 39 about the working point P is proportional to the sensitivity of the DFES generated by the apparatus 3-10. Specifically, the sensitivity of the apparatus 3-10 to changes in the focus of the illuminating beam I is augmented by increases in the slope of the reflectivity profile. Accordingly, it is an object of the present invention to provide a prism 3-30 characterized by a reflectivity profile which is as steep as practically possible.

The shape of the reflectivity profile of Fig. 39 about the working point P may be altered by adjusting the thickness of the separation layer 3-38. For example, increasing

the thickness of the separation layer 3-38 translates the angle of minimum reflectivity A_m towards the critical angle A_c, see Fig. 39, without affecting the value of the latter. It follows that increasing the separation layer thickness serves to increase the slope of the reflectivity profile in the vicinity of the working point P. Similarly, reducing the thickness of the separation layer 3-38 enlarges the angular displacement between the critical angle A_c and the angle of minimum reflectivity A_m. The shape of the reflectivity profile of the prism 3-30 may be varied in order to adjust the sensitivity of the DFES. A reasonable slope can be obtained, for example, by use of a separation layer having a thickness that is greater than one half the wavelength of the illuminating beam I.

The value of the critical angle A_c may be adjusted by varying the index of refraction of the separation layer 3-38 relative to that of the glass members 3-35 and 3-36. Thus, adjustment of the separation layer thickness in conjunction with manipulation of the indices of refraction of the separation layer and surrounding glass members allows the prism 3-30 to be fabricated in accordance with a desired reflectivity profile.

Fig. 40 is a graph of the value of a normalized DFES (NDFES) generated by the apparatus 3-10 as a function of the deviation from the desired displacement of the objective lens 3-24 relative to the disc 3-14.

Again, the data in Fig. 40 was obtained by utilizing a prism 3-30 having a separation layer of index of refraction 1.38 and thickness 4.5 microns sandwiched between glass members of index of refraction 1.55, with the prism 3-30 being illuminated by a servo beam of wavelength 0.78 microns. As is shown in Fig. 40, the value of the DFES is preferably zero when the desired displacement exists between the objective lens 3-24 and the disc 3-14. The sign (+ or -) of the DFES is thus indicative of whether the displacement between the objective lens and disc surface exceeds or is less than that required for proper focusing. As mentioned above, the DFES may be used to control a mechanical arrangement (not shown) disposed to adjust the separation between the objective lens 3-24 and the disc 3-14. It may be appreciated that the slope of the NDFES is approximately 0.16 micron^{-1} at the working point defined by 0 (zero) disc displacement.

Although the servo beam S has been represented herein to be substantially collimated when incident on the separation layer 3-38, the present invention is not limited to configurations giving rise to collimated servo beams. When a convergent or

divergent servo beam is utilized, inaccuracies in the focus position of the illuminating beam will alter the degree of convergence or divergence thereof. Those skilled in the art will appreciate that the focus sensing apparatus of the present invention may be utilized to generate a DFES in response to such changes in convergence or divergence.

The inventive focus sensing apparatus has thus been shown to overcome the disadvantages inherent in other focus detection systems by providing reflected and transmitted beams of substantially similar shape and intensity from which a high precision, altitude insensitive focus error signal may be differentially derived. The focus sensing technique disclosed herein nonetheless retains features present in certain related focus detection systems such as low sensitivity to mechanical vibration, decreased sensitivity to disc tilt, and increased thermal stability.

Seek Actuator

Fig. 41 schematically illustrates the operation of an exemplary optical read/write system 4-50 in reading data from a precise location 4-52 on an information storage medium, such as an optical disc 4-54. While the system 4-50 illustrated is a write-once or WORM system, those skilled in the art will recognize that the carriage and actuator assembly of the present invention could also be used in magneto-optical erasable system. Information is transmitted to and read from the disc 4-54 utilizing a light beam 4-56 produced by a light source 4-58 which passes through a plurality of components including a cube-shaped beamsplitter 4-60 which separates the light beam 4-56 according to its polarization, a quarter wave plate 4-62 which changes the polarization of the light beam 4-56, a collimator lens 4-64, and an objective lens 4-66, which, in combination, direct the light beam 4-56 toward the desired location 4-52 on the disc 4-54.

In operation, the light source 4-58, typically a laser diode, emits the light beam 4-56 toward the convex collimator lens 4-64. The collimator lens 4-64 converts this source beam 4-56 into a parallel, linearly S polarized light beam 4-70 and conducts the beam 4-70 toward the beamsplitter 4-60. This cube-shaped beamsplitter 4-60 is formed by attaching two right angle prisms 4-72 and 4-74 along their respective hypotenuses and includes a polarization sensitive coating forming a beamsplitting interface 4-76 between the two hypotenuses. The beamsplitter 4-60 separates and/or combines light beams of differing polarization states, namely linear S polarization and linear P

polarization. Separation is accomplished in conjunction with the polarization sensitive coating which transmits linearly P polarized light beams and reflects linearly polarized S light beams. Light exiting the beamsplitter 4-60 passes through the quarter wave plate 4-62 which converts the linearly polarized light beam 4-70 to a circularly polarized light beam 4-78. Upon exiting the quarter wave plate 4-62, the circularly polarized beam 4-78 enters an actuator 4-80.

The actuator 4-80 includes a mirror 4-82 which orthogonally reflects the light beam 4-78 upward toward the objective lens 4-66. This objective lens 4-66 converges the circularly polarized beam 4-78 to the precise focal point 4-52 on the surface of the optical disc 4-54. Upon striking the disc 4-54, the circularly polarized light beam 4-78 is altered by the information stored on the disc 4-54 and is reflected as a divergent circularly polarized light beam 4-84 carrying information identical to that encoded on the disc 4-54. This reflected circularly polarized light beam 4-84 re-enters the objective lens 4-66 where it is collimated. The light beam 4-84 is again reflected from the mirror 4-82 and re-enters the quarter wave plate 4-62. Upon exiting the quarter wave plate 4-62, the circularly polarized beam 4-84 is converted to a linearly P polarized light beam 4-86. As linearly P polarized light beams are transmitted through the beamsplitter 4-60 without reflection at the splitting interface, this light beam 4-86 continues to a photodetector 4-88, which detects the data stored on the disc 4-54. In addition, if the light beam 4-86 falling on the photodetector 4-88 is out of focus or misaligned, the amount of misalignment or defocusing is measured electronically and used as feedback for a servo system (not shown) which properly realigns the objective lens 4-66.

Fig. 42 illustrates an electromagnetic carriage and actuator assembly 4-100 constructed in accordance with the present invention. The assembly can be used with an optics module 4-102 to read and write data onto the surface of an optical disc as described above in connection with Fig. 41, wherein the light source 4-58, detector 4-88, collimating lens 4-64, quarter wave plate 4-62, and beamsplitter 4-60 are all incorporated within the module 4-102. A spindle motor 4-104 is located adjacent the assembly 4-100 and rotates an optical disc (not shown) about an axis of rotation A above the assembly 4-100. The assembly 4-100 includes a carriage 4-106 having first and second bearing surfaces 4-108 and 4-110 slidably mounted on first and second guide rails 4-112 and 4-114, respectively, and an actuator 4-116 which is mounted on the carriage

4-106. As will be appreciated, the rails 4-112 and 4-114 provide a frame along which the carriage moves. A beam of light 4-120 emitted from the light source 4-58 in the optics module 4-102 enters the actuator 4-116 through a circular aperture 4-118 and is reflected by a mirror contained inside the actuator through an objective lens 4-122 defining an optical axis O to the surface of the disc. As readily understood, the axis of rotation A of the disc is parallel to the optical axis O of the objective lens 4-122.

The carriage 4-106 and actuator 4-116 carried thereon are moved horizontally along the rails 4-112 and 4-114 in a tracking direction by a coarse tracking motor to access various information tracks on the surface of the disc. The tracking motor includes two permanent magnets 4-130 and 4-132 wherein each magnet is attached to a C-shaped outer pole piece 4-134 and 4-136, respectively. Two inner pole pieces 4-138 and 4-140 are positioned across the ends of the outer pole pieces 4-134 and 4-136 so as to form a rectangular box around the permanent magnets 4-130 and 4-132. Two coarse coils 4-142 and 4-144 of equal length are affixed to vertical plates 4-174 and 4-176, Fig. 43, and surround the inner pole pieces 4-138 and 4-140 with sufficient clearance to move over the pole pieces 4-138 and 4-140 when the carriage 4-106 is moved in the tracking direction. In this embodiment, these coarse coils 4-142 and 4-144 are the only portion of the course tracking motor that are movable. As will be described in more detail below, the actuator 4-116 can also move the objective lens 4-122 closer to or farther away from the disc, thereby focusing the exiting light beam 4-120 upon the desired location on the surface of the disc.

Fig. 43 is an exploded view illustrating the carriage 4-106 and actuator 4-116 in greater detail. The carriage 4-106 includes a generally rectangular base 4-150 to which the actuator 4-116 is attached. The base 4-150 has a substantially flat top surface 4-152 having a generally rectangular chamber 4-154 formed therein. The first bearing surface 4-108 is cylindrical in shape, while the second bearing surface 4-110 consists of two elliptical bearing sections 4-160 and 4-162 of approximately equal length which meet inside the base 4-150. The spacing of the rails 4-112 and 4-114 relative to the optical axis O is selected such that each bearing surface 4-108 and 4-110 is subjected to the same amount of preload. The bearing surfaces 4-108 and 4-110 are further designed such that both surfaces have substantially the same amount of surface area contacting the rails 4-112 and 4-114. The length of the bearing sections comprising the

second bearing surface is approximately equal to the length of the first bearing surface, although minor variations in length may be necessary to account for wear.

Two vertical walls 4-156 and 4-158 extend upwardly from the top surface 4-152 of the base 4-150 adjacent the ends of the chamber 4-154. The base 4-150 further includes two platform regions 4-164 and 4-166 formed at the ends of the base 4-150 above the bearing surfaces 4-108 and 4-110. A step 4-168 joins the top surface 4-152 of the base 4-150 with the second platform region 4-166. A first U-shaped notch 4-170 is formed in the first platform region 4-164, and a second U-shaped notch 4-172 is formed in the second platform region 4-166 and step 4-168.

The coarse coils 4-142 and 4-144 are attached to the two vertical plates 4-174 and 4-176, respectively. The plates 4-174 and 4-176 are, respectively, positioned in notches 4-180 and 4-182 formed in the ends of the base 4-150. The base 4-150 further includes a mass balancing plate 4-184 which is attached to a bottom surface 4-186 of the base 4-150 via a screw 4-188, and a mass balancing projection 4-190 which extends outwardly from the base 4-150 adjacent the first coarse coil 4-142. A circular aperture 4-192 is formed in a front side 4-194 of the base 4-150 and receives the light beam 4-120 emitted from the optics module 4-102 of Fig. 42. A bracket 4-196 having a circular aperture 4-198 therein is positioned between the second vertical wall 4-158 and the first platform region 4-164 along the front side 4-194 of the base 4-150. The bracket 4-196 additionally includes a notch 4-200 which receives a photodetector 4-202 such that the photodetector 4-202 is positioned between the bracket 4-196 and the first platform region 4-164.

The actuator 4-116, often referred to as a "2-D" actuator for 2 degrees of motion, i.e. focusing and tracking, is mounted on the base 4-150 between the vertical walls 4-156 and 4-158 and the platform regions 4-164 and 4-166. A prism (not shown) is positioned within the chamber 4-154 in the base 4-150 to deflect the light beam 4-120 emitted from the optics module 4-102 such that the beam 4-120 exits the actuator 4-116 through the objective lens 4-122. The objective lens 4-122 is positioned within a lens holder 4-210 attached to a focus and fine tracking motor which moves the lens 4-122 so as to precisely align and focus the exiting beam 4-120 upon a desired location on the surface of the optical disc. The objective lens 4-122 defines the optical axis O which extends vertically through the center of the lens.

The components of the actuator 4-116 are best seen in Fig. 44. The lens holder 4-210 is generally rectangular in shape and includes a generally rectangular opening 4-212 formed therethrough. A top surface 4-214 of the lens holder 4-210 includes a circular collar 4-216 positioned between two shoulders 4-218 and 4-220. A circular aperture 4-222 having a diameter substantially equal to that of the collar 4-216 is formed in a bottom surface 4-224 of the lens holder. A rectangular focus coil 4-230 is positioned within the rectangular opening 4-212 in the lens holder 4-210. Two oval-shaped, fine tracking coils 4-232 and 4-234, are positioned at the corners of a first end 4-240 of the focus coil 4-230, and two more identical tracking coils 4-236 and 4-238 are positioned at the corners of a second end 4-242 of the focus coil 4-230. A first pair of U-shaped pole pieces 4-244 is positioned to surround the first end 4-240 of the focus coil 4-230 and tracking coils 4-232 and 4-234 attached thereto, while a second pair of U-shaped pole pieces 4-246 surrounds the second end 4-242 of the focus coil 4-230 and tracking coils 4-236 and 4-238 attached thereto. In addition, two permanent magnets 4-250 and 4-252 are positioned between the respective pole piece pairs 4-244 and 4-246, adjacent the respective tracking coils 4-232, 4-234, and 4-236, 4-238.

Two top flexure arms 4-260 and 4-262 are attached to the top surface 4-214 of the lens holder 4-210 while two additional bottom flexure arms 4-264 and 4-266 are attached to a bottom surface of the lens holder 4-210. Each flexure arm preferably consists of a thin sheet of etched or stamped metal (typically steel or beryllium copper) with a thickness in the order of 25 micrometers to 75 micrometers. For simplicity, only the flexure arm 4-260 will be described. It should be noted, however, that the remaining flexure arms 4-262, 4-264, and 4-266 are of identical structure. The flexure arm 4-260 includes a first vertical section 4-270 attached to first, second, and third horizontal sections 4-272, 4-274, and 4-276. The third horizontal section 4-276 is further attached to a perpendicular crossbar 4-280. The first horizontal section 4-272 includes a shoulder 4-278 which attaches to the corresponding shoulder 4-218 on the lens holder 4-210. In a similar manner, the shoulder of the second top flexure arm 4-262 attaches to the corresponding shoulder 4-220, while the shoulders of the bottom flexure arms 4-264 and 4-266 attach to the corresponding structures on the bottom surface of the lens holder 4-210.

The flexures 4-260, 4-262, 4-264, and 4-266 are further attached to a support member 4-290. The support member 4-290 includes a central notch 4-292 which receives the second pair of pole pieces 4-246. A ledge 4-294 is formed on each side of the notch 4-292 on the top and bottom surfaces of the support member 4-290. The crossbar sections 4-280 of the flexure arms 4-260 and 4-262 are attached to these ledges 4-294, while flexure arms 4-264 and 4-266 are connected to corresponding ledges on the bottom of the support member 4-290 so as to cooperatively suspend the lens holder 4-210 from the support member 4-290. The support member 4-290 further includes an aperture 4-296 for receiving a light emitting diode 4-300. The diode 4-300 is in alignment with the aperture 4-198 in the bracket 4-196, Fig. 43, and photodetector 4-202 positioned within the notch 4-200 in the bracket, such that when the light emitting diode 4-300 is energized, substantially collimated light is emitted through the aperture 4-198 in the bracket 4-196 and is incident upon the photodetector 4-202. Depending on the position of the lens holder 4-210 with respect to the support member 4-290, light emitted by the diode 4-300 will fall onto various portions of the detector 4-202. By analyzing the amount of light incident upon the detector 4-202, a position correction signal can be generated to determine the amount of displacement required for precise focusing and tracking at the desired location on the surface of the disc.

In the illustrated embodiment, the fine motor mass consists of the lens holder 4-210, the objective lens 4-122, the focus coil 4-230, and the fine tracking coils 4-232, 4-234, 4-236, and 4-238. The carriage mass consists of the base 4-150, course tracking coils 4-142 and 4-144, the bracket 4-196, and photodetector 4-202, the support member 4-290, the vertical plates 4-174 and 4-176, the mass balancing plate 4-184 and screw 4-188, the permanent magnets 4-250 and 4-252, the pole pieces 4-244 and 4-246, and the bearing surfaces 4-108 and 4-110.

With reference to the above description in connection with Figs. 43 and 44, the coarse tracking coils 4-142 and 4-144 have equal dimensions and are symmetric about optical axis O of the objective lens. Further, the tracking coil pairs 4-232, 4-234 and 4-236, 4-238 have equal dimensions and are symmetric about optical axis O of the lens 4-122. The dimensions of the mass balance plate 4-184 and mass balance projection 4-190 are advantageously selected to compensate for the mass of the support member 4-290, flexures 4-260, 4-262, 4-264, 4-266, bearing surfaces 4-108, 4-110, bracket

4-196 and photodetector 4-202, such that the center of mass of the carriage and the center of mass of the fine and focus drives (consisting of the pole pieces 4-244, 4-246, the permanent magnets 4-250, 4-252, the focus coil 4-230, and tracking coils 4-232, 4-234, 4-236, 4-238) are generally intersected by the optical axis O of the lens 4-122. As will be described in more detail below, alignment of these centers of gravity with the optical axis O of the lens 4-122, and the symmetry of the motor forces and reaction forces acting on the carriage 4-106 and actuator 4-116 ensure that undesirable modes of motion which adversely affect position of the objective lens 4-122 are minimized.

Referring to Fig. 45, the permanent magnets 4-130, 4-132 adjacent the coarse tracking coils 4-142, 4-144 generate a magnetic field B whose lines of flux extend inwardly toward the coarse coils 4-142 and 4-144. When coarse tracking movement is required to position the objective lens 4-122 beneath a selected track on the optical disc, current is applied to the coarse tracking coils 4-142, 4-144. The current interacts with the magnetic field B to produce forces which move the carriage 4-106 in the tracking direction. The forces are generated according to the Lorentz law $F = B \cdot X \cdot I \cdot 1$, wherein, as stated above, F represents the force acting on the focus coil, B represents the magnetic flux density of the magnetic field between the two permanent magnets, I represents the current through the focus coil, and 1 represents the length of the coil. For example, when the current I applied to the first coarse tracking coil 4-142 travels through the portion of the coil positioned within the magnetic field B in the direction into the plane of Fig. 45, a force $F_{Coarse1}$ in the direction of the arrow 4-320 is produced. Similarly, when current I travels through the portions of the second tracking coil 4-144 positioned within the magnetic field B in the direction out of the plane of Fig. 45, a force $F_{Coarse2}$ in the direction of the arrow 4-322 is produced. The forces $F_{Coarse1}$ and $F_{Coarse2}$ act to move the carriage 4-106 horizontally to the left.

Conversely, Fig. 46 shows that if the direction of the current I within the portions of the tracking coils 4-142, 4-144 within the magnetic field B is reversed, forces $F_{Coarse1}'$, and $F_{Coarse2}'$, are produced which act to move the carriage into the plane of the drawing sheet of Fig. 46 (to the right in Fig. 45). The amount of movement in the tracking direction depends on the amount of current applied to the coarse coils 4-142 and 4-144. In this manner, the carriage 4-106 is moved to position the objective lens 4-122 such

that the laser beam 4-120 exiting the lens 4-122 is focused within a desired information track on the surface of the optical disc.

When a control signal is generated by the optics module 4-102, a given current is applied to either the fine tracking coils 4-232, 4-234, 4-236, and 4-238, or the focus coil 4-230 depending on the direction in which the displacement of the lens holder 4-210 and objective lens 4-122 attached thereto is required. Such servo system and feedback circuits which control the amount of current are well known in the art. This current interacts with the electromagnetic field produced by the permanent magnets 4-250 and 4-252 to create a force which displaces the lens holder 4-210 and the objective lens 4-122 attached thereto in the appropriate tracking or focusing direction. For example, if re-positioning is desired in the focus direction, according to a focus error signal, this signal is transmitted to a servo amplifier (not shown), which generates a current through the focus coil 4-230. As described above, a force is generated according to the Lorentz law $F = B \cdot X \cdot I \cdot 1$.

With reference now to Fig. 47, the permanent magnets 4-250 and 4-252 of the 2-D actuator 4-116 are oriented such that the south poles of each magnet 4-250, 4-252 face the lens holder 4-210. In this configuration, a magnetic field B is formed whose lines of flux originate at the magnets 4-250, 4-252 and are directed inwardly toward the lens holder 4-210 as shown. When a current I is applied to the focus coil 4-230 and travels through the portions of the coil 4-230 positioned within the magnetic field B in the direction shown, an upward force F_{Focus} is generated at each section of the focus coil 4-230 which is translated to the flexure arms 4-260, 4-262, 4-264, and 4-266, bending the flexure arms to move the lens holder 4-210 and associated objective lens 4-122 closer to the optical disc. Conversely, when the current I is run through the coil sections in the opposite directions as those illustrated, a downward force is generated which acts on the flexures to move the lens holder 4-210 and objective lens 4-122 farther away from the surface of the optical disc. The magnitude of the displacement is dependent upon the amount of current applied to the focus coil 4-230. By moving the objective lens 4-122 closer to or farther away from the surface of the optical disc, the focus coil 4-230 acts to precisely focus the laser beam 4-120 exiting the objective lens 4-122 within the desired information track on the disc.

As shown in Fig. 48, movement of the actuator 4-116 to effect fine tracking is produced when current is generated in the four fine tracking coils 4-232, 4-234, 4-236, and 4-238 affixed to the focus coil 4-230. When current is applied to the tracking coils in the directions shown through the portions of the tracking coils positioned within the magnetic field B, forces F_{Track} are produced which move the lens holder 4-210 to the right. When the forces F_{Track} act on the tracking coils 4-232, 4-234, 4-236, and 4-238, they are translated through the focus coil 4-230 and lens holder 4-210 to the flexures 4-260, 4-262, 4-264, and 4-268 which bend in the corresponding direction, and the objective lens 4-122 is moved in the direction of the forces, to the right in Fig. 48. When current travels through the tracking coils 4-232, 4-234, 4-236, and 4-238 in the opposite direction, a force is generated which acts to move the lens holder 4-210 to the left. The amount of current applied to the fine tracking coils 4-232, 4-234, 4-236, and 4-238 is relatively small in comparison with the amount applied to the coarse tracking coils 4-242, 4-244, and the dimensions of the fine tracking coils much smaller than the coarse coils to increase resonance frequencies and thus enable higher servo bandwidths which can then control to tighter track errors.

Figs. 49A-56B are schematic diagrams of the actuator and carriage assembly 4-100 which illustrate the symmetry and balancing of forces achieved with the design of the present invention.

Fig. 49A is a schematic diagram illustrating the symmetry of coarse or carriage motor forces acting on the actuator 4-116 in the horizonal plane. When current is applied to the coarse tracking coils 4-142 and 4-144 as described above, forces $F_{Coarse1}$ and $F_{Coarse2}$ are produced which are centered within the portion of the coarse coils 4-142, 4-144 located adjacent the permanent magnets 4-130 and 4-132, respectively. The dimensions of the first coarse coil 4-142 are selected to equal the dimensions of the second coarse coil 4-144, and the current applied to each coil is the same, such that the forces $F_{Coarse1}$ and $F_{Coarse2}$ acting on the coils are equal. Further, the coarse coils 4-142 and 4-144 are positioned at equal distances L_{C1} and L_{C2} from the objective lens 4-122 such that the resulting moments about the optical axis O of the objective lens 4-122 are equal, and the carriage yaw is minimized. In Fig. 49B, the centers of the coarse motor forces $F_{Coarse1}$ and $F_{Coarse2}$ are illustrated in the vertical plane. Because the forces $F_{Coarse1}$ and $F_{Coarse2}$ are vertically aligned with the center of mass of the carriage CM_C (i.e., are

generally intersected by a line orthogonal to the radial direction and the optical axis O containing the center of mass of the carriage CM_C), the moments about the horizontal axis are equal, and carriage pitch which can cause the prism to deflect the beam angle, thereby introducing track offset, is reduced.

The fine tracking motor forces in the horizontal and vertical planes are illustrated in Figs. 50A and 50B. The forces F_{Track1} and F_{Track2} produced by the energization of the fine tracking coils 4-232, 4-234, 4-236, and 4-238 within the magnetic field induced by the permanent magnets 4-250 and 4-252 are centered between the pairs of fine tracking coils 4-232, 4-234 and 4-236, 4-238, and extend horizontally in the tracking direction. The dimensions of the coils are equal and the amount of current applied to the coils is equal as well, such that the magnitude of the resulting forces F_{Track1} and F_{Track2} is equal. Additionally, the fine tracking coils 4-232, 4-234, 4-236, and 4-238 are positioned at equal distances L_T from the optical axis O of the objective lens 4-122, and thus, the moments produced about the optical axis O are equal, such that yaw of the lens holder 4-210 and lens 4-122 carried thereon about the vertical axis is decreased. As illustrated in Fig. 50B, the resultant fine tracking force F_{Track} acts on the center of mass of the fine motor mass CM_F, such that lens holder pitch is minimized.

Fig. 51A illustrates the reaction forces F_{React1} and F_{React2} resulting from the fine tracking motor which act upon the carriage 4-106 in opposition to the fine tracking motor forces F_{Track1} and F_{Track2} illustrated in Fig. 50A. These reaction forces F_{React1} and F_{React2} act on the pole pieces 4-244 and 4-246 positioned over the tracking coils 4-232, 4-234, 4-236 and 4-238 on each side of the lens holder 4-210. As described above, the magnitude of the tracking forces F_{Track1} and F_{Track2} is equal. Further, the dimensions of the pole pieces 4-244 and 4-246 are equal, such that the reaction forces F_{React1} and F_{React2} produced are equal. Because the pole pieces 4-244 and 4-246 are positioned at equal distances L_R from the optical axis O of the lens 4-122, the moments about the optical axis O are equal in magnitude, reducing rotation about the vertical axis, or yaw. Fig. 51B illustrates the resultant reaction force F_{React} in the vertical plane. As shown, the reaction force F_{React} acts at the center of mass of the fine motor mass CM_F at a distance L_{RM} above the center of mass of the carriage mass CM_C, and thus a moment will act on the carriage 4-106. Because the distance L_{RM} and the reaction forces F_{React1} and F_{React2}

are fairly small, however, this moment is relatively small and does not significantly affect carriage performance.

The resultant focus forces F_{Focus1} and F_{Focus2} acting on the actuator 4-116 are illustrated in Fig. 52A. The focus forces F_{Focus1} and F_{Focus2} are centered in the portions of the focus coil 4-230 located between the tracking coils 4-232, 4-234, 4-236 and 4-238 and pole pieces 4-244, 4-246, adjacent the permanent magnets 4-250 and 4-252. The focus coil 4-230 is wound within the opening 4-212 in the lens holder 4-210, Fig. 44, such that the same amount of current flows through each side of the coil 4-230 adjacent the magnets, thus producing equal forces F_{Focus1} and F_{Focus2} at the sides of the lens holder 4-210 which act to move the lens holder and objective lens 4-122 carried thereon in a vertical direction. The coil is positioned symmetrically within the opening 4-212 in the lens holder 4-210 such that the centers of the forces F_{Focus1} and F_{Focus2} produced are positioned equidistantly at distances L_F from the optical axis O of the objective lens 4-122. In this configuration, the moments produced about the optical axis O of the lens 4-122 are equal, reducing roll of the lens holder 4-210. Additionally, as illustrated in Fig. 52B, when viewed from the end of the carriage, the focus forces F_{Focus1} and F_{Focus2} (F_{Focus} in the drawing) are aligned with the center of mass CM_C of the carriage mass, thereby reducing pitch of the carriage 4-106.

The reaction forces F_{FR1} and F_{FR2} produced in response to the focus forces F_{Focus1} and F_{Focus2} shown in Fig. 52A are illustrated in the horizontal plane in Fig. 53A. The reaction forces F_{FR1} and F_{FR2} are equal in magnitude and opposite in direction to the focus forces F_{Focus1} and F_{Focus2} and are centered adjacent the fine motor permanent magnets 4-250 and 4-252 intermediate the pole pieces 4-244 and 4-246. As described above, the focus forces F_{Focus1} and F_{Focus2} are equal, and thus, the reaction forces F_{FR1} and F_{FR2} are equal as well. Further, the reactions forces F_{FR1} and F_{FR2} act at equal distances L_{FR} from the optical axis O of the objective lens 4-122 to further reduce pitch. Additionally, as illustrated in Fig. 53B, when viewed from the end of the carriage 4-106, the reaction forces F_{FR1} and F_{FR2} (F_{FR} in the drawing) are aligned with the center of mass CM_C of the carriage mass, thereby reducing pitch of the carriage.

Forces F_{Flex1} and F_{Flex2} generated by the flexure arms 4-260, 4-262, 4-264, and 4-266 on the lens holder 4-210 are illustrated in Fig. 54. The forces F_{Flex1} and F_{Flex2} illustrated are those acting on the upper flexure arms 4-260, 4-262. It should be

understood by those skilled in the art that identical forces act on the lower flexure arms 4-264 and 4-266, as well. The forces F_{Flex1} and F_{Flex2} acting on the upper flexure arms 4-260 and 4-262, respectively, are centered at the crossbar sections 4-280 of the flexure arms 4-260 and 4-262 where the flexure arms are attached to the support member 4-290. As previously described, when these forces F_{Flex1} and F_{Flex2} act on the flexure arms 4-260 and 4-262, the flexure arms bend in the appropriate direction to achieve fine tracking. To maintain the flexure arms 4-260 and 4-262 in their bent condition, the fine motor generates reaction forces F_{RA} and F_{RB} which are centered at the pole pieces 4-244 and 4-246 on either side of the lens holder 4-210. As shown, the flexure forces F_{Flex1} and F_{Flex2} act a distance L_{Flex} from the optical axis O of the focus lens 4-122, while the reaction forces F_{RA} and F_{RB} act distances L_{RA} and L_{RB} from the optical axis O, respectively. It will be apparent to those skilled in the art that the moments produced about the optical axis O of the lens 4-122 by the pairs of forces are not equal, since $(F_{Flex1} + F_{Flex2})$ does not equal $(F_{RA} L_{RA} + F_{RB} L_{RB})$. Since, however, these forces are effectively decoupled from the carriage except at very low frequencies (typically below around 40 hz), these forces do not affect actuator performance at most normal operating conditions.

As described above, the carriage 4-106 includes two bearing surfaces 4-108 and 4-110 which are slidably mounted on the guide rails 4-112 and 4-114 in order to position the carriage 4-106 beneath various data tracks on the optical disc. In essence, the bearings 4-108 and 4-110 act as "springs" which hold the carriage 4-106 above the rails 4-112 and 4-114. Bearing "spring" stiffness forces $F_{Bearing1}$ and $F_{Bearing2}$ are illustrated in Fig. 55A. The forces $F_{Bearing1}$ and $F_{Bearing2}$ are centered at the point of contact between the bearing surfaces 4-108 and 4-110 and the rails 4-112 and 4-114 and extend downwardly through the center of the rails. As described above, the surface contact area between the bearing surface 4-108 and rail 4-112 is approximately equal to the surface contact area between the bearing surface 4-110 and rail 4-114, and thus these stiffness forces $F_{Bearing1}$ and $F_{Bearing2}$ are substantially equal. The bearing surfaces 4-108 and 4-110 are positioned at equal distances $L_{Bearing}$ from the optical axis O of the lens 4-122 so that the moments about the optical axis O produced by these forces $F_{Bearing1}$ and $F_{Bearing2}$ are equal, minimizing carriage yaw. Referring to Fig. 55B, in the vertical

plane, the net carriage suspension force $F_{Bearing}$ acts at a point directly between the two bearings and aligned with the optical axis O.

Friction forces $F_{Friction1A}$, $F_{Friction1B}$, and $F_{Friction2}$ acting on the bearing surfaces 4-108, 4-110 and rails 4-112 and 4-114 are illustrated in Fig. 56A. As the first bearing surface 4-108 includes two sections 4-160 and 4-162, the two friction forces $F_{Friction1A}$ and $F_{Friction1B}$ are present, one associated with each bearing section 4-160 and 4-162, respectively, which are centered at the middle of the bearings along the area of contact with the rail 4-114. The second friction force $F_{Friction2}$ acts on the second bearing surface 4-108 and is centered in the middle of the bearing along its contact with the rail 4-112 as shown. Because the area of contact of the bearing sections 4-160 and 4-162 forming the first bearing surface 4-110 substantially equals the area of contact of the second bearing surface 4-108, and the amount of pre-loading and coefficient of friction is the same for both bearing surfaces, the sum of the friction forces $F_{Friction1A}$ and $F_{Friction1B}$ equals the friction force $F_{Friction2}$. The bearing surfaces 4-112 and 4-114 are located at equal distances L_F from the optical axis O of the focus lens 4-122, and the resulting moments about the optical axis of the lens are then equal as well. In the vertical plane, the forces $F_{Friction1A}$, $F_{Friction1B}$, and $F_{Friction2}$, act at the areas of contact between the rails 4-112, 4-114 and the bearing surfaces 4-108, 4-110, Fig. 56B which are advantageously designed to be horizontally aligned with the center of mass of the carriage mass CM_C, such that moments about the center of mass which can produce carriage pitch are reduced.

Figs. 57-60 illustrate the inertial forces acting on the carriage 4-106 and actuator 4-116 for both vertical and horizontal accelerations. The inertial forces acting on the fine motor and carriage in response to a vertical acceleration of the assembly are shown in Fig. 57. A first downward inertial force F_{IF}, Figs. 57 and 58A, equal to the mass of the fine motor multiplied by the acceleration acts at the center of mass of the fine motor mass CM_F. A second downward inertial force F_{IC}, Figs. 57 and 58B, acts at the center of mass of the carriage mass CM_C and is equal to the mass of the carriage multiplied by the acceleration. Figs. 58A and 58B further illustrate that the inertial forces F_{IF} and F_{IC} are horizontally aligned with the optical axis O of the objective lens 4-122.

Fig. 59A illustrates the inertial forces acting on the coarse coils 4-142, 4-144 and fine motor pole pieces 4-244, 4-246 for horizontal accelerations of the carriage and fine motor, respectively. An inertial force F_{IC1} acts at the center of upper portion of the first

coarse coil 4-142 and an inertial force F_{IC2} acts at the center of the upper portion of the second coarse coil 4-144. As described above, the coils 4-142 and 4-144 are of identical dimensions, such that the mass of the first coil 4-142 equals the mass of the second coil 4-144. The magnitude of each force F_{IC1} and F_{IC2} is equal to mass of the respective coil multiplied by the acceleration, and thus, the inertial forces acting on the coils 4-142 and 4-144 are equal. Because the coils 4-142 and 4-144 are positioned at equal distances L_C from the optical axis O of the objective lens 4-122, the resulting moments about the optical axis of the lens produced by the inertial forces F_{IC1} and F_{IC2} are equal. Similarly, because the fine motor pole pieces 4-244 and 4-246 are of equal dimensions and are located at equal distances L_P from the optical axis O, the inertial forces F_{IP1} and F_{IP2} acting on the pole pieces are equivalent, and the resulting moments about the optical axis O of the objective lens 4-122 are equal. Applying this same analysis to all other components or "subparts" of the carriage and actuator assembly, and as will be explained in more detail below, the inertial forces produced by horizontal and vertical accelerations above the resonance frequency of the flexure arms are balanced and symmetric with respect to the optical axis O. The net inertial forces of the fine motor and carriage F_{IF} and F_{IC} for acting on the assembly for horizontal accelerations thus act along a line through the center of the carriage which intersects the optical axis O as shown in Fig. 59B. The net inertial force due to the coarse motor F_{IC} is equal to the mass of the coarse motor multiplied by the acceleration, while the net inertial force due to the fine motor F_{IF} is equal to the mass of the fine motor multiplied by the acceleration.

At high frequencies, being accelerations in the tracking direction above the lens holder-flexure arm resonance frequency, approximately 40 Hz, components of the assembly 4-100 decouple and do not affect the position of the objective lens 4-122. Consequently, the inertial forces differ for accelerations above and below the flexure arm resonance frequency. The inertial forces for horizontal accelerations at these high frequencies are illustrated in Fig. 60A. At these high frequencies, the actuator 4-116 is decoupled from the carriage 4-106, such that a first inertial force F_{I1} equal to the mass of the fine motor multiplied by the acceleration acts at the center of mass of the fine motor mass CM_F, and a second inertial force F_{I2} equal to the mass of the coarse motor

multiplied by the acceleration is centered at the center of mass of the carriage mass CM_C.

Fig. 60B illustrates the inertial forces at horizontal accelerations below the flexure arm resonance frequency. At these lower frequencies, the fine motor mass and carriage mass move as a unit which has a net center of mass at CM_C'. As illustrated, this net center of mass CM_C' is located at a distance x vertically above the center of mass of the carriage mass CM_C, and thus the coarse motor forces $F_{Coarse1}$ and $F_{Coarse2}$ and the friction forces $F_{Friction1}$ and $F_{Friction2}$, are no longer aligned with the carriage mass center of mass, now shifted to CM_C'. Although this vertical shift in the carriage center of mass occurs, the symmetrical design of the assembly 4-100 ensures that the center of mass of the carriage mass CM_C does not shift in the horizontal plane, and the forces acting on the carriage remain symmetrical about the center of mass and optical axis O in spite of the vertical shift in the center of mass from CM_C to CM_C'.

Further, the symmetry of the design ensures that horizontal shifting of the center of mass CM_C does not occur when subparts or components of the carriage decouple at high frequencies. For example, at frequencies in the KHz range, the fine motor poles pieces 4-244, 4-246 and magnets 4-250, 4-252 will decouple. Due to the symmetry of the design, however, the center of mass will not shift in the horizontal plane. Because there is no shift of the center of mass CM_C in the horizontal plane, reaction forces of the focus motor will not pitch or roll the carriage at frequencies above those where subparts have come "loose". Thus, by horizontally aligning the center of mass with the optical axis O of the objective lens 4-122, the lens sits "in the eye of the storm", where its position is minimally affected by resonance, motor, and reaction forces acting on the assembly 4-100.

Figs. 61A and 61B illustrate the Bode transfer diagram of fine tracking position versus fine motor current of the actuator 4-116 of the present invention for an objective lens of 0.24 grams suspended in a fine motor having a mass of 1.9 grams. As illustrated in Fig. 61A, the actuator exhibits an almost ideal dB curve 4-310 having an approximate 40 dB/decade slope and an ideal phase shift curve 4-312, Fig. 61B. The two dB and phase shift curves are identified trace lines 4-310 and 4-312, respectively. Figs. 61C and 61D illustrate the same transfer function when the lens is off centered in the horizontal or tracking direction by 0.15 mm. Both the dB and phase shift curves, trace

lines 4-410' and 4-412', respectively, reveal a disturbance, or glitch, which occurs at approximately 3.2 kHz. The phase margin dips approximately 25 degrees, reducing loop damping and increasing settling time and overshoot. In terms of lens positioning, the horizontal shift in lens position disturbs the symmetry or balance of the fine tracking forces acting on the lens and results in a moment about the optical axis of the lens, resulting in yaw. Thus, it can be seen that the balancing of forces in the assembly 4-100 about the optical axis O of the objective lens 4-122 markedly improves tracking position.

Figs. 62A-62C illustrate the effects of asymmetrical focus forces acting on the assembly 4-100. Fig. 62A illustrates the tracking signal, illustrated as trace line 4-320, while crossing tracks for a track pitch of 1.5 μm, wherein each sine wave corresponds to an information track on the surface of the optical disc. In Fig. 62B, the focus force is centered with the center of mass of the fine motor CM_F and the optical axis O. The top trace 4-322 shows the current applied to the focus coil during the step, while the bottom trace 4-324 shows the tracking error signal while following a particular track, for a focus current of 0.1 Amp, and a focus acceleration of 0.75 m/s^2. As illustrated, the tracking error signal remains virtually unaffected by the focus current level. Fig. 62C shows the effect on the current and tracking error signals as in Fig. 62B when the focus force is shifted out of alignment with the optical axis O and center of mass CM_F by approximately 0.2 mm. The corresponding curves are identified as trace lines 4-422' and 4-424', respectively. The tracking signal is now visibly affected by the focus current. With the same focus current and acceleration, a tracking offset of 0.022 m. results. Typically, the total allowable track offset in an optical drive is in the range of 0.05 μm to 0.1 μm, and thus, by aligning the forces as in Fig. 62B, the tracking offset is significantly reduced.

An alternative embodiment of a carriage and actuator assembly 4-400 in which the center of mass of a 2-D actuator coincides with the center of mass of the carriage mass is illustrated in Fig. 63. In addition to being substantially symmetrical about the optical axis of an objective lens, the center of mass of the fine motor mass coincides with the center of mass of the carriage mass and is aligned with the optical axis. The carriage and actuator assembly 4-100 of the first embodiment is adequate for most frequency ranges. The assembly 4-400 of the present alternative embodiment, however, may be

used in applications where it is desirable to avoid the shift in the center of mass of the carriage mass at frequencies below the flexure arm resonance frequency.

The assembly 4-400 includes a carriage 4-406 having first and second bearing surfaces 4-408 and 4-410 substantially identical to those in assembly 4-100 which can be slidably mounted on guide rails (not shown), and a 2-D actuator 4-416 which is mounted within the carriage 4-406. The carriage 4-406 includes a pair of coarse tracking coils 4-412 and 4-414 positioned within respective notches 4-417 and 4-418 formed in the carriage 4-406, adjacent the bearing surfaces 4-408 and 4-410, which act to move the carriage 4-406 horizontally in a tracking direction, Fig. 65, to access various information tracks on the surface of an optical disc.

The actuator 4-416 includes a lens holder 4-420 having an objective lens 4-422 mounted thereon. A pair of ledges 4-424 formed on the top surface of the carriage 4-406 support a pair of top flexure arms 4-426 which are further attached to the top surfaces of a pair of projections 4-428 formed on the lens holder 4-420. A pair of bottom flexure arms 4-429 which are identical in structure to the top flexure arms 4-426 are supported by corresponding ledges in the bottom of the carriage (not shown), and attach to corresponding bottom surfaces of the projections 4-428 on the lens holder 4-420. A beam of light 4-430 enters the actuator 4-416 through a oval aperture 4-432 and is reflected by a mirror (not shown) contained inside the actuator 4-416 through the objective lens 4-422 along an optical axis O'. The actuator 4-416 is further attached to a focus and fine tracking motor which moves the lens 4-422 so as to precisely align and focus the exiting beam upon a desired location on the surface of the optical disc. The focus and fine tracking motor includes two permanent 4-440 and 4-442 magnets affixed to opposing ends of the lens holder 4-420. An oval-shaped fine tracking coil 4-444 is affixed to each permanent magnet 4-440 and 4-442, adjacent the carriage bearing surfaces 4-408 and 4-410. A focus coil 4-448 is attached to the top and bottom surfaces of the carriage 4-406 and supported by ledges formed within the interior of the carriage such that the lens holder 4-420 is positioned between the focus coils 4-448.

Coarse tracking movement of the carriage 4-406 and actuator 4-416 is effected in a manner identical to that of the assembly 4-100 illustrated in Figs. 46 and 47. When a current is applied to the coarse tracking coils 4-412 and 4-414 in the presence of a magnetic field, a force is generated according to Lorentz law which acts to move the

carriage 4-406 and actuator 4-416 in a tracking directions, Fig. 65, so as to position the objective lens 4-422 beneath various information tracks on the optical disc.

Fig. 64 illustrates the operation of the actuator 4-416 to move the lens holder 4-420 and objective lens 4-422 carried thereon in a focusing direction. When a current is generated in the focus coils 4-448, an electromagnetic field 4-450 is induced in each of the coils. The electromagnetic field 4-450 differs in direction for the respective focusing coils as shown. In the example shown, both permanent magnets 4-440 and 4-442 will be attracted by the bottom focus coil 4-448 (not shown) and repelled by the top focus coil 4-448, thus moving the objective lens holder 4-420 toward the bottom focus coil 4-448 and away from the top focus coil 4-448 to position the objective lens 4-422 further away from the surface of the optical disc, wherein the magnitude of the displacement depends on the strength of the induced electromagnetic field.

In a similar manner, Fig. 65 illustrates the permanent magnets 4-440 and 4-442 interacting with the fine tracking coils 4-444. Energization of the tracking coils 4-444 moves the lens holder 4-420 horizontally in the tracking direction to the right or to the left depending upon the direction of current through the coils. For example, in the presence of the magnetic field 4-460 illustrated, the lens holder 4-420 and objective lens 4-422 are moved towards the left. In this manner, the fine tracking coils 4-444 act to more precisely position the light beam exiting the objective lens 4-422 within the center of a desired information track on the optical disc.

In the following discussion, the identified forces and lengths correspond to those discussed above in conjunction with the assembly 4-100. For convenience of illustration, the prime symbol " ' " will be used to discuss corresponding values while reference will be made to Figs. 46, 49B, 50A, 51A-53A, 55A, 56A, 58A, and 58B as employed in discussing the indicated forces and lengths associated with the assembly 4-100.

As described above, the coarse tracking motor operates in a manner identical to that of the coarse tracking motor in the assembly 4-100. The coarse tracking coils 4-412 and 4-414 are of identical dimensions and are positioned at equal distances from the optical axis O' of the objective lens 4-422. Equal currents are applied to the coils such that corresponding forces $F_{Coarse1}$' and $F_{Coarse2}$', see Fig. 46 , acting on the carriage 4-406 act at equal corresponding distances L_{C1}' and L_{C2}', Fig. 49B, from the optical axis O'. In

the vertical plane, in the radial direction, these forces $F_{Coarse1}$' and $F_{Coarse2}$' are aligned with the coincident centers of gravity of the corresponding fine motor mass CM_F', Fig. 58A, and carriage mass CM_C', Fig. 58B, thereby minimizing carriage and actuator pitch. In a similar manner, the bearing surfaces 4-408 and 4-410 are positioned at equal distances from the optical axis O' such that the carriage suspension forces are also symmetric about the optical axis O'. Each force $F_{Bearing1}$' and $F_{Bearing2}$', see Fig. 55A for comparison, acts an equal distance $L_{Bearing1}$' from the optical axis O' such that the moments produced about the optical axis are equal and carriage and actuator pitch is further reduced. The surface area of the bearings which contacts the rails is designed to be substantially equal such that the friction forces acting on the carriage 4-406 are substantially equal. Since the bearing surfaces 4-408 and 4-410 are positioned equidistantly from the optical axis O', the moments acting about the optical axis are equal and carriage and actuator is minimized. The assembly is further designed such that the friction forces are vertically aligned with the center of mass of the carriage 4-406 and actuator 4-416.

The fine tracking coils 4-444 are of equal dimensions and the current applied to the coils is equal such that the fine tracking forces acting on the actuator are equal. Further, the fine tracking coils 4-444 are positioned at equal distances L_T', Fig. 50A, from the optical axis O' such that the moments produced about this axis are equal. In the vertical plane, these forces F_{Track1}' and F_{Track2}', Fig. 50A, are also aligned with the centers of gravity of the actuator 4-416 and carriage 4-406, such that pitch of the actuator 4-416 is reduced. Since the fine tracking forces acting on the assembly are equal, it follows that the reaction forces F_{React1}' and F_{React2}', Fig. 51A, produced in response to the tracking forces F_{Track1}' and F_{Track2}' are equal as well. These reaction forces act at equal distances L_R' from the optical axis and are vertically aligned with the centers of gravity, such that moments about the optical axis O' are equal and yaw is reduced.

In a similar manner, the focus coils 4-448 have substantially equal dimensions and current applied to them such that the focus coils 4-448 produce equal forces F_{Focus1}' and F_{Focus2}' acting on the actuator. In this embodiment, however, the focus coils 4-448 are located at equal distances L_F', Fig. 56A, from the coincident centers of gravity of the fine motor mass and carriage mass such that the moments about the optical axis O' are equal. Further, because the focus forces F_{Focus1}' and F_{Focus2}', Fig. 52A, are equal, the

focus reaction forces F_{FR1}' and F_{FR2}', Fig. 53A, acting on the fine motor mass are equal and act at equal distances L_{FR}', Fig. 53A, from the coincident centers of gravity of the carriage mass CM_C' and fine motor mass CM_F '. Thus, moments produced by the reaction forces about the optical axis O' are equal and actuator pitch is further minimized.

The flexure forces F_{Flex1}', F_{Flex2}', acting on the actuator and fine motor reaction forces F_{RA}', F_{RB}', produced in response to the flexure forces are effectively the same as those illustrated in Fig. 54 for the assembly 4-100. Because the flexure and reactions forces are not symmetrical about the optical axis O', the moments produced by these pairs of forces about the axis O' are not equal. These forces, however, are effectively decoupled from the carriage 4-406 except at low frequencies (typically below around 40 Hz), such that these moments do not affect actuator performance under most operating conditions.

Thus, the motor and reaction forces acting on the assembly 4-400 are symmetric about the optical axis O' and are vertically in alignment with the centers of gravity of the fine motor mass CM_F' and carriage mass CM_C'. Because the centers of gravity of the fine motor mass and carriage mass coincide, decoupling of the actuator 4-416 or any of the subparts of the assembly 4-400 will not shift the center of mass, and the forces and moments acting on the assembly 4-400 will remain balanced for virtually all horizontal and vertical accelerations.

Anamorphic, Achromatic Prism System

Fig. 66 depicts a prior art optical system 5-100 having a light source 5-102, which provides an incident light beam 5-106 depicted in dashed lines, a simple anamorphic prism 5-108, a focusing lens 5-110, and an optical medium 5-112. The light beam 5-106 enters the prism 5-108 at an incidence angle 5-114 with respect to the normal to an entrance face 5-116 of the prism. Laser light sources usually generate an elliptical beam with some astigmatism, as is well understood in the art. The anamorphic prism 5-108 provides expansion along the minor axis of the ellipse to correct for beam ellipticity. The angle of incidence 5-114 is selected to provide the desired expansion along the minor axis. The anamorphic prism 5-108 can also correct astigmatism in the incident light beam 5-106. The lens 5-110 focuses a resulting corrected beam 5-118 to form a spot 5-120 on the optical medium 5-112.

The simple prism 5-108 is adequate as long as the wavelength of the incident light beam 5-106 remains constant. In practice, however, light sources typically change wavelength due to temperature changes, power shifts, random "mode hopping" and other conditions, as is well known in the art. In magneto-optic disc systems, the laser power continually shifts between the power level required for write operations and the power level required for read operations.

The angle of refraction of light at the interface of materials is calculated with Snell's law, as is well known in the art:

$$n_1 \sin\theta_1 = n_2 \sin\theta_2$$

where:

n_1 = index of refraction of material 1;

θ_1 = angle of incidence with respect to normal;

n_2 = index of refraction of material 2; and

θ_2 = angle of refraction with respect to normal.

This relationship governs the refraction of the light beam 5-106 when it enters the prism 5-108. As seen in Fig. 66, when an incident beam 5-106 of one wavelength enters the anamorphic prism 5-108, the beam is refracted at a given angle dictated by the index of refraction of the prism 5-108 and the angle of incidence 5-114 of the light beam 5-106. The resulting light beam 5-118, corrected for ellipticity, and possibly, astigmatism of the incident beam 5-106, enters the focusing lens 5-110 and results in the focused light spot 5-120 on the optical medium 5-112. The index of refraction, however, changes with wavelength. This is referred to as chromatic dispersion. Accordingly, when the wavelength of the incident light beam 5-106 changes, the angle of refraction resulting from the interface between air and the prism 5-108 is different than the angle of refraction for the previous wavelength. Fig. 66 depicts with dotted lines, the effect of a shift in the wavelength of the incident beam 5-106. The incident light beam 5-106 refracts at a different angle and results in a light beam 5-122 which enters the focusing lens 5-110 at a different angle to result in a focused light spot 5-124 on the optical medium 5-112. As illustrated in Fig. 66, the light spot 5-124 is displaced from the light spot 5-120. This displacement, resulting from a change in wavelength in the incident light beam, is referred to herein as lateral beam shift.

The lateral beam shift may be avoided by not employing the anamorphic prism 5-108. For instance, a system may employ a circular lens to provide a circular spot on the optical medium. To form the circular spot with a lens, however, the lens only focuses a circular aperture within the elliptical light beam. This results in an inefficient use of the laser power because portions of the light beam outside the circular aperture are discarded. Accordingly, a system which does not employ the anamorphic prism for beam shaping does not benefit from the prismatic correction of ellipticity and astigmatism in the incident light beam. The beam shaping capabilities of the anamorphic prism provide efficient use of the laser power by expanding the elliptical beam into a circular beam. The efficient use of power is advantageous, particularly in optical disc systems when increased power is necessary in order to write to the disc.

Fig. 67 shows a conventional configuration for a multi-element prism system 5-130, as is well known in the art. The system depicted consists of three prism elements, prism 5-132, prism 5-134 and prism 5-136, a focusing lens 5-138, and a reflective-type optical medium 5-140. The prism system 5-130 could be designed to be achromatic by proper selection of the individual prism geometries, indexes of refraction, and dispersions for prism 5-132, prism 5-134 and, prism 5-136.

The prism system 5-130 illustrated in Fig. 67 also allows reflection of a return beam from the optical medium 5-140 to a detection system 5-144 by including a beam-splitting thin film 5-146 between the prism 5-134 and the prism 5-136.

As seen in Fig. 67, an entering light beam 5-148 passes through the prisms 5-132, 5-134, and 5-136, and is then focused by the lens 5-138 to form a spot 5-137 on the optical medium 5-140. The light beam 5-148 reflects from the optical media 5-140 back through the focusing lens 5-138 into the prism 5-136, and reflects from the thin film 5-146 as a light beam 5-150. The light beam 5-150 then enters the detection system 5-144.

If designed to be achromatic, changes in the input light beam 5-148 wavelength should not result in a lateral shift in the focused light spot 5-137 on the optical medium 5-140.

As previously explained, optical systems often benefit from more than one detector. A prism system with an air space in the light path could provide significant advantages, particularly in providing a compact, achromatic prism system capable of

reflecting portions of the incident and return beams to multiple detectors. Furthermore, by using an air space, a symmetrical correcting prism can be added to an existing anamorphic prism system. Finally, a unitary prism system with an air space would be advantageous in order to provide a stable, compact, easy to manufacture and install, prism assembly.

In order to more fully explain the design of an achromatic prism system with an air space between prisms, reference is made to Fig. 68, which depicts a two-element prism system 5-152 having a chromatic correcting prism 5-154 added to a simple anamorphic prism 5-156. The correcting prism 5-154 has an index of refraction of n_1 and the simple anamorphic prism 5-156 has an index of refraction of n_2, at a selected wavelength. The angles in the system are represented as shown in Fig. 68 as Φ, a_1, a_2, a_3, a_4, a_5, a_6, a_7, β_1, β_2, and β_{air}. The deviation angle from the incident beam to the exit beam is referenced as α, where

$$\alpha = \beta_1 + \beta_{air} - (a_7 + \Phi + \beta_2)$$

and a_7 can be calculated through repeated applications of Snell's law and the geometry of triangles.

The design conditions are chosen to achieve a desired result (e.g., total deviation through the system). For instance, to design an achromatic system, the condition is that α be constant over some range of wavelengths.

For a total desired deviation angle, $\alpha = A$, from the entrance beam to the exit beam, the condition is met as follows:

$$A = \beta_1 + \beta_{air} - (a_7 + \Phi + \beta_2)$$

Furthermore, the condition for making the correcting prism 5-154 a symmetrical prism with no net expansion of the incident light beam so that it can be added to the simple anamorphic prism 5-156, as shown in Fig. 68, is as follows:

$$\Phi = \sin^{-1} [n_1 * \sin(\beta_1/2)]$$

By selecting this condition, the correcting prism 5-154 does not expand the incident light beam. The correcting prism, therefore, can be added to an existing anamorphic prism system selected to provide the appropriate expansion.

Finally, the prism assembly 5-152 can meet all of the desired design restraints by proper selection of Φ, β_1, β_2, β_{air}, and of the glass dispersions.

In some cases it may be desirable for the exit beam to have a significant deviation angle from the entrance beam. For instance, a deviation of 90 degree(s) may be advantageous. This can be accomplished by providing a total internal reflection in the prism 5-156 before the beam exits the prism. This changes the above calculations, but the design goals can still be met by proper selection of the parameters.

Applying the above principles for adding a symmetrical correcting prism to an existing anamorphic prism, a prism system was designed which has multiple surfaces to partially reflect the return beam to different detectors. Embodiments of unitary, air-spaced, achromatic prism systems with significant deviation angles between the entrance beam and the exit beam, along with multiple reflections to various detection systems are described below.

Fig. 69 illustrates an embodiment of an air-spaced, anamorphic, achromatic prism system 5-170 according to the present invention. Preferably, the prism system 5-170, as depicted in Fig. 69, has three prisms bonded as a single unit. As previously explained, this provides the advantage that the prism assembly 5-170 is mounted as a single unit. Because the prisms are bonded together, they need not be separately mounted in the optical system. This reduces mounting time, increases stability of the system, decreases mounting costs, and minimizes functional deviations between different optical systems. The three prism elements are a plate prism 5-172, a trapezoidal prism 5-174, and a correcting prism 5-176. Fig. 69 also shows the light beam path as a light beam 5-178 from the light source 5-102, an air gap light beam 5-180, an exit/reflected light beam 5-182, a first detector channel light beam 5-184 to a first detector 5-185, a second detector channel light beam 5-186 to a second detector 5-187, and a third detector light beam 5-188 to a third detector 5-189. By including an air gap between the correcting prism 5-176 and the plate prism 5-172 through which the air gap light beam 5-180 passes, the correcting prism 5-176 can be designed as a symmetrical corrector with no net expansion to the incident beam 5-178. Therefore, the correcting prism 5-176 can be added to the plate prism 5-172 and the trapezoidal prism 5-174 combination in order to achromatize the prism system 5-170 shown in Fig. 69.

Fig. 69 also depicts a lens 5-190 positioned to focus the exit light beam 5-182 onto an optical medium 5-191. The specifics of the design shown in Fig. 69 are described

and designed to be substantially achromatic for a design wavelength of 785 ± 22 nm. At this wavelength, the system will have the properties described below.

The plate prism 5-172 is depicted in more detail in Figs. 70, 70A and 70B. Fig. 70 is a side view of the plate prism 5-172, Fig. 70A is a bottom plan view illustrating a surface S1 5-200, and Fig. 70B is a top plan view illustrating a surface S2 5-202. The plate prism has the optical surface S1 5-200, the optical surface S2 5-202, an optical surface S3 5-204, a surface S4 5-206, and a surface S5 5-208. In one embodiment, the surfaces S1 5-200 and S2 5-202 are substantially parallel and spaced apart at a distance designated in Fig. 70 as 5-210. In the present embodiment, the distance 5-210 is advantageously 6.27 mm. The surface S5 5-208 and the surface S3 5-204 are also substantially parallel in the present embodiment. The surface S1 5-200 and the surface S3 5-204 intersect and terminate at an edge 5-211 (i.e., the S1/S2 edge) in Fig. 70, at an angle 5-212 (i.e., the S1/S2 angle), which is advantageously 50 degree(s) 21' ±10' in the present embodiment. The surface S3 5-204 and the surface S2 5-202 intersect and terminate at an edge 5-214; the surface S2 5-202 and the surface S4 5-206 intersect and terminate at an edge 5-216; the surface S4 5-206 and the surface S5 5-208 intersect and terminate at an edge 5-218; and the surface S5 5-208 and the surface S1 5-200 intersect and terminate at an edge 5-220, as designated in Fig. 70. The surface S2 5-202 has a length referenced as 5-222 in Fig. 70 and a width referenced as 5-224 Fig. 70A. In the present embodiment, the length 5-222 is 13.34 mm and the width 5-224 is 8.0 mm. The overall length of the prism, referenced as 5-225 in Fig. 70, from the edge 5-218 to the edge 5-211 measured parallel to the surface S1 5-200 is advantageously 23.61 mm in the present embodiment. The distance from the edge 5-218 and the edge 5-220, referenced as 5-227, measured along a reference plane 5-226 defined perpendicular to the surface S1 5-200 and the surface S2 5-202 is advantageously 2.14 mm. The plan view in Fig. 70A illustrates a clear aperture 5-230 and a clear aperture 5-232 defined on the surface S1 5-200. A clear aperture is simply an area of the surface of the prism over which the surface is specified to meet a selected quality. In the present embodiment, the clear apertures 5-230 and 5-232 are 8.5 mm by 6.5 mm ovals. Advantageously, the aperture 5-230 is centered with its minor axis a distance 5-233 from the edge 5-211 and with its major axis centered in the middle of the surface S1 5-200 as shown in Fig. 70A. In the present embodiment, the clear

aperture 5-232 is centered with its minor axis a distance 5-234 from the edge 5-220, and with its major axis centered along the middle of the surface S1 5-200. Advantageously, in the present embodiment, the distance 5-233 is 6.15 mm and the distance 5-234 is 5.30 mm.

The plan view depicted in Fig. 70B illustrates a clear aperture 5-235 defined on the surface S2 5-202. The present embodiment defines this clear aperture as an 8.5 mm by 6.5 mm oval with its minor axis centered a distance 5-236 from the edge 5-214 and its major axis centered in the middle of the surface S2 5-202 as depicted in Fig. 70B. In the present embodiment the distance 5-236 is 5.2 mm. The clear apertures 5-230, 5-232, and 5-235 define portions of the surfaces over which the surface quality is preferably at least 40/20, as is well known in the art. In the illustrated embodiment, BK7 grade A fine annealed glass, well known in the art, is an appropriate optical material for the prism 5-172.

Fig. 71 shows additional detail of the trapezoidal prism 5-174 of the embodiment depicted in Fig. 69. The trapezoidal prism 5-174 has an optical surface S6 5-240, an optical surface S7 5-242, an optical surface S8 5-244, and an optical surface S9 5-246. The surface S6 5-240 and the surface S7 5-242 terminate and intersect at an edge 5-248. The surface S7 5-242 and the surface S8 5-244 intersect and terminate at an edge 5-250 at an angle referenced as 5-251. Advantageously, the angle 5-251 is substantially 135 degrees. The surface S8 5-244 and the surface S9 5-246 intersect and terminate at an edge 5-252 at an angle 5-254 which is advantageously 50 degrees 21' in the present embodiment. The surface S9 5-246 and the surface S6 5-240 intersect and terminate at an edge 5-256. The surface S6 5-240 has a length 5-258 shown in Fig. 71. Advantageously, the length 5-258 is 9.5 mm in the present embodiment. The surface S6 5-240 and the surface S8 5-244 are substantially parallel and spaced at a distance 5-260, Fig. 71. In the present embodiment, the distance 5-260 is 8.0 mm measured in a direction perpendicular to the surface S6 5-240 and the surface S8 5-244. The edges 5-250 and 5-248 are spaced at a distance 5-261 along a plane 5-262 defined parallel with the surface S8 5-244. Advantageously, the distance 5-261 is 8.0 mm in the present embodiment. Fig. 71A is a top plan view of the trapezoidal prism 5-174 illustrating the surface S6 5-240 and the surface S9 5-246. As depicted in Fig. 71A the trapezoid prism 5-174 has a thickness 5-263. Preferably, the

thickness 5-263 is approximately 8 mm in the present embodiment. As shown in Fig. 71A, the surface S6 5-240 has a clear aperture 5-264 defined in the present embodiment as a 6.5 mm minimum diameter circular aperture centered across the width of the surface and centered at a distance 5-265 from the edge 5-248. Preferably, the distance 5-265 is 4.0 mm in the present embodiment. The surface S9 5-246 has a clear aperture 5-266 centered on the surface. In the present embodiment, the clear aperture 5-266 is defined as a 6.5 mm by 8.5 mm minimum oval.

Fig. 71B depicts a bottom plan view of the trapezoidal prism 5-174 illustrating the surface S7 5-242 and the surface S8 5-244 with clear apertures 5-268 and 5-270, respectively. As shown in Fig. 71B, the trapezoid prism 5-174 has a length 5-272 from the edge 5-252 to the edge 5-248 measured along the reference plane 5-262. Preferably, the length 5-272 is 16.13 mm in the present embodiment. In one embodiment, the clear aperture 5-268 for the surface S7 5-242 is defined as a 6.5 mm by 9.2 mm oval centered on the surface S7 5-242 with its minor axis parallel to and centered between the edge 5-248 and the edge 5-250. Advantageously, the clear aperture 5-270 is a 6.5 mm by 6.7 mm oval centered on the surface S8 5-244 with its major axis centered parallel between the edge 5-250 and the edge 5-252. In the present embodiment, the surface quality of the clear apertures 5-264, 5-266, 5-268, and 5-270 is advantageously 40/20, well known in the art.

Many of the surfaces in the prisms have coatings to facilitate the function of the prism.. In the present embodiment, the surface S6 5-240 has an anti-reflection coating with transmission ≥ 99.8% at 90° ±0.5 degrees angle of incidence. The surface S8 5-244 has a coating with transmission ≥ 98.5% at 10.7° ±0.5 angle of incidence for internally incident light. The surface S9 5-246 has a low extinction thin film coating with reflection of the s polarization state (R_s) (i.e., normal to the plane of incidence) >90%, and with reflection of the p polarization state (R_p) = 12.5% ± 2.5% at 39° 39' ± 0.5° angle of incidence. The material for the trapezoidal prism 5-174 of the embodiment illustrated in Figs. 69 and 71-71B is BK7 grade A fine annealed optical glass, as is well known in the art.

The chromatic correcting prism 5-176 of the embodiment of the prism system 5-170 depicted in Fig. 69 is shown in more detail in Figs. 72 and 72A. As illustrated, the chromatic correcting prism 5-176 has an optical surface S10 5-290, an optical surface

S11 5-292, and a surface S12 5-294 configured to form a triangular prism. The surface S11 5-292 and the surface S12 5-294 intersect and terminate at an edge 5-296. The surface S10 5-290 and the surface S12 5-294 intersect and terminate at an edge 5-298. Preferably, the surfaces S10 5-290 and S11 5-292 are symmetrical. The surface S12 5-294 has a length 5-300, which is 7.78 mm in the present embodiment. Thus, the edge 5-296 and the edge 5-298 are separated by the distance 5-300. The surface S10 5-290 and the surface S11 5-292 approach each other at an angle referenced as 5-302. In the present embodiment, the angle 5-302 is advantageously 38° 20'. The surface S11 5-292 and the surface S10 5-290 are terminated a distance 5-303 from the surface S12 5-294, measured perpendicular to the surface S12 5-294. The distance 5-303 is 10.5 mm in the present embodiment.

Fig. 72A depicts a view of the surface S10 5-290. In this embodiment, the prism 5-176 has a thickness referenced 5-304 in Fig. 72A. In the present embodiment, the thickness 5-304 is advantageously 8.0 mm. Desirably, the surface S10 5-290 has an oval clear aperture 5-306. In the present embodiment, the clear aperture 5-306 is an oval centered with the major axis parallel to, and a distance 5-308 from, the intersection at 5-298. The minor axis is centered on the surface S10 5-290 as illustrated. Preferably, the clear aperture 5-306 is defined as a 6.5 mm by 2.8 mm oval in the present embodiment, and the surface quality across the clear aperture 5-306 is advantageously 40/20, as known in the art. In the present embodiment, the surface S11 5-292 also has a similar clear aperture defined on its surface.

As with the trapezoidal prism 5-174, the chromatic correcting prism 5-176 has coatings on some of its surfaces to facilitate performance. In one embodiment, each of the surfaces S10 5-290 and S11 5-292 has an anti-reflective coating (e.g., reflectance ≤3% at 35.5° ± 1.0° angle of incidence, as is well known in the art). In the present embodiment, SFII grade A fine annealed glass is the material for the correcting prism 5-176.

When the prisms as described above are assembled as the unitary prism system 5-170 of the embodiment shown in Fig. 69, the light beams reflect as illustrated and explained below for a wavelength of 785 ± 22 nm. For discussion purposes, a reference plane 5-237 is defined along one side of the prism system 5-170 as illustrated in Fig. 69A. The incident beam 5-178 from the light source 5-102 enters the surface S10 5-290

at an incidence angle 5-326 and parallel with the reference plane 5-237. The light beam 5-178 exits the prism 5-176 into the air-gap as the light beam 5-180 and enters the prism 5-172 through surface S2 5-202. A portion of the light beam reflects at the thin film on the surface S9 5-246 and exits the surface S3 5-204 as the light beam 5-188. In one embodiment, the beam 5-188 may be directed to the detection system 5-189. Because this reflected beam is a portion of the input beam, the detection system 5-189 receiving the light beam 5-188 may monitor the intensity of the incident light. The remainder of the light beam which does not reflect at the thin film on the surface S9 5-246, passes into the trapezoidal prism 5-174, reflects internally at the surface S7 5-242 and exits as the light beam 5-182 through the surface S6 5-240.

In the embodiment described, if the angle of incidence 5-326 of the light beam 5-178 is 35° 26', the light beam exits the prism 5-174 with a total deviation from the entrance beam 5-178 to the exit beam 5-182 of 87° 37' ± 5', parallel to the reference plane 5-237 within 5', and the light beam 5-182 exits normal to the surface S6 5-240 within 5'.

The lens 5-190 focuses the light beam 5-182 onto the optical medium 5-191. The light beam reflects back through the lens and enters normal to the surface S6 5-240, reflects internally at the surface S7 5-242, and then reflects at the thin film between the trapezoidal prism 5-174 and the plate prism 5-172. The resulting beam exits the trapezoidal prism 5-174 through the surface S8 5-244 as the light beam 5-184 at a deviation angle 5-328. The light beam 5-184 enters the first detector 5-185.

Part of the light beam returned from the optical medium 5-190 also passes through the thin film, reflects at the surface S2 5-202 and exits the plate prism 5-172 as the light beam 5-186. This reflection is available because of the air gap in the prism system. In one embodiment, the light beam 5-184 and the light beam 5-186 can both be directed to separate detection systems 5-185 and 5-187, respectively. For instance, the detection system 5-185 may collect data signals, and the detection system 5-187 may collect control signals (e.g., focus and tracking servo information).

As explained above, the embodiment described is substantially achromatic within a typical range of wavelength changes from a conventional laser light source. Accordingly, shifts in the wavelength of the incident light do not significantly affect the resulting lateral position of the focused beam on the optical medium 5-190.

Calculations simulating the performance of the prism system 5-170 for variations in wavelength from 780 nm to 785 nm are shown in the table below. Phi is the incidence angle on the correcting prism (i.e., 35° 26' in the present embodiment) and its variation is estimated as ± 0.5°. The wavelength shift is indicated in one column and the corresponding shift in the focused spot from the prism system is indicated in the columns for incidence angles of Phi ± 0.5°. For instance, as seen in the first line of the table, for a wavelength shift of the incident light beam of 780 nm - 781.5 nm, the focused spot shifts by -0.2 nm at the incident angle of Phi, by 2.6 nm for an incidence angle of Phi -0.5°, and by -2.9 nm for a incidence angle of Phi +0.5°.

Wavelength Shift	Phi -0.5°	Phi	Phi +0.5°
780-781.5 nm	2.6 nm	-0.2 nm	-2.9 nm
780-783 nm	5.2 nm	-0.2 nm	-5.6 nm
780-785 nm	9.0 nm	-0.1 nm	-9.0 nm

As can be seen from the above table, the lateral displacement at the incidence angle, Phi, varies by less than 1 nm for a wavelength shift from 780 to 783 nm, with an incidence angle of Phi. This is contrasted with a lateral displacement of approximately 200 nm for a wavelength shift of 3 nm in an embodiment similar to that described above but without the chromatic correction. This indicates a substantially achromatic system.

Fig. 73 illustrates a prism system 5-339 as an alternative embodiment of the present invention. This embodiment has the correcting prism 5-340, a plate prism 5-342, and a quadrilateral prism 5-344. The correcting prism 5-340 and the plate prism 5-342 are both substantially the same as the correcting prism 5-176 and the plate prism 5-172, respectively, of the prism system 5-170 shown in Fig. 69. The quadrilateral prism 5-344, however, differs from the trapezoidal prism 5-174.

The quadrilateral prism 5-344 of Fig. 73 is depicted in more detail in Figs. 74, 74A and 74B. The quadrilateral prism 5-344 has a surface S13 5-346, a surface S14 5-348, a surface S15 5-350, and a surface S16 5-352. The surfaces S13 5-346, S14 5-348, S15 5-350, and S16 5-352 are configured similarly but not identical to the surfaces S6 5-240, S7 5-242, S8 5-244, and S9 5-246 of the trapezoidal prism 5-174. The surfaces S13 5-346 and S14 5-348 intersect at an edge 5-353 at an angle 5-354; the surfaces

S14 5-348 and S15 5-350 intersect at an edge 5-355 at an angle referenced 5-356; and the surfaces S15 5-350 and S16 5-352 intersect at an edge 5-357 at an angle 5-358, as shown in Fig. 74. Finally, the surfaces S16 5-352 and S13 5-346 intersect at an edge 5-359. In one embodiment, the angle 5-354 is 49° 40', the angle 5-356 is 135°, and the angle 5-358 is 50° 21'. The distance between the edge 5-353 and the edge 5-355, measured perpendicular to the surface S15 5-350 is referenced as 5-360 in Fig. 74. In one embodiment, the distance 5-360 is 8.0 mm. Additionally, the distance from the edge 5-353 to the edge 5-359 is referenced 5-362. In one embodiment, the distance 5-362 is 8.9 mm measured parallel to the surface S15 5-350. Finally, the distance between the edge 5-353 and the edge 5-355, measured along a plane parallel with the surface S15 5-350, is referenced as 5-364. In one embodiment, the distance 5-364 is preferably 8.0 mm.

Fig. 74A is a plan view of the surface S13 5-346 and also depicts the surface S16 5-352. Fig. 74A illustrates the thickness of the prism 5-344 referenced as 5-368. In one embodiment, the thickness 5-368 is 8.0 mm. Advantageously, the prism 5-344 has a clear aperture 5-370 defined along the surface S13 5-346, and a clear aperture 5-372 defined along the surface S16 5-352, as shown in Fig. 74A. In the present embodiment, the clear aperture 5-370 is a circular aperture centered across the surface and a distance 5-374 from the edge 5-353. In one embodiment, the clear aperture 5-370 is a circular aperture with a minimum diameter of 6.5 mm and the distance 5-374 is 4.0 mm. Advantageously, the surface S16 5-352 also has the clear aperture 5-372 centered on the surface. In one embodiment, the clear aperture 5-372 is a 6.5 mm by 8.5 mm oval aperture centered on the surface S16 5-352 as represented in Fig. 74A.

Fig. 74B is a plan view of the surface S14 5-348 and also illustrates the surface S15 5-350. The overall length of the prism 5-344 from the edge 5-353 to the edge 5-357 measured along a plane parallel to the surface S15 5-350 is referenced as 5-380 in Fig. 74B. In one embodiment, the length 5-380 is 16.13 mm. As seen in Fig. 74B, the surface S14 5-348 has a clear aperture 5-382 centered on the surface, and the surface S15 5-350 also has a clear aperture 5-384 centered on the surface. In one embodiment, the clear aperture 5-382 is a 6.5 mm by 9.2 mm oval, and the clear aperture 5-384 is a 6.5 mm by 6.7 mm oval.

Advantageously, the quadrilateral prism 5-344 also has coatings on some of its optical surfaces. In one embodiment, the surface S13 5-346 has a coating with reflectance ≤0.2% at 4° 40' ± 5' angle of incidence with respect to the normal for internally incident light. In the same embodiment, the surface S15 5-350 has a coating with reflectance ≤0.5% at 10.7° ± 0.5° angle of incidence with respect to the normal, for internally incident light. Finally, the surface S16 5-352 advantageously has a thin film coating with R_s > 90%, R_p=12.5% ± 2.5% at 39° 39' ±.5° angle of incidence with respect to the normal. Preferably, this thin film coating also has less than 8° phase shift for all operating and optical conditions.

With the configuration shown in Fig. 74, the deviation angle of the entrance beam to the exit beam totals, advantageously, 90°. This facilitates manufacturing because mounting components for 90° deviations are easier to fabricate than for 87° deviations, as in the embodiment of Fig. 69. For the dimensions and coatings specified for the embodiment of Fig. 73, the prism is not perfectly achromatic. The prism system illustrated in Fig. 73, however, is substantially achromatic over an acceptable range of operating wavelengths around the design wavelength.

Calculations simulating the performance of the prism system 5-339 of Fig. 73 for variations in the wavelength from 780 nm to 785 nm are shown in the chart below. Again, Phi is 35° 26' in this embodiment.

Wavelength Shift	Phi -0.5°	Phi	Phi +0.5°
780-781.5 nm	12.5 nm	9.8 nm	7.1 nm
780-783 nm	25.1 nm	19.6 nm	14.3 nm
780-785 nm	42.0 nm	32.9 nm	24.0 nm

As can be seen, the design shown in Fig. 73 is not as achromatic as the design shown in Fig. 69. For a wavelength shift of 780 to 783 nm, however, the lateral displacement of the focused spot from the light exiting the prism is only 19.6 nm. Again, this should be contrasted with a lateral displacement of approximately 200 nm for a wavelength shift of 3 nm in an embodiment similar to the embodiment described above but without the chromatic correction.

Data Retrieval - Transition Detection

A detailed system for storing and retrieving data from a magneto-optical device is provided in related application Serial No. 07/964,518 filed January 25, 1993, which application is incorporated by reference as if fully set forth herein.

A block diagram of an exemplary magneto-optical system is shown in Fig. 75. The system may have a read mode and a write mode. During the write mode, a data source 6-10 transmits data to an encoder 6-12. The encoder 6-12 converts the data into binary code bits. The binary code bits are transmitted to a laser pulse generator 6-14, where the code bits may be converted to energizing pulses for turning a laser 6-16 on an off. In one embodiment, for example, a code bit of "1" indicates that the laser will be pulsed on for a fixed duration independent of the code bit pattern, while a code bit of "0" indicates that the laser will not be pulsed at that interval. Depending on the particular laser and type of optical medium being used, performance may be enhanced by adjusting the relative occurrence of the laser pulse or extending the otherwise uniform pulse duration. In response to being pulsed, the laser 6-16 heats localized areas of an optical medium 6-18, thereby exposing the localized areas of the optical medium 6-18 to a magnetic flux that fixes the polarity of the magnetic material on the optical medium 6-18. The localized areas, commonly called "pits", store the encoded data in magnetic form until erased.

During the read mode, a laser beam or other light source is reflected off the surface of the optical medium 6-18. The reflected laser beam has a polarization dependent upon the polarity of the magnetic surface of the optical medium 6-18. The reflected laser beam is provided to an optical reader 6-20, which sends an input signal or read signal to a waveform processor 6-22 for conditioning the input signal and recovering the encoded data. The output of the waveform processor 6-22 may be provided to a decoder 6-24. The decoder 6-24 translates the encoded data back to its original form and sends the decoded data to a data output port 6-26 for transmission or other processing as desired.

Fig. 76 depicts in more detail the process of data storage and retrieval using a GCR 8/9 code format. For a GCR 8/9 code, a cell 6-28, Fig. 76A, is defined as one channel bit. Each clock period 6-42 corresponds to a channel bit; thus, cells 6-30 through 6-41 each correspond to one clock period 6-42 of clock waveform 6-45. As an

example of clock speeds, for a 3½" optical disc rotating at 2,400 revolutions per minute with a storage capacity of 256 Mbytes, clock period 6-42 will typically be 63 nanoseconds or a clock frequency of 15.879 MHz. A GCR input waveform 6-47 is the encoded data output from the encoder 6-12 of Fig. 75. The GCR input waveform 6-47 corresponds to a representative channel sequence "010001110101". The laser pulse generator 6-14 uses the GCR data waveform 6-47 to derive a pulse GCR waveform 6-65 (which in Fig. 76 has not been adjusted in time or duration to reflect performance enhancement for specific data patterns). Generally, GCR pulses 6-67 through 6-78 occur at clock periods when the GCR data waveform 6-47 is high. The pulse GCR waveform 6-65 is provided to the laser 6-16. The magnetization of the previously erased optical medium reverses polarity when in the presence of an external magnetic field of opposite polarity to the erased medium and when the laser is pulsed on with sufficient energy to exceed the curie temperature of the media. The laser pulses resulting from GCR pulses 6-68, 6-69, 6-70, etc., create a pattern of recorded pits 6-80 on the optical medium 6-18. Thus, recorded pits 6-82 through 6-88 correspond to pulses 6-68, 6-69, 6-70, 6-71, 6-73, 6-76, and 6-77, respectively.

Successive recorded pits 6-82 through 6-85 may merge together to effectively create an elongated pit. The elongated pit has a leading edge corresponding to the leading edge of the first recorded pit 6-82 and a trailing edge corresponding to the trailing edge of last recorded pit 6-85.

Reading the recorded pits with an optical device such as a laser results in the generation of a playback signal 6-90. The playback signal 6-90 is low in the absence of any recorded pits. At the leading edge of the pit 6-86, the playback signal 6-90 will rise and remain high until the trailing edge of the pit 6-86 is reached, at which point the playback signal 6-90 will decay and remain low until the next pit 6-87.

The above described process may be referred to as pulse width modulation ("PWM") because the width of the pulses in playback signal 6-90 indicate the distance between 1-bits. Thus, the edges of the recorded pits 6-80 which define the length of the pulses in playback signal 6-90 contain the pertinent data information. If the playback signal 6-90 is differentiated, signal peaks of the first derivative signal will correspond to the edges of the recorded pits 6-80. The signal peaks of the first derivative playback signal would be slightly offset from the edges of the recorded pits 6-80 because the

playback signal 6-90 is shown as the ideal playback signal. In order to recover the pit edge information from the first derivative signal, it is necessary to detect the signal peaks thereof. Such a process is described in detail further herein.

In contrast, most if not all existing RLL 2,7 code systems are used in conjunction with pulse position modulation ("PPM"). In PPM systems, each pit represents a "1" while the absence of a pit represents a "0". The distance between pits represents the distance between 1-bits. The center of each pit corresponds to the location of the data. In order to find the pit centers, the playback signal is differentiated and the zero-crossings of the first derivative are detected. Such a technique may be contrasted with PWM systems, described above, in which the signal peaks of the first derivative contain the pertinent pulse width information.

It is nevertheless possible to utilize PWM instead of PPM with an RLL system such as an RLL 2,7 code system. Each channel bit may correspond to a clock period of a clock waveform. As with the GCR system described earlier using PWM, a "1" may be represented by a transition in the input waveform. Thus, the RLL 2,7 input waveform may remain in the same state while a "0" occurs, but changes from high-to-low or low-to-high when a "1" occurs.

In both RLL and GCR codes, as well as other codes, when data patterns are read, the input signal generated from the optical reader 6-20 is often not symmetrical. When an unsymmetrical signal is AC-coupled between circuits, the average DC value shifts away from the peak-to-peak midpoint. The unintended shifting away from the midpoint may result in a shift in the apparent position of the data, adversely affect the ability to determine accurately the locations of data, and reduce timing margins or render the recorded data unrecoverable.

This phenomenon may be explained with reference to Figs. 77A and 77B, which show an ideal input signal S_1 derived from a symmetrical data pattern. Normally, transitions between 1's and 0's in the data are detected at the midpoint between high and low peaks of the input signal. It may be observed in Fig. 77A that the areas A_1 and A_2 above and below the peak-to-peak midpoint M_{P1} of the input signal S_1 are equal, and the transitions between 1's and 0's correspond precisely (in an ideal system) to the crossings of the input signal S_1 and the peak-to-peak midpoint M_{P1}.

Fig. 77B, in contrast, shows an input signal S_2 derived from an unsymmetrical data pattern. It may be observed that the area A_1' above the peak-to-peak midpoint M_{P2} is greater than the are A_2' below the graph. The input signal S_2, therefore, has a DC component that shifts the DC baseline DC_{BASE} above the peak-to-peak midpoint M_{P2}. When an attempt is made to locate transitions between 1's and 0's by determining the zero-crossings of the AC coupled input signal S_2, errors may be made because the DC level is not identical to the peak-to-peak midpoint M_{P2}. The DC level does not stay constant but rises and falls depending on the nature of the input signal. The larger the DC buildup, the more the detected transitions will stray from the true transition points. Thus, DC buildup can cause timing margins to shrink or the data to be unrecoverable.

Fig. 78 is a block diagram of a read channel 6-200 in accordance with one embodiment of the present invention for mitigating the effects of DC buildup. The read channel 6-200 roughly corresponds to the waveform processor 6-22 of Fig. 75. The read channel 6-200 includes a preamplification stage 6-202, a differentiation stage 6-204, an equalization stage 6-206, a partial integration stage 6-208, and a data generation stage 6-210. The operation of the read channel 6-200 will be explained with reference to a more detailed block diagram shown in Fig. 79, the waveform diagrams shown in Figs. 84A-84D, and various others as will be referenced from time to time herein.

When the optical medium 6-18 is scanned for data, the pre-amplification stage 6-202 amplifies the input signal to an appropriate level. The pre-amplification stage 6-202 may include a pre-amplifier 6-203 as is well known in the art. The pre-amplifier 6-203 may alternatively be located elsewhere such as within the optical reader 6-20. An exemplary amplified playback signal 6-220 is depicted in Fig. 84A.

The output of the pre-amplification stage 6-202, as shown in Fig. 79A, is provided to the differentiation stage 6-204. The differentiation stage 6-204 may include a differential amplifier 6-212 such as a video differential amplifier configured with a capacitor 6-213 in a manner well known in the art. A representative frequency response diagram of the differentiation stage 6-204 is shown in Fig. 80A. The differentiation stage 6-204 effectively increases the relative magnitudes of the high frequency components of the amplified playback signal 6-202. An exemplary waveform of the output of the differentiation stage 6-204 is shown in Fig. 84B.

The differentiation stage 6-204 is followed by the equalization stage 6-206 as shown in Fig. 79A. The equalization stage 6-206 provides additional filtering so as to modify the overall channel transfer function and provide more reliable data detection. The equalization stage 6-206 shapes the differentiated input signal so as to even out the amplitudes of high and low frequency components and generate a smoother signal for later processing. Equalizing filters often modify the noise spectrum as well as the signal. Thus, an improvement in the shape of the differentiated input signal (i.e., a reduction in distortion) is usually accompanied by a degradation in the signal-to-noise ratio. Consequently, design of the equalization stage 6-206 involves a compromise between attempting to minimize noise and providing a distortion-free signal at an acceptable hardware cost. In general, equalizer design depends on the amount of intersymbol interference to be compensated, the modulation code, the data recovery technique to be used, the signal-to-noise ratio, and the noise spectrum shape.

A substantial portion of linear intersymbol interference when reading stored data in a magneto-optical recording system is caused by limited bandwidth of the analog read channel and roll-off of input signal amplitude with increased storage density. Accordingly, the equalization stage 6-206 may include one or more linear filters which modify the read channel transfer function so as to provide more reliable data detection. Normally, the equalization stage is implemented as part of the read channel, but, under certain conditions, part of the equalization filtering can be implemented as part of the write channel as well.

For purposes of analysis, the playback signal can be considered as a series of bipolar rectangular pulses having unit amplitude and a duration T. Alternatively, the playback signal may be considered as a series of bidirectional step functions at each flux reversal location, where the step amplitude matches the pulse amplitude. When an input signal is applied to the equalization stage 6-206, clocking information as well as pulse polarity for each clock cell or binit may be derived from the output signal of the equalization stage 6-206. The clocking and polarity information may be derived, in theory, by use of an ideal waveform restoration equalizer, which produces an output signal having mid-binit and binit boundary values similar to those of the input signal. The zero crossings of the output signal occur at binit boundaries in order to regenerate

a clock accurately. If the zero-crossing time and direction are known, both clock and data can be extracted from the signal zero crossings.

In one embodiment, the equalization stage 6-206 comprises an equalizer selected from a class of waveform restoration equalizers. Generally, a waveform restoration equalizer generates a signal comprising a binary sequence resembling the input or playback waveform. The corners of the otherwise rectangular pulses of the resultant signal are rounded because signal harmonics are attenuated in the channel. The resultant signal may also exhibit some output signal amplitude variation.

An equalizer which produces a minimum bandwidth output signal is an ideal low pass filter with response of unity to the minimum cutoff frequency and no response at higher frequencies. Although such an ideal low pass filter is not physically realizable, the Nyquist theorem on vestigial symmetry suggests that the sharp cutoff minimum bandwidth filter can be modified and still retain output pulse zero crossing at all mid-binit cell times. To achieve this result, the high frequency roll-off of the equalized channel is preferably symmetrical and locates the half-amplitude point at the minimum bandwidth filter cutoff frequency.

One type of roll-off characteristic that may be exhibited by a filter in the equalization stage 6-206 is a raised cosine roll-off, leading to the name raised cosine equalizer. A raised cosine roll-off transfer function is approximately realizable, and has an improved response over the minimum bandwidth filter. The output pulses have a zero value at times nT, but the sidelobe damped oscillation amplitude is reduced. The output zero crossings of the raised cosine filter are more consistent than those of the minimum bandwidth filter, and linear phase characteristics are more easily achieved with a gradual roll-off, such as with the relatively gradual roll-off of the raised cosine filter. These advantages, however, are typically obtained at the expense of increased bandwidth. The ratio of bandwidth extension to the minimum bandwidth, fm, is sometimes referred to as the "α" of the raised cosine channel. Thus, in the case of a modulation code with $d = 0$, $\alpha = 0$ is the minimum bandwidth but represents an unrealizable rectangular transfer function, while $\alpha = 1$ represents a filter using twice the minimum bandwidth.

The impulse transfer function of the raised cosine equalization channel (including the analog channel plus equalizer, but excluding the input filter) may be given as follows:

$$H(f) = 1, \quad \text{for } 0 < f < (1 - \alpha) \cdot fm$$

$$H(f) = 1/2 \{1 + \cos [(f - (1 - \alpha) \cdot fm)/(2 \cdot \alpha \cdot fm)]\},$$
$$\text{for } (1 - \alpha) \cdot fm < f < (1 + \alpha) \cdot fm$$

$$H(f) = 0, \quad \text{for } f > (1 + \alpha) \cdot fm$$

where $\Phi(f) = k \cdot f$ is the phase, and k is a constant. The above family may be referred to as α waveform restoration equalizers. The $\alpha = 1$ channel has the property of having nulls at half-binit intervals as well as at full binit intervals. Such a channel results in a signal having no intersymbol interference at mid-binit or binit boundary times, which are signal zero crossing and sample times, thus allowing accurate clock and data recovery. For such a full bandwidth equalizer, the roll-off starts at zero frequency and extends to the cutoff frequency f_c.

Raised cosine equalizers are capable of correcting extensive amounts of linear intersymbol interference given adequate signal-to-noise ratio. A large amount of high frequency boost may be required to compensate for MO-media and optical system resolution. An equalizer bandwidth equal to at least twice the minimum bandwidth is preferred for elimination of linear intersymbol interference, assuming a physically realizable channel operating on a modulation code with d = 0. A bandwidth of such a width generally results in reduction of the signal-to-noise ratio. The equalizer bandwidth is selected so as to achieve the optimum compromise between interference distortion and noise. In some instances, it may be desirable to narrow the bandwidth by using an $\alpha < 1$ transfer function in order to improve noise at the expense of added distortion in the form of clock jitter.

Another waveform-restoration equalizer is known as the cosine β response equalizer. The impulse transfer function of a full bandwidth β channel is as follows:

$$H(f) - \cos^{\beta} (\pi \cdot f/(2 \cdot f_c)) \text{ for } 0 < f < f_c$$

$$H(f) = 0, \text{ for } f > f_c$$

Like the α equalizer family, there are numerous β equalizers. Full bandwidth β equalizers have a cutoff frequency of f_c, and consequently reduce clock jitter due to the relatively small amount of interference at binit boundaries. Techniques are known in the art for optimizing these types of equalizing filters to achieve the minimum probability of error in various types of noise conditions.

Use of α equalizers generally results in a narrower bandwidth, thereby reducing noise at the expense of clock jitter or horizontal eye opening. Use of a β equalizer generally results in signal-to-noise ratio improvement by reducing high frequency boost without reducing the bandwidth. The choice of β equalizer may reduce the vertical eye opening or an effective amplitude reduction. The $\alpha = 1$ and $\beta = 2$ equalizer channels are identical from the standpoint of eye pattern, both types of channels having a relatively wide open eye pattern.

A preferred equalizer channel bandwidth for codes with $d > 0$ does not necessarily depend on the minimum recorded pulse width, Tr, as might be expected, but rather on the binit width, Tm. This is because the data-recovery circuits are generally required to distinguish between pulses that differ by as little as one binit width, and time resolution is a function of signal bandwidth. The (0,k) codes (where k represents the maximum number of contiguous binits without flux reversals) require a nominal bandwidth $BW_{NOM} = 1/Tm = f_c$ so as to eliminate interference at the center and edge of each binit, provided that intersymbol interference at binit boundaries is absent.

For codes with $d > 0$, interference can be essentially eliminated at binit edges with a reduced bandwidth of $BW = 1/(2 \cdot Tm) = f_c/2$. In such a case, all binit read pulses then have unit amplitude at a flux reversal, and the read-pulse tails cross zero at flux transitions. The narrower bandwidth BW results in output signal zero crossings at a point of no interference, without considering binit centers, but the bandwidth reduction is typically obtained with an increase in detection ambiguity in the presence of channel impairments. The narrower bandwidth BW may also result in a reduction of the signal zero-crossing slope, leading to a potential increase in detection sensitivity with respect to noise, disc speed variations, analog channel differences, or improper equalization. For example, a half-bandwidth $\beta = 2$ equalization channel with a (1,k)2/3 rate modulation

code may result in a signal having no intersymbol interference at the signal zero crossings, but some amplitude variation between zero crossings. The bandwidth is less than the bandwidth for non-return to zero ("NRZI") modulation, even though more information is recorded than with NRZI modulation (e.g., bandwidth = 0.75 and bit rate = 1.33 relative to NRZI). The reduced bandwidth makes up for the modulation code rate loss.

The $\alpha = 1$ and β waveform restoration equalizers may permit output zero crossings to occur at the equivalent of input pulse edges. Data detection can then be obtained by hard-limiting the equalized signal, generally resulting in an output signal resembling the original playback signal. However, this result occurs only if the equalizer response extends to DC, which is typically not the case for a magneto-optical channel. Disc birefringence in the MO channel causes drift up and down of the DC baseline, resulting in output binits which are lengthened or shortened according to the degree of amplitude offset at zero-crossing detector. This problem can be reduced by the use of DC restoration as described herein. In order to achieve the desired low frequency response for a waveform-restoration equalizer, the low frequency signals may have to be amplified significantly, which can seriously degrade signal-to-noise ratio under some conditions. If low frequency noise is present in significant amounts, waveform-restoration equalization techniques may not be very satisfactory unless a modulation code with no DC and little low-frequency content or DC restoration circuits are used.

In a preferred embodiment, the equalization stage 6-206 may comprise a programmable filter and equalizer 6-207, Fig. 79A, located on an integrated chip. Such integrated chips are presently available from various manufacturers. The filter and equalizer 6-207 may be of an equi-ripple variety and have relatively constant group delay up to a frequency equal to about twice the cutoff frequency. A representative frequency response diagram of the equalization stage 6-206 is shown in Fig. 80B, and an exemplary output waveform is shown in Fig. 84C.

After the signal has been processed by the equalization stage 6-206, the signal peaks of the waveform in Fig. 84C contain accurate information regarding the position of the read data. The signal peaks can be detected by taking another derivative, but doing so may be detrimental to the system's signal-to-noise ratio and will likely cause undesired jitter. A preferred embodiment of the invention described herein provides an

accurate means for detecting the signal peaks without taking a second derivative, by using partial integration and a novel data generation circuit.

After the signal has been processed by the equalization stage 6-206, it is provided to the partial integrator stage 6-208 for further shaping of the waveform. As illustrated in Fig. 79A, the partial integrator stage 6-208 may comprise an amplifier stage 6-229, a bandpass filter stage 6-230, an integrator and low pass filter stage 6-232, and a subtractor and low pass filter stage 6-234. The amplifier stage 6-229 receives the output of the equalization stage 6-206 and provides a signal to the bandpass filter stage 6-230 and the integrator and low pass filter stage 6-232. The integrator and low pass filter stage 6-232 preferably attenuates a selected range of high frequency components. A representative frequency response 6-260 of the integrator and low pass filter stage 6-232 and a representative frequency response 6-261 of the bandpass filter stage 6-230 are depicted in Fig. 80C.

The output of the bandpass filter stage 6-230, Fig. 79A, is thereafter subtracted from the output of the integrator and low pass filter stage 6-232 and filtered by the low pass filter stage 6-234. A graph of the total frequency response of the partial integrator stage 6-208, including the low pass filter 6-234, is shown in Fig. 80D. An exemplary output waveform of the partial integrator stage 6-208 is shown in Fig. 84D.

A detailed circuit diagram of a particular embodiment of the partial integrator stage 6-208 is illustrated in Fig. 79B. Initially, as shown in Fig. 79B, a differential input 6-238, 6-239 is received, such as from the equalization stage 6-206. The differential input 6-238, 6-239 is provided to differential amplifier 6-240, configured as shown, which differentially sums its inputs. Differential amplifier 6-240 essentially corresponds to amplifier stage 6-229 shown in Fig. 79A.

An output 6-249 from the differential amplifier 6-240 is connected to a pair of current generators 6-241 and 6-242. The first current generator 6-241 comprises a resistor R77 and a PNP transistor Q61, configured as shown in Fig. 79B. The second current generator 6-242 also comprises a resistor R78 and a PNP transistor Q11, configured as shown in Fig. 79B.

An output from current generator 6-241 is connected to a bandpass filter 6-243. The bandpass filter 6-243 includes an inductor L3, a capacitor C72 and a resistor R10, configured in parallel as shown. The bandpass filter 6-243 essentially corresponds to

bandpass filter stage 6-230 of Fig. 79A. An output from the other current generator 6-242 is connected to an integrator 6-244. The integrator 6-244 comprises a capacitor C81 and a resistor R66, configured in parallel as shown in Fig. 79B.

An output from the integrator 6-244 is connected through a resistor R55 to a NPN transistor Q31. Transistor Q31 is configured as an emitter-follower, providing isolation with respect to the output of the integrator 6-244, and acting as a voltage source. The emitter of transistor Q31 is connected to a low pass filter 6-245. The low pass filter 6-245 comprises an inductor L6, a capacitor C66 and a resistor R49, configured as shown in Fig. 79B. The integrator 6-244, emitter-follower including transistor Q31, and the low pass filter 6-245 essentially correspond to the integrator and low pass filter stage 6-232 shown in Fig. 79A. The frequency response of the integrator 6-244 essentially corresponds to the frequency response 6-260 shown in Fig. 80C, while the frequency response of the band pass filter 6-243 essentially corresponds to the frequency response 6-261 shown in Fig. 80C.

An output from the low pass filter 6-245 and an output from the bandpass filter 6-243 are coupled to a differential amplifier 6-246, configured as shown in Fig. 79B. Differential amplifier 6-246 differentially sums its inputs, and provides a differential output to a low pass filter 6-247. The differential amplifier 6-246 and low pass filter 6-247 correspond essentially to the subtractor and low pass filter stage 6-234 shown in Fig. 79A.

Exemplary waveforms for the circuit of Fig. 79B are shown in Figs. 80G(1)-80G(4). Fig. 80G(1) shows first an exemplary input waveform 6-256 as may be provided to the differential amplifier 6-240 from, e.g., equalizer 6-206. The next waveform 6-257 in Fig. 80G(2) corresponds to an output from the bandpass filter 6-243, Fig. 79B, in response to the circuit receiving input waveform 6-256. The next waveform 6-258 in Fig. 80G(3) corresponds to an output from the low pass filter 6-245 in response to the Fig. 79B circuit receiving input waveform 6-256. Waveform 6-258 shows the effect of operation of the integrator 6-244. The function of low pass filter 6-245 is essentially to provide a delay so as to align the output of the bandpass filter 6-243 and the integrator 6-244 in time at the input of differential amplifier 6-246. Low pass filter 6-245 thereby matches the delays along each input leg of the differential amplifier 6-246 prior to differential summing.

The final waveform 6-259 in Fig. 80G(4) corresponds to an output from the second low pass filter 6-247, after the signals output from the bandpass filter 6-243 and low pass filter 6-245 have been combined and filtered. Waveform 6-259 typically exhibits considerably improved resolution over the original playback signal read from the magnetic medium.

It should be noted that the partial integration functions described with respect to Figs. 79A and 79B are carried out using differential amplifiers (e.g., differential amplifiers 6-240 and 6-246), thereby providing common mode rejection or, equivalently, rejection of the DC component of the input signal 6-238, 6-239. Another feature of the embodiments shown in Figs. 79A and 79B is the relatively favorable frequency response characteristics exhibited by the partial integration stage. In particular, by combining an integrated signal with a high pass filtered signal (e.g., at subtractor and low pass filter block 6-234 or differential amplifier 6-246), noise is removed from the differentiated and equalized playback signal, but while maintaining relatively rapid response time due in part to the high pass frequency boost provided by the bandpass filter.

A primary function of the combination of the differentiation stage 6-204, the equalization stage 6-206, and the partial integration stage 6-208 is to shape the playback signal 6-220 in an appropriate manner for facilitating data recovery. As can be seen by comparing Figs. 84A and 84D, the resultant signal shown in Fig. 84D is similar to the playback signal 6-220 of Fig. 84A (from which it was derived) but differs therefrom in that the amplitudes of its high and low frequency components have been equalized and sharp noise-like characteristics removed. A graph of the total frequency response for the combination of the differentiation stage 6-204, the equalization stage 6-206, and the partial integration stage 6-208 is shown in Fig. 80E. A graph of the total group delay response for the same chain of elements is shown in Fig. 80F.

It may be noted that tape drive systems presently exist utilizing equalization and integration of a playback signal in order to facilitate data recovery. To a large degree, however, such systems do not suffer from the problems of DC buildup because they typically utilize DC-free codes. As mentioned previously, DC-free codes have the disadvantage of being relatively low in density ratio and hence inefficient. The present invention in various embodiments allows for the use of more efficient coding systems

by providing means for eliminating the effects of DC buildup without necessarily using a DC-free code.

The output of the partial integrator stage 6-208 (e.g., the waveform in Fig. 84D) is provided to the data generation stage 6-210 of Fig. 79. A block diagram of the data generation stage 6-210 is shown in Fig. 81. The data generation stage 6-210 includes a positive peak detector 6-300, a negative peak detector 6-302, a voltage divider 6-304, a comparator 6-306, and a dual edge circuit 6-308. The operation of the circuit show in Fig. 81 may be explained with reference to Fig. 83. In Fig. 83, it is assumed that a recorded bit sequence 6-320 has been read and eventually caused to be generated, in the manner as previously described, a preprocessed signal 6-322 from the partial integrator stage 6-208. It should be noted that the preprocessed signal 6-322 and various other waveforms described herein have been idealized somewhat for purposes of illustration, and those skilled in the art will appreciate that the actual waveforms may vary in shape and size from those depicted in Fig. 83 and elsewhere.

The preprocessed signal 6-322 is fed to the positive peak detector 6-300 and the negative peak detector 6-302 which measure and track the positive and negative peaks, respectively, of the preprocessed signal 6-322. A positive peak output signal 6-330 of the positive peak detector 6-300 and a negative peak output signal 6-332 of the negative peak detector 6-302 are illustrated in Fig. 83. The positive peak output signal 6-330 and the negative peak output signal 6-332 are averaged by the voltage divider 6-304, which is comprised of a pair of resistors 6-341 and 6-342. The output of voltage divider 6-304 is utilized as a threshold signal 6-334, Figs. 81-83, and represents the approximate peak-to-peak midpoint of the preprocessed signal 6-322. The output of the voltage divider 6-304 is provided to the comparator 6-306 which compares the divided voltage with the preprocessed signal 6-322. The comparator 6-306 changes states when the preprocessed signal 6-322 crosses the threshold signal 6-334, indicating a transition in the read data from 1 to 0 or 0 to 1. The output of comparator 6-306 is shown as an output data waveform 6-362 in Fig. 83. As explained in more detail below, the output data waveform 6-362 is fed back to the positive peak detector 6-300 and negative peak detector 6-302 to allow tracking of the DC envelope. The output of the comparator 6-306 is also provided to the dual edge circuit 6-308 which generates a unipolar pulse of fixed duration each time the comparator 6-306 changes states.

The output of the dual edge circuit 6-308 provides clocking and data information from which recovery of the recorded data may be had in a straightforward manner. For example, in a pulse-width modulation ("PWM") technique such as the GCR 8/9 modulation code described previously, each data pulse output from the dual edge circuit 6-308 represents a transition in flux (i.e., a recorded 1-bit), while the lack of data pulse at clock intervals would represent the lack of transition in flux (i.e., a recorded 0-bit). The sequence of recorded bits can thereafter be decoded by decoder 6-24 (shown in Fig. 75) by methods well known in the art to determine the original data.

In order to properly track the envelope caused by the DC portion of the preprocessed signal 6-322, a preferred embodiment feeds back duty cycle information from the output signal 6-362 to the peak detectors. Thus, the output of the comparator 6-306 is fed back to the positive peak detector 6-300 and the negative peak detector 6-302. This process may be explained further by reference to Fig. 82 which depicts a more detailed circuit diagram of the data generator stage 6-210. As shown in Fig. 82, the preprocessed signal 6-322 is provided to the base of transistors Q2 and Q5. Transistor Q2 is associated with the positive peak detector 6-300, and transistor Q5 is associated with the negative peak detector 6-302. Because the positive peak detector 6-300 and negative peak detector 6-302 operate in an analogous fashion, the duty cycle feedback operation will be explained only with reference to the positive peak detector 6-300, while those skilled in the art will understand by reference to Fig. 82 and the description below the analogous operation of the negative peak detector 6-302.

Transistor Q2 charges a capacitor C1 when the amplitude of the preprocessed signal 6-322 exceeds the stored voltage of the capacitor C1 (plus the forward bias voltage of the transistor Q2). In Fig. 83, it can be seen that the positive peak output signal 6-330 charges rapidly to the peak of the signal 6-322. The output signal 6-362, through feedback, maintains the positive charge on the capacitor C1 when the output signal 6-362 is high and allows the capacitor C1 to discharge when the output signal 6-362 is low. Thus, if the output signal 6-362 is high, the positive charge on capacitor C1 is maintained by a transistor Q1 through resistor R2. Preferably, resistors R1 and R2 are selected to be the same value so that charge is added to the capacitor through resistor R2 at the same rate that it is discharged through resistor R1, thus maintaining as constant the net charge on capacitor C1. If, on the other hand, the output signal

6-362 is low, then transistor Q1 is turned off and capacitor C1 is allowed to discharge though resistor R1. The values of capacitor C1 and resistor R1 are preferably selected such that the time constant is slightly faster than the speed expected of DC buildup so that the capacitor C1 can track the change in DC level as it occurs.

The output of capacitor C1 is provided to the base of a transistor Q3. The voltage level of the emitter of Q3 is a bias voltage level above the output of capacitor C1. Current is drawn through resistor R3 which allows the emitter of transistor Q3 to follow the voltage of the capacitor C1 (offset by the emitter-base bias voltage). Thus, the emitter of transistor Q3 yields positive peak output signal 6-330. It should be noted that transistors Q1 and Q2 are NPN type transistors while Q3 is a PNP type transistor. Thus, the NPN-PNP configuration largely cancels out adverse thermal effects that may be experienced with transistors Q1, Q2, and Q3, and also cancels out the bias voltages associated with their operation.

The negative peak detector 6-302 operates in an analogous fashion to the positive peak detector 6-300 and is therefore not explained in greater detail. The emitter of transistor Q6 yields negative peak output signal 6-332.

As described previously, positive peak output signal 6-330 and negative peak output signal 6-332 are averaged by the voltage divider 6-304 comprised of the pair of resistors R4, 6-341 and 6-342, as shown in Figs. 81 and 82 to form the threshold signal 6-334. The threshold signal 6-334 therefore constitutes the approximate midpoint of the peak-to-peak value of the preprocessed signal 6-322 and tracks the DC envelope of the preprocessed signal 6-322 through duty cycle feedback compensation.

Although the duty cycle feedback has been shown in the preferred embodiment as originating from the output of the comparator 6-306, it may be observed that other feedback paths may also be utilized. For example, a similar feedback path may be taken from the output of dual edge circuit 6-308 if a flip/flop or other memory element is placed at the output of the dual edge circuit 6-308. Also, other means for measuring duty cycle and adjusting the threshold signal to track the DC envelope may be utilized.

A preferred technique such as described generally in Figs. 78 and 79B includes the step of differentiation of the playback signal prior to partial integration, followed thereafter by the step of DC tracking. The preferred method is particularly suitable for systems having a playback signal with relatively poor resolution, and may be

advantageously applied, for example, to reading information stored in a GCR format. In one aspect of the preferred method, the initial step of differentiation reduces the low frequency component from the incoming playback signal. In another aspect of the preferred method, the partial integration stage results in restoration or partial restoration of the playback signal while providing rapid response due to the high pass boost (e.g., from the bandpass filter stage). The preferred method may be contrasted with a method in which integration of the playback signal is carried out initially (i.e., prior to differentiation), which may lead to an increased size of DC component and a correspondingly more difficult time in tracking the DC component.

It will be appreciated that the various circuits and methods described herein are not limited to magneto-optical systems but may also be useful in systems for reading data on stored tapes and other types of disks as well and, in a more general sense, in any system (whether or not a data storage system) for processing electrical signals in which it is desired to mitigate the effects of DC buildup.

Data Storage and Other Aspects of Data Retrieval

In Fig. 85, during the write mode, a data source 7-10 transmits data to an encoder 7-12. The encoder 7-12 converts the binary data into binary code bits. The code bits are then transmitted to a laser pulse generator 7-14, where the code bits are converted to energizing pulses for turning a laser 7-16 on and off. In the preferred embodiment, a code bit "1" indicates that the laser will be pulsed on for a fixed duration independent of the code bit pattern. Depending on the laser and optical medium being used, however, performance may be enhanced by adjusting the occurrence of the laser pulse or by extending the otherwise uniform pulse duration. The output of laser 7-16 heats localized areas of an optical medium 7-18, which is being exposed to a magnetic flux that sets the polarity of the magnetic material on the optical medium 7-18. During reads of the optical medium 7-18, a laser beam is impinged on the surface of the medium. The polarization of the reflected laser beam will be dependent upon the polarity of the magnetic surface of the optical medium.

During the read mode, the reflected laser beam will be inputted into an optical reader 7-20, where the read code output will be sent to a waveform processor 7-22. The processed read code will be sent to a decoder 7-24, where output data will be transmitted to a data output port 7-26 for transmission.

Fig. 86 illustrates the differences between the laser pulsing in GCR 8/9 and RLL 2,7 code formats. In GCR 8/9, a cell 7-28, Fig. 86A, is defined as a code bit. For GCR 8/9, nine cells or code bits are equal to eight data bits. Thus, cells 7-30 through 7-41 each correspond to one clock period 7-42 of a clock waveform 7-45. For a 3½" optical disc rotating at 2,400 revolutions per minute (RPM) with a storage capacity of 256 Mbytes, clock period 7-42 will typically be 63 nanoseconds or a clock frequency of 15.879 MHz. A GCR data waveform 7-47 is the encoded data output from the encoder 7-12. A representative data sequence is depicted in Fig. 86A. The code data sequence "010001110101" is shown in GCR data 7-50 through 7-61, where GCR data 7-50 is low. GCR data 7-51 is high. GCR data 7-52 is high and so forth for GCR data 7-53 through 7-61. A pulse GCR waveform 7-65 is the output from laser pulse generator 7-14 and inputted into laser 7-16. In practicing the invention, a non-return-to-zero driving signal is utilized to energize the magnetic recording head. Thus, the magnetization of the previously erased optical medium reverses polarity when, in the presence of an external magnetic field of opposite polarity to the erased medium, the laser is pulsed on with sufficient energy to exceed the Curie temperature of the medium. Pulse GCR waveform 7-65 as shown has not been adjusted in time or duration to reflect performance enhancement for specific data patterns. Pulse GCR 7-67 through 7-78 reflect no pulse when the corresponding GCR data 7-47 is low and reflect a pulse when GCR data 7-47 is high. For example, pulse GCR 7-67 has no pulse because GCR data 7-50 is low. Conversely, pulse GCR 7-68, 7-69, 7-70, and 7-71 show a laser pulse because GCR data 7-51 through 7-54 are each high, respectively, and similarly for pulse GCR 7-72 through 7-78. Under the depicted uniform scenario, pulse GCR pulse width 7-65 is uniform for pulse GCR 7-68, 7-69, 7-70, 7-71, 7-73, 7-76, and 7-77. For the preferred embodiment, this pulse width is 28 nanoseconds. Each laser pulse corresponding to pulse GCR waveform 7-65 creates recorded pits 7-80 on the optical medium 7-18. Recorded pit 7-82 corresponds to pulse GCR 7-68. Recorded pit 7-83 corresponds to pulse GCR 7-69. Similarly, recorded pits 7-84 through 7-88 correspond to pulse GCR 7-70, 7-71, 7-73, 7-76, and 7-77, respectively.

Because of thermal dissipation and spot size on the optical medium 7-18, the recorded pits 7-80 are wider in time than pulse GCR 7-65. Successive recorded pits 7-80 merge together to effectively create a larger recorded pit. Thus, the elongated

recorded pit has a leading edge, corresponding to the first recorded pit, and a trailing edge, corresponding to the last recorded pit. For example, the pit created by recorded pits 7-82 through 7-85 has a leading edge from recorded pit 7-82 and a trailing edge from pit 7-85. Under the GCR 8/9 data format, a leading edge corresponds to GCR data 7-47 going high, and a trailing edge corresponds to GCR data 7-47 going low. Hence, for data pattern "10001" as shown by GCR data 7-51 through 7-55, a leading edge occurs for the first "1" (GCR data 7-47 going high) as shown by recorded pit 7-82; and, at the end of the GCR data 7-54, a trailing edge occurs as shown by recorded pit 7-85, because GCR data 7-55 is low.

A playback signal 7-90 will be low when recorded pits 7-80 shows no pits. At the leading edge of a pit, the playback signal 7-90 will rise and remain high until the trailing edge of the pit is reached. The signal will go low and remain low until the next pit. For example, the playback signal 7-91 is low because GCR data 7-50, which is low, did not create a pit. At the front edge of recorded pit 7-82, playback signal 7-90 has a leading edge as shown in playback signal 7-92. Playback signal 7-90 will then remain unchanged until a trailing edge occurs on a recorded pit. For example, because recorded pits 7-83 and 7-84 show no trailing edge, playback signals 7-93 and 7-94 remain high. The signal remains high during playback signal 7-95 because of recorded pit 7-85. However, because GCR data 7-55 is low, recorded pit 7-85 creates a trailing edge. Thus, playback signal 7-96 decays. The signal will decay to "O" until a recorded pit occurs, creating a leading edge. Thus, with the occurrence of recorded pit 7-86, which corresponds to GCR data 7-56 being high, playback signal 7-97 rises. Because there is no immediate successor to recorded pit 7-86 when GCR data 7-57 is low, playback signal 7-98 decays. Playback signal 7-99 remains low because there is no recorded pit when GCR data 7-58 is low. With GCR data 7-59 and 7-60 being high, recorded pits 7-87 and 7-88 overlap creating one larger pit. Thus, playback signal 7-100 rises and playback signal 7-101 remains high. Playback signal 7-102 falls at the trailing edge of recorded pit 7-88 when GCR data 7-61 is low.

For RLL 2,7 a cell consists of two data bits, which corresponds to two clock periods 7-121 of 2F clock waveform 7-120, Fig. 86B. For a 256 Mbyte disc, an RLL 2,7 encoding format will require a 2F clock pulse width 7-121 of 35.4 nanoseconds or a clock frequency of 28.23 MHz. The calculation of this value is straightforward. In order

to maintain the same disc density, the GCR 8/9 and RLL 2,7 encoding formats must contain the same amount of information in the same recording time. Because two code bits are required per data bit in the RLL 2,7 format, it requires a clock frequency of 2·(8/9) that of the GCR data format. The GCR data format records nine bits of code bits per eight bits of data. Thus, the GCR data bit clock is nine-eighths of the clock period 7-42. Thus, for a GCR clock period 7-42 of 63 nanoseconds, the RLL 2,7 pulse width 7-121 must be 35.4 nanoseconds in order to maintain the same disc density.

The RLL 2,7 data waveform 7-122 reflects two code bits per cell. For example, RLL 2,7 data 7-124 shows a data pattern "00" while RLL 2,7 data 7-125 shows a data pattern "10". In this data format, a "1" represents a transition in data. Thus, RLL 2,7 data 7-125 goes high when the "1" occurs in the data pattern. Similarly, RLL 2,7 data 7-126 goes low when the "1" occurs in the data pattern. While a "O" occurs, RLL 2,7 data 7-122 remains in the same state. Pulsed 2,7 waveform 7-137 reflects the pulsing of laser 7-16 corresponding to RLL 2,7 data 7-122. Thus, for RLL 2,7 data 7-125 and 7-126, during the period when that signal is high, pulsed 2,7 waveform 7-140 and 7-141 is high. Because of the thermal elongation of the pit, pulsed 2,7 waveform 7-141 goes low prior in time to RLL 2,7 data 7-126. For longer data patterns of "O", the pulsing must remain on. For example, during the data pattern "10001" as shown in RLL 2,7 data 7-128 and 7-129, pulsed 2,7 waveform 7-143 and 7-144 remains high longer than pulsed 2,7 waveform 7-140 and 7-141. For data patterns of successive "O", the pulsed 2,7 waveform 7-137 can be pulsed as separate pulses. For example, for the data pattern "1000001", RLL 2,7 data 7-132, 7-133, and 7-134 can be pulsed in two separate pulses as shown in pulse 2,7 7-147, 7-148, and 7-149.

As with the GCR 8/9 format, recorded pits 7-160 show thermal elongation. For example, recorded pit 7-162 is wider in time than the pulse from pulsed 2,7 waveform 7-140 and 7-141; a similar result may be seen for recorded pit 7-163. Again, playback signal 7-167, depicted by playback signal 7-168 through 7-174, goes high on leading edges of recorded pits 7-160, decays on trailing edges of recorded pits 7-160, and remains constant during the presence or absence of pits.

The pulsed GCR code can be improved by correcting predictable position shifts. Fig. 87 shows the timing diagram for the write compensation of the laser pulse generator 7-14. Experimental testing showed that recording early when the laser 7-16 is off for

two bits or greater enhances performance. Clock waveform 7-176 is the code bit clock used for clocking data 7-177, 7-203, and 7-229, which show the worst case data patterns for enhancement. Other patterns can be corrected, but will suffer in signal amplitude. Data 7-180 through 7-184 correspond to the data sequence "10100". The uncompensated pulse waveforms 7-188 through 7-192 correspond to this data pattern without write compensation. Uncompensated pulse waveforms 7-189 and 7-191 occur in the second half of the clock period. After write compensation, the output of laser pulse generator 7-14 corresponds to compensated pulse waveform 7-195, where compensated pulse waveforms 7-197 and 7-198 remain unchanged, and a shortened off-period for compensated pulse waveform 7-199 provides an earlier compensated pulse waveform 7-200. During compensated pulse 7-201, laser 7-16 remains off for a longer duration than uncompensated pulse 7-192. Similarly, for data 7-206 through 7-209, corresponding to data pattern "1100", uncompensated pulse waveform 7-211 would be off for uncompensated pulse waveform 7-213 followed by two pulses, i.e., uncompensated pulse waveforms 7-214 and 7-216. Again, the write compensation circuit adjusts compensated pulse waveform 7-220 so that compensated pulse waveform 7-225 will occur closer in time to compensated pulse waveform 7-223 so that compensated pulse waveform 7-224 is shorter than uncompensated pulse waveform 7-215. Finally, data 7-231 through 7-235, corresponding to the data pattern "00100", have uncompensated pulse waveform 7-237 occurring at uncompensated pulse waveform 7-240. Write compensation would move compensated pulse waveform 7-243 earlier in time to compensated pulse waveform 7-246.

Fig. 88 shows the schematic diagram of the write compensation circuit, which comprises data pattern monitor 7-248, write compensation pattern detector 7-249, and delay circuit 7-269. Data pattern monitor 7-248 is a serial shift register that sequentially clocks encoded data from the encoder 7-12. The last five clocked in data bits are sent to the write compensation pattern detector 7-249, where they are analyzed for determining whether to pulse the laser earlier than normal.

Data pattern monitor 7-248 consists of data sequence D flip-flops 7-250 through 7-256. Encoded data is input into the D port of the data sequence D flip-flop 7-250, whose Q output WD1 becomes the input of the D port of data sequence D flip- flop 7-251. This clocking continues through data sequence D flip-flops 7-252 through 7-256,

whose Q output WD7 is the data sequence delayed by seven clock periods from when it was first input into data pattern monitor 7-248. The Q outputs WD1, WD2, WD3, WD4, and WD5 of data sequence D flip-flops 7-250 through 7-254, respectively, represent the last five of the last seven data bits inputted into a data pattern monitor 7-248. These five bits are sent to the write compensation pattern detector 7-249, where they are compared to predetermined data patterns; and, if they match, an enable write signal is sent to the delay circuit 7-269 to indicate that the laser pulse is to occur earlier than normal.

The first data pattern is detected by inverting the Q data WD1, WD2, WD4, and WD5 from data sequence D flip-flops 7-250, 7-251, 7-253, and 7-254, respectively, through data inverters 7-260, 7-261, 7-262, and 7-263, respectively. The outputs of these inverters are AND'ed with the output from data sequence D flip-flop 7-252 in detect AND gate 7-264. Thus, when a sequence "00100" occurs, the output of detect AND gate 7-264 goes high, indicating that a detect of the data pattern occurred. Similarly, the second data pattern is detected by inverting the Q outputs WD1, WD2, and WD4 from data sequence D flip-flops 7-250, 7-251, and 7-253, respectively, through data inverters 7-282, 7-283, and 7-284, respectively, and AND'ing these inverted outputs with the outputs WD3 and WD5 of data sequence D flip-flops 7-252 and 7-254 in detect AND gate 7-286. Thus, a data pattern of "10100" will trigger a high from detect AND gate 7-286, indicating a detect. The third data sequence is detected by inverting the Q outputs WD1 and WD2 from data sequence D flip-flops 7-250 and 7-251, respectively, through data inverters 7-287 and 7-288 and AND'ing these inverted outputs with the Q outputs WD3 and WD4 from data sequence D flip-flops 7-252 and 7-253, respectively, in data detect AND gate 7-289. Thus, the data pattern of "1100" will trigger a detect from detect AND gate 7-289, indicating the presence of the data. The data pattern detect outputs of detect AND gates 7-264, 7-286, and 7-289 are OR'ed in detected pattern OR gate 7-266, whose output goes high when one of the three data patterns is detected. The detected pattern output is clocked in enable write D flip-flop 7-268, whose Q output, the enable write signal, is then sent to the delay circuit 7-269.

The delay circuit 7-269 takes the clocked data output WD4 of the data sequence D flip-flop 7-253 and simultaneously inputs it into a delay circuit 7-276 and a not-delay-select AND gate 7-274. The delayed output of the delay circuit 7-276 is

inputted into delay-select AND gate 7-272. The enable write signal from write compensation pattern detector 7-249 will enable either delay-select AND gate 7-272 or not-delay-select AND gate 7-274. When the enable write signal is low, which indicates that one of the three data patterns has not occurred, it is inverted by an enable write inverter 7-270. This allows the delayed data from delay circuit 7-276 to be clocked. On the other hand, if enable write is high, which indicates that one of the three data patterns has occurred, then the not-delay-select AND gate 7-274 allows the transmission of the data from data sequence D flip-flop 7-253, which is undelayed. The outputs from delay-select AND 7-272 and not-delay-select AND gate 7-274 are OR'ed in a data OR gate 7-278, where it is outputted from delay circuit 7-269. Although prior discussions about the write compensation circuit or timing indicated that for the three data patterns, the write pulse would occur 10 nanoseconds earlier, in actual implementation, data is delayed 10 nanoseconds for all data but the three data patterns. The delay of delay circuit 7-276 is set between 7 to 12 nanoseconds for the frequency of the preferred embodiment.

When recording lower frequency data patterns, the resultant magneto-optical signal has a slower rise time than fall time. This causes the final output from the waveform processor 7-22 to have degraded amplitude on positive peaks, which can be corrected by recording with higher effective power at the leading edge of the data pattern. For the preferred embodiment, the data pattern "000111" will trigger a wide-write signal during the second "1" of the data pattern, thereby pulsing the laser during its normal off period.

In Fig. 89, clock waveform 7-301 clocks data waveform 7-303 through the laser pulse generator 7-14 for the data pattern "000111". As depicted by data 7-305 through 7-310, the laser pulse generator 7-14 generates a pulse waveform 7-312 with pulses 7-314, 7-315, and 7-316 when data waveform 7-303 is a "1". During the second "1" of this data pattern, the laser pulse generator 7-14 will turn on for an increase power waveform 7-318 and generate a pulse 7-320. An output laser pulse waveform 7-322 results from the OR of pulse 7-312 and the increase power waveform 7-318 that creates laser pulses 7-323, 7-324, and 7-325. Under normal operations, laser pulse 7-324 would be off during the first half of the clock period. Under this particular data pattern,

however, keeping the laser on for the laser pulses 7-323 and 7-324, effectively increases the power fifty percent during this time period.

In Fig. 90, an amplitude asymmetry correction circuit 7-291 generates a write-wide pulse 7-292 (corresponds to increase power waveform 7-318 in Fig. 89), which will be OR'ed with the laser pulse output from the delay circuit 7-269 (corresponds to pulse waveform 7-312 in Fig. 89) in laser pulse OR gate resulting in the output laser pulse waveform 7-322. The data pattern monitor 7-248 operates as shown in Fig. 88. The Q outputs WD2, WD3, WD4, WD5, WD6, and WD7 of data sequence D flip-flops 7-251 through 7-256, respectively, are 5 inputted into the amplitude asymmetry correction circuit 7-291, where the outputs WD5, WD6, and WD7 of data sequence D flip-flops 7-254, 7-255, and 7-256, respectively, are inverted in data inverters 7-293, 7-294, and 7-295, respectively. The outputs of data inverters 7-293, 7-294, and 7-295 and data sequence D flip-flops 7-251, 7-252, and 7-253 are AND'ed in a detect AND gate 7-296. The output of detect AND gate 7-296 indicates a detected pattern form "000111", which will be clocked out of a write-wide D flip-flop 7-297 at the next clock 7-301.

The waveform output of the optical reader 7-20 will be degraded as a function of frequency and data pattern. Amplitude and timing can be enhanced by processing the signal through the waveform processor 7-22. The asymmetry of the rise and fall times of an isolated pulse can be improved by summing an equalized, differentiated signal with its derivative. In Fig. 91, a magneto-optical signal 7-327 is differentiated by a differential amplifier 7-329. The differentiated signal is inputted into an equalizer 7-331, where it is equalized by 5 dB in the preferred embodiment, and the amplitude is equalized as a function of frequency. The derivative of the equalized signal is taken by a derivative processor 7-333 and summed with the equalized signal in an adder 7-335. The output of the adder 7-335 is the read signal 7-337.

Fig. 92 shows the timing diagram for the dynamic threshold circuit of Fig. 93. The read signal 7-337 will contain an overshoot produced by the pulse slimming. Because this overshoot is predictable, the threshold for the read circuitry can be increased during the overshoot to prevent false data reads during positive peaks 7-339, 7-340, 7-341, and 7-342, and during negative peaks 7-343, 7-344, and 7-345 of read signal 7-337. A threshold waveform 7-348 is switched high during positive peaks. Threshold waveforms 7-349, 7-350, and 7-351 are high during positive peaks 7-339, 7-340, and

7-341, respectively. Threshold waveforms 7-352, 7-353, and 7-354 are low during negative peaks 7-343, 7-344, and 7-345, respectively. Each peak, whether positive or negative, of the read signal 7-337 generates peak waveform 7-356, which is a short clocking pulse that occurs shortly after the read signal 7-337 peaks. Peaks 7-339, 7-343, 7-340, 7-344, 7-341, 7-345, and 7-342 of the read signal 7-337 generate peak waveforms 7-358 through 7-364, respectively.

As shown in Fig. 93, threshold waveform 7-348 is inputted into the D port of a threshold delay D flip-flop 7-366. The peak waveform 7-356 clocks threshold waveform 7-348 through the flip-flop 7-366. A delayed threshold waveform 7-368 is the Q output of threshold delay D flip-flop 7-366, which is exclusively OR'ed with threshold waveform 7-348 in a threshold-exclusive OR gate 7-370. An EXOR signal 7-372 is the output of threshold-exclusive OR gate 7-370. The EXOR signal 7-372 has twice the frequency of the original threshold waveform 7-348. The EXOR signal 7-372 is inputted into the D port of an EXOR D flip-flop 7-374, where it is clocked at a read clock 7-375. An F1 waveform 7-376 is the Q output of the EXOR D flip-flop 7-374. Read clock waveform 7-375 has a leading edge during high pulses of the EXOR signal 7-372, except when the EXOR signal 7-372 is low for more than one read clock waveform 7-375. Thus, the F1 waveform 7-376 is high except for the time between the first read clock 7-375 pulse after the EXOR signal 7-372 is low for more than one read clock 7-375 and the next EXOR signal 7-372 pulse.

The F1 waveform 7-376 is OR'ed with the EXOR signal 7-372 in an envelope OR gate 7-378. The output of envelope OR gate 7-378 is high except for the time from the first read clock 7-375 after the EXOR signal 7-372 has been low for more than one clock period until the signal 7-372 goes high again. The output of envelope OR gate 7-378 is clocked through the D input of an envelope D flip-flop 7-379, which is clocked by the read clock 7-375. The Q output of the envelope D flip-flop 7-379 is an F2 waveform 7-381. The F2 waveform 7-381 is high except from the second read clock 7-375 period after the EXOR signal 7-372 goes low until the next read clock 7-375 clocks a high for the EXOR signal 7-372. The F2 waveform 7-381 is inverted through an F2 inverter 7-383 and NOR'ed with the EXOR signal 7-372 in a dynamic threshold NOR gate 7-385 to produce a dynamic threshold waveform 7-387. The dynamic threshold waveform 7-387 is high any time the EXOR signal 7-372 is low, except when the F2 waveform

7-381 is low. Thus, the dynamic threshold waveform 7-387 has an on-time less than a half read clock 7-375 period except when the EXOR signal 7-372 is low on the next read clock 7-375 period. For this exception, the dynamic threshold waveform 7-387 stays high from the end of the EXOR signal 7-372 until the second read clock 7-375 pulse.

The dynamic threshold waveform 7-387 is used to forward or reverse bias a biasing diode 7-389. When dynamic threshold 7-387 is high, the biasing diode 7-389 is reverse biased. Conversely, when the dynamic threshold waveform 7-387 is low, the biasing diode 7-389 is forward biased.

When the dynamic threshold waveform 7-387 forward biases the biasing diode 7-389 (i.e., is low), the potential of a filter bias signal 7-390 is higher by the junction voltage of the biasing diode 7-389. This potential is 0.6 volts for standard devices. The 5-volt supply voltage drops across a limiting resistor 7-393 to the potential of the filter bias signal 7-390, because the voltage across a charging capacitor 7-394 is the difference between the filter bias signal 7-390 and ground. The charging capacitor 7-394 charges up to this potential, which is also the base voltage of a transistor 7-395. This turns on the transistor 7-395, causing the voltage on the emitter of transistor 7-395 to be 1.4 volts. Because the emitters of the transistors 7-395 and 7-396 are connected, the emitter voltage of the transistor 7-396 is less than the 2.5-volt base voltage of the transistor 7-396. Accordingly, the transistor 7-396 is off so that the collector voltage across a collector resistor 7-397 produces an increase threshold waveform 7-399 which is 0 volts (ground). The increase threshold waveform 7-399 is the signal that increases the threshold of the read signal 7-377 detector during periods of overshoot.

When the dynamic threshold waveform 7-387 is high, the biasing diode 7-389 is reversed biased, thereby no longer taking the base of the transistor 7-395 to 6 volts. When the dynamic threshold waveform 7-387 goes high, the charging capacitor 7-394 starts charging, creating a potential at the base of the transistor 7-395 that will rise exponentially up to the supply voltage, 5 volts. As the filter bias signal 7-390 rises in voltage, the voltage at the emitter of the transistor 7-395 increases, which equally increases the emitter voltage of the transistor 7-396. When this emitter voltage exceeds the base voltage by the junction potential across the emitter-to-base junction of the transistor 7-396, the transistor 7-396 is turned on. Turning on the transistor 7-396 causes the increase threshold waveform 7-399 to go high.

Under normal operations, the dynamic threshold waveform 7-387 is pulsed as described above. During normal read signals, the dynamic threshold 7-387 is on for a period equivalent to the on-period of read clock 7-375. The charge time for the voltage across the charging capacitor 7-394 to exceed the base voltage of 2.5 volts is longer than this half clock period of time. Thus, under normal circumstances, the increase threshold waveform 7-399 remains low. During periods of overshoot, however, the dynamic threshold waveform 7-399 is on for a longer period of time, thereby allowing the charging capacitor 7-394 to charge to a voltage that exceeds 2.5 volts, thereby triggering the increase threshold waveform 7-399 to go high.

In Fig. 94, a host computer 7-410, which serves as a source and utilizer of digital data, is coupled by interface electronics 7-412 to a data bus 7-414. As host computer 7-410 processes data, and it needs to access external memory from time to time, a connection is established through interface electronics 7-412 to data bus 7-414. Data bus 7-414 is coupled to the input of a write encoder 7-416 and the input of a write encoder 7-418. Preferably, write encoder 7-416 encodes data from bus 7-414 in a low-density (i.e., ANSI) format; and write encoder 7-418 encodes data from data bus 7-414 in a higher density format. The Draft Proposal for 90MM Rewritable Optical Disc Cartridges for Information Interchange, dated January 1, 1991, which describes the ANSI format, is incorporated herein by reference. The outputs of write encoders 7-416 and 7-418 are coupled alternatively through a switch 7-422 to the write input of a magneto-optical read/write head 7-420. The read output of head 7-420 is coupled alternatively through a switch 7-424 to the inputs of a read decoder 7-426 and a read decoder 7-428. The read decoder 7-426 decodes data in the same format, i.e., ANSI, as write encoder 7-416; and read decoder 7-428 decodes data in the same format as write encoder 7-418. Preferably, the encoding and decoding technique disclosed above is employed to implement write encoder 7-418 and read decoder 7-428. The outputs of decoders 7-426 and 7-428 are connected to the data bus 7-414.

Responsive to a mode-selection signal, switch-control electronics 7-430 set the states of switches 7-422 and 7-424 into either a first mode or a second mode. In the first mode, the write encoder 7-418 and the read decoder 7-428 are connected between the data bus 7-414 and the read/write head 7-420. In the second mode, the write encoder 7-416 and the read decoder 7-426 are connected between data bus the 7-414

and the read/write head 7-420. The read/write head 7-420 reads encoded data from and writes encoded data to a 90 millimeter optical disc received by a replaceable optical disc drive 7-432, which is controlled by disk-drive electronics 7-434. The read/write head 7-420 is transported radially across the surface of the disc received by disc drive 7-432 by position-control electronics 7-436.

When a 90 millimeter disc in a high-density format is received by the disc drive 7-432, a mode-selection signal sets the system in the first mode. As a result, data from the host computer 7-410, to be stored on the disc, is organized by the interface electronics 7-412 and encoded by the write encoder 7-418. Data read from the disc is decoded by the read decoder 7-428, reorganized by the interface electronics 7-412, and transmitted to the host computer 7-410 for processing.

When a 90 millimeter disc in the low-density, ANSI format is received by the disc drive 7-432, a mode-selection signal sets the system in the second mode. As a result, data from host the computer 7-410, to be stored on the disc, is organized by interface electronics 7-412 and encoded by write encoder 7-416. Data read from the disc is decoded by the read decoder 7-426, reorganized by the interface electronics 7-412, and transmitted to the host computer 7-410 for processing.

Preferably, irrespective of the format used to store data, the mode-selection signal is stored on each and every disc in one format, e.g., the low-density, ANSI format, and the system defaults to the corresponding mode, e.g., the second mode. The mode-selection signal could be recorded in the control track zone in ANSI format. When a disc is installed in the disc drive 7-432, the disk-drive electronics 7-434 initially controls position-control electronics 7-436 to read the area of the disc on which the mode-selection signal is stored. The read decoder 7-426 reproduces the mode-selection signal, which is applied to switch-control electronics 7-430. If the installed disc has the low-density, ANSI format, then the system remains in the second mode when the mode-selection signal is read. If the installed disc has the high-density format, then the system switches to the first mode when the mode-selection signal is read.

In certain cases, it may be desirable to modify the laser for the first and second modes. For example, different laser frequencies could be used or different laser-focusing lens systems could be used for the different modes. In such case, the

mode-selection signal is also coupled to the read/write head 7-420 to control the conversion between frequencies or optical-lens focusing systems, as the case may be.

It is preferable to organize the data stored in both formats to have the same number of bytes per sector, i.e., in the case of ANSI, 512 bytes. In such case, the same interface electronics 7-412 can be used to organize the data stored on and retrieved from the disks in both formats.

In accordance with the invention, the same read/write head 7-420, position-control electronics 7-436, optical disc drive 7-432, disk-drive electronics 7-434, interface electronics 7-412, and data bus 7-414 can be employed to store data on and retrieve data from optical disks in different formats. As a result, downward compatibility from higher-density formats that are being developed as the state of the art advances, to the industry standard ANSI format can be realized using the same equipment.

With reference now to Figs. 95, 96, and 98, the preferred format of the high-density optical disc will now be described. There are ten thousand tracks, namely tracks 0 to 9999, arranged in 21 zones. Each track is divided into a plurality of sectors. There are a different number of sectors in each zone, increasing in number moving outwardly on the disc. The frequency of the data recorded in each zone is also different, increasing in frequency moving outwardly on the disc. (See Figs. 95 and 98 for a description of the number of tracks in each zone, the number of sectors in each zone, and the recording frequency in each zone.) In contrast to the low-density disks, the format markings are erasably recorded on the disc using the same recording technique as is used for the data, preferably magneto-optical (MO). These format markings comprise sector fields, header fields for each sector, and control tracks. In contrast to the header fields and the data, the sector fields for all the zones are recorded at the same frequency. A description of the preferred embodiment of the sector format follows.

Sector Layout

A sector comprises a sector mark, a header, and a recording field in which 512 user data bytes can be recorded. The recording field can be empty or user-written. The total length of a sector is 721 bytes (one byte is equivalent to nine channel bits) of header and recording fields at a frequency that varies from zone to zone, plus 80 channel bits of sector mark at a fixed frequency, i.e., the same frequency for each zone.

Tolerances are taken up by the buffer, i.e., the last field of the sector. The length of the header field is 48 bytes. The length of the recording field is 673 bytes.

Sector Mark (SM)

The sector mark consists of a pattern that does not occur in data, and is intended to enable the drive to identify the start of the sector without recourse to a phase-locked loop. The sector marks are recorded with a fixed frequency of 11.6 MHz for all zones. The length of the sector mark is 80 channel bits. The following diagram shows the pattern in the NRZI format.

1111 1111 1100 0000
1111 1100 0000 0000
0000 1111 1100 0000
1111 1100 0000 1111
1111 1100 1001 0010

VFO Fields

There are four fields designated either, VFO1, one of two VFO2, or VFO3 to give the voltage-controlled oscillator of the phase locked loop of the read channel a signal on which to phase lock. The information in VFO fields, VFO1 and VF03 is identical in pattern and has the same length of 108 bits. The two fields designated VFO2 each have a length of 72 bits.

Address Mark (AM)

The address mark consists of a pattern that does not occur in data. The field is intended to give the disc drive the drive-byte synchronization for the following ID field. It has a length of 9 bits with the following pattern:

110000101

ID Fields

The three ID fields each contain the address of the sector, i.e., the track number and the sector number of the sector, and CRC (Cyclic Redundancy Check) bytes. Each field consists of five bytes with the following contents:

1st byte - Track MSByte
2nd byte - Track LSByte
3rd byte -
bit 7 and 6

00 - ID Field 0

01 - ID Field 1

10 - ID Field 2

11 - not allowed

bit 5 - zero.

bit 4 through bit 0 - binary sector number

4th and 5th bytes - CRC field

The CRC bytes contain CRC information computed over the first three bytes according to equations 1, 2, and 3 illustrated in the table of Fig. 99. With reference thereto, it is understood that the 16 check bits of the CRC of the ID field shall be computed over the first three bytes of this field. The generator polynomial is equation (1) of Fig. 99. The residual polynomial is defined by equation (2) wherein b_i denotes a bit of the first three bytes and $\overline{b}_i$ an inverted bit. Bit_{23} is the highest order bit of the first byte. The contents of the 16 check bits c_k of the CRC are defined by equation (3) of Fig. 99, wherein c_{15} is recorded in the highest order bit of the fourth byte in the ID field.

Postambles (PA)

The postamble fields are equal in length, both having 9 bits. There is a postamble following ID3 and a postamble following the data field. A postamble allows closure of the last byte of the preceding CRC or data field. The postambles (PA) have 9 bits of the following pattern:

10 00100 01

Gaps

GAP 1 is a field with a nominal length of 9 channel bits, and GAP 2 is of 54 channel bits. GAP 1 shall be zeroes and GAP 2 not specified. GAP 2 is the first field of the recording field, and gives the disc drive some time for processing after it has finished reading the header and before it has to write or read the VFO3 field.

Sync

The sync field allows the drive to obtain byte synchronization for the following data field. It has a length of 27 bits and is recorded with the bit pattern:

101000111 110110001 111000111

Data Field

The data field is used to record user data. It has a length of 639 bytes (one byte = 9 channel bits) and comprises:

512 bytes of user data;

4 bytes the contents of which are not specified by this standard and shall be ignored in interchange;

4 bytes of CRC parity;

80 bytes of ECC parity; and

39 bytes for resynchronization.

User Data Bytes

The user data bytes are at the disposal of the user for recording information.

CRC and ECC Bytes

The Cyclic Redundancy Check (CRC) bytes and Error Correction Code (ECC) bytes are used by the error detection and correction system to rectify erroneous data. The ECC is a Reed-Solomon code of degree 16.

Resync Bytes

The resync bytes enable a drive to regain byte synchronization after a large defect in the data field. It has a length of 9 bits with the following pattern:

100010001

Their content and location in the data field is as follows. The resync field is inserted between bytes A15n and A15n+I, where $I \leq n \leq 39$.

Buffer Field

The buffer field has a length of 108 channel bits.

The 8-bit bytes in the three address fields and in the data field, except for the resync bytes, are converted to channel bits on the disc according to Figs. 100A and 100B. All other fields in a sector are as defined above in terms of channel bits. The recording code used to record all data in the information regions on the disc is Group-Code (GCR 8/9).

In Fig. 97, the write data is decoded by a RLL 2,7 encoder/decoder (ENDEC) 7-502 for the low-capacity, 128 Mbyte (low-density) mode. A GCR encoder/decoder (ENDEC) 7-504 is used in the high-capacity, 256 Mbyte (high-density) mode. A write pulse generator 7-506 produces a pulse width of 86 nsec with write power level varying

from 7.0 mW to 8.5 mW from the inner to the outer zones for the low-capacity mode. For the high-capacity mode, a write pulse generator 7-507 decreases the pulse width to 28 nsec, but the write power is increased to a level that varies from 9.0 mW to 10.0 mW from the inner to the outer zones. A select circuit 7-509 alternatively couples the pulse generator 7-506 or 7-507 to the laser diode driver of the magneto-optical read/write head depending upon the state of an applied control bit HC. Control bit HC equals zero in the low-capacity mode and equals one in the high-capacity mode. The appropriate output is selected to drive the laser diode driver. The write clock is generated by the frequency synthesizer in a data separator 7-508. The frequency is set to 11.6 MHz for the low-capacity mode and 10.59 MHz to 15.95 MHz from inner to outer zones for the high-capacity mode.

During the playback, a preamplifier 7-510, which is fed by photo diodes in the magneto-optical read/write head, can be selected for the sum mode (A+B) or the difference mode (A-B). For the sum mode, the preamplifier 7-510 reads the reflectance change due to the preformatted pits. These pits are stamped in the RLL 2,7 code and identify the sector mark, VFO fields, and track sector data. There are 512 user bytes of data recorded in each preformatted sector. There are 10,000 tracks, segmented into 25 sectors, which totals 128 Mbytes of data for the low-capacity mode. In the high-capacity mode, the disc is formatted with GCR code. There are 40 sectors at the inner zone (i.e., zone 1), and the number of sectors gradually increases to 60 sectors at the outer zone (i.e., zone 21). Again, 512 bytes of user data are recorded in each sector, which totals 256 Mbytes of data.

The writing of data in the RLL 2,7 mode is also pit-type recording. When these pits are read in the difference mode (A-B), the waveform appearing at the output of the preamplifier is identical to the preformatted pits when read in the sum mode (A+B). This signal only needs to be differentiated once by a dv/dt amplifier 7-512. A pulse corresponding to approximately the center of each pit is generated by digitizing the nominal output (VNOM P, VNOM N) from the programmable filter. The filter cutoff frequency is set to 5.4 MHz for the low-capacity mode responsive to the HC control bit. The filtered signal is digitized and passed through a deglitching logic circuit 7-518. The resulting signal called HYSTOUT (Hysteresis) is fed to the data separator 7-508. The signal is also coupled to the system controller to detect the sector marks. Responsive

to the HC control bit, the PLO divider of the frequency synthesizer in data separator 7-508 is set to 3, and the synthesizer is set to 11.6 MHz. The sync data is identical to the original data encoded by the RLL ENDEC 7-502. This is coupled to the RLL ENDEC 7-502 for decoding purposes and then to the data bus to be utilized.

In the high-capacity mode, the difference mode of the preamplifier 7-510 is selected. The playback signal appearing at the output of the preamplifier is in the NRZ (non-return-to-zero) form and requires detection of both edges. This is accomplished by double differentiation by the dv/dt amplifier and the differentiator in a programmable filter chip 7-514 after passage through a AGC amplifier 7-516. The differentiator, a high-frequency filter cutoff, and an equalizer on the chip 7-514 are activated by the HC control bit. The filter cutoff is adjusted depending upon zone-identification bits applied to the chip 7-514. (The differentiator and equalizer in the chip 7-514 are not used in the low-capacity mode.) The output signal (VDIFF P, VDIFF N) from the chip 7-514 is digitized and deglitched in the deglitching logic circuit 7-518. This circuit suppresses low signal level noise. The threshold level is set by a HYST control signal applied to the deglitching logic circuit 7-518. The DATA P output is fed to the data separator. Responsive to the HC control bit, the PLO divider is set to 2, and the synthesizer is set to the appropriate frequency as determined by the applied zone number bits from the system controller. The cutoff frequency of the programmable filter is also dependent on the zone bits, but only in the high-capacity mode. The sync data is identical to the original GCR encoded data. This is coupled to the GCR ENDEC 7-504 for decoding purposes and then to the data bus to be utilized. The entire read function is shared between the low-capacity and high-capacity modes.

The RLL 2,7 ENDEC 7-502 and the write pulse generator 7-506 are represented by the write encoder 7-416 and the read decoder 7-426 in Fig. 94. The GCR ENDEC 7-504 and the write pulse generator 7-507 are represented by the write encoder 7-418 and the read decoder 7-428 in Fig. 94. The select circuit 7-509 is represented by the switch 7-422 in Fig. 94. The internal control of the ENDECs 7-502 and 7-504, which alternately activates them depending on the HC control bit, is represented by the switch 7-424 in Fig. 94. The preamplifier 7-510, amplifier 7-512, AGC amplifier 7-516, chip 7-514, deglitching logic circuit 7-518, and data separator 7-508 are employed in both the

high-capacity and low-capacity modes. Thus, they are represented in part by both the read decoder 7-426 and the read decoder 7-428.

Mechanical Isolator

Referring now to Figs. 120 and 121, there is shown two embodiments of a mechanical isolator, separately referenced 9-10 and 9-12, respectively, according to the present invention. The mechanical isolators 9-10 and 9-12 are ideally suited for use in an optical drive such as a compact disc, laser disc, or magneto-optical player/recorder. The mechanical isolators 9-10 and 9-12, however, will also be useful in any similar system. Two embodiments of the invention are envisioned -- the first embodiment of the mechanical isolator 9-10 is shown in Fig. 120 and the second embodiment, mechanical isolator 9-12, is shown in Fig. 121. The mechanical isolator 9-12 has compression ribs 9-14. These function to absorb compression of the invention. The mechanical isolators 9-10 and 9-12 may be fitted to the end of a pole piece assembly 9-16. A crash stop 9-18 is designed to prevent a moving, optical carriage from crashing into solid metal. A shoe 9-20 fits over the end of the pole piece 9-16 and assists in providing vibration isolation and helps accommodate thermal expansion.

The mechanical isolators 9-10 and 9-12 should be made of a material that exhibits minimum creep. As such a silicon rubber, polyurethane or injection molded plastic may be used. In this case the material MS40G14H-4RED was selected.

As would be apparent to one of skill in the art, the mechanical isolators 9-10 and 9-12 are alternate embodiments suitable for use in specific applications since they generally each include first means for mitigating the effects of undesired mechanical forces upon a movable disc drive component and second means for supporting the first means between the component and a source of the undesired mechanical forces, whereby mechanical isolation of the component is thereby provided. In each isolator 9-10 and 9-12 the first means is implemented as a shock absorbing bumper or the crash stop 9-18 and may include at least one compression rib compression rib 9-14. The plurality of compression ribs 9-14 illustrated in Fig. 121 are provided for absorbing compressive forces. The second means preferably includes a housing as illustrated in Figs. 120 and 121, the housing being adapted to fit to the end of a pole piece assembly 9-16. The first means is comprised of a material that exhibits minimum creep and preferably selected from the group comprising silicon rubber, polyurethane and injection

molded plastics. The first means of the mechanical isolators 9-10 and 9-12 provide shock absorption and mechanical isolation in the form of a crash stop 9-18 adapted to prevent a moveable carriage from impacting a solid surface.

Firmware

Appendix A, attached hereto and incorporated herein by reference, contains the hexadecimal executable code contained in the firmware. The following sections provide a detailed functional and structural definition of the hexadecimal code contained in Appendix A. As described in the following sections in more detail, the 80C188 firmware handles the SCSI interface to and from the host. The firmware contains the necessary code to be able to initiate and complete reads, writes, and seeks through an interface with the digital signal processor, and also contains a drive command module which interfaces directly with many of the hardware features.

The firmware includes a kernel and a SCSI monitor task module. The kernel and SCSI monitor task module receive SCSI commands from the host. For functions not requiring media access, the SCSI monitor task module either performs the functions or directs a low-level task module to perform the functions. For all other functions, the SCSI monitor forwards the function request to a drive task layer for execution, and awaits a response from the drive task layer to indicate that the function has been completed.

The drive task layer, in turn, directs any of several modules to perform the requested function. These modules include the drive command module, the drive attention module and the format module. These modules interact with each other, with a defect management module, with an exception handling module, and with a digital signal processor to perform these functions.

The drive command module directs the digital signal processor, or directs the hardware devices themselves, to control the movement of the hardware devices. The format module directs the drive command module to format the media. Any defects in the media discovered during this process are stored in the defect management module, which may be located in random access memory.

Feedback from the digital signal processor and the hardware devices occurs in the form of command complete signals and interrupts passed to the drive attention module.

In addition, the drive attention module allows other modules to register attentions, so that when an interrupt occurs, the registering module receives notice of the interrupt.

When a drive attention interrupt signals a fault or exception, the drive attention module retrieves from the drive command module information concerning the status of the media and drive, and the exception handler module uses this information to attempt to recover from the fault. Without passing a failure status back to the drive task layer and SCSI interface with the host, the exception handling module may direct the drive control module or format module to attempt the function again. The drive attention module may direct many retries before aborting the function and returning a failure status to the drive task layer. This exception handling process may occur for any drive function, such as seek, eject, magnetic bias, and temperature. In addition to the failure status, a sense code qualifier is passed to the drive task layer. The sense code qualifier specifies exactly which failure occurred, allowing the SCSI interface to specify that information to the host. It will be apparent to one skilled in the art that the exception handling module may be contained within the drive attention module.

In operation with respect to magnetic bias, the bias magnet is turned on, and the bias is monitored through a serial analog-to-digital converter. The bias is monitored until it comes within the desired range, or until 5 milliseconds have passed, in which case a failure status is passed to the drive task layer.

In operation, the temperature of the main board is monitored. Characteristics of the media may change as the temperature increases. At high information densities, a constant-intensity writing beam might cause overlap in the information recorded as temperature changes and media characteristics change. Therefore, by monitoring the ambient temperature within the housing, the firmware can adjust the power to the writing beam in response to the temperature-sensitive characteristics of the media, or can perform a recalibration.

Characteristics of the writing beam are also changed in response to position on the media. The media is divided into concentric zones. The number of zones is determined by the density of the information recorded on the media. For double density recording, the media is divided into 16 zones. For quadruple density recording, the media is divided into either 32 or 34 zones. The power of the writing beam differs approximately linearly between zones.

Additionally, characteristics of the writing beam and reading beam change in response to the media itself. Different media made by different manufacturers may have different optical characteristics. When the media is at the desired rotational speed, an identification code is read from the media. Optical characteristic information concerning the media is loaded into non-volatile random access memory (NVRAM) at the time the drive is manufactured, and the information corresponding to the present media is loaded into the digital signal processor when the identification code is read. If the identification code is unreadable, the power of the reading beam is set to a low power, and is slowly raised until the identification code becomes readable.

In monitoring and changing the power of the reading beam or writing beam, a plurality of digital-to-analog converters may be used. The monitoring and changing of the power may include one or more of the digital-to-analog converters.

The present invention also includes a method of changing a rotational rate of a storage medium from an initial rotational rate to a desired rotational rate having a lower acceptable limit and an upper acceptable limit This method includes the steps of applying a force to the storage medium to change the rotational rate of the storage medium from the initial rotational rate toward a first upper limit, the first upper limit being between the initial rotational rate and the desired rotational rate, while performing the step of applying, generating a first signal when the rotational rate of the storage medium exceeds the first upper limit, while performing the step of applying and after the step of generating the first signal, generating a second signal when the rotational rate of the storage medium exceeds the lower acceptable limit, and thereafter terminating the application of the force to the storage medium. In one specific embodiment of this method, the step of terminating may include the steps of setting a second upper limit at the upper acceptable limit of the desired rotational rate, setting a lower limit at the lower acceptable limit of the desired rotational rate, and terminating the application of the force to the storage medium when the rotational rate of the storage medium is greater than the lower limit. The upper acceptable limit of the desired rotational rate is preferably greater than the lower acceptable limit of the desired rotational rate. In addition, the upper acceptable limit is one-half of one percent greater than the desired rotational rate and the lower acceptable limit is one-half of one percent less than the desired rotational rate.

An alternate method according to this invention includes changing a rotational rate of a storage medium from an initial rotational rate to a desired rotational rate having a first acceptable limit and a second acceptable limit. This method includes the steps of applying a force to the storage medium to change the rotational rate of the storage medium from the initial rotational rate toward a first intermediate limit, the first intermediate limit being between the initial rotational rate and the desired rotational rate, while performing the step of applying, generating a first signal when the rotational rate of the storage medium passes across the first intermediate limit, while performing the step of applying and after the step of generating the first signal, generating a second signal when the rotational rate of the storage medium passes across the first acceptable limit, and thereafter terminating the application of the force to the storage medium. In one specific implementation of this method, the step of terminating further includes the steps of setting a first operational limit at the first acceptable limit of the desired rotational rate, setting a second operational limit at the second acceptable limit of the desired rotational rate, and terminating the application of the force to the storage medium when the rotational rate of the storage medium is between the operational limits. The difference between the first operational limit and the desired rotational rate is preferably one-half of one percent of the desired rotational rate, and the difference between the second operational limit and the desired rotational rate is also preferably one-half of one percent of the desired rotational rate.

When the spindle motor is spinning up from a rest or slower rotational state, the drive command module writes into the digital signal processor an upper limit for rotational speed. This upper limit is slower than the desired speed. When the spindle speed exceeds this upper limit, the digital signal processor generates an interrupt. Then, the drive command module writes another upper limit into the digital signal processor. This new upper limit is the lower acceptable limit for normal operation. When the spindle speed exceeds this new upper limit, a final upper limit and lower limit is written into the digital signal processor. These final limits define the operational range for spindle speed, and may be on the order of 1% apart.

At the initial spinning up process, the media is first spun to the lowest speed for normal operation of the drive, according to the above-described process. At this point, an identification code is read. If the identification code is unreadable, the media is spun

at the next highest speed for normal operation, and the identification code is attempted to be read again. This process is repeated until either the identification code is unreadable at the highest speed for normal operation, in which case a failure status occurs, or the identification code is successfully read.

There may be several types of memory storage in the drive. First, there may be flash electrically erasable programmable read only memory (EEPROM). Implementations of the invention may include 256 kilobytes of flash EEPROM. Second, there may be static random access memory, and implementations of the invention may include 256 kilobytes of static random access memory. Finally, there may be NVRAM, and implementations of the invention may include 2 kilobytes of NVRAM.

Portions of the information in the following sections, Disc Drive SCSI Firmware, Drive Exceptions, Read Ahead Cache, and Disc Drive Firmware Architecture, are represented as "TBD", indicating either that the implementation of the modules had prior hereto not been determined, that certain parameters related to optimization or environment, but not critical to function or operation, had yet to be agreed upon, or that certain modules became unnecessary based on the implementation of other modules as represented in the executable code in Appendix A, and as described in the identified following sections. Each of the "TBD" matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed. The modules whose implementation had prior hereto not been determined may be implemented in the following manner.

The defect management module will create a defect table while the media is being formatted, and will write the defect table to a portion of the media. When a previously-formatted media is loaded into the drive, the defect management module will read the defect table from the media and load it into the memory. The defect management module can then consult the defect table to ensure that the digital signal processor or the hardware devices directly do not attempt to access a defective portion of the media.

The commands SEEK_COMP_ON and SEEK_COMP_OFF activate and deactivate, respectively, an algorithm which optimizes seek time to a certain point on the media. The commands may invoke the algorithm directly, may set a flag indicating to another module to invoke the algorithm, or may generate an interrupt directing another

module to invoke the algorithm. In addition, other implementations will be apparent to one skilled in the art.

The commands NORMAL_PLL_BWIDTH, HGH_PLL_BWIDTH, AND VHGH_PLL_BWIDTH may read values from memory and store values into the read chip memory. In addition, the commands may calculate values and store values into the read chip memory.

The Write Power Calibration for 2x and Write Power Calibration for 4x may have a similar implementation. During manufacturing, values from a digital-to-analog converter control the write power for the radiant energy source. The write power may be measured for different digital-to-analog converter values, and sense values may be determined. These sense values may be stored in the memory of the drive. During use of the drive, values from a digital-to-analog converter control the write power for the radiant energy source, and sense values may be measured. These sense values are compared against the stored sense values until they are equal within tolerable limits. This process may use more than one digital-to-analog converter. In addition, the process may also calibrate the write power according to temperature, as described above.

Recalibration is performed as described above based on temperature, media type, and other factors. Additionally, recalibration of the servos may be performed by directing the digital signal processor to set the servos based on certain variable factors.

Manufacturing requirements dictate that the information described above that is determined at time of manufacture of the drive be recorded and stored in memory associated with the drive.

The Front Panel Eject Request function generates a drive attention interrupt. The Front Panel Eject Request function may determine the drive status and, based on that information, allow the current command to complete or stop that command.

Firmware performance issues are optimization issues. When a command is queued within the firmware, modules within the firmware will determine certain criteria, including time to complete the current command, distance between the current position of the carriage and the position required by the queued command, rotational velocity of the media, and circumferential position of the carriage with respect to the position required by the queued command. From this and other information, the firmware

determines the time to move the carriage to the position required by the queued command and the circumferential position of the carriage at that time with respect to the position required by the queued command. If the carriage would be required to wait any time for the rotation of the media to bring the position required by the queued command around to the carriage, then the firmware will direct the drive to continue processing the current command until there would be no or almost no wait time after moving the carriage.

The SCSI Eject Command may be disabled by an option switch. The option switch may be implemented in the form of DIP switches.

The External ENDEC Test and the Glue Logic Test, performed as part of the Power-On Self Test, comprise reading and writing information under certain conditions to ensure proper functioning of the External ENDEC and the Glue Logic.

The following sections describe the system firmware in further detail. As of the filing date of this application, this specification describes the current best mode of the present invention which is considered sufficiently enabled and operable. As would be understood by one skilled in the art, the following sections include certain limited areas identified as "TBD" indicating where the above-discussed implementations would apply.

Disc Drive SCSI Firmware

The purpose of the following sections is to describe the functional characteristics of the SCSI firmware for the Jupiter-I 5.25 inch MO disk drive. The SCSI firmware is the portion of the controller code which is executed by the 80C188 CPU. This discussion is not intended to describe the functional characteristics of the controller code which is executed by the DSP.

The firmware requirements which have been used to develop this aspect of the present invention have been included in this discussion and can be found below under the section heading, A. Firmware Requirements. The following referenced documents are incorporated herein by reference, 1) Cirrus Logic CL-SM330; Optical Disk ENDEC/ECC, April 1991, 2) Cirrus Logic CL-SM331, SCSI Optical Disk Controller, April 1991, 3) MOST Manufacturing, Inc., 1,7 ENDEC/FORMATTER, August 2, 1994, 4) MOST Manufacturing, Inc., Jupiter-I Product Specification, September 15, 1994, and 5) MOST Manufacturing, Inc., 80C188/TMS320C5X Communications, Rev. XH, August 25, 1994.

SCSI SUPPORT: SCSI Commands: The SCSI Commands to be supported by the Jupiter firmware are listed in Tables 1-5 below. In addition to listing the command set supported, the Tables 1-5 identify which commands are not valid when issued to the drive when 1x, CCW, O-ROM or P-ROM media is installed. The column for P-ROM indicates commands issued for blocks which are in a read only group of the P-ROM media.

Table 1 - Group 0, 6-Byte Commands

Code	Command Name	1x	CCW	P-ROM
00h	Test Unit Ready			
01h	Rezero Unit			
03h	Request Sense			
04h	Format Unit	No	TBD	TBD
07h	Reassign Block	No	TBD	No
08h	Read			
09h	Erase			
0Ah	Write	No		No
0Bh	Seek			
0Ch	Erase	No	No	No
12h	Inquiry			
15h	Mode Select			
16h	Reserve Unit			
17h	Release Unit			
1Ah	Mode Sense			
1Bh	Start Stop Unit			
1Ch	Receive Diagnostics			
1Dh	Send Diagnostics			
1Eh	Prevent Allow Medium Removal			

Table 2 - Group 1, 10-Byte Commands

Code	Command Name	1x	CCW	P-ROM
25h	Read Capacity			
28h	Read			
2Ah	Write	No		No
2Bh	Seek			

2Ch	Erase	No	No	No
2Eh	Write and Verify	No		No
2Fh	Verify			
35h	Synchronize Cache	No		No
36h	Lock Unlock Cache			
37h	Read Defect Data			
3Bh	Write Buffer			
3Ch	Read Buffer			
3Eh	Read Long			
3Fh	Write Long	No		No

Table 3 - Group 2, 10-Byte Commands

Code	Command Name	1x	CCW	P-ROM
40h	Change Definition			
41h	Write Same	No		No
55h	Mode Select			
5Ah	Mode Sense			

Table 4 - Group 5, 12-Byte Commands

Code	Command Name	1x	CCW	P-ROM
A8h	Read			
AAh	Write	No		No
ACh	Erase	No	No	No
AEh	Write and Verify	No		No
AFh	Verify			
B7h	Read Defect Data			

Table 5 - Group 7, Vendor Unique Commands

Code	Command Name	1x	CCW	P-ROM
E0h	Peek/Poke CPU memory			
E1h	Read Drive Attention Count			
E5h	Read Trace Buffer			
E7h	Read/Write ESDI			

E8h	Read Special			
EAh	Write Special	No		No
ECh	Erase Absolute	No	No	No
FAh	Manufacturing Test			
TBD	Clean Optics			

A complete description of the SCSI command set to be supported, is provided in the Jupiter-I Product Specification, Section 9, SCSI Support, as incorporated herein by reference. It is important to note that the Log Select and Log Sense commands will not be supported by the Jupiter firmware.

SCSI Messages: The SCSI messages which will be supported by the Jupiter firmware are listed below in Table 6.

Table 6 - SCSI Messages Supported

Code	Message Name
00h	Command Complete
01h	Extended Messages
	00h - Modify Data Pointer
	01h - Synchronous Data Transfer Request
02h	Save Data Pointer
03h	Restore Pointers
04h	Disconnect
05h	Initiator Detected Error
06h	Abort
07h	Message Reject
08h	No Operation
09h	Message Parity Error
0Ah	Linked Command Complete
0Bh	Linked Command Complete (With Flag)
0Ch	Bus Device Reset
0Eh	Clear Queue

80h+	Identify

It is important to note that the Terminate I/O Message will not be supported.

SCSI Mode Pages: The Mode Pages to be supported by the Jupiter firmware are listed below in Table 7.

Table 7 - Mode Pages Supported

Code	Message Name
00h	Unit Attention Parameters
01h	Read/Write Error Recovery Parameters
02h	Disconnect/Reconnect Control Parameters
07h	Verify Error Recovery Parameters
08h	Caching Parameters Page
0Bh	Medium Type Supported Parameters
0Ch	Notch and Partition Parameters
30h	Vendor Unique Parameters
3Bh	MOST Engineering Features Control
3Ch	Error Retry Limit Parameters
3Dh	Vendor Unique Inquiry Data Page
3Eh	Vendor Unique Manufacturing Data Page

Saved pages will not be supported by the Jupiter firmware. It is also important to note that Mode Pages 20h and 21h will not be supported.

Reset: A reset will be performed by the drive in response to a SCSI Bus Reset, an Autochanger Reset, or a 12V power failure. The functions performed by the drive for each of these types of resets are described in the subsections below.

SCSI Bus Reset: When the SCSI Bus RESET signal is asserted, an INT3 to the 80C188 is produced. The use of an INT3 allows the drive the flexibility of responding to a reset as a Hard or Soft Reset. However, the use of an INT3 assumes that the interrupt vector for the INT3 is still valid. If the firmware has inadvertently overwritten

that entry in the Interrupt Vector Table (IVT), then the reset will not recover the drive. The only option the user will have will be to power the drive off and back on.

The INT3 Interrupt Service Routine (ISR) must determine from an option switch whether a Hard or Soft reset must be performed. If the Hard Reset option switch is enabled, a Hard Reset will be performed. If the Hard Reset option switch is disabled, a Soft Reset will be performed.

Hard SCSI Reset: When a SCSI Bus Reset is detected by the drive and the Hard Reset option switch is enabled (indicating a Hard Reset), the drive, 1) will not attempt to process any command which may currently be in progress, 2) will not write any data which may be in the Buffer RAM (i.e., in the Write Cache) to the media, 3) will not preserve any SCSI device reservations, 4) will remove all pending commands from the queue, 5) will perform the steps in the following section, Powerup Sequence, for a Hard Reset, 6) will set the values for each of the Mode Pages to their default values, and 7) will set the unit attention condition.

Without a hardware reset line to reset the various chips on the board, the firmware must use the software reset feature of the chips which possess such a feature. The firmware must also initialize the registers as described on page 36 of the Cirrus Logic SM330 manual and on page 47 of the Cirrus Logic SM331 manual to account for the differences between a hard and soft reset of the chips.

Soft SCSI Reset: When SCSI Bus Reset is detected by the drive and the Hard Reset option switch is disabled (indicating a Soft Reset), the drive, 1) will not attempt to process any command which may currently be in progress, 2) will not write any data which may be in the Buffer RAM (i.e., in the Write Cache) to the media, 3) will not preserve any SCSI device reservations, 4) will remove all pending commands from the queue, 5) will perform the steps in the following section, Powerup Sequence, for a Soft Reset, 6) will set the values for each of the Mode Pages to their default values, and 7) will set the unit attention condition.

Autochanger Reset: If the Autochanger asserted Autochanger Reset during the power-up sequence, the drive, a) must ignore Autochanger EJECT, and b) must wait for Autochanger RESET to be deasserted before performing the SCSI initialization. The Autochanger may assert Autochanger RESET at any time to change the drive's SCSI ID.

12V Power Failure: When the 12V power fails below (TBD), a hardware reset is generated to the 80C188, SM330, SM331, and the RLL(1,7) External ENDEC. Once the ENDEC is reset, it will drive Servo Reset to its initialized state which is asserted which in turn will reset the DSP and the servos.

Unclearable Conditions: When a severe error (listed in Table 8 below) is detected by the drive, an unclearable condition is declared to exist. An unclearable condition forces the drive to respond to a Request Sense Command with a Sense Key of HARDWARE ERROR, an Error Code of INTERNAL CONTROLLER ERROR, and an Additional Sense Code Qualifier specific to the error. A Send Diagnostic SCSI command may remove the source of the hardware error and clear the unclearable condition. If the Send Diagnostic command is not successful in clearing the hardware error, a SCSI Bus reset will be required to clear the unclearable condition. A SCSI Bus Reset received while the drive has an unclearable condition will force the drive to perform a Hard Reset and perform its full set of diagnostics. In this manner, any serious error discovered while performing an operation will first abort the current operation and then preclude the drive from attempting to alter the media during subsequent operations.

Table 8 - Severe Errors

Symbolic Name	Description
ASCQ_NO_TCS_AVAIL	No message blocks available
ASCQ_CZ_RD_ERR	Error while reading control tracks/SFP
ASCQ_UNDEF_UNIT_ATTN	Undefined Unit Attention
ASCQ_CPU_FAILURE	CPU failure
ASCQ_BUFF_RAM_FAILURE	Buffer RAM failure
ASCQ_SM330_FAILURE	Cirrus Logic SM330 failure
ASCQ_SM331_FAILURE	Cirrus Logic SM331 failure
ASCQ_WCS1_FAILURE	Cirrus Logic Write Control Store test #1 failure
ASCQ_WCS2_FAILURE	Cirrus Logic Write Control Store test #2 failure
ASCQ_EXT_ENDEC_FAILURE	RLL(1,7) ENDEC failure
ASCQ_UNDEF_REALLOC	Undefined reallocation
ASCQ_LOAD_SEQ_FAILURE	Failure while loading Format Sequencer
ASCQ_TOO_MANY_ATTNS	Too many Drive Attentions
ASCQ_DSP_CMD_CHECKSUM	DSP command checksum failure
ASCQ_LASER_FAIL	Laser power control failure

ASCQ_HRDWR_FAIL	Hardware failure
ASCQ_UNKNOWN_READ_ERROR	Unknown interrupt while reading
ASCQ_UNKNOWN_WRITE_ERROR	Unknown interrupt while writing
ASCQ_DRV_INIT_FAIL	Drive initialization failed
ASCQ_INV_OP	Invalid DSP command
ASCQ_RELOC_LIMIT_RCHD	Too many reallocations attempted for same sector
ASCQ_DRV_SELECT_FAIL	Drive selection failure
ASCQ_MAGNET_FAILED	Bias magnet failure

Multi-Initiator Support: Support for multiple initiators will be provided by the Jupiter firmware. A queue for incoming requests will be maintained by the firmware to order requests from multiple initiators for disconnecting commands. Tagged Queued commands will not be supported initially. The firmware design, however, must not preclude the ability to add that feature at a later date.

When a non-media access command is received while the drive is currently processing a disconnected, media access command, the firmware must be capable of servicing the new command while remaining connected. The exact method of providing this capability is not specified. The commands which will be supported in this non-disconnecting fashion are listed below in Table 9.

Table 9 - Non-Disconnecting SCSI Commands

Code	Message Name
00h	Test Unit Ready
03h	Request Sense
12h	Inquiry
16h	Reserve Unit
17h	Release Unit
1Ah	Mode Sense
1Ch	Receive Diagnostic
1Eh	Prevent/Allow Media Removal
25h	Read Capacity
5Ah	Mode Sense
E0h	Peek/Poke CPU Memory
E1h	Read Drive Attention Count

E5h	Read Trace Buffer
E7h	Read/Write ESDI

SCSI REQ/ACK Response: The Cirrus SM331 chip only accepts the first six bytes of a SCSI Command Descriptor Block (CDB) and then generates an interrupt. The firmware must then use Programmed I/O (PIO) to transfer any remaining bytes. If the firmware is delayed, the command will stall between the sixth and seventh bytes. The drive's latency to respond to a Cirrus SCSI interrupt must be within the following range: 20µs is a reasonable number, 40µs a poor length of time, and 150µs is unacceptable.

SCSI Inquiry Command: The drive will respond to the SCSI Inquiry Command be returning the firmware revision level for the SCSI firmware and the DSP firmware, the checksum for the SCSI firmware flash PROM and the DSP PROM, and a bit indicating whether the Hard Reset or Soft Reset function is currently being supported.

INITIALIZATION: Diagnostics: The diagnostics performed by the drive are executed during Power-On Self Test (POST), in response to a SCSI Send Diagnostic Command, or when the drive detects that the serial diagnostic interface cable is attached.

Power-On Self Test (POST): During POST, the drive will perform the tests listed below. A detailed description of each test is provided below under the section heading, B. Post Definition. These tests include, 1) 80C188 Register and Flag Test, 2) CPU RAM Test, 3) 80C188 Interrupt Vector Test, 4) ROM Checksum Test, 5) SM331 Register Test, 6) SM331 Sequencer Test, 7) SM330 ENDEC Test, 8) External ENDEC Test, 9) Glue Logic Test, 10) Buffer RAM Test, 11) DSP POST, and 12) Bias Magnet Test.

If while performing the Buffer RAM Test it is determined that some of the Buffer RAM is bad, the drive is considered to be unusable. The drive will respond to SCSI commands, but only to report a hardware failure. The Buffer RAM test will be performed in two phases. The first phase will only test 64K bytes of the buffer. During that time, the drive will be capable of responding Busy to a SCSI command. After the drive has initialized, the remainder of the Buffer RAM will be tested in a background mode. (See section, Powerup Sequence, below for a detailed description.) If during the background test a portion of the Buffer RAM is determined to be bad, the drive will declare the unclearable condition to exist.

Send Diagnostic Command: When the drive receives a SCSI Send Diagnostic Command, the drive will perform the following diagnostics, 1) ROM Checksum Test, 2) SM331 Sequencer Test, 3) SM331 SCSI Interface Test, 4) SM330 ENDEC Test, 5) External ENDEC Test, 6) Glue Logic Test, 7) Buffer RAM Test, and 8) Bias Magnet Test. The tests performed in response to a Send Diagnostic Command will be the same tests which the drive executes when performing the POST, as described above.

Serial Diagnostic Interface: When the drive powers up, it will perform the diagnostics numbered 1 through 4 in above section Power-On Self Test (POST), and then check to see if the serial diagnostic interface cable is currently attached. If the cable is not detected, the drive will continue performing the POST. If the cable is detected, the drive will discontinue performing the POST and be prepared to receive diagnostic commands through the serial diagnostic interface. The diagnostic commands and their format is not within the scope of this discussion.

Chip Initialization: SM330 Initialization: This section describes the initialization of the Cirrus Logic SM330. The mnemonics used for the SM330 registers are listed in Table 31 provided below in section C. SM330 Registers. The steps taken to initialize the Cirrus Logic SM330 are listed below:

1) The current value for the General Purpose Output (EDC_GPO) register is saved.

2) The chip is placed in reset by setting the EDC_CHIP_RESET, EDC_OPER_HALT, and EDC_ERROR_RESET fields in EDC_CFG_REG1.

3) The EDC_VU_PTR_SRC_MODE, EDC_130MM_MODE, and EDC_1_SPEED_TOL fields are set in EDC_CFG_REG2.

4) The EDC_SPT register is set to the default number of sectors per track, SECT_PER_TRK_RLL_1X_512_1.

5) The EDC_SM_WIN_POS, EDC_SMM (shifted left by 3), and EDC_SMS fields are set in the EDC_SMC register.

6) The EDC_RMC register is set to the default value of 2.

7) The EDC_ID_FLD_SYN_CTL register is set to the default values of 2 out of 3 IDs and 9 out of 12 Data Sync Marks.

8) The EDC_WIN_CTL register is initialized to 0x00.

9) The Chip is taken out of reset by writing 0x00 to the EDC_CFG_REG1 register.

10) The saved value from the EDC_GPO register is written back to the register.

11) The EDC_CFG_REG3 register is initialized to 0x00.

12) All chip interrupts are cleared by writing 0xFF to the EDC_INT_STAT and EDC_MED_ERR_STAT registers.

13) All chip interrupts are disabled by writing 0x00 to the EDC_INT_EN_REG and EDC_MED_ERR_EN registers.

14) The sequencer sync byte count is initialized by writing 40 to the SF_SYNC_BYTE_CNT_LMT register.

15) The Data Buffer Address pointer is initialized to zero (EDC_DAT_BUF_ADR_L, EDC_DAT_BUF_ADR_M, and EDC_DAT_BUF_ADR_H registers).

16) The EDC_TOF_WIN_CTL register is cleared to 0x00.

17) The EDC_SM_ALPC_LEN register is cleared to 0x00.

18) The EDC_PLL_LOCK_CTL register is initialized to 0xE0.

19) The EDC_PLL_RELOCK_CTL register is cleared to 0x00.

20) The EDC_LFLD_WIN_CTL register is cleared to 0x00.

21) The ECC Corrector RAM locations 0x00 and 0x01 are zeroed.

22) The ECC Corrector RAM locations 0x0F and 0x016 are zeroed.

23) The ECC Corrector RAM locations 0x20 and 0x027 are zeroed.

24) The ECC Corrector RAM threshold for sector correction is initialized to 0x0F.

25) The ECC Corrector RAM threshold for interleave correction is initialized to 0x03.

26) The EDC_GPO register is initialized by clearing the DSP_DIR_, BIAS_EN_, BIAS_E_W_, SCLK, SDO, and MIRROR_TX_ bits.

27) The LED for the drive is turned off.

SM331 Initialization: This section describes the initialization of the Cirrus Logic SM331. The mnemonics used for the SM331 registers are listed in Table 32 provided below in section D. SM331 Registers.

The initialization of the SM331 includes reading the option switches and the initialization of the SCSI, Buffer Manager, and Format Sequencer portions of the chip. To read the option switches tri-stated on the SCSI Bus, the firmware performs the following steps:

1) The SM331 is placed in reset by setting BM_SW_RESET in the BM_-MODE_CTL register.

2) The SM331 is taken out of reset by clearing BM_SW_RESET in the BM_MODE_CTL register.

3) The SF_LOCAL_HINT_EN, SF_LOCAL_DINT_EN, and SF_SCSI_IO_40_47H fields are set in the SF_MODE_CTL register.

4) The BM_MOE_DISABLE bit is set in the BM_MODE_CTL register.

5) The BM_SCHED_DATA register is read twice. (The first read initiates the actual transfer of data from the buffer which is fetched during the second read.)

6) The value read is complemented and saved as the value of the option switches.

7) The BM_MOE_DISABLE bit is cleared in the BM_MODE_CTL register.

The steps taken to initialize the SCSI portion of the SM331 are as listed below:

1) The SCSI ID for the drive is read from the 20-pin connector via the GLIC_JB_INP_REG register and placed in the variable target_id.

2)The SCSI Parity Enable option is read from the 20-pin connector via the GLIC_JB_INP_REG register.

3) The SCSI_MODE_CTL register is setup with the drive's SCSI ID, SCSI Parity Enable, and the CLK_PRESCALE field is set.

4) The phase control register SCSI_PHA_CTL is cleared with 0x00.

5) The synchronous control register SCSI_SYNC_CTL is initialized with the value (0x0F-1)-0x10.

6) The Buffer Manager FIFO is cleared by writing 0x10 to the BM_STAT_CTL register.

7) The BM_SCSI_DATA_2T and BM_DRAM_BURST_EN fields are set in the Buffer Manager Control register BM_STAT_CTL.

8) The Buffer Manager Transfer control register BM_XFER_CTL is initialized to 0x00.

9) The SCSI Reselection ID register SCSI_SEL_REG is set to the drive's SCSI ID.

10) The SCSI_RESET, SCSI_ATTN, SCSI_OFST_OVERRUN, SCSI_BUS_FREE, SCSI_BFR_PTY_ERR, SCSI_BUS_PTY_ERR bits are set in the SCSI Status register SCSI_STAT_1.

11) The SCSI_STAT_2 register is initialized to 0xFF.

12) The SCSI interrupts are disabled by writing 0x00 to the SCSI_NT_EN_2 register.

The steps taken to initialize the Buffer Manager portion of the SM331 are as follows below:

1) The BM_SCSI_DATA_2T and BM_DRAM_BURST_EN fields are set in the Buffer Manager Control register BM_TAT_TL.

2) The Buffer Manager Transfer control register BM_XFER_CTL is initialized to 0x00.

3) The BM_DRAM, BM_256K_RAM, BM_PTY_EN, and BM_NO_WS fields are set in the Buffer Manager Mode Control register BM_MODE_CTL.

4) The DRAM timing is initialized in the BM_TIME_CTL and BM_DRAM_REF_PER registers.

5) The size of the Buffer RAM is encoded into the BM_BUFF_SIZE register.

6) The Disk Address Pointer is initialized to 0x000000 in the BM_DAPL, BM_DAPM, and BM_DAPH registers.

7) The Host Address Pointer is initialized to 0x000000 in the BM_HAPL, BM_HAPM, and BM_HAPH registers.

8) The Stop Address Pointer is initialized to 0x000000 in the BM_SAPL, BM_SAPM, and BM_SAPH registers.

The steps taken to initialize the Format Sequencer portion of the SM331 are as identified below:

1) The Format Sequencer is stopped by writing 0x1F (the stop address) to the sequencer start address register SF_SEQ_STRT_ADR.

2) The default sector size of 512 bytes is setup in the sector size register SF_SECT_SIZE by writing 0x00.

3) The sync byte count is initialized by writing x028 to the SF_SYNC_-BYTE_CNT_LMT register.

4) The operation control register SF_OP_CTL is initialized by setting the SF_DATA_BR_FLD_EN field.

5) The branch address register SF_BRANCH_ADR is initialized to 0x00.

6) The sequencer interrupts are disabled by writing 0x00 to the SF_INT_EN register.

7) The default Write Control Store (WCS) program is loaded into the Format Sequencer.

RLL (1,7) External ENDEC Initialization: (TBD).

Glue Logic IC (GLIC) Initialization: The initialization of the GLIC includes the steps of, 1) set the Read Gate Hold Override bit in the GLIC_JB_CTRL_REG register, and 2) enable all interrupts in the GLIC_INT_EN_REG register.

SCSI Initialization: The SCSI Initialization firmware will use the 20-pin connector as the source of the drive's SCSI ID and SCSI Parity Enable. When the cable is attached, the signals will be driven by the jukebox. When the cable is not attached, the same pins will have jumpers installed to indicate the SCSI ID and SCSI Parity Enable to be used.

Termination of the SCSI Bus within the drive will be selected via an option switch. There will be no firmware interaction required to support SCSI Termination.

Powerup Sequence: Table 10 below itemizes the steps in the order to be performed for the powerup sequence. The columns Power On, Soft-Reset, and Hard Reset identify which steps are performed following a Power On condition, a Soft Reset, or a Hard Reset. If an unclearable condition exists when a reset is received which would have generated a Soft Reset, the reset will instead produce a Hard Reset to force the drive to complete its full set of diagnostics.

Table 10

Power On	Hard Reset	Soft Reset	Description
Y			1) The Servo Reset signal is held asserted by the ENDEC. The SCSI chip does not (cannot) respond to a selection.
Y	Y		2) The 80C188 initializes the Peripheral Control Block for the ROM, SRAM, and peripheral chip selects.
Y	Y		3) The 80C188 disables the timers.
Y	Y	Y	4) The 80C188 initializes the interrupt controller.
Y	Y		5) The 80C188 performs a CPU flag test.
Y	Y		6) The 80C188 performs a CPU register ripple test.

At this point, the 80C188 checks to see if a full Hard Reset should be performed or whether a variation, called a Firm Reset, can instead be used. A Firm Reset will not

reset the DSP. This approach saves considerable time by not forcing the DSP's code to be download nor the DSP to reinitialize all its servo loops. A Firm Reset will check for a valid RAM signature (TBD) in the 80C188 CPU memory, that an unclearable condition does not exist, and that the DSP is able to respond to a Get Status command properly. If any of these reconditions is not true, the drive will perform a Hard Reset. The continuing descriptions are consecutively numbered in Table 11.

Table 11

Power On	Hard	Firm	Soft	Description
Y	Y			7) The 80C188 resets the External ENDEC, which asserts the Servo Reset signal.
Y	Y	Y		8) The 80C188 performs a CPU RAM test.
Y	Y	Y		9) The 80C188 performs a CPU interrupt test.
Y	Y	Y		10) The 80C188 initializes all interrupt vectors.
Y	Y	Y		11) The 80C188 performs a CPU ROM checksum.
Y	Y	Y	Y	12) The 80C188 initializes all chips and timers.
Y	Y	Y		13) The 80C188 tests the Cirrus Logic SM331.
Y	Y	Y		14) The 80C188 tests the Cirrus Logic SM330.
Y	Y	Y		15) The 80C188 tests the RLL (1,7) External ENDEC.
Y	Y	Y		16) The 80C188 performs a Buffer RAM test. Only the first 64Kbytes of the Buffer RAM are tested.
Y	Y	Y		17) The 80C188 performs a Bias Magnet test.
Y	Y	Y	Y	18) The system firmware initializes itself (i.e., kernel initialization).
Y	Y	Y	Y	19) The drive initializes the Sense Data structures.
Y	Y	Y	Y	20) The drive initializes the host request block information structures.
Y	Y	Y	Y	21) Interrupts for SCSI and Drive Attentions are enabled
Y	Y	Y	Y	22) The SCSI interface is initialized and the drive is made capable of responding BUSY to any SCSI command.
Y	Y			23) The 80C188 deasserts Servo Reset.
Y	Y			24) The DSP code is downloaded from the SCSI ROM.
Y	Y	Y		25) The DSP starts executing and performs a limited set (TBD) of diagnostics.
Y	Y			26) The 80C188 requests the address of the Velocity Table and downloads the default (low velocity) table.

Y	Y			27) The 80C188 validates (TBD) that the DSP is functioning properly. If not, Servo Reset is asserted, deasserted, and then the process repeats with step (23), retrying up to two times.
Y	Y	Y	Y	28) The 80C188 enables all interrupts from the GLIC.
Y	Y	Y	Y	29) The drive initializes the Mode Page structures.
Y	Y	Y	Y	30) The drive initializes the Inquiry Data structures.
Y	Y	Y	Y	31) The DSP validates that the Eject Limit switch is in the correct position. The 80C188 is notified (TBD) if not.
Y	Y	Y	Y	32) The drive checks if a cartridge is present and spins it up.
Y	Y	Y	Y	33) The DSP is commanded to close focus & tracking loops. If the DSP reports that the cartridge initialization failed, two additional retries will be performed before reporting that "cartridge initialization failure."
Y	Y			34) The drive performs the media type determination algorithm described in Section 5.1. Once the type is determined, the media parameters are initialized.
Y	Y		Y	35) The Velocity Table for the current media installed is downloaded to the DSP.
Y	Y	Y		36) The drive reads the defect lists and builds the Defect Management data structures.
Y	Y	Y		37) The drive begins to test the remainder of the Buffer RAM in background mode.
Y	Y	Y	Y	38) The SCSI interface is made fully operational (i.e., it no longer returns BUSY).

DRIVE ATTENTIONS: Drive Attention Interrupts: Drive Attention interrupts are indications that an anomalous condition exists within the drive. The interrupts are generated by either the hardware attached to the Glue Logic IC (GLIC) or by the DSP. The DSP interrupts are routed through the GLIC to form a combined source of interrupts (on INT2) to the 80C188. The following section describes the interrupts which are generated by the DSP. Section GLIC Interrupts, describes the interrupts which are generated by the other hardware attached to the GLIC. The firmware can determine the source of the interrupt by examining the GLIC Interrupt Status Register (Base Addr + 05h).

DSP Interrupts: The sources of the DSP interrupts can be broken into two categories which include aborting interrupts and non-aborting interrupts. An aborting interrupt is generated by the DSP when a catastrophic event occurs which requires that the drive's ability to write be immediately disabled. When the DSP asserts the aborting

interrupt, the drive hardware will deassert Write Gate, turn off the laser, and generate a Drive Attention Interrupt to the 80C188. When the DSP asserts the non-aborting interrupt, only a Drive Attention Interrupt is generated to the 80C188.

Aborting DSP Interrupts: The conditions which cause the DSP to report an aborting interrupt are identified in Table 12.

Table 12 - Aborting DSP Interrupts

Focus Error
Off-Track Error
Laser Power Control Error
Spindle Not At Speed Error

A Focus Error is reported by the DSP when the focus error signal exceeds the programmable threshold set by the 80C188. An Off-Track Error is reported by the DSP when the tracking error signal exceeds the programmable threshold set by the 80C188. A Laser Read Power Control Error is reported by the DSP when the laser's output can no longer be controlled by the DSP within the thresholds set by the 80C188. A Spindle Not At Speed Error is reported by the DSP when the spindle speed falls below the minimum RPM established by the 80C188 or rises above the maximum RPM established by the 80C188.

Non-Aborting DSP Interrupts: The conditions which cause the DSP to report a non-aborting interrupt are identified below in Table 13.

Table 13 - Non-Aborting DSP Interrupts

10-Second Timer Event
Bad Command Checksum
Unknown Command
Bad Seek Error
Cartridge Eject Failed Error

A 10-Second Timer Event interrupt is returned by the DSP to signal that its internal clock has reached 10 seconds. The 80C188 is responsible for maintaining a running

clock of the total powered on hours and minutes. Each 10-Second Timer Event interrupt advances the powered-on hours clock. A Bad Command Checksum is reported by the DSP when its calculation of the checksum for the command does not match the contents of the checksum byte within the command just received from the 80C188. An Unknown Command is reported by the DSP when the contents of the command byte just received from the 80C188 is not a valid DSP command.

A Bad Seek Error is reported by the DSP when a) the first entry in the Seek Velocity Table is empty, or b) the Focus Loop is not closed (this should only occur if a seek is issued as the first command before the DSP is commanded to initialize). Seek Settling Errors will appear as Off-Track Errors. The DSP will disable Off-Track Errors for (TBD)µs after the Tracking Loop is closed to prevent false Off-Track Errors during the settling time. A Cartridge Eject Failed Error is reported by the DSP when the Eject Limit signal is not detected by the DSP within (TBD)µs.

GLIC Interrupts: The GLIC (Glue Logic IC) provides an interface to various input and output signals which the 80C188 must manage. The input signals which have been defined to produce interrupts from the GLIC are as identified below in Table 14.

Table 14 - Other Drive Attention Interrupts

Autochanger Reset
Autochanger Power Down Request
Autochanger Eject
Front Panel Eject
Cartridge Inserted (in throat) (future)
Cartridge Present (seated on the hub)

An Autochanger Reset interrupt is produced by the GLIC whenever a rising edge is detected on the Autochanger Reset input signal on the Jukebox 20-pin connector. An Autochanger Power Down Request interrupt is produced by the GLIC whenever a rising edge is detected on the Autochanger Power Down Request input signal on the Jukebox 20-pin connector. An Autochanger Eject interrupt is produced by the GLIC whenever a rising edge is detected on the Autochanger Eject input signal on the Jukebox 20-pin connector. A Front Panel Eject interrupt is produced by the GLIC

whenever a rising edge is detected on the signal from the Font Panel Eject Switch. A Cartridge Inserted (cartridge detected in the throat of the drive) interrupt is produced by the GLIC whenever a rising or falling edge is detected on the signal from the Cartridge Inserted Switch. The interrupt is capable of being produced by the GLIC hardware, however, there is no actual switch to generate the interrupt. At this time, no firmware will be written to support this feature. A Cartridge Present (a cartridge is seated on the drive hub) interrupt is produced by the GLIC whenever a leading or trailing edge is detected on the signal from the Cartridge Seated Switch.

Drive Attention Recovery: The Drive Attention code must service all Drive Attentions and return the drive to a safe, known state. To do this, the Drive Attention code must be partitioned into an Interrupt Service Routine (ISR) and a Handler. The Drive Attention ISR must execute as the highest priority maskable ISR so that it can preempt the SCSI ISR and/or Disk ISR and disable any operations which may be in progress, taking the drive to a safe state. Once the operation is disabled, the SCSI ISR or Disk ISR is allowed to run to completion and exit. The handler portion of the Drive Attention Handler is then free to run and attempt to take the drive to a known state. Often there are multiple Drive Attention Interrupts as the drive cascades through a series of faults, causing the Handler to interrupt itself.

When the DSP detects a Drive Attention, an interrupt will be produced by the GLIC (on INT2) to the 80C188. When the interrupt is an aborting interrupt, the GLIC also deasserts Write Gate and turns off the laser. The Drive Attention ISR will stop any drive operation in progress by halting the SM331 Format Sequencer, the SM330, and the External ENDEC. A hook will be provided to call an application specific halt routine. The below section, Drive Attention Notification, provides further information relating thereto.

The Drive Attention Handler is responsible for identifying the reason for the Drive Attention Interrupt, clearing the source of the interrupt, initiating recovery procedures to take the drive to a known state, and verifying that the initial error condition has been cleared. The source of the Drive Attention Interrupt is determined by examining the GLIC Interrupt Status Register (Base Addr + 05h) and possibly by requesting the current DSP status. The relative priorities of the possible errors are addressed in the following section. If the DSP is the source of the interrupt, the Drive Attention Handler sends a

command to the DSP to reset the attention condition and clear the status bits. The error recovery procedure for each of the different error conditions is described below.

Drive Attention Error Priorities: This section lists the different Drive Attention error conditions which are recognized by the Jupiter drive and the relative priority which is proposed for each type of error. Table 15 - Drive Attention Priorities, with the relative ranking of each of the errors, appears below.

Table 15 - Drive Attention Priorities

Laser Power Error
Focus Failure
Not On Track, which includes:
Seek Settling Error
Tracking Error
Write Terminated
Write Fault (Write Gate asserted and Bias OK not yet asserted)
Bias Magnet Failed (TBD)
Spindle Speed Failure
Eject Request, which includes:
Front Panel Eject Request
Autochanger Eject Request
Autochanger Powerdown Request
Autochanger Reset
Cartridge Detected (Cartridge In Throat Switch)
Media Changed (Cartridge Present Switch)
Cartridge Unload Failure (cartridge still seated after eject cycle)
Disk Rejected (not used for Jupiter)
Command Fault, which includes:
Bad Command Checksum
Invalid Command

Drive Attention Error Recovery: This section describes the different Drive Attention error conditions which are recognized by the Jupiter drive. Each subsection will describe the status bits used to classify the error condition and also contains pseudocode to describe how the error condition is handled.

The pseudocode listed within each subsection has been re-engineered from the Drive Attention Handler currently in use with the RMD-5300 product and is intended as

a guideline only. The actual code uses multiple flags to further refine the priorities of the Drive Attentions.

The variables SuggSenseKey, SuggSense Code, and SuggSenseCodeQ shown in the pseudocode represent the SCSI Sense Data fields Sense Key, Error Code, and Additional Sense Code Qualifier (ASCQ), respectively. The variable unclr_cond_flag is used to indicate when an unclearable condition exists within the drive. An unclearable condition forces the drive to respond to a Request Sense Command with a Sense Key of HARDWARE ERROR, an Error Code of INTERNAL CONTROLLER ERROR, and an ASCQ of the current value in unclr_cond_flag. A reset or the execution of a SCSI Send Diagnostic command may clear an unclearable condition by forcing the drive to perform its full set of diagnostics. In this manner, any serious error discovered while performing an operation will preclude the drive from altering the media.

The following subsections use the conventions that S is the drive's Standard Status, O is the drive's Optical Status, D is the DSP Status, and G is the GLIC Interrupt Status. The Standard Status and Optical Status are the modified ESDI status words for the drive. The below section, Drive Command Status, provides information on the ESDI Status. The below section, DSP Status Definitions, for information on the DSP Status. At the beginning of each subsection is listed the status bits which are used to determine whether that particular error condition exists. The pseudocode then describes how the condition is handled.

Command Fault:

Status Bits:

```
S = ESDI_CMD_PTY_FLT  |  ESDI_INVALID_CMD;
```

Pseudocode:

```
SuggSenseKey = HARDWARE_ERROR;
SuggSenseCode = INTERNAL_CONTROLLER_ERR;
if S = ESDI_CMD_PTY_FLT
    SuggSenseCodeQ = ASCQ_CMD_PRTY;
if S = ESDI_INVALID_CMD
    SuggSenseCodeQ = ASCQ_INV_OP;
unclr_cond_flag = SuggSenseCodeQ;
```

A command fault will occur if a bad command checksum is detected by the DSP or an invalid command is received by the DSP. Neither of these errors should occur in the final product made in accordence with the teachings of this invention. Therefore, if they do, they are probably an indication of another type of error, such as a memory error, which would be detected during the reset required to clear the unclearable condition.

Disk Rejected:

Status Bits:

O = CARTRIDGE_REJECTED

Pseudocode:

```
send RESET_ATTN command
get REQ_STD_STAT
get REQ_OPT_STAT;
if (ANY_ATTN_PENDING)
    return (ATTN_DIDNT_CLEAR);
send Bias Magnet command to turn off magnet
if medium present
    send STOP_SPINDLE command
    Wait_for_cmd_cmplt
```

A Disk Rejected error will be reported if the DSP cannot successfully close the focus and/or tracking loops after three attempts.

Cartridge Unload Failure:

Status Bits:

O = CART_LOAD_FAILURE

Pseudocode:

```
if third attempt fails
    GLIC_JB_CTRL_REG &= ~JB_ERROR;        // Assert.
    SuggSenseKey = HARDWARE_ERROR;
    SuggSenseCode = INTERNAL_CONTROLLER_ERR;
    SuggSenseCodeQ = ASCQ_CANT_UNLD;
else
    send RESET_ATTN command
```

```
get REQ_STD_STAT
get REQ_OPT_STAT;
GLIC_JB_CTRL_REG |= JB_CART_LOADED;  // Deassert.
if (ANY_ATTN_PENDING)
    return (ATTN_DIDNT_CLEAR);
if medium present
    send EJECT_CART command
    Wait_for_cmd_cmplt( );
```

The DSP will monitor the eject cartridge sequence and generate an interrupt if the Eject Limit signal is not asserted after three seconds. The recovery procedure will be to attempt to eject the cartridge three times. If the error persists, the failure is reported appropriately on SCSI and the 20-pin Autochanger connector signal ERROR (active low).

Eject Request:

Status Bits:

O = EJECT_REQUEST

Pseudocode:

```
SuggSenseKey = MEDIUM ERROR;
SuggSenseCode = MEDIUM_OUT;
SuggSenseCodeQ = NO_SENSE_CODE_QUAL;
get REQ_STD_STAT;
if medium present
    send Bias Magnet command to turn off magnet
    send STOP_SPINDLE command
    GLIC_JB_CTRL_REG  |= JB_CART_LOADED;  // Deassert.
    send EJECT_CART command
    Wait_for_cmd_cmplt ( );
send RESET_ATTN command
get REQ_STD_STAT;
if (ANY_ATTN_PENDING)
    return (ATTN_DIDNT_CLEAR);
```

An Eject Request can come from either the Autochanger or from the Front Panel. If a cartridge is present, the spindle is stopped and the Autochanger CART_LOADED signal is deasserted (active low). After waiting for the spindle to stop (as specified in the below section, STOP_SPINDLE), the cartridge is ejected.

Media Changed:

Status Bits:

O = CARTRIDGE_CHANGED

Pseudocode:

```
SuggSenseKey = MEDIUM ERROR;
SuggSenseCode = MEDIUM_OUT;
SuggSenseCodeQ = NO_SENSE_CODE_QUAL;
Set_not_rdy_mchg_attn ( );
send RESET_ATTN command
get REQ_STD_STAT;
get REQ_OPT_STAT;
if (ANY_ATTN_PENDING)
    return (ATTN_DIDNT_CLEAR);
send STOP_SPINDLE command
send START_SPINDLE command for 4x RPM
Wait_for_cmd_cmplt ( );
GLIC_JB_CTRL_REG  &= ~JB_CART_LOADED;     // Assert.
```

This condition exists when a cartridge is seated onto the hub and closes the Cartridge Present switch. The Autochanger signal CART_LOADED is asserted (active low).

Spindle Speed Failure:

Status Bits:

O = SPINDLE_SPEED_FAILURE

Pseudocode:

```
send RESET_ATTN command
get REQ_STD_STAT;
get REQ_OPT_STAT;
GLIC_JB_CTRL_REG  |= JB_CART_LOADED;        // Deassert.
if (ANY_ATTN_PENDING)
```

```
        return (ATTN_DIDNT_CLEAR);
    if medium present
        send START_SPINDLE command for current media RPM
        Wait_for_cmd_cmplt ( );
        GLIC_JB_CTRL_REG &= ~JB_CART_LOADED; // Assert.
```

The DSP will monitor the spindle speed based on a range of acceptable speeds for a particular type of media. The minimum and maximum speed were identified to the DSP by the 80C188. If the spindle speed is detected to be outside of the specified range, the DSP will generate the interrupt.

Laser Power Failure:

Status Bits:

O = LASER_DRIVE_FAILURE

Pseudocode:

```
    send RESET_ATTN command
    send RECAL_DRIVE command
    get REQ_STD_STAT;
    get REQ_OPT_STAT;
    if O = LASER_DRIVE_FAILURE
        SuggSenseKey = HARDWARE_ERROR;
        SuggSenseCode = INTERNAL_CONTROLLER_ERR;
        SuggSenseCodeQ = ASCQ_LASER_FAIL;
        unclr_cond_flag = SuggSenseCodeQ:
        return (ATTN_DIDNT_CLEAR);
    if (ANY_ATTN_PENDING)
        return (ATTN_DIDNT_CLEAR);
    return (ALL_DONE);
```

When a Laser Read Power threshold is exceeded and is detected by the DSP, an aborting interrupt will be generated. An unclearable condition is declared to exist if the laser failure does not clear after the drive performs a recalibration.

Focus Failure:

Status Bits:

O = FOCUS_SERVO_FAILURE

Pseudocode:

```
GLIC_JB_CTRL_REG |= JB_CART_LOADED;        // Deassert.
send RESET_ATTN command
get REQ_STD_STAT;
get REQ_OPT_STAT;
if (ANY_ATTN_PENDING)
    return (ATTN_DIDNT_CLEAR);
GLIC_JB_CTRL_REG  &= ~JB_CART_LOADED;  // Assert.
```

The threshold for Out of Focus errors is programmable by the 80C188. When the focus signal exceeds the specified thresholds, the DSP will generate an aborting interrupt to the 80C188.

Write Fault:

Status Bits:

S = WRITE_FAULT_ERROR

Pseudocode:

```
if medium not write protected
    Set_not_rdy_mchg_attn ( );
    SuggSenseKey = NOT_READY;
    SuggSenseCode = DRIVE_NOT_READY;
    SuggSenseCodeQ = NO_SENSE_CODE_QUAL;
else
    SuggSenseKey = MEDIUM_ERROR;
    SuggSenseCode = WRITE_PROTECTED;
    SuggSenseCodeQ = NO_SENSE_CODE_QUAL;
    send RESET_ATTN command
    get REQ_STD_STAT
    get REQ_OPT_STAT;
    if (ANY_ATTN_PENDING)
        return (ATTN_DIDNT_CLEAR);
```

Not On Track:

Status Bits:

O = NOT_ON_TRACK | WRITE_TERMINATED;

S = SEEK_FAULT;

Pseudocode:

```
get DSP status
if Bad Seek and Focus Loop NOT Closed
    download seek tables to DSP
    send RESET_ATTN command
else
    send RESET_ATTN command
    if (S == SEEK_FAULT) or (O = WRITE_TERMINATED)
        send RECAL_DRIVE command
get REQ_STD_STAT
get REQ_OPT_STAT;
if (ANY_ATTN_PENDING)
    return (ATTN_DIDNT_CLEAR);
```

When a Bad Seek is reported by the DSP, the Drive Attention Handler should request the status from the DSP to determine whether a seek produced the error or whether the Velocity Table was missing. If the Bad Seek status bit is set and the "Focus Loop Not Closed" status bit is not set, this implies that the seek tables are not initialized properly. If only the Seek Fault status bit is set, the Drive Attention Handler will send a "Reset Attention" command to the DSP and indicate that the Seek Fault status bit is to be cleared. The 80C188 seek code will then need to restart from the Drive Attention registration point.

The threshold for Off-Track Errors is programmable by the 80C188. The thresholds can be set separately for reads or writes if the writing process needs to have higher constraints. When an Off-Track is detected, the DSP will use the "catastrophic" interrupt to terminate the drive operation. The Drive Attention Handler will issue a "Reset Attention" to the DSP.

Open Issue. The recovery mechanism is to allow the firmware to issue another seek command (thereby allowing the DSP to seek and then reacquire tracking). An alternative is to open the Tracking Loop and then command the DSP to reacquire tracking. This approach does not work for a failure mode when the seek has not settled and the head is "skating" across the disk. Therefore, the best recovery mechanism is

to attempt another seek. Special code will be required to handle the case where the last seek fails with an Off-Track Error. Another seek would be the best recovery attempt.

Bias Magnet Failed:

Status Bits:

S = MAGNET_BIAS_FAILURE

Pseudocode:

```
SuggSenseKey = HARDWARE_ERROR;
SuggSenseCode = INTERNAL_CONTROLLER_ERR;
SuggSenseCodeQ = ASCQ_MAGNET_FAILED;
send RESET_ATTN command
get REQ_STD_STAT
get REQ_OPT_STAT;
if (ANY_ATTN_PENDING)
        return (ATTN_DIDNT_CLEAR);
```

Spiral Mode: When all error conditions have been cleared, the Drive Attention Handler must return the drive to its original state for spiraling (otherwise known as track following or jumpbacks disabled). This is accomplished by saving the original state on entry and executing the code below on exit.

```
if ( ( WasSpiraling == 0)  &&  ! (S & MEDIUM_NOT_PRESENT)  &&
     ! (S  &  SPINDLE_STOPPED) )
  SpiralMode  (FALSE);
```

Drive Attention Notification: Drive Attentions produce interrupts to the Drive Attention Handler which takes the drive to a known condition. The Handler is then responsible for notifying the portion of the firmware responsible for managing the current operation that an attention condition existed and what was done to clear the condition. Two mechanisms are used to notify the firmware. These include messages and direct notification.

When a task has initiated an operation and is waiting for the SCSI ISR or the Disk ISR to send a message, the Drive Attention Handler will send a message to the task's queue to indicate that a Drive Attention occurred. Which task is currently responsible for an operation is maintained in a routing variable. When a portion of the firmware is executing which could generate a Drive Attention at any time (such as the seek code),

continually polling the task's queue for a message would take too much overhead processing. The second mechanism for reporting Drive Attentions utilizes a "long jump" feature to take the code execution back to a place where the firmware knows how to restart an algorithm or attempt a retry. The process of identifying where to long jump to is referred to as registering. Multiple levels of registration can be performed, each new level saving the previous registration information on its local stack. When a section of code registers itself, the code can also identify a routine which the Drive Attention ISR will call to perform a context sensitive abort.

MEDIA FORMATS: Media Type Determination: The type of media will be identified using the following sequence of events:

a) A cartridge is inserted or already present when the drive powers up.

b) The 80C188 issues a spinup command for the 4x speed to the spindle motor.

c) The 80C188 issues a DSP command to notify when the RPM is greater than sixty RPM.

d) When the DSP interrupts with the RPM greater than sixty, the 80C188 issues a DSP command to notify when the RPM is greater than the 4x minimum RPM.

e) The 80C188 then issues a DSP command to initialize:

1) The DSP slowly finds the inside crash stop.

2) The DSP seeks towards the OD for (TBD) tracks.

3) The default is that Jump Backs are enabled and the direction is 4x.

4) If the DSP encounters an error during the initial seek, the error will be reported to the 80C188. The 80C188 will reset the DSP and then re-initialize.

f) The 80C188 attempts to read an ID for zone (TBD) for 4x corresponding to (TBD) tracks from the Inner Diameter.

g) If no ID can be read, the 80C188 attempts to read an ID using the frequencies for the neighboring zones, plus and minus (TBD) zones.

h) If no ID can be read, the 80C188 issues a 2x speed command to the spindle motor.

i) The 80C188 issues a DSP command to notify when the RPM is greater than the 2x minimum.

j) When the DSP interrupts with the RPM greater than 2x minimum, the 80C188 issues an initialization command to the DSP and then attempts to read an ID at zone (TBD) corresponding to (TBD) tracks.

k) If no ID can be read, the 80C188 attempts to read an ID using the frequencies for the neighboring zones, plus and minus (TBD) zones.

l) If no ID can be read, steps (h) through (k) for 1x.

m) If no ID can be read, the 80C188 issues a 2x speed command to the spindle motor.

n) The 80C188 issues a DSP command to notify when the RPM is less than the 2x maximum.

o) When the DSP interrupts with the RPM less than 2x maximum, the 80C188 attempts to read an ID by performing a frequency sweep. The sweep pattern will be: the default zone, zone-1, zone+1, zone-2, zone+2, etc. until all frequencies have been tried.

p) If no ID can be read, the 80C188 issues a 4x speed command to the spindle motor.

q) The 80C188 issues a DSP command to notify when the RPM is less than the 4x maximum.

r) When the DSP interrupts with the RPM less than 4x maximum, the 80C188 attempts to read an ID by performing a frequency sweep. The sweep pattern will be: the default zone, zone-1, zone+1, zone-2, zone+2, etc. until all frequencies have been tried.

AN ID HAS BEEN READ:

s) The 80C188 issues a seek command to position in the SFP area.

t) The 80C188 attempts to read the SFP data for 512-byte sectors. Failing to read the sector successfully, the 80C188 attempts to read the SFP data for 1024-byte sectors.

u) The 80C188 initializes the drive's media parameters for the media type and SFP information. A prewrite test flag is set to indicate that prewrite testing must be performed prior to writing to the media.

v) The 80C188 begins the initialization of the cartridge (i.e., reading the Defect Management Areas, building group tables, etc.) If any DMA must be rewritten to make

it consistent with the other DMAs, the drive must check if prewrite testing should be performed first.

CCW (Pseudo-WORM) Support: The Blank Check functions of the Cirrus Logic SM330 will be used to determine if a 1x or 2x cartridge is unrecorded. The DMP field will not be used. The Blank Check functions of the External ENDEC will be used to determine if a 4x cartridge is unrecorded. The DMP field will not be used.

Whenever a CCW cartridge is inserted in the drive, the drive will automatically disable the Write Cache and clear the WCE (Write Cache Enable) field in Mode Page 08h, Caching Parameters. All initiators will be notified of the change on the next command from each initiator by issuing a CHECK CONDITION. The Sense Key/Sense Code combination returned in response to a Request Sense Command will be UNIT ATTENTION/MODE SELECT PARAMETERS CHANGED (06h/29h).

P-ROM Support: Open Issue. For P-ROM media, the PREFMT signal must be set when the head is over or within three tracks of a ROM area of the cartridge. The seek algorithm will need to take into account where the P-ROM areas are on the cartridge and may need to step through them. The DSP may be required to seek over a P-ROM area during its initialization. This initial seek will be performed at a low velocity to minimize the change for an Off-Track Error.

Retry Strategy: When the drive attempts to access the media for a read, erase, write, or verify operation, it may encounter media errors, correction errors, or other errors. The sources of media errors are: Sector Marks (SM), Sector IDS, Data Syncs (DS), or Resyncs (RS). The sources of correction errors are: Cyclical Redundancy Check (CRC) or Error Checking and Correction (ECC). The sources of other errors which the drive may encounter are: Format Sequencer errors, Drive Attentions, or Buffer RAM parity errors. For each of the media or correction errors, the drive validates the error against a threshold for the type of error and the type of operation. The thresholds are maintained in various Mode Pages which may be modified by the host. Table 16 below identifies the default thresholds which are used by the drive.

Table 16 - Default Thresholds

Threshold	1x, 2x 512BPS	1x, 2x 1024BPS	4x 512BPS	4x 1024BPS

Sector Mark	4/5 Marks 3/4 Spaces	4/5 Marks 3/4 Spaces	4/5Segments	4/5 Segments
Sector IDs				
Read	2/3	2/3	2/3	2/3
Erase, Write	2/3	2/3	2/3	2/3
Verify	3/3	3/3	3/3	3/3
Data Sync (DS)	9/12 Groups	9/12 Groups	3/4 Groups	3/4 Groups
Resync (RS)	3	6	3	6
ECC bytes in error per Sector	15	30	15	30
ECC bytes in error per Interleave	3	6	3	6

When a media or correction error exceeds the current threshold or any other error defined above is encountered, the drive may attempt a retry of the operation as described in the remainder of this section. Retries are performed unless a severe error resulting in an unclearable condition or other aborting condition is encountered while attempting to access the data. In addition, retries are not performed if an internal debug flag, drvRetryDisable, is set. The drvRetryDisable flag is set or cleared via the SCSI Read/Write ESDI Command (E7h).

When the drive is performing a read operation, it will perform a maximum number of retries as identified in Mode Page 01h, Read/Write Error Recovery Parameters, Read Retry Count (Byte 3). When the drive is performing an erase or write operation, it will perform a maximum number of retries as identified in Mode Page 01h, Read/Write Error Recovery Parameters, Write Retry Count (Byte 8). When the drive is performing a verify operation, it will perform a maximum number of retries as identified in Mode Page 07h, Verify Error Recovery Parameters, Verify Retry Count (Byte 3).

If a sector cannot be read within the current thresholds, the drive may attempt to recover the sector using heroic means as described in the below section, Heroic Recovery Strategies. If the sector is recovered, the sector may be reallocated as described below in section, Reallocation Strategy.

Error Checking and Correction (ECC): Error Checking for a read or verify operation is performed in hardware in the Cirrus Logic SM330. Update vectors to correct any bytes in error are generated by the SM330 and transmitted to the SM331

9801536-5

26 JUN 1998

via a dedicated serial link between the two chips. The CRC and ECC codes for a write operation are produced by the SM330.

Correction is not applied to a sector for a read operation when the Disable Correction (DCR) bit is set in Mode Page 01h Read/Write Error Recovery Parameters. ECC is also not applied to a sector for a read operation when the Enable Early Correction (EEC) bit is not set in Mode Page 01h Read/Write Error Recovery Parameters. If after all but one retries have failed with the EEC bit not set, the drive will automatically apply correction on the final retry, if DCR is not set. It is important to note that with the DCR bit set, ECC errors are still detected, but not corrected.

Heroic Recovery Strategies: The term Heroic Recovery is used to describe the process of using all possible means to recover the data from the media. The strategy is to selectively relax various thresholds and eventually recover the data intact. The absolute criteria for determining whether a sector has been recovered is whether the data can be corrected within the maximum thresholds established by the correction hardware. To minimize miscorrection, the media thresholds are relaxed in a progressive sequence (TBD).

Heroic Recovery is initiated if a sector cannot be read within the current thresholds and the Transfer Block (TB) bit or the Automatic Read Reallocation Enabled (ARRE) bit is set in Mode Page 01h, Read/Write Error Recovery Parameters. If the data for the sector is fully recovered and ARRE is enabled, the sector may be reallocated as described below in section, Reallocation Strategy.

The drive parameters which can be altered in an attempt to recover the data are, 1) PLL Bandwidth (normal, high, and very high), 2) Frequency Zone (expected zone-1, expected zone+1), 3) Pseudo Sector Mark, 4) Pseudo Data Sync, 5) Lock on First Resync (sector is not eligible for reallocation, may only be sent to host), and 6) (TBD).

Reallocation Strategy: Reallocation is the process of relocating the data for a logical sector to a new physical sector. A sector is reallocated 1) in response to a host request (SCSI Reassign Block Command, 07h), 2) when a sector cannot be read within the current thresholds, the sector was fully recovered, and the ARRE bit is set, 3) the sector cannot be erased or written using the current thresholds and the Automatic Write Reallocation Enabled (AWRE) bit is set in Mode Page 01h, Read/Write Error Recovery

Parameters, or 4) the sector cannot be verified within the current thresholds as part of a SCSI Write and Verify Command.

Read Reallocation: When the data for a sector which exceeded read thresholds has been fully recovered and the ARRE bit is set, the drive will first attempt to rewrite the data to the same physical sector if the threshold exceeded was due to a Data Sync, Resync or ECC correction error. If the data for that same sector can now be verified within the thresholds defined in Mode Page 07H Verify Error Recovery Parameters, the sector will not be reallocated. Sectors which produced errors due to an error in the Sector Mark of ID fields or sectors which could not be correctly verified will be reallocated to a new physical sector.

When a new physical sector is required for relocating a logical sector, the drive will write the data (using the write thresholds) to a spare sector and then verify that sector (using the verify thresholds). If the sector cannot be written or verified using the current thresholds, another physical sector will be identified as the spare and the process repeated. A maximum of three spare sectors will be used in an attempt to reallocate a single logical sector.

Write Reallocation: A sector which fails to meet the Sector Mark threshold or the threshold for the number of valid Sector IDS as defined in Mode Page 01h, Read/Write Error Recovery Parameters, will be reallocated if the Automatic Write Reallocation Enabled (AWRE) bit is set.

When a new physical sector is required for relocating a logical sector, the drive will write the data (using the write thresholds) to a spare sector and then verify that sector (using the verify thresholds). If the sector cannot be written or verified using the current thresholds, another physical sector will be identified as the spare and the process repeated. A maximum of three spare sectors will be used in an attempt to reallocate a single logical sector.

Verify After Write Reallocation: A sector which fails to meet the verify thresholds as defined in Mode Page 07h, Verify Error Recovery Parameters, as part of a SCSI Write and Verify Command, will be reallocated. The ARRE and AWRE bits do not affect the decision to reallocate a sector which cannot be verified within the current thresholds as part of a SCSI Write and Verify Command.

When a new physical sector is required for relocating a logical sector, the drive will write the data (using the write thresholds) to a spare sector and then verify that sector (using the verify thresholds). If the sector cannot be written or verified using the current thresholds, another physical sector will be identified as the spare and the process repeated. A maximum of three spare sectors will be used in an attempt to reallocate a single logical sector.

SCSI Error Codes Returned: The following subsections describe the SCSI Sense Key/Sense Code/Additional Sense Code Qualifier (ASCQ) combinations for each of the conditions described in the above sections, Retry Strategy and following. The control bits which affect the drive's response and the SCSI Sense Key/Sense Code/ASCQ combination returned to the host are listed below in Table 17 - Mode Page 01h, Error Recovery Parameters.

Table 17 - Mode Page 01h, Error Recovery Parameters

Bit	Name	Description
AWRE	Automatic Write Reallocation Enabled	The drive will perform automatic reallocation of defective blocks detected during write operations.
ARRE	Automatic Read Reallocation Enabled	The drive will perform automatic reallocation of defective blocks detected during read operations.
TB	Transfer Block	The drive will transfer to the host a block which is recovered outside of thresholds.
RC	Read Continuous	The drive will transfer data without adding delays to perform error recovery. (Data may be fabricated to maintain continuous flow of data.)
EEC	Enable Early Correction	The drive will use error correction before retries.
PER	Post Error	The drive will report a Check Condition for blocks which are recovered through retries, correction, or reallocation.
DTE	Disable Transfer on Error	The drive will terminate the data transfer when an error is encountered.
DCR	Disable Correction	The drive will not use error correction for data error recovery. The drive will still detect ECC errors.

Errors While Reallocating: While attempting to reallocate a logical sector to a new physical sector, the sense combinations in Table 18 will be reported by the drive if the indicated error condition is encountered.

Table 18 - Error Codes Reported While Attempting to Reallocate a Sector

Error Condition	Sense Key/Code/ASCQ	Data Returned
No spares available	03/32/00	Yes
Automatic Reallocation failed	04/81/00	Yes
Too many attempts to reallocate	04/44/A6	Yes
Defect List Error	03/32/01	Yes

Automatic Reallocation is considered to fail when a hardware error or other servere error precludes the drive from performing the reallocation. While performing the reallocation, the drive will make only three attempts to locate the logical sector to a new physical sector. If more than three attempts are required, the drive assumes that a hardware error has occurred. This approach limits the number of attempts to reallocate a sector and thereby minimizes the time taken to reallocate and minimizes the chance of consuming all available spares. If the drive can only write and verify a single Defect Management Area (DMA) on the disk, the drive will report a Defect List Error.

Read Error Codes: This section identifies the conditions which cause the drive to potentially report status back to the host while performing a read operation. Whether or not the status is actually reported depends upon whether the host issues a SCSI Request Sense Command.

The conditions can be broken down into five main categories which include, 1) attempting to locate the desired sector, 2) attempting to read the sector, 3) attempting to recover the sector with heroics, 4) attempting to reallocate the sector, and 5) Drive Attentions and other severe errors. Table 18 provides the sense combinations reported when reallocation fails, while above Table 8 provides the sense combinations reported for severe errors.

While attempting to locate the desired sector, the sense combinations in Table 19 will be reported by the drive if the indicated error type is encountered.

Table 19 - Error Codes Reported While Locating the Desired Sector

Error Condition	Sense Key/Code/ASCQ	Data Returned
Sector Mark Threshold	03/01/00	No
ID Threshold (Bad CRC)	03/10/00	No
ID Threshold (No Address Mark)	03/12/00	No

While attempting to read the sector, the sense combinations in Table 20 will be reported by the drive if the indicated error type is encountered, ARRE is not set, and the data cannot be recovered within thresholds while performing retries. If all retries are exhausted and the data has not been recovered, the drive will perform heroic recovery if the TB bit is set. The data will then be returned to the host whether or not the data was fully recovered. If recovered fully, the data is not reallocated to a new sector.

Table 20 - Error Codes Reported While Attempting to Read, ARRE is Not Set

Error Condition	Sense Key/Code/ASCQ	Data Returned
Data Sync Threshold	03/13/00	If TB = 1
Resync Threshold	03/11/07	If TB = 1
ECC Error Threshold	03/11/0C	If TB = 1
Uncorrectable ECC Error	03/11/02	If TB = 1

While attempting to read the sector, the sense combinations in Table 21 will be reported by the drive for the condition described if DCR is set and the data is able to be recovered within thresholds while performing retries or heroics. If the data cannot be recovered through heroics, the error codes returned are those listed above in Table 20. If the data is fully recovered and ARRE is set, the drive will attempt to reallocate the logical sector to a new physical sector.

Table 21 - Error Codes Reported While Performing Read Retries, DCR is Set

Error Condition	Sense Key/Code/ASCQ	Data Returned
No retries required. No ECC used	00/00/00	Yes
Retries required. No ECC used	01/17/01	Yes
Heroics required. No ECC used. Auto Reallocation was performed (ARRE = 1)	01/17/06	Yes
Heroics required. No ECC used. Auto Reallocation recommended (ARRE = 0)	01/17/07	If TB = 1
Heroics required. No ECC used. Re-write for Auto Reallocation was successful	01/17/09	Yes

While attempting to read the sector, the sense combinations in Table 22 will be reported by the drive for the condition described if DCR is not set and the data is able to be recovered within thresholds while performing retries or heroics. If the data cannot be recovered through heroics, the error codes returned are those listed above in Table 20. If the data is fully recovered and ARRE is set, the drive will attempt to reallocate the logical sector to a new physical sector.

Table 22 - Error Codes Reported While Performing Read Retries, DCR Not Set

Error Condition	Sense Key/Code/ASCQ	Data Returned
No retries required. No ECC used	00/00/00	Yes
No retries required. ECC required (within thresholds)	01/18/00	Yes
Retries required. ECC required (within thresholds)	01/18/01	Yes
Heroics required. Auto Reallocation was performed (ARRE = 1)	01/18/02	Yes
Heroics required. Auto Reallocation recommended (ARRE = 0)	01/18/05	If TB = 1
Heroics required. Rewrite for Auto Reallocation was successful	01/18/07	Yes

Read Error Reporting: This section describes the logic used by the firmware to determine when to set a specific sense combination, when to report the error via a Check Condition, and when to return the data.

Read Operation

```
Do_seek:
   seek to desired sector
   if seek error
      abort with 04/15
      (RANDOM POSITIONING ERROR)
   init read retry count from Mode Page 01h
   if DCR is set or EEC is set
      set to detect ECC errors but not correct
   if RC is set
      if 1x or 2x mode
         set RC mode in SM330
```

```
        else
            set RC mode in SM330
            set to ignore ID errors, RS errors, and DS errors
    (Comment: wait for hardware to indicate sector has been read
    or that there was an error.)
Wait_for_msg:
    wait for msg from ISR
    if no error
        if recovered from retry
            if PER is set
                set Check Condition
                if DCR is set
                    set sense to 01/17/01
                    (RECOVERED DATA WITH ERROR CORRECTION & RETRIES)
            if DTE is set
                set to return all blocks read
                do not continue after this block
        queue data for SCSI
        if new seek required
            goto Do_seek
        else if more to do
            goto Wait_for_msg
        else
            return to caller
    else
        decrement read retry count
        if no more retries
            if (TB is set or ARRE is set,
                and not physical access, and not read long)
                perform Heroic Recovery
                if successful
                    if PER is set
```

```
            Set Check Condition
        if DCR is set
        set sense to 01/17/07
        (RECOVERED DATA WITHOUT ECC,
         RECOMMEND REASSIGNMENT)
    else
        set sense to 01/18/05
        (RECOVERED DATA, RECOMMEND REASSIGNMENT)
if TB is set
    set to return fully recovered block
    if ARRE is not set
        goto Report_error
if ARRE is set
    attempt to reallocate
    if rewrite of same sector was successful
        if PER is set
            if DCR is set
                set sense to 01/17/09
                (RECOVERED DATA WITH RETRIES AND/OR
                 ECC, REWRITE OF DATA WAS SUCCESSFUL)
            else
                set sense to 01/18/07
                (RECOVERED DATA WITH RETRIES & ECC,
                 REWRITE OF DATA WAS SUCCESSFUL)
    else if reallocation was successful
        if PER is set
            set Check Condition
            if DCR is set
                set sense to 01/17/06
                (RECOVERED DATA WITHOUT ECC,
                 AUTO REALLOCATION PERFORMED)
            else
```

```
                    set sense to 01/18/02
                    (RECOVERED DATA WITHOUT ECC,
                    AUTO REALLOCATION PERFORMED)
            else
                set Check Condition
                if no spares available
                    set sense to 03/32
                    (NO DEFECT SPARE LOCATION AVAILABLE)
                if automatic reallocation failed
                    set sense to 04/81
                if too many attempts to reallocate
                    set sense to 04/44/A6
                    (RELOCATION LIMIT REACHED)
                if Defect List could not be written
                    set sense to 03/32/01
                    (DEFECT LIST UPDATE FAILURE)
else
    set Check Condition
    if TB is set
            set to return partially recovered block
        goto Report_error
    else
        do not return block
        set Check Condition
        goto Report_error
else
    if PER is set
        set Check Condition
        if DCR is set
            set sense to 01/17/01
            (RECOVERED DATA WITH RETRIES)
        else
```

```
            set sense to 01/18/01
            (RECOVERED DATA WITH ERROR CORRECTION & RETRIES)
        prepare to retry the block
        if last retry and EEC is set
            set to use ECC correction
        goto Setup_for_read
Report_error:
    if Sector Mark Threshold error
        set sense to 03/01
        (NO INDEX/SECTOR SIGNAL)
    if ID CRC error
        set sense to 03/10
        (ID CRC OR ECC ERROR)
    if ID Threshold error
        set sense to 03/12
        (ADDRESS MARK NOT FOUND FOR ID FIELD)
    if Data Sync Threshold error
        set sense to 03/13
        (ADDRESS MARK NOT FOUND FOR DATA FIELD)
    if Resync Threshold error
        set sense to 03/11/07
        (DATA RESYNCHRONIZATION ERROR)
    if ECC Threshold error
        set sense to 03/11/0C
        (UNRECOVERED READ ERROR, RECOMMEND REWRITE THE DATA)
    if Uncorrectable ECC error
        set sense to 03/22/02
        (ERROR TOO LONG TO CORRECT)
    return to caller
```

Verify Error Codes: This section identifies the conditions which cause the drive to potentially report status back to the host while performing a verify operation in response

to a SCSI Verify Command. Whether or not the status is actually reported depends upon whether the host issues a SCSI Request Sense Command.

The conditions can be broken down into three main categories which include, 1) attempting to locate the desired sector, 2) attempting to verify the sector, and 3) Drive Attentions and other severe errors. Above Table 8 - Severe Errors, provides the sense combinations reported for severe errors.

While attempting to locate the desired sector, the sense combinations previously listed in Table 19 will be reported by the drive if the indicated error type is encountered. While attempting to verify the sector, the sense combinations previously listed in Table 20 will be reported by the drive if the indicated error type is encountered. With a verify operation, however, no data will actually be returned to the host. By definition, heroics are never performed during the verify operation. The intent is to verify that the data can be read using the (potentially) more stringent thresholds of Mode Page 07h, Verify Error Recovery Parameters. No automatic reallocation of sectors is performed in response to a sector which cannot be verified at the current thresholds. (Note: Automatic reallocation may be performed during a verify after write operation which is initiated through an entirely different SCSI command.)

Verify Error Reporting: This section describes the logic used by the firmware to determine when to set a specific sense combination, when to report the error via a Check Condition, and when to return the data.

Verify Operation

```
    seek to desired sector
    if seek error
        abort with 04/15
        (RANDOM POSITIONING ERROR)
Setup_for_verify:
    init verify retry count from Mode Page 07h
    if DCR is set
        set to detect ECC errors but not correct
    (Comment: wait for hardware to indicate sector has been read
     or that there was an error.)
Wait_for_msg:
```

```
wait for msg from ISR
if no error
    if recovered from retry
        if PER is set
            set Check Condition
            if DCR is set
                set sense to 01/17/01
                (RECOVERED DATA WITH RETRIES)
            else
                Set sense to 01/18/01
                (RECOVERED DATA WITH ERROR CORRECTION APPLIED)
        if DTE is set
            do not continue after this block
if new seek required
    goto Setup_for_verify
else if more to do
    goto Wait_for_msg
else
    return to caller
else
    decrement verify retry count
    if no more retries
        set Check Condition
        goto Report_error (same as Read Operation)
    else
        if PER is set
            set Check Condition
            if DCR is set
                set sense to 01/17/01
                (RECOVERED DATA WITH RETRIES)
            else
                set sense to 01/18/01
```

(RECOVERED DATA WITH ERROR CORRECTION APPLIED)

prepare to retry the block

goto Setup_for_verify

Write Error Codes: This section identifies the conditions which cause the drive to potentially report status back to the host while performing a write operation. Whether or not the status is actually reported depends upon whether the host issues a SCSI Request Sense Command.

The conditions can be broken down into four main categories which include, 1) attempting to locate the desired sector, 2) attempting to write the sector, 3) attempting to reallocate the sector, and 4) Drive Attentions and other severe errors. Above Table 18 - Error Codes Reported While Attempting to Reallocate a Sector, provide the sense combinations reported when reallocation fails, while Table 8 - Severe Errors shows the sense combinations reported for severe errors.

While attempting to locate the desired sector, the sense combinations previously listed in Table 19 will be reported by the drive if the indicated error type is encountered. While attempting to write the sector, the sense combinations shown below in Table 23 will be reported by the drive if the indicated error type is encountered.

Table 23 - Error Codes Reported While Performing Write Operations

Error Condition	Sense Key/Code/ASCQ
No retries required	00/00/00
Retries required	01/0C/00
Auto Reallocation was performed (AWRE = 1)	01/0C/01
Auto Reallocation recommended (AWRE = 0)	03/0C/00

Write Error Reporting: This section describes the logic used by the firmware to determine when to set a specific sense combination, when to report the error via a Check Condition, and when to return the data.

Write Operation

seek to desired sector

if seek error

abort with 04/15

```
        (RANDOM POSITIONING ERROR)
    (Comment: setup section)
Setup_for_write:
    init write retry count from Mode Page 01h
    (Comment: wait for hardware to indicate sector has been
     written or that there was an error.)
Wait_for_msg:
    wait for msg from ISR
    if no error
        if recovered from retry
            if PER is set
                set Check Condition
                set sense to 01/0C/00
                (RECOVERED WRITE ERROR)
            if DTE is set
                do not continue after this block
        if new seek required
            goto Setup_for_write
        else if more to do
            goto Wait_for_msg
        else
            return to caller
    else
        decrement write retry count
        if no more retries
            if AWRE is set, not physical access, not write long
                attempt to reallocate
                if reallocation was successful
                    if PER is set
                        set Check Condition
                            set sense to 01/0C/01
                            (WRITE ERROR RECOVERED WITH AUTO
```

```
                    REALLOCATION)
            else
                set Check Condition
                if no spares available
                    set sense to 03/32
                    (NO DEFECT SPARE LOCATION AVAILABLE)
                if automatic reallocation failed
                    set sense to 04/81
                    (AUTO REALLOCATION FAILED)
                if too many attempts to reallocate
                    set sense to 04/44/A6
                    (RELOCATION LIMIT REACHED)
                if Defect List could not be written
                    set sense to 03/32/01
                    (DEFECT LIST UPDATE FAILURE)
        else
            set Check Condition
            goto Report_error
    else
        if PER is set
            set Check Condition
            set sense to 01/0C/00
            (RECOVERED WRITE ERROR)
        prepare to retry the block
        goto Setup_for_Write
```

Verify After Write Error Codes: This section identifies the conditions which cause the drive to potentially report status back to the host while performing a verify after write operation. Whether or not the status is actually reported depends upon whether the host issues a SCSI Request Sense Command.

The conditions can be broken down into four main categories which include, 1) attempting to locate the desired sector, 2) attempting to verify the sector, 3) attempting to reallocate the sector, and 4) Drive Attentions and other severe errors. Above Table

18 - Error Codes Reported While Attempting to Reallocate a Sector, presents the sense combinations reported when reallocation fails, while Table 8 - Severe Errors, provides the sense combinations reported for severe errors.

While attempting to locate the desired sector, the sense combinations previously listed in Table 19 will be reported by the drive if the indicated error type is encountered. While attempting to verify the sector, the sense combinations previously listed in Table 20 will be reported by the drive if the indicated error type is encountered.

Verify After Write Error Reporting: This section describes the logic used by the firmware to determine when to set a specific sense combination, when to report the error via a Check Condition, and when to return the data.

Verify After Write Operation

```
        seek to desired sector
        if seek error
            abort with 04/15
            (RANDOM POSITIONING ERROR)
        (Comment:  setup section)
Setup_for_verify:
    init verify retry count from Mode Page 07h
    if DCR is set
        set to detect ECC errors but not correct
    (Comment:  wait for hardware to indicate sector has been read
     or that there was an error.)
Wait_for_msg:
    wait for msg from ISR
    if no error
        if recovered from retry
            if PER is set
                set Check Condition
                if DCR is set
                    set sense to 01/17/01
                    (RECOVERED DATA WITH RETRIES)
                else
```

```
                set sense to 01/18/01
                (RECOVERED DATA WITH ECC & RETRIES APPLIED)
            if DTE is set
                do not continue after this block
        if new seek required
            goto Setup_for_verify
        else if more to do
            goto Wait_for_msg
        else
            return to caller
    else
        decrement read retry count
        if no more retries
            attempt to reallocate
            if rewrite of same sector was successful
                if PER is set
                    if DCR is set
                        set sense to 01/17/09
                        (RECOVERED DATA WITH RETRIES AND/OR
                         ECC, REWRITE OF DATA WAS SUCCESSFUL)
                    else
                        set sense to 01/18/07
                        (RECOVERED DATA WITH RETRIES & ECC,
                         REWRITE OF DATA WAS SUCCESSFUL
            else if reallocation was successful
                if PER is set
                    set Check Condition
                    if DCR is set
                        set sense to 01/17/06
                        (RECOVERED DATA WITH ECC,
                         AUTO REALLOCATION PERFORMED)
                    else
```

```
                set sense to 01/18/02
                (RECOVERED DATA WITH ECC,
                 AUTO REALLOCATION PERFORMED)
        else
            set Check Condition
            if no spares available
                set sense to 03/32
                (NO DEFECT SPARE LOCATION AVAILABLE)
            if automatic reallocation failed
                set sense to 04/81
                (AUTO REALLOCATION FAILED)
            if too many attempts to reallocate
                set sense to 04/44/A6
                (RELOCATION LIMIT REACHED)
            if Defect List could not be written
                set sense to 03/32/01
                (DEFECT LIST UPDATE FAILURE)
    else
        if PER is set
            set Check Condition
            if DCR is set
                set sense to 01/17/01
                (RECOVERED DATA WITH RETRIES)
            else
                set sense to 01/18/01
                (RECOVERED DATA WITH ECC & RETRIES APPLIED)
        prepare to retry the block
        goto Set_for_verify
```

Defect Management Areas: This section is TBD. The following are notes and questions which will be used during the definition of this section. Reading DMAs: Which thresholds to use is a design consideration. How many retries. Comparing/Updating DMAs: How many must be good. When are they rewritten. Announcing

"Approaching End of Life" and "End of Life". Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed. Building DMA data structures to support: Sector Slipping, Linear Replacement.

Seek Tables for Different Media: The firmware will download to the DSP the appropriate velocity table for the type of media which is detected to be installed in the drive. A default (i.e., conservative) velocity table will be used until the media type has been determined.

DRIVE COMMAND INTERFACE: The Drive Command Interface is the software interface that provides access to the drive's hardware platform. Access to the SCSI interface, Format Sequencer, ENDEC, and External ENDEC is performed as direct access to those components and not through the Drive Command Interface. All other components are accessed using the Drive Commands defined in the following section.

Drive Commands: The Drive Commands used by the Jupiter firmware are listed in Table 24 below. The column for Type defines whether the Drive Command is immediate (I), performed by the 80C188 (188), or performed by the DSP (DSP). An Immediate Command results in a flag or bit being set and does not require any CPU time to process or monitor the operation. An Immediate Command indicates that the command is complete immediately. The below section, Drive Command Completion, provides further detail relating hereto. A 188 Command type indicates that additional processing is required by the 80C188 to satisfy the request. Additional monitoring may be required to validate that the hardware has reached the desired state. The command is indicated as complete when the processing or monitoring has completed. A DSP Command type indicates that a command must be sent to the DSP to satisfy the Drive Command. The command is indicated as complete when the DSP returns status for its command.

Table 24 - Drive Commands

Code	Name	Description	Type
0x0000	SET_EE_ADDR	Set EEPROM address.	I
0x0100	READ_EEPROM	Read EEPROM (at current address).	188
0x0200	SET_JUMP_BACK_IN	Set to jumpback towards ID.	DSP

0x0300	SET_JUMP_BACK_OUT	Set to jumpback towards OD.	DSP
0x0400	JUMP_BACK_ENABLE	Enable Jumpbacks.	I
0x0500	JUMP_BACK_DISABLE	Disable Jumpbacks.	I
0x0600			
0x0700	DISABLE_EEWR	Disable EEPROM write function.	(TBD)
0x0800	REQ_STATUS	Request DSP status.	DSP
0x0900	SET_LASER_THOLD	Set Laser Read Power Threshold.	DSP
0x0A00	SET_FOCUS_THOLD	Set DSP Focus Threshold.	DSP
0x0B00	SET_TRACK_THOLD	Set DSP Tracking Threshold.	DSP
0x0C00	SET_SEEK_THOLD	Set DSP Seek Threshold.	DSP
0x0D00	SET_SPIN_THOLD	Set Spindle RPM thresholds.	DSP
0x0E00	BIAS_TEST	Perform Bias Magnet Test.	188
0x0F00	READ_DSP_REV	Get DSP firmware revision.	DSP
0x1000	WRITE_EEPROM	Write EEPROM (at current address).	188
0x2000	REQ_STD_STAT	Request Standard Status.	188,DSP
0x2900	REQ_OPT_STAT	Request Optical Status.	188,DSP
0x4400	SET_MAG_READ	Set Bias Magnet, freq., for reading.	188
0x4800	SET_MAG_ERASE	Set Bias Magnet, freq., for erasing	188
0x4C00	SET_MAG_WRITE	Set Bias Magnet, freq., for writing.	188
0x5000	RESET_ATTN	Reset the Drive Attention.	DSP
0x5100	RECAL_DRIVE	Recalibrate the drive.	(TBD)
0x5200	STOP_SPINDLE	Stop the spindle.	188,DSP
0x5300	START_SPINDLE	Start the spindle	188,DSP
0x5400	LOCK_CART	Lock the cartridge.	I
0x5500	UNLOCK_CART	Unlock the cartridge.	I
0x5600	EJECT_CART	Eject the cartridge.	188,DSP
0x5B00	SEEK_COMP_OFF	Set Seek Compensation on.	(TBD)
0x5B01	SEEK_COMP_ON	Set Seek Compensation off.	(TFB)
0x5F00	SLCT_GCR_FRQ_SET	Select a set of frequencis.	I
0x6700	ALLOW_ATTN_CLEAR		(TBD)
0x6800	READ_DRV_RAM	Read RAM in DSP.	DSP
0x6A00	NORMAL_PLL_BWIDTH	Set PLL Bandwidth to normal.	I
0x6A01	HGH_PLL_BWIDTH	Set PLL Bandwidth to high.	I
0x6A02	VHGH_PLL_BWIDTH	Set PLL Bandwidth to very high.	I
0x7000	SET_LWP_RAM	Set Laser Write Power in RAM.	I
0x8000	SEEK_BACKWARD	Seek towards ID.	DSP

0xC000	SEEK_FORWARD	Seek towards OD.	DSP

Drive Commands are one or two word commands which request that some function be performed by either the 80C188 or be passed on to the DSP. The Drive Command code is responsible for maintaining the protocol with the DSP and determining when a command has been completed. In some cases when the 80C188 is performing the function, the command is immediately identified as being complete. In other cases, a delay is required while the hardware is allowed to settle (e.g., in the case of turning on the bias magnet). In the cases where the 80C188 commands the PSP to perform a function, the 80X188 must wait for the DSP to indicate that the command has completed. See below section, Drive Command Completion, for a more detailed discussion of completing commands. The high word for the two-word commands is placed in the variable esdi_cmd. The low word is placed in the variable esdi_cmd2. The commands which only use a single word still use esdi_cmd. These variables are global variables and must be setup before the call to the Drive_cmd function.

Drive Command Descriptions: The following subsections provide a more detailed description of the Drive Commands.

SET_EE_ADDR: The Set EEPROM Address command is used to identify the address for the next NVRAM operation. The address is set first, and then followed by a READ_EEPROM or a WRITE_EEPROM command, as discussed below.

READ_EEPROM: The Read EEPROM command reads the data current stored in the NVRAM from the location previously identified using the SET_EE_ADDR command.

SET_JUMP_BACK_IN: The Set Jumpbacks In Command identifies to the DSP that the media spirals towards the ID and therefore that a jumpback should perform a one track seek towards the ID. A jumpback is performed once per revolution to maintain the optical over the same physical track.

SET_JUMP_BACK_OUT: The Set Jumpbacks Out Command identifies to the DSP that the media spirals towards the OD and therefore that a jumpback should perform a one track seek towards the OD. A jumpback is performed once per revolution to maintain the optical over the same physical track.

JUMP_BACK_ENABLE: The Jumpback Enable Command informs the DSP that jumpbacks should be performed in order to maintain the current optical head position over the media.

JUMP_BACK_DISABLE: The Jumpback Disable Command informs the DSP that jumpbacks should not be performed and that the optical head should be allowed to follow the spiral of the media.

DISABLE_EEWR: This section is TBD.

REQ_STATUS: The Request Status Command requests the current status from the DSP.

SET_LASER_THOLD: The Set Laser Read Threshold Command sets the acceptable range for the laser read power signal. If the read power exceeds the threshold, the DSP issues an aborting interrupt.

SET_FOCUS_THOLD: The Set Focus Threshold Command sets the acceptable range for the focus error signal. If the focus error signal exceeds the threshold, the DSP issues an aborting interrupt.

SET_TRACK_THOLD: The Set Tracking Threshold Command sets the acceptable range for the tracking error signal. If the tracking error signal exceeds the threshold, the DSP issues an aborting interrupt.

SET_SEEK_THOLD: This section is TBD.

SET_SPIN_THOLD: The spindle speed needs to be monitored to ensure that data is written to the media and can be later recovered. The spindle speed is monitored by the DSP against a minimum and maximum RPM specified with this command. If the spindle speed drops below the minimum or exceeds the maximum, the DSP generates an aborting interrupt.

The monitoring function allows the Drive Command interface to detect when a cartridge has come up to speed as well as when a cartridge fails to maintain the correct speed. By setting the minimum RPM to zero and the maximum to the lower RPM for the media's nominal range, the DSP will interrupt the 80C188 when the cartridge is actually up to speed. Once up to speed, the 80C188 issues a new range to the DSP specifying the minimum and maximum RPM for the media's nominal range. A minimum RPM of zero indicates that no check should be performed on the minimum RPM.

BIAS_TEST: The Bias Test Command requests that the bias magnet be tested. The actual steps taken during the test are described below in section, B. POST Definition, Bias Magnet Test.

READ_DSP_REV: The Read DSP Firmware Revision Command requests the firmware revision level from the DSP.

WRITE_EEPROM: The Write EEPROM command writes a byte of data to the NVRAM at the location previously identified using the SET_EE_ADDR command, as described above.

REQ_STD_STAT: The Request Standard Status Command requests the ESDI Standard Status. The status provided includes status for the drive and status from the DSP.

REQ_OPT_STAT: The Request Optical Status Command requests the ESDI Optical Status. The status provided includes status for the drive and status from the DSP.

SET_MAG_READ: The Set Magnet Read Command prepares the drive for a read operation. The bias commands are described below in section Magnet Bias, Laser Power, and PLL Frequency Command.

SET_MAG_ERASE: The Set Magnet Erase Command prepares the drive for an erase operation. The bias commands are described below in section Magnet Bias, Laser Power, and PLL Frequency Command.

SET_MAG_WRITE: The Set Magnet Write Command prepares the drive for a write operation. The bias commands are described below in section Magnet Bias, Laser Power, and PLL Frequency Command.

RESET_ATTN: The Reset Attention Command instructs the DSP to reset the status bits which it has set to indicate the error conditions which generated the Drive Attention interrupt to the 80C188.

RECAL_DRIVE: This section is TBD.

STOP_SPINDLE: The Stop Spindle command opens the servo loops and spins the cartridge down. The Drive Command code first instructs the DSP to open the servo loops for the laser, focus, and tracking. The spindle RPM is then set to zero and the brake is applied. After (TBD) seconds, the brake is removed and the firmware verifies that the spindle has sufficiently slowed down to (TBD) RPM. Once the spindle has

slowed down, the firmware will reapply the brake and delay for (TBD) milliseconds for the cartridge to stop. The time to wait for the initial spin down and the time to wait for the spindle to stop will be dependent upon whether the cartridge is plastic or glass. The firmware will monitor the time to spin the cartridge up in order to determine the type of media installed. The SET_SPIN_THOLD command, see above, will be used to monitor the spindle RPM rate.

START_SPINDLE: The Start Spindle Command is responsible for spinning the cartridge up, validating that the cartridge attains the correct RPM, and then requesting that the DSP perform its initialization with the cartridge. Monitoring the spindle RPM is accomplished using the SET_SPIN_THOLD command, as discussed above.

The spinup is a two-step process which includes: 1) the spindle threshold is set to monitor the RPM until the cartridge gets to the minimum RPM for a particular media type, and then 2) the spindle threshold is set to monitor the RPM for the nominal RPM range for the media. If the cartridge spinup takes too long, the firmware should spin the cartridge down and return an error code (TBD). The drive must not eject the cartridge.

A timer will be used to measure the amount of time required to bring the media up to the 4x (default) RPM. The time required to spinup the cartridge will indicate whether the media is plastic or glass. Once identified, the STOP_SPINDLE command will use an appropriate timeout based on the cartridge type.

Once the cartridge has reached the RPM, the firmware will issue an initialize command to the DSP. At that time, the DSP will attempt to close all its servo loops.

LOCK_CART: The Lock Cartridge Command sets a flag which causes any subsequent requests to eject the cartridge to be denied.

UNLOCK_CART: The Unlock Cartridge Command clears a flag and allows subsequent requests to eject the cartridge to be honored.

EJECT_CART: The Eject Cartridge Command spins down a cartridge, if it is currently spinning, the eject the cartridge. The steps taken to spin down the cartridge are the same steps taken for the STOP_SPINDLE command, as described above. Once spun down, the firmware issues an eject cartridge command to the DSP.

SEEK_COMP_OFF: This section is TBD.

SEEK_COMP_ON: This section is TBD.

SLCT_FRO_SET: The Select Frequency Set Command selects a set of frequencies. Each media format requires a different set of frequencies for media recording. The Bias Magnet Command, see below, is used to select one frequency from the set identified with this command.

ALLOW_ATTN_CLEAR: This section is TBD.

READ_DRV_RAM: This section is TBD.

NORMAL_PLL_BWIDTH: This section is TBD.

HGH_PLL_BWIDTH: This section is TBD.

VHGH_PLL_BWIDTH: This section is TBD.

SET_LWP_RAM: The Set Laser Write Power RAM Command sets the laser write power value for a specific laser power zone. This command allows the drive during diagnostics to modify the write power which would be used during the next erase or write operation performed in the specified power zone.

SEEK_BACKWARD: The format for the Seek Backward Command is presented below in section, Seek Command.

SEEK_FORWARD: The format for the Seek Forward Command is presented below in section, Seek Command.

Seek Command: The format for the two-word seek command appears below in Table 25.

Table 25 - Seek Command

hi_wd:	bit 15	Seek Command = 1
	bit 14	Direction Bit (1 = "OD", 0 = "ID")
	bit 13-0	Unused
lo_wd:	bit 15-0	Number of tracks to seek

For the Seek Command, "OD" is defined as the direction towards the OD or away from the spindle motor. "ID" is defined as the direction towards ID or towards the spindle motor. The thresholds for the DSP to use while seeking must be set separately prior to issuing the seek command. The seek thresholds are set using the SET_SEEK_THOLD command.

Magnet Bias, Laser Power, and PLL Frequency Command: The Bias Command is responsible for setting up the hardware to enable the drive to read, erase, or write at a specific location on the media. The format for the one_word Bias Command is shown in Table 26 below.

Table 26 - Bias, Laser Power, and Frequency Command

hi_wd:	bit 15 -12:	Bias Command	= 0100
	bit 11-10:	MO bias 01	= read
		10	= erase
		11	= write
	bit 9:	"seek to follow"	= 1
	bit 8-0	Zone (Laser Power and Freq.)	
lo_wd:	bit 15-0:	Unused	

In order to read, erase, or write at a specific location on the media, the Drive Command code must setup the magnet bias, the laser write power levels (for 2x and 4x only), the PLL frequency, and the DSP focus and tracking thresholds. When the command is to prepare for an erase or write operation, the Drive Command code must also verify that the bias magnet is drawing current between (TBD)V and (TBD)V within (TBD) milliseconds. The serial ADC will be used to sample the current which the bias magnet is drawing. The DSP focus and tracking thresholds to be used during a read, erase, or write operation must be set separately prior to the operation. The SET_FOCUS_THOLD and SET_TRACK_THOLD commands are used to set these thresholds.

There is only one frequency band for 1x media and there are no Laser Power Write Zones as writing is not supported for 1x. The number of Laser Power Write Zones for 2x will be equal to the number of bands (i.e., 16 zones). The number of Laser Power Write Zones for 4x will be equal to the number of bands (i.e., 30 bands for media formatted with 512-byte sectors and 34 bands for media formatted with 1024-byte sectors).

Drive Command Status: The status available from the Drive Command Interface is based on a modified ESDI interface, as used with the RMD-5000 series products. The status bits reflect the actual state of the hardware, error conditions from the DSP.

or a state being managed by the firmware. The status is provided in two 16-bit words, commonly referred to as Standard Status and Optical Status. The definition of the status words and the source of the status are listed in Table 27 - ESDI Standard Status and Table 28 - ESDI Optical Status below.

Table 27 - ESDI Standard Status

Standard Status	Bit	Source of Status
(Reserved)	15	(not used)
MEDIUM_NOT_PRESENT	14	FW maintained
WRITE_PROTECT	13	FW maintained
OROM_MEDIA	12	FW maintained
(Reserved)	11	(not used)
(Reserved)	10	(not used)
SPINDLE_STOPPED	9	FW maintained
POWER_ON_CONDITION	8	(not used)
ESDI_CMD_PTY_FLT	7	from DSP
ESDI_INTERFACE_FLT	6	FW maintained
ESDI_INVALID_CMD	5	from DSP
SEEK_FAULT	4	from DSP
MAGNET_BIAS_FAILURE	3	FW maintained
MAX_LASER_POWER_EXCEEDED	2	(not used)
WRITE_FAULT_ERROR	1	(TBD)
CARTRIDGE_CHANGED	0	from GLIC

Table 28 - ESDI Optical Status

Standard Status	Bit	Source of Status
DRIVE_INIT_FAULURE	15	(not used)
NOT_ON_TRACK	14	from DSP
CART_LOAD_FAILURE	13	from DSP
SPINDLE_SPEED_FAILURE	12	from DSP
FOCUS_SERVO_FAILURE	11	from DSP

(Reserved)	10	(not used)
(Reserved)	9	(not used)
LASER_DRIVE_FAILURE	8	from DSP
CARTRIDGE_REJECTED	7	(not used)
CARTRIDGE_INIT_FAILURE	6	from DSP
DRIVE_HARDWARE_FAILURE	5	(not used)
WRITE_TERMINATED	4	(TBD)
EJECT_REQUEST	3	from GLIC
ERASE_BIAS_IS_ON	2	FW maintained
WRITE_BIAS_IS_ON	1	FW maintained
DC_POWER_FAILURE	0	(not used)

Serial Drive Control Interface: The Drive Command Interface provides a common mechanism to programming the various serial devices in the Jupiter hardware. Serial devices have been selected for spindle motor control, ADC, read channel components, and the NVRAM. The serial interface is transparent to the firmware. The Drive Command firmware is responsible for knowing how to talk to each device to start the spindle, to read the bias current on the ADC, or read or write data at a location in the NVRAM, etc. It is important that the Drive Command firmware deselect all serial chip selects to abort any previous operation which may still be in progress.

Open Issue. All interrupts must be disabled while a serial access is being performed. Interrupts may need to be disabled for between 100µs and 1ms.

80C188/DSP Communication Interface: The commands to the DSP and their functions are specified in the 80C188/TMS320C5X Communications document (DSP-COMM.DOC), Rev XGH - August 25, 1994. For convenience, the commands are listed below in Table 29 - DSP Commands.

Table 29 - DSP Commands

DSP_REQ_STAT	0x00
DSP_INIT_DRV	0x01
DSP_LSR_ON	0x02
DSP_CAP_FOCUS	0x03
DSP_CAP_FTRK	0x04
DSP_CAP_CTRK	0x05

DSP_CLOSE_PIN	0x06
DSP_JB_EN_IN	0x07
DSP_JB_EN_OUT	0x08
DSP_SEEK_IN	0x0A
DSP_SEEK_OUT	0x0B
DSP_OPEN_LOOPS	0x0C
DSP_CLR_INT	0x0D
DSP_RD_VEL	0x0E
DSP_RD_CLOCK	0x0F
DSP_EJECT_CART	0x11
DSP_GET_REV	0x80
DSP_RD_MEM	0x81
DSP_WR_MEM	0x82

DSP Status Definitions: Table 30 lists the bit definitions for the DSP status bytes. The Table 30 also identifies how each bit is translated into a bit in the ESDI Standard Status or the ESDI Optical Status definition.

Table 30 - DSP Status to ESDI Status Translation

DSP Status Byte 0	Bit	ESDI Equivalent	Status	Bit
DSP_CMD_COMPLETE	7			
DSP_BAD_CHECKSUM	6	ESDI_CMD_PTY_FLT	Standard	7
DSP_INVALID_CMD	5	ESDI_INVALID_CMD	Standard	5
DSP_TRACKING_ERR	4	NOT_ON_TRACK	Optical	14
DSP_TIMER_EVENT	3			
DSP_FOCUS_ERR	2	FOCUS_SERVO_FAILURE	Optical	11
DSP_LASER_POWER_ERR	1	LASER_DRIVE_FAILURE	Optical	8
DSP_FOCUS_LP_CLOSED	0			
DSP Status Byte 1				
DSP_FINE_LP_CLOSED	7			
DSP_COARSE_LP_CLOSED	6			
DSP_PINNING_LP_CLOSED	5			
DSP_SPINDLE_SPEED_ERR	4	SPINDLE_SPEED_FAILURE	Optical	12
DSP_LASER_ON	3			
DSP_JUMPBACK_IN	2			
DSP_EJECT_FAIL	1	CART_LOAD_FAIL	Optical	13
DSP_BAD_SEEK	0	SEEK_FAULT	Standard	4

Drive Command Completion: The command and status phase of a Drive Command have been separated in order to provide the 80C188 firmware with the flexibility to continue processing while the DSP performs the command. At a later point, the 80C188 firmware can specifically wait for the command to complete. Normally, all that is required is that two consecutive commands do not overrun. Therefore, at the beginning of each Drive Command, the firmware must check that the previous command has completed and if not, to wait for a specified amount of time (TBD) before timing out.

Commands to the DSP fall into difference categories which require different timeouts. A memory access should complete within 500µs. A short seek should complete within 2 milliseconds, a long seek within 100 milliseconds. Initialization of the DSP can take up to 2 seconds.

The Drive Command firmware must also monitor timeouts for hardware that it is directly responsible for managing, such as the bias magnet and the Read Channel components. The bias magnet may take as long as 4.5 milliseconds to achieve the desired field strength. The delay while the Read Channel settles is (TBD)µs.

JUKEBOX 20-PIN CONNECTOR SUPPORT: This section describes the actions taken by the Jupiter drive in response to various signals on the 20-pin jukebox connector. There will be no tests in the firmware to determine whether the jukebox cable is attached. All signals will be asserted/deasserted at the jukebox interface whether or not a cable is attached.

AC Eject: When the AC_EJECT signal is asserted on the 20-pin connector, the drive will abort any current operation and transfer all data in the Write Cache to the media. If the cartridge is spinning, the firmware will issue a Drive Command to spin the cartridge down. Once the drive has validated that the cartridge has stopped spinning (method is TBD), the drive will issue a Drive Command to eject the Cartridge.

AC Reset: Open Issue. When the AC_RESET signal is asserted on the 20-pin connector, the drive will no longer accept any new commands. Those commands which are currently in the queue will be serviced to completion. Any data currently in the Write Cache will be flushed to the media. Once the drive completes the above function, it will wait for the Autochanger Reset signal to deassert before completing the SCSI initialization, as described above.

Cartridge in Drive: The CART_IN_DRIVE (AKA cartridge present) signal on the 20-pin connector will be maintained in a deasserted state, whether or not there is a cartridge in the drive. No firmware support will be provided for this signal. The interrupt is possible from the External ENDEC. There is, however, no sensor to generate the cartridge i throat signal.

Cartridge Loaded: The CART_LOADED (AKA cartridge present) signal on the 20-pin connector will be asserted when a cartridge is present, seated on the hub, spinning, and the DSP has completed its initialization (including focus and tracking).

Error: The ERROR signal on the 20-pin connector will be asserted whenever a cartridge eject sequence fails. There currently is no way for the firmware to detect a cartridge load or unload failure without a cartridge in throat sensor.

LED Pipe: The LED_PIPE signal on the 20-pin connector will be asserted whenever the drive's LED is illuminated.

Power Down Request: When the PWRDNREQ signal on the 20-pin connector is asserted, the drive will complete any write command already in progress and then transfer all data in the Write Cache/write buffer to the media.

Power Down Acknowledge: When the Write Cache has been flushed in response to a PWRDNREQ signal, the drive will assert the PWRDNACK signal on the 20-pin connector.

Standalone/AC: The drive can determine whether the 20-pin connector is attached by sensing the level of this signal on the jukebox interface. If the signal is high, the drive is in standalone mode. If the signal is low, the drive has a 20-pin connector attached to the jukebox.

DRIVE OPERATION: Non-Volatile RAM (NVRAM): NVRAM will be used with the Jupiter drive. Some drive parameters (such as laser power settings and OEM product information) will be customized and stored in the NVRAM. If the NVRAM is later deleted from the design, the parameters will be stored in Flash.

Power Supply Failures: Any failure of the 5V or 12V power will produce a hardware reset to the 80C188.

Focus Offset Calibration for 1x and 2x: The DSP will perform the Focus Offset Calibration for 1x and 2x media, optimizing for the best Radial Push Pull (RPP) signal.

Focus Offset Calibration for 4x: This section is TBD. The following are notes and questions which will be used during the definition of this section. The Focus Offset Calibration for 4x is performed in two parts. The first part of the calibration is performed by the DSP in which it will optimize for the best RPP signal, as done for the 1x and 2x Focus Offset Calibration. The second part of the Focus Offset Calibration for 4x will be performed to optimize for the best carrier-to-noise ratio (CNR). This requires that the 80C188 write and read data patterns, select the best offset, and pass the offset to the DSP.

The 80C188 will command the DSP to use a specific focus offset and then write a 2T data pattern to a sector. The sector is read and within approximately 100µs the serial ADC must be read to capture the value of the "sample and hold". The process is repeated using various focus offsets until an optimum value is determined. The specific algorithm is TBD. The final value is then passed to the DSP.

Write Power Calibration for 2x: This section is TBD. The following are notes and questions which will be used during the definition of this section. Open Issue. The 80C188 will perform the write power calibrations using the following (TBD) algorithm.

Write Power Calibration for 4x (Prewrite Testing): This section is TBD. The following are notes and questions which will be used during the definition of this section. Open Issue. We need to identify when the prewrite testing is to be performed: 1) temperature initiated, test all zones, 2) temperature initiated, only when the zone is next used, 3) each time a new zone is written to, and 4) some other algorithm. Also, do the prewrite test tracks have headers. Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

The process for write power calibration for 4x is similar to the process for determining the 4x focus offset. The 80C188 is responsible for writing a series of sectors while varying the write power level for WR1. It may be necessary to skip one or two sectors while the setup for the next write is performed. Once a range of values have been used, the 80C188 reads the same sectors and uses the serial ADC to quantify the read back signal. Based on an algorithm (TBD), the optimum write power level is determined.

It is important to note that this sequence needs to be interruptible and restartable. If a new SCSI command is received in the middle of the algorithm, the drive needs to respond in a timely fashion to the command and return to the prewrite testing at a later time.

Open Issue. If the drive is performing the prewrite testing and a new SCSI write command is received, does the drive 1) abort the prewrite testing and execute the write command using the old write power levels, or 2) continue with the prewrite testing to determine the new write power levels, thereby increasing this commands overhead. Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

Recalibration: This section is TBD. The following are notes and questions which will be used during the definition of this section. When is it done. What is done. Temperature Monitoring, How often. How much of a rise in temperature is required to induce a recalibration.

What will be calibrated versus recalibrated. When will the drive recalibrate. Will calibration and recalibration be the same. Will recal be done for laser current changes. Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

The DSP calibration includes establishing the Focus Offset and the RPE Offset. There are two algorithms for calibrating focus. Which algorithm to use has not been established. Recalibration will be performed as a function of temperature or as an error recovery procedure. With every rise in temperature of 5-10°C, the Focus Offset, RPE Offset, and Write Laser Power will be recalibrated. The recal should be performed when "nothing else" is being processed. If the recalibration is in process, it must be interruptible for incoming SCSI commands. If the system remains busy for an extended period, eventually the recal must take precedence. A recal will not take place for every change in the laser read power.

Flash EEPROM Support: The Write Buffer SCSI Command will be used to download new SCSI firmware to the drive. The drive will not be capable of surviving a reset or power cycle which may occur during the update of the Flash EEPROM. It will be extremely important to make this fact clear to the end user which may be attempting to perform the firmware update: they must never cycle power or cause a reset during the

download process. If this happens, the drive will need to be sent back to the factory for repair.

Manufacturing Requirements: This section is TBD. The following are notes and questions which will be used during the definition of this section. Trace Buffer Support (whether same as RMD-5300 is a design consideration).

Read Ahead Cache: This section is TBD. The following are notes and questions which will be used during the definition of this section. The amount of memory dedicated to the read and write portions of the cache will be set through the Mode Pages. See Below.

Write Cache: This section is TBD. The following are notes and questions which will be used during the definition of this section. The amount of memory dedicated to the read and write portions of the cache will be set through the Mode Pages. Will timed flush be supported. Immediate Reporting. Write Reordering. Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

SCSI Command Performance: This section is TBD. The following are notes and questions which will be used during the definition of this section. Combining multiple SCSI commands into a single media request. Breaking a seek into preliminary and final seeks. Bus occupancy algorithms: Buffer Empty Ratio for writing. Buffer Full Ratio for reading. These are matters of design considerations.

Powered-On Hours: The number of hours the drive has been powered on will be kept in NVRAM. To accumulate the powered-on hours, the DSP will interrupt the 80C188 approximately every 10 seconds (2^{19} x 20μs). The 80C188 will update the powered-on hours by 2^{19} x 20μs and store the total in the NVRAM. If the drive encounters an error, the 80C188 can request the current value of the DSP clock. Only the lower 19 bits are used and will be added to the powered-on hours giving a relative time stamp for the error event. Note: 1) The time spent during initialization prior to releasing the DSP from reset is not included. This time could be added each time the drive powers up. 2) The time remaining until the next 10 (approximately 5 seconds) could be added on each time the drive powers up.

Lens Cleaning: Once it has been determined that the lens must be cleaned, the next time the drive will eject the cartridge, the actuator will be moved into position. The

cartridge eject will cause a brush to pass over the lens. When the cartridge has cleared the throat, the actuator will be moved to its normal position. The following are open issues: 1) What if the cartridge remains in the throat. 2) When is it safe to move the actuator back to its normal position. 3) Can the lens be harmed in any way if the actuator is moved at the "wrong" time during this procedure. Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

Firmware Performance: This section is TBD. The following are notes and questions which will be used during the definition of this section. Identify minimum sector times for media RPM. Use strategy for multiple sectors per interrupt. Identify time critical regions of Interrupt Service Routines (ISRs).

Front Panel Eject Request: This section is TBD. The following are notes and questions which will be used during the definition of this section. Will this abort the current command. Is the contents of the cache written to the media first. Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

SCSI Eject Command: This section is TBD. The following are notes and questions which will be used during the definition of this section. Will this always eject, even if the Cartridge Present Switch indicates there is no cartridge. Should this be disabled via an option switch. Jukeboxes may or may not want a host to be able to eject the cartridge directly. Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

Option Switches: This section is TBD. The following are notes and questions which will be used during the definition of this section. Enable/Disable hard reset from SCSI Bus Reset signal. (Will be routed to hardware reset for enabled). Enable/Disable SCSI termination. Enable/Disable automatic verify after write. Enable/Disable flash memory programming for SCSI firmware updates. Enable/Disable eject from SCSI command. Reserved (number TBD).

A. FIRMWARE REQUIREMENTS: This section contains the firmware requirements which were used to derive the Firmware Functional Specification.

1. Diagnostics

1) Support serial communications for diagnostics.

2) Serial communication supports access to new hardware.

3) Develop power-on self-test (POST) diagnostics for new chips andhardware: RLL (1,7) ENDEC, GLIC (Glue Logic IC), NVRAM, Read Channel, Spindle Motor, Serial A/D Converter, Parallel D/A Converter.

4) Motor spindle speed must be changeable via a SCSI command.

2. Firmware Upgrades

1) Support Flash EEPROM for SCSI Firmware.

2) New firmware (SCSI and/or DSP) must be downloadable through SCSI.

3) A firmware download operation must be recoverable.

3. DSP Support

1) Must be able to download DSP code from SCSI EEPROM.

2) Must support a Communication Interface providing commands, status, and data exchange.

3) Must be capable of supporting a ROMable DSP.

4) Must support different velocity tables for different media formats.

4. 20-Pin Connector

1) The firmware must be able to detect when the 20-pin connector is attached.

2) The firmware must be able to read the latched values for the following 20-pin connector signals: Autochanger RESET, Autochanger Power Down Request, Autochanger Eject, SCSI ID, SCSI Parity Enabled.

3) The firmware must be able to read the current status of Autochanger RESET (non-latched).

4) The firmware must receive an interrupt when the following signals on the 20-pin connector are asserted: Autochanger RESET, Power Down Request, Autochanger Eject.

5) The firmware must be able to assert/deassert the following signals on the 20-pin connector: CART_IN_DIRVE, CART_LOADED, ERROR, PWRDNACK (Power Down Acknowledge).

6) When PWRDNREQ on the 20-pin connector is asserted, 1) the Write Cache is flushed, and then 2) PWRDNACK is asserted.

5. SCSI Initialization

1) The SCSI Initialization firmware will use the 20-pin connector as the source of the drive's SCSI ID. When the cable is attached, the signals will be driven by the jukebox. When the cable is not attached, the same pins will have jumpers installed to indicate the SCSI ID to be used.

2) The SCSI Initialization firmware will use the 20-pin connector as the source of the drive's SCSI Parity Enable. When the cable is attached, the signal will be driven by the jukebox. When the cable is not attached, the same pin will have a jumper installed to indicate whether SCSI Parity should be enabled.

3) The drive must support user selection of terminator power.

6. Reset

1) If the SCSI Bus RESET signal is asserted, an INT3 to the 80C188 is produced.

2) If the Autochanger RESET signal is asserted, an interrupt to the 80C188 is produced.

3) If the SCSI Bus asserted RESET, the INT3 ISR must determine from an option switch whether a hard or soft reset must be performed. If a soft reset is to be performed, the INT3 ISR notifies the Monitor Task that a reset has occurred and that the contents of the Write Cache must be flushed.

4) If the Autochanger asserted Autochanger RESET during the power-up sequence, the drive a) must ignore Autochanger EJECT, and b) must wait for Autochanger RESET to be deasserted before performing the SCSI initialization.

5) The Autochanger may assert Autochanger RESET at any time to change the drive's SCSI ID.

7. Read Channel Support

1) The firmware must setup the Read Channel for the current type of read operation.

8. Write Channel Support

1) The firmware must initiate the process to sample signals from the Read Channel for sectors used for prewrite testing.

2) The firmware must determine the optimum Write Power Level for the current frequency zone and current drive temperature.

3) The firmware must send the Focus Offset to the DSP for 4x media.

9. Drive Command Support

1) Drive Command Interface must be based upon the interface used with the HC11.

2) The Drive Command status word definition must be identical to the status words used with the CP.

3) Jump Back must be enabled/disabled through a GLIC register, read by the DSP.

4) The direction of the Jump Back must be specified to the DSP.

5) The Drive Command firmware must set the spindle speed for the media type.

6) The Drive Command firmware must be able to validate that the spindle is up to speed.

7) The Drive Command firmware must be able to sample the drive's temperature.

8) The Reset Interface Command will now assert SERVO RESET for one microsecond and then deassert SERVO RESET.

9) The Seek Command must accommodate a range of physical tracks corresponding to the logical tracks in the range from -3366 to +76724.

10) The Drive Command firmware will enable/disable the bias magnet and select the magnet polarity.

11) The Bias/Laser/Freq Command must accommodate up to 34 frequency and laser power zones.

12) The Drive Command firmware will tell the DSP to eject the cartridge.

13) The Drive Command firmware must be able to sense when a cartridge is Write Protected.

14) The Drive Command firmware will control the chip select for serial interface.

15) The Drive Command firmware will use NVRAM for logged events and other saved drive parameters (e.g., laser power levels).

10. Drive Attention Handler

1) The Drive Attention Handler must detect when a cartridge has been inserted and seated on the hub. The cartridge will then be spun up.

2) After a cartridge has been inserted, loaded, spun up, and the DSP "locked up", CART_LOADED must be asserted.

3) If Autochanger EJECT is asserted or the Front Panel EJECT switch is pressed, the drive a) transfers all queued write operations to the media (flushes the Write Cache), spins the cartridge down, and c) ejects the cartridge.

4) When a cartridge is spun down, CART_LOADED must be deasserted.

5) During the cartridge unloading sequence, the Autochanger ERROR signal is asserted if the DSP reports that the eject failed.

6) The Drive Attention Handler must handle and clear the following types of errors: Seek Fault, Off Track, Bias Magnet Failure, Laser Failure, Load/Unload failure, Spindle not at speed, Write Fault.

11. Functional Enhancements Required

1) Add support for non-media access commands while drive is satisfying a media access command but is currently disconnected. (This is commonly referred to as multiple initiator support.)

2) Modify commands to support various command sets. (TBD - HP, IBM, DEC, Apple, Fujitsu, etc.)

3) Add support for new command sets. (TBD)

4) Add support for Vendor Unique Sense Data and Sense Key/Code combinations. (TBD)

5) Add P-ROM support.

6) Add CCW (pseudo-WORM) support.

7) Add Read Ahead Cache.

8) Add Write Cache, including flushing the buffer after a user selectable time delay.

12. Performance Requirements

1) The Interrupt Service Routines must be capable of handling minimum sector times of: 1x at 3600 RPM 538 microseconds, 2x at 3320 RPM 368 microseconds, 4x at 1900 RPM 272 microseconds.

13. Other Requirements

1) The firmware must assert/deassert the Front Panel LED.

2) The firmware will support the power-on hours odometer.

3) The firmware will support the cartridge load odometer.

4) If either the 5V or 12V power fails, the drive will (TBD).

14. Interrupt Sources

1) The interrupt sources for Jupiter are: i) INT0, Cirrus Logic SM331(DINT), Cirrus Logic SM330, RLL(1,7)ENDEC; ii) INT1, Cirrus Logic SM331 (HINT); iii) INT2, DSP, GLIC (Glue Logic IC); iv) INT3, SCSI Bus Reset.

2) The sources of the DSP interrupts are as follows: i) Non-Aborting Interrupt, Bad Seek Error, 10-Second Timer Event, Bad Command Checksum,Unknown Command, Cartridge Eject Failed; ii) Aborting Interrupt, Focus Error, Off Track Error, Laser Power Control Error, Spindle Not At Speed Error.

3) The sources of the GLIC interrupts are as follows: Autochanger Reset, Autochanger Power Down Request, Autochanger Eject, Front Panel Eject, Cartridge Inserted (in throat), Cartridge Present (seated on the hub).

4) Cartridge Inserted will not be supported by the firmware.

15. Error Recovery

1) Heroic Error Recovery for individual sectors will be attempted after the user-specified number of retries and the user-specified thresholds.

2) Error Recovery will include recovery using the following error recovery modes: (TBD)

B. POST DEFINITION: This section contains a description of the tests which are performed during the Power-On Self Test (POST).

1. 80C188 Register and Flag Test

The 80C188 CPU sign, parity, carry and zero flags are checked to be sure that they are properly set and then reset. The test is performed in two parts. First, the value 0xC5 is placed in the AH register and then stored into the flags using the SAHF instruction. The flags are tested for their reset state (i.e., JNS, JNP, JNC, and JNZ). Second, the value is complemented and stored into the flags. The flags are tested for their set state (i.e., JS, JP, JC, and JZ). Any flag not in the proper state fails the test and forces the drive to use the LED to signal a CPU fault.

The register test is a ripple test, passing the value 0xFFFF through all registers (i.e., AX, BX, ES, CX, DS, DX, SS, BP, SI, DI, and SP). The value 0x0000 is then passed through the same registers. If the desired value is not present in the final register in the series, the test fails and forces the drive to use the LED to signal a CPU fault.

2. CPU RAM Test

The CPU RAM test writes an incrementing byte pattern to all locations of the static RAM (SRAM) in two passes. Alternating patterns rewritten in 128-byte blocks.. During the first pass, the pattern for the first block is 0x00, 0x01, 0x02, ..., 0xFE, 0xFF. The

pattern for the next block is 0x01, 0x02, 0x03, ..., 0xFF, 0x00. During the second pass, the pattern is inverted. If any SRAM location does not contain the correct value when read back at the end of each pass, the test fails and forces the drive to use the LED to signal a RAM fault.

3. 80C188 Interrupt Vector Test

The interrupt vector test uses a software interrupt to test the dispatching ability of the 80C188. An entry in the Interrupt Vector Table (IVT) is initialized to point to a test Interrupt Service Routine (ISR). The AX register is initialized to 0x0000. The interrupt is dispatched to using the INT instruction, the AX register is decremented, and the ISR exits. Upon return from the interrupt, the value in AX is checked. If the value is not 0xFFFF, the test fails and forces the drive to use the LED to signal a CPU fault.

4. ROM Checksum Test

The ROM Checksum Test checks the contents of the flash PROMs using a primitive degree 16 polynomial. If the calculated checksum is not zero, the test fails and forces the drive to use the LED to signal a ROM fault.

For each 16-bit word in PROM, the low byte is XOR'd into the BH register and BX is multiplied by two. If the carry flag is set after the multiply (shift), the polynomial 0x38CB is XOR'd into BX. The high byte from the PROM is XOR's into the BH register and BX is multiplied by two. If the carry flag is set after the multiply (shift), the polynomial 0x38CB is XOR's into BX.

5. SM331 Register Test

The Cirrus Logic CL-SM331 Register Test resets the SM331 and checks the registers after reset for appropriate values. If any register fails the test, the drive declares an unclearable condition and uses the LED to signal a (TBD) error.

The specific steps are as follows: 1) Assert the SM331 chip reset, 2) Deassert the SM331 chip reset, 3) Clear the Disk Access Pointer (DAP), 4) Registers 0x57 (BM_DAPL) through 0x5F are checked for zero, 5) Register 0x41 (SCSI_SEL_REG) is checked for zero, 6) Register 0x43 (SCSI_SYNC_CTL) through 0x45 are checked for zero, 7) Register 0x48 (SCSI_STAT_2) through 0x49 are checked for zero, 8) Register 0x50 (BM_SCHED_DATA) through 0x52 are checked for zero.

6. SM331 Sequencer Test

The Cirrus Logic CL-SM331 Sequencer Test writes a pattern into the Write Control Store (WCS) for the sequencer and validates the pattern written. If any portion of the test fails, the drive declares an unclearable condition and uses the LED to signal a (TBD) error.

The specific steps are as follows:

1) The sequencer is stopped. (The value 0xIF is written to the start address.)

2) An incrementing pattern is written to each of the 31 locations in the WCS for the Next Address, Control, Count, and Branch fields.

3) The incrementing pattern is verified.

4) The incrementing pattern is written to each of the 31 locations in the WCS for the Next Address, Control, Count, and Branch fields.

5) The decrementing pattern is verified.

7. SM330 ENDEC Test

The Cirrus Logic CL-SM330 ENDEC Test resets the SM330, clears the GPO register, clears the Corrector RAM, verifies the Corrector RAM, and induces a Sector Transfer Count Equals Zero interrupt. If any portion of the test fails, the drive declares an unclearable condition and uses the LED to signal a (TBD) error.

The specific steps are as follows:

1) Assert the SM330 chip reset.

2) Deassert the SM330 chip reset.

3) Delay at least 10 microseconds for the chip to perform its reset.

4) The General Purpose Output (GPO) register is initialized to 0x00.

5) The Corrector RAM locations 0x00 and 0x01 are zeroed.

6) The Corrector RAM locations 0x0F to 0x16 are zeroed.

7) The Corrector RAM locations 0x20 to 0x27 are zeroed.

8) The Corrector RAM locations 0x00 and 0x01 are checked for zero.

9) The Corrector RAM locations 0x0F to 0x16 are checked for zero.

10) The Corrector RAM locations 0x20 to 0x27 are checked for zero.

11) The standard chip initialization is performed as described above.

12) The interrupt vector for the SM330 is initialized to point to a test Interrupt Service Routine.

13) A "Sector Transfer Count Equals Zero" interrupt is forced by writing a zero as the transfer count to the Sector Transfer Count Register.

14) The firmware waits for a maximum count of 0xFFFF for the interrupt to decrement a register which is being polled.

8. External ENDEC Test (TBD)

9. Glue Logic Test (TBD)

10. Buffer RAM Test

The Buffer RAM test writes an incrementing address pattern to all locations in the Buffer RAM and then verifies the pattern. The incrementing pattern used is 0x00, 0x01, 0x02, ..., 0xFF. The test then writes and inverse address pattern to all locations in the Buffer RAM and then verifies the pattern. The inverse pattern used is 0x00, 0xFF, 0xFE, ..., 0x01. Finally, the test writes 0x00 to all locations in the Buffer RAM. If any location in the Buffer RAM has failed, the drive declares an unclearable condition, but does not signal the error with the LED.

11. DSP POST

The basic functionality of the DSP is validated by the 80C188 by issuing a Read Code Revision command to the DSP. This command will test the interface between the 80C188 and DSP, access a location in the DSP memory, and test the ability to return valid status.

12. Bias Magnet Test

The Bias Magnet Test will turn on the bias magnet for a write function. (To preclude accidental data loss, the laser write power Digital to Analog Converters (DACs) will be maintained at the read power levels.) The Drive Command code is responsible for turning on the magnet, setting the laser write power, and then reading the Analog to Digital Converter (ADC) to verify that the bias coil is drawing (TBD) current. The Drive Command code will wait (TBD) milliseconds before reading the ADC. If the current is not within (TBD) range, the drive declares an unclearable condition, but does not signal the error with the LED.

C. SM330 REGISTERS: This section contains a description of the Cirrus Logic SM330, Optical Disk ENDEC/ECC registers as provided below in Table 31.

Table 31

Register Name	Offset	Description	Read/Write Status
EDC_CFG_REG1	10h	Configuration reg	R/W
EDC_CFG_REG2	11h	Configuration reg	R/W
EDC_CFG_REG3	12h	Configuration reg	R/W
EDC_SPT	13h	Sectors/track	R/W
EDC_ID_TARG_SEC	14h	ID Target Sector	R/W
EDC_ID_TARG_TRK_LSB	15h	ID Target Track LSB	R/W
EDC_ID_TARG_TRK_MSB	16h	ID Target Track MSB	R/W
EDC_ID_CMP_SEC	17h	ID Compare Sector	R/W
EDC_ID_CMP_TRK_LSB	18h	ID Compare Track LSB	R/W
EDC_ID_CMP_TRK_MSB	19h	ID Compare Track MSB	R/W
EDC_SEC_XFR_CNT	1Ah	Sect. Xfer Cnt.	R/W
EDC_SEC_COR_CNT	1Bh	Sect. Corr. Cnt.	R/W
EDC_DAT_BUF_ADR_L	1Ch	Data Buffer Address High	R/W
EDC_DAT_BUF_ADR_M	1Dh	Data Buffer Address Mid	R/W
EDC_DAT_BUF_ADR_H	1Eh	Data Buffer Address Low	R/W
EDC_REV_NUMBER	1Fh	CL-SH8530 Revision Number	R/W
EDC_INT_EN_REG	20h	Interrupt Enable Reg.	R/W
EDC_MED_ERR_EN	21h	Media Error Enable	R/W
EDC_INT_STAT	22h	Interrupt Status	R/W
EDC_MED_ERR_STAT	23h	Media Error Status	R/W
EDC_SMC	24h	Sector Mark Control	R/W
EDC_RMC	25h	Resync Mark Control	R/W
EDC_ID_FLD_SYN_CTL	26h	ID Field/Sync Control	R/W
EDC_ID_ERR_STAT	27h	ID Error Status	R/W
EDC_WIN_CTL	28h	Window Control	R/W
EDC_TOF_WIN_CTL	29h	TOF Window Control	R/W
EDC_SM_ALPC_LEN	2Ah	Sector Mark/ALPC	R/W
EDC_LFLD_ALPC	2Bh	LFLD/ALPC	R/W
EDC_PLL_LOCK_CTL	2Ch	PLL Lock Control	R/W
EDC_PLL_RELOCK_CTL	2Dh	Relock Control	R/W
EDC_LFLD_WIN_CTL	2Eh	LFLD Window Control	R/W
EDC_RESV2	2Fh	Reserved	R/W
EDC_ECC_COR_STAT	30h	ECC Correction Status	R/W
EDC_ECC_RAM_ADR	31h	ECC RAM Address	R/W

EDC_ECC_RAM_ACC	32h	ECC RAM Access	R/W
EDC_RESV3	33h	Reserved	—
EDC_VU_1	34h	Vendor Unique Byte	R/W
EDC_VU_2	35h	Vendor Unique Byte	R/W
EDC_VU_3	36h	Vendor Unique Byte	R/W
EDC_VU_4	37h	Vendor Unique Byte	R/W
EDC_GPI	38h	General Purpose Input	R–
EDC_GPO	39h	General Purpose Output	R/W
EDC_RESV4	3Ah	Reserved	—
EDC_TEST_REG	3Fh	Test Register	R/W

D. SM331 REGISTERS: This section contains a description of the Cirrus Logic SM331, SCSI Optical Disk Controller register as shown below in Table 32.

Table 32

Register Name	Offset	Description	Read/Write Status
SCSI_ACC_REG	40h	Direct SCSI Access Port	R/W
SCSI_SEL_REG	41h	Sel/Reselection ID	R/W
SCSI_PHA_CTL	42h	SCSI Phase control register	R/W
SCSI_SYNC_CTL	43h	SCSI Sync. Xfer. Control reg	R/W
SCSI_MODE_CTL	44h	SCSI Mode Control reg	R/W
SCSI_OP_CTL	45h	SCSI Operation Control reg	R/W
SCSI_STAT_1	46h	SCSI Status Reg 1	R/W
SCSI_INT_EN_1	47h	SCSI Interrupt Enable Reg	R/W
SCSI_STAT_2	48h	SCSI Status Reg 2	R/W
SCSI_INT_EN_2	49h	SCSI Interrupt Enable Reg 2	R/W
SCSI_FIFO	4Ah	SCSI MPU FIFO Access Port	R/W
SF_SECT_SIZE	4Eh	Sector Size	R/W
SF_MODE_CTL	4Fh	Mode Control	R/W
BM_SCHED_DATA	50h	Scheduled Buffer Data	R/W
BM_STAT_CTL	51h	Buffer Status/Control	R/W
BM_XFER_CTL	52h	Transfer Control reg	R/W
BM_MODE_CTL	53h	Buffer Mode Control	R/W
BM_TIME_CTL	54h	Buffer Timing Control	R/W
BM_DRAM_REF_PER	55h	DRAM Refresh Period	R/W
BM_BUFF_SIZE	56h	Buffer Size	R/W

BM_DAPL	57h	Disk Address Pointer Low	R/W
BM_DAPM	58h	Disk Address Pointer Mid	R/W
BM_DAPH	59h	Disk Address Pointer High	R/W
BM_HAPL	5Ah	Host Address Pointer Low	R/W
BM_HAPM	5Bh	Host Address Pointer Mid	R/W
BM_HAPH	5Ch	Host Address Pointer High	R/W
BM_SAPL	5Dh	Stop Address Pointer Low	R/W
BM_SAPM	5Eh	Stop Address Pointer Mid	R/W
BM_SAPH	5Fh	Stop Address Pointer High	R/W
SF_SYNC_BYTE_CNT_LMT	70h	Sync. Byte Count Limit	R/W
SF_OP_CTL	77h	Operation Control reg	R/W
SF_NXT_SEQ_ADR	78h	Next Format Seq. Control	R..
SF_BRANCH_ADR	78h	Branch Address	..W
SF_SEQ_STAT_REG1	79h	Sequencer Status reg 1	R..
SF_SEQ_STRT_ADR	79h	Sequencer Start Address	..W
SF_SEQ_STAT_REG2	7Ah	Sequencer Status reg 2	R..
SF_INT	7Dh	Interrupt reg	R/W
SF_INT_EN	7Eh	Interrupt Enable reg	R/W
SF_STACK	7Fh	Stack	R..

E. GLIC REGISTERS: This section contains a description of the MOST Manufacturing, Inc. Glue Logic Integrated Circuit (GLIC) registers as provided below in Table 33.

Table 33

Register Name	Offset	Description	Read/Write Status
GLIC_DSP_REG	00h	DSP Comm Register	R/W
GLIC_JB_CTRL_REG	01h	Jukebox Control Register	R/W
GLIC_INT_EN_REG	02h	Interrupt Enable Register	R/W
GLIC_MIO_REG	03h	Miscellaneous Control Register	R/W
GLIC_JB_INP_REG	04h	Jukebox Input Register	R..
GLIC_WPR_DAC0	04h	Write Power DAC0	..W
GLIC_INT_INS_REG	05h	Interrupt In-Service Register	R..
GLIC_WPR_DAC1	05h	Write Power DAC1	..W
GLIC_WPR_DAC2	06h	Write Power DAC2	..W

GLIC_WPR_DAC3	07h	Write Power DAC3	..W

Drive Exceptions: Status and Error Handling Considerations

The following Tables 33-43 provide a summary of the "Exceptions" handling issues relating to the firmware of the present invention, and specific issues relating thereto.

Next objective = discuss missing items/changes, data integrity risk issues, and resolve where in the drive what functions are performed (considering logic, costs, and manpower impacts).

Notes and Assumptions:

1) It is the intention that this list includes all drive exception handling conditions.

2) At the time of filing the present application, which discloses the current best mode of this invention, there are several concerns about power regulation, laser feedback, and media read level damage threshold. With this in mind, the following is taking the safe initial drive operation path by having all read level and focus acquisitions to occur at the inner radius during drive initialization (read power and focus will never be acquired in the data region, just maintained).

3) The recovery section refers to drive shut downs and non-volatile error logs due to recovery failures. These failures are identified and logged, but the user is not prevented from attempting to execute the command again. This does increase risk to user data integrity, with some compensation provided by the non-volatile error log.

4) It is assumed that more then one initiator will be on the SCSI bus.

5) Error detection should never be disabled (although interrupts may be masked).

6) Exception handling priorities = 1) Data integrity, 2) cost impact, 3) system performance, and 4) error logging capability.

7) Some of the drive implementation design methods and the specifics of exception handling timing are a function of the market we are targeting. An environment of high contaminants versus an environment of high vibration will have performance differences for the specific implementations.

8) The DSP does not have plans to implement additional power on reset tests outside the currently supported communication test and descriptive error status conditions.

9) The GPO register bits 2 and 5 need to be checked for proper power up polarity.

Additional Exceptions Not In The Tables:

1) "Power On", "Hard Reset", and "Soft Reset" are discussed above.

2) "Invalid SCSI Command" and "Improper SCSI Command" exception handling is discussed in conjunction with SCSI handling.

3) "Power Failure" (5V & 12V) is currently triggering a power on reset as described above. There is currently, however, discussion for power faults to be handled differently (individual 12V interrupt to the DSP and no 5V is a matter of design). At the time of filing this application, this issue was left open. This detailed matter, however, is believed only to indicate continuing development issues which do not to impact operability of the present invention as disclosed herein.

4) "Laser Write Power Error" reserved for monitoring the laser write power levels during write is not implemented or being pursued.

5) 188 internal "Write Fault" flags improper write conditions triggered by spin error (etc.). Previously, this was also triggered by a real time measurement on the bias current. Real time measurement of bias current is now a future consideration. Question marks appearing in the following tables present design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

Table 34

ERROR DETECTION						
SIGNAL	READ POWER	SPIN	FOCUS	TRACKING	SEEK	EJECT
Status Filter	No	No	Yes	Yes	No	No
Time Critical (Accuracy)	No (not attempted)	Yes	Yes	Yes	No	No
Sample Rate/ Time to Error	TBD to 1 msec +TBD	16.7 to 31.6 msec (1 rev) +TBD	50 Khz 80 usec	50 Khz 80 usec	TBD +TBD	 5 sec.
Write Interrupt Abort/Non-Abort	Abort	Abort	Abort	Abort	Non-Abort	Non-Abort

188 Mask Capability	No-Yes?	Yes	Yes	Yes	Yes	Yes

Table 35

ERROR QUALIFICATION						
SIGNAL	READ POWER	SPIN	FOCUS	TRACKING	SEEK	EJECT
Qualification Filter	Yes	Yes	Yes	Yes	No	No
Time Critical	Yes	No	No	No	No	No
Sample Rate/ Time to Error	ASAP	TBD > 100 msec	y msec	y msec	10 msec	TBD > 100
Qualification Description	The initialization process and focus acquisition will require a 100 msec recovery and verification period.	Check for 100 msec of good status over 1 second. Process recovery if not successful.	Move status threshold to read level. Check for x msec of good status over a y msec period. Process recovery if not successful.	Move status threshold to read level. Check for x msec of good status over a y msec period. Process recovery if not successful.	Process Recovery Directly.	Process Recovery Directly.

Table 36

ERROR RECOVERY						
SIGNAL	READ POWER	SPIN	FOCUS	TRACKING	SEEK	EJECT
Priority	1	5	2	3	4	12

Recovery Description	1) Shut down laser. Open all loops.	1) Reset spin for proper speed.	1) Open all loops and issue a initialize drive to the DSP.	1) Open fine and coarse tracking loops. Close fine trk. loop, and then coarse trk. loop. (maybe issue a seek?).	1) Open the fine and coarse trk. loops and issuing a init. drive to the DSP.	1) Re-issue the eject command.
	2) Re-Initialize the power (init. drive) at a non-data region. 3) Monitor power status for 100 msec.	2) Monitor spin status for 100msec of good status over 1 sec. 3) If failure, open all loops and shut down	2) Monitor init. drive status for success. 3) If failure, open all loops and issue a init. drive for a total of 3	2) Monitor tracking status. 3) If failure, 3rd error will result in opening the fine and coarse trk. loops and	2) Failure of the init. drive will result in opening all loops and issuing a init. drive (full init.). 3) If failure,	2) Failure to successfully complete eject in 3 tries will result in drive shut down (non-volatile
	4) 2nd error will force drive shut down (non-volatile error record).	spin and retry for a total of 3 times. 4) 3rd error will result in drive shut down (non-volatile error record).	times. 4) 3rd error will result in drive shut down (non-volatile error record).	issuing a init. drive to the DSP. 4) Failure of the init. drive will result in opening all loops and issuing a init. drive (full init.)	3rd failure of the full init. drive will result in drive shut down (non-volatile error record).	error record).
				5) 3rd failure of the full init. drive will result in drive shut down (non-volatile error record).		

Table 37

EXCEPTION SOURCES						
SIGNAL	READ POWER	SPIN	FOCUS	TRACKING	SEEK	EJECT
	Laser feedback and media reflectivities, and drive error.	Shock, vibration, media imbalance, thermal shutdown, and drive errors.	Shock vibration, media defects, media variations, thermal shutdown, and drive errors.	Shock, vibration, media defects, media variations, thermal shutdown, and drive errors.	Shock, vibration media defects, calibration variations, and drive error.	Media mechanical jam errors and drive

Table 38

SIGNAL	READ POWER	SPIN	FOCUS	TRACKING	SEEK	EJECT
		* Non-volatile error logging for all recovery attempts.	* Non-volatile error logging for all recovery attempts. * Can the drive support focus capture in the data region (laser feedback, etc.)	* Non-volatile error logging for all recovery attempts. * PROM effects. * Item "1" needs test mods/verification. * Init. requires a mod. to recognize that the focus loop is open.	* Non-volatile error logging for all recovery attempts. * Recovery considerations for crash conditions.	* Non-volatile error logging for all recovery attempts. *Can the DSP detect the cam position. *Can the eject motor maintain stall currents without burnup.

Table 39

ERROR DETECTION						
SIGNAL	Incorrect Seek Track ID	Magnet Bias	Sector Mark	Track-Sector ID	Data Read ECC Level	Internal Parity Error

Status Filter	Yes	No	Yes	Yes	Yes	No
Time Critical (Accuracy)	No	Yes	Yes	Yes	Yes	Yes
Sample Rate/ Time to Error	2/header	1/write operation	1/header	2/header	1/sector	TBD
Pre-Write Cond. Abort/Non-Abort	Pre-Abort	Pre-Abort	Pre-Abort	Pre-Abort	N/A	Abort
Mask Capability	Yes	Yes	Yes	?	Yes	Yes
Filter Description	READ: WRITE: VERIFY: Successfully read one track and sector ID. 2 of 2 header track numbers must match.		READ: WRITE: VERIFY: 4 of 5 and 3 of 4 symbols must match.	READ: WRITE: VERIFY: 2 of 2 track and sector numbers must match.	READ: Threshold set to TBD level to support reads and detection for reallocation	
					VERIFY: Threshold set to a TBD level (lower then the read level) to support verify and reallocation	

Table 40

ERROR QUALIFICATION						
SIGNAL	Incorrect Seek Track ID	Magnet Bias	Sector Mark	Track-Sector ID	Data Read ECC Level	Internal Parity Error
Qualification Filter	No	No	Yes	No	No	No

Time Critical	No	Yes	Yes	Yes	Yes	Yes
Sample Rate/ Time to Error	1/header	1/write operation	1/header	2/header	1/sector	TBD

Table 41

ERROR RECOVERY						
SIGNAL	Incorrect Seek Track ID	Magnet Bias	Sector Mark	Track-Sector ID	Data Read ECC Level	Internal Parity Error
Priority	6	7	8	9	10	11
Recovery Description	READ: WRITE: VERIFY: Re-seek a total of 3 times to obtain a track number match. If unsuccessful, report error to host and non-volatile memory.	WRITE: Set the unclearable magnet failed bit and do not write. Record in non-volatile memory.	WRITE: VERIFY: 1) Failure to verify any SM will result in band freq. sweeps for the given media (see "Media Formats" 2) Failure for the specific sector will result in sector reallocation.	WRITE: VERIFY: 1) Failure to verify any IDS will result in band freq. sweeps for the given media (see "Media Formats" 2) 2 of 2 track and sector numbers must match, failure will result in sector reallocation.	READ: Increase ECC level to maximum to attempt data recovery. Retry reads up to 3 times. Reallocate if above TBD ECC level. VERIFY: Reallocate sector if ECC level is above TBD.	READ: WRITE: VERIFY: Retry operation 3 times. Record error to host and non-volatile memory.
			READ: 1) Failure to verify any SM will result in band freq. sweeps for the given media (see "Media Formats"	READ: ? 1) Failure to verify any IDs will result in band freq. sweeps for the given media (see "Media Formats"		

			2) Failure for the specific sector will result in heroic recovery including reduction of SMs needed from 3 to 0 (using synthesized sector mark).	2) Retry up to 3 times. Heroic recovery including 1 of 2 track and sector number matches.		

Table 42

EXCEPTION SOURCES						
SIGNAL	Incorrect Seek Track ID	Magnet Bias	Sector Mark	Track-Sector ID	Data Read ECC Level	Internal Parity Error
	Media defects, media variations, and drive error.	Thermal shutdown and drive error.	Media defects, media variations, and drive error.	Media defects, media variations, and drive error.	Media defects, media variations, and drive error.	Drive error.

Table 43

ISSUES						
SIGNAL	Incorrect Seek Track ID	Magnet Bias	Sector Mark	Track-Sector ID	Data Read ECC Level	Internal Parity Error
	* Logging of errors in non-volatile memory.	* Do we do this after writing also?	* Logging of errors for heroic recovery?		* Determining when previously	

		*Data integrity concern for bias failure during write.	* Re-allocation of high error sectors.		written sectors are reallocated is a question.	
		* Thermal shutdown is reset auto. * Hard current limits need to be identified.				

Read Ahead Cache

This section describes the operation of the Read Ahead Cache for the RMD-5200-SD drive. A brief cache overview will be provided, followed by a description of the individual cache components. This section will also describe the test used to verify operation of the Read Ahead Cache.

The 256 cache code was developed based on the 128 cache code. There are only two differences (apart from media specific function calls) in the two modes of operation. The first is that the 256 cache ISR contains delayed error processing. (Delayed errors are media errors which are detected before the previous sector has completed correction.) The second difference is that the 256 mode does not diagnose a "Sequencer Stopped" error. These differences are not critical to the operation of the cache. The present discussion, therefore, will not distinguish between 256 and 128 caching.

The read ahead cache code was originated prior hereto. The present invention includes modifications to the original code. These changes were made to improve data integrity, and add 256 mode functionality. This discussion will not highlight what features were changed. It will, instead, describe the behavior of the current best mode of the code.

Cache Overview: Cache Enable Conditions: Caching will be kicked off only if all of the following conditions apply, 1) the RCD bi of mode page 8 is set to zero, 2) the current SCSI command is a Read_6 or Read_10, in LBA mode of addressing, or 3) the

current SCSI READ command completes without any errors. This includes a Check Condition status phase, and relocations. Caching is not performed when any relocations have been made in order that the SDL can be update without delay.

Cache Prefetch Operation: The prefetching operation begins at the logical block immediately after the last logical block of the previous READ command. Errors that occur during the prefetch operation are not reported to the initiator unless the target cannot, as a result of the error, execute subsequent commands correctly. The error well be reported on the subsequent command.

Cache Termination: Caching will terminate upon any of the following conditions, 1) the last LBA to be cached is read, 2) an unrecoverable read error occurs and retries are used up, 3) a reset of Bus Device Reset occurs, 4) a conflicting SCSI command is received, (A "conflicting" SCSI command is one that requires the drive to seek, access the buffer, or change the drive parameters (spindle speed, media removal prevention status, etc.,) see discussion below), or 5) a Drive Attention occurs.

Cache Components: Mode Page 8: The Mode Page 8 defines parameters that affect the operation of the read ahead cache. However, only the RCD bit (bit 0 of byte 2) has any real impact on the operation of the read ahead cache in the RMD-5200-SD. This bit is the Read Cache Disable bit. As its name implies, when this bit is set, caching is disabled.

The other fields in Mode Page 8 are not implemented, and cannot be changed from their default values.

Drive Structure Cache Parameters: Cache parameters which indicate the status of the read ahead cache are stored in the drive structure, drv_cfg:

1) cache_ctrl (UINT)

Individual bits describe the current state of the cache:

0x0001: CACHE_ENABLED

Set when mode page 8 allows cache, and last READ command from host is a Read_6 or Read_10 in LBA mode, and there are blocks that can be cached.

0x0002: CACHE_IN_PROG

Indicates that the hardware is executing a cache read. Set when a cache read is kicked off, and reset when the cache ISR queues a tcs on the cache queue.

0x0004: CACHE_STOP

Set by Cache Monitor task to notify cache ISR to terminate caching.

0x0008: CACHE_TCS_ON_Q

Indicates that a tcs from the cache ISR is on the Cache Monitor queue. This tcs should be processed before kicking off another cache read.

0x0010: CACHE_START_SCSI_XFER

Set by function RdDataInCache when a cache hit occurs. This bit indicates that the read processor may begin a SCSI transfer immediately.

0x0020: CACHE_ABORT_READ_TASK

Set by Cache Monitor to indicate that control should return to the SCSI Monitor Task.

0x0040: CACHE_MORM_IN_PROG

Indicates that the current read operation is for requested data.

2) cache_start_lba (ULONG)

The first LBA cached.

3) cache_cur_lba (ULONG)

The LBA following the last LBA cached.

4) cache_buff_addr (ULONG)

The buffer address corresponding to cache_start_lba.

5) cache_xfer_len (UINT)

Number of blocks left to cache.

6) cache_blks_rd (UINT)

Number of blocks cached.

7) cache_free_space (UINT)

Free space available for cached data.

8) cache_free_space_predict (UINT)

Expected free space for cached data.

Cache Functions: The functions called when caching is enabled will be described in roughly the order in which they are called during a simple cache sequence.

CheckQueuRouting (Old Task, New Task): Both the SCSI Monitor Task and the Cache Monitor Task are able to process TCSs from the SCSI selection ISR. Only one of these two tasks will perform this role at a time. The variable scsi_mon_task is used to designate which task is to receive any further SCSI selection TCSs. CheckQueuRouting will designate scsi_mon_task = New_Task. In addition, the queue of Old_Task is filtered. Any TCSs from the Drive Attention ISR or from the SCSI selection ISR are transferred to the queue of New_Task. Other TCSs are deallocated.

CheckQueuRouting is called by both the SCSI Monitor Task and the Cache Monitor Task as SCSI control is switched between them.

Compute_cache_rng(): This function is an assembly routine, called before starting a normal read operation when caching may be performed later. Its purpose is to calculate the first LBA to be cached and the maximum number of blocks that can be cached (cache_xfer_len). The cache transfer length is truncated by the maximum amount of free space available, and by the maximum LBA. Compute_cache_rng() also initialize drv_cfg.cache_blks_rd = 0. If the transfer length is valid, the CACHE_-ENABLED bit in drv_cfg.cache_ctrl is set.

Prep_Cache(): This function is an assembly routine whose purpose is to determine whether the normal read has completed, and if so, initialize the following cache parameters: 1) drv_cfg.cache_free_space, 2)drv_cfg.cache_free_space_predict, 3) drv_cfg.cache_buff_addr. Prep_Cache() returns TRUE if the cache can be kicked off, else it returns FALSE.

Cache ISR (RA_cache_isr, or gcrRAC_isr): The cache ISR is a simplified version of the normal read ISR, except that it is simplified in the following areas: 1) on ECC complete, the ISR only checks for free space availability and burst completion. Unlike a normal read, the cache is not concerned with SCSI transfers, so it doesn't need to check for SCSI notification conditions; 2) except for the sequencer stopped error, the

cache ISR does not distinguish between error types, Caching does not modify any error thresholds on retries, so there is no need to determine the specific type of error; 3) the cache ISR checks for the CACHE_STOP bit in the drv_cfg.cache_ctrl on each ECC complete. If set, the ISR terminates further caching.

Due to its simplified nature, the Cache ISR only returns three cache states: 1) RA_XFER_CMPLT, returned when the cache blocks have been successfully read, and a new seek is required to continue the cache; 2) RA_RD_ERROR, returned when any error occurs, unless it was due to the sequencer stopping; and 3) RA_SEQ_STOPPED. This error is treated separately because the corrective action requires that the sequencer be restarted.

REQUEST_TASK(New Task): Request_task sets the state of the calling task to SLEEP, while activating New_Task. Request_task also saves the value of the instruction pointer in the calling function. The New_Task will begin execution at the point where it last called Request_task (indicated by the saved instruction pointer).

Cache Monitor Task: Activation of Cache Monitor Task: The Cache Monitor Task is activated by the Read Task upon the final transfer of data back to the host. Once activated, it processes TCSs from the SCSI selection ISR, the Drive Attention ISR, and from the Cache ISR.

The Cache Monitor Task is not a true task in the sense that it is not activated merely by placing a TCS on its queue. Instead, it is invoked by the Read Task via a call to REQUEST_TASK(New_Task), as described above. Initially, the Cache Monitor Task will begin its execution at the outermost Sleep() statement. The Cache Monitor Task returns control to the Read Task by another call to REQUEST_TASK.

It is important to note that while the Cache Monitor Task is active, there is one TCS being used by the Read Task, which has not yet been returned to the system. The SCSI Monitor Task is still waiting for this particular TCS when control returns to the SCSI Monitor task.

SCSI Monitor Functions: Part of the role of the Cache Monitor Task is to process TCSs from the SCSI selection ISR. The Cache Monitor Task begins receiving TCSs from the SCSI selection ISR when the SCSI Monitor Task receives a READ command and Mode Page 8 has not disabled caching. At this point, the SCSI Monitor Task

reroutes its TCSs by calling CheckQueuRouting (SCSI_MONITOR_TASK, CACHE_-MONITOR_TASK).

The Cache Monitor Task groups SCSI commands into three categories which include, 1) Conflicting Commands, 2) Concurrent Commands, and 3) Continuing Commands. Depending on the command category, the Cache Monitor Task will abort caching, execute the command, or stop and resume caching.

Conflicting Commands: A conflicting command is one that requires the drive to seek, access the buffer, or change the drive parameters (spindle speed, media removal prevention status, etc.). Upon receipt of a conflicting SCSI command, the Cache Monitor Task will shutdown and abort caching. The SCSI monitor task is reinstated. The following commands are defined as conflicting commands: Rezero Unit, Prevent/Allow Media Removal, Format, Write_10, Reassign Block, Seek_10, Erase_6, Erase_10, Write_6, Write/Verify, Seek_6, Verify, Mode Select, Read Defect Data, Reserve Unit, Write Buffer, Release UnitRead Buffer, Mode Sense, Read Long, Start/Stop, Write Long, Send Diagnostics, All Vendor Unique commands.

Concurrent Commands: Concurrent commands are those which can be executed without degrading the state of the cache. The following commands are defined as concurrent commands: Test Unit Ready, Inquiry, Request Sense, Read Capacity.

Continuing Commands: Continuing commands are read commands which may request cached data, and kickoff additional cache reads. Only two commands are classified as continuing commands. These commands are Read_6 and Read_10.

Processing Cache ISR TCSs: The Cache Monitor Task Receives TCSs from the Cache ISR, then calls RaCacheIsrProc() to process the TCS.

Cache Monitor Task Deactivation: Control is returned to the Read Task should any SCSI READ command come in which requests non-cache data. Control is returned to the SCSI Monitor Task should caching be terminated due to the occurrence of a SCSI reset, Bus Device Reset Message, conflicting SCSI command, or Drive Attention.

When the Cache Monitor Task is deactivated, control is returned to the Read Task, which may then return control to the SCSI Monitor Task. Control flow is determined by the cache task state set by the Cache Monitor Task. The cache task states are evaluated by the Read Task when it is reinstated via a call to REQUEST_TASK. The three cache task states are described next. 1) RAC_TERM: This state indicates that

caching has been aborted. The Read Task will return back to the SCSI Monitor, which immediately returns the READ TCS and fetches the next TCS off the queue. Note that the SCSI Monitor task does not go to STATUS phase as it would normally, because status and command complete has already been sent as part of the transition to the Cache Monitor Task. 2) RAC_CONT: This state indicates that a new READ command has come in, and all or part of the data requested has already been cached. The Cache Monitor task has kicked off a SCSI transfer, and the Read Processor needs to wait for the SCSI TCS to come in. 3) RAC_NEW_REQ: This state indicates that a new READ command has come in and none of the requested data has been cached. The Read Processor needs to kick off a "normal" read and then wait for the TCS from the Read ISR.

RaCacheIsrProc(): This routine is called by the Cache Monitor Task, and its purpose is to perform the functions of the Read Task with respect to disk transfers. It processes TCSs from the Cache ISR, updates appropriate parameters in the drive structure, and kicks off additional read operations as required.

StopCacheinProg(): This routine is called by the Cache Monitor Task when it receives a "continuing" READ command. The purpose of StopCacheInProg is to cleanly terminate the current cache process. It checks the CACHE_IN_PROG bit to see if a cache is in progress. If so, the CACHE_STOP bit is set to notify the Cache ISR to terminate caching. After a 5 ms delay to allow the cache to terminate, the CACHE_-IN_PROG bit is checked again to see whether the ISR shut down the cache. If the bit is not cleared, it is assumed that the cache was shut down by some other means. In this case, the CACHE_STOP and CACHE_IN_PROG bits are cleared.

RdDataInCache(): This routine is called by the Cache Monitor Task when it starts processing a "continuing" READ command. Its purpose is to determine whether there is a cache hit by the new read request. If there is a cache hit, the CACHE_START_-SCSI_XFER bit is set in drv_cfg.cache_ctrl. RdDataInCache also modifies drv_cfg.rw_-scsi_blks to reflect how many of the requested blocks have been cached.

If there was a cache hit, but not all the requested data has been cached, RdData-InCache modifies drive structure data to indicate how many blocks have been read, how many are left to be read, and where the read should resume.

Read Ahead Cache Performance Test: Test Description: A cache test program called CT.C was developed. This cache test program runs with the SDS-3(F) host adapter. This program was modified slightly to yield CTT.C. CTT.EXE was used to verify the RMD-5200-SD read ahead cache.

CTT exercised the cache over the first 64K LBAs. A unique pattern is written to each of these LBAs. The pattern consists of all 0X5As, with the first four bytes over-written with the block's hexadecimal LBA address (except for LBA 0, whose first four bytes are set to 0xFF). CTT first checks LBA 0, and if the expected pattern is missing, the CTT initialize the disk. If LBA 0 matches, then the disk is assumed to be initialized.

After the disk is initialized, CTT performs several passes of sequential reads across the 64k blocks. The same transfer length is used within a pass. The transfer length is then doubled for the next pass. The maximum transfer length use is 64 blocks due to the limited buffer size of the host adapter. A data compare is performed on each read to verify data integrity.

Test Options: Logging Results to a File (Command Line Option): The user can Specify a log file by executing with the command line, C:> CTT -fo=*filename.ext*. If a log file is specified, any results normally printed to the screen will also be printed to the log file.

Target ID: CTT can test various target IDs, although it cannot do so during the same execution.

Number of Iterations: The user can specify how many times CTT will execute the entire test.

Initial Transfer Length: The user can specify the initial transfer length. On subsequent passes, the transfer length is doubled until the transfer length exceeds 64 blocks.

Pause Between Reads: CTT will always do a pass without pausing between reads. As an option, however, CTT will also do a pass with pauses between reads. This option ensures that the drive has time to do a total or partial cache, depending on the delay. The partial cache was tested to ensure that the drive can stop the cache reliably. The total cache was tested to ensure that the drive stops caching when the buffer is full.

Pause Length: If the pause option has been selected, the user will also be asked for the paused delay time in milliseconds.

Halting on Errors: CTT also inquires whether the test should halt when it encounters an error condition (such as a data miscompare or check condition status). Halting is useful when performing the user is not logging results to a file, such as when testing for frequent errors.

Disc Drive Firmware Architecture

This section describes the architectural changes required to implement Jupiter-I using the Cirrus Logic Optical Disk Controller Chip Set and using the RMD-5200-SD firmware as a baseline.

The Jupiter-I architecture will reduce the number of tasks required in the system. The SCSI Monitor Task (now called the Monitor Task) will control the overall function of the drive. The Read Task and Write Task will be combined into a Drive Task. The functionality of the Read Ahead Cache Monitor Task will be split: the duplication of the monitor functions will be eliminated and the caching functions will be moved to the Drive Task. The specific changes to the (SCSI) Monitor Task and the Drive Task are described above.

Interrupts: The Jupiter-I drive has four categories of interrupt. These include non-maskable interrupts (NMI), SCSI Interrupts, Drive Interrupts, and Drive Attention Interrupts.

NMIs are generated when the SCSI Bus RESET signal is asserted, when the 20-pin connector ACRESENT is asserted (TBD), or when PWRDNREQ (autochanger power down request) is asserted.

A SCSI interrupt is generated when the first six bytes of a command have been received, when the SCSI Bus Attention signal is asserted, when a SCSI parity error occurs, when a buffer parity error occurs, or when a SCSI transfer has been completed.

A drive interrupt is generated from three possible chips: the SM331, SM330, or External ENDEC. The SM331 interrupts when the format sequencer stops or when a ECC correction vector parity error is detected. The SM330 interrupts in 1x or 2x mode when, a valid ID has been read, a media error occurs, an ECC error occurs, a slipped sector is encountered, the Sector Transfer Count register decrements to zero, or when an Operation complete interrupt is generated. The SM330 interrupts in 4x mode when

an ECC error occurs or an Operation Complete interrupt is generated. The External ENDEC interrupts in 4x mode when, a valid ID has been read, a media error occurs, a slipped sector is encountered, the Sector Transfer Count register decrements to zero, an erase or write terminates abnormally, or when an index pulse is generated.

A drive Attention interrupt is generated by the DSP or by Glue Logic IC (GLIC). The DSP will generate a Drive Attention Interrupt when, it fails to properly initialize, a seek fault occurs, an off-track condition is detected, the spindle motor is at speed, and when the spindle motor is not at speed. The GLIC will generate a Drive Attention Interrupt when, the AC Eject is asserted, the front panel eject button is pressed, the Eject Limit signal is asserted, the Cartridge Sensor signal toggles, and when the Cartridge seated Sensor signal toggles.

Multi-Tasking Kernel: Identifying Message Types: The current architecture provides a means to identify the type of a specific message which has been received. Currently, the source of the message is interrogated and the "status" of the message is sometimes used as type. The integer variables for TCS ID, TCS Source ID, and TCS Destination ID will be converted to byte variables. A new byte variable for message type will be added, maintaining the additional bytes as reserved in the TCS header. The message type variable will function as the tag field in a variant record.

Concurrent Processing: Concurrent processing is required for Jupiter-I in order for the drive to, a) perform command queuing, and b) respond in a multiple initiator environment to a non-media access command when a read or write request has been issued to the Drive Task. The current architecture causes the SCSI Monitor Task to block execution until the Read Task or Write Task has completed processing the current request.

Concurrent processing in Jupiter-I will be achieved by, 1) not allowing the Monitor Task to block after sending a request to the Drive Task, 2) by having all tasks participate in the round-robin scheduling by "sharing" the CPU resource, and 3) by allowing the Monitor Task to preempt the Drive Task or Low-Level Task when a non-disconnecting command is received. To implement 1) above, the Monitor Task will use a new kernel service to send the request to the Drive Task. The current way that the tasks register for which task is to receive a message when a Drive Attention occurs will need to change. Drive Attention message routing will be discussed below in detail. Item 20,

round-robin scheduling, will be implemented as described in the following section. Item 3), preemption, will be implemented as described after the following section. It should be noted that if preemption is not implemented, a semaphore will be required to manage the SCSI interface. New kernel services will be required to test, test & set, and clear the SCSI_in_use semaphore.

Round-Robin Scheduling: In order for each task to have "equal" access to the CPU resource, each task must give up the CPU at periodic intervals. This is already accomplished to some extent when a task's execution blocks while it waits for the next message to arrive in its queue. With the requirement for concurrent processing, the latency from the time the Monitor Task needs to run and the time the Drive Task surrenders the CPU needs to be minimized. The latency issue is addressed in the next section on preemption.

When preemption is not required, the CPU will be voluntarily shared between the tasks. The kernel call to wait for the next message cause the current task to block while the kernel searches for a ready task. The scheduling latency while the kernel performs this search will be minimized by, 1) reducing the number of tasks to be checked, and 2) by reducing the possible states a task may be in. The number of tasks will be reduced by eliminating a Read Ahead Monitor Task and by combining the separate tasks for reading and writing each media type into a signal task. Task consolidation is described below in further detail.

The set of possible states for a task currently includes the "wait for a specific message" state. With the concurrent processing requirement, this state would be invalid and will therefore be removed from the system. There will be only three possible states: active, waiting for a message, and sleeping. The kernel code checking for a sleeping task and checking for a task waiting for a message is already highly optimized. A Ready List of tasks ready to resume will not add any significant performance increase. The kernel will require an additional 11 s to test the additional two tasks before returning to check the original task.

Preemption: The Jupiter-I architecture needs to be preemptive to the degree that a non-disconnecting command received during a disconnected media access command can cause the Monitor Task to preempt the Drive Task or the Low-Level Task. There is no requirement as yet for the Drive Task to preempt the Monitor Task or the Low-

Level Task. It is herein proposed that it is better to cause the Drive Task to restart some portion of its processing rather than delay a non-disconnecting command by tens or many tens of milliseconds.

Sections of code need to be identified within the Drive Task and Low-Level Task (especially the heroic recovery routines) which require that processing be restarted for that section if the task were to be preempted. The Drive Task and Low-Level Task will register themselves at the beginning of those sections of code to identify where to restart from. This is similar to registering for Drive Attentions. If the Drive Task or Low-Level Task is the active task but not registered, the task is assumed to be fully preemptable. That is, the task can be interrupted and later resume from the same point without any ill effects.

When a new command is received by the SCSI ISR, a new kernel call will be made on exit from the ISR to determine if preemption is required and if so, to dispatch. If the Monitor Task was the current task before the SCSI ISR ran, no preemption is required. If the Drive Task or Low-Level Task was the current task, it will be preempted.

When a new non-disconnecting command is received by the SCSI ISR while the drive is processing a disconnected media access command, the ISR will on exit call the new kernel service routine to detect whether a task has registered itself. If not registered, the task will be preempted by the Monitor Task and will resume at the point it was interrupted when the round-robin scheduling resumes. If the task is registered, the kernel will, a) shut down the drive, b) take the drive out of Spiral Mode (now a Drive Command to the DSP), c) vector the Drive Task or Low-Level Task to restart at the registered address, and d) transfer execution to the Monitor Task. After the Monitor Task processes the new command, it will make a kernel call to wait for the next message. The kernel will then enter the Idle Loop looking for a ready task. The Drive Task or Low-Level Task will still be ready, the kernel will dispatch to it, and execution will resume from the registered address with a value in AX indication that a restart took place.

Any media access where the CPU is monitoring in real time some aspect of the disk (e.g., waiting for a sector mark) will be disrupted if preempted by the Monitor Task. These sections of code would need to be managed by registering for a restart if preempted.

Once the Drive Task or Low-Level Task have kicked off the media access, the hardware and the disk ISR will continue the burst, cause it to terminate cleanly, and send a message to the task to indicate that the burst has been completed. The task is then responsible for dequeuing the message and kicking of the next burst. Preemption after the hardware has been kicked off will not produce any drive control problems.

During an implied seek for a media access, the seek code disables SCSI interrupts, tries to read an ID, and waits up to 16 milliseconds for an ISR to read an ID which has been latched. During this 16 milliseconds, the SCSI ISR cannot run which means that the SCSI Bus is potentially held in the middle of the Command Phase (after the first six bytes have been read by the SM331). In the case where the seek is successful, SCSI interrupts will remain disabled from the time that the seek code starts to read an ID until after the seek code returns to the setup code (e.g., gcr_StartRdVfy), after all the registers have been set up, and after the sequencer has been started. To better handle this condition, the new architecture will allow the Monitor Task to preempt the seek. This will be accomplished by registering the seek code for preemption and then enabling SCSI interrupts. If a SCSI interrupt (requiring preemption) occurs while the seek is in progress, the DSP will complete the seek and then place the drive in Jump Back. (This assumes that the DSP can queue up the Disable Spiral command while it completes the seek.) If a SCSI interrupt (requiring preemption) occurs after the seek has completed but before the hardware has been kicked off, the code should restart at its registered address and eventually perform a reseek. If a SCSI interrupt occurs after the hardware has been kicked off, the media access is fully preemptable and therefore no longer needs to be registered.

Stack Size: The stack size for each task is currently set at 512 bytes. With the increased modularity anticipated for Jupiter-I and the additional layers required to manage queued commands, caching, etc., it may be required to increase the stack size to 1024 bytes. With the reduction of the number of tasks to three, the memory allocated to stack actually decreases.

Drive configuration Structure: Identification of Media Type: The firmware will need to determine which type of media has been inserted into the drive in order to dispatch to the appropriate routines for each media type. Separate bits in the Drive Configuration variable "inited" will be used for each of the media types: 1x, 2x, and 4x.

Drive State Variable: With the requirement for concurrent processing described above, the Monitor Task needs to be able to determine the current state of the drive and to issue the appropriate message corresponding to the newly arrived event. This will be a accomplished by introducing a new "drive state" variable which will be solely maintained by the Monitor Task. Table 44 below lists the possible drive states.

Table 44 - Drive States

Power Up, Phase I (no selections)
Power Up, Phase II (busy)
Power Down
Soft Reset
Hard Reset
Loading Cartridge
Spinning Up
Spinning Down
Ejecting Cartridge
Idle
Seek
Format
Read, With Caching
Read, Without Caching
Read Cache
Write
Write Cache
Flush Write Cache, then Power Down
Flush Write Cache, then Eject Cartridge
Flush Write Cache, then Reset

Drive Task can change state from "Read" to "Read, Connected" or "Read, Disconnected".

Power On Self Test: ROM Checksum: The Rom Test currently computes the checksum for the single EPROM. With Jupiter-I's dual chip design, the range for the ROM checksum must include the address range for both chips. The address range for both chips is 0xC0000 to 0xFFFFF.

Buffer RAM Diagnostic: The Buffer RAM diagnostic will take considerably longer with 4MB of Buffer RAM. Jupiter-I is required to be capable of handling a SCSI selection after 250 milliseconds. The firmware currently has a two-phase initialization. Phase I Initialization is where no selections are allowed while the drive is performing its

diagnostics (currently including the Buffer RAM diagnostic). Once the basic drive integrity has been established, the drive enters Phase II Initialization where it can handle a selection and respond only to a Test Unit Ready or Inquiry Command. During Phase II, the drive is reading the EEPROM, initializing the Inquiry Data, the Mode Page Data and various other data structures. It is during the Phase II Initialization where the Jupiter-I 4MB Buffer RAM Test should be performed.

RAM Diagnostic: If the RAM diagnostic for both SRAM chips takes too long, the test could be divided and the remaining portions performed during the Phase II Initialization as described above for the Buffer RAM Test.

Autochanger Reset: If the drive detects that Autochanger Reset is asserted during the drive must wait for Autochanger Reset to be deasserted before attempting to read the 20-pin connector for the SCSI ID to use and whether to enable SCSI Parity. The Jupiter-I drive can perform all of its Phase I Initialization while Autochanger Reset is asserted. When the drive is ready to initialize the SCSI portion of the SM331, it will examine the GLIC chip to see if the 20-pin connector is attached. If not attached, the SCSI ID and whether SCSI Parity is enabled are determined by the option jumpers. If the 20-pin connector is attached, the drive will poll the GLIC chip to monitor the actual level of the Autochanger Reset. When Autochanger Reset is deasserted, the signals from the 20-pin connector will determine the SCSI ID and whether SCSI Parity is enabled.

Boot Task: Initialization Code: The code for the Phase II Initialization is contained within the Boot Task. The Boot Task performs the initialization, creates the other drive tasks, and then replaces itself with the code for the Monitor Task. It takes some amount of time to overlay the Boot Task with the Monitor Task. Jupiter-I instead will place the Phase II Initialization code in a routine which will be the first executed within the Monitor Task. After the initialization is performed, the Monitor Task will proceed on to the code it normally executes. Due to the control loops defined in each of the tasks, execution for the task never leaves the loop. The initialization code will be placed before the task loop and will, therefore, only be executed once when the task is originally created by the kernel.

Single Read and Write Task: The current architecture has separate tasks for 1x read, 2x read, 1x write, and 2x write. There can never be more than one type of media

installed at a time. Only one function, read or write, can be performed at a time. Therefore, there only needs to be one media access talk, the Read/Write Task.

The Phase II initialization code will only create a single read/write task referred to in this discussion as the Drive Task. The sections below provide further detail.

Cartridge Initialization: Cartridge Initialization is performed at poweron time when a cartridge is already present in the drive or after poweron when a cartridge is inserted. The current architecture preforms the initialization at poweron time as part of the Boot Task. When a cartridge is inserted after poweron, the initialization is performed as part of the Drive Attention Handler which is an Interrupt Service Routine (ISR). Due to the new structure of interrupts from the DSP and timeout messages, the Cartridge initialization function must be performed by a task so that it can receive a message in its queue. (Only tasks have queues.) The Phase II Initialization code will now send a message to the Drive Task to perform the cartridge initialization at poweron and when a cartridge is inserted. Cartridge initialization is discussed below in further detail.

(SCSI) Monitor Task: Concurrent Processing:

Drive State Management and Control: The Monitor Task is now responsible for maintaining the "drive state" variable. The following subsections describe the relationship between the SCSI Commands received, the drive state, and various messages used throughout the drive architecture. As previously mentioned, Table 44 above provides for a list of the drive states.

Non-Media Access Commands: The Monitor Task will remain responsible for executing non-media access command, such as Test Unit Ready, Inquiry, and Mode Sense.

Start/Stop Spindle Command: In the current architecture, the SCSI Monitor Task executes the Start/Stop Spindle Command. In order to provide concurrent processing while the command is being executed, this command must be performed by a separate task. For consistency in the architecture when performing cartridge initialization, "Spinning Down". For of the Low-Level Task, see below.

SCSI Seek: The SCSI Seek Command will now be handled by the Drive Task. This is required in order for the Monitor Task to be able to support the concurrent processing of new commands as they are received. The Monitor Task will change the drive state to "Seek" and send a message to the Drive Task to perform the seek. The

Drive Task will return a "Seek Status" message to the Monitor Task to indicate that the request has been satisfied.

Media Access Commands: The Monitor Task will be responsible for sending a message to the Drive Task for each of the read, verify, erase, write, write/verify, and format commands. The Monitor Task will set the drive state to "Read", "Write", or "Format" as required. The Monitor Task will not block its execution while waiting for the Drive Task to satisfy the request. The Drive Task will return a status message to the Monitor Task to indicate that the request has been satisfied.

Read State and Caching: When a read request is received from an initiator, the Monitor Task will check if the current Mode Page 08h has read caching enabled. If enabled and there are no other commands in the queue, the Monitor Task will send a message to the Drive Task to begin processing the read request and to start the Read Ahead cache when done. The drive state at that point will be changed to "Read, With Caching". If other commands were present in the queue, the Monitor Task would determine whether the next command precluded caching. If so, the message sent to the Drive Task to begin processing the read request and to start the Read Ahead Cache when done. The drive state at that point will be changed to "Read With Caching" . If other commands were present in the queue, the Monitor Task would determine whether the next command precluded caching. If so, the message sent to the Drive Task would indicate that caching was not to be started and the drive state would be set to "Read, Without Caching".

If read caching were enabled and started, and then another command were to be received, the Monitor Task (executing concurrently) would determine whether the Read Ahead Cache should be stopped. If the command received were, for example, a write request, the Monitor Task would send a message to the Drive Task to abort the Read Ahead Cache and invalidate any data in the cache. If the command received were a read request, the Monitor Task would send a message to the Drive Task to stop the Read Ahead Cache and retain the data in the cache. The related issue of handling Drive Attention messages will be addressed below.

Write State and Caching: When a write request is received from an initiator, the Monitor Task will check if the current Mode Page 08h has vote caching enabled. If enabled and there are no other commands in the queue, the Monitor Task will send a

message to the Drive Task to process the write request as required. The drive state at that point will be changed to "Write Request, With Caching". If other commands were present in the queue, the Monitor Task would determine whether the next command precluded caching. If so, the message sent to the Drive Task would indicate that caching was not appropriate and the drive state would be set to "Write Request, Without Caching".

If write caching were enabled and another command were to be received, the Monitor Task (executing concurrently) would determine whether the Write Cache should be stopped. If the command received were, for example, a read request, the Monitor Task would send a message to the Drive Task to stop the Write Cache and flush any data in the cache to the media. If the command received were a write request, the Monitor Task would take no action except to queue the command for processing after the current request is satisfied. The related issue of handling Drive Attention messages will be discussed below.

Catastrophic Events: Catastrophic Events are defined as a SCSI Bus Reset or a Power Down Request from the autochanger. When one of these events occurs, the NMI ISR will be invoked to send a message to the Monitor Task. Based upon the drive state, the Monitor Task will take the corrective action described below.

When a "SCSI Bus Reset" message is received, the Monitor Task will examine the current drive state. If the drive is currently in the "Write" state, a "Flush Write Cache" message is sent to the Drive Task and the drive state is changed to "Flush Write Cache, then Reset". When the Drive Task returns a "Flush Status" message, the Monitor Task will examine the Reset Bit in byte 14 of the Vendor Unique Mode Page 21h. If a hard reset is configured, the Monitor Task sets the drive state to "Hard Reset" and then initiates a hard reset by jumping to the boot address (OFFFFOh). If a soft reset is configured, the Monitor Task sets the drive state to "Soft Reset" and then initiates a soft reset. When a "SCSI Bus Reset" message is received and the drive is currently in the "Read" state, the Monitor Task will examine the Reset Bit in byte 14 of the Vendor Unique Mode Page 21h and initiate a hard or soft reset as indicated.

When a "Power Down Request" message is received, the Monitor Task will examine the current drive state. If the drive is currently in the "Write" state, a "Flush Write Cache" message is sent to the Drive Task and the drive state is changed to "Flush

Write Cache, then Power Down". When the Drive Task returns a "Flush Status" message, the Monitor Task will change the drive state to "Power Down" and assert the PWRDNACK signal on the 20-pin connector. When a "Power Down Request" message is received and the drive is in the "Read" state, the Monitor Task will set the drive state to "Power Down" and assert the PWRDNACK signal on the 20-pin connector. Note: additional actions to take after asserting PWRDNACK or remaining constraints.

Command Queuing: Note: tagged or untagged queuing. Each of these matters are design considerations which would not effect one of skill in the art from practicing the present invention as herein enabled and disclosed.

Drive Task: The Drive task will perform the cartridge initialization, SCSI seek, and all media access and caching functions. A single task is required because only one type of media access can occur at a time and one type of caching is supported at a time. The Monitor Task will send messages to the Drive Task to request the appropriate service.

Servicing SCSI Commands: When the Drive Task receives a message requesting service for a SCSI command (seek, read/verify, erase/write, or format), the firmware for the Drive Task will branch to the appropriate path for reading, writing, or formatting and then again for lx, 2x, or 4x media format. The code for each media type will still be maintained as a separate set of modules for maintainability and stability reasons as before.

Cartridge Initialization: The cartridge initialization function will be performed by the Drive Task when a message is received from the Monitor Task at poweron time. When a cartridge is inserted after poweron, the Drive Attention Handler will send a "Cartridge Inserted" message to the Monitor Task. The Monitor Task will chance the drive state to "Loading Cartridge" and send an "Initialize Cartridge Request" message to the Drive Task. The Drive Task, in turn, will send a "Spindle Start/Stop Request" message to the Low-Level Task as described below. Once the cartridge has been successfully loaded and spun up to speed, the Drive Task will determine the cartridge type and media format, read the four Defect Management Areas (DMA), rewrite any DMA as required, and initialize the defect management structures. When the initialization process is complete, the Drive Task will return an "Initialize Cartridge Status" message to the Monitor Task. The drive state will then be changed to "Idle".

Read and Read Ahead Cache: The read code within the Drive Task is responsible for managing the read process, the Read Ahead Cache, determining when a hit has taken place, or deciding to access the media. Messages from the Monitor Task will control the actions of the Drive Task to read, cache, or not cache.

When the Drive Task receives a message to perform a read, the message will indicate whether caching should be started after the read has completed. A "Read Request, without caching" message indicates that the Drive Task should not plan to cache any data. A "Read Request, with caching" message indicates that the Drive Task should plan to extend the read with caching. When either of these messages has been received by the Drive Task, the Monitor Task will already have set the drive state to the appropriate read state.

The Drive Task may receive other messages while performing the non-cached read to ignore the initial caching request and not extend the read. If a "Stop Read Cache" message is received, the Drive Task will only satisfy the non-cached portion of the read. If caching has not already begun the Drive Task will not start the read ahead. If caching has already begun, the read ahead will be shut down and all cached data will be retained. The Read Mode state diagram is illustrated in Fig. 122. If an "Abort Read Cache" message is received, the Drive Task will only satisfy the non-cached portion of the read. If caching has not already begun, the Drive Task will not start the read ahead. If caching has already begun, the read ahead will be shut down and all cached data will be invalidated.

The Read Ahead Cache will buffer the sectors from the last LBA, ABA or track sector until 1) a "Stop Read Cache" or "Abort Read Cache" message is received, 2) the maximum prefetch is satisfied, 3) no free space remains in the Buffer RAM, or 4) a sector cannot be recovered within the current thresholds.

The Drive Task, by necessity, must keep the Drive Attention Router (DAR) token. If a Drive Attention occurs while performing the read ahead, the Drive Task must be made aware of the attention condition, take the appropriate actions to clear it, and begin recovery operations. The management of the DAR token is described below.

Write Cache: This discussion is provided in conjunction with reference to Fig. 123. The write code within the Drive Task is responsible for deciding when to access the media, managing the Write Cache, managing the Write Cache buffer latency, and

flushing the Write Cache. Messages from the Monitor Task will control the actions of the write process.

When the Drive Task receives a message to perform a write, the message will indicate whether the data may be cached. A "Write Request, with caching" message indicates that the Drive Task may cache the data depending upon the Immediate Flag in the CDB and the current contents of the Write Cache. A "Write Request, without caching" message indicates that the Drive Task may not cache the data under any circumstances.

The Drive Task may receive other messages while performing a cached write to flush the contents of the Write Cache. If a "Stop Write Cache" message is received, the Drive Task will satisfy the current write request and then flush all cached data to the media. If a "Flush Write Cache" message is received, the Drive Task will satisfy the current write request if one is in progress and then flush all cached data to the media, or if no request is in progress, all cached data will be flushed to the media.

The function of the Write Cache is to take advantage of the coherency of data from multiple SCSI write requests. Sectors from multiple requests which are contiguous can be combined into a single media access which offers less processing overhead. Sectors which are contiguous may be cached. Sectors which are not contiguous cause the sectors which have been in the cache the longest to be transferred to the media.

Data is allowed to remain in the Buffer RAM up to the maximum time as specified in the Maximum Buffer Latency in Mode Page 21h. When a write request is cached, the Drive Task will request that the Timer Service send a message after the time specified in the Maximum Buffer Latency has expired. If the Drive Task receives the timeout message before the data has been transferred to the media (due to the non-contiguous nature of subsequent requests), the Drive Task will begin to transfer the data (and all contiguous data) to the media. If the data was forced to be transferred to the media due to non-contiguous sectors, the Drive Task will request that the Timer Service not send the timeout message previously requested.

Only one timeout is required at any one time to monitor the buffer latency. The single timeout is for the first write request which is cached. If a following request is contiguous, that request would be cached with the first and written to the media when the first request would be, hence a single timeout. If the following request were not

contiguous, the first request would be written to the media, its timeout canceled, and a new timeout requested for the following request. Only a single timeout is therefore required.

The Drive Task, by necessity, must keep the Drive Attention Router (DAR) token. If a Drive Attention occurs while performing the Write Cache, the Drive Task must be made aware of the attention condition, take the appropriate actions to clear it, and begin recovery operations. The management of the DAR token is described below.

Low-Level Task; The Low-Level Task in the current design is responsible for handling system requests to read, verify, erase, write or heroically recover sectors. These requests are used during the reading of the Defect Management Areas, during the reassignment of a sector, during the automatic reallocation of a sector, during the recovery of write errors, and during the heroic recovery of read errors. New responsibilities for the Low-Level Task will include handling Spindle Start/Stop Requests, and Eject Cartridge Requests.

With the requirement for concurrent processing, the Monitor Task is no longer able to poll for the spindle or eject events while it waits for new SCSI commands or a timeout. Consequently, these functions have been moved to the Low-Level Task. The Low-Level Task has its own task queue and can block while waiting for the various events to occur.

When the Low-Level Task receives a "Spindle Start/Stop Request", it will issue Drive Commands to start or stop the spindle and then monitor for a timeout. When a start spindle Drive Command is received, the Drive Command firmware will issue the appropriate speed command to the spindle motor control chip. A command will be issued to the DSP to monitor the spindle speed and issue an interrupt when the spindle has attained the required minimum speed.

To monitor the time required for the spindle start function, the Low-Level Task will issue a request to the Timer Service to receive a message in (TBD) seconds. The Low-Level Task will then wait for one of two messages. When the DSP presents the interrupt for the spindle at speed, the Drive Attention Handler will be invoked. The Low-Level Task, as the registered recipient for the Drive Attention messages, will receive the "Spindle At Speed" message. The Timer Service will be notified that the spindle timeout message is no longer required and a "Spindle Start/Stop Status" message will be returned to the Monitor Task. If the spindle timeout message is

The
received, the spindle motor has not come up to speed. A Drive Command will be issued to stop the spindle and a "Spindle Start/Stop Status" message will be returned to the Monitor Task. It is presently proposed whether is it necessary to monitor the stop spindle function.

Timer Service: A new service available with Jupiter-I is the system Timer Service. Timer Service has the dedicated use of Timer I and Timer 2 (as the presacler). Timer 0 is available for use at any time by the firmware. The Timer Service is responsible for sending a message to the requester after a specified time has elapsed. When multiple requests overlap, the Timer Service is responsible for managing the separate requests and producing messages at the correct times.

The Timer Service will accept two types of requests: Insert Timer Event and Remove Timer Event. When an Insert Timer Event request is received and there are no other outstanding requests, the Timer Service will start the timers for the total number of clock ticks specified, enable the timer interrupt, place the request at the head of its timer event list, and return to the caller with a handle for the timer event. When the timer interrupt occurs, the Timer Service will remove the request from the head of the timer event list and send a message to the requester. When the Timer Service receives a request for a timer event when one or more requests are outstanding, the Timer Service will place the request in the timer event list in the proper order, ranked by increasing period of delay. All timer events in the list will be managed with delta times. When a new timer event is requested which places it in before an existing request, the existing request and all later events in the list will have their delta times recomputed. If a new request is received with a smaller timeout than the event currently at the head of the queue, the timers will be reprogrammed and the new delta will cascade down the event list.

When a Remove Timer Event request is received, the Timer Service will use the handle returned from the Insert Timer Event request to identify the timer event and remove it from the timer event list. If the removed event was at the head of the timer event list, the timers will be reprogrammed for the remaining time on the next event in the list and the new delta will cascade down the event list. If the removed event was in the middle of the list, the delta for the removed event will cascade down the event list.

NMI ISR: When a SCSI Bus Base or a Power Down Request from the autochanger event occurs, the NMI ISR will be invoked. The ISR will interrogate the Glue Logic IC (GLIC) to determine the source of the interrupt and then send a message to the Monitor Task. Based upon the message received, the Monitor Task will take the corrective action described above.

If the SCSI Bus Reset bit in the GLIC (TBD) register is asserted, the NMI was caused by the SCSI Bus Reset line being asserted and a "SCSI Bus Reset" message will be sent to the Monitor Task. If the Autochanger Reset bit in the GLIC (TBD) register is asserted, the NMI was caused by the Autochanger Reset line being asserted and a "Autochanger Reset" message will be sent to the Monitor Task. If the Autochanger Power Down Request in the GLIC (TBD) register is asserted, the NMI was caused by the Autochanger PWRDNREQ line being asserted and a "Autochanger Power Down Request" message will be sent to the Monitor Task.

Drive Attentions: A Drive Attention is an exception event relating to the drive such as an off track, seek fault, or eject request. This section addresses the mechanisms required to notify the firmware that a Drive Attention has occurred and which messages will be generated under which conditions.

Drive Attention Notification: When a Drive Attention occurs, different recovery procedures may be required depending upon what the drive was doing when the event occurred. For example, if the drive were sitting idle and happened to be bumped enough to produce an off track, no recovery is necessary. If on the other hand, a read had been in progress, the drive would need to reseek and then continue the read operation.

Only the current task interfacing with the drive is aware of the appropriate measures to take for recovery based on what that task was doing. Therefore, notification that a Drive Attention occurred must be delivered to the current task interfacing with the drive. As this may not always be the current task executing, each task must identify when it is responsible for Drive Attentions. The first notification mechanism, therefore, is sending a message to the responsible task when a Drive Attention does occur. The responsible task is identified by a variable task_id_router which is cooperatively managed by all tasks.

The first mechanism relies on each task waiting to receive messages, one of which may be a Drive Attention message. If the firmware is not expecting a message, stopping to poll the queue can be a significant loss of compute power. A second mechanism for notification is also used which does not rely on a task polling for a Drive Attention message. At critical points in the firmware, a task can register a section of code to be vectored to if a Drive Attention occurs. If no Drive Attention does occur, no additional time beyond the register/unregister is required.

Drive Attention Handling and Concurrency: The Drive Attention Handler executes as an ISR, a small core ISR first with interrupts disabled and then a larger handler with interrupts enabled. The following Example 1 will provide an illustrative scenario.

EXAMPLE 1

A seek is in progress and SCSI interrupts are disabled. The drive has a seek fault and so a Drive Attention occurs. The Drive Attention Handler will run as an ISR. If another SCSI command were to come in, the first six bytes would be handled by hardware. Any remaining bytes would wait to be PIO'd in the SCSI ISR until after the Drive Attention reenabled interrupts. As the drive was seeking, SCSI interrupts will still be masked off. Therefore, all the time that the recovery is being performed by the Drive Attention Handler (including recals if required), the SCSI bus could be held in the middle of a command.

Drive Attention Events and Messages:

Determines source of attention.

Sends message to currently registered recipient for Drive Attention messages.

Sends messages for AC Eject Request, Front Panel Eject Request, Spindle At Speed, and Eject Limit.

Does not perform automatic spin up and initialization when cartridge inserted.

Drive Attention Routing and Caching: Monitor Task sends TCS to kill Read Ahead Cache when Drive Attention Router token is needed.

The Drive Task must remain registered as the task to receive Drive Attention messages while it is performing the Read Ahead Cache. If a Drive Attention were to occur (e.g., an off track), the Drive Task would need to take corrective action. The Monitor Task will need to send a message to the Drive Task to tell it to abort and return the Drive Attention Router token.

SCSI Transfer: PIO Mode: If transfer is greater than (TBD) bytes, copy the data to the Buffer RAM and then DMA it out from there.

SCSI Messages: Bus Device Reset, Terminate I/O, and Abort.

Events: List of Events.

Message Types:

Current TCS Sources Types

SCSI_TCS	Pass request from Monitor Task to Drive Task
ATTN_TCS	From Drive Attention Handler
LL_RD_TCS	Request for Low-Level Read
LL_WR_TCS	Request for Low-Level Write
ERCVRY_TCS	Request for Sector Error Recovery

To be replaced by:

Messages

SCSI Bus Reset

Autochanger Reset

Autochanger power Down Request

Drive Attention TCSs

- Error (Seek Fault, Off Track, Cartridge Not At Speed, etc.)
- Cartridge in Throat
- Cartridge on Hub
- Eject Request (autochanger or front panel)
- Eject Limit

Spindle At Speed

Timer Event Request

Timer Event Occurred

Spindle Start/Stop Request

Spindle Start/Stop Status (OK, Fail)

Eject Cartridge Request

Eject Cartridge Status (OK, Fail)

Initialize Cartridge Request

Initialize Cartridge Status (OK, Fail; type of cartridge)

Drive Attention Router (DAR) Token

Return Drive Attention Router (DAR) Token

DAR Returned

Seek Request

Seek Status (DAR Token returned)

Read Request, with caching

Read Request, without caching

Read Status

Stop Read Cache (Read Request will follow)

Abort Read Cache, flush Read Cache

Write Request, with caching

Write Request, without chaching

Write Status

Stop Write Cache (finish write and flush Write Cache)

Timed Write Request (write selected portion of Write Cache to medium)

Flush Write Cache (Reset or Power Down Request)

Flush Status

Hardware Requirements: 1) 2K RAM to shadow the NVRAM for quick access to saved data. This helps to meet the requirement for non-disconnecting commands (i.e., Mode Sense and Log Sense.) 2) Elapsed Time Counter for power-on hours.

Electronics

The drive electronics consist of three circuit assemblies: an integrated spindle motor circuit shown in Figs. 101A-101G, a flex circuit with pre-amps shown in Figs. 102-105, and a main circuit board containing a majority of the drive functions shown in Figs. 106A through 119.

The Integrated Spindle Motor Board

The spindle motor board has three functions. One function is to receive the actuator signals on connector J2, Fig. 101A, and pass them to the main board through connector J1, Fig. 101G. Other functions on the board are a brushless spindle motor driver and a coarse position sensor preamp. These features are described in detail below.

With continued reference to Figs.101A-G, the circuit shown drives the spindle motor. This spindle driver circuit contains U1, Fig. 101F, which is a brushless motor

driver, and miscellaneous components for stabilizing the spindle motor (motor not shown). U1 is programmable and uses a 1 MHz clock which is supplied from the main board. U1 sends a tack pulse on the FCOM signal to the main board so the main board can monitor the spindle speed.

The circuit shown in Figs. 101A-G also functions to generate a coarse position error. Operational amps U2 and U3 generate the error signal. U2 and U3 use a 12 volt supply and a +5 volt supply. The +5 volt supply is used as a reference. A reference signal propagates through a ferrite bead into inputs pins 3 and 5 of U3, which have 487K feedback resistors R18 and R19 with 47 picofarad capacitors C19 and C20 in parallel. Two transimpedance amplifiers U3A and U3B receive input from a position sensitive detector located on the actuator (not shown). The detector is similar to a split detector photo diode. Amplifier U2A differentially amplifies the outputs from U3A and U3B with a gain of 2. The output of U2A is sent to the main circuit board as a course position error.

The other operational amp U2B has a reference level on input pin 6 generated by resistors R23 and R17. That reference level requires that the summed output of the transimpedance amplifiers U3A and U3B, the sum of those two as seen at node 5 of U2B, will be the same as what is seen on node 6 from the resistor divider R23 and R17. A capacitor C21 in the feedback causes U2B to act as an integrator thereby driving the transistor Q3 through resistor R21. Q3 drives an LED which shines light on the photodiode (not shown). This is basically a closed loop system guaranteeing that certain levels of voltage out of transimpedance amplifiers U3A and U3B.

Referring again to Figs. 101A-G, the other function on this board is the motor eject driver. The motor driver is a Darlington Q1, Fig. 101E, current limited by transistor Q2 as determined by resistor R7. Diode D1 and C11 are noise suppression for the motor (not shown). The position of the cartridge eject mechanism is detected through hall effect sensor U4, Fig. 101D, and functions to determine the position of the gear train until the cartridge is ejected. There are also three switches WP-SW, CP-SW, and FP-SW on the board to detect whether the cartridge is write protected, whether there is a cartridge present, and whether the front panel switch requests that the main processor eject a cartridge.

Pre-amplifiers

Described here are two embodiments of pre-amplifiers. Common elements are shown in Figs. 102A-D and 103A-D. Differing elements between the two embodiments are shown in Figs. 104A-105B.

The optics module flex lead, shown in Figs. 102A -105B, has three main functions. One is a servo transimpedance amplifier section; a second is the read channel read pre-amplifier; and, the third is the laser driver.

In Fig. 102A is shown the connector J4 and the signals coming out of U1, Fig. 102B, are the transimpedance signals. TD and RD are two quad detectors for the servo signals. During initial alignment, X1 is not connected to X2 so that the individual quads can be aligned. After that, X1 pin 1 is connected to X2 pin 1, X1 pin 2 to X2 pin 2, etc. The sums of the currents of the two quads are then transimpedance amplified through amplifier U1A through U1D. Four quad signals create the servo signals on the main board. The transimpedance amplification U1A-U1D is done with 100k ohm resistors RP1A, RP1B, RP1C, and RP1D with 1 picofarad capacitors C101-C104 in parallel.

A photo diode FS, Fig. 102A, is a forward sense diode. The forward sense current is an indication of the power coming out of the laser, and is communicated to the main board via connector J4 on pin 15.

Referring to Fig. 102B, it is shown that U106 is connected to J103. J103 is another quad detector of which two of the four quads are used to generate the differential MO (magneto optics) signal and the sum signal. The VM8101, U106, is a pre-amp specifically made for MO drives and is also a transimpedance amplifier. The read +/- signals from U106 can be switched between a difference and sum signal by the preformat signal coming in from the connector J103, pin 6.

Figs. 103A-D show the level translators U7B, U7C, and U7D for the write level. U7B, U7C, and U7D are three differential operational amps that are also compensated to be stable with large capacitive loads. The resistors and capacitors around U7B, U7C, and U7D perform the stabilization. The differential amplifiers U7B, U7C, and U7D have a gain of 1/2 to set up write levels for transistor bases Q301, Q302, Q303, Q304, Q305 and Q306 which are shown in Figs. 104A-B. There are three write levels: write level 1; write level 2; and write level 3 which allow the invention to have different write levels for different pulses in the pulse train that will write the MO signals.

The fourth operational amplifier U7A, shown in Fig. 103C, sets the read current level. U7A drives Q12 and the current is mirrored in transistors Q7, Q8, and Q9. The mirrored current in Q7 and Q8 is the actual read current going to the laser.

The optical disc system according to the present invention includes in combination a laser, first means for passing electrical current to the laser, and digital logic means for power switching the first means to drive the laser, whereby electrical power is consumed only when the laser is energized and enhanced rise and fall switching characteristics are achieved. In one preferred embodiment, the digital logic means includes CMOS buffers, U301 and U302 as shown in Figs. 104A and 104B, which may be connected between electrical ground and full supply voltage. In addition, the first means is preferably implemented by use of pass transistors Q301-Q306, Figs. 104A-B.

In accordance with another aspect of the present optical disc system being of the type having a focusing mechanism and a tracking mechanism, a lens and a disc to be read, the mechanisms in this embodiment are controlled by a feedback loop. One preferred implementation of this feedback loop includes an electronic circuit for generating a servo signal for effecting corrections of the focusing mechanism and the tracking mechanism, first means for passing electrical current to the laser, and digital logic means for power switching the first means to drive the laser, whereby electrical power is consumed only when the laser is energized and enhanced rise and fall switching characteristics are achieved. In this embodiment, the digital logic means may include CMOS buffers preferably connected between electrical ground and full supply voltage. The first means, as discussed above, may be implemented by use of pass transistors.

Figs. 104A-B further show the actual pulse drivers and the enable to turn the laser LD1 on. The laser is actually protected with CMOS gates U301 and U302A to guarantee that as the voltage levels are rising, the laser is not actually affected by any current spikes. U302A guarantees logic low coming in on Laser On signal and U302A will keep the current mirror, Fig. 103A, from being enabled until read enable bar, pins 1, 2, and 3 of U302A, is enabled with a high logic level on U302A pins 20, 21, 22, and 23. It also provides a signal which will enable the write pulses to drive the laser only after the laser is activated. The activation is performed at pin 4 of U302A, which controls the inputs of 301A, 301B and 302B.

The enable pins, pins 13 and 24 of U302 and U301, and pin 24 of U301A are the individual write signals corresponding to write strobe 1, write strobe 2, and write strobe 3. Turning on the current sources generated by individual transistors Q301 through Q306 allows three levels of writing. Ferrite beads 301 and 302, Fig. 104B, act to isolate the read current from the write current and also keeps the RF modulation from being emitted back out the cables for EMI purposes.

Referring to Figs. 105A-B, U303 is an IDZ3 from Hewlett Packard, a custom integrated circuit, which performs a function of generating about 460 MHz current. This current is conducted into the laser for RF modulation to reduce laser noise. Its output is coupled through C307. There is an enable pin, pin 1 on U303 to turn modulation on and off.

The present invention includes an improved Colpitts type oscillator subject to reduced pulse ringing. The oscillator comprises a tank circuit for the oscillator having an increased resistance. The tank circuit may also include an inductance. One aspect of the present invention is that the oscillator has an increased supply voltage, whereby increased R.F. modulation amplitude and decreased ringing is facilitated. A preferred embodiment of the improved Colpitts oscillator electrical circuit, as will be described in further detail below, includes a transistor having an emitter, a base and a collector; an electrical voltage supply; and a load resistance connected in series between the collector and the voltage supply, whereby oscillator ringing is mitigated when write pulses are supplied to the oscillator. A load inductance may advantageously be provided in series with the load resistance. In this embodiment, the write pulses are supplied to the junction between the load resistance and the load inductance, and a split capacitor tank may be connected between the collector and ground, across the emitter and collector.

An alternate preferred embodiment of the present improved Colpitts oscillator electrical circuit includes a transistor having an emitter, a base and a collector; a split capacitor tank connected between the collector and ground across the emitter and the collector; an electrical voltage supply; and a load inductance and load resistor in series between the collector and the voltage supply, whereby oscillator ringing is mitigated when write pulses are supplied to the junction between the load resistance and the load inductance. This embodiment similarly has an increased supply voltage, whereby

increased R.F. modulation amplitude and decreased ringing is facilitated. The present Colpitts oscillator having a load circuit with an increased resistance may advantageously be provided in a combination with a laser and a source of write pulses. In one preferred embodiment, the load circuit also includes an inductance.

This combination may alternatively include a laser, a source of write pulses; an electrical voltage supply, a Colpitts oscillator having a transistor with an emitter, a base and a collector, and a load resistance connected in series between the collector and the voltage supply, whereby oscillator ringing is mitigated when write pulses are supplied to the oscillator. This may include a tank inductance in series with the load resistance wherein the write pulses are supplied to the junction between the load resistance and the tank inductance and/or a split capacitor tank connected between the collector and ground, across the emitter and the collector.

Yet another embodiment of this combination for use in a disc drive system according to the present invention includes a laser, a source of write pulses, a Colpitts oscillator having a transistor having an emitter, a base and a collector, and a split capacitor tank connected between the collector and ground, across the emitter and the collector, an electrical voltage supply, and a load inductance and load resistor in series between the collector and the voltage supply, whereby oscillator ringing is mitigated when write pulses are supplied to the junction between the load resistance and the load inductance. This embodiment similarly has an increased load resistance and an increased supply voltage, whereby increased R.F. modulation amplitude and decreased ringing is facilitated. The method of reducing ringing in the Colpitts oscillator includes the steps of increasing the load resistance in the oscillator and increasing the voltage supply to the oscillator.

As indicated above, the present optical disc system is of the type having a focusing mechanism and a tracking mechanism, wherein the mechanisms are advantageously controlled by a feedback loop comprising an electronic circuit for generating a servo error signal for effecting corrections of the focusing mechanism and the tracking mechanism, a laser, a source of write pulses a Colpitts oscillator having a transistor having an emitter, a base and a collector, and a split capacitor tank connected between the collector and ground, across the emitter and the collector, an electrical voltage supply, and a tank inductance and load resistor in series between the collector and the

voltage supply, whereby oscillator ringing is mitigated when write pulses are supplied to the junction between the load resistance and the tank inductance.

In Fig. 104, the second embodiment uses a Colpitts oscillator built around a single transistor Q400, Fig. 104B, a split capacitor design C403, and C402 with an inductor L400. This circuit is biased with 12 volts with a 2k resistive load R400 to ensure that write pulses coming in through ferrite bead FB301 will not have any ringing generated by the oscillator circuit. If a disable is needed, the disable for the oscillator would be provided through the base signal by shorting R402 to ground.

Previous designs of the Colpitts oscillator include a 5 volt supply and an inductor in place of R400. This other design provided sufficient amplitude modulation into the laser to reduce noise. This previous design, however, would ring every time a write pulse was supplied. The write pulse no longer induces ringing in the oscillator circuit because the inductor was replaced with the resistor R400. In order to eliminate ringing and still maintain enough peak to peak current in the RF modulation, it required changing the supply for the oscillator from 5 volts to 12 volts and then revising all resistors appropriately.

Main Circuit Board

Figs. 106A-119C depict the main circuit board. The main circuit board contains the functions of the drive not contained on the spindle motor board, or pre-amplifiers. This includes a SCSI controller, encoders/decoders for the reading and writing, the read channel, servos, power amplifiers and servo error generation.

Fig. 106A shows the connection from the pre-amplifier flex circuit J1. Pin 15 of pre-amplifier flex circuit J1 is the forward sense current from the pre-amplifier flex circuit board, as shown in Fig. 102A. Resistor R2, Fig. 106A, references the sense output to the minus reference voltage. Operational amplifier U23B buffers this signal, which is measured with ADC U11 (Figs. 110C-D).

Two resistors R58, R59, Fig. 106A, perform the function of a resistor divider to obtain finer resolution on the laser read current level. Outputs from the Digital to Analog converter U3 shown in Fig.110D set the laser read current. The DSP U4, Figs. 110A-B, controls the converters.

Fig. 106E shows the Eval connector J6, also known as the test connector. The Eval connector J6 provides a serial communication link in a test mode to the processor

U38 (Figs. 109A-B) through I/O ports of U43 shown in Figs. 108A(1)-A(3). Comparator U29A, Fig. 106F, generates the SCSI reset signal for the processor.

Power monitor U45, Fig. 106G, monitors the system power and holds the system in reset until such time as the 5 volt supply is within tolerance and the 12 volt supply is within tolerance.

Connector J3A, Fig. 106H, connects the main circuit board to the main power. Power filters F1, F2 provide filtering for the main circuit board.

Capacitively coupled chassis mounts MT1, MT2, Fig. 106I, capacitively ground the main circuit board to the chassis, providing AC grounding to the chassis.

Figs. 107A-C U32 show the SCSI buffer manager/controller circuit. U32 performs the buffering function and command handling for the SCSI bus. U19A stretches the length of the ID found signal from Fig.108A U43. In Fig. 107C U41, U42, and U44 are a 1 Mb x 9 buffer RAM for the SCSI buffer. Fig. 107B shows an eight position dip switch S2. Switch S2 is a general purpose DIP switch for selecting SCSI bus parameters such as reset and termination.

Fig.108A shows an encode/decode circuit U43, which is part of the SCSI controller. Encode/decode circuit U43 performs a RLL 2,7 encode/decode of data and provides all the signals necessary, as well as decoding the sector format for ISO standard disc formats for the 1x and 2x 5-1/4 inch discs. There is also general purpose input/output, which performs miscellaneous functions including communication with various serial devices, enabling the bias coil driver and determining the polarity of the bias coil.

A small non-volatile RAM U34, Fig. 108A(3), stores drive-specific parameters. These parameters are set during drive calibration at drive manufacture time.

SCSI active termination packages U50, U51, shown in Fig. 108B, may be enabled by the switch S2, shown in Fig. 107B.

The encode/decode circuit U43 in Fig. 108A has a special mode that is used in the drive where an NRZ bit pattern can be enabled for input and output. When enabled, a custom GLENDEC U100, Figs.115A-C, can be used for RLL 1,7 encode/decode for the 4X disc. In this mode of the encode/decode, circuit U43 can enable the use of many other encode/decode systems for other disc specifications.

Fig. 109 shows an 80C188 system control processor U38. The 80C188 system control processor U38 operates at 20 megahertz, with 256k bytes of program memory U35, U36 and 256k bytes RAM U39, U40, Figs. 109C-D. The 80C188 system control processor U38 controls function of the drive. The 80C188 system control processor U38 is a general purpose processor and can be programmed to handle different formats and different customer requirements. Different disc formats can be handled with the appropriate support equipment and encode/decode systems.

Fig. 110 shows a TI TMS320C50 DSP servo controller U4, a multi-input analog to digital converter U11 for converting the servo error signals, and an 8 channel/8 bit digital to analog converter U3 for providing servo drive signals and level setting. The DSP servo controller U4 accepts signals from the analog to digital converter U11 and outputs signals to digital to analog converter U3.

The DSP servo controller U4 controls functions such as monitoring the spindle speed via an index signal on pin 40 of the DSP servo controller U4. The DSP servo controller U4 determines whether the drive is writing or reading via a control signal on pin 45. The DSP servo controller U4 communicates with the system control processor U38 via the GLENDEC U100, shown Figs. 115A-C. The DSP servo controller U4 performs the fine tracking servo, coarse tracking servo, focus servo, laser read power control, and the cartridge eject control. The DSP servo controller U4 also monitors spindle speed to verify that the disc is rotating within speed tolerances. The analog to digital converter U11 performs conversions on the focus, tracking, and coarse position signals. Focus and tracking conversions are done using a +/- reference from pins 17 and 18 of the analog to digital converter U11, generated from a quad sum signal. The quad sum signal is the sum of the servo signals. A normalization of the error signals is performed by using the +/- quad sum as the reference. The coarse position, the quad sum signal, and the forward sense are converted using a +/- voltage reference.

The digital to analog converter U3, Fig. 110D, has outputs including a fine drive signal, a coarse drive signal, a focus drive, LS and MS signals. These signals are servo signals functioning to drive the power amplifier (U9 and U10 of Figs. 111A-B, and U8 of Fig. 112B) and to close the servo loops. The focus has a FOCUSDRYLS and FOCUSDRYMS drive signals. The FOCUSDRYLS signal allows fine stepping of the focus motor in an open loop sense to acquire the disc by stepping in very fine steps.

The FOCUSDRYMS signal is used as the servo loop driver. Pin 7 of the digital to analog converter U3, Fig. 110D, contains a signal READ_LEVEL_MS. Pin 9 of the digital to analog converter U3 contains a signal READ_LEVEL_LS. These signals from pins 7, 9 of the digital to analog converter U3 are used for controlling the laser read power. Pin 3 of the digital to analog converter U3 is a threshold offset that is used in 4x read channel error recovery, enabling an offset to be injected into the read channel for error recovery.

The present optical disc system includes generally a lens and a disc to be read, and the invention relating thereto further includes an improved method for focus capture comprising the steps of impinging light upon the disc to be read, initially retracting the lens to the bottom of its stroke, scanning up to the top of the lens stroke while searching for the maximum Quad Sum signal, pin 25 of U11 as shown in Fig. 110D, moving the lens back away from the disc, monitoring the total light coming back from the disc, determining, during the monitoring, when the total light is above one-half the peak value measured, searching for the first zero crossing, determining when the Quad Sum signal is over one-half peak amplitude, and closing focus at that point. An alternate embodiment of this method according to the invention includes the steps of impinging light upon the disc to be read, moving the lens to a first position, monitoring a Quad Sum signal, moving the lens away from the first position towards the disc being read while looking for the maximum Quad Sum signal, moving the lens back away from the disc, monitoring the total light received from the disc, determining, during the monitoring of light, when the total light is above one-half the peak value measured, searching for the first zero crossing, determining when the Quad Sum signal exceeds one-half peak amplitude, and closing focus when the Quad sum signal exceeds one-half peak amplitude. In either embodiment of this method, the impinging light may be from a laser.

The improved focus capture system according to the present invention includes means for impinging light upon the disc to be read, means for initially retracting the lens to the bottom of its stroke, for subsequently scanning up to the top of the lens stroke while searching for the maximum Quad Sum signal, and for then moving the lens back away from the disc, means for monitoring the total light coming back from the disc, and for determining, during the monitoring, when the total light is above one-half the peak value measured, means for searching for the first zero crossing, and means for

determining when the Quad Sum signal is over one-half peak amplitude and closing focus at that point.

An alternate embodiment of the focus capture system according to this invention includes means for impinging light upon the disc to be read, means for monitoring a Quad Sum signal, means for moving the lens to a first position, for moving the lens away from the first position towards the disc being read while looking for the maximum Quad Sum signal, and for moving the lens back away from the disc, means for monitoring the total light received from the disc, means for determining, during the monitoring of light, when the total light is above one-half the peak value measured, means for searching for the first zero crossing, means for determining when the Quad Sum signal exceeds one-half peak amplitude, and means for closing focus when the Quad sum signal exceeds one-half peak amplitude. In this embodiment, the means for impinging light upon the disc to be read includes a laser.

Another aspect of the present invention includes a feedback loop as employed in conjunction with the present optical disc system which is of the type having a focusing mechanism, a tracking mechanism, a lens, and a disc to be read, wherein the mechanisms are controlled by the feedback loop. One embodiment of this feedback loop includes an electronic circuit for generating a servo signal for effecting corrections of the focusing mechanism and the tracking mechanism, means for impinging light upon a disc to be read, means for initially retracting the lens to the bottom of its stroke, for subsequently scanning up to the top of the lens stroke while searching for the maximum Quad Sum signal and for then moving the lens back away from the disc, means for monitoring the total light coming back from the disc, and for determining, during the monitoring, when the total light is above one-half the peak value measured, means for searching for the first zero crossing, and means for determining when the Quad Sum signal is over one-half peak amplitude and closing focus at that point, whereby enhanced focus capture is achieved.

Fig. 110D also shows a 2.5 volt reference U24, which is amplified by a factor of 2 by amplifier U23D, yielding a 5 volt reference. The 2.5 volt reference U24 is used by a comparator U29. The comparator U29 compares the AC component of the tracking error signal to zero volts to determine zero track crossings. The track error signal is

digitized and sent to the GLENDEC U100, shown in Figs. 115A-C, for determining track crossings which are used during seek operation.

The analog to digital converter U11, Figs. 110C-D uses a quad sum signal for performing conversions for the focus and tracking error. By using the quad sum for a reference on pins 17 and 18 of the analog to digital converter U11 the error signals are automatically normalized to the quad sum signal. The analog to digital converter U11 divides the error by the sum signal and gives a normalized error signal for input into the servo loop. The advantage is that the servo loop deals with a reduced number of variations. This normalization function can be performed externally with analog dividers. Analog dividers have inherent precision and speed problems. This function can also be performed by the DSP servo controller U4, Figs. 110A-B, by doing a digital division of the error signal by the quad sum signal. A division in the DSP servo controller U4 requires a significant amount of time. At a sample rate of 50 kilohertz, there may not be time to do the divisions and process the error signals digitally inside the servo loops. Since the quad sum is used as the reference, division is not necessary and the error signals are automatically normalized.

Referring to Figs.110 and 113, the analog to digital reference signals on pins 17, 18 of analog to digital converter U11, Figs. 110C-D, originate from operational amplifiers U17A, U17B, Fig. 113. Operational amplifiers U17A, U17B generate the reference +/- voltages. Switches U27A, U27B select the input reference for the operational amplifiers U17A, U17B. The operational amplifiers U17A, U17B function to generate a 1 volt reference and a 4 volt reference (2.5 volt +/- 1.5 volt reference) when switch U27B is activated, or a reference from the quad sum when switch U27A is activated. The switches U27A and U27B are switched at the servo sample rate of 50 kilohertz. This enables focus and tracking samples to used Quad Sum in every servo sample and Quad Sum, forward sense and coarse position will be taken with the 2.5 volt +/- 1.5 volts as a reference. By multiplexing the reference, the automatic normalization of the servo errors is achieved in the single analog-to-digital conversion.

In summary, the switching system shown in Fig. 113 multiplexes two different reference levels. The switching system enables a true reference level analog to digital conversion for laser power and amount of detected signals from the disc, as well as the normalization of servo error signals when using the quad sum reference. The

conversion can be done in real time on signals such as the laser power, the quad sum level, the error signals focus, and tracking by switching between both reference levels at a 50 kilohertz rate.

Fig. 111 shows a circuit with focus power amplifier U9, Fig. 111A, and fine drive power amplifiers U10, Fig. 111B. The power amplifiers U9, U10 have digital enable lines, on pins 10, that are controlled by the processor. One advantage of microprocessor control is that the power amplifiers are inactive during drive power up, preventing damage and uncontrolled movement of the associated focus and drive assemblies. Both of the power amplifiers U9, U10 have a 2.5 volt reference used as an analog reference and are powered by a 5 volt supply. The power amplifiers U9, U10 have digital to analog inputs from the DSP servo controller U4 to control the current outputs. The focus power amp can drive +/- 250 milliamps current and the fine power amp can drive +/- 200 milliamps current.

Fig. 112 shows a circuit having power amplifiers U30, Fig. 112A, and U8, Fig. 112B, for the MO bias coil drive and the coarse drive. The power amplifiers U30, U8 are powered by the 12 volt supply to allow higher voltage range across the motors. The bias coil (not shown) is digitally controlled to be enabled and set to either erase polarity or write polarity. Power amplifier U30 will output 1/3 of an amp into a 20 ohm coil. The coarse motor power amplifier U8 is designed to supply up to 0.45 amps into a 13-1/2 ohm load. Power amplifier U8 has a level translator U23A at an input, so that the voltage drive is referenced to 5 volts instead of 2.5 volts.

The power amplifiers U9, U10, U30, U8, as shown in Figs. 111 and 112, are configured similarly and compensated to yield bandwidths of greater than 30 kilohertz. Clamping diodes CR1, CR2, CR4, CR5, Fig. 112B, on the coarse power amplifier U8 keep the voltage on the output of the power amplifier U8 from exceeding the rails when the direction the coarse motor is reversed due to the back EMF of the motor. The clamping diodes CR1, CR2, CR4, CR5 will keep the power amplifier U8 from going into saturation for extended periods of time and thereby making seeks difficult.

The output of amplifier U26A, Fig. 112A, and resistor divider R28/R30 feed the bias current back into the analog to digital converter U6, shown on Fig. 114A. This enables the processor U38 (Fig. 109) to ensure that the bias coil is at the desired level before writing is attempted.

Referring to Fig. 113, the quad sum reference translator is realized as circuits U27A, U27B, U17A, and U17B, as previously discussed with reference to Fig. 110. Spindle motor connector J2 transmits signals to other circuit elements.

A differential amplifier U23C translates the coarse position error to a 2.5 volt reference. The coarse position error from the spindle motor board (J2) is referenced to V_{cc}. Transistor Q14 is a driver for the front panel LED, LED1.

Referring now to Fig. 114, U6 is a serial A to D convertor, which converts a signal from a temperature sensor U20. Recalibration of the drive occurs responsive to measured temperature changes. This is an important feature of the invention, particularly in the case of 4x writing, where the write power is critical, and may be required to vary as a function of the system temperature.

Signals at pin 2 (PWCAL) and pin 6 of the analog-to-digital converter U6 are servo differential amplifier signals originating from the 84910 (Fig. 117). These signals may be used to sample the read channel signals and are controlled by digital signals at pins 27-30 of the 84910, Fig. 117B. In the present embodiment pins 27-30 are grounded, but those skilled in the art will appreciate that these pins could be driven by a variety of different signals, and would allow various signals to be sampled for purposes of calibration.

Pin 3 of U6, Fig. 114A, is the AGC level, which is buffered by U21B, and then resistively divided to scale it for input into the A to D converter. The AGC level will be sampled in a known written sector. The resulting value will be written out on pin 19 of U16 as a fixed AGC level. The fixed AGC level is then input into the 84910 of Fig. 117. The 84910 then sets the AGC level that inhibits the amplifiers from operating at maximum gain while a sector is being evaluated to determine if it is a blank sector.

The present optical disc drive system includes in combination a storage medium in the form of a disc having a plurality of data sectors thereon, amplifier means for evaluating a particular one of the sectors to determine whether the sector is blank, and means for inhibiting the amplifier means from operating at maximum gain while the sector is being evaluated. In one specific implementation of this embodiment of the present invention, the means for inhibiting the amplifier means includes a microprocessor, U38 Figs. 109A and B, for setting the gain level for the amplifier means.

As described in further detail below, the present optical disc system is of the type having a focusing mechanism and a tracking mechanism, a lens and a disc to be read, wherein the mechanisms are controlled by a feedback loop which includes an electronic circuit for generating a servo signal for effecting corrections of the focusing mechanism and the tracking mechanism, amplifier means for evaluating a particular sector of the disc to determine whether the sector is blank, and means for inhibiting the amplifier means from operating at maximum gain while the sector is being evaluated. In another specific implementation of this embodiment of the present invention, the means for inhibiting the amplifier means includes a microprocessor, U38 as shown in Figs. 109A and B, for setting the gain level for the amplifier means.

The bias current, which has been discussed with reference to Fig. 112, is monitored on pin 4 of analog to digital converter U6, Fig. 114A, as a further safeguard during write and erase operations in order to determine that it has correct amplitude and polarity.

Signals PWCALLF and PWCALHF appear on pins 7 and 8 of U6 at A6 and A7 respectively. These signals are derived from sample and hold circuits (see Fig. 118), and can be controlled by the glue logic encoder/decoder (GLENDEC) by signals WTLF or WTHF, as shown in Fig. 118B. They are employed within a sector in-order to sample a high frequency written pattern, and the average DC component of a low frequency written pattern. The average values can be compared to obtain an offset that can be used to optimize 4x write powers.

Pin 11 of U6 (A9), Fig. 114A, is coupled through U21A, a differential amplifier having inputs INTD+ and INTD-. These signals are the DC level of the data relative to the DC level of the restore signal in the 4x read channel. The difference signal determines the threshold level for the comparator in the 4x read channel. Using the D-to-A converter, DSP threshold, at U3, pin 3 (Fig. 110D) this DC offset can be canceled. Additionally, for error recovery an offset could be injected to attempt to recover data that may be otherwise unrecoverable. Thus a 4x read channel recovery and calibration function is provided.

Signal ReadDIFF appears at Pin 12 of U6, A10, as the output of a differential amplifier U15B, Figs. 114A-B. ReadDIFF is the DC component of the MO preamplifier, or the pre-format preamplifier. Thus the DC value of the read signal can be determined,

and can be used to measure the DC value of an erased track in a first direction, and an erased track in a second direction in order to provide a difference value for the peak-to-peak MO signal. Also the written data can be averaged to yield an average DC value that provides a measure of the writing that is occurring. This value is also used for a 4x write power calibration.

U16, Fig. 114B, is a D-to-A converter which is controlled by the 80C188 (Figs. 109A-B; U38) processor. The outputs of U16 are voltages that control the current levels for the three write power levels; WR1-V, WR2-V, and WR3-V. These signals determine the power of the individual pulses. The fourth output is the above noted fixed AGC level.

The GLENDEC is shown in Fig. 115 as U100. The Glue Logic ENcode/DECode essentially combines a number of different functions in a gate array. The ENcode/-DECode portion is an RLL 1, 7 encode/decode function. The ENcode function's input is the NRZ of U43 (Fig. 108A), pin 70, and its output is encoded to RLL 1, 7, which is then written to the disc by pin 36, 37 and 38 of U100 (WR1, WR2, WR3). The DECode function accepts RLL 1, 7-encoded data from the disc, which is decoded and returned to the NRZ for transmission to U43 (Fig. 108A). U16, Fig. 114B, also contains the 4x sector format which is used for timing. Of course U16 is programmable, so that different sector formats can be defined therein.

Other functions conducted by the GLENDEC U100 of Fig. 115 include the communication interface between the DSP (U4, Fig. 110) and the host processor, the 80C188 (U38; Fig. 109). Counters for track crossing, and timers for measuring time between track crossings are also provided, which are used by the DSP for seek functions.

Fig. 116 shows the servo error generation circuitry. Signals QUADA, QUADB, QUADC, and QUADD, Fig. 116A, represent the output of the servo transimpedance amplifiers which are located on the preamp board (Fig. 102B, U1A-U1D). These signals are added and subtracted as appropriate in operational amplifiers U22A and U22B, Figs. 116A-B, in order to generate tracking and focus error signals TE and FE, respectively, on J4 of Fig. 116A. U22C, Fig. 116B, sums QUADA, QUADB, QUADC, and QUADD as quad sum signal QS.

The switches U28A, U28B, U28C, U28D, U27C, and U27D are enabled during writing to lower the circuit gain because of increased quad currents during writes. During a write QUADA, QUADB, QUADC, and QUADD are all attenuated by approximately a factor of 4.

The read channel is now discussed with reference to Fig. 118A. The read signals RFD+, RFD- originate on the preamplifier board (Fig. 102B, U106), and propagate through gain switches U48A, U48B, Fig. 118A(1), for normalizing the relative levels of the preformatted signal and the MO signal. The gain switches are controlled by U25B, which switches between preformatted and MO areas of the disk.

During write operations U48C and U48D are open, so that the read signals do not saturate the inputs of the read channel. During read operations, both of these switches are closed, and the read signal fed through to the differentiator U47, Fig. 118A(2). U47 is compensated for minimum group delay errors, and can operate out to 20 MHz. The output of U47 is AC coupled through C36 and C37 to SSI filter U1 and to the 84910 (Fig. 117) through FRONTOUT+ and FRONTOUT-. Signals are resistively attenuated by R75 and R48, as shown in Fig. 117C, so that acceptable signal levels are seen by the 84910. FRONTOUT+ and FRONTOUT- are then AC coupled to the 84910 through C34 and C33 respectively.

Several functions are included in the 84910 in order that the read channel can function properly. These include the read channel AGC, read channel phase lock loop, data detector, data separator, frequency synthesizer. Servo error generators, which are typical Winchester servo error generator functions, also are part of the 84910. These, however, are not used in the present embodiment.

The output of the data separated signal of the 84910 (U13), Fig. 117, comes out on pins 14 and 15 and is then connected to the SM330, U43 (Fig. 108A). These signals are used for the 1x and 2x read channel modes.

The pre-format signal controls pin 31 of the 84910 so that there are actually two separate AGC signals. One is used for reading the header or pre-formatted data and the other for MO data.

In the case of the 4x read channel, signals SSIFP and SSIFN, Fig. 118A(2), enter U49, a buffer amplifier (Fig. 119A). The output of U49 is conducted to Q3, Q4 and Q5, (Figs. 119A-B) which function as an integrator with boost. U5, Fig. 119B, is a buffer

amplifier for the integrated and boosted signal. The 4x read channel thus involves an SSI filter, equalization, differentiation, and integration.

The output of U5 is buffered by amplifier U12, Fig. 119A, and is coupled to a circuit that determines the midpoint between the peak-to-peak levels, also known as a restore circuit. As a result of the restoration, the signals INTD+ and INTD-, Fig. 118C, are input to a comparator whose output provides the threshold level signal used in data separation. Signals INT+, INT-, INTD+ and INTD- are then input to U14, an MRC1 of Fig. 118C, where they are compared, and read data is separated. The output of U14 is returned to the GLENDEC U100 (Fig. 115) for encode/decode operation.

The digital signal processor firmware is disclosed in Appendix B attached hereto and incorporated herein by reference.

Digital Lead/Lag Compensation Circuit

It is well known in the art that there are particular concerns with position control systems that use a motor having a drive signal proportional to acceleration (e.g., the drive signal is a current). These position control systems require lead/lag compensation to substantially eliminate oscillation to stabilize the position control system or servo system.

The circuit of the present invention is a digital lead/lag compensation circuit that not only substantially eliminates oscillation, but also provides a notch filter frequency of one half the digital sampling frequency. In the following section labeled Transfer Functions, there are listed the mathematical transfer functions of a digital lead/lag circuit of the present invention, which is a single lead, complex lag compensation. Also listed for comparison are a few prior art digital lead/lag compensation circuits and one analog lead/lag compensation circuit. From the section below, the transfer function of the invention is seen to be H (s) = (s + w6) x square (w7) divided by (square (s) + 2 zeta7 w7s + square(w7)) w6.

Also listed in the following section is the s-domain formulation of the transfer function, a formulation suitable for display on a Bode plot. From the Bode plot one can see that the compensation circuit of the present invention has a minimal impact on phase.

While the prior art compensation circuits also can be seen to have minimum phase impact, only the compensation circuit of the present invention has a notch filter at a

frequency of one half the digital sampling frequency. With proper choice of sampling frequency, this notch filter can be used to notch parasitic mechanical resonance frequencies, such as those of the servo motor being compensated. In the drive 10 of Fig. 1, and the alternate preferred embodiments thereof, the single lead complex lag compensation circuit is used to suppress mechanical decoupling resonance of the fine and focus servo motors as shown in the following section.

Transfer Functions

The following mathematical derivations illustrate the transfer functions of the digital lead/lag compensation circuit of the present invention. The focus loop transfer function will be shown and discussed first. This discussion is followed by a similar detailed description of the compensation transfer functions.

Focus Loop Transfer Function:

Shift in frequency at 23 C

$T_{factor} := 1$

$\omega_0 := 2\cdot\pi\cdot 3000$

ACTUATOR MODEL: Decoupling Frequency:

$\omega_1 := T_{factor}\cdot 2\cdot\pi\cdot 33\cdot 10^3 \quad \zeta_1 := 0.01 \quad H_1(s) := \dfrac{2\cdot\zeta_1\cdot\omega_1\cdot s + \omega_1^2}{\left(s^2 + 2\cdot\zeta_1\cdot\omega_1\cdot s + \omega_1^2\right)}$

Parasitic Resonance:

$\omega_3 := T_{factor}\cdot 2\cdot\pi\cdot 23\cdot 10^3 \quad \zeta_3 := 0.03 \quad \omega_2 := T_{factor}\cdot 2\cdot\pi\cdot 27\cdot 10^3$

$\zeta_2 := \zeta_3\cdot\left(\dfrac{\omega_2}{\omega_3}\right) \quad H_2(s) := \left(\dfrac{s^2 + 2\cdot\zeta_2\cdot\omega_2\cdot s + \omega_2^2}{s^2 + 2\cdot\zeta_3\cdot\omega_3\cdot s + \omega_3^2}\right)\cdot\left(\dfrac{\omega_3^2}{\omega_2^2}\right)$

HF Phase Loss:

$\omega_4 \quad 2\cdot\pi\cdot 100\cdot 10^3 \quad \tau_4 \quad \dfrac{1}{\omega_4} \quad H_3(s) \quad \dfrac{1}{1\cdot\tau_4\cdot s}$

Fundamental Frequency:

$M_{constant} := 790 \quad m/(s\hat{}2*A)$

$\omega_5 := T_{factor} \cdot 2 \cdot \pi \cdot 36.9 \quad \zeta_5 := 0.08$

$$H_4(s) := \frac{M_{constant}}{\omega_5^2} \cdot \left(\frac{\omega_5^2}{s^2 + 2 \cdot \zeta_5 \cdot \omega_5 \cdot s + \omega_5^2} \right)$$

Actuator Response:

$$H_{actuator}(s) := H_1(s) \cdot H_2(s) \cdot H_3(s) \cdot H_4(s)$$

DSP MODEL: Single Lead Complex Lag Circuit:

Sample Period $T := 20 \cdot 10^{-6}$

$$H_{leadlag}(s) := \frac{1 + \frac{0.107}{e^{(s \cdot T)}} - \frac{0.893}{\left[e^{(s \cdot T)}\right]^2}}{1 + \frac{0.356}{e^{(s \cdot T)}} + \frac{0.136}{\left[e^{(s \cdot T)}\right]^2}}$$

DSP S&H and Processing Delay:

$$ZOH(s) := \left(\frac{1 - \exp(-s \cdot T)}{s \cdot T} \right) \quad T_{delay} := 3.3 \cdot 10^{-6} \quad H_{delay}(s) := \exp\left(-s \cdot T_{delay}\right)$$

DSP Response:

$$H_{dsp}(s) := \left(ZOH(s) \cdot H_{delay}(s) \cdot H_{leadlag}(s)\right)$$

Anti-aliasing Filter:

$R_{filt} := 20000 \quad C_{filt} := 100 \cdot 10^{-12} \quad \tau_{filt} := R_{filt} \cdot C_{filt} \quad H_{filt}(s) := \frac{1}{1 + s \cdot \tau_{filt}}$

$F_{filt} := \frac{1}{2 \cdot \pi \cdot \tau_{filt}} \quad F_{filt} = 7.958 \cdot 10^{3}$

Simplified Focus Power Amp Response:

$\omega_{pa1} \quad 2 \cdot \pi \cdot 28000 \quad \zeta_{pa1} \quad .4 \quad G_{pa1} \quad 0.09 \frac{A}{V} \quad G_{pa2} \quad \frac{5 \ V}{2^{16} \ bit}$

$\omega_{pa2} := 2\cdot\pi\cdot 450000 \quad \zeta_{pa2} := 0.8 \quad G_{pa} := G_{pa1}\cdot G_{pa2}$ A/BIT

$G_{pa}\cdot M_{constant} = 5.907\cdot 10^{-3}\,\frac{m}{s^2\cdot bit} \quad G_{pa} = 7.477\cdot 10^{-6}$

$$H_{pa}(s) := G_{pa}\cdot\left(\frac{\omega_{pa1}^2}{s^2 + 2\cdot\zeta_{pa1}\cdot\omega_{pa1}\cdot s + \omega_{pa1}^2}\right)\cdot\left(\frac{\omega_{pa2}^2}{s^2 + 2\cdot\zeta_{pa2}\cdot\omega_{pa2}\cdot s + \omega_{pa2}^2}\right)$$

Focus Error Signal:

$Slope := 0.1\frac{QSum}{\mu m} \quad G_{fe} := \frac{2^{16}\ Bit}{2QSum} \quad H_{fe} := Slope\cdot G_{fe}\cdot 10^6\frac{Bit}{m} \quad H_{fe} = 3.277\cdot 10^9$

Filter Response:

$H(s) := H_{filt}(s)$ Volts/Volt

DSP Response:

$H(s) := H_{dsp}(s)$ Volts/Volt

Power Amp Response:

$H(s) := H_{pa}(s)$ Amps/bit

Actuator Response:

$H(s) := H_{actuator}(s)$ m/a

Focus Error Response:

$H(s) := H_{fe}$ bit/m

Open Loop Response:

$H(s)\quad H_{filt}(s)\cdot H_{dsp}(s)\cdot H_{pa}(s)\cdot H_{actuator}(s)\cdot H_{fe}$

Gain Factor:

$$G := \frac{1}{\left|H(\omega_0)\right|} \qquad G = 36.059$$

Closed Loop Response:

$$H_{cl}(s) := \frac{G \cdot H(s)}{1 + G \cdot H(s)}$$

Generating Nyquist diagram with "M-circles":

Selected amounts of closed loop peaking M_p:

$$j := 1..4 \qquad M := \begin{bmatrix} 1.3 \\ 1.5 \\ 2.0 \\ 4.0 \end{bmatrix}$$

Radius of M-circle

$$R_j := \frac{M_j}{1 - (M_j)^2}$$

Center of M-circle

$$Ctr_j := \frac{(M_j)^2}{1 - (M_j)^2}$$

$$n_2 := 100 \qquad m := 1..n_2 \qquad min_{2_j} := R_j + Ctr_j \qquad max_{2_j} := -R_j + Ctr_j$$

$$x_{m,j} := min_{2_j} + (max_{2_j} - min_{2_j}) \cdot \frac{(m - 1)}{(n_2 - 1)}$$

$$y_{m,j} := R_j^2 - (x_{m,j} - Ctr_j)^2 \qquad z_{m,j} := R_j^2 - (x_{m,j} - Ctr_j)^2$$

$$n := 300 \qquad k := 1..n \qquad N_k := 1000 - 100 \cdot k$$

Data for bode plots:

$$min := 100 \qquad max := 10 \cdot 10^4 \qquad r := \ln\left(\frac{max}{min}\right) \qquad f_k := min \cdot e^{k \cdot \frac{r}{n}} \qquad deg \equiv \frac{\pi}{180}$$

$$Magn(s) := 20 \cdot \log(|G \cdot H(s)|)$$

$$\phi(s) := angle(Re(H(s)), Im(H(s))) - 360 \cdot deg$$

$$Magn_1(s) := 20 \cdot \log\left(\left|H_{cl}(s)\right|\right)$$

$$\phi_1(s) := angle\left(Re\left(H_{cl}(s)\right), Im\left(H_{cl}(s)\right)\right) - 360 \cdot deg$$

As shown in Fig. 124, the Nyquist diagram of the focus loop transfer function includes equal-peaking-loci which create M-circles 9-22, 9-24, 9-26, and 9-28. Each having an M_p value of 4.0, 2.0, 1.5, 1.3 respectively. Fig. 124 also shows loop curve 9-30 as generated from the open loop equations above. Fig. 125 shows the magnitude curve of the open loop response 9-32, and the closed loop response magnitude curve 9-34. Fig. 126 shows the phase curve of the open loop response 9-36 and the closed loop response phase curve 9-38.

Compensation Transfer Functions:

$$T := 20 \cdot 10^{-6} \qquad \omega_0 := 2 \cdot \pi \cdot i \cdot 3000$$

DSP S&H and Processing Delay:

$$ZOH(s) := \left(\frac{1 - \exp(-s \cdot T)}{s \cdot T}\right) \qquad T_{delay} := 2.5 \cdot 10^{-6} \qquad H_{delay}(s) := \exp\left(-s \cdot T_{delay}\right)$$

DSP MODEL: Triple Lead/Lag Circuit:

$$\tau_{lead} := \frac{1}{2 \cdot \pi \cdot 2185} \qquad \tau_{lag} := \frac{1}{2 \cdot \pi \cdot 5848}$$

Bilateral Transform $s = \frac{2}{T} \cdot \left(\frac{z - 1}{z + 1}\right)$

$$H_{leadlag}(s) := \left(\frac{1 + \tau_{lead} \cdot s}{1 + \tau_{lag} \cdot s}\right)$$

$$H_{leadlag}(z) := \left[\frac{1 - 2 \cdot \frac{\tau_{lead}}{T} \cdot (z - 1)}{1 + 2 \cdot \frac{\tau_{lag}}{T} \cdot (z - 1)}\right]$$

$$\frac{T - 2\cdot\tau_{lead}}{T + 2\cdot\tau_{lead}} = -0.759 \qquad H_{leadlag}(z) := \frac{\left(T\cdot z + T + 2\cdot\tau_{lead}\cdot z - 2\cdot\tau_{lead}\right)}{\left(T\cdot z + T + 2\cdot\tau_{lag}\cdot z - 2\cdot\tau_{lag}\right)}$$

$$\frac{T - 2\cdot\tau_{lag}}{T + 2\cdot\tau_{lag}} = -0.463 \qquad H_{leadlag}(z) := \frac{\left[1 + \left[\frac{\left(T - 2\cdot\tau_{lead}\right)}{\left(T + 2\cdot\tau_{lead}\right)}\right]\cdot\frac{1}{z}\right]}{\left[1 + \left[\frac{\left(T - 2\cdot\tau_{lag}\right)}{\left(T + 2\cdot\tau_{lag}\right)}\right]\cdot\frac{1}{z}\right]}$$

Definition of z $z = e^{s\cdot T}$

$$H_{TripleComp}(s) := \left[\frac{1 + \left[\frac{\left(T - 2\cdot\tau_{lead}\right)}{\left(T + 2\cdot\tau_{lead}\right)}\right]\cdot\frac{1}{\exp(s\cdot T)}}{1 + \left[\frac{\left(T - 2\cdot\tau_{lag}\right)}{\left(T + 2\cdot\tau_{lag}\right)}\right]\cdot\frac{1}{\exp(s\cdot T)}}\right]^3$$

Triple Lead Lag Response:

$$H_{Triple}(s) := \frac{ZOH(s)\cdot H_{delay}(s)\cdot H_{TripleComp}(s)}{\left|H_{TripleComp}(\omega_0)\right|}$$

Single Lead Lag Response:

$$\tau_{lead} := \frac{1}{2\cdot\pi\cdot 1000} \qquad \tau_{lag} := \frac{1}{2\cdot\pi\cdot 25000}$$

$$H_{LeadLag}(s) \quad 1 \cdot \left(T - 2\cdot\tau_{lead}\right) \cdot \frac{1}{T \cdot 2\cdot\tau_{lead}} \cdot \frac{1}{\exp(s\cdot T)}$$

$$1 \cdot \left(T - 2\cdot\tau_{lag}\right) \cdot \frac{1}{T \cdot 2\cdot\tau_{lag}} \cdot \frac{1}{\exp(s\cdot T)}$$

$$H_{Single}(s) := \frac{ZOH(s)\cdot H_{delay}(s)\cdot H_{LeadLag}(s)}{\left|H_{LeadLag}(\omega_0)\right|}$$

Complex Lead Lag:

$\omega_{center} := 2\cdot\pi\cdot 2200$ $Span := 1.0$ $\omega_2 := \omega_{center} - 0.5\cdot Span\cdot\omega_{center}$

$\omega_3 := \frac{\omega_{center}^2}{\omega_2}$ $\zeta_3 := 1.7$ $\zeta_2 := 0.707$

$$H_{Compl}(s) := \left(\frac{s^2 + 2\cdot\zeta_2\cdot\omega_2\cdot s + \omega_2^2}{s^2 + 2\cdot\zeta_3\cdot\omega_3\cdot s + \omega_3^2}\right)\cdot\left(\frac{\omega_3^2}{\omega_2^2}\right)$$

$\frac{\omega_2}{2\cdot\pi} = 1.1\cdot 10^3$

$\frac{\omega_3}{2\cdot\pi} = 4.4\cdot 10^3$

$$H_{Compl}(z) := \frac{\left[\frac{4}{T^2}\cdot\frac{(z-1)^2}{(z+1)^2} + 4\cdot\zeta_2\cdot\frac{\omega_2}{T}\cdot\frac{(z-1)}{(z+1)} + \omega_2^2\right]\cdot\omega_3^2}{\left[\frac{4}{T^2}\cdot\frac{(z-1)^2}{(z+1)^2} + 4\cdot\zeta_3\cdot\frac{\omega_3}{T}\cdot\frac{(z-1)}{(z+1)} + \omega_3^2\right]\cdot\omega_2^2}$$

$$H_{Compl}(z) := \frac{\left(4\cdot z^2 - 8\cdot z + 4 + 4\cdot\zeta_2\cdot\omega_2\cdot T\cdot z^2 - 4\cdot\zeta_2\cdot\omega_2\cdot T + \omega_2^2\cdot T^2\cdot z^2 + 2\cdot\omega_2^2\cdot T^2\cdot z + \omega_2^2\cdot T^2\right)\cdot\omega_3^2}{\left(4\cdot z^2 - 8\cdot z + 4 + 4\cdot\zeta_3\cdot\omega_3\cdot T\cdot z^2 - 4\cdot\zeta_3\cdot\omega_3\cdot T + \omega_3^2\cdot T^2\cdot z^2 + 2\cdot\omega_3^2\cdot T^2\cdot z + \omega_3^2\cdot T^2\right)\cdot\omega_2^2}$$

$$H_{Compl}(z) := \frac{\left[\left(4 + \omega_2^2\cdot T^2 + 4\cdot\zeta_2\cdot\omega_2\cdot T\right)\cdot z^2 + \left(-8 + 2\cdot\omega_2^2\cdot T^2\right)\cdot z - 4\cdot\zeta_2\cdot\omega_2\cdot T + 4 + \omega_2^2\cdot T^2\right]\cdot\omega_3^2}{\left[\left(4 + \omega_3^2\cdot T^2 + 4\cdot\zeta_3\cdot\omega_3\cdot T\right)\cdot z^2 + \left(-8 + 2\cdot\omega_3^2\cdot T^2\right)\cdot z - 4\cdot\zeta_3\cdot\omega_3\cdot T + 4 + \omega_3^2\cdot T^2\right]\cdot\omega_2^2}$$

$$H_{Compl}(z) := \frac{\left[\left(4 + \omega_2^2\cdot T^2 + 4\cdot\zeta_2\cdot\omega_2\cdot T\right) + \left(-8 + 2\cdot\omega_2^2\cdot T^2\right)\cdot z^{-1} + \left(4 + \omega_2^2\cdot T^2 - 4\cdot\zeta_2\cdot\omega_2\cdot T\right)\cdot z^{-2}\right]\cdot\omega_3^2}{\left[\left(4 + \omega_3^2\cdot T^2 + 4\cdot\zeta_3\cdot\omega_3\cdot T\right) + \left(-8 + 2\cdot\omega_3^2\cdot T^2\right)\cdot z^{-1} + \left(4 + \omega_3^2\cdot T^2 - 4\cdot\zeta_3\cdot\omega_3\cdot T\right)\cdot z^{-2}\right]\cdot\omega_2^2}$$

$$H_{Compl}(s) \quad \begin{matrix} 4\cdot\omega_2^2\cdot T^2 \cdot 4\cdot\zeta_2\cdot\omega_2\cdot T\cdot\dfrac{\left(-8 - 2\cdot\omega_2^2\cdot T^2\right)}{\exp(s\cdot T)} - \dfrac{\left(-4\cdot\zeta_2\cdot\omega_2\cdot T - 4\cdot\omega_2^2\cdot T^2\right)}{\exp(s\cdot T)^2} & \omega_3^2 \\ 4\cdot\omega_3^2\cdot T^2 \cdot 4\cdot\zeta_3\cdot\omega_3\cdot T\cdot\dfrac{\left(8 \cdot 2\cdot\omega_3^2\cdot T^2\right)}{\exp(s\cdot T)} - 4\cdot\zeta_3\cdot\omega_3\cdot T \cdot 4\cdot\omega_3^2\cdot T^2 & \omega_2^2 \end{matrix}$$

$$H_{Complex}(s) := \frac{ZOH(s)\cdot H_{delay}(s)\cdot H_{Compl}(s)}{\left|H_{Compl}(\omega_0)\right|}$$

Analog Box Compensation:

$$\tau_{lead} := 20.5\cdot 10^{3}\cdot 0.01\cdot 10^{-6} \qquad \tau_{lag} := 0.01\cdot 10^{-6}\cdot\frac{20.5\cdot 2.05}{(20.5+2.05)}\cdot 10^{3}$$

$$\tau_{lp} := 330\cdot 10^{-12}\cdot 20.5\cdot 10^{3}$$

$$H_{ABox}(s) := \left(\frac{1+\tau_{lead}\cdot s}{1+\tau_{lag}\cdot s}\right)\cdot\frac{1}{1+\tau_{lp}\cdot s} \qquad H_{AnalogBox}(s) := \frac{H_{ABox}(s)}{\left|H_{ABox}(\omega_0)\right|}$$

Single Lead Complex Lag:

$$\omega_6 := 2\cdot\pi\cdot 900 \qquad \omega_7 := 2\cdot\pi\cdot 22000 \qquad \zeta_7 := 0.8$$

$$H_{Compl}(s) := \frac{(s+\omega_6)}{\left(s^2+2\cdot\zeta_7\cdot\omega_7\cdot s+\omega_7^{2}\right)}\cdot\frac{\omega_7^{2}}{\omega_6}$$

$$H_{Compl}(z) := \frac{\left[\frac{2}{T}\cdot\frac{(z-1)}{(z+1)}+\omega_6\right]}{\left[\frac{4}{T^2}\cdot\frac{(z-1)^2}{(z+1)^2}+4\cdot\zeta_7\cdot\frac{\omega_7}{T}\cdot\frac{(z-1)}{(z+1)}+\omega_7^{2}\right]}\cdot\frac{\omega_7^{2}}{\omega_6}$$

$$H_{Compl}(z) := \frac{\left(2\cdot z-2+\omega_6\cdot T\cdot z+\omega_6\cdot T\right)\cdot((z+1)\cdot T)}{\left(4\cdot z^2-8\cdot z+4+4\cdot\zeta_7\cdot\omega_7\cdot T\cdot z^2-4\cdot\zeta_7\cdot\omega_7\cdot T+\omega_7^{2}\cdot T^2\cdot z^2+2\cdot\omega_7^{2}\cdot T^2\cdot z+\omega_7^{2}\cdot T^2\right)}\cdot\frac{\omega_7^{2}}{\omega_6}$$

$$H_{Compl}(z) := \frac{\left(2\cdot T\cdot z^2-2\cdot T+\omega_6\cdot T^2\cdot z^2+2\cdot\omega_6\cdot T^2\cdot z+\omega_6\cdot T^2\right)}{\left(4\cdot z^2-8\cdot z+4+4\cdot\zeta_7\cdot\omega_7\cdot T\cdot z^2-4\cdot\zeta_7\cdot\omega_7\cdot T+\omega_7^{2}\cdot T^2\cdot z^2+2\cdot\omega_7^{2}\cdot T^2\cdot z+\omega_7^{2}\cdot T^2\right)}\cdot\frac{\omega_7^{2}}{\omega_6}$$

$$H_{Compl}(z) := \frac{\left[\omega_6 \cdot T^2 + 2 \cdot T + 2 \cdot \omega_6 \cdot \frac{T^2}{z} + \frac{\left(\omega_6 \cdot T^2 - 2 \cdot T\right)}{z^2}\right]}{\left[4 + \omega_7{}^2 \cdot T^2 + 4 \cdot \zeta_7 \cdot \omega_7 \cdot T + \frac{\left(-8 + 2 \cdot \omega_7{}^2 \cdot T^2\right)}{z} + \frac{\left(4 + \omega_7{}^2 \cdot T^2 - 4 \cdot \zeta_7 \cdot \omega_7 \cdot T\right)}{z^2}\right]} \cdot \frac{\omega_7{}^2}{\omega_6}$$

$$H_{Compl}(s) := \frac{\left[\omega_6 \cdot T^2 + 2 \cdot T + 2 \cdot \omega_6 \cdot \frac{T^2}{\exp(s \cdot T)} + \frac{\left(\omega_6 \cdot T^2 - 2 \cdot T\right)}{\exp(s \cdot T)^2}\right]}{\left[4 + \omega_7{}^2 \cdot T^2 + 4 \cdot \zeta_7 \cdot \omega_7 \cdot T + \frac{\left(-8 + 2 \cdot \omega_7{}^2 \cdot T^2\right)}{\exp(s \cdot T)} + \frac{\left(4 + \omega_7{}^2 \cdot T^2 - 4 \cdot \zeta_7 \cdot \omega_7 \cdot T\right)}{\exp(s \cdot T)^2}\right]} \cdot \frac{\omega_7{}^2}{\omega_6}$$

$$H_{slcl}(s) := \frac{ZOH(s) \cdot H_{delay}(s) \cdot H_{Compl}(s)}{\left|H_{Compl}(\omega_0)\right|}$$

Plot Data:

$r := \ln\left(\frac{max}{min}\right)$ $\quad n := 400$ $\quad k := 1..n$ $\quad min := 100$

$f_k := min \cdot e^{k \cdot \frac{r}{n}}$ $\quad deg \equiv \frac{\pi}{180}$ $\quad max := 10 \cdot 10^4$

$Magn(s) := 20 \cdot \log\left(\left|H_{Triple}(s)\right|\right)$

$\phi(s) := angle\left(Re\left(H_{Triple}(s)\right), Im\left(H_{Triple}(s)\right)\right) - 360 \cdot deg$

$Magn_1(s) := 20 \cdot \log\left(\left|H_{Single}(s)\right|\right)$

$\phi_1(s) := angle\left(Re\left(H_{Single}(s)\right), Im\left(H_{Single}(s)\right)\right) - 360 \cdot deg$

$Magn_2(s) := 20 \cdot \log\left(H_{Complex}(s)\right)$

$\phi_2(s) := angle\left(Re\left(H_{Complex}(s)\right), Im\left(H_{Complex}(s)\right)\right) - 360 \cdot deg$

$$Magn_3(s) := 20\cdot\log\left(\left|H_{AnalogBox}(s)\right|\right)$$

$$\phi_3(s) := angle\left(Re\left(H_{AnalogBox}(s)\right), Im\left(H_{AnalogBox}(s)\right)\right) - 360\cdot deg$$

$$Magn_4(s) := 20\cdot\log\left(\left|H_{slcl}(s)\right|\right)$$

$$\phi_4(s) := angle\left(Re\left(H_{slcl}(s)\right), Im\left(H_{slcl}(s)\right)\right) - 360\cdot deg$$

Fig. 127 illustrates the magnitude response curves for focus compensation transfer functions as derived from the indicated equations. The graph of Fig. 127 shows the individual response curves for triple lead lag, single lead lag, complex lead lag, analog box, and single lead complex lag as identified by the keys in the legend box. Similarly, Fig. 128 shows the phase response curves for the focus compensation transfer functions as derived from the corresponding equations. The graph of Fig. 128 illustrates the individual phase response curves for triple lead lag, single lead lag, complex lead lag, analog box, and single lead complex lag as identified in the legend box.

Complex Lead/Lag:

$$H_{Compl}(z) := \frac{\left[\frac{4+\omega_2^2\cdot T^2+4\cdot\zeta_2\cdot\omega_2\cdot T}{\left(-8+2\cdot\omega_2^2\cdot T^2\right)} + 1\cdot z^{-1} + \frac{4+\omega_2^2\cdot T^2-4\cdot\zeta_2\cdot\omega_2\cdot T}{\left(-8+2\cdot\omega_2^2\cdot T^2\right)}\cdot z^{-2}\right]}{\left(1+\frac{-8+2\cdot\omega_3^2\cdot T^2}{4+\omega_3^2\cdot T^2+4\cdot\zeta_3\cdot\omega_3\cdot T}\cdot z^{-1} + \frac{4+\omega_3^2\cdot T^2-4\cdot\zeta_3\cdot\omega_3\cdot T}{4+\omega_3^2\cdot T^2+4\cdot\zeta_3\cdot\omega_3\cdot T}\cdot z^{-2}\right)} \cdot \frac{\omega_3^2\cdot\left(-8+2\cdot\omega_2^2\cdot T^2\right)}{\omega_2^2\cdot\left(4+\omega_3^2\cdot T^2+4\cdot\zeta_3\cdot\omega_3\cdot T\right)}$$

$$N_1 := \frac{4+\omega_2^2\cdot T^2-4\cdot\zeta_2\cdot\omega_2\cdot T}{\left(-8+2\cdot\omega_2^2\cdot T^2\right)} \qquad N_1 = -0.554 \qquad N_2 := 1$$

$$N_3 := \frac{4+\omega_2^2\cdot T^2-4\cdot\zeta_2\cdot\omega_2\cdot T}{8+2\cdot\omega_2^2\cdot T^2} \qquad N_3 = 0.456$$

$$D_1 := 1$$

$$D_2 := \frac{-8 + 2\cdot\omega_3^{\,2}\cdot T^2}{\left(4 + \omega_3^{\,2}\cdot T^2 + 4\cdot\zeta_3\cdot\omega_3\cdot T\right)} \qquad D_2 = -0.916$$

$$D_3 := \frac{4 + \omega_3^{\,2}\cdot T^2 - 4\cdot\zeta_3\cdot\omega_3\cdot T}{\left(4 + \omega_3^{\,2}\cdot T^2 + 4\cdot\zeta_3\cdot\omega_3\cdot T\right)} \qquad D_3 = 0.068$$

Single Lead Complex Lag:

$$H_{Compl}(z) := \frac{\left[\left(\omega_6\cdot T^2 + 2\cdot T\right) + 2\cdot\omega_6\cdot T^2\cdot z^{-1} + \left(\omega_6\cdot T^2 - 2\cdot T\right)\cdot z^{-2}\right]}{\left[\left(4 + \omega_7^{\,2}\cdot T^2 + 4\cdot\zeta_7\cdot\omega_7\cdot T\right) + \left(-8 + 2\cdot\omega_7^{\,2}\cdot T^2\right)\cdot z^{-1} + \left(4 + \omega_7^{\,2}\cdot T^2 - 4\cdot\zeta_7\cdot\omega_7\cdot T\right)\cdot z^{-2}\right]}\cdot\frac{\omega_7^{\,2}}{\omega_6}$$

$$\omega_2\cdot T^2 + 2\cdot T = 4.276\cdot 10^{-5} \qquad 2\cdot\omega_2\cdot T^2 = 5.529\cdot 10^{-6}$$

$$N_1 := \frac{\omega_6\cdot T^2 + 2\cdot T}{\left(\omega_6\cdot T^2 + 2\cdot T\right)} \qquad N_1 = 1$$

$$N_2 := \frac{2\cdot\omega_6\cdot T^2}{\left(\omega_6\cdot T^2 + 2\cdot T\right)} \qquad N_2 = 0.107$$

$$N_3 := \frac{\omega_6\cdot T^2 - 2\cdot T}{\left(\omega_6\cdot T^2 - 2\cdot T\right)} \qquad N_3 = -0.893 \qquad |N_1| + |N_2| + |N_3| = 2$$

$$D_2 \qquad \frac{8 \cdot 2\cdot\omega_7^{\,2}\cdot T^2}{4 \cdot \omega_7^{\,2}\cdot T^2 \cdot 4\cdot\zeta_7\cdot\omega_7\cdot T} \qquad D_2 = 0.356$$

$$D_3 := \frac{4 + \omega_7^2 \cdot T^2 - 4 \cdot \zeta_7 \cdot \omega_7 \cdot T}{4 + \omega_7^2 \cdot T^2 + 4 \cdot \zeta_7 \cdot \omega_7 \cdot T} \qquad D_3 = 0.136$$

To the extent not already disclosed, the following U.S. Patents are herein incorporated by reference: Grove et al., U.S. Pat. No. 5,155,633; Prikryl et al., U.S. Pat. No. 5,245,174; and Grassens, U.S. Pat. No. 5,177,640.

While this invention has been described in detail with reference to certain preferred embodiments, it should be appreciated that the present invention is not limited to those precise embodiments. Rather, in view of the present disclosure which describes the current best mode for practicing the invention, many modifications and variations would present themselves to those of skill in the art without departing from the scope and spirit of this invention. The scope of the invention is, therefore, indicated by the following claims rather than by the foregoing description. All changes, modifications, and variations coming within the meaning and range of equivalency of the claims are to be considered within their scope.

APPENDIX A

CODE_HI.HEX

```
:0200000020000FC
:10000000B800118ED88ED08EC0BAA2FFB8FG1FEFF8
:10001000BAA6FFB8FC41EFBAA4FFB83820EFBAA8DF
:10002000FFB8FCA0EFBAFEFFB80F32EFC70656FFCD
:100030000040C7065EFF0040C70666FF0040C706D7
:1000400030FF0000C70628FFFD00C7062CFF000098
:10005000C7062EFF0000B4C59E791475127B10737D
:100060000E9FF6D49E780874067A047202EB06BEE0
:100070006F00E93201B8FFFF8BD88EC38CC18ED9D7
:100080008CDA8ED28CD58BF58BFE8BE783FCFF75DB
:10009000DEB800008BD88EC38CC18ED98CDA8ED29C
:1000A0008CD58BF58BFE8BE783FC0075C2B8000006
:1000B000BAFEFFBEBC00B90080E9771481FB0010D6
:1000C0007405B80010EBE9B8E8038EC033DB26C72F
:1000D000075A5A26813F5A5A75088EC326833F0015
:1000E0007406BEC700E9BF00B800008EC026C70670
:1000F0000800501C26C7060A0000E0B800118ED880
:100100008ED0BC38DC800E03F18026C70680002725
:100110000126C706820000E033C0CD203DFFFF74FA
:1001200008EB0690E948FF48CFFCB864018CCB335C
:10013000FFB92200AB93AB93E2FA26C70608005042
:100140001C26C7060A0000E0B800118EC08ED88EAB
:10015000D00EE8350BE81B12E82911E8E812E8D5C3
:1001600014E9EC1A8CD08BDC595E5FB800118ED884
:100170008EC08ED0BC38DC813E3B0400047206C7C2
:10018000063B040000BAFFFF9A80EE00D08BD38BB1
:10019000C69A80EE00D08BD18BC79A80EE00D0BE7D
:1001A0006401EB03905E5FB800118ED88EC0FAC672
:1001B0000645F000C60642F000802603F1FBBA03B4
:1001C0000033C9800E03F180E2FEE2FEE2FE8026EB
:1001D00003F17FE2FEE2FEE2FE4A75E7E2FEE2FEA6
:1001E000E2FEE2FEE2FEE2FEEBD4000000000000D0
:1001F0009802AD020A03AB02AB02FAB800118EC03E
:10020000BF38DAB04DB44FB353B754B90004AB9311
:10021000AB93E2FA0EE8350190BD38DC81C50002EF
:10022000BF06D9B9070033D28915C745020400C7F4
:1002300045040400C745140000C745160000C74523
:10024000180000896D1281C500028BC70514008952
:1002500045148945 16C74518000083C72042E2C8E7
:10026000E85105B87D09A32EDAB80000A330DAB84A
:100270000000A332DABF06D9E97301FABC38DCBF4B
:1002800006D9FB8B7502D1E62EFFA4F00183C720AF
:1002900081FFE6D975ECEBE3893E34DAFAE8BC0677
:1002A0008B6512C745020000E9F300EBE08B4D18A7
:1002B000E3DB8D5D148BEB8B378B44023945067481
:1002C000068BDEE2F2EBC6C745060000FA89362E41
:1002D000DA8B048907FF4D1874183BE87506895DB1
:1002E00016EB15903B5D1475 0F8B4516394514EBD5
:1002F0000790896D14896D16893E34DAE85D068BA6
:100300006512C745020000E99700FA837D18007561
```

```
:1003100004FBE978FF893E34DA83C7148BEE8B4DFA
:1003200004E30D8B1D8B378935FF4D048BF5EB08EE
:10033000C6061B8480BB0000891E2EDA8B3E34DA91
:10034000E819068B6512C745020000EB54BE06D0C3
:10035000BB00D08937897702C747040000B948003D
:1003600033D2895402C7440400008BEF837F04001A
:1003700075048937EB058B7F028935891C897702E3
:10038000FF47048BFD83C62042E2D7CB9CFA608BEB
:100390003E34DA8B1E36DAD1E32EFFA7A703619D28
:1003A000CB61A12EDA9DCBC703EE035A048F041A4A
:1003B00005DA045F05C1059005FF053206E506FE76
:1003C0000664062C06AD06A12EDAC1E0050506D9A5
:1003D0008BF88B45023D03007407C6061B849BEB1C
:1003E0000B8B4504894502C745040000EBB08965C5
:1003F00012A130DA8BD0C1E0050506D98BF869C2AD
:1004000000020500020538DC8BE0A132DA8BD03D1A
:10041000030075O3BA000089450289550 4C74506E3
:1004200000008B1DD1E32E8B874A0450FF362EDA55
:10043000682AF060896512E8220583C714893D891E
:100440007D02C745040000E931FE00E000D000D085
:1004500000D000D000D000E000008B362EDA8B5C9C
:1004600006875C04895C06C1E30581C306D983C3A2
:10047000148BEF837F040075048937EB058B7F02B3
:10048000 8935891C897702FF47048BFDE90FFF89B5
:100490006512E8C704A12EDA8BC8C1E0050506D9AC
:1004A0000514008BD88B3630DA8BEF837F04007510
:1004B000048937EB058B7F028935891C897702FF18
:1004C00047048BFD8B05894404894C068B440289C3
:1004D0004506C745020100E9A1FD896512E87C04D3
:1004E000A12EDA8BC8C1E0050506D90514008BD80A
:1004F0008B3630DA8BEF837F040075048937EB0588
:100500008B7F028935891C897702FF47048BFD8B1D
:10051000058944048 94C06E984FE896512E83C0497
:10052000A12EDA8BC8C1E0050506D90514008BD8C9
:100530008B3630DA8BEF837F040075048937EB0547
:100540008B7F028935891C897702FF47048BFD8BDD
:10055000058944048 94C06C745020200E91CFD894F
:100560006512E8F703A12EDA8BC8C1E0050506D9AC
:10057000514008BD88B3630DA837F04007505892B
:100580007702EB028B0789048937FF4704E934FFC0
:10059000896512E8C603A12EDA8BC8C1E0050506FD
:1005A000D90514008BD88B3630DA837F04007505AB
:1005B000897702EB028B0789048937FF4704E94EEC
:1005C000FF896512E89503A12EDA8BC8C1E0050505
:1005D00006D90514008BD88B3630DA837F0400757A
:1005E00005897702EB028B0789048937FF47048B63
:1005F00005894404894C06C745020200E97CFC8950
:100600006512E857038B4402894504C7450203007D
:100610008B3E2EDAC1E70581C706D98B4502894595
:1006200004C745020000BE0000E95AFC896512E9D2
:10063000 5BFC896512E824038BF7A12EDAA9008000
```

```
:100640007508C1E0050506D98BF08B44023D040016
:10065000740F3D0300740A8BFE894504C7450203ED
:1006600000E917FC896512E8F202A12EDAA90080E0
:100670007508C1E0050506D98BF8B8040089450264
:100680008B4D1883C714E318BB00D08B45040BC0F7
:10069000740E0147048B178B0589078B750289142B
:1006A000893D897D02C745040000E9CEFBA12EDA11
:1006B000A900807508C1E0050506D98BF883C71429
:1006C000BB00D08B45040BC0740E0147048B178B05
:1006D0000589078B75028914893D897D02C7450408
:1006E0000000E9B9FC896512E87102B8010089458A
:1006F000028B362EDA8B4402894506E97DFB89653B
:1007000012E85802B80200894502E96EFB9CFA56CD
:100710005755BF00D08BEE8B4D04E30D8B1D8B37EF
:100720008935FF4D048BF5EB08C6061B8480BB00A2
:10073000008BC35D5F5E9DCB9CFA56578B3E34DACF
:10074000837D1800741B8B0E2EDA83F9007C073B27
:100750004D187C12EB0B740E8BC1F7D83B45187EFD
:1007600005B8FFFFEB1483F9007D03034D188B756B
:1007700014E3048B34E2FC8B44045F5E9DCB9CFA53
:10078000565755BB00D08B362EDA8BEF837F040093
:1007900075048937EB058B7F028935891C897702BF
:1007A000FF47048BFD5D5F5E9DCBA12EDAC1E005A6
:1007B0000506D9CB9CFAC70666FF0040C70632FF84
:1007C0000400C70660FF0000C70662FFA861C706F5
:1007D00066FF01C09DC39C608B3E34DAA12EDAA96E
:1007E0000080740683C714EB1790A900407406BFFD
:1007F00000D0EB0C90C1E0050506D98BF883C71437
:100800008B4D04890E2EDAE997FB9C608B3E34DA1F
:10081000A12EDAA90080740683C714EB1790A900F3
:10082000407406BF00D0EB0C90C1E0050506D98BE3
:10083000F883C714FA8BEE8B4D04E30D8B1D8B37B9
:100840008935FF4D048BF5EB08C6061B8480BB0081
:1008500000891E2EDAE949FB895C04894406C1E05F
:10086000050506D90514008BD89CFA837F04007512
:1008700005897702EB028B0789048937FF47049DBE
:10088000CB558BEC568B76088B46068B5E0A895CC3
:1008900004894406C1E0050506D90514008BD89CDF
:1008A000FA837F040075058977702EB028B078904C0
:1008B0008937FF47049D5E5DCB895C04894406C18E
:1008C000E0050506D90514008BD89CFA8BEF837FD1
:1008D000040075048937EB058B7F028935891C89F3
:1008E0007702FF47048BFD9DCB558BEC568B76082A
:1008F0008B46068B5E0A895C04894406C1E00505C7
:1009000006D90514008BD89CFA8BEF837F04007501
:10091000048937EB058B7F028935891C897702FFB3
:1009200047048BFD9D5E5DCB9C608B3E34DA83C7B4
:10093000148B5D040BDB741DFA8BEE8B4D04E30D01
:100940008B1D8B378935FF4D048BF5EB08C6061BD5
:10095000848OBB0000891E2EDAE945FA9CFA5052C9
:10096000B80002F7250538DC3B4512730C05000280
```

```
:100970003B451272045A589DC30EE828F8C706AAD0
:1009800088688BC706FE800000813E3B0400047629
:1009900006C7063B040000E8F114E88201E8DD0226
:1009A000A01584B4000BC07512C706A0886286C764
:1009B000069D860F00C7069B86FFFFC6061C84FFA8
:1009C000832628FFCFC60645F012FBA01584B4008D
:1009D0000BC075059AAD0206EFE8ED3CE87201C761
:1009E0000641040000C7063F0400006A0868E4806E
:1009F000900EE8E78B83C4043D01007405900EE877
:100A0000A3F76A07681E00900EE8D08B83C4043DEC
:100A100001007405900EE88CF7C7062EDAB814C7EB
:100A20000630DA0300C70632DA0000C70636DA01FC
:100A300000900EE856F9C7062EDAEE27C70630DA20
:100A40000100C70632DA0000C70636DA0100900E50
:100A5000E839F9C7062EDA2A41C70630DA0200C79C
:100A60000632DA0000C70636DA0100900EE81CF9FB
:100A7000C7062EDAA35DC70630DA0400C70632DAED
:100A80000000C70636DA0100900EE8FFF8C7062E10
:100A9000DAA678C70630DA0500C70632DA0000C7E2
:100AA0000636DA0100900EE8E2F8C7062EDAE070AA
:100AB000C70630DA0600C70632DA0000C70636DAA3
:100AC0000100900EE8C5F8803E1B8400752CA0152F
:100AD00084B4000BC075079A00002BF2EB1C803E1B
:100AE000148400741590 0EE81589813E6486000414
:100AF00075086A33900EE8340559FAC60616840064
:100B0000FBC7062EDA9417C70630DA0000C7063294
:100B1000DA0000C70636DA0100900EE86EF8C35618
:100B2000BEB888C606238400C60618840033D2C621
:100B3000441400C7442A0000C644130088540F8B95
:100B4000DAC687A288004283C65683FA0872E05E3E
:100B5000C3C80C00005657C746FE08009C1E068BF3
:100B60004EFEB800118EC0B800E08ED8BEE4A0BF23
:100B70001C81FCF3A4071F9D8D46F68946F4C70629
:100B80000381000F9A000006EF8946FC3D010074C6
:100B900018FF76F48A46FC509A640306EF83C40477
:100BA0008B5EF48A4702A21B84C746FA80838B5669
:100BB000FE81C21C81C746FC00008B5EFA035EFC0E
:100BC0008A47048BDA880742FF46FC837EFC087262
:100BD000E9C746FC00008B5EFA035EFC8A470C8B7B
:100BE000DA880742FF46FC837EFC1072E9C746FCA8
:100BF00000008B5EFA035EFC8A471C8BDA88074292
:100C0000FF46FC837EFC0472E9C746FC0000803E80
:100C1000528C207210803E528C7E77098B5EFC8A4B
:100C200087528CEB098B5EFA035EFC8A47208BDAD5
:100C3000880742FF46FC837EFC0472D2C746FC0054
:100C4000008B5EFA035EFC8A47248BDA880742FF3A
:100C500046FC837EFC0672E9C746FC00008B5EFA08
:100C6000035EFC8A472A8BDA880742FF46FC837EB4
:100C7000FC0A72E9C6061181015F5EC9C3C7060E90
:100C8000004EECC706100000E0C3800E53F0208039
:100C90002653F0DFC6064FF016800E53F010A0501A
```

```
:100CA000F0A050F0F6D0A21781802653F0EFE8C1F3
:100CB00000E86C00E8D400E89C04E8C204E8E5031E
:100CC0000EE81301906A110EE83C0190591EB8001D
:100CD000008ED8C70630002411C706320000E0C7D6
:100CE00006340060 1FC706360000E0C7063800293A
:100CF0006CC7063A0000E01FC70638FF1900C70698
:100D00003AFF0A00C7063CFF0800C7063EFF1B006B
:100D1000C60647F001C60649F001800E20F008CB58
:100D2000A004F1B400251C00C1F802A212848A16A6
:100D3000128480CA40F60604F120740380CA088831
:100D40001644F0C60642F000C60643F0E0C606515F
:100D5000F010C60651F060C60652F000A01784A23B
:100D600041F0C60646F03FC60648F0FFC60649F009
:100D700000C3C70656FF0040C7065EFF0040C70617
:100D800066FF0040C70630FF0000C3C60651F06092
:100D9000C60652F000C60653F00DC60654F004C64F
:100DA0000655F0C3C60656F07FC60657F000C606C5
:100DB00058F000C60659F000C6065AF000C6065B99
:100DC000F000C6065CF000C6065DF000C6065EF0E8
:100DD00000C6065FF000C3C60679F01FC6064EF0D7
:100DE000008B1EA088F70740007407C60670F01439
:100DF000EB05C60670F028C60677F002C60678F046
:100E000000C6067EF000CBC8060000C60679F01FBB
:100E1000C746FA000033D28A4606B4003D22007469
:100E20001A3D3300742ABB82DB035EFA2E8B0789DE
:100E300046FC2E8B47028946FEEB28BB5ADC035E3C
:100E4000FA2E8B078946FC2E8B47028946FEEB1350
:100E5000BB71DD035EFA2E8B078946FC2E8B4702A1
:100E60008946FE33C98B5EFC2E8A078B5EFE88079F
:100E70008346FC0441FF46FE83F91F72E88346FA6D
:100E8000044283FA047302EB8EC746FA000033D2A1
:100E90008A4606B4003D2200741A3D3300742ABB12
:100EA00082DB035EFA2E8B078946FC2E8B47028974
:100EB00046FEEB28BB5ADC035EFA2E8B078946FC04
:100EC0002E8B47028946FEEB13BB71DD035EFA2EC3
:100ED0008B078946FC2E8B47028946FE33C98B5E01
:100EE000FE8A078B5EFC2E3A077407C6061B849D9C
:100EF000EB0D8346FC0441FF46FE83F91F72DF833E
:100F000046FA04803E1B840075094283FA04730389
:100F1000E97DFFC6064EF000C60660F100C6066118
:100F2000F100802611F0DF800E11F010802611F004
:100F3000FEC9CBC8080000568A4606B4002D0B0037
:100F40008BD883FB097603E9C300D1E32EFFA719F1
:100F500010C746F87DDCC746FA00E0E9AF00C74697
:100F6000F883DDC746FA00E0C60660F160C6066198
:100F7000F127EB62C746F889DCC746FA00E0EB0AC6
:100F8000C746F899DCC746FA00E0802611F0DF80FA
:100F90000E11F010EB7790C746F8C9DCC746FA008F
:100FA000E0EB6AC746F8A9DCC746FA00E0EB0AC7DF
:100FB00046F8B9DCC746FA00E0800E11F020EB4D90
:100FC000C746F8D5DCC746FA00E0EB9CC746F89E5A
```

```
:100FD000DBC746FA00E0800E11F001EB30C746F89F
:100FE000BEDBC746FA00E0802611F0FEEB1FC45EB0
:100FF000F8268B078B56FA8956FE8946FC268B5FAE
:1010000002C476FC268A0488078346F804C45EF886
:1010100026833F0075D85EC9CBA30F740FAF0F8036
:101020000F970FC00F510F5E0FCC0FDD0FC80400DC
:1010300000568A4606B4003D1100740C3D2200742F
:101040001F3D3300740EEB22C746FCE0DDC746FEB1
:1010500000E0EB16C746FC66DEC746FE00E0EB0A82
:10106000C746FC46DEC746FE00E0B200EB258AC25A
:10107000B400C45EFC03D8268A07B4000500F18BD7
:10108000F08AC2B4000346FC8BD8268A4701880444
:1010900080C2028AC2B400C45EFC03D826803FFF2F
:1010A00075CC5EC9CB8A1639F0C60610F0E0C606CC
:1010B00011F01AC60613F01EC60624F063C60625F4
:1010C000F002C60626F029C60628F040C60610F033
:1010D00000881639F0C60612F000C60622F0FFC6D8
:1010E0000620F000C60621F000C60670F028C606ED
:1010F0001CF000C6061DF000C6061EF000C606293C
:10110000F000C6062AF000C6062CF000C6062DF038
:1011100000C6062EF000E80B01802639F0A1800EF3
:1011200039F080C350535152061E565755BD001119
:101130008EDDC60679F01F9AB00100D0C60620F1F8
:1011400000800E10F104C70622FF00805D5F5E1F65
:10115000075A595B58CFC8020000C60603F100C603
:101160000601F100C60604F100C60605F100C60638
:1011700006F100C646FFEF8A46FFA202F1C9C3C6C8
:101180000610F10190C60610F100906A31900EE849
:101190000B8359C60610F114C60611F116C60612C5
:1011A000F125C60620F100C60621F1006A110EE8FD
:1011B0007BFE59C38A1639F0C60610F080802611CE
:1011C000F001800E11F014C60613F000C60624F0DC
:1011D00000C60625F000C60626F000C60628F00068
:1011E000C60610F000881639F0C60612F000C606D2
:1011F00022F0FFC6061CF000C6061DF000C6061E43
:10120000F000C60620F000C60621F000C60629F050
:1012100000C6062AF000C6062CF000C6062DF00017
:10122000E80100C3B20FEB0B881631F0C60632F0AE
:1012300000FEC280FA1772F0B220EB0B881631F074
:10124000C60632F000FEC280FA2872F0C60631F0FF
:1012500001C60632F00FC60631F000C60632F003B2
:10126000C3000000000000000000000000000000BB
:1012700057F0090041F0010043F0030048F002007C
:1012800050F00300575606C60610F0E0C60610F0F0
:1012900000B90D00E2FEC60639F00032E4C60631A0
:1012A000F000882632F0C60631F001882632F0B010
:1012B0000FA231F0882632F0FEC03C1676F3B02043
:1012C000A231F0882632F0FEC03C2776F3C6063104
:1012D000F000382632F0752FC60631F0013826327C
:1012E000F07524B00FA231F0382632F07519FEC027
:1012F0003C1676F1B020A231F0382632F07508FEA7
```

```
:10130000C03C277709EBEFC6061B8496EB610EE81D
:1013100078F9FAB800008EC026FF36300026FF3676
:101320003200FF3628FFC70638FF000026C7063206
:101330000000E026C70630003D14B9FFFFBBFFFFE9
:10134000C60620F002C6061AF000FBE3064B75FB4A
:10135000F9EB01F8FA8F0628FF268F063200268F58
:10136000063000C60622F0FFC60620F0007298077D
:101370005E5FC35756C60653F020C60653F00DC62F
:10138000065 7F000C60658F000C60659F000BA0528
:1013900000BB70122E8B372E8B4F0283C304AD4ED1
:1013A0000AC0740DC6061B84978CCFBE7513E9F670
:1013B000EDE2EB4A75DEE98100C60679F01FBF80D9
:1013C000F032C0B91F00BA0400AAFEC0E2FBFEC0A2
:1013D00047B91F004A75F2BE80F032E4B91F00BA67
:1013E0000400AC3AC47408C6061B8498EB4C90FE0B
:1013F000C4E2EFFEC446B91F004A75E6BF80F0B0F4
:10140000FFB91F00BA0400AAFEC8E2FBFEC847B934
:101410001F004A75F2BE80F0B4FFB91F00BA040085
:10142000AC3AC47408C6061B8499EB0E90FECCE25D
:10143000EFFECC46B91F004A75E65E5FC333C9C7ED
:101440000622FF0080CF50535756069CFAC606105E
:10145000F101C60610F100B90D00E2FE6800E007D8
:10146000BEA7DDBF00F1B70026803C80751E462672
:10147000F6048075F3268A1C268A4C018039007593
:1014800041FEC33AD976F583C602EBE326803C8160
:1014900075354626F6048075CF268A6C02268A1C8E
:1014A000268A4C0188298A0122C53AC57514C601CD
:1014B000008A0122C5750BFEC33AD976E783C603BD
:1014C000EBD1C6061B849AC60610F101C60610F1C0
:1014D00000B90D00E2FE9D075E5F5B58C351B80185
:1014E00000F60610F040C60610F040B91000C6061F
:1014F00010F040F60610F040E0F47408B80000C6A2
:10150000061B849659CB51B80100F60610F102C6AD
:101510000610F102B93000F60610F102E0F9740885
:10152000B80000C6061B849A59CB000000000000DA
:101530005EEB008ED88EC08BD98BD1FC33FFB80008
:1015400001B980003BD977028BCB2BD9AB80C40289
:101550000402E2F80BDB740780C4010401EBE23300
:10156000FF8BDAB80001B980003BD977028BCB2B17
:10157000D93905754AF7D0ABF7D080C4020402E22E
:10158000F00BDB740780C4010401EBDA33FF8BDA64
:10159000B8FFFEB980003BD977028BCB2BD9AF7552
:1015A0001E80EC022C02E2F60BDB740780EC012CAF
:1015B00001EBE033FF8BCA33C0F3AB8CC3FFE6BE55
:1015C00030158CCFE9E0EB000000000000000000C7
:1015D00060FC1EBA020033DBB800E08ED833F64A56
:1015E0007406B90080EB0490B9FF7FAD32F8D1E307
:1015F000730481F3CB3832FCD1E3730481F3CB382D
:10160000E2E90BD274078CD8050010EBCE331C1F17
:10161000B4007417C7061A814000B90A005133C9D3
:10162000E2FEE2FE59E2F6FAE97CEB61C30000005B
```

```
:1016300060BA0100EB036033D252E81E00E88B0071
:101640005A75110BD27408E84900E8C9007505E81D
:101650000F0161C3C6061B8495EBF7BF50F0BE793E
:10166000F033C0A257F0A258F0A259F0BB0010B25C
:1016700080B94000880540841474FC8805408414B7
:1016800074FC880540841474FC880540E2E6404BF5
:1016900075DFC3BF50F0BE79F033C0A257F0A25837
:1016A000F0A259F0BB0010B280B940008805488410
:1016B0001474FC880548841474FC880548841474E8
:1016C000FC880548E2E6484B75DFC3BF50F0BE79A1
:1016D000F033C0A257F0A258F0A259F0BB0010B2EC
:1016E000808A35B94000841474FC3A05752740841B
:1016F0001474FC3A05751E40841474FC3A05751583
:1017000040841474FC3A05750C40E2DA404B75D302
:10171000F60646F010C3BF50F0BE79F033C0A257B2
:10172000F0A258F0A259F0BB0010B2808A35B9403F
:1017300000841474FC3A05752748841474FC3A0537
:10174000751E48841474FC3A05751548841474FC9D
:101750003A05750C48E2DA484B75D3F60646F010A8
:10176000C3BF50F0BE79F033C0A257F0A258F0A228
:1017700059F0B280BB0800B900808805841474FC5D
:1017800088058414 74FC8805841474FC8805E2EAD6
:101790004B75E4C3C8040000565733FFC70600006A
:1017A0000000C6060D8400C6061C8400FB0BFF74F7
:1017B0000F837D040E7409893E2EDA900EE8BEEF89
:1017C000F706628608007405832628FFBFC7063621
:1017D000DA0C00900EE8B4EB8BF8803E19840074AC
:1017E00012837D04027503E95202837D04057503AB
:1017F000E94902837D040D7513F6450A0175AEF6BD
:10180000450A4074A89A00002BF2EBA1807D0804E1
:10181000749B8B750B8936AA88803E1B84007416D6
:10182000807C0B037410807C0BE0730AC6441402A6
:10183000E85E03E977FFC6062F00F88A440BA23062
:10184000006A02682F009A6BEE00D083C40456E849
:10185000830259 0BC07503E953FF8A4508A2098426
:10186000B4008BD883FB077603E94102D1E32EFF56
:10187000A7C51AE83A128946FE0BC07503E96A014A
:10188000FF56FEE93002E9610156900EE8DB7E5911
:101890003D01007403E9FD00E8A7123D0100742832
:1018A000A00A84B40089444FA00C84884451807CF1
:1018B00017217406F6444E807407804C4E35E9CFEC
:1018C00000804C4E1DE9C800900EE8DB090BC07487
:1018D00003E9E201A02883B400A901007510C7063E
:1018E000000006006A066A00E8966083C404F706F2
:1018F000628640007405B80400EB03B80100894615
:10190000FC830E28FF4056506A009AED432BF28369
:10191000C4060BC0752E8B46FCA32EDA893E30DA46
:10192000C70636DA0300900EE861EA8BF8832628B2
:10193000FFBF807D0D167503E972FEC7060000002B
:1019400000E972016A006A06E8366083C404C706CB
:10195000000000000E9840056900EE8847E590BC018
```

```
:101960007502EB31E8DB113D01007430A00A84B44C
:101970000089444FA00C84884451807C1721740650
:10198000F6444E807406804C4E35EB04804C4E1D60
:10199000900EE82803C6441402E91A01F70662868D
:1019A00040007405B80500EB03B802008946FC83CB
:1019B0000E28FF4056506A009AED432BF283C4066E
:1019C0000BC075178B46FCA32EDA893E30DAC706AA
:1019D00036DA0300900EE8B3E98BF8832628FFBFC0
:1019E000E9D300E8CA100BC0750856E80D0259E9A2
:1019F000C400F706628640007405B80500EB03B822
:101A000002008946FC830E28FF4056506A009AED7A
:101A1000432BF283C4060BC07522C6061984018BC2
:101A200046FCA32EDA893E30DAC70636DA05009086
:101A30000EE858E9832628FFBFE984FD832628FFA6
:101A4000BFC606198400C706FE8000008B750B898F
:101A500036AA88EB619A000000D00BC0743D9A1E34
:101A60000206EF0BC0741E807D0D087508810E8D77
:101A7000860002EB0681268D86FFFD8A440750E82A
:101A8000773F59EB11C6441604C64417A1804C4E4B
:101A900001900EE827029A520000D08A450AA21C43
:101AA00084893E2EDA900EE8D4ECE900FDC6061BD0
:101AB0008481C6450900FF36AA88E8D40059E9ECBC
:101AC000FC5F5EC9C37318731889185719AD1A558E
:101AD0001AE3198918558BEC568B7604807C0B031E
:101AE000746E807C0B127468803E1984007420C66A
:101AF000441602C6441704804C4E01900EE8BD0106
:101B0000C6441402E87B09E8D60A33C0E97F0080A6
:101B10007C1201720AC6441605C6441725EBD8800C
:101B20007C2D00740FA0DA83B400A910007505E8BD
:101B3000F203EBCCC6442D00E8FF3C0BC07406C694
:101B4000441418EBBF56E89D135980642CDFEB3B1F
:101B5000807C0B03740756E88C1359EB2E807C2D88
:101B6000007428A0DA83B400A91000751E807C12CE
:101B700001731883C62E807C0F00750F807C0500D2
:101B80007509807C04007503E89903B801005E5D67
:101B9000C3558BEC568B7604F64413017447807C56
:101BA00014027441807C1422743BE8D5080BC07584
:101BB0003B803E0687007439C6441400C6441500B5
:101BC000806413FDE8B705E82906A01D8488440E4B
:101BD000F6440E017406804C1301EB04806413FE7E
:101BE000E8620CEB13E89A080BC07405900EE8D37A
:101BF00001C6442C00E8E8095E5DC3558BEC568BAA
:101C00007604C6441605803E0A84007404B024EBB2
:101C100002B020884417A00A84B40089444F807C15
:101C20001724750CA00C84884451804C4E1DEB0485
:101C3000804C4E15900EE88400C64414025E5DC3CD
:101C40009A09312BF2C3000000000000000000E0
:101C5000FAB800118ED88ED0BC00F0802603F17F38
:101C6000FCB800008EC0BF88008BC7D1E8B90080E7
:101C70002BC833C0F3ABB800108EC0B9008033C09E
:101C8000F3ABC606168401C606158400FABC00F044
```

```
:101C9000B800118ED88ED08EC00EE8EDEFC7062C9E
:101CA000FF0000C7062AFF0700B90004A038F0248F
:101CB00008E0F9E303E942E59AC21306EF56578BB1
:101CC00036AA888BFE83C72E8A444E2401B4000BAB
:101CD000C0750FF6442C207409807D0F017403E950
:101CE000D000804C2C20F6444E207413C64511F0D1
:101CF000A107848B16058489450D89550BEB0EC60B
:101D0000451170C7450D0000C7450B00008A4416F9
:101D100088450FC6450A0A8A44178845058A44182B
:101D2000884504F6444E807404804D0F20F6444EDE
:101D3000407413C6451170A103848B160184894534
:101D400008895506EB0AC745080000C7450600008C
:101D5000C6450200F6444E04740B8B444F8905803F
:101D60004D0280EB04C7050000F6444E087424B20F
:101D700000807C51007415B207EB06D0645180C21C
:101D8000FF8A44512480B4000BC074EF8AC20488D7
:101D9000084502F6444E107404804D0240C6444E7D
:101DA00000C7444F0000C6441600C6441700C6448E
:101DB00018005F5ECB568B36AA88804C4E010EE829
:101DC000FBFE5EC3568B36AA888A44198844168A5D
:101DD000441A8844178A441B884418807C14007570
:101DE00004C6441402804C4E010EE8D0FE5ECB5572
:101DF0008BEC568A56088B36AA88C6441605C6440C
:101E00001726804C4E058B460689444F0AD274072C
:101E1000885451804C4E080EE8A2FE5E5DCB558B77
:101E2000EC568B36AA88C6441605C6441724804C47
:101E30004E158B460489444F8A4606884451804C8F
:101E40004E080EE877FE5E5DC3558BEC568B36AAC6
:101E500088C6441605C6441724804C4E158B46068A
:101E600089444F0EE856FE5E5DCB558BEC568B36A3
:101E7000AA88C6441604C64417448A4606884418ED
:101E8000804C4E010EE835FE5E5DCB5657BEB888DD
:101E900033D28BFE83C72EC6451170C6450A0AC6CB
:101EA000442D01C6441600C6441700C644180083DA
:101EB000C6564283FA0872DAC606EC8305C606E700
:101EC000830AC606EE8370C606E283258026EF836A
:101ED000F88026EF83C78026EF83BF8026EF837FBD
:101EE0005F5EC356BEB88833D28A442DB400A901C0
:101EF000007504804C2D0483C6564283FA0872E9AB
:101F00005ECB56BEB88833D28B1EAA888A470FB4E0
:101F1000003BC27404804C2D0283C6564283FA08EB
:101F200072E65EC3568B36AA88E8A71CF6442D01DC
:101F3000740680642DFEEB1DF6442D047406806447
:101F40002DFBEB11F6442D02740680642DFDEB058C
:101F5000C6061B84835EC3000000000000000072
:101F600060061EB800118EC08ED8833E2CFF2075EF
:101F70000989263D0483063D0414FB8A1646F08A2F
:101F80003648F08A3E42F0F6C2017403E93375F632
:101F9000C6017503EB2690800E48F001800E45F0D7
:101FA00010F6C7107503EB1490FF36AA88B800E04E
:101FB000BAC71F0EE81200908F06AA88FAC7062239
```

```
:101FC000FF00801F0761CFF8CB8916CC8BA3CE8B87
:101FD000A041F0A20E84F6C740750732C0A21E844D
:101FE000EB56E8D2007303E99900F60642F040741C
:101FF00036E8FF01A1AA88FF1ECC8B730B8B3EAA8B
:1020000088834D1C10E9AE00E8330F0BC074188BA9
:102010003EAA88F6451302740B8B3EAA88834D1C9A
:1020200010E99200EB5D90F606178120740AE8C271
:1020300001E818180BC0754BE84301E8B5018B1E89
:10204000AA88A01D8488470EA8017406804F13013A
:10205000EB04806713FE834F1C108A4710E8E507E6
:102060000BC074528B36AA88F7442A8000754480CE
:102070007C14007504C6441402C6441500E802042A
:10208000EB31908B36AA88F7442A800075218A4468
:10209000198A641A884416886417807C14007504B1
:1020A000C6441402834C1C10C6441500E8D3030E2A
:1020B000E811FDE82A05CBC60642F015800E51F066
:1020C00010802651F0EFC60646F03FC60648F0FFE6
:1020D000B014B40050E86C0058F60646F020740EB8
:1020E000E810018B36AA88814C2A8000EB54A04A64
:1020F000F0A21E84082648F0800E46F002A88075E3
:10210000263C0C7506E8D804E9B7733C06740CE865
:10211000E100C6061F84070EE8C4128B36AA888128
:102120004C2A8000EB1C90A8387415E8C5008B364B
:10213000AA88C6441905C6441A3DC6441402EB02D7
:10214000F8C3F9C3558BEC5053B304B7108B460456
:102150008AE02408A252F080E4F0082652F0908031
:102160000E52F004F60646F0017403E95473841E1F
:1021700052F075F0843E48F074EA5B585DC35657E0
:10218000069CB800118EC0C60642F011800E51F0B8
:10219000810802651F0EF800E48F010B61008364837
:1021A000F0BFB788BE4AF0FDB064B40050E894FFB9
:1021B00058B905008A04AA8AE08A04AAE2FB86C408
:1021C000C0E805BBC6A02ED70AC07419083648F06F
:1021D0008AC8C0E0040C04B40050E867FF588A04C1
:1021E000AAE2FB8AE088261D84C60642F0109D07FD
:1021F0005F5EC356575532ED8A0E1284B401D2E4A5
:10220000882611848826 0F84A00E84F6D422C40A5E
:10221000C07422A20F84B108D0E0E119D0E0E1152A
:10222000D0E0E111D0E0E10DD0E0E109D0E0E1053E
:10223000D0E0E10149880E10848AC132E46BC056B7
:1022400005B8888BF8893EAA88A01E84884511A00D
:102250000F84884510A0108488450FA01E84240791
:1022600088451 25D5F5EC3601E06B800118ED88E71
:10227000C08B3EAA888BC7BEAC88B90C00FCF3A407
:102280008BF8A0B7883C3F760E3CE072043CFB72B2
:1022900004B05BEB022CA032E489450CBB6AA02E93
:1022A000D7A22184071F61C3565733FF8B36AA88F4
:1022B000F7441C10007452F6441140744CF6442C40
:1022C000407431C6061F8402900EE812118BF80B81
:1022D000C0741183FF0C742F80642C7F83642ABF29
:1022E000EB27EB23E8F5138BF80BC0741083FF0C7E
```

```
:1022F0007517EB13E8E5138BF80BC07505E80E00B6
:10230000EB0783FF0C750233FF8BC75F5ECB568BE9
:1023100036AA88C6062F002883641CEFC60642F042
:1023200000C60645F012C60647F001C60649F00190
:102330005EC3C802000056578B36AA88C646FF0007
:1023400033FFF7441C10007403E91201C6062F0086
:10235000296A01682F009A6BEE00D083C404FBC683
:102360000643F000C60645F002C60648F0FF8A465E
:10237000FFFEC08846FF3C0376178B36AA88C6440A
:10238000190BC6441A00814C2A8000B80F00E9CF0F
:1023900000A011840A4410A241F0800E45F001A073
:1023A00045F0B400A9010075F6F60648F00474EA99
:1023B000B200832666FFDFEB0FF70666FF2000748E
:1023C00007832666FFDFFEC280FA32740AA048F057
:1023D000B400A9080074E2A048F0B400A908007590
:1023E0003BC60641F000F70666FF2000750AA048CC
:1023F000F0B400A9080074EEA048F0B400A90800E9
:10240000751AC60645F000C60642F000832666FF30
:10241000DFF70666FF200074F8E943FFC60648F0C0
:1024200008F60642F0407405E8EC0B8BF80BFF75DC
:102430000F8A441124BFA21F84900EE8A10F8BF8CD
:102440000BFF751A834C1C1083641CF7C6062F0003
:102450002A6A01682F009A6BEE00D083C4048BC7F0
:102460005F5EC9CB568B36AA88C6441408C644158D
:1024700000E80E000BC07405900EE847F9E8600113
:102480005EC356578B36AA88C606228401F7441CC1
:10249000100075 29F7442A04007522C64453010E22
:1024A000E88FFE8BD00BC07414C606068700F74475
:1024B0002A80007403E92501900EE807F9F7442A01
:1024C000040074158BFE83C72EC6450F0BC6450A44
:1024D0000AC6450500C6450400F7442A0400750DE8
:1024E000F7442A80007506F64413047408C60606ED
:1024F0008700E9E600F64413017433807C1400750C
:1025000012C6441410F6440E027418C644150BEBA0
:102510001DEB10807C14047510C6441414F6440E90
:102520000275E8C644150AEB05C606068700800E4C
:1025300045F010F60645F0107514F60642F03074BA
:1025400005C60642F000C6061B8497E98800C60649
:1025500042F013F60642F0407410E8C8008BD083B6
:10256000FA0E74CA0BD274C6EB68C60648F0108027
:102570000E51F01080265 1F0EF8A4414A24AF06AFE
:102580001CE8C0FB59C6445302F60642F040740EE4
:10259000E892008BD03D0E0074940BD27534C606C1
:1025A000228401C60642F017C60648F0108A441578
:1025B000A24AF06A1CE88CFB59C6445303F6064253
:1025C000F0407417E89E018BD03D0E0074D50BD2FD
:1025D0007409C6441402B80200EB0233C05F5EC344
:1025E000568B36AA88C64413008A4410F6D02006BB
:1025F0002384C6445300C6441900C6441A00C64486
:102600001B00C6441400C6441500C7442A000083BA
:102610000E28FF20C60642F000802645F0EF8326F4
```

```
:1026200028FFDF5EC3568B36AA88E8EA098BC80B01
:10263000C07403E90901F606208480743584A4411C8
:10264000B4002507008A162084B60083E2073BC247
:102650007414C6441905C6441A43804C4E01814C7B
:102660002A8000E9D600A02084884411A21E84E9B3
:10267000CD00A02084B400488BD883FB107603E9FA
:10268000A400D1E32EFFA74327E8C3108BC80BC0DB
:102690007403E9AA00F7442A00017503E9A000E9E0
:1026A0008E00A02284FE0E22840AC07460C6061F1B
:1026B0008402900EE8280D8BC80BC0753DF7442AA4
:1026C00000017402EB6AC6061F8403900EE80F0D2A
:1026D0008BC80BC07505B90E00EB16F7442A000233
:1026E000740FC644190BC6441A48804C4E01B90AEF
:1026F00000F7442A00017447EB3683F90C7540C695
:1027000044190BC6441A48804C4E01EB32C644199A
:102710000BC6441A48EB21C644190B804C4E01B934
:10272000400EB1BEB0AC6061F8407900EE8AF0CF3
:10273000C644190BC6441A49804C4E01B90A008B95
:10274000C15EC38926262726272627A226172726E5
:10275000273F27242726272627262726272627262726FA
:102760002726273F27568B36AA88E8AA088BD00B46
:10277000C07403E99500F606208480740FA02084BD
:1027800084411A21E84BA0E00E97F00A02084B400
:1027900000488BD883FB107759D1E32EFFA723285D
:1027A000E8AC0F8BD00BC07562F7442A000174D6D9
:1027B000EB4AEBD2EB3CC6061F8407900EE81F0CD9
:1027C000C644190BC6441A48EB3AC644190B804C50
:1027D0004E01BA0400EB34EB2FEBABA02284FE0ECB
:1027E00022840AC07402EB9EC644190BC6441A47E1
:1027F000EB12C6061F8407900EE8E30BC644190BC4
:10280000C6441A49804C4E01BA0A00807C150074F7
:102810000E83FA0E7509803E20840974023D28B30
:10282000C25EC3A027F227F227B427B627CA27D74C
:1028300027D927DB27F227F227F227F227F227F200
:1028400027F227D927C80200005657C646FF01C6FF
:102850004FE008B36AA88A01C8484441074188 01D
:102860003EB78803740D803EB788127406E8F4FB07
:10287000E93502C646FE01F644118074078A441108
:102880002407EB08A0B688B400C1F805884412F606
:102890000646F0207503E9BE00C60646F020F64461
:1028A00011807503E9A900807EFF00747A8A46FFD3
:1028B00004FF8846FFC6061F8403900EE8200B0B1A
:1028C000C0754CF7442A0001742AC644160BC6444E
:1028D0001749804C4E01C6441402900EE8DEF3C640
:1028E000440E00F7442A80007504C6441402B8025E
:1028F00000E9B601E887F8A01D8488440EF6440E6E
:10290000017406804C1301EB86806413FEEB80C6D5
:10291000440E00F7442A80007403E9E100C6441421
:1029200002E9DA00E9D7008A4413B400A902007 56D
:102930000AC644160BC6441747EB0FC644160BC60F
:1029400044174E8B7C54C6450804804C4E01EB6105
```

```
:10295000814C2A8000EB97F60642F040743AE8DD9D
:10296000050BC07403E99600F7442A00017429C6D8
:1029700044160BC6441749804C4E01900EE83DF3B7
:10298000C6440E00F7442A80007403E960FFC64481
:102990001402E959FFE956FFF6441302741FC644B6
:1029A000160BC644174E804C4E018B7C54C645080E
:1029B00004900EE807F3C6441402E931FF8A44107C
:1029C000F6D084062384743E8A4411B400A94000E2
:1029D0007413900EE8D1F80BC0751F8A4411B4002F
:1029E000A94000750BC6441408C6441500E9FEFE54
:1029F000F7442A1000740FE9F4FEC6441402900E46
:102A0000E8C1F3E9E8FE804C1302E85AF88A441062
:102A100008062384807EFE07438803EB7880375E4
:102A20020C6441602C6441704804C4E01C6441406
:102A300000900EE887F2E8DB10E846FAE8A1FBEB2D
:102A400067803E1181007405E8BD15EBECE814FACF
:102A5000EB56803E1B84007424807C0B0374098039
:102A60007C0BE07303E986FE8A440FB400D1E08B4F
:102A7000D88BBFE480BA0E00EB14E971FE900EE82B
:102A80008BDC8BF80BFF7503E963FEBA0700897CCA
:102A90005489750BA021848845085257FF360000E1
:102AA000900EE844DE83C40633C05F5EC9C30000F5
:102AB00056579CFD8B36AA888BFE83C60AC6060C29
:102AC0008400C7060A8400008B450CC1E0028BD845
:102AD0002E8BBFFA9E0BFF7502EB5E32ED2E8A0D38
:102AE00047BA0100AC2E22057409A20C8489160A8B
:102AF00084EB464247E2ED8B3EAA888A450B24E0F0
:102B000075088A4506B205EB06908A4502B209A807
:102B1000C07504A8017505C60606870024033C029B
:102B2000750BC6060C840289160A84EB0C83C3025B
:102B30002E8B87FA9E9D5F5EC333C0C60606870054
:102B4000EBF35657559CFD8B2EA088C706CA86000E
:102B5000008B36AA888BFEC645520083C60AC6067D
:102B60000C8400C7060A8400008B450CC1E0028B70
:102B7000D82E8BBFFA9E0BFF750B8B3EAA88C645DD
:102B80001720E9F20132ED2E8A0D47BA0100AC2E72
:102B900022057412A20C8489160A848B3EAA88C668
:102BA000451724E9D1014247E2E48B3EAA888A45D1
:102BB0000B24E0750CC64502008A4506B205EB06FB
:102BC000908A4502B20924033C027510C6060C84A3
:102BD0000289160A84C6451724E99B018B3EAA8800
:102BE0008A450B24E07533C606068700F6450601C4
:102BF0007405C6060687018A550A83E21F8B4508BD
:102C00008A4D0781E1FF007403E95601807D0B0BBB
:102C10007503E94D01FEC5E94801F64502C074059A
:102C2000C6060687008B55088B4506F6450A0174D3
:102C300027803E0687007512C6060C8400C7060A68
:102C4000840100C6451724E92D012D010083DA0017
:102C5000030608871316 0A87C606068700F645028C
:102C6000017405C6060687018B4D03807D0B3F74FA
:102C700006807D0B3E753BE339BB5802813E64867E
```

```
:102C800000027403BBB0042BCB7424BA000083DAB7
:102C900000804D4EA0890E058489160784C6060C57
:102CA0008400C7060A840700C6451724E9C800B98E
:102CB00001008A5D0B80FBE8740D80FBEA740880DC
:102CC000FBEC743CEB469083F90177618A5D0580EB
:102CD000E31C80FB0C740580FB1C751EC6060C846F
:102CE00000C7060A840600C70605840000C7060759
:102CF000840000C6451724EB7E90F64505107462EB
:102D0000804D5201830ECA8601EB57908A5D028086
:102D1000E3C0744E804D520180FB407536881E0C16
:102D200084C7060A840900C6451724EB4A83E901D3
:102D3000BA000083DA00804D4EA0890E0584891602
:102D40000784C6060C8400C7060A840700C6451718
:102D500024EB24830ECA860180FBC07505830ECA4E
:102D60008610894520895522894D24890E2787E8B8
:102D700012009D5D5F5EC333C0C6451605C60606DC
:102D80008700EBEE5556578B2EA088E30149807DD6
:102D90000BEC7406F6455201740AE88300732F7435
:102DA0004DEB3D90A3088789160A873B166E867205
:102DB00008773B3B066C867735E31303C183D2006B
:102DC0003B166E867208770B3B066C867705B8015A
:102DD00000EB49A16C868B166E8605010083D2003C
:102DE000BB0400F6450BE07411BB0700EB0CBB0104
:102DF00000F6450BE07403BB02008B3EAA88C64573
:102E00001605C6451721891E0A84C6060C8400A330
:102E10005848916078480 4D4E2033C05F5E5DC3F4
:102E20006033DB8B2EA088F6450240743586C2865F
:102E3000C432F68BF251566A003D0696760583C47D
:102E4000026AFF509A12A500D083C4065981FA0085
:102E50008075053D000074778B3EAA8889452089DE
:102E60005522A3088789160A878BF08BFAA12A8836
:102E7000993BFA7F137C58F7C2008074073BF07CC3
:102E80004EEB05903BF07247A12C888B162E883BA9
:102E9000FA7C067F3A3BF07736E30F03F183D700E5
:102EA0003BFA7C067F073BF07303F8EB3705010024
:102EB00083D2008B3EAA88F6450240740C8B1E66B6
:102EC00086F7F3928AE2C1EA08BBFFFEB0B908B17
:102ED0003EAA888B55088B4506C6451605C645177C
:102EE000210BDBF961C3558BEC575606B800118EE8
:102EF000C0FC8B7E048BF783C72E8BDFB92000329A
:102F0000C0F3AAC6471170C6470A0A884416884407
:102F1000178841888441988441A88441B075E5F40
:102F20005DC3568B36AA88C6441605C64417208052
:102F30004C4E01900EE885EDC64414025EC3565710
:102F40008B36AA88C7442A0000E8CB008BF80BC058
:102F50007403E99B00F6062084807403E99100A0C5
:102F60002084B400488BD883FB10775DD1E32EFF1B
:102F7000A7F52FE8D9078BF83D0A007573F7442AA7
:102F80008000756CC6441402EB66C644190BC64437
:102F90001A48804C4E01834C2A40C6061F84079075
:102FA0000EE83B048BF80BC07546EB3DC644190B8D
```

```
:102FB000C6441A49804C4E01814C2A8000EB2EE811
:102FC0001EF6900EE8FB64EB27C644190BC6441AA4
:102FD00049804C4E01834C2A40C6061F8407900E40
:102FE000E8FC038BF80BC07507C6441402BF0A0047
:102FF0008BC75F5EC3732FC92FC92FC92F8A2FC9F3
:103000002FC92FF02FAC2FC92FC92FBF2FC92FC900
:103010002FC92FC92FF02F5657E80F038BF80BC07D
:103020007403E9BB00F606208480745A8B36AA88A4
:10303000A02084B400A938FF75368A4411B4002555
:1030400007008A162084B60083E2073BC27416C6C6
:10305000441905C6441A43804C4E01814C2A8020F5
:10306000BF0900EB7BA02084884411A21E84EB7072
:10307000C6441905C6441A3D804C4E01814C2A00B5
:1030800008BF0A00EB5AF60642F040741E803E204C
:1030900040174178B36AA88C644190BC6441A4398
:1030A000804C4E01814C2A8010EB26A02084B40075
:1030B0003D060074073D0C00741CEB248B36AA8877
:1030C000814C2A8400804C4E01C6441A00C6441923
:1030D0000BBF0400EB0AC60642F000900EE8E26364
:1030E0008BC75F5EC3C80400005657C646FD01BFCC
:1030F00003008B36AA88F60642F0407507814C2AF9
:103100000001EB60E897028BD00BC07557A02084BC
:10311000A25581B4008946FEF60642F04074DEE80E
:103120007C028BD00BC0753CA02084A25681803ECF
:1031300056810175C8803E558103741EEBBFF606AB
:1031400042F04074B8E856028BD00BC07516A02030
:10315000848885548147EB02EBA3FF4EFE8B46FE2D
:103160000BC075DA83FA0E753A837C2A0075348AAF
:1031700046FDFE4EFD0AC0751EC644190BC6441A14
:1031800047804C4E01814C2A8000C6441402834C77
:103190002A10BA0500EB0CE804028BD00BC07503B3
:1031A000E953FFF7442A00017413C6061F840790F1
:1031B0000EE82B028BD0814C2A0001EB1E83FA0E05
:1031C0007519C644190BC6441A47804C4E01C644B3
:1031D0001402834C2A10B80500EB028BC25F5EC953
:1031E000C3C802000056578B7E068B36AA88E82695
:1031F000FE8BD00BC07403E9D600A02084B40089F4
:1032000046FEB90500BBD6322E8B073B46FE74083E
:1032100083C302E2F3E98F002EFF670AE830058BD3
:10322000D00BC07403E9A800F7442A00017503E934
:103230009E00834C2A04804C4E01C6441A49C64461
:10324000190BBA0A00E98800803D00742A8A050437
:10325000FF8805C6061F8403900EE882018BD00B01
:10326000C0756D800E51F010802651F0EFC60648F3
:10327000F010BA0E00EB59C644190B803E208405AD
:103280007509C6441A48BA0B00EB45C6441A49EB07
:10329000B1804C4E01C6441A49C644190B814C2AD0
:1032A0008000BA0400EB29A02084B400A980007536
:1032B0001FC6061F8407900EE824018BD00BC07533
:1032C0000FC644190BC6441A49804C4E01E972FFDF
:1032D0008BC25F5EC9CB0100050008000900110028
```

```
:1032E0001C32483248329132483255 8BEC568B763C
:1032F00004C60642F015800E51F010802651F0EF02
:10330000C60648F0106A14E83AEE59A04AF088045C
:10331000C60646F002F60646F020740AC60646F0D7
:1033200020B80500EB0233C05E5DC3C80200005642
:10333000C646FF0133F6682084E8AEFF593D05001C
:103340007557F60642F040741B807EFF007415EB43
:1033500007682084E893FF59A042F0B400A9400018
:1033600075EFEB2B8A46FFB4000BC075228B36AA93
:1033700088C644190BC6441A47804C4E01C64414F3
:1033800002834C2A10814C2A8000BE0500EB0A8A79
:1033900046FF04FF8846FFEB9D8BC65EC9C3C8028B
:1033A000000056C646FF0133F6682084E83BFF590B
:1033B0003D05007525F60642F0407419807EFF0039
:1033C0007413EB07682084E820FF59A042F0B40092
:1033D000A9400075EFB80E00EB028BC65EC9C3C8EA
:1033E0000400005657C646FF01C746FC000033FFE5
:1033F0008B36AA88C7442A0000E95801681F84E870
:1034000240359F60642F0407503E94E01834C2A25
:1034100002E803FC8946FC0BC07403E93D01A020CF
:1034200084B400A980007403E93001A02084B400B2
:10343000488BD883FB107603E90401D1E32EFFA764
:103440008635E80A038946FCE9E100C644190BC643
:10345000441A48804C4E01834C2A20C6061F84071C
:10346000F6442C107503E9EB00BF0100C746FC0BC6
:1034700000836 42ADFE9DC00E9B100F6061F8480DE
:1034800074198 14C2AA000804C4E01C644190BC609
:1034900441A43C746FC0A00E99100A01F84B40007
:1034A0008BD883FB0B7743D1E32EFFA76E35C64441
:1034B000190BC6441A47804C4E01814C2A100280D9
:1034C0003E2084077504834C2A40C746FC0500EB68
:1034D0005B834C2A20804C4E01C644190BC6441A0B
:1034E00049C746FC0A00EB44EB42A01F84B4003DF0
:1034F000020074073D04007402EB0BC746FC0C008D
:10350000806411BFEB26C746FC0A00EB1F8A46FF0A
:10351000B4000BC0751BC644190BC6441A47804C37
:103520004E01C746FC0500814C2A9000BF0100EB0C
:1035300002383642AFD8A46FF04FF8846FFEB15803B
:103540004C4E01C644190BC6441A49834C2A20C666
:10355000061F84070BFF7503E9A1FEF7442A20002C
:103560007405C746FC0A008B46FC5F5EC9CBE83495
:10357000EA34EA34AE34EA34EA34EA34D134EA34B0
:10358000EA34E134E13442343F353F353F354B34A2
:103590003F357B3478340D353F353F353F353F354A
:1035A0003F353F353F357834C80400005657C6468E
:1035B000FF01C746FC0000BF54818B36AA88A05586
:1035C0008104028846FEE9E1008BC74750E85601B6
:1035D000598A46FE04FF8846FEF60642F04075030F
:1035E000E9B900E831FA8946FC0BC07403E9C3006D
:1035F000A02084B400488BD883FB107603E98300B5
:10360000D1E32EFFA7BA36E845018946FCE99A00C6
```

9801536-5

26 JUN 1998

```
:10361000C644190BC6441A48804C4E01BF1F84C6CD
:103620000507C646FE01814C2A0001EB7DC6064314
:10363000F000A01084B4008BD8C687A28800C646CC
:10364000FE00814C2A0004EB618A46FFB4000BC0E7
:10365000751CC644190BC6441A47804C4E01814C58
:103660002A9000C746FC0500C646FE00EB3C8A4691
:10367000FF04FF8846FFA0558104028846FEBF5420
:1036800081EB27C644190BC6441A49BF1F84C605DF
:1036900007814C2A0001C646FE01EB0EF7442A00C2
:1036A000017407C746FC0A00EB09807EFE00740324
:1036B000E916FF8B46FC5F5EC9C307368336833647
:1036C000833610368336833683368336AA36568B36AAAC
:1036D000833683368336833683368336AA36568B36AAAC
:1036E00088C6061F840483642AFDF64411407505CC
:1036F000BA0C00EB2D0EE8E6FC8BD00BC0741C83DB
:10370000FA0C741E83FA05741980642C7F83642A72
:10371000BFC64414Q2C6441500EB07F7442A020052
:1037200075C48BC25EC3558BEC568B7604800E51EC
:10373000F010802651F0EFC60648F010C60642F0A1
:10374000178A04A24AF06A1CE8F9E9595E5DC3567B
:103750008B36AA88C606548101E889F98BD00BC044
:1037600075578F7442A00017552F60642F040741E3F
:103770008B36AA88C644190BC6441A43834C2A04C4
:10378000804C4E01814C2A8000BA0400EB4CA056BC
:1037900081B4003D01007542E84300E80AFE8BD089
:1037A0000BC075098A441008060D84EB2DA0108407
:1037B000B4008BD8C687A28800EB1FC644190BC67D
:1037C000441A49804C4E01807C5302740D807C5316
:1037D000037407BA0A00C64414028BC25EC3568043
:1037E0003E58810F7605C60658810FA05781B40058
:1037F0008BC8C1E1028BC1BB280033D2F7F38BF237
:103800008BC133D2F7F3488BC883F9047305B9042D
:1038100000EB0883F90E7205B90E0033F60BF6764D
:10382000058BD943EB028BD98BC1406BC02803C6F3
:10383000C1E802A25781A01084B4008AD3C0E20478
:1038400021658818BD88897A2885EC3C8040000EE
:103850005657C646FF01C746FC0000BF54818B3651
:10386000AA888936AA88A00F8484060D847405333B
:10387000C0E9B201A00F8408060D84C60654810178
:10388000C606558103C606568101C606578132C653
:1038900006588810FC646FE05E97F018BC74750E8F1
:1038A00084FE598A46FE04FF8846FEF60642F04032
:1038B0007503E95701E85FF78946FC0BC07403E91B
:1038C0006101A02084B400488BD883FB107603E903
:1038D000DE00D1E32EFFA72A3AE809F88946FC0B5F
:1038E000C07403E93401F7442A00017403E92A0192
:1038F000803E578196770E803E5781327207803E18
:1039000058810F761CA01084B4008BD8C687A2887B
:1039100000C6061F8407900EE8C4FA8946FCE9F940
:1039200000E8BAFEE9F300C644190BC6441A488001
:103930004C4E01834C2A40C6061F8407900EE89E19
```

```
:10394000FA8946FC0BC07403E9A200C6441402C7FE
:1039500046FC0A00E99600E99300C60643F000A081
:103960001084B4008BD8C687A28800E97F008A46FD
:10397000FFB4000BC0751CC644190BC6441A47801F
:103980004C4E01814C2A9000C746FC050083641C04
:10399000EFEB5A8A46FF04FF8846FFC646FE05BF86
:1039A0005481EB76C60642F000900EE8145BEB6A99
:1039B000F606208480743C8A4411B4002507008AEE
:1039C000162084B60083E2073BC27418C64419056A
:1039D000C6441A43804C4E01814C2A8000C746FCE5
:1039E0000A00EB09A02084884411A21E84C646FE6A
:1039F00000EB27C644190BC6441A49BF1F84C605ED
:103A000007814C2A0001C646FE01EB0EF7442A004E
:103A1000017407C746FC0A00EB09807EFE007403B0
:103A2000E978FE8B46FC5F5EC9C3D938B039B0393E
:103A3000B0392739B0395A391A3A6E39B039B039F4
:103A4000A439B039B039B039B0391A3A568B36AAE0
:103A5000886A069A700000D0593D01007506C64478
:103A60001400EB04C64414025EC3C808000056C626
:103A700046FF028B36AA886A069A700000D0593D2C
:103A800001007403E984009A000000D00BC0747632
:103A9000900EE813E80BC07568C706CA860100C718
:103AA000060A870000C706088700000832628FFEF64
:103AB000C706278701008D46F9508D46FA506A00E7
:103AC0009A889C00D083C4068846FE6A00900EE85F
:103AD000E95D59807EFE017506C646FF00EB1B8A34
:103AE00046FA8844168A46FB8844178A46FC88446E
:103AF00018804C4E01900EE8C3E1830E28FF10EBB6
:103B000005900EE8BEE29A520000D08A46FF884433
:103B1000145EC9C3C8020000568B36AA88803E1BBB
:103B200084007403E8EA00807C12017332E83500F7
:103B30008846FF807EFF007407900EE886E2EB2245
:103B4000C6441600C6441700C64418008B1EAA8837
:103B5000C6474E01900EE864E180642CDFEB03E879
:103B600003005EC9C3C802000056B2008B36AA88A3
:103B70008A4C0780642CDF0AC9745380F9127602DC
:103B8000B112803E450400741D8BC6052E00894687
:103B9000FEA18D8633D203168F861500008B5EFE44
:103BA000894708895706807C1201730F6A0C8AC105
:103BB000B400508BC6053F0050EB0BBAEE836A0C85
:103BC0008AC1B4005052E8E62C83C4068AD08AC267
:103BD0005EC9C3568B36AA88C6441606C644172942
:103BE000C64418008A442DB400A901007514F64497
:103BF0002D047406C6441728EB08C644172AC64489
:103C000018018B1EAA88804F4E01900EE8AEE05E30
:103C1000C3568B36AA8883C62EC6441170C7440D7E
:103C20000000C7440B0000C6440F04C6440A0AC67D
:103C3000440544A01B848844045EC356578B3EAAA7
:103C400088BEAC816A099A700000D0590BC0750318
:103C5000E9BC009A000000D00BC07503E9B0006A0F
:103C60000C6A0468AF81900EE82B2D83C4060BC04C
```

```
:103C70007408900EE84DE1E99B00807C030074100D
:103C80008A4403506A00900EE864E183C404EB7A2E
:103C9000807C020074088A4402506A01EBE8F70451
:103CA000030074066A006A02EBDCA12488C1E0020A
:103CB0003B047235833C00745C6A006A04FF34E89C
:103CC000F74883C4060AC07406C6451402EB3B904D
:103CD0000EE8D4E50BC07407900EE8E7E0EB2B5636
:103CE000E83A0059884514EB2CC6451604C645171A
:103CF00032804D4E41C7060384FFFFC7060184FF93
:103D0000FFC6451402900EE8B3DF9A520000D0C6F9
:103D1000451402EB059A520000D05F5EC3C8040050
:103D20000056578B36AA88BFF083C7450A0400C7E0
:103D3000050004C64502008D46FC8945068C5D08D9
:103D4000EB409A4DD800D03D01007564FF76FEFF30
:103D500076FCE8610083C4046A00FF3668866A0066
:103D60006A00FF76FEFF76FC9A31D300D083C40C44
:103D70003D0100753B8B5E04832F04830504EB0239
:103D8000EB2E8B5E04833F0075B8803E1B8400756C
:103D90001F900EE889593D01007504B000EB13C671
:103DA000441603C64417198064EDF900EE80DDFF9
:103DB000B0025F5EC9C3C80C00005657900EE84CB5
:103DC000C98BF80BFF7503E91301C706CA8600000B
:103DD0008D46FE508D46FA50FF7606FF7604900E13
:103DE000E8CD5583C408F706628640007503E9B440
:103DF000008BF7C6440803C7440C0000C7440A0000
:103E000000C6441800900EE8A51888440F900EE8EC
:103E10008D1788440EC706CA8600008D46FE508D59
:103E200046FA50FF7606FF7604900EE8825583C46A
:103E3000088B46FC8B56FA8944158954138A46FE32
:103E4000884417A024F1884410900EE8F3178844A2
:103E500011900EE8EF15884412900EE88317C0E029
:103E600003084412C7441E0000C7441C0000830E10
:103E700028FF40FF36AA886A03FF36FE809AED438A
:103E80002BF283C4060BC07506C7062EDA03008921
:103E90003630DAC70636DA0300900EE8EEC4832621
:103EA00028FFBFEB2F897EF4FF76FEFF76FCFF76BE
:103EB000FA900EE8325583C4068956F88946F66AA8
:103EC000016A006A0052506A00FF76F4900EE83FE3
:103ED0005483C40E893E2EDA900EE8A1C85F5EC9F5
:103EE000C3C8020000568B36AA88E8DE003D0100F8
:103EF0007556900EE8B1E30BC07548E844EC3D01FF
:103F0000007508E845008846FFEB27A00A84B40046
:103F100089444FA00C84884451807C172175068009
:103F20004C4E35EB04804C4E1D900EE88FDDC6469E
:103F3000FF02900EE8FBE30BC075088A46FF884439
:103F400014EB05900EE87CDE5EC9C3C8080000567D
:103F50008B36AA88C646FF009A000000D00BC074BA
:103F60005B832628FFEFC706278701008D46F9509F
:103F70008D46FA506A009A889C00D083C406884611
:103F8000FE6A00900EE8335959807EFE0174218A42
:103F900046FA8844168A46FB8844178A46FC8844B9
```

```
:103FA00018804C4E01900EE813DDC646FF02EB056B
:103FB000832628FFDF830E28FF10EB04C646FF028E
:103FC0009A520000D08A46FF5EC9C3568B36AA8833
:103FD0008A440BB4003D0B0074173D2B007516F698
:103FE0004402C0740C6A069A700000D0598BD0EB62
:103FF0000B6A08EBF2C6061B848C33D20BD2750415
:10400000C64414028BC25EC3C80200005657A1A06A
:10401000888946FE8B3EAA88BE1C818A4507B4006B
:104020008BD00BC0743B83FA387603BA3800807D9E
:10403000120172O5C6047FEB15B1008B5EFEF70717
:10404000080074048OCEB068AC1042088046A0DF9
:104050005256E85A2883C4060BC07405900EE863D4
:10406000DD5F5EC9C3C80A000056578B36AA88C7F1
:1040700046FA00009A000000D00BC07503E9CD009D
:10408000C706038100209A000006EF3D010074037B
:10409000E9BA00F7068D86004074199A520000D0E4
:1040A000C6441602C644173AC6441402900EE80CE1
:1040B000DCE999008BFE83C7068A4503243F8846C6
:1040C000F950E82E01598946F63DFFFF75159A52C1
:1040D0000000D0C64414026A026A24E83D1383C477
:1040E00004EB6A8D46FD50E86700598946FE807DE5
:1040F0000100744E508A450350FF76F6E892018322
:10410000C4068BD00BD274458A46FD02C28846FD98
:104110008A45013A46FD73038846FD8A46FD04FF41
:10412000A2B4816A0D8A46FDB4005068B481E87E6D
:104130002783C4060BC0740A900EE887DCC746FAD2
:1041400002008A46FA8844149A520000D05F5EC981
:10415000C3C80400005657BEB881BFB481A1AA8865
:1041600005060089 46FEC605008B5EFEF64704087C
:10417000740BC6450300C746FC0400EB2FC645037D
:1041800008C746FC0C00C60400C6440100C6440231
:1041900000C6440300C6440400C6440500A164866A
:1041A000C1E808884406A064868844076A069A70B5
:1041B0000000D0590BC0740D803E3A88007506C6C9
:1041C000450101EB04C6450103F7068D8600207505
:1041D00006807D01017506C6450280EB04C64502D6
:1041E000008B5E048A46FC88078B46FC05B4815F21
:1041F0005EC9C3C8060000568A4E048B36AA88A042
:104200004404B4000BC0750D80F93B720880F93E80
:104210007703EB7790C746FE00E0C746FC82D906DD
:104220006800E00726A1C8D98946FA0733D23B5671
:10423000FA732A8BC26BC005C45EFC03D826380F04
:1042400075158BC26BC0058B5EFC03D8268A4701AF
:10425000A2FB8B8BC2EB37423B56FA72D6807C0BAB
:104260001A752880F93F75238BC26BC005C45EFCAC
:1042700003D8268A4701A2FB8BA04404B4000BC0DC
:1042800075D1A0FB8B2C70EBC7EBC8B8FFFF5EC9E4
:10429000C3C80A000056578B7E04A1AA888946FE2F
:1042A00033F68A560680E2C08A4606243F8846F9DD
:1042B0008AC2B4008946F6B90400BB28432E8B0796
:1042C0003B46F6740783C302E2F3EB562EFF670802
```

```
:1042D000C746FC0011C746FACE82578A46F95052AB
:1042E000FF76FCFF76FA1EFF7608E84B0083C40ECB
:1042F0008BF0EB2EC746FC00E0C746FA66D7EBDA38
:10430000C746FC00E0C746FA58D6EBCE8B5EFEC629
:104310004714026A026A24E8011183C4049A520015
:1043200000D08BC65F5EC9C3000040008000C000A3
:10433000D042F44200430C43C81C00005657C74605
:10434000F60000C746F40000C746F20000C746F07A
:104350000000C746EE0000C746EC0000C746EA0072
:1043600000C746E80000F6066D83047414803E44DE
:104370000400740DF706628640007505B80100EB75
:104380000233C08846FFC746FA00E0C746F882D924
:10439000807E0E3F7503E9D3008B46106BC005C4C9
:1043A0005EF803D8268B47038946FC8B46106BC00A
:1043B000058B5EF803D8268B77018A460EB40089F8
:1043C00046E4B90400BBB9462E8B073B46E47407AC
:1043D00083C302E2F3EB762EFF67088B46068B560B
:1043E000048946F68956F4F706628640007745E81B9
:1043F0003E64860002750483460080C813E64860094
:1044000004754A83460818EB448B46068B5604898C
:104410046F28956F0F706628640007430813E64A9
:1044200086000275048346080C813E64860004758C
:104430001CEBD08B46068B56048946EE8956ECEB76
:104440000C8B46068B56048946EA8956E8568B46FD
:10445000080346FCFF760A50FF7606FF7604900EAE
:10446000E8425183C40A8976E6E94C01C746E60072
:104470000033FFE9C00033C98BC76BC005C45EF8C9
:1044800003D8268B77018BDF83FB077776D1E32E6A
:10449000FFA7A9468B46068B56048946F68956F433
:1044A000F706628640007745B813E648600027503F5
:1044B000B90C00813E648600047548B91800EB43CE
:1044C0008B46068B56048946F28956F0F7066286BB
:1044D0004000742F813E648600027503B90C008190
:1044E0003E64860004751CEBD28B46068B5604890D
:1044F00046EE8956ECEB0C8B46068B56048946EA51
:104500008956E88BC76BC005C45EF803D8268B4775
:10451000038946FC568B460803C10346FCFF760A16
:1045200050FF7606FF7604900EE8795083C40A01A6
:10453000760401 76E64783FF077703E938FF803E7C
:1045400044040074 9BF0800EB3F8BC76BC005C42F
:104550005EF803D8268B47038946FC8BC76BC005E2
:104560008B5EF803D8268B7701568B46080346FCF2
:10457000FF760A50FF7606FF7604900EE8265083F9
:10458000C40A0176040176E64783FF0B76BCC45E5D
:10459000F8268B473F8946FC268B773D568B46088D
:1045A0000346FCFF760A50FF7606FF7604900EE87D
:1045B000F34F83C40A0176E6807E0C00756A8B4651
:1045C000EC0B46EE7410813E648600027408C45EF3
:1045D000EC26C647090F8B46E80B46EA744AF706F5
:1045E000628610007405B80100EB0233C08AD00A5D
:1045F000D27405A01688EB02B001C45EE826884795
```

```
:10460000030AD27408A11E88C1E808EB02B000C4F6
:104610005EE8268847040AD27405A01E88EB02B023
:1046200010C45EE8268847058A46FFB4000BC075B3
:10463000208B46F40B46F67408C45EF426C6470683
:10464000008B46F00B46F27408C45EF026C647069F
:1046500000A04404B4000BC075488B46F40B46F62A
:10466000741CC45EF426806707C0268067073F2657
:10467000806709FC26806709F3268067090F8B464F
:10468000F00B46F2741CC45EF0268067073F26805C
:104690006707C0268067090F26806709FC268067A8
:1046A00009F38B46E65F5EC9C394440345C044E901
:1046B000440345034503450345F7440100070008002172
:1046C00000DB43094433444144C8060000C746FAAE
:1046D0000000837EFA01750A8C5EFEC746FCC0812D
:1046E000EB0AC746FC58D6C746FE00E0680E01FF3D
:1046F00076FEFF76FC1E68CE82900EE8A74E83C43D
:104700000AC9C3C80400005657C746FC00008B3EC8
:10471000AA889A000000D00BC07503E9BD00F70617
:104720008D8600407414C6451602C645173AC64524
:1047300014029000EE886D5E9A1008BF783C606C661
:1047400006FA8B008A4404B400A91000752C807C02
:10475000100740C807C01047406807C010C75617E
:10476000807C0100746A8D46FE50E8720059B400E6
:104770008946FC3DFF007558EB40807C0100745079
:10478000807C0104723B8D46FE50E8520059B40013
:104790008946FC0BC0751C807C01007433807C0151
:1047A00002721EFF76FEE84F0159B4008946FCEB09
:1047B0001FEB0E817EFCFF007516900EE805D6EB10
:1047C0001A6A046A1AE8530C83C404C746FC020040
:1047D0008A46FC8845149A520000D05F5EC9C3C85F
:1047E0000400005657BFB881C646FF00B200BEB4F1
:1047F000818AC2B4008B5E048907A1AA88050600DD
:104800008946FC6A0D8B5EFC8A4701B4005068B48F
:1048100081900EE8802183C4060BC07405B0FFE9C7
:10482000D200803C00740AB2008A048846FFE9B0D6
:1048300000807C01037411807C0101740B807C0179
:10484000007405B201E99900807C02007407B2028D
:104850008A4402EBD6807C03007505B204EB7590A8
:10486000807C0300740B807C03087405B203EB7139
:1048700090B204803D007402EB67807D01007404F7
:10488000FEC2EB4B807D0200740580C202EB4080CB
:104890007D0300740580C203EB35807D040074083D
:1048A00080C2048A4504EB83807D0500740580C2C4
:1048B00005EB1CA16486C1E8083A4506740580C270
:1048C00006EB0C8A45073A066486740580C207EB3E
:1048D0001080C2088AC2B4008B5E048907B000EB66
:1048E000138A46FF508AC2B40050900EE800D58368
:1048F000C404B0025F5EC9C3C80A000056578B7E6D
:1049000004C646F700C646F600A1AA880506008937
:104910046FE8BF781C6B4818B5EFE8A4701B400E8
:104920002BC78946FCE9EA008A04243F50E8C3F813
```

```
:10493000598946F8F604C07506837EF8FF75158A16
:104940000424C05057900EE8A5D483C404C646F68C
:1049500002E9C70047837EFC027C168A4401B4004A
:104960008A16FB8BB60083C2FE3BC274046A00EB5E
:10497000D3A0FB8BB4002946FC837EFC007D096A32
:10498000046A1AE8950AEBC247FF76F8578BC6050A
:10499000020050E8B20083C4068846F60AC07403D9
:1049A000EB79908B5EF8D1E32E8B87E4D98946FAB8
:1049B000FF76F85756FF56FA83C4068846F60AC0B3
:1049C0007559A0FA8BB4006BC0068B56F88BD8894A
:1049D000975E81A0FB8BB4008A16FA8BB6006BD26F
:1049E000068BDA89876081A0FA8BB4006BC0068BD6
:1049F000D889B76281A0FB8BB40003F0A0FB8BB415
:104A00000005FEFF03F8A0FA8BFEC0A2FA8BC64693
:104A1000F701837EFC007E03E90DFF807EF60075C2
:104A200020807EF701751AE882008B5EFEF647044F
:104A300001740EC646F6026A026A24E8DD0983C4E0
:104A4000048A46F65F5EC9C3C804000056578B7ED1
:104A5000048B4E06C646FF00BBCAD98B4608D1E080
:104A600003D82E8B070502008946FC33D2EB2A8B34
:104A7000DA8B76FC03F22E8A048401741A8A018B85
:104A80005EFC03DA2E22075051900EE861D383C4F6
:104A900004C646FF02EB0E4241A0FB8BB40005FEAC
:104AA000FF3BC277CA8A46FF5F5EC9C3C8080000E1
:104AB0005657B882D98946FAE9A800A0FA8B04FFB4
:104AC000A2FA8BB4006BC0068BD88B975E81A0FADC
:104AD0008BB4006BC0068BD88B8760818946FCA0A5
:104AE000FA8BB4006BC0068BD88B8762818946F83D
:104AF0008BC26BC0058B5EFA03D82E8B47038946A9
:104B0000FEF7066286400074390BD27518813E6448
:104B10008600027504834 6FE0C813E64860004759F
:104B2000048346FE1883FA027518813E64860002EB
:104B300075048346FE0C813E648600047504834 63A
:104B4000FE181E0656578B76F846BFCE82037EFEB1
:104B5000478B4EFC49B800118ED88EC0FCF3A45F81
:104B60005E071F803EFA8B007403E94EFFE892D384
:104B70005F5EC9C3B000C3558BEC568B56068B766F
:104B800004F6066D83047414803E440400740DF72B
:104B900006628640007505B80100EB0233C08AC882
:104BA0008A4402B400250F008BD883FB0E7707D10F
:104BB000E32EFFA7074E6A0052900EE831D283C45D
:104BC00004B002E93E02807C037F76086A008BC253
:104BD00040E92A028A5C04813E64860002750780EF
:104BE000FB287602EB0D813E64860004750F80FB86
:104BF00050760A6A008BC2050200E90102807C053A
:104C000000740A6A008BC2050300E9F1018AC1B48D
:104C1000000BC07508807C06007412EB06807C06D1
:104C20000C760A6A008BC2050400E9D101A0440495
:104C3000B4000BC07506A0D482884406A04404B416
:104C4000000BC075198A4407253F000AC075198AF0
:104C50004407C1E8062503000AC07416EB0A8A441B
```

```
:104C600007253F003C08760A6A008BC2050500E96B
:104C70008C010AC97402EB53A04404B4000BC07544
:104C800060F706628640007432813E6486000275D9
:104C900015A0E182253F00253F00806407C008443D
:104CA00007A0E182EB28A0ED82253F00253F008090
:104CB0006407C0084407A0ED82EB13A0D582253F0E
:104CC00000253F00806407C0084407A0D582C1E8E2
:104CD000062503002503008064073FC0E006084462
:104CE00007807C087F760A6A008BC2050600E90D02
:104CF00001A04404B4000BC075198A4409250300BF
:104D00000AC075268A4409C1E8022503000AC07456
:104D100023EB178A44092503000AC0740D8A44094D
:104D2000C1E8022503000AC0750A6A008BC20507A4
:104D300000E9CA00A04404B4000BC07403E9A20057
:104D4000F706628640007 45E813E64860002752B21
:104D5000A0E382250300250300806409FC084409C0
:104D6000A0E382C1E8022503002503008064 09F363
:104D7000C0E002084409A0E382EB54A0EF822503BF
:104D8000002503008064 09FC084409A0EF82C1E803
:104D900002250300250300806409F3C0E0020844F3
:104DA00009A0EF82EB29A0D782250300250300800C
:104DB0006409FC084409A0D782C1E8022503002544
:104DC0000300806409F3C0E002084409A0D782C14F
:104DD000E804250F00250F008064090FC0E00408D7
:104DE0004409807C0A0074096A008BC2050800EB44
:104DF0000D807C0B00740B6A008BC205090050E922
:104E0000B7FDB0005E5DC3C64BC64BB64BB64BC6D6
:104E10004BC64BC64BC64BC64BB64BB64BB64BC63A
:104E20004BB64BC64B558BEC568B56068B76048097
:104E30007C02007502EB46807C0400740583C2028C
:104E4000EB3B807C0500740583C203EB30807C065D
:104E500000740583C204EB25807C0700740583C2BF
:104E600005EB1A807C0800740583C206EB0F807C7A
:104E70000900740583C207EB04B000EB0D6A005211
:104E8000900EE86ACF83C404B0025E5DC3558BEC1C
:104E9000568B56068B7604F6066D83047414803E9A
:104EA000440400740DF706628640007505B80100E1
:104EB000EB0233C08AC88A4402B400250F008BD8A5
:104EC00083FB0E7707D1E32EFFA7AC506A00529008
:104ED0000EE81BCF83C404B002E9CD01807C037FC0
:104EE00076086A008BC240E9B9018A5C04813E649D
:104EF000860002750780FB287602EB0D813E6486F2
:104F00000004750F80FB50760A6A008BC205020010
:104F1000E990018AC1B4000BC07508807C0600745A
:104F200012EB06807C060C760A6A008BC205040030
:104F3000E97001A04404B4000BC07506A008838882
:104F40004406A04404B4000BC075198A4407C1E8A4
:104F5000062503000AC075168A4407253F000AC0CB
:104F60007416EB0A8A4407253F003C08760A6A005B
:104F70008BC2050500E92B010AC97419F706628680
:104F800040007431813E648600027524A01583EBD5
```

```
:104F900027EB1DEB20A04404B4000BC0752DF706D1
:104FA00062864000740F813E648600027502EBDC6D
:104FB000A02183EB03A00983C1E806250300250394
:104FC000008064073FC0E006084407A04404B40022
:104FD0000BC075268A44092503000AC075338A442C
:104FE00009C1E8022503000AC075268A4409C1E800
:104FF00004250F000AC07423EB178A440925030017
:105000000AC0740D8A4409C1E8022503000AC0756C
:105010000A6A008BC2050700E98800A04404B400B6
:105020000BC07563F706628640007 4358B1EA0883E
:10503000817F0200027515A0178325030025030058
:10504000806409FC084409A01783EB28A02383256A
:10505000030025030080 6409FC084409A02383EBB6
:1050600013A00B832503002503008064 09FC08447A
:1050700009A00B83C1E80225030025030080640911
:10508000F3C0E002084409807C0A0074096A008BBE
:10509000C2050800EB0D807C0B00740B6A008BC20C
:1050A00005090050E928FEB0005E5DC3DC4EDC4E11
:1050B000CC4ECC4EDC4EDC4EDC4EDC4EDC4ECC4ED0
:1050C000CC4ECC4EDC4ECC4EDC4E558BEC568B563B
:1050D000068B7604F644020474056A04E99500F62A
:1050E00044020274056A02E98A00807C03007404A9
:1050F00042EB7F90807C04FF740583C202EB7380D7
:105100007C05FF740583C203EB68807C0600740590
:1051100083C204EB5D807C0700740583C205EB52FB
:10512000F70662861000741C807C0800751C807C69
:10513000091F7521807C0AFF7526807C0BFF752B6B
:10514000B000EB3B807C0800740583C206EB238033
:105150007C0900740583C207EB18807C0AFF740584
:1051600083C208EB0D807C0BFF74D583C209EB0270
:10517000EBCE6A0052900EE875CC83C404B0025E98
:105180005DC3558BEC568B56068B7604807C0401F0
:10519000740583C202EB25807C0503740583C2037A
:1051A000EB1A807C0600740583C204EB0F807C0739
:1051B00000740583C205EB04B000EB0D6A00529049
:1051C0000EE82BCC83C404B0025E5DC3558BEC5655
:1051D0008B56068B7604F64402C07403E9E900801E
:1051E0007C0400740683C202E9DD00807C05007443
:1051F0000683C203E9D100807C0600740683C204E2
:10520000E9C500807C0700740683C205E9B9008007
:105210007C0800740683C206E9AD00807C09007436
:105220000683C207E9A100807C0A00740683C208D5
:10523000E99500807C0B00740683C209E98900802F
:105240007C0C00740683C20AEB7E90807C0D007497
:105250000583C20BEB72807C0E00740583C20CEBDD
:1052600067807C0F00740583C20DEB5C807C1000AE
:10527000740583C20EEB51807C1100740583C20F4C
:10528000EB46807C1200740583C210EB3B807C13DC
:1052900000740583C211EB30807C1400740583C256
:1052A00012EB25807C1500740583C213EB1A807CF9
:1052B0001600740583C214EB0F807C1700740583FD
```

```
:1052C000C215EB04B000EB0D6A0052900EE81FCB44
:1052D00083C404B0025E5DC3B000C3558BEC568B33
:1052E00056068B76048A44033A061688740342EB0A
:1052F00022A11E88C1E8083A4404740583C202EB67
:10530000128A44053A061E88740583C203EB04B072
:1053100000EB0D6A0052900EE8D4CA83C404B002B8
:105320005E5DC3558BEC568B7604A04404B4000B31
:10533000C0740C807C02577506807C030174156A6A
:10534000008B46062D020050900EE8A2CA83C404CA
:10535000B002EB0AC6440200C6440300B0005E5D22
:10536000C3558BEC568B7604A04404B4000BC07478
:105370000C807C029C7506807C03AB74156A008BE4
:1053800046062D020050900EE864CA83C404B002A1
:10539000EB0AC6440200C6440300B0005E5DC3557C
:1053A0008BEC568B7604A04404B4000BC0740C80C4
:1053B0007C021E7506807C03A074156A008B46066D
:1053C0002D020050900EE826CA83C404B002EB0AF6
:1053D000C6440200C6440300B0005E5DC3558BECBA
:1053E000568B7604A04404B4000BC0740C807C027D
:1053F000237506807C03F274156A008B46062D0225
:10540000050900EE8E8C983C404B002EB0AC64419
:105410000200C6440300B0005E5DC3558BEC568BA2
:1054200036AA88C64416058A46048844178A460662
:10543000B40089444F804C4E14900EE87FC85E5DE6
:10544000C3A0F482CBF70662864000753E803E44DE
:10545000400740EF6066D83047407A0D482240F32
:10546000EB61A0D582C1E806250300B4008BD88388
:10547000FB037717D1E32EFFA7CC54B003EB44B066
:1054800007EB40B00AEB3CB00CEB38813E64860081
:10549000027505A0E182EB03A0ED82C1E8062503B9
:1054A000008AD08AC2B4008BD883FB037713D1E380
:1054B0002EFFA7C454B000EB0AB001EB06B002EB1C
:1054C00002B0FFCBB554B554B954BD547B547F548E
:1054D00083548754F70662864000753E803E44043C
:1054E00000740EF6066D83047407A00883240FEB86
:1054F00061A00983C1E806250300B4008BD883FBB3
:10550000037717D1E32EFFA75B55B003EB44B00739
:10551000EB40B00AEB3CB00CEB38813E64860002F5
:105520007505A01583EB03A02183C1E806250300C0
:105530008AD08AC2B4008BD883FB037713D1E32EC1
:10554000FFA75355B000EB0AB001EB06B002EB0227
:10555000B0FFCB4455445548554C550A550E55128D
:10556000551655F706628640007505A0D082EB10EF
:10557000813E648600027505A0DC82EB03A0E88210
:10558000CBF706628640007505A00483EB10813ED0
:1055900064860002750 5A01083EB03A01C83CBF783
:1055A000066286400075 05A0D582EB10813E6486B8
:1055B00000027505A0E182EB03A0ED82253F00CB40
:1055C000F706628640007505A00983EB10813E64F2
:1055D0008600027505A01583EB03A02183253F00FB
:1055E000CBF7066286400074 12813E648600027525
```

```
:1055F00005A0E382EB08A0EF82EB03A0D78225038E
:1056000000CBF706628640007412813E6486000279
:105610007505A01783EB08A02383EB03A00B83255C
:105620000300CBF706628640007505A0D182EB101F
:10563000813E648600027505A0DD82EB03A0E9824D
:10564000CBF706628640007 50BA0D782C1E804251F
:105650000F00EB23813E648600027505A0E382EB18
:1056600003A0EF82C1E804250F008AD080FA0776F4
:1056700004B007EB028AC2CBF706628640007 50BC6
:10568000A00B83C1E804250F00EB23813E64860054
:10569000027505A01783EB03A02383C1E804250F3F
:1056A000008AD080FA077604B007EB028AC2CBF7F3
:1056B000066286400075 05A0D282EB10813E6486AA
:1056C00000027505A0DE82EB03A0EA82CBF706623A
:1056D0008640007505A00683EB10813E64860002BB
:1056E0007505A01283EB03A01E83CBF706628640EC
:1056F000007505A00583EB10813E648600027505E8
:10570000A01183EB03A01D83CBF7066286400074D3
:1057100012813E648600027505A0E382EB08A0EFCB
:1057200082EB03A0D782C1E802250300CBF7066213
:10573000864000741 2813E648600027505A01783BE
:10574000EB08A02383EB03A00B83C1E80225030031
:10575000CBF706628640007505A0D682EB10813E2D
:1057600064860002 7505A0E282EB03A0EE82CB56B0
:10577000578B3EAA88A0EF83C1E8072501000AC025
:10578000741 1A0EF8325070038450F7406C6451431
:1057900018EB448B36AA8883C606F64404107411AD
:1057A000800EEF83408A4404B400250E00D1F8EB4C
:1057B000038A450F2507008026EF83C7C0E0030852
:1057C00006EF838A450F2507008026EF83F8080639
:1057D000EF83800EEF83805F5EC3C8020000568BAC
:1057E00036AA88A0EF83C1E8072501000AC07447E4
:1057F000A0EF8325070038440F753C8B36AA8883B9
:10580000C606F6440410741B8A4404B400250E0036
:10581000D1F88846FFA0EF83C1E80325070038468A
:10582000FF75148026EF83F88026EF83C78026EF6C
:1058300083BF8026EF837F5EC9C35633D28B36AADF
:1058400088A0EF83C1E8072501000AC07432A0EFE9
:1058500083C1E80325070038440F74248A440BB43D
:10586000003D1600741A3D170074153D1E00750D9D
:105870008B36AA8883C606F64401017403BA010078
:105880008BC25EC3C80800005657A1AA888946FE8D
:105890008B3EA0888B36AA8883C6069A000000D06B
:1058A0000BC07503E9C900F7452B00407403E9A15B
:1058B000008D7EFAC706038100209A000006EF895A
:1058C00046F83D01007434578A46F8509A6403063E
:1058D000EF83C4048A058B5EFE8847168A450188DB
:1058E00047178A4502884718A21B84804F4E0190B3
:1058F0000EE8C9C38B5EFEC64714028A4401B40099
:10590000A901007538F64401027428803E1884000D
:1059100074 3B8B36AA88C6441605C6441753C64442
```

```
:10592000802804C4E01900EE892C3C6441402EB5C
:1059300038EB1AF7068D860002752EEB10F7068DF0
:10594000B600407524F7068D860002741CE82B0043
:10595000EB178B5EFEC6471602C647173A900EE855
:105960005BC38B5EFEC64714029A520000D0EB0761
:105970008B5EFEC64714025F5EC9C3C802000056B4
:10598000A01C848846FF8B36AA8883C606A0628C3A
:1059900B4000BC0751A8A4401B400A90100751047
:1059A000C706038100528A440150E84C0059EB4677
:1059B000900EE8F3C80BC07538C6061C84FFF64489
:1059C000010174079A00002BF2EB19F644010274EE
:1059D00008C70603810056EB06C706038100529AEA
:1059E000000006EF9A520000D08A46FFA21C84EB0A
:1059F00005900EE8CEC35EC9C3C8020000568B36C0
:105A0000AA88F64604027432813E03810052752A48
:105A1000C706038100569A000006EF8946FE3D0145
:105A2000007417C64416048A46FE884417804C4EFC
:105A300001900EE887C2C64414025EC9C3C80200C2
:105A40000056C646FF008B36AA88807C0800750683
:105A5000807C0700740E6A03900EE8ECC359C646BA
:105A6000FF02EB1CF6440A047416900EE839C80BCA
:105A7000C07508E813008846FFEB05900EE844C3A4
:105A80008A46FF8844145EC9C3C8060000C646FEA5
:105A9000002EA0E3A08846FFC6061C84FFC7061A96
:105AA000810000C746FC0000EB2A8B5EFCD1E32E90
:105AB0008B87E1A08946FAFF56FA833E1A8100746B
:105AC00010A01A8150900EE8A0C359C646FE02EB02
:105AD0000DFF46FC8A46FFB4003B46FC77CCC60669
:105AE0001C84008A46FEC9C3C80200005657C64639
:105AF000FF008B36AA888B3EAA8883C706C7060399
:105B0000810000F6450101742B6A029A700000D0F2
:105B1000593D01007518A01884B4000BC07506C764
:105B200006038100548A441008061884EB1EC646FA
:105B3000FF02EB188A4410F6D020061884A01884BF
:105B4000B4000BC07506C706038100558 33E038170
:105B500000742C9A000000D00BC0741F9A0000063D
:105B6000EF3D0100750A9A1E0206EF3D0100740424
:105B7000C646FF029A520000D0EB04C646FF028AD6
:105B800046FF8844145F5EC9C3C80600005657C666
:105B900046FD008B36AA88C746FA02006A069A704C
:105BA0000000D0593D01007403E94B01C746FEB423
:105BB000818B3EAA8883C702F706628610007526 8D
:105BC000C6441603F706628620007406C6441719F9
:105BD000EB04C6441731C6441402804C4E01900EAB
:105BE000E8DAC0E92201F64501017473807D0800FE
:105BF0007427803E0687007503E98B00A10A878B16
:105C000016088703550413450683EA011D00008921
:105C10004506895504EB02EB6E8B45068B55043B1C
:105C2000066E86722E77063B166C867626C644165E
:105C300005C644172180 4C4E35C7444F02008B45A2
:105C4000068B5504A3078489160584900EE86DC061
```

```
:105C5000E98500FF76FE57E8B20083C404EB688054
:105C60007D0800743E803E068700741BA10A878B66
:105C70001608870355041345068 3EA011D000089B1
:105C80004506895504EB1CC6441605C644172480F6
:105C90004C4E1DC7444F0100C6445100C644140277
:105CA000E93BFF8B45040B4506740C6A006A08E863
:105CB0006CC183C404EB218B5EFEA16E868B166CD7
:105CC000868947068957 04A164868B5EFEC7470212
:105CD00000008907C646FD01807EFD0074196A0C2C
:105CE0006A0868BB81E8C70B83C4068946FA0BC003
:105CF0007405900EE8CDC0837EFA027505C60606CF
:105D000087008A46FA8844145F5EC9C3558BEC56F7
:105D10008B76068B5E048B47068B57048944068975
:105D20005404C706CA860000C7062787FFFF8B44B6
:105D3000068B5404A30A87891608879AC3C100D02A
:105D4000833E2587FF750A834404FE83540600EBD7
:105D5000D7A12587014404835406005E5DC35657CE
:105D60008B3EAA888BF783C6026A089A700000D01F
:105D7000593D0100751B837C010074118A44075052
:105D8000FF7401E81F0083C4048AD0EB06B200EB65
:105D900002B20280FAFF7405885514EB05900EE8F4
:105DA00022C05F5EC3C80600005657C646FF00C645
:105DB00046FE00C646FD00B90400C746FAF083BEA1
:105DC000AC818B3EA0888364021F806402EF8064F4
:105DD00002F7806402F8804C0205C70400008A467E
:105DE00006B4002507003D0500740C806402F880AD
:105DF0004C0205C646FE018A4606B400A91000758D
:105E00003F8A4606B400A908007535F705010074FD
:105E100004804C0210F7050200740 4804C020880D4
:105E2000BD2C0200750 8806402EF806402F78B8548
:105E3000AB01C1E0038B95AF01C1E20303C289044A
:105E4000F70510007465F6460610742EF70501007C
:105E50007416804C021083BDAB0100741D8B85ABA2
:105E600001C1E00303C8EB128A4606B400A908008A
:105E70007508C646FE01C646FD01F6460608742FA3
:105E8000F7050200742180BD2C0200741A804C02B8
:105E90000883BDAF010074178B85AF01C1E0030318
:105EA000C8804C0208EB08C646FD01C646FE013B11
:105EB0004E047303894E04837E0400747A833C008D
:105EC00075078BC12D040089048B5EFAC647050057
:105ED000C747030000C74706AC818C5F08C7470A65
:105EE00004009A30D700D0BA04008A4402C1E80402
:105EF0002501003D0100750E83BDAB010074075202
:105F0000E86C00598BD08A4402C1E8032501003DAA
:105F10000100750C83BDAF0100740552E8CE005935
:105F20006A00FF7604 6A006A00E8750783C4080BFC
:105F3000C07404B0FFEB34807EFE00742B8B36AA55
:105F400088C644171CF7051000740C807EFD007590
:105F500006C6441601EB04C6441600804C4E019060
:105F60000EE859BDC646FF028A46FF5F5EC9C3C838
:105F70000A00005657BEF0838B3EA088C646F80044
```

```
:105F8000C646F900C646FA00C646FB00C646FC00F7
:105F9000C646FD00C646FE00C646FF008B85AB0127
:105FA0008946F68BBDAD0183C704EB348D46F850AE
:105FB000579A8AD900D083C404C64405008B46048E
:105FC0008944038D46F88944068C5C08C7440A0856
:105FD000009A6CD700D083C70483460408FF4EF6AE
:105FE000837EF60075C68B46045F5EC9C3C80A008F
:105FF000005657BEF0838B3EA088C646F800C646C2
:10600000F900C646FA00C646FB00C646FC00C64676
:10601000FD00C646FE00C646FF008B85AF018946DF
:10602000F68BBDB10183C70AEB348D46F850579A01
:106030008AD900D083C404C64405008B4604894431
:10604000038D46F88944068C5C08C7440A08009A08
:106050006CD700D083C70883460408FF4EF6837EC2
:10606000F60075C65F5EC9C3568B36AA88BB0400AE
:10607000BA3F048BC34803D06A0C5352E8300883FC
:10608000C4060BC07510C70641040000C7063F04D4
:106090000000C64414005EC3C80800005657C64638
:1060A000FF00A1AA888946F88D7EFA8B76F883C610
:1060B000028A4404B4008A5405B60003C28A540616
:1060C000B60003C28A5407B60003C27403E9820013
:1060D0008A540880E2070AD2740580FA02756F8A32
:1060E000440188058A44028845018A4403884502A0
:1060F000C64503008B46FA0B46FC746C837EFC108D
:10610000774675068 37EFA04773E0AD2750C8D4673
:10611000FA50E86000590BC075578B46FA0B46FCE5
:1061200074468 37EFC107720750 6837EFA0077180C
:10613000FF76FCFF76FA6A006A00900EE8B00483EE
:10614000C4080BC07422EB296A06EB12EBFA6A0151
:10615000EB0C807C070074046A02EB026A03900E69
:10616000E8E6BC59C646FF028B5EF88A46FF8847C0
:10617000145F5EC9C3C804000056578B7E04A1AAF1
:10618000888946FCBEAC81837D0200721577058349
:106190003D04760EC746FE0400832D04835D020095
:1061A000EB108A05B4008946FEC745020000C7050A
:1061B00000006A0DFF76FE56900EE8D90783C406EC
:1061C0008BC80BC0752C33D23B56FE73258BDA80FF
:1061D000380074188A005053900EE812BC83C4042F
:1061E0008B5EFCC6471402B91000EB06423B56FE1C
:1061F00072DB8BC15F5EC9C3C80800005657C64634
:10620000FF00A1AA888946F88D7EFA8B76F883C6AE
:10621000028A4404B4008A5405B60003C28A5406B4
:10622000B60003C28A5407B60003C27403E9CE0065
:106230008A540880E2070AD2740D80FA027408803A
:10624000FA037403E9B3008A440188058A4402888A
:1062500045018A4403884502C64503008B46FA0B74
:1062600046FC7503E9AD00837EFC1072127706834D
:106270007EFA04760AC746FC1000C746FA04000AF4
:10628000D275316A008D46FA50E8950083C4040B3C
:10629000C07403E987008B46FA0B46FC7476FF76E0
:1062A000FCFF76FA6A006A00E8F60383C4080BC0B4
```

```
:1062B0007462EB6980FA03751368FF008D46FA502B
:1062C000E85E0083C4040BC0744AEB51837EFC106B
:1062D00072127706837EFA00760AC746FC1000C762
:1062E00046FA0000FF76FCFF76FA6A006A00E8B022
:1062F0000383C4080BC0741CEB236A01EB0C807C85
:10630000070074046A02EB026A03900EE83ABB5974
:10631000C646FF028B5EF88A46FF8847145F5EC957
:10632000C3558BEC56578B7E04BEAC81837D020037
:1063300072137705833D04760CBA0400832D048321
:106340005D0200EB0B8B15C745020000C70500007E
:106350008A46068804C6440110C6440200C64403A7
:10636000006A0D5256E8470583C4065F5E5DC3C8E8
:1063700000200005657C646FF008B36AA889A0000D6
:1063800000D00BC07503E958018B3EAA8883C70271
:10639000F6058074768B45062500FF3D0001746B81
:1063A0008B45062500FF3D005C74608B450625008B
:1063B000FF3D006874558B45062500FF3D001274B3
:1063C0004A8B45062500FF3D000F743F8B4506258F
:1063D00000FF3D000874348B45062500FF3D002971
:1063E00074298B45062500E03D0020741EC6441626
:1063F00005C6441724C7444F0900C6445180C6440B
:106400004E1D900EE8B6B8C646FF02807EFF0074AF
:1064100003E9C6008B4506A303818B4504A30181D4
:10642000813E0381927575518B1EAA88F6470A0139
:106430007403E8BA008B1EAA88F6470A027407C6DE
:1064400006440401EB05C6064404008B1EAA88F628
:10645000470A047407C606450401EB05C606450451
:10646000008B1EAA88F6470A087407C60643040173
:10647000EB68C606430400EB61A04504B4000BC002
:10648000750FC6441605C6441720900EE82EB8EBCB
:106490002D8B1EAA88807F0A007419C6441605C673
:1064A000441724C7444F01008A470A884451C64410
:1064B0004E1DEBD69A000006EF3D01007406C6465D
:1064C000FF02EB16F6058074116A0C6A02680681F9
:1064D000E8DC0383C4060BC075119A520000D0EBB0
:1064E00004C646FF028A46FF8844145F5EC9C3C8DB
:1064F0000400005657C646FF00A1AA888946FCC77B
:10650000060381005D9A000006EF3D01007406C697
:1065100046FF02EB239A1E0206EF5657BE58D6BF1F
:10652000CE82061EB800118EC0B800E08ED88B0E49
:1065300004DBF3A41F075F5E8B5EFC8A46FF88477F
:10654000145F5EC9C3C804000056578B3EAA888BEF
:10655000363B04C746FE0004EB0DFF4EFE468BC6DD
:106560003D0004720233F680BC390000750683 7E5C
:10657000FE0075E68A46FEB400C1E0088B56FEC1F7
:10658000EA08B60003C28946FC6A0D6A028D46FC21
:1065900050E81B0383C4060BC07550837EFE007455
:1065A000418BC60346FE3D000476226A0DB8000406
:1065B0002BC6508BC605390050E8F30283C4060B86
:1065C000C07528B800042BC62946FE33F66A0DFFB5
:1065D00076FE8BC605390050E8D40283C4060BC092
```

```
:1065E00075099A00EE00D0C64514005F5EC9C3C8A5
:1065F00002000056578B36AA88C646FF01900EE867
:1066000030BD8BF80BC07403E98200802652F0FD88
:10661000C60648F030C60642F010A01084B4008BC5
:10662000D88A87A288A243F0FF760CFF760AFF760D
:10663000088A460650E8430183C408C60652F000A3
:106640008D46FF50E8B701598BF8F60646F02074E6
:106650002EC60646F020807EFF007411FE4EFFC657
:10666000061F8403900EE876CD0BC0749EC64416B8
:106670000BC6441747900EE843B6BF0500EB0E83E8
:10668000FF0E74870BFF7405900EE837B70BFF748D
:106690000557E83D0459C60643F0008BC75F5EC945
:1066A000CBC802000056578B36AA88C646FF019019
:1066B0000EE87EBC8BF80BC07403E9AA008026525A
:1066C000F0FDC60648F030C60642F012A01084B4B1
:1066D000008BD88A87A288A243F0FF760AFF76084B
:1066E000FF76068A460450E8910083C408C6065225
:1066F000F0088D46FF50E80501598BF8F60646F084
:106700001074 1BC6441604C6441744C6441895901A
:106710000EE8A9B5C6061B8495BF0200EB49F60634
:1067200046F0207431C60646F020807EFF007414C7
:10673000FE4EFFC6061F8403900EE8A2CC0BC07568
:1067400003E979FFC644160BC6441747900EE86C60
:10675000B5BF0500EB1183FF0E7503E95FFF0BFF6B
:106760007405900EE85DB60BFF740557E863035996
:10677000C60643F0008BC75F5EC9C3C8040000565D
:106780008A560488165CF08D76068A4401A25BF076
:106790008A04A25AF08AC2B400C1E010998956FE58
:1067A0008946FC8B46060146FC8356FE008B460A52
:1067B0008B56080156FC1146FE836EFC01835EFE7B
:1067C000008D76FC8A4402A25FF08A4401A25EF04A
:1067D0008A04A25DF05EC9C3C8040000568D76FC31
:1067E000A05AF08804A05BF0884401A05CF08844C3
:1067F00002C64403008B56FE8B46FC5EC9C3C80C20
:1068000000000056578B36AA88C746FE0000E8C8FF2E
:106810008956FA8946F8C746FC000033FF800E52BD
:10682000F002832666FFDFEB75F60642F040741334
:10683000900EE8F807FF7604900EE8A4C95989463F
:10684000FEEB65F70666FF20007453832666FFDFC4
:10685000FF46FC8B46FC3DE8037243C746FC000044
:1068600047E874FF8956F68946F43B56FA75053BAE
:1068700046F8741033FF8B46F68B56F48946FA8936
:1068800056F8EB1A83FF037215802652F0FDC746B7
:10689000FE0400C644190B814C2A8400EB0AA05266
:1068A000F0B400A9020075818B46FE5F5EC9C3C8C3
:1068B00006000056578B76048976FEC646FD018B8E
:1068C00046068946FA900EE868BA8BF80BC0740346
:1068D000E9AF00C60642F012A01084B4008BD88A3B
:1068E00087A288A243F0800E51F010802651F0EF6D
:1068F000C60648F010E98100837E060F7608B10FC6
:10690000836E060FEB088A4E06C7460600000807E9F
```

```
:10691000080D751533D2EB078A04A24AF046428A65
:10692000C1B4003BC277F1EB1333D2EB078A04A268
:106930004AF04E428AC1B4003BC277F18AC1C0E03E
:10694000040C0C50E8FDB759C60648F010F6064294
:10695000F04074258D46FD50900EE884C8598BF8A0
:106960000BC0741583FF0E7519C60642F0128B76A4
:10697000FE8B46FA89460633FF837E06007403E9E0
:1069800076FF0BFF740557E8480159C60643F0002F
:106990008BC75F5EC9C3C808000056578B7606C612
:1069A00046FF018976FC8B46088946F8900EE881FF
:1069B000B98BF80BC07403E90401C60642F010A0BD
:1069C0001084B4008BD88A87A288A243F0800E512D
:1069D000F010802651F0EFE9DB00C60648F0108386
:1069E0007E080F760AC646FB0F836E080FEB0B8AF4
:1069F00046088846FBC7460800008A46FBC0E004FC
:106A00000C0450E83EB759807E0A0D751633D2EB60
:106A100007A04AF0880446428A46FBB4003BC2778E
:106A2000F0EB1433D2EB07A04AF088044E428A46BA
:106A3000FBB4003BC277F0F60646F020744B8B3671
:106A4000AA88C60646F0208A46FFFE4EFF0AC0749A
:106A500026F64411807420C6061F8403900EE87E3B
:106A6000C98BF80BC075108B76FC8B46F8894608ED
:106A7000C60642F010EB3EC644190BC6441A4790B6
:106A80000EE839B2BF0500EB35F60642F04074253A
:106A90008D46FF50900EE848C7598BF80BC074150F
:106AA00083FF0E7519C60642F0108B76FC8B46F8F4
:106AB00089460833FF837E08007403E91CFF0BFF3F
:106AC000740557E80C0059C60643F0008BC75F5E9B
:106AD000C9CB558BEC568B36AA888B46043D0400F7
:106AE00074103D0A007507F7442A80007504C644F7
:106AF00014025E5DC3000000000000000000000002
:106B0000C80000009C60807E06167403EB7A90FA41
:106B1000061E8B7E0868001107BEEC8DB91C00FCB8
:106B2000F3A46800111F8B460AA3048E58A3FA8DA4
:106B300058A3FC8D61891EEC8D8BC1A3EE8D891647
:106B4000F08D893EF28D8936F48D58A3FE8D58A3C1
:106B5000F68D8BE858A3008E58A3028E8926F88DF7
:106B6000C706068E0100F70628FF40007405830E55
:106B7000068E02832628FFBFB82100FF36FE8DFF58
:106B800036028EFF36008ECF807E062C750AFA8381
:106B90002628FFBF619DC9CB807E0642752EFAFF75
:106BA00036068E061E078B7608BFEC8DB91C00FCDE
:106BB000F3A40758A90100740F830E28FF40A9020F
:106BC000007505832628FFBF619DC9CB807E064DD9
:106BD000750AFA832628FFBF619DC9CBFA830E2868
:106BE000FF40FF36FA8D07BEDD8D8B3E048EB9085F
:106BF00000F3A48B26F88DFF36FE8DFF36028EFF44
:106C000036008E8B1EEC8D8B0EEE8D8B16F08D8BE1
:106C10003EF28D8B36F48D8B2EF68DFF36FA8DFF7E
:106C200036FC8D071FB80B00CF50551E6800111F92
:106C3000803639F001803639F001833E2CFF4075F3
```

```
:106C40000989263D0483063D0406C60679F01F0E19
:106C5000E88AA80EE8AFA8833E0A8E00740AFF1ED9
:106C6000088EC7060A8E0000A01AF1A2E08DA01AB5
:106C7000F0A2E18D9AB00100D0802639F0FF802685
:106C800020F140800E22F1BF8B2E3D048B4600A3E5
:106C9000118E8B4602A3138E8B4604A3158EC74616
:106CA0000200E0C74600B26CC70622FF00801F5DED
:106CB00058CFFA6A466A436A4960061E6800111F87
:106CC000A003F12480508926 0F8EC6060C8E00C6C4
:106CD000060D8E00C6060E8E00C606DD8D01C706A7
:106CE000DE8D0000C606E58D00C706E68D0000C7F4
:106CF00006E88D0000680000 6838005F0726C705B9
:106D0000AD6D68001107EB0E90FA68001168001174
:106D10001F078B260F8EFCFB9AA7342BF2FA06680E
:106D200000000 6838005F0726C705296C07F70606CC
:106D30008E010074076A370EE8C5FDF40EE8CD99A0
:106D40003D0000743D8BF08A1EDD8D885C098B1E32
:106D5000DE8D895C0A8A1EE08D885C0C8A1EE18DBE
:106D6000885C0D8A1EE28D885C0E8A1EE38D885C2D
:106D70000F8A1EE48D885C10A1FE80BB0D000EE81A
:106D8000D69A8B2E0F8EA1118E894616A1138E894D
:106D90004618A1158E89461A58A8807407800E03DC
:106DA000F180EB05802603F17F1F0761CF50551E50
:106DB0006800111F833E2CFF40750989263D04831E
:106DC000063D04068B2E3D04C74600096DC74602EA
:106DD00000E0C70622FF00801F5D58CFC8000000FA
:106DE0009CFAFF76068F060A8EFF76088F06088EBD
:106DF0009DC9CB9CFAC7060A8E00009DCB000000FF
:106E000060061EB800118EC08ED8833E2CFF207500
:106E10000989263D0483063D0414FB8A1646F08A40
:106E20003648F08A3E42F08AC2243F080646F008FF
:106E30003648F0F6C2017403E98726F6C6017403EA
:106E4000EB5090F6C2027508F6C6107434EB6D90E4
:106E50000EE8D901905250B81681500EE882C383D3
:106E6000C4025E5FC60648F010500EE89F983D00D1
:106E7000008BF0587409C644090C88440AEB4CEBAB
:106E8000630EE888983D000074F58BF0C644090E47
:106E9000EB39F6C7107502EB4BFF36AA888F06193F
:106EA0008EB800E0BA1A700EE81EB1FF36198E8F48
:106EB00006AA88803E188E00742AEB940EE84D983E
:106EC0003D0000741F8BF0C644090B8B3EA088F771
:106ED0000540007505B80100EB03B80400BB0800CD
:106EE0000EE8D599C70622FF00801F0761CF600614
:106EF0001EB800118EC08ED8833E2CFF20750989E4
:106F0000263D0483063D0414FB8A1646F08A364863
:106F1000F08A3E42F080E23F881646F0883648F01C
:106F2000F6C2017403E99A25F6C601742CF6C7105F
:106F30007503E9DB00FF36AA888F06198EB800E0DA
:106F4000BA1A700EE882B0FF36198E8F06AA8880B2
:106F50003E188E007508E9B700F6C202744A0EE8C2
:106F6000CB00905250 8A1646F0881646F052B8165A
```

```
:106F700081500EE86BC283C4025A5E5FF6C2207471
:106F80000CB00DC60648F010EB36E98300C6064883
:106F9000F010500EE876973D00008BF05874EBC669
:106FA00044090C88440AEB4FF6C6107425C6064700
:106FB000F001C60649F001B00BF6C2207402B00D14
:106FC000500EE848973D00008BF058744388440900
:106FD000EB25F6C22074110EE832973D00007430A4
:106FE0008BF0C644090DEB0F0EE821973D000074AD
:106FF0001F8BF0C644090E8B3EA088F70540007534
:1070000005B80200EB03B80500BB08000EE848987D
:10701000C70622FF00801F0761CFC606188E003BFF
:1070200006198EF87506C606188E01F9CBFA565762
:107030008B3EA0888B5D068A0E5DF08A2E5EF08BFB
:10704000F18A0E5FF032ED5651F60652F00274539B
:10705000E855002D010083DA003AD1773F3BC67333
:107060003BA25DF088265EF088165FF08A0E5BF02A
:107070008A2E5CF03A0E5BF075F23A2E5CF075ECFD
:107080003A2E5FF072163A0E5EF0761003C383D28A
:1070900000A25DF088265EF088165FF0F60652F0DA
:1070A0000275F95A585F5ECBB000B6008A265BF0D5
:1070B0008A165CF03A265BF075F23A165CF075ECD5
:1070C0005052F7F38BFA5A58F7DF03FB03C783D20A
:1070D00000C3000000000000000000000000000ED
:1070E000C8040000565733F6C746FC0000C7062EFA
:1070F000DAFFFFC70636DA0A00900EE88E920BF62A
:10710000425837C040E741FF706628640000740E9B
:1071100056681E00900EE8F72483C404EB098936F4
:107120002EDA900EE85796832628FFBFFB900EE8D4
:10713000F6978BF00BC074C6F706628640007405A4
:10714000B80400EB03B801008BF8837C040D7406CF
:10715000807C08047555900EE8C808837C040D7582
:107160000F6A0D566A00900EE8169783C406EB1559
:10717000C7062EDA0000893630DAC70636DA08008C
:10718000900EE8079233F6837EFC0074168B5EFC4B
:10719000FF7704536A00900EE84E9783C406832657
:1071A000DF86FB830EDF8620E94502837C040774BB
:1071B00009837C040E7403E994018B440B8946FE19
:1071C000A3AA88803E1B840074168B5EFE807F0B12
:1071D00003740D807F0BE07307C6471402E9220297
:1071E000FF76FEE8EFA8590BC07503E910FF8A444B
:1071F00008A20984B4008BD883FB077603E9270132
:10720000D1E32EFFA76F74900EE81708830EDF8678
:10721000206A07566A00900EE8669683C40633F625
:10722000E9D201C6062F00F88B5EFE8A470BA2301A
:10723000006A02682F009A6BEE00D083C404E86FE6
:10724000B88BF80BC07405FFD7E9FC01FF76FEE8A8
:10725000A9A959E9F201C6062F00F88B5EFE8A47FC
:107260000BA230006A02682F009A6BEE00D083C434
:1072700004900EE832B00BC07403E981FEE8760793
:10728000F706DF86080074128976FC33F6900EE864
:1072900091078 30EDF8604E964FE900EE88407E818
```

```
:1072A000A0B83D01007558FF76FE900EE8BB24594A
:1072B0000BC07503E9DD00569A422900D0593D0103
:1072C000007403E93C01E882040BC07407830EDFFD
:1072D0008610EB058326DF86EFF706628640007492
:1072E0000F56681E00900EE8262383C404E92EFF83
:1072F00089362EDA900EE88594E922FFE90301A091
:107300000A84B4008B5EFE89474FA00C84884751E5
:10731000807F17217507804F4E35E91F018B5EFE78
:10732000804F4E1DE91501C6062F00F88B5EFE8AC0
:10733000470BA230006A02682F009A6BEE00D083E0
:10734000C404C6061B8481C6440900E9B0FD837CE1
:1073500040A7403E9FB00F706DF8602007403E900
:107360009CFD8326DF86F756E81B0259F706DF8669
:1073700004007503E987FD8326DF86FBE8C3B73D7C
:1073800001007403E98100FF76FE900EE8DB2359CB
:107390000BC0750A8B5EFEC6471402E960FDFF76DE
:1073A000FC9A422900D0593D01007556E89C030B18
:1073B000C07407830EDF8610EB058326DF86EF831C
:1073C00026DF86FBF706628640007 40E56681E00B4
:1073D000900EE83B2283C404EB0989362EDA900E26
:1073E000E89B9333F68B46FCA32EDA900EE88E933F
:1073F000C746FC0000893E2EDAC70636DA0900E9E6
:10740000F7FCE88CA7E9F6FCA00A84B4008B5EFECA
:1074100089474FA00C84884751807F1721750680CB
:107420004F4E35EB078B5EFE804F4E1D8B46FCA307
:107430002EDA900EE84793C746FC0000900EE87CD9
:10744000A88B5EFEC6471402FF76FEE843A759E903
:10745000ACFCC6061B848B900EE8C705C7062EDA67
:10746000FFFFC70636DA0F00E98EFC5F5EC9C3076F
:1074700072237256720772277327730772077256 48
:107480008B36AA88C60647F001C60649F00156E8C1
:10749000FFA659C706FE800600C7062EDA0600C7FB
:1074A0000636DA0900900EE8E28EF70662864000A2
:1074B0007408C706FE800400EB06C706FE800100C4
:1074C000F706DF86200074106A006A06E8B20483BB
:1074D000C404B81600E9AC00F706DF861000740B90
:1074E0009AD03800D0B81700E99900804C2C508110
:1074F00026CA86FFFBC706A5860000C706A386002E
:1075000000C706A9860000C706A7860000C706C0F8
:10751000860000C706C4860000C706C2860000C7F2
:1075200006B6860100C706B8860100C606168101A8
:10753000900EE8EEE0A20487F70662864000752010
:10754000900EE81EE08AD0F6C2017507B400A908C3
:1075500007504B201EB02B200529AFA2B00D05926
:10756000C706DF860000A02883B400A901007511BA
:1075700807C0B087406807C0B2875059AD401006A
:10758000D0B818005ECBC8060000568B7604807C0D
:1075900009157403E98F00A1EF86A3C086900EE859
:1075A00081E0A20487833EED86007503E96E01F752
:1075B00006DF8604007403E96301A1E7868B16E504
:1075C00086A30A8789160887A1ED86A32787A1E7E6
```

```
:1075D000868B16E586A300878916FE8633D2830E36
:1075E000DF8602F706628640007503E926018D46B4
:1075F000FB508D46FC506A009A889C00D083C406DC
:107600003D01007403E94001FF36A586FF36A386DD
:10761000FF740B6A009A2F6800D083C408E9280120
:10762000E9F100E9F700807C09137577A1EF86A3E3
:10763000C086A00487FE0E04870AC0745CF706DFCC
:1076400086040075 54A1E7868B16E586A30A878910
:10765000160887C70627870100A1E7868B16E586EF
:10766000A300878916FE86BA0100830EDF8602F723
:1076700006628640007503E99A008D46FB508D46F0
:10768000FC506A009A889C00D083C4063D010074B7
:1076900003E9B400E971FFEB7B900EE885DFA204FB
:1076A00087EB7A807C0914757B833EED8600746DD0
:1076B000803E0487007466A1DF86F7D81BC040A90E
:1076C000040074599AAF4000D0A1E7868B16E58676
:1076D000A30A8789160887A1ED86A32787A1E786D5
:1076E0008B16E586A300878916FE8633D2830EDFCC
:1076F0008602F706628640007 41A8D46FB508D465E
:10770000FC506A009A889C00D083C4063D01007535
:1077100037E9F4FE529A0E3800D059EB2B900EE860
:10772000 0103EB24C6061B848A89362EDA900EE804
:1077300 4C90900EE8EC02C7062EDAFFFC7063623
:10774000DA0F00900EE8448C5EC9C3C80E000056E4
:10775000F706CA8641007403E92102A10A878B1645
:1077600008873B06E3867303E9110275093B16E1BE
:1077700 0867303E90602A1E3868B16E1860316EF02
:1077800 861500003B060A877303E9EF0177093B82
:1077900 1608877703E9E401A10A878B1608870397
:1077A000162787 5000083EA011D00008946FA8923
:1077B00056F8A1E3868B16E1860316EF86150000C6
:1077C00083EA011D00008946FE8956FC8B46FC2B8E
:1077D00006088740A3C086A127873B06C08673039F
:1077E000A3C086A12787A3B2868B1E688633C98B68
:1077F000160A87A108872B06E1861B16E3869AB82E
:10780000004CF88B1EEB868B0EE98603C813DA89D1
:10781000 EA986890EA786A19D868B169B8683C28C
:1078200001150000505253519A24004CF88916A9B2
:1078300086A3A7868B46FA8B56F83B46FE720F77D7
:10784000053B56FC76088B76F82B76FCEB0233F67C
:107850000BF67503E90E018B1E278733C92BDE83D8
:10786000D900A1688633D29AB8004CF88B1EA9863D
:1078700 8B0EA78603C813DA891EA586890EA386F8
:10788000A19D868B169B8683C20115000050525322
:1078900 519A24004CF88916A586A3A3868936B090
:1078A000868936B486A127872BC68B1695862BD062
:1078B00089169186A19186A3938689362787 B4660
:1078C000FE8B56FC83C201150000A30A87891608A7
:1078D000878126DF861CFF9AD40100D0F7066286D6
:1078E0004000744 833E918600750 810ECA860070
:1078F00010EB728D46F3508D46F4506A009A889CC6
```

```
:1079000000D083C4063D01007572FF36A586FF36A0
:10791000A386FF36AA886A009A2F6800D083C4081D
:10792000EB43EB58900EE83ADC8AD0F6C2017507BB
:10793000B400A908007504B201EB02B200529AFA31
:107940002B00D059833E91860074A0830EDF8640C1
:10795000900EE8CEDCA204876A009A0E3800D05957
:107960003D010075178126CA86FFFBC706C4860045
:1079700000C706C2860000B80100EB0233C05EC932
:10798000C3558BEC5657FA8B4606A300008B460472
:10799000A32EDA900EE8128E8BF8EB4F8B4604A3E1
:1079A0002EDA900EE8638E8BF0837C0407740683D6
:1079B0007C040D75178B4606A32EDA893630DAC79C
:1079C0000636DA0500900EE8C289EB1FF7066286DC
:1079D0004000740E56681E00900EE8331C83C404E9
:1079E000EB0989362EDA900EE8938D837D180075A9
:1079F000ABFB5F5E5DC3F706DF860200741FFA8390
:107A00000EDF8604FB68A861900EE8901A59F7060D
:107A1000DF860200740C8326DF86F9EB058326DF00
:107A200086FBC3FA802603F17F6A00900EE88B1E66
:107A300059C60679F01F900EE8A29A9AB00100D0BC
:107A4000C60647F001C60649F001C6067DF0FFC62E
:107A50000622F0FF800E10F104C60620F100C606D3
:107A600021F100C60622F1FFC60623F1FF8326DFBF
:107A700086FDFBCB000000000000000000000000BD
:107A8000C8060000056578B36AA88C646FF02C7466E
:107A9000FCF480C746FAF8808B3EAA8883C7069A12
:107AA000000000D00BC07503E97B018A05C1E8071F
:107AB0002501000BC0750C8A05C1E8062501000BE5
:107AC000C0740B6A05900EE87FA359E958018A45F6
:107AD00002B400C1E0068A550383E23F03D03B169F
:107AE000288876046A03EBDD6A079A700000D05993
:107AF0000BC07503E92F01F7068D860020750780FE
:107B00003E3A8800750FC6441607C6441727804CB6
:107B10004E01E9C5000EE86A08900AC07403E90541
:107B200001900EE882A70BC07408900EE895A2E9B8
:107B3000F400560EE8DB1590593D01007403E9E5A9
:107B400000803EDC830074186A00FF3664866A1089
:107B50006A009A0D004CF8509A34D900D059EB12B3
:107B60008B5EFCFF370EE8910990590AC07403E957
:107B7000B40057E8B70B590EE8E216909A1CE000E3
:107B8000D08B5EFA8A4702B4002520003D010074C4
:107B90001D0EE8B800900AC07414C7062EDAFFFF65
:107BA000C70636DA0F00900EE8E187EB79908B5E1E
:107BB000FA8A4702244050E83A1459900EE8371BDD
:107BC0003D0100750D9AFF1B2BF2F706628610002F
:107BD000750FC6441603C6441700900EE8DEA0EBEE
:107BE000458B5EFAF64702017438F647020174329B
:107BF000813EA3086EDE742A56E81211593D010039
:107C00007517900EE8181B3D01007416C644160344
:107C1000C6441700900EE8A4A0560EE8F41490E9AC
:107C2000A8FEC646FF009A520000D08A46FF88444C
```

```
:107C3000145F5EC9C38B1EAA88F7472AF438740AFA
:107C4000900EE87FA1B80400EB0233C0C35657BFC3
:107C5000F8808B36AA8883C6069A0CDA00D0803E5C
:107C600024870174078O3E248702753D8A04C1E899
:107C7000072501000BC075246A04E85500593D0131
:107C8000007404B002EB48F6450240740E803EA237
:107C900008007508E8B4013D010075E76A08E8319D
:107CA00000593D01007426EBDA6A04E82400593DCE
:107CB000010075CFF64502407408E88E013D0100D1
:107CC00075C16A08E80B00593D010075B6B0005F48
:107CD0005ECBC80E00005657C746FEF8806A00FF0C
:107CE0003664866A106A009A0D004CF88BF0BF016A
:107CF00000803E2487017407803E2487027503BEFE
:107D0000FF008B5EFEF64702407407803EA208002B
:107D10007407803E36900175238326CA86EEC746D7
:107D2000FA0000C746F80000A122888B1620888937
:107D300046F68956F4C646F316E9F6008326CA8647
:107D4000EF830ECA8601A18B86C746FA00008946DA
:107D5000F8C746F60000C746F40000C646FD00EB33
:107D6000448A46FDB4006BC00E8BD88B8F2F878B57
:107D7000872D878A56FDB6006BD20E8BDA038731CA
:107D800087138F33878A56FDB6006BD20E8BDA507D
:107D90008B87358733D25B9AB8004CF80146F411D3
:107DA00056F6FE46FD8A46FDB4006BC00E8BD883A6
:107DB000BF3587007406807EFD0A75A5C646F30BA5
:107DC000EB7033C03B46F6771072053B76F47309CF
:107DD0002976F4835EF600EB0D8B76F4C746F60049
:107DE00000C746F40000837E0404751EC706A586FE
:107DF0000000C706A38600008A46F3506A0056FFBB
:107E000076FAFF76F8E83001EB1CC706A58600007D
:107E1000C706A38600008A46F3506A0056FF76FA2A
:107E2000FF76F8E8650383C40A8BF80176F8835679
:107E3000FA008B46F40B46F6740583FF017483C782
:107E400006CA8600008BC75F5EC9C3C81000005613
:107E500057B90100C646F121FAA1FE808946F28B8E
:107E60001E34DA8B07A3FE80A128FF8946FC830E0F
:107E700028FF01FB830ECA8601C646FF008A46FF23
:107E8000B4006BC00E8BD88BBF3587A18B86C746DD
:107E9000F600008946F433F6EB778A46FFB4006BB0
:107EA000C00E8BD88B872F878B972D870156F411A7
:107EB00046F68A46FFB4006BC00E8BD88B8733879B
:107EC0008B9731878946FA8956F8C706A586000040
:107ED000C706A38600008A46F150FF76FA52FF7665
:107EE000F6FF76F4E8510083C40A8BC88B46FA8B00
:107EF00056F80156F41146F64F8BC70BC07511FEAC
:107F000046FF8A46FFB4006BC00E8BD88BBF358707
:107F10004683F90175093B361E887303E97BFF83AD
:107F200026CA86FEFA8B46F2A3FE808B46FCA32867
:107F3000FFFB8BC15F5EC9C3C81400005657C7461C
:107F4000FAFFFFC746F8FFFFC746F00100A1A5866C
:107F50008B16A3868946F48956F2E90602E8D5FC19
```

```
:107F60003D0400750533C0E90D028B46068B5604AF
:107F7000A30A87891608878B4608A327878B46F4B0
:107F80008B56F2A3A5868916A3868326CA86F1831B
:107F90000ECA8602803E2487017407803E24870231
:107FA00075079A512D06EFEB03E8BB0D8BF88B3666
:107FB000BE86897EECB90400BB7B812E8B073B46D5
:107FC000EC740783C302E2F3EB4E2EFF6708EB4825
:107FD0008B46068B560403D61500008946FE89564B
:107FE000FC3B46FA75053B56F8741A900EE861D7CB
:107FF0008846EFA079838846F78B46FE8B56FC892E
:1080000046FA8956F881FFE9037505FE4EF7EB083D
:10801000FE4EEFEB03E9A2000BF67503E9A3008324
:1080200026CA86F1830ECA86048B46068B5604A3A5
:108030000A8789160887893627878B46F48B56F27C
:10804000A3A5868916A386803E2487017407803EF7
:1080500024870275079A512D06EFEB03E8080D8B74
:10806000F88B36BE868BC70BC0744F3D0200740779
:108070003DE9037402EB4B8B46068B560403D61581
:1080800000008946FE8956FC3B46FA75053B56F8CA
:108090007418A0D6828846EFA079838846F78B466D
:1080A000FE8B56FC8946FA8956F881FFE90375056F
:1080B000FE4EF7EB0DFE4EEFEB08C746F00000E971
:1080C000A100297608835E0A000176048356060023
:1080D0008BC6F72E64860146F28356F400837EFA3F
:1080E000FF7509837EF8FF7503EB7890807EEF00C3
:1080F0007C06807EF7007D6B8A460CB4003D0B0049
:1081000074163D160074073D21007433EB4B9A7AC8
:10811000E900D08946F0EB41C706278701009AC3E2
:10812000C100D0A118878B161687A31D8789161B3F
:1081300087A01A87A21F879A67DA00D08946F08342
:1081400046040183560600836E0801835E0A00A17F
:1081500064860146F28356F400C746FAFFFFC7461D
:10816000F8FFFF837EF001750B8B46080B460A74FF
:1081700003E9E9FD8B46F05F5EC9C300000200E938
:1081800003EE031580D07FD07FD07FC81600005645
:1081900057C746FAFFFFC746F8FFFFBF0100A1A57A
:1081A000868B16A3868946F08956EEE9A301E884FA
:1081B000FA3D0400750533C0E9A8018B46068B56CD
:1081C00004A30A87891608878B4608A32787832676
:1081D000CA86F1830ECA86088B46F08B56EEA3A59D
:1081E000868916A386803E2487017407803E2487F3
:1081F0000275079A792B06EFEB03E83F088BF0A195
:10820000BE868946F68976EAB90700BB67832E8B5E
:10821000073B46EA740883C302E2F3E986002EFFB7
:10822000670EE97F008B46068B56040356F6150051
:1082300000008946FE8956FC3B46FA75053B56F874A4
:108240002AA005838846EDA079838846F3A07A8327
:1082500008846F5A07B838846ECA07D838846F48B16
:1082600046FE8B56FC8946FA8956F881FEE903756D
:1082700003FE4EF381FEEA037503FE4EF581FEEC2C
:1082800037503FE4EEC81FEEB037503FE4EF48393
```

```
:10829000FE02740681FEEE03750AFE4EEDEB053319
:1082A000FFE9AD008B46F6294608835E0A000146C9
:1082B0000483560600F72E64860146EE8356F000CE
:1082C000837EFAFF7509837EF8FF7503E9820080DB
:1082D0007EED007C18807EF3007C12807EF5007CB1
:1082E0000C807EEC007C06807EF4007D648A460C67
:1082F000B4003D0B0074103D16007402EB499A7AED
:10830000E900D08BF8EB40C706278701009AC3C16C
:1083100000D0A118878B161687A31D8789161B8787
:10832000A01A87A21F879A67DA00D08BF8834604C9
:1083300001835606008 36E0801835E0A00A16486ED
:108340000146EE8356F000C746FAFFFFC746F8FF26
:10835000FF83FF01750B8B46080B460A7403E94D3A
:10836000FE8BC75F5EC9C300000200E903EA03EBAE
:1083700003EC03EE039F8225822582258225822538
:10838000822582C80200005657B2008B3EAA88C7D9
:1083900046FEF8808B36AA8883C606C606DC8301B3
:1083A0008A4404C1E8042501000BC0751DF706626C
:1083B000864000744280 3E2487007407C606A208E7
:1083C00001EB34C606369001EB2D803E2487007405
:1083D000266A0C6A0468FB80900EE8B9E583C4063F
:1083E0000BC0740A900EE8DB998A5514EB09FF76EE
:1083F000FEE87F0C598AD08AC25F5EC9CBC80200F2
:1084000000C646FF006A00FF7604FF3664866A00F5
:10841000900EE8DAE183C4080BC07404C646FFFF7F
:108420008A46FFC9C3C80200005657BEF480C6463C
:10843000FF00BFF0836A0C6A0468F780900EE8556D
:10844000E583C4060BC07403E99F00807C030074BD
:1084500016C646FF028A440350FF7604900EE88E4B
:108460009983C404E98C00807C0200751E833C0063
:108470007412C646FF028B04C1E808508B460405FF
:10848000200EB2EC606DC8301EB68807C020175DE
:1084900015833C0074088B043B0664867617C64639
:1084A000FF026A00EBD6C646FF028A4402508B46A2
:1084B000044050EBA76A00FF346A006A00900EE89F
:1084C0002DE183C4080BC07521C7050000C6450215
:1084D00000C745066EDEC7450840008B0489450A83
:1084E0009A60D800D03D01007409900EE8D598C676
:1084F00046FFFF8A46FF5F5EC9C3C80E0000568B69
:108500005E06C646FF00BEF083C746F84000C74679
:10851000F66EDEA164862BC3C746FC00008946FACE
:108520008B46F88B56F603D38946F48956F233C945
:10853000EB13C45EF6268A07C45EF2268807FF4660
:10854000F6FF46F24133C03B46FC72E675053B4EF2
:10855000FA72DFC744030000C6440500C744066E34
:10856000DEC744084000A1648689440AC746FC105F
:1085700000C746FA0000EB2D9A6CD700D00BC074F0
:10858000118B440A014403837C0300750EFE4405ED
:10859000EB09C646FF02E84C0AEB18A1648629469F
:1085A000FA835EFC00837EFC0077CD7506837EFA3D
:1085B0000077C58A46FF5EC9CBC80200005657C681
```

```
:1085C00046FF01C646FE00BFF083BE3F90807E0896
:1085D000007507C7450A0400EB05C7450A0800C730
:1085E000050004C6450200C745063F908C5D086A39
:1085F00000FF76046800046A00900EE8F1DF83C48F
:10860000080BC07403E91A01807E08007403E906B0
:1086100001EB719A4DD800D03D01007403E9E300ED
:108620008B44028B143B066E86773375063B166CC3
:1086300086772B807EFF017512C646FF008B4402B1
:108640008B14A3399089163790EB2E8B44028B1430
:108650003B06399077E775063B16379077DF6A005F
:10866000FF7606900EE8879783C404C646FE02E9AB
:10867000B400EBC9EBE8E98A00830504836E0404C7
:1086800083460604837E04007589E999009A4DD8D3
:1086900000D03D0100756C8B44053B066A8677BEB1
:1086A000807C070075B88A4404B4000BC075458B04
:1086B000043B0666867333837C0200752D807EFF43
:1086C000017511C646FF008B04A337908B4405A3A8
:1086D0003C90EB388B043B06379077EB8B44053BA3
:1086E000063C9077E2E976FFEBDD6A008B460605F3
:1086F0000400EB086A008B460605030050E963FF9F
:10870000E95BFFC646FE02E8DB08EB1A8305088337
:108710006E040883460608837E04007403E96DFF37
:10872000EB04C646FEFF8A46FE5F5EC9C3558BEC6E
:1087300056578B7604BFF8808A45022440FEC0A2BB
:1087400016888A4402B400C1E0068A540383E23FDB
:1087500003D08BF2803E2487007403EB7F900BF6EE
:108760007503BE100089361E88893635876A005623
:108770006A006800089A0D004CF889163387A33107
:10878000876A00566A0868E7D59A0D004CF8891682
:108790002F87A32D87B201EB3B8AC2B4006BC00EBA
:1087A0008BD8C7872F870000C7872D8700008AC214
:1087B000B4006BC00E8BD8C78733870000C78731E2
:1087C0008700008AC2B4006BC00E8BD8C78735877C
:1087D0000000FEC280FA0A75C0E95C020BF674085C
:1087E00083FE107403E9E801C7061E881000C7065F
:1087F0002F870000C7062D8706C1C70633870000F4
:10880000C70631875D00C70635870100C7063D876B
:108810000000C7063B877FCDC70641870000C7061B
:108820003F875D00C70643870100C7064B870000EE
:10883000C70649879BD9C7064F870000C7064D87E3
:108840005D00C70651870100C70659870000C706AB
:108850005787B7E5C7065D870000C7065B875D00E1
:10886000C7065F870100C70667870000C7066587E0
:10887000B4F1C7066B870000C70669877C00C7068E
:108880006D870100C70675870000C7067387D0FD96
:10889000C70679870000C70677877C00C7067B87F5
:1088A0000100C70683870100C7068187EC09C70658
:1088B00087870000C70685877C00C7068987010077
:1088C000C70691870100C7068F870816C7069587D8
:1088D0000000C70693877C00C70697870100C7067C
:1088E0009F870100C7069D872422C706A3870000337
```

```
:1088F000C706A1877C00C706A5870100C706AD870C
:108900000100C706AB87402EC706B1870000C70627
:10891000AF877C00C706B3870100C706BB8701008D
:10892000C706B9873D3AC706BF870000C706BD879F
:108930009B00C706C1870100C706C9870100C7069B
:10894000C7875946C706CD870000C706CB879B005F
:10895000C706CF870100C706D7870100C706D5879E
:108960007552C706DB870000C706D9879B00C7067C
:10897000DD870100C706E5870100C706E387915E32
:10898000C706E9870000C706E7879B00C706EB8795
:108990000100C706F3870100C706F187AD6AC70665
:1089A000F7870000C706F5879B00C706F987010017
:1089B000C70601880100C706FF874D76C7060588F0
:1089C0000000C7060388BA00C70607880100EB68E5
:1089D000C7061E880100C7062F871100C7062D870E
:1089E00049C0C70633870000C70631871D08C70680
:1089F00035870100B201EB3B8AC2B4006BC00E8B1D
:108A0000D8C7872F870000C7872D8700008AC2B488
:108A1000006BC00E8BD8C78733870000C7873187AC
:108A200000008AC2B4006BC00E8BD8C787358700A0
:108A300000FEC280FA0A75C05F5E5DC3C812000006
:108A400056578B3EAA88C706BE860000FA06B800B5
:108A5000008EC026A130008946F626A13200894644
:108A6000F826C70630008B1226C706320000D00752
:108A7000832628FFEFC60620F0CBC60621F0ACC641
:108A8000067EF08AC60612F000900EE874CBC0E0B5
:108A9000048846EF900EE83BCA0046EF8A46EFA2F4
:108AA00026F0900EE8D1CB8846EFA225F0C606311D
:108AB000F000900EE809CBA232F0C60624F063C69F
:108AC0000628F040C60631F001900EE8FFCBA23236
:108AD000F0C60677F002FB830E28FF40EB51C70675
:108AE0002EDA0080900EE8217D8946FE8B5EFE8A9C
:108AF0004709B4008BF00BF6752A832628FFBF8A3E
:108B0000470E8845168A470F8845178A47108845BB
:108B100018900EE8A7918B46FEA32EDA900EE85D22
:108B20007CE9A8018B46FEA32EDA900EE84F7CC7A5
:108B3000062EDA0000900EE8FE7B8946FA837EFA64
:108B40000D749B8D46F2509A569900D0593D010004
:108B5000742A832628FFBF8A46F4508A46F3508A37
:108B600046F2506A02FF360A87FF360887FF36AAA8
:108B7000889A503E00D083C40EE94E01833628FF08
:108B800040C70636DA0C00900EE800788946F08B74
:108B90005EF08B47048946FA8A4709B4008BF08B54
:108BA00046FA3D0A00740B3D0D007503E9C500E966
:108BB00008018B46F0A32EDA900EE8C17B8BDE8392
:108BC000EB0283FB057603E90201D1E32EFFA70246
:108BD0008D68D606900EE8C40859C7062EDA000044
:108BE000900EE8537B8946FA837EFA0D7493BE019A
:108BF00000E9D800A0CC868846FDF646FD807406C4
:108C0000BEEE03E9C600F646FD207406BEE903E9A0
:108C1000BA00F646FD187402EB53F646FD047406DE
```

```
:108C2000BEEC03E9A600C645160BC6451744EB6328
:108C3000F606D086407406E8AB03E98D00BE02005C
:108C4000E98900A0CE868846FDF646FDE47406BE9E
:108C5000EB03EB7890F646FD107405BEED03EB6C6C
:108C6000F646FD0274C0F606CC861074B9BEEA035F
:108C7000EB5AEBB20BF675228B46F08946FE8B5E03
:108C8000FE8A470E8845168A470F8845178A47107F
:108C9000884518900EE82590EB308B46F0A32EDA2D
:108CA000900EE8D97A833EBE86007404FF0EBE861D
:108CB000BE02009A2D0000D0EB12C6061B848B8BDF
:108CC00046F0A32EDA900EE8B47A33F6FA06B8002E
:108CD000008EC08B46F626A330008B46F826A332C2
:108CE0000007830E28FF10C60621F000C6067EF09E
:108CF00000900EE8E787C60622F0C7FB8BC65F5ED2
:108D0000C9C3D18BF48BCC8C438CCC8C308CC804F5
:108D10000000568B7604A1A3088946FCC746FE4096
:108D200000EB30836EFC04C45EFC268B4702268B6E
:108D300017A30A87891608879A7AE900D03D0100AF
:108D40007411C6441603C6441732900EE86E8F3372
:108D5000C0EB11817EFE400075C9817EFC6EDE7520
:108D6000C2B801005EC9C3C810000056578B36AAAE
:108D700088FA06B800008EC026A130008946FA267F
:108D8000A132008946FC26C70630004C1126C706D2
:108D9000320000D007832628FFEFC60620F0CBC69E
:108DA0000621F0A0C6067EF08AC60612F000C606AE
:108DB00024F06CC60628F040900EE870C9C0E004AC
:108DC0008846F1900EE80CC70046F18A46F1A226CB
:108DD000F0C60677F00AF706CA860200740FC606C8
:108DE000D0F008C606DCF003800E12F002FB830E02
:108DF00028FF40EB4CC7062EDA0080900EE80A7A76
:108E00008BF88A4509B4008946F4837EF4007528FE
:108E1000832628FFBF8A450E8844168A450F88445A
:108E2000178A4510884418900EE8918E893E2EDAF4
:108E3000900EE84979E96801893E2EDA900EE83D06
:108E400079C7062EDA0000900EE8EC788946FE839A
:108E50007EFE0D74A0C706BE8600008D46F6509AB1
:108E6000EE9A00D0593D0100742A832628FFBF8A5C
:108E700046F8508A46F7508A46F6506A02FF360A8C
:108E800087FF360887FF36AA889A503E00D083C4F1
:108E90000EE90701832628FFBFC70636DA0C0090CB
:108EA0000EE8E8748946F28B5EF28B47048946FE31
:108EB0008A4709B4008946F48B46FE3D0B00740BCB
:108EC0003D0D007503E97F00E9C0008B46F2A32E3B
:108ED000DA900EE8A8788B5EF483EB0283FB0677CA
:108EE0005BD1E32EFFA7D78F68D606900EE8AD05BD
:108EF00059C7062EDA0000900EE83C788946FE83BA
:108F00007EFE0D7494C746F40100E99300F606CC8A
:108F100086807408C746F4EE03E98400C746F4E986
:108F200003EB7D90F606D086407405E8B700EB6B46
:108F3000C746F40200EB6968A100EB0368900090 5B
:108F40000EE8268F59EB54837EF400751C8B7EF25D
```

```
:108F50008A450E8844168A450F8844178A4510882A
:108F60004418900EE8568DEB328B46F2A32EDA9021
:108F70000EE80A78833EBE86007404FF0EBE86C7E4
:108F800046F402009A2D0000D0EB15C6061B848B18
:108F90008B46F2A32EDA900EE8E377C746F4000082
:108FA000FA06B800008EC08B46FA26A330008B4626
:108FB000FC26A3320007830E28FF10C60622F0C746
:108FC000C606D0F009C606DCF002802612F0FDFBD2
:108FD0008B46F45F5EC9C3E88E3C8F0D8F3C8F37A4
:108FE0008F3C8F248F689500900EE87D8E59C606C1
:108FF0001B8495C3558BEC56C70690880A0AC60693
:109000008F8800807E04007407C6068E8802EB05F8
:10901000C6068E8801A11E88A38C88803E24870006
:1090200074078803E248701752ABE2D878A04A28892
:10903000888A4401A289888A4402A28A88BE31872C
:109040008A04A284888A4401A285888A4402A2866E
:1090500088EB1D33F6EB06C6847C8801463B361E42
:109060008875F4EB06C6847C88004683FE1075F58F
:109070005E5DC3C8020000568B7604C646FF0280C0
:109080007C030074118A4403506A00900EE85F8DDF
:1090900083C404EB7790807C0200744F8A4402B44E
:1090A00000A9840075278A5402F6C280741780E2F2
:1090B000178AC2B400A90400750580CA04EB0380B6
:1090C000E2FB52EB048A4402506A01EBBEF6440212
:1090D000087418C606DC83008B0405040050E844BD
:1090E000F3598846FF807EFF007521833C00741889
:1090F000FF34E808F3598846FF0AC0740F900EE861
:10910000C28CC646FFFFEB04C646FF008A46FF5EE0
:10911000C9C3C810000056578B7E06C746FEF083B1
:10912000C746F00000900EE8E3758BF00BF6751162
:10913000C6451604C6451744C645188033C0E9180D
:10914000018B5EFEC747030000C6470500C7470600
:1091500074888C5F08C7470A1E00C7069088000005
:109160009A30D700D0C70690880A0A83266286CC38
:10917000C646F3008A46F3B4006BC0058BD88B87D4
:1091800079868B9777868946F88956F68A46F3B4AE
:10919000006BC0058BD88A877B86B4008946F45063
:1091A000FF76F852900EE83F0283C4068956FC8988
:1091B00046FAC7441201008B46FC8B56FA894410CC
:1091C00089540E8326CA86EF830ECA8601C64417C9
:1091D00000C6441800C6441900C6440801830E287E
:1091E000FF40576A03FF36FE809AED432BF283C49B
:1091F000063D0100751189362EDA900EE87F7583E1
:109200002628FFBFE935FFC7062EDA03008936306E
:10921000DAC70636DA0300900EE870718BF0832609
:1092200028FFBF807C09017505C746F00100FE4696
:10923000F3807EF3047303E93AFF89362EDA900E49
:10924000E83B75837EF001740DC6451603C64517CD
:109250000900EE8678A8B46F05F5EC9CBC80400B9
:10926000000C746FE4000C746FC0030C45EFC26C670
:10927000070026C64701026C64702026C6470347
```

```
:109280000026C647040026C647050226C647060034
:1092900026C647070126C647080026C647090A26EC
:1092A000C6470A0026C6470B0026C6470C0226C63C
:1092B000470D0126C6470E0026C6470F0026C647A3
:1092C000100026C647110026C647120026C64713BF
:1092D00000C70618880000C7060F880030C7060DB3
:1092E000880000A10F88050400A31A88A31388C76B
:1092F0000611880000A11388050A00A31C88C9CBA9
:10930000E87DE7CB00000000000000000000000046
:10931000C802000056578B56068B4E088BF28956B2
:10932000FE884C088B46128944128B460C8B560AD9
:1093300089441089540E8D7E0E0BC9740583F9047F
:1093400075138A058844148A45018844158A4502A4
:1093500084416EB148A058B5EFE8847178A450100
:1093600008847188A4502884719830E28FF40FF3630
:10937000AA886A03FF36FE809AED432BF283C40667
:109380003D01007506C6440900EB06C7062EDA0348
:1093900000893630DAC70636DA0300900EE8EC6F43
:1093A0008BF0832628FFBF8A4409B4005F5EC9CBD7
:1093B000558BEC568B760C8B46088B5606A30A878A
:1093C00089160887C706278701009AC3C100D08B7A
:1093D0005E0AA118878B16168789470289917A01A7B
:1093E00087B40089045E5DCB558BEC8A460A50FF3A
:1093F0007608FF76069A12A500D083C4065DCBC816
:10940000020000FAA039F08846FFC60679F01F90E6
:109410000EE8F280C6061AF100C6067DF0FFC60609
:1094200022F1BF802611F1FD802620F140C60621E1
:10943000F100E87F7D6A22900EE8CB7959813E6485
:1094400086000475086A10900EE8E77A598A46FF8C
:10945000A239F0FBC9CBC8020000FAA039F0884657
:10946000FFC60679F01F900EE89B80E8377CC606A1
:109470001AF100C6067DF0FFC60622F1BF800E116C
:10948000F102802620F140C60621F1006A11900EFB
:10949000E87479598A46FFA239F0FBC9CB558BECA9
:1094A000C7065EFF0040C70658FF00008B4606A3B4
:1094B0005AFFC7065EFF00C0F7065EFF200074F883
:1094C0005DCBC804000056A1AA888946FCFA803EFC
:1094D000168401750A803E1584007503E9AD00C647
:1094E00006168401C606158400803E1B84007403A2
:1094F000E999009A440000D00BC07503E98D00C7BC
:10950000060381002090A000006EF3D01007403EB82
:109510007B90C746FE01428B46FE85068D86756CA4
:10952000C606158401A011F12402A21484FCC6060B
:1095300019840C606188400C606450400C6064401
:109540000400C6064304009A00EE00D0FF76FCE853
:1095500094995933F683FE04740583FE0575070E4E
:10956000E85F0090EB0489362EDAC70636DA0F0082
:109570009000EE8176E4683FE0772DAEB05C60646C4
:10958000F001A046F0B400A9010075F19A52000064
:10959000D0803E1584007405E8F186EB059A000042
:1095A000FFFF5EC9CB558BEC56571E06609C8B4E59
```

```
:1095B0000EC47E06C5760AFCF3A49D61071F5F5E9C
:1095C0005DCBEB0C52681E000EE844009083C4048F
:1095D000900EE853738BD00BC075E9CB558BEC56CE
:1095E000578B7E0633F63B76087D1E900EE81D7184
:1095F0008BDED1E389018BDED1E38339007504333F
:10960000C0EB09463B76087CE2B801005F5E5DCBAB
:10961000558BEC568B4E068B760833D28BC2D1E03D
:109620008BD903D8833F00750C8BC2D1E08BD90353
:10963000D88937EB0F4283FA077CE189362EDA901E
:109640000EE83A715E5DCBC80200005657FF760CFB
:10965000FF760A0EE83B009083C4048946FE3B4631
:109660000E7E068B460E8946FE601E06FC8B760A31
:109670008B460C8ED88B7E068B46088EC08B4EFE9A
:10968000ACAA0AC07402E2F8071F618B46065F5E4F
:10969000C9CBC802000056C746FE0000601E8B768C
:1096A000068B46088ED833C9FCAC0AC0740341EB64
:1096B000F8894EFE1F618B46FE5EC9CBC8020000D2
:1096C0005657C746FE0000601E068B76068B46087E
:1096D0008ED88B7E0A8B460C8EC08B4E0EF3A674F2
:1096E0000CC746FE01007305C746FEFFFF071F615A
:1096F0008B46FE5F5EC9CBC8040000C646FD006A0B
:10970000008A46FD509A1DCC00D083C4048946FED1
:10971000837EFE037205B80100EB0233C0C9CBC8DB
:1097200002000056C646FF006A028A46FF509A1D94
:10973000CC00D083C4048BF0802603F17F6A000E36
:10974000E87801905983FE02721683FE027507C6FF
:1097500006B88001EB05C606B88000B80100EB072B
:10976000C606B8800133C05EC9CBC8020000568B64
:1097700076068A440BB4008946FEB90600BBC99739
:109780002E8B073B46FE740783C302E2F3EB262EC3
:10979000FF670CF64402C074186A069A700000D085
:1097A000598BD0EB17EB0AEB08F64405107402EB6B
:1097B000E86A08EBE6C6061B848833D20BD2750430
:1097C000C64414028BC25EC9CB080028002E002FAD
:1097D000003E00E800A7979397939793979397A9D4
:1097E00097C8020000568B76068A440BB40089465F
:1097F000FEB90900BB97982E8B073B46FE74088381
:10980000C302E2F3EB7D902EFF6712F64402C074B0
:109810004D6A079A700000D0598BD083FA01756A9F
:10982000F7068D8600207462C6441607C6441727C3
:10983000804C4E01900EE88484EB4DEB21EB1FF63B
:1098400044051074196A079A700000D0598BD083B0
:10985000FA017536F7068D860020742EEBCA6A0968
:109860009A700000D0598BD0EB206A079A700000E4
:10987000D0598BD083FA017511F7068D86002074BC
:1098800009EBA5C6061B848F33D20BD27504C644E0
:1098900014028BC25EC9CB09000A000C002A002CFE
:1098A000002E003F00EA00EC003D983D983D980BEB
:1098B000980B980B980B983F986A98558BEC837E81
:1098C00006017508C706038100050EB06C70603817C
:1098D000000049A000006EF5DCBC80A00005657BC3
```

```
:1098E00036AA888A4404B400C1E0088A5403B6004A
:1098F00003C28BF80BFF7503E987008A4409B400A3
:10990000C1E0088A5408B60003C28946F88A4407B1
:10991000B400C1E0088A5406B60003C28946FE8B33
:1099200046F88B56FE8946FC8956FA8A4402B400F2
:1099300025C0008946F6B90400BB86992E8B073BEB
:1099400046F6740783C302E2F3EB372EFF6708FF86
:1099500076FCFF76FA576A01E83B00EB22FF76FCC3
:10996000FF76FA576A01EB14FF76FCFF76FA576A26
:1099700002EBE5FF76FCFF76FA576A02E8FF008308
:10998000C4085F5EC9C3000040008000C0004F995A
:109990005D9968997399C80A0000568B7606C64689
:1099A000FD018976FA8B460A8B56088946F8895656
:1099B000F6C60642F012A01084B4008BD88A87A2A3
:1099C00088A243F0800E51F010802651F0EFC606B9
:1099D00048F010E99900807E04017521B200EB1275
:1099E000C45E08268A07A28692FF4608A24AF0FEB5
:1099F000C24E0BF6743180FA0F75E5EB2AB200EB1C
:109A00001DC45E08268B07A3869283460802A086A3
:109A100092A24AF0A08792A24AF080C2024E0BF6B0
:109A2000740580FA0E75DA8AC2C0E0040C0C50E8A6
:109A3000128759C60648F010F60642F04074308D81
:109A400046FD50900EE89997598946FE0BC0741F49
:109A50003D0E0075118B46F88B56F689460A8956DD
:109A6000088B76FAEB09FF76FEE866D059EB0C0B13
:109A7000F67403E960FFC60643F0005EC9C3C80E72
:109A80000000C646FB018B46068946F88B460A8BCA
:109A900056088946F68956F4C60642F010A010848E
:109AA000B4008BD88A87A288A243F0800E51F010B0
:109AB000802651F0EFE9F400C60648F010807E04DD
:109AC00017511837E060F7606C646FF0FEB198AD5
:109AD0004606EB11837E06077606C646FF0EEB08A8
:109AE0008A4606D0E08846FF8A46FFC0E0040C04A0
:109AF00050E8508659F60646F0207466C60646F0D1
:109B0000208A46FBFE4EFB0AC074448B1EAA88F6D0
:109B1000471180743AC6061F8403900EE8C09889E6
:109B200046FC837EFC0075198B46F88946068B46F9
:109B3000F68B56F489460A895608C60642F010EBA1
:109B40006B900EE87E82FF76F2E886CF59EB668B4B
:109B50001EAA88C647190BC6471A47900EE86482AA
:109B6000EB53807E0401753EEB12C45E08A04AF000
:109B7000268807FF4608FE4EFFFF4E06807EFF0048
:109B800075E8EB28A04AF08A264AF0A38692C45EC4
:109B900008A1869226890783460802 8A46FF04FEAA
:109BA0008846FFFF4E06807EFF0075D8837E060044
:109BB0007403E903FFC9C3000000000000000000B7
:109BC000535151525657061EBE58D6BFB48183C70C98
:109BD000B800118EC0B800E08ED82E8B0E04DB2E9C
:109BE0008B1E02DBF3A41F07B2FF33F68BCB51E8C9
:109BF000CD0059722E8BFE4FD1E72E8B9DFED9BF23
:109C0000B48183C70C8801E2E5E895007215 8AF2F9
```

```
:109C1000E8AC00720E3AF0750AE810007205B8015F
:109C200000EB03B800005A595B5F5EC360BE0600DC
:109C3000B9080051E8A8005972248BFE4F83EF0643
:109C4000D1E783C7562E8B9DFED9BFB48183C70C45
:109C5000880181C3B48188470CE2D8F8EB01F9612F
:109C6000C35351525657B2FFBE00002E8B0E02DB7B
:109C70008BFED1E72E8B9DFED9BFCE828A0151E8A3
:109C8000A900597213E2E9E81700720C8AC2E89A37
:109C9000007205B80100EB03B800005A595B5F5E23
:109CA000C3B9FE002E2B0E02DB51E81200597203DD
:109CB000E2F7F8C332D0D0E2730380F22D46C356E8
:109CC0008BC60D0001A30381529A000006EF5A5E75
:109CD0003D01007508A00081E8D9FFEB01F9C356EA
:109CE0008BC625FF000D005CA30381529A0000067D
:109CF000EF5A5E3D01007508A00081E8B6FFEB0158
:109D0000F9C3558BEC5657518B7E04BE0000B9FE4B
:109D10000051E8CAFF59720B880547E2F4B8010008
:109D2000EB0490B80000595F5E5DC356508BC625AA
:109D3000FF00A30381529A000006EF3D01005A582C
:109D40005E7516E86EFF56B410A30381529A0000A8
:109D500006EF5A5E3D01007401F9C356508BC625CB
:109D6000FF00A30381529A000006EF3D01005A58FC
:109D70005E7516E83EFF56B45EA30381529A00005A
:109D800006EF5A5E3D01007401F9C3558BEC56573E
:109D9000518B7E048B4E06BE00008A054751E8BAFF
:109DA000FF597208E2F4B80100EB0490B8000059C2
:109DB0005F5E5DC3558BEC5657518B7E04BE000031
:109DC000B9FE0051E8160059720B880547E2F4B855
:109DD0000100EB0490B80000595F5E5DC357568BDD
:109DE000C625FF000D0068A30381529A000006EF0C
:109DF0003D01005A5E7404F9EB059046A000815FB6
:109E0000C300051FFFFFFFFC051FFFFF00FC05004F
:109E1000000000FC05000000FFFC0501FFFFFFFC47
:109E2000051EFFFFFCFC0518FF0000FC051700FFE6
:109E300000FC050EFFFF00FC050000FFFFFC051FF6
:109E4000FFFFFEFC05000000FF3C051FFFFFFFFCBD
:109E5000091E00000000FFFFFEFC091FE0FFFFFFDE
:109E6000FF0000FC091E00000000FF00003C091F6D
:109E700000000000FF0000FC091D00000000E300DE
:109E800000FC091F00000000E30000FC091C0000AA
:109E90000000FF00003C091A00000000FF00003C29
:109EA000091000000000FFFFFF7C091F00000000F8
:109EB000FF00003C091F00000000FFFFFF3C091AE3
:109EC00000000000FF00003C0918000000000000036
:109ED00000FC091A00000000FF00003C091FFFFF02
:109EE000FFFFFFFFFFFC091E00000000FF00003C19
:109EF000091F70FFFFFFFF0000FC029E4C3A029E0C
:109F00006A3A0000222F089E143B449E807A00008B
:109F1000222F0000222F029E3B3C0E9E00000E9E30
:109F200000000E9E0000149EE13E0E9E000000008
:109F3000222F0000222F0000222F0000222F0000DD
```

```
:109F4000222F089E08400000222F0000222F329E60
:109F500003471A9E6F571A9EDA570000222F0000FF
:109F6000222F2C9E6540209E84580000222F269E82
:109F70003D5A3E9EE85A0000222F0000222F00008A
:109F8000222F0000222F0000222F0000222F509E9E
:109F9000895B0000222F0000222F649E0000000039
:109FA000222F969E0000B49EE13EE69E0000000037
:109FB000222FBE9E0000E69E00000000222F00001F
:109FC000222F0000222F0000222F0000222F00004D
:109FD000222F0000222F5A9E5E5D0000222F0000DB
:109FE000222F0000222FC89E9860C89EF8610000B2
:109FF000222F8C9E0000D29E0000AA9ED998DC9E43
:10A0000068604A9E401C0000222F0000222FDC9E28
:10A0100045650000222FA09E6F63789E000000001F
:10A02000222F829E00000000222F6E9E0000000062
:10A03000222F0000222F0000222F0000222F0000DC
:10A04000222F0000222F0000222F0000222F0000CC
:10A05000222F0000222F0000222F0000222F0000BC
:10A06000222FF09EA9EC0000222F01000001060023
:10A0700000000203030003000000000001000000D4
:10A0800000000000000000000000000000000001CF
:10A0900000000200030003000307000000000000AE
:10A0A0000000000000000000703000000000000A6
:10A0B0000000070003000300000000000000000093
:10A0C0000000000000000404000006000 4B8883E
:10A0D0000E896489BA89108A668ABC8A128B688B59
:10A0E000013616010080020233000018E204C409A0
:10A0F000A60E88136A184C1D2E22FF7F0400000054
:10A1000030001000000000200000000200000047
:10A110000000000000000000000000000000000003F
:10A120001F00D4FEFFFF00FFFFFFFF1E0000000026
:10A13000000000000000000000000054240000A7
:10A140001F0000000000003E4900001E000000004B
:10A150000000000000000000000000F5020900FF
:10A160001F003F49000000764A00001E000000006A
:10A17000000000000000000000000BC280900F2
:10A180003F003F0000003F3F0000003F3F00000055
:10A190000000000000000000000000001000000BE
:10A1A0000D0000003F0000003F0000003F3F0000A6
:10A1B000003F3F000000000000000000000000021
:10A1C000E70C0000ACDBFFFFD4FEFFFF0045FFFF04
:10A1D000FF1E1F000000000000000000050150000DE
:10A1E000B31C0000FCF0FFFF84FFFFFF00C1FFFF76
:10A1F000FF1E1F0000000000000000054240000AB
:10A200000C40010000000000000000000260900D2
:10A21000001E1F000000000000000000D400100B3
:10A22000E45B0200B91B0100270900000004E120088
:10A23000001E1F000000000000000000E55B02009F
:10A24000BC7703009137020 04F12000000761B001C
:10A25000001E1F000000000000000000BD7703008A
:10A260000949304006953030077 1B0000009E2400B0
```

```
:10A27000001E1F000000000000000009593040075
:10A280004DAF0500416F04009F24000000C52D0064
:10A29000001E1F000000000000000004EAF05007F
:10A2A00025CB0600FA8A0500C62D000000ED360019
:10A2B000001E1F000000000000000026CB06006A
:10A2C000FDE60700D2A60600EE36000000154000AD
:10A2D000001E1F000000000000000000FEE6070056
:10A2E000F4020900AAC2070016400000003E49001F
:10A2F000001E1F000000000000000000ED03090028
:10A30000750E090099DF080047490000009D4900CB
:10A31000001E1F000000000000000000760E090073
:10A32000BC28090022EA08009E49000000764A0085
:10A33000001E1F000000000000000003F000000A1
:10A340003F000000680409003F0000003F3F00009C
:10A35000003F3F000000000000000000000010000007E
:10A360000800000000000D40010001E55B02000252
:10A37000BD77030003959304000044EAF0500052646
:10A38000CB060006FEE6070007040000000030001FC
:10A3900000000000200000000020000000000000B9
:10A3A000000000000000000000000000001100D4C8
:10A3B000FEFFFF00FFFFFFFF100000000000000095
:10A3C000000000000000000000EC1300001100007D
:10A3D000000000003E490000100000000000000E6
:10A3E000000000000000000001BF1040011003F0D
:10A3F00049000000764A000010000000000000044
:10A400000000000000000000D20505003F003FF2
:10A410000000003F3F0000003F3F00000000000040
:10A42000000000000000000001000000D00001E
:10A43000003F0000003F0000003F3F0000003F3FA2
:10A44000000000000000000000000000081070084
:10A450000014ECFFFFD4FEFFFF0045FFFFFF1011CB
:10A46000000000000000000B00B0000BD0F0065
:10A4700000C4F7FFFF84FFFFFF00C1FFFFFF1011C3
:10A48000000000000000000EC13000082AF009C
:10A490000000000000000000002609000010116C
:10A4A000000000000000000083AF00002A4B0104
:10A4B00000979B000027090000004E1200001011B9
:10A4C000000000000000000002B4B0100D2E6015C
:10A4D000003F3701004F12000000761B00001011F2
:10A4E000000000000000000D3E601007A8202B4
:10A4F00000E7D20100771B0000009E24000010112D
:10A500000000000000000000007B820200111E031A
:10A51000008F6E02009F24000000C52D0000101166
:10A52000000000000000000000121E0300B9B90383
:10A5300000260A0300C62D000000ED3600001011B1
:10A540000000000000000000000BAB90300615504DB
:10A5500000CEA50300EE360000001540000001011EB
:10A56000000000000000000000625504001AF10421
:10A57000007641040016400000003E490000101122
:10A58000000000000000000000000A3F1040069F704CF
:10A590000000B7DD040047490000009D4900001011BC
```

```
:10A5A0000000000000000000006AF70400D205056A
:10A5B000007EE304009E49000000764A000010116E
:10A5C0000000000000000003F0000003F00000D
:10A5D00000E6F104003F0000003F3F0000003F3F65
:10A5E000000000000000000000100000008000062
:10A5F00000000083AF0000012B4B010002D3E601F5
:10A6000000037B82020004121E030005BAB9030096
:10A6100006625504000715000000050001000000057
:10A6200000120000002033F0000000000000000D4
:10A63000000000000000000001F00A8FEFFFF57
:10A640000078FFFFFF1E10450300000000000001F
:10A650000000000000004F190000240079FFFFFFF8
:10A6600000FFFFFFFF2300E00300000000000000E8
:10A67000000000000000AF2C00002400000000000DB
:10A6800000450500002300E00300000000000000007A
:10A690000000000000006FEE000027004605000EB
:10A6A000008B0A000025011E040000000000000GD
:10A6B000000000000004BBC010029008C0A0000D3
:10A6C00000D10F000028025C040000000000000020
:10A6D000000000000000439602002B00D20F000093
:10A6E00000171500002A039A040000000000000073
:10A6F000000000000000577C03002D00181500002A
:10A70000005D1A00002C04D804000000000000000C6
:10A710000000000000000876E040030005E1A000098
:10A7200000A31F00002F0516050000000000000018
:10A730000000000000D36C05003200A41F0000E0
:10A7400000E92400003106540500000000000006C
:10A750000000000000003B7706003400EA240000FF
:10A76000002F2A000033079205000000000000000BF
:10A770000000000000BF8D07003700302A0000F5
:10A7800000752F00003608D005000000000000012
:10A790000000000000005FB008003900762F0000C4
:10A7A00000BB34000038090E060000000000000065
:10A7B000000000000001BDF09003B00BC3400006B
:10A7C00000013A00003A0A4C060000000000000B8
:10A7D000000000000000F3190B003E00023A0000E8
:10A7E00000473F00003D0B8A060000000000000000B
:10A7F000000000000000E7600C004000483F00003F
:10A80000008D4400003F0CC806000000000000005E
:10A810000000000000F7B30D0042008E4400006D
:10A8200000D3490000410D060700000000000000B1
:10A830000000000000023130F004400D449000072
:10A8400000194F0000430E440700000000000000004
:10A850000000000000006B7E100047001A4F00004F
:10A86000005F540000460F820700000000000000057
:10A870000000000000CFF5110047006054000008
:10A8800000B0540000460F820700000000000000E6
:10A89000000000000000550C12001F00B154000021
:10A8A00000B55500001E10450300000000000000028
:10A8B000000000000000F02B12003F003F000000ED
:10A8C0003F3F000000003F3F3F000000000000000004D
```

```
:10A8D000000000000000150000000500010000005D
:10A8E000001200000002030000000000000000051
:10A8F000000000000000000001F008FFEFFFFAE
:10A90000005FFFFFFF1E1000000000000000000BD
:10A91000000000000004F1900001F0060FFFFFF53
:10A9200000FFFFFFF1E000000000000000000000D
:10A93000000000000AF2C00001F00000000001D
:10A94000003F0600001E000000000000000000A4
:10A95000000000000006FEE00001F004006000035
:10A9600000E30C00001E010000000000000000D9
:10A97000000000000004BBC01001F00E40C0000C0
:10A9800000EB1300001E020000000000000000A9
:10A99000000000000000439602001F00EC130000BE
:10A9A00000571B00001E030000000000000000014
:10A9B000000000000000577C03001F00581B00002F
:10A9C000002723000001E040000000000000000001B
:10A9D000000000000000876E04001F002823000014
:10A9E000005B2B00001E050000000000000000000BE
:10A9F000000000000D36C05001F005C2B00006D
:10AA000000F33300001E060000000000000000FC
:10AA100000000000003B7706001F00F433000038
:10AA200000EF3C00001E070000000000000000D6
:10AA3000000000000BF8D07001F00F03C000078
:10AA4000004F4600001E080000000000000004B
:10AA500000000000005FB008001F00504600002A
:10AA600000135000001E090000000000000005C
:10AA700000000000001BDF09001F001450000050
:10AA8000003B5A00001E0A000000000000000009
:10AA900000000000000F3190B001F003C5A0000EA
:10AAA00000C76400001E0B000000000000000052
:10AAB000000000000000E7600C001F00C8640000F8
:10AAC00000B76F00001E0C000000000000000036
:10AAD000000000000000F7B30D001F00B86F000079
:10AAE000000B7B00001E0D000000000000000000B5
:10AAF000000000000000023130F001F000C7B00006B
:10AB000000C38600001E0E000000000000000000D0
:10AB100000000000006B7E10001F00C4860000D3
:10AB200000DF9200001E0F000000000000000000087
:10AB300000000000000CFF511001F00E0920000AF
:10AB400000999300001E0F000000000000000000AC
:10AB500000000000000550C12001F009A93000036
:10AB6000009E9400001E100000000000000000085
:10AB700000000000000F02B12003F003F0000002A
:10AB80003F3F0000003F3F000000000000000C9
:10AB900000000000000010000001500000003F0060
:10ABA00000003F0000003F3F0000003F3F0000006A
:10ABB000000000000000000000003019000051D328
:10ABC000FFFF8FFEFFFF005FFFFFFF1E1F00000063
:10ABD000000000000002F1D0000B028000080F0E1
:10ABE000FFFF80FFFFFF00DFFFFFFF1E1F000000D1
:10ABF000000000000000AF2C00006EEE000000001E
```

```
:10AC0000000000000000003F0600001E1F000000C2
:10AC1000000000000006FEE00004ABC0100C0C14F
:10AC2000000040060000E30C00001E1F000000B2
:10AC3000000000000004BBC0100429602009C8F07
:10AC40000100E40C000000EB1300001E1F000000D8
:10AC5000000000000043960200567C0300946947
:10AC60000200EC13000000571B00001E1F00000034
:10AC7000000000000000577C0300866E0400A84F0F
:10AC80000300581B000000272300001E1F000000C7
:10AC9000000000000000876E0400D26C0500D8415F
:10ACA000040028230000005B2B00001E1F00000092
:10ACB000000000000000D36C05003A770600244035
:10ACC00005005C2B000000F33300001E1F00000095
:10ACD000000000000000003B770600BE8D07008C4A94
:10ACE0000600F433000000EF3C00001E1F000000CF
:10ACF000000000000000BF8D07005EB0080010617A
:10AD00000700F03C0000004F4600001E1F0000003E
:10AD10000000000000005FB008001ADF0900B083E7
:10AD200008005046000000135000001E1F000000E5
:10AD30000000000000001BDF0900F2190B006CB2DC
:10AD400009001450000000003B5A00001E1F000000C4
:10AD50000000000000000F3190B00E6600C0044ED59
:10AD60000A003C5A000000C76400001E1F000000DB
:10AD70000000000000000E7600C00F6B30D0038345E
:10AD80000C00C864000000B76F00001E1F00000028
:10AD90000000000000000F7B30D0022130F004887E9
:10ADA0000D00B86F0000000B7B00001E1F000000AC
:10ADB000000000000000023130F006A7E100074E6FC
:10ADC0000E000C7B000000C38600001E1F00000068
:10ADD000000000000000006B7E1000CEF51100BC5199
:10ADE0001000C4860000000DF9200001E1F0000005B
:10ADF000000000000000CFF51100540C120020C923
:10AE00001100E092000000999300001E1F00000056
:10AE1000000000000000550C1200EF2B1200A6DF0E
:10AE200011009A930000009E9400001E1F00000075
:10AE3000000000000003F0000003F00000040FF55
:10AE400011003F0000003F3F0000003F3F000000B6
:10AE5000000000000000100000010000000000E1
:10AE60006FEE0000014BBC0100024396020003574 5
:10AE70007C030004876E040005D36C0500063B7755
:10AE8000060007BF8D0700085FB00800091BDF0937
:10AE9000000AF3190B000BE7600C000CF7B30D0070
:10AEA0000D23130F000E6B7E10000F150000000520
:10AEB000000100000000120000002033F0000003B
:10AEC000000000000000000000000000000001171
:10AED00000A8FEFFFF0078FFFFFF1010CB0100006D
:10AEE000000000000000000000000E10D00001460
:10AEF0000079FFFFFF00FFFFFFFF130020020000AB
:10AF000000000000000000000000811800001494
:10AF1000000000000004505000013002002000B2
:10AF2000000000000000000000000000C18200001503
```

```
:10AF3000004605000008B0A0001401420200000D8
:10AF4000000000000000000000000A5F300001653
:10AF5000008C0A000000D10F000015026402000FE
:10AF60000000000000000000000002D6B01001731
:10AF700000D20F000000171500001603860200002 3
:10AF8000000000000000000000059E901001965
:10AF900000181500000005D1A00001804A802000047
:10AFA000000000000000000000000296E02001AEE
:10AFB000005E1A000000A31F00001905CA0200006D
:10AFC000000000000000000000009DF902001BCE
:10AFD00000A41F000000E92400001A06EC02000093
:10AFE000000000000000000000000B58B03001C02
:10AFF00000EA240000002F2A00001B070E030000B7
:10B000000000000000000000000712404001E89
:10B0100000302A000000752F00001D0830030000DA
:10B020000000000000000000000D1C304001F69
:10B0300000762F000000BB3400001E095203000000
:10B040000000000000000000000D5690500209D
:10B0500000BC34000000013A00001F0A7403000025
:10B060000000000000000000007D1606002225
:10B0700000023A000000473F0000210B9603000049
:10B080000000000000000000000C9C906002305
:10B0900000483F0000008D440000220CB80300006F
:10B0A000000000000000000000B98307002439
:10B0B000008E44000000D3490000230DDA03000095
:10B0C000000000000000000004D44080025C2
:10B0D00000D449000000194F0000240EFC030000BA
:10B0E000000000000000000000850B090027A0
:10B0F000001A4F0000005F540000260F1E040000DD
:10B100000000000000000000061D9090027D5
:10B11000006054000000B0540000260F1E04000020
:10B120000000000000000000BBE509001165
:10B1300000B154000000B55500001010CB01000014
:10B140000000000000000000010F709003FB0
:10B15000003F0000003F3F0000003F3F3F00000075
:10B160000000000000000000001500000005C5
:10B17000001000000012000000020300000000B7
:10B180000000000000000000000000000011AE
:10B19000008FFEFFFF005FFFFFFF101000000000A8
:10B1A000000000000000000000E10D000011A0
:10B1B0000060FFFFFF00FFFFFFFF10000000000026
:10B1C000000000000000000008118000011D5
:10B1D000000000000003F060000100000000001A
:10B1E000000000000000000000C1820000110B
:10B1F000004006000000E30C000010010000000009
:10B200000000000000000000000A5F300001195
:10B2100000E40C000000EB1300001002000000002E
:10B220000000000000000000002D6B01001174
:10B2300000EC13000000571B000010030000000008A
:10B240000000000000000000059E9010011AA
:10B25000005810000002723000010040000000001D
```

```
:10B260000000000000000000000000296E02001134
:10B27000002823000005B2B0000100500000000E8
:10B280000000000000000000000009DF902001115
:10B29000005C2B000000F3330000100600000000EB
:10B2A000000000000000000000000B58B0300114A
:10B2B00000F433000000EF3C000010070000000025
:10B2C000000000000000000000007124040011D4
:10B2D00000F03C0000004F4600001008000000095
:10B2E000000000000000000000000D1C3040011B5
:10B2F000005046000001350000010090000000003C
:10B300000000000000000000000000D569050011E9
:10B3100000145000000003B5A0000100A000000001A
:10B320000000000000000000000007D1606001173
:10B33000003C5A000000C7640000100B0000000031
:10B340000000000000000000000000C9C906001154
:10B3500000C864000000B76F0000100C000000007F
:10B360000000000000000000000000B98307001189
:10B3700000B86F0000000B7B0000100D0000000003
:10B380000000000000000000000004D4408001113
:10B39000000C7B000000C3860000100E00000000BF
:10B3A000000000000000000000000850B090011F3
:10B3B00000C486000000DF920000100F00000000B3
:10B3C000000000000000000000000061D909001129
:10B3D00000E092000000999300001000F00000000B0
:10B3E000000000000000000000000BBE5090011A3
:10B3F000009A930000009E940000101000000000CE
:10B400000000000000000000000000010F709003FED
:10B41000003F0000003F3F0000003F3F00000000F1
:10B420000000000000000000000000010000001506
:10B430000000003F0000003F0000003F3F00000010
:10B440003F3F000000000000000000000000000D0AE
:10B450000D00007FE7FFFF8FFEFFFF005FFFFFFF94
:10B460001011000000000000000000001100000505A
:10B4700016000080F7FFFF80FFFFFF00DFFFFFFFE8
:10B480001011000000000000000000081180000C042
:10B490008200000000000000000000003F060000E5
:10B4A000101100000000000000000C1820000A494
:10B4B000F30000406A000040060000000E30C0000BA
:10B4C000101100000000000000000A5F300002C97
:10B4D0006B010024DB0000E40C000000EB13000013
:10B4E000101100000000000000002D6B0100584A
:10B4F000E90100AC520100EC13000000571B0000F2
:10B500001011000000000000000059E9010028AF
:10B510006E0200D8D00100581B0000002723000055
:10B52000101100000000000000000296E02009CC5
:10B53000F90200A855020028230000005B2B000040
:10B540001011000000000000000009DF90200B48E
:10B550008B03001CE102005C2B000000F3330000B1
:10B560001011000000000000000B58B03007007
:10B57000240400347303000F433000000EF3C0000A7
:10B580001011000000000000000071240400D031
```

```
:10B59000C30400F00B0400F03C0000004F46000024
:10B5A000101100000000000000000D1C30400D40E
:10B5B00069050050AB040050460000001350000025
:10B5C000101100000000000000000D56905007C9B
:10B5D000160600545105001450000003B5A0000AC
:10B5E000101100000000000000000D160600C8D9
:10B5F000C90600FCFD05003C5A000000C7640000BD
:10B60000101100000000000000000C9C90600B8C9
:10B6100083070048B10600C864000000B76F00004F
:10B62000101100000000000000000B98307004C6A
:10B63000440800386B0700B86F0000000B7B000067
:10B64000101100000000000000000D44080084BC
:10B650000B0900CC2B08000C7B000000C386000007
:10B66000101100000000000000000850B090060C0
:10B67000D9090004F30800C486000000DF9200002E
:10B68000101100000000000000000061D90900BA9C
:10B69000E50900E0C00900E092000000999300075
:10B6A000101100000000000000000BBE509000FC1
:10B6B000F709003ACD09009A930000009E9400001B
:10B6C000101100000000000000000003F0000003FDB
:10B6D0000000008EDE09003F0000003F3F00000038
:10B6E0003F3F000000000000000000100000010CB
:10B6F0000000000000C182000001A5F30000022D3F
:10B700006B01000359E9010004296E0200059DF94F
:10B71000020006B58B030007712404000 8D1C3049E
:10B720000009D56905000A7D1606000BC9C9060087
:10B730000CB98307000D4D4408000E850B09000F5E
:10B74000230000005000100000002000000003AD
:10B750000300000000000000000000000000000E6
:10B760000000000074004FFEFFFF0084FFFFFF7326
:10B770000000000000000000000000000000000C9
:10B78000788C0000740085FFFFFF00FFFFFFFF7350
:10B790000000000000000000000000000000000A9
:10B7A000A8C40000740000000000006303000073E0
:10B7B000000000000000000000000000000000089
:10B7C000F84D020072006403000000C7060000711B
:10B7D000010000000000000000000000000000068
:10B7E00080D003007000C8060000002B0A00006F24
:10B7F000020000000000000000000000000000047
:10B80000404C05006E002C0A0000008F0D00006DFA
:10B810000300000000000000000000000000000025
:10B8200038C106006C00900D000000F31000006BA2
:10B830000400000000000000000000000000000004
:10B84000682F08006A00F41000000571400006917
:10B850000500000000000000000000000000000E3
:10B86000D0960900680058140000000BB170000675C
:10B870000600000000000000000000000000000C2
:10B8800070F70A006600BC170000001F1B0000656F
:10B89000070000000000000000000000000000A1
:10B8A000485100C006400201B000000831E00006350
:10B8B000080000000000000000000000000000000080
```

```
:10B8C00058A40D006200841E000000E72100006102
:10B8D0000900000000000000000000000000000005F
:10B8E000A0F00E006000E8210000004B2500005F82
:10B8F0000A000000000000000000000000000003E
:10B900002036100005E004C25000000AF2800005DCE
:10B910000B000000000000000000000000000001C
:10B92000D87411005C00B028000000132C00005BEC
:10B930000C000000000000000000000000000000FB
:10B94000C8AC12005A00142C000000772F000059D8
:10B950000D000000000000000000000000000000DA
:10B96000F0DD13005800782F000000DB3200005794
:10B970000E000000000000000000000000000000B9
:10B98000500815005600DC320000003F360000551C
:10B990000F000000000000000000000000000098
:10B9A000E82B160054004036000000A33900005375
:10B9B000100000000000000000000000000000077
:10B9C000B84817005200A439000000073D0000519C
:10B9D000110000000000000000000000000000056
:10B9E000C05E18005000083D0000006B4000004F92
:10B9F000120000000000000000000000000000035
:10BA0000006E19004E006C40000000CF4300004D56
:10BA100013000000000000000000000000000013
:10BA200078761A004C00D043000000334700004BEA
:10BA3000140000000000000000000000000000F2
:10BA400028781B004A003447000000974A0000494C
:10BA5000150000000000000000000000000000D1
:10BA600010731C004800984A000000FB4D0000477E
:10BA7000160000000000000000000000000000B0
:10BA800030671D004600FC4D0000005F510000457E
:10BA9000170000000000000000000000000000008F
:10BAA00088541E00440060510000000C3540000434D
:10BAB000180000000000000000000000000000006E
:10BAC000183B1F004200C45400000027580000041EA
:10BAD000190000000000000000000000000000004D
:10BAE000E01A200040002858000000B5B00003F57
:10BAF0001A000000000000000000000000000002C
:10BB0000E0F320003E008C5B000000EF5E00003D93
:10BB10001B000000000000000000000000000000A
:10BB200018C621003C00F05E000000536200003B9C
:10BB30001C000000000000000000000000000000E9
:10BB4000889122003A005462000000B76500003975
:10BB50001D000000000000000000000000000000C8
:10BB6000285723003A00BB65000000E86600003952
:10BB70001D000000000000000000000000000000A8
:10BB80006C9C23003A00ED66000000876700039D6
:10BB90001D000000000000000000000000000088
:10BBA0008ABF23003F003F0000003F3F0000003FEE
:10BBB0003F000000000000000000000000000046
:10BBC000230000000500010000000200000000329
:10BBD000030000000000000000000000000000062
:10BBE000000000000001F00A8F9FFFF002FFEFFFF1E4E
```

```
:10BBF000000000000000000000000000000000045
:10BC0000788C00001F0030FEFFFF00FFFFFFFF1ECB
:10BC1000000000000000000000000000000000024
:10BC2000A8C400001F000000000000AF0C00001EB0
:10BC3000000000000000000000000000000000004
:10BC4000F84D02001F00B00C000000271900001E74
:10BC5000010000000000000000000000000000E3
:10BC600080D003001F00281900000672500001E77
:10BC70000200000000000000000000000000C2
:10BC8000404C05001F0068250000006F3100001EB9
:10BC900003000000000000000000000000000A1
:10BCA00038C106001F0070310000003F3D00001E3B
:10BCB000040000000000000000000000000080
:10BCC000682F08001F00403D000000D74800001EFC
:10BCD000050000000000000000000000000005F
:10BCE000D09609001F00D84800000375400001EFD
:10BCF000060000000000000000000000000003E
:10BD000070F70A001F0038540000005F5F00001E3B
:10BD10000700000000000000000000000001C
:10BD200048510C001F00605F0000004F6A00001EB9
:10BD300008000000000000000000000000FB
:10BD400058A40D001F00506A000000077500001E77
:10BD50000900000000000000000000000DA
:10BD6000A0F00E001F000875000000877F00001E75
:10BD70000A00000000000000000000000B9
:10BD8000203610001F00887F000000CF8900001EB1
:10BD90000B00000000000000000000000098
:10BDA000D87411001F00D089000000DF9300001E2E
:10BDB0000C00000000000000000000000077
:10BDC000C8AC12001F00E093000000B79D00001EE9
:10BDD0000D00000000000000000000000056
:10BDE000F0DD13001F00B89D00000057A700001EE3
:10BDF0000E00000000000000000000000035
:10BE0000500815001F0058A7000000BFB000001E1A
:10BE10000F00000000000000000000000013
:10BE2000E82B16001F00C0B0000000EFB900001E94
:10BE300010000000000000000000000F2
:10BE4000B84817001F00F0B9000000E7C200001E4C
:10BE500011000000000000000000000D1
:10BE6000C05E18001F00E8C2000000A7CB00001E43
:10BE70001200000000000000000000B0
:10BE8000006E19001F00A8CB0000002FD400001E78
:10BE900013000000000000000000008F
:10BEA00078761A001F0030D40000007FDC00001EEE
:10BEB000140000000000000000000006E
:10BEC00028781B001F0080DC00000097E400001EA3
:10BED000150000000000000000000004D
:10BEE00010731C001F0098E400000077EC00001E97
:10BEF000160000000000000000000002C
:10BF000030671D001F0078EC0000001FF400001EC9
:10BF1000170000000000000000000000A
```

```
:10BF200088541E001F0020F40000008FFB00001E3C
:10BF300018000000000000000000000000000000E9
:10BF4000183B1F001F0090FB000000C70201001EED
:10BF5000190000000000000000000000000000C8
:10BF6000E01A20001F00C802010000C70901001EDE
:10BF70001A000000000000000000000000000000A7
:10BF8000E0F320001F00C8090100008F1001001E0F
:10BF90001B000000000000000000000000000086
:10BFA00018C621001F0090100100001F1701001E7D
:10BFB0001C000000000000000000000000000065
:10BFC000889122001F00201701000771D01001E2C
:10BFD0001D000000000000000000000000000044
:10BFE000285723001F00801D010000B31F01001E01
:10BFF0001D000000000000000000000000000024
:10C000006C9C23001F00BC1F010000DD2001001EEE
:10C010001D000000000000000000000000000003
:10C020008ABF23003F003F0000003F3F0000003F69
:10C030003F000000000000000000000000000C1
:10C040000100000230000003F0000003F0000004E
:10C050003F3F0000003F3F000000000000000E4
:10C060000000000598C0000583BFFFFA8F9FFFFBB
:10C07000002FFEFFFF1E1F000000000000000058
:10C08000788C000091C30000D0C7FFFF30FEFFFF97
:10C0900000F7FFFFFF1E1F000000000000000006F
:10C0A000A8C40000F74D020000000000000000DE
:10C0B00000AF0C00001E1F000000000000000088
:10C0C000F84D02007FD003005089010OB00C000041
:10C0D00000271900001E1F000000000000000E3
:10C0E00080D003003F4C0500D80B03002819000046
:10C0F00000672500001E1F000000000000000077
:10C10000404C050037C1060098870400682500000F0
:10C11000006F3100001E1F000000000000000042
:10C1200038C10600672F080090FC0500703100040
:10C13000003F3D00001E1F000000000000000046
:10C14000682F0800CF960900C06A0700403D000034
:10C1500000D74800001E1F000000000000000083
:10C16000D09609006FF70A0028D20800D8480000CE
:10C17000003754000O1E1F000000000000000F7
:10C1800070F70A0047510C00C8320A00385400000A
:10C19000005F5F00001E1F000000000000000A4
:10C1A00048510C0057A40D00A08C0B00605F0000EC
:10C1B000004F6A00001E1F000000000000000089
:10C1C00058A40D009FF00E00B0DF0C00506A000074
:10C1D00000077500001E1F000000000000000A6
:10C1E000A0F00E001F361000F82B0E00087500009E
:10C1F00000877F00001E1F000000000000000FC
:10C2000020361000D774110078710F00887F00006D
:10C2100000CF8900001E1F000000000000000089
:10C22000D8741100C7AC120030B01000D0890000E3
:10C2300000DF9300001E1F000000000000000004F
:10C24000C8AC1200EFDD130020E81100E0930000FD
```

```
:10C2500000B79D00001E1F000000000000000004D
:10C26000F0DD13004F08150048191300B89D0000B9
:10C270000057A700001E1F000000000000000000083
:10C2800050081500E72B1600A843140058A700001B
:10C2900000BFB000001E1F000000000000000000F2
:10C2A000E82B1600B748170040671500C0B0000023
:10C2B00000EFB900001E1F000000000000000000099
:10C2C000B8481700BF5E180010841600F0B90000CF
:10C2D00000E7C200001E1F000000000000000000078
:10C2E000C05E1800FF6D1900189A1700E8C2000020
:10C2F00000A7CB00001E1F000000000000000000008F
:10C30000006E190077761A0058A91800A8CB000013
:10C31000002FD400001E1F000000000000000000DD
:10C3200078761A0027781B00D0B1190030D40000AD
:10C33000007FDC00001E1F000000000000000000065
:10C3400028781B000F731C0080B31A0080DC0000EB
:10C350000097E400001E1F000000000000000000025
:10C3600010731C002F671D0068AE1B0098E40000CE
:10C370000077EC00001E1F000000000000000000001D
:10C3800030671D0087541E0088A21C0078EC000056
:10C39000001FF400001E1F000000000000000000004D
:10C3A00088541E00173B1F00E08F1D0020F4000082
:10C3B000008FFB00001E1F000000000000000000B6
:10C3C000183B1F00DF1A200070761E0090FB000053
:10C3D00000C70201001E1F000000000000000000056
:10C3E000E01A2000DFF3200038561F00C8020100C9
:10C3F00000C70901001E1F000000000000000000002F
:10C40000E0F3200017C62100382F2000C8090100E2
:10C41000008F1001001E1F000000000000000000003F
:10C4200018C62100879122007001210090100100A0
:10C43000001F1701001E1F000000000000000000088
:10C44000889122002F562300E0CC21002017010004
:10C4500000771D01001E1F000000000000000000000A
:10C4600028572300739B230080922200801D010027
:10C4700000B31F01001E1F000000000000000000000AC
:10C480006C9C230089BF2300C4D72200BC1F01007D
:10C4900000DD2001001E1F000000000000000000061
:10C4A0003F0000003F000000E1FA22003F000000D2
:10C4B0003F3F0000003F3F000000000000000000080
:10C4C000010000001E0000000000F84D0200018085
:10C4D000D0030002404C05000338C1060004682F59
:10C4E000080005D09609000670F70A000748510CAD
:10C4F000000858A40D0009A0F00E000A2036100014
:10C500000BD87411000CC8AC12000DF0DD13000E36
:10C5100050081500FE82B160010B848170011C07E
:10C520005E180012006E19001378761A001428782D
:10C530001B001510731C001630671D001788541E51
:10C540000018183B1F0019E01A20001AE0F3200021
:10C550001B18C621001C889122001D270000000521
:10C56000000100000000240000000303000000000A0
:10C57000000000000000000000000000000000004279
```

```
:10C58000004FFEFFFF0084FFFFFF4100000000009E
:10C590000000000000000000000000E44E00004227
:10C5A0000085FFFFFF00FFFFFFFF4100000000000CC
:10C5B000000000000000000000000F471000042D4
:10C5C0000000000000FC020000410000000002C
:10C5D000000000000000000000002E37010041B4
:10C5E00000FD02000000F90500004001000000000D
:10C5F000000000000000000000006BF901004096
:10C6000000FA05000000F60800003F0200000000EC
:10C610000000000000000000000ABB802003F76
:10C6200000F708000000F30B00003E0300000000CC
:10C630000000000000000000000EE7403003E57
:10C6400000F40B000000F00E00003D0400000000AC
:10C650000000000000000000Q00342E04003D37
:10C6600000F10E000000ED1100003C05000000008C
:10C670000000000000000000000007DE404003C19
:10C6800000EE11000000EA1400003B06000000006C
:10C690000000000000000000000C99705003BFA
:10C6A00000EB14000000E71700003A07000000004C
:10C6B000000000000000000000000184806003ADA
:10C6C00000E817000000E41A00003908000000002C
:10C6D000000000000000000000006AF5060039BC
:10C6E00000E51A000000E11D00003809000000000C
:10C6F000000000000000000000000BF9F0700389D
:10C7000000E21D000000DE200000370A00000000EB
:10C710000000000000000000000017470800377C
:10C7200000DF20000000DB230000360B00000000CB
:10C730000000000000000000000072EB0800365E
:10C7400000DC23000000D8260000350C00000000AB
:10C750000000000000000000000D08C0900353F
:10C7600000D926000000D5290000340D000000008B
:10C770000000000000000000000312B0A00341F
:10C7800000D629000000D22C0000330E000000006B
:10C790000000000000000000000095C60A003301
:10C7A00000D32C000000CF2F0000320F000000004B
:10C7B000000000000000000000FC5E0B0032E2
:10C7C00000D02F000000CC3200003110000000002B
:10C7D000000000000000000000066F40B0031C3
:10C7E00000CD32000000C9350000301100000000B
:10C7F000000000000000000000D3860C0030A4
:10C8000000CA35000000C63800002F1200000000EA
:10C810000000000000000000043160D002F83
:10C8200000C738000000C33B00002E1300000000CA
:10C830000000000000000000B6A20D002E65
:10C8400000C43B000000C03E00002D1400000000AA
:10C850000000000000000000002C2C0E002D45
:10C8600000C13E000000BD4100002C15000000008A
:10C870000000000000000000A5B20E002C27
:10C8800000BE41000000BA4400002B16000000006A
:10C890000000000000000000021360F002B07
:10C8A00000BB44000000B747000002A17000000004A
```

```
:10C8B0000000000000000000000000A0B60F002AE9
:10C8C00000B847000000B44A00002918000000002A
:10C8D0000000000000000000000002234100029C9
:10C8E00000B54A000000B14D00002819000000000A
:10C8F0000000000000000000000000A7AE100028AB
:10C9000000B24D000000AE500000271A00000000E9
:10C9100000000000000000000000002F261100278A
:10C9200000AF50000000AB530000261B00000000C9
:10C9300000000000000000000000000BA9A1100266C
:10C9400000AC53000000A8560000251C00000000A9
:10C9500000000000000000000000000480C1200254C
:10C9600000A956000000A5590000241D0000000089
:10C9700000000000000000000000000D97A1200242E
:10C9800000A659000000A25C0000231E0000000069
:10C9900000000000000000000000006DE61200230F
:10C9A00000A35C0000009F5F0000221F0000000049
:10C9B0000000000000000000000000044F130022EF
:10C9C00000A05F0000009C62000021200000000029
:10C9D0000000000000000000000009EB4130021D1
:10C9E000009D62000000996500002021000000009
:10C9F0000000000000000000000000C31714002128
:10CA0000009D65000000E7660000202100000000096
:10CA1000000000000000000000000F431400218F
:10CA200000ED66000000806700002021000000008B
:10CA3000000000000000000000000C85614003F85
:10CA4000003F0000003F3F0000003F3F00000000AB
:10CA5000000000000000000000002700000005AA
:10CA60000001000000024000000203000000009C
:10CA7000000000000000000000000000000011A5
:10CA8000004CF9FFFF00EFFDFFFF10000000000069
:10CA9000000000000000000000000E44E00001153
:10CAA00000F0FDFFFF00FFFFFFFF1000000000008F
:10CAB0000000000000000000000000F47100001100
:10CAC000000000000000990B0000100000000000B2
:10CAD0000000000000000000000002E37010011DF
:10CAE000009A0B0000000617000010010000000073
:10CAF0000000000000000000000006BF9010011C0
:10CB000000071700000046220000100200000008D
:10CB1000000000000000000000000ABB80200119F
:10CB200000472200000592D000010030000000003
:10CB3000000000000000000000000EE740300117F
:10CB4000005A2D0000003F380000100400000000D3
:10CB500000000000000000000000342E0400115E
:10CB600000403800000F842000010050000000FE
:10CB7000000000000000000000007DE40400113F
:10CB800000F942000000844D000010060000000083
:10CB900000000000000000000000C9970500111F
:10CBA00000854D000000E3570000100700000000062
:10CBB0000000000000000000000001848060011FE
:10CBC00000E45700000015620000100800000009B
:10CBD0000000000000000000000006AF5060011DF
```

```
:10CBE000001662000000 1A6C00001009000000002E
:10CBF00000000000000000000000BF9F070011BF
:10CC0000001B6C000000F2750000100A000000001C
:10CC1000000000000000000000017470800119D
:10CC200000F3750000009D7F0000100B0000000065
:10CC3000000000000000000000072EB0800117E
:10CC4000009E7F0000001B890000100C0000000007
:10CC500000000000000000000D08C0900115E
:10CC6000001C890000006C920000100D0000000004
:10CC70000000000000000000000312B0A00113D
:10CC8000006D92000000909B0000100E000000005C
:10CC900000000000000000000095C60A00111E
:10CCA00000919B00000087A40000100F000000000E
:10CCB00000000000000000000000FC5E0B0011FE
:10CCC0000088A400000051AD00001010000000001A
:10CCD00000000000000000000066F40B0011DE
:10CCE0000052AD000000EEB5000010110000000081
:10CCF00000000000000000000D3860C0011BE
:10CD000000EFB50000005EBE000010120000000041
:10CD10000000000000000000043160D00119C
:10CD2000005FBE000000A1C6000010130000000005C
:10CD300000000000000000000B6A20D00117D
:10CD400000A2C6000000B7CE000010140000000D2
:10CD500000000000000000002C2C0E00115C
:10CD600000B8CE000000A0D6000010150000000A2
:10CD700000000000000000000A5B20E00113D
:10CD800000A1D60000005CDE000010160000000CC
:10CD900000000000000000000021360F00111C
:10CDA000005DDE000000EBE5000010170000000051
:10CDB00000000000000000000A0B60F0011FD
:10CDC00000ECE50000004DED000010180000000030
:10CDD00000000000000000000002234100011DC
:10CDE000004EED00000082F4000010190000000069
:10CDF00000000000000000000A7AE100011BD
:10CE00000083F40000008AFB0000101A00000000FC
:10CE100000000000000000000002F261100119B
:10CE2000008BFB000000650201001018000000E9
:10CE300000000000000000000BA9A1100117C
:10CE400000660201000013090100101C0000000030
:10CE500000000000000000000480C1200115B
:10CE60000014090100094 0F0100101D00000000D3
:10CE700000000000000000000D97A1200113C
:10CE800000950F010000E8150100101E00000000D1
:10CE900000000000000000000006DE61200111C
:10CEA00000E9150100000F1C0100101F0000000028
:10CEB00000000000000000000044F130011FB
:10CEC00000101C0100000922010010200000000D9
:10CED00000000000000000000009EB4130011DC
:10CEE000000A22010000D6270100102100000000E6
:10CEF00000000000000000000C3171400113
:10CF000000DF27010000622A0100102100000000
```

```
:10CF1000000000000000000000000F4314001 19A
:10CF2000006B2A010000932B010010210000000 07B
:10CF3000000000000000000000000C85614003F80
:10CF4000003F0000003F3F0000003F3F00000000A6
:10CF5000000000000000000000000100000027A9
:10CF60000000003F0000003F0000003F3F000000C5
:10CF70003F3F000000000000000000000000D360
:10CF80004E00000C8EFFFF4CF9FFFF00EFFDFFFF8E
:10CF900010110000000000000000E44E00005BE3
:10CFA000710000F0DCFFFFF0FDFFFF00F7FFFFFF67
:10CFB000101100000000000000000F47100002DBE
:10CFC000370100000000000000000990B000085
:10CFD000101100000000000000002E3701006A60
:10CFE000F901003AC500009A0B0000000617000086
:10CFF000101100000000000000006BF90100AA01
:10D00000B80200778701000717000000462200 00E1
:10D010001011000000000000000ABB80200ED9D
:10D02000740300B7460200472200000592D00009B
:10D030001011000000000000000EE7403003337
:10D040002E0400FA0203005A2D0000003F380000B1
:10D050001011000000000000000342E04007CCD
:10D06000E4040040BC03004038000000F842000027
:10D070001011000000000000000007DE40400C862
:10D08000970500897204 00F942000000844D0000F9
:10D090001011000000000000000C997050017F3
:10D0A000480600D5250500854D000000E357000027
:10D0B000101100000000000000000184806006980
:10D0C000F5060024D60500E4570000001562000 0B4
:10D0D000101100000000000000006AF50600BE0C
:10D0E0009F07007683060016620000001A6C00009D
:10D0F000101100000000000000000BF9F07001694
:10D10000470800CB2D07001B6C000000F2750000E3
:10D110001011000000000000000000174708007117
:10D12000EB080023D50700F3750000009D7F000089
:10D130001011000000000000000072EB0800CF9A
:10D140008C09007E7908009E7F0000001B8900008A
:10D150001011000000000000000D08C09003019
:10D160002B0A00DC1A09001C890000006C920000E8
:10D170001011000000000000000312B0A009494
:10D18000C60A00E7B909006D92000000909B0000FC
:10D190001011000000000000000095C60A00FB0E
:10D1A0005E0B00A1540A00919B00000087A40000C0
:10D1B000101100000000000000000FC5E0B006584
:10D1C000F40B0008ED0A0088A400000051AD000037
:10D1D000101100000000000000000066F40B00D2F7
:10D1E000860C0072820B0052AD000000EEB500000C
:10D1F000101100000000000000000D3860C004267
:10D20000160D00DF140C00EFB50000005EBE00003C
:10D21000101100000000000000000043160D00B5D2
:10D22000A20D004FA40C005FBE000000A1C600000C
:10D230001011000000000000000000B6A20D002B3D
```

```
:10D240002C0E00C2300D00A2C6000000B7CE0000B8
:10D25000101100000000000000000002C2C0E00A4A3
:10D26000B20E0038BA0D00B8CE000000A0D6000003
:10D27000101100000000000000000A5B20E002008
:10D28000360F00B1400E00A1D60000005CDE0000A9
:10D29000101100000000000000000021360F009F68
:10D2A000B60F002DC40E005DDE000000EBE50000AF
:10D2B00010110000000000000000A0B60F0021C7
:10D2C000341000AC440F00ECE50000004DED000010
:10D2D00010110000000000000000022341000A621
:10D2E000AE10002EC20F004EED00000082F40000D0
:10D2F00010110000000000000000A7AE10002E7A
:10D30000261100B33C100083F40000008AFB0000EB
:10D31000101100000000000000002F261100B9CD
:10D320009A11003BB410008BFB0000006502010065
:10D33000101100000000000000000BA9A11004720
:10D340000C1200C628110066020100001309010003A
:10D35000101100000000000000000480C1200D96D
:10D360007A1200549A1100140901000940F010070
:10D37000101100000000000000000D97A12006CBB
:10D38000E61200E5081200950F010000E815010003
:10D39000101100000000000000006DE612000304
:10D3A0004F130079741200E9150100000F1C0100F1
:10D3B00010110000000000000000044F13009D49
:10D3C000B4130010DD1200101C010000092201003E
:10D3D00010110000000000000000009EB413003A8D
:10D3E000171400AA4213000A22010000D6270100E8
:10D3F00010110000000000000000C31714008698
:10D40000421400CFA51300DF27010000622A0100AB
:10D41000101100000000000000000F431400C7BE
:10D420005614001BD113006B2A010000932B01003E
:10D43000101100000000000000003F0000003F4D
:10D44000000000D3E413003F0000003F3F00000055
:10D450003F3F000000000000000001000000222B
:10D46000000000002E370100016BF9010002AB43
:10D47000B8020003EE74030004342E0400057DE4BA
:10D48000040006C997050007184806000086AF50653
:10D490000009BF9F07000A174708000B72EB08003E
:10D4A0000CD08C09000D312B0A000E95C60A000F16
:10D4B000FC5E0B001066F40B0011D3860C001243C7
:10D4C000160D0013B6A20D00142C2C0E0015A5B2DB
:10D4D0000E001621360F0017A0B60F0018223410C8
:10D4E0000019A7AE10001A2F2611001BBA9A1100BE
:10D4F0001C480C12001DD97A12001E6DE612001F86
:10D50000044F1300209EB413002100021F001F00CF
:10D51000023E490000000000010000000F3C4900ED
:10D5200000003D4900000F5D0000082E000008AC1F
:10D53000DB680409000000A0DE08000004110011EF
:10D5400000043E490000000000010000000083C49C2
:10D550000000003D490000083300000819000008E1
:10D5600014ECE6F104900000002EDD040000021F00B0
```

```
:10D570001F0002DF92000000000010000000FDD2C
:10D5800092000000DE9200000F5D001D082E0010CA
:10D590000051D340FF110000001FC9110000041109
:10D5A00000110004DF92000000000000100000008EC
:10D5B000DD92000000DE92000008330009081900027
:10D5C00010007FE78EDE09000000DFC009000002C6
:10D5D0001F001F0002771D0000000000200000075
:10D5E0000F6B1D0100006D1D01000F9B0052144DBB
:10D5F000002200583BE1FA2000000879122000003F
:10D60000041100110004D62700000000000020000F1
:10D610000008CA27010000CC270100085500CC15DE
:10D620002A001E000C8ED3E41300000046A5130050
:10D6300001010000010101010000010101010101DE
:10D6400000000101000001010000000000000001D5
:10D650000000000001010000810AE8030F000083C0
:10D66000033A0000810AE8030F0000083033A000038
:10D67000810AE8031E000083036A0000820A80809A
:10D6800000000000000000000000000870A0803FE
:10D69000050000C1002F0000870A0803050000C133
:10D6A000002F0000870A08030A0000C2004F000094
:10D6B000880A0100FFFF0000001FFFFF0B060000AB
:10D6C000010300000C160000000000000000000034
:10D6D00000000000000000000000000A00C534506
:10D6E0005249414C204E554D425221060001001036
:10D6F0000000BB0A00000000000000000003C0A1F
:10D7000000000A05050503070703BD3200004D4F61
:10D710005354202020524D443532364C202020B6
:10D72000202020202030303320303030202086
:10D730002020202020202020202020202020BE2249
:10D74000000044454641554C542044454641554C03
:10D750005420444546415 54C542044454641554C7F
:10D760005420800200000810AFFFFFF00FFFFFFFF3F
:10D770000000810AFFFFFF00FFFFFFFF0000810A9A
:10D78000FFFFFF00FFFFFFFF0000820AFFFF000016
:10D7900000000000FFFF00000000870A0FFFFF00ED
:10D7A000FFFF00FF0000870A0FFFFF00FFFF00FFE1
:10D7B0000000870A0FFFFF00FFFF00FF0000880A3C
:10D7C000010000000000000000000B060000000047
:10D7D00000000C160000000000000000000000027
:10D7E000000000000000000000A00CFFFFFFFF91
:10D7F000FFFFFFFF0000000021060000000000006
:10D80000BB0A000030700000000000003C0A000003
:10D81000FFFFFFFFFFFFFFFFBD320000FFFFFFFF25
:10D82000FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF08
:10D83000FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF8
:10D84000FFFFFFFFFFFFFFFFFFFFFFBE22000004
:10D85000FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFD8
:10D86000FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFC8
:10D8700080021100010A000000FFF0000000FFFF1D
:10D8800010A000000FFF0000000FFFF010A000095
:10D8900000FFF0000000FFFF020A000000000008F
```

```
:10D8A00000000000FCFFFFFF070AF00000FFF0008F
:10D8B000FF000000070AF00000FFF000FF0000007A
:10D8C000070AF00000FFF000FF000000080AF8005F
:10D8D0000000000000000000B06FFFF0000000039
:10D8E0000C163FFF000000000000000000000000D8
:10D8F000000000000000000200C000000000000FC
:10D900000000000000002106FFFC0000FFFF3B0AB2
:10D9100000007CF8FFFFFFFFFFFF3C0A0000000053
:10D92000000000000003D32000000000000000088
:10D930000000000000000000000000000000000E7
:10D940000000000000000000000000000000000D7
:10D950000000000000000000003E220000000067
:10D960000000000000000000000000000000000B7
:10D970000000000000000000000000000000002A5
:10D98000EEFF010C000000020C002400070C003424
:10D9900000080C0058000B080064000C18006C0014
:10D9A000200E00840021080092003B0C009A003CED
:10D9B0000C00A6003D3400B2003E2400E600000446
:10D9C000000A013F0E0100000D0074D898D8A8D8B5
:10D9D000CCD8D8D8E0D8F8D806D90ED91AD926D9B3
:10D9E0005AD97ED9774B254E8D4ECA508251CC5193
:10D9F000D852DB52235361539F53DD53744B0200C3
:10DA000003000400070008000900E000F001000CA
:10DA1000130014001500 1A001B001C001F0020003A
:10DA200021002600270036003700380 03B003D006B
:10DA3000420043004400470049004E004F005000A0
:10DA4000530055008600870088008900 8A008B00FB
:10DA50008C008D008E008F0090009100B600B70002
:10DA6000B800B900BA00BB00BC00BD00BE00BF00DA
:10DA7000C000C100C200C300C400C500C600C7008A
:10DA8000C800C900CA00CB00CC00CD00CE00CF003A
:10DA9000D000D100D200D300D400D500D600D700EA
:10DAA000D800D900DA00DB00DC00DD00DE00DF009A
:10DAB000E000E100E200E300E400E500EA00EB0042
:10DAC000EC00ED00EE00EF00F000F100F200F300DA
:10DAD000F400F500F600F700F800F900FA00FB008A
:10DAE000FC00FD00FE00FF0000010101020103 0136
:10DAF000040105010601070108010901 0C015A0092
:10DB00009E0082000E01A000000302001500638049
:10DB1000010004000E0085C0411F0602800D0701B0
:10DB2000FF000800110009002700 0A0027000B0071
:10DB300040008000000C20800000AD0000100F00AD
:10DB400015007080010D1100090012200AFF13005A
:10DB5000000014008089150000EA160000CB1701B0
:10DB6000FF001800110019002700 1A0027001B00F1
:10DB700040001C6002008000001D2D80000000009D
:10DB8000000006DB80F007DBA0F008DBC0F009DB5B
:10DB9000E0F0FF2F3F3FFF1127270001020393DB37
:10DBA000C7F094DBC8F095DBC9F093DBD7F094DBCA
:10DBB000D8F095DBD9F09CDB4EF00000000097DB3D
:10DBC000C7F098DBC8F099DBC9F097DBD7F098DB9A
```

```
:10DBD000D8F099DBD9F09ADB4EF000000000C000CD
:10DBE000000102041E00638401000400020085C0DD
:10DBF000411F0602800D0701FF0008001100090007
:10DC000027000A0027000B0040008000000C208045
:10DC10000000CD00000E0F041E007084010D1100E5
:10DC20000100122005FF13000000140080891500 78
:10DC300000EA160000CB1701FF00180011001900C0
:10DC400027001A0027001B0040001C600300800012
:10DC5000001D2D800000000000000DEDB80F0DFDB17
:10DC6000A0F0E0DBC0F0E1DBE0F001000400010225
:10DC700003FF07FF2F3F3F03030B2401036BDCD09F
:10DC8000F06CDCDBF00000000071DCD7F072DCD857
:10DC9000F06DDC4EF00000000073DCD7F074DCD8CF
:10DCA000F06FDC4EF00000000077DCD7F078DCD8B5
:10DCB000F06EDC4EF00000000079DCD7F07ADCD8A2
:10DCC000F070DC4EF0000000006BDCD0F07CDCDBA0
:10DCD000F00000000074DCC7F075DCC8F076DCC929
:10DCE000F074DCD7F075DCD8F076DCD9F06FDC4E60
:10DCF000F000000000C000000102041E0063840167
:10DD000000003000000C40000050664000072400B2
:10DD1000006884011F090405FF0A0523000B0400A5
:10DD2000000C040EFF0D0000000E0080890F0000A3
:10DD3000EA100000CB11017F0012017F0013017F68
:10DD40000014017F00150007001600270017 0027A8
:10DD5000001800400019000900800000504600060
:10DD6000003F3F3F3F1D2000001D000000DE00007F
:10DD70001CF5DC80F0F6DCA0F0F7DCC0F0F8DCE0AD
:10DD8000F0FF1181DDD0F081DDD1F081DDD2F081B5
:10DD9000DDD3F074DCD4F075DCD5F076DCD6F0821F
:10DDA000DDD8F000000000801313202426273049 1E
:10DDB0004C515454811010E01111FF13143F1516EB
:10DDC000FF17173F181AFF2020FE21217C24247FF3
:10DDD00025260F28281D3049FF4C51FF5454FFFFC2
:10DDE0001B18240125032609 2C382D402E382F4CD2
:10DDF000300031003202330234993599 36AA37AAFD
:10DE0000382D392D3A4E3B4E3C693D693E713F718C
:10DE1000405E415C42624364446E454146CA473EAF
:10DE2000481849424C104D414E6E4F3E50B351BAC6
:10DE300052F0549C550C56B457BA6060612762008A
:10DE40007E007F00FF004088417D428D43914474F5
:10DE50004519463E471948B349194C234D194EFF01
:10DE60004F1850C2FF0040B541A942BA43BF446EAB
:10DE7000452F4625472F482649304C244D2F4EDB51
:10DE80004F2E50B3FF00000000006C3B0300D04F4A
:10DE900003008464030020780300108D03009CA617
:10DEA000030090B703005CCD030094E0030000F78B
:10DEB0000300B40B0400442104008C380400784CA7
:10DEC000040008620400A8760400288D0400089E5F
:10DED00004005CB8040018CA040018DE0400000046
:10DEE000190CD00B880B480B060BBA0A8A0A4E0A8B
:10DEF0001C0AE309B1097F094C092109F508CC087E
```

```
:10DF0000A10882085408350814080000 3F0CF40BDF
:10DF1000AC0B6B0B280BDB0AAA0A6E0A3B0A020A3F
:10DF2000CF099D0968093D091109E708BC089D084A
:10DF30006D084F082D08000011137C1217122411D0
:10DF4000E710F312BE10EB10E10F58100310111080
:10DF5000D9102F103710DC0F4210710E5010E00E48
:10DF6000520E000000004C1003008C2503005039B5
:10DF70000300544E03005863030020780300108D03
:10DF80000300D8A10300DCB60300F4CB030094E047
:10DF9000030084F50300B40B04008C1F04006834F4
:10DFA000040094490400705E0400B0730400A0886B
:10DFB0000400089E0400D0B20400FCC7040018DE70
:10DFC000040004F204001C070500201C0500C431E5
:10DFD000050078460500F45B0500E47005004C86FA
:10DFE0000500C89B05007CB005000000C20C6D0C4C
:10DFF000210CD50B8C0B480B060BC80A8C0A520A55
:10E000001C0AE709B109830955092709FC08D20848
:10E01000AA0882085D0839081408F407D307B40772
:10E02000940777075A073E0722070707EE06000006
:10E03000210020001F001E001D001D001C001B00F1
:10E040001B001A001A0019001900180018001700 08
:10E05000170016001600160015001500140014 0015
:10E060001400130013001300130012001200 12001A
:10E0700011000000E712D412E711B1117811241138
:10E08000EA109B1061103C10DF0FAA0F0410510F13
:10E09000100FF50EB90EA70E760E750E320E110E7C
:10E0A000520EC00D9F0D740D830D3E0D3B0D080DDE
:10E0B000020D010DBA0C000000001C270300543AA9
:10E0C0000300A04D03006060030024740300 4C882B
:10E0D00003006C9A0300CCAD03002CC103008CD468
:10E0E000030000E8030010FB0300880F0400AC22CB
:10E0F00004001C350400F4480400185C040004709B
:10E100000400C48204004C960400FCA90400F8BC7E
:10E11000040080D0040044E4040040F70400B40A82
:10E1200005008C1E0500C43105007445050098 5893
:10E130000500986C0500E47F05000C94050068A6B6
:10E14000050004BA0500000016178E160B1691156F
:10E1500016159F143714CE1368130713A912501203
:10E16000F411A21155110511BB1071102D10E90FFA
:10E17000A60F680F2A0FED0EB50E7C0E450E100E81
:10E18000DC0DAB0D790D4A0D1B0DF10CC50C00001B
:10E190005D17D3164E16D3155715DE1475140B14D0
:10E1A000A4134113E21288122B12D8118A113A11CA
:10E1B000EF10A3105F101A10D60F970F580F1B0FF8
:10E1C000E20EA90E710E3C0E070ED50DA30D730DB8
:10E1D000430D190DEC0C0000261DAA27FF1BDF259F
:10E1E000FC1A1D25EA194B23221928227118FC203C
:10E1F00019186120F4163E1F6E167D1ED3157B1D67
:10E200007515AC1CDC14211C5E14501B1614BF1AAF
:10E21000A913211A5C13B019251303197912 3F00B1
:10E22000000000 3F000000 3F000000 45FFFFFF46FFE9
```

```
:10E23000FFFF0000010045FFFFFF46FFFFFF00005A
:10E24000010045FFFFFF46FFFFFF0000010045FF03
:10E25000FFFF46FFFFFF0000010045FFFFFF46FFF5
:10E26000FFFF0000010045FFFFFF46FFFFFF00002A
:10E27000010046FFFFFF45FFFFFF000002003F00D7
:10E2800000003F0000003F0000004BFFFFFF3F0089
:10E2900000003F0003004BFFFFFF3F0000003F0076
:10E2A00003004BFFFFFF3F0000003F0003004BFF58
:10E2B000FFFF3F0000003F0003004BFFFFFF3F0058
:10E2C00000003F0003004BFFFFFF4AFFFFFF00007D
:10E2D00004004BFFFFFF3F000000000004003F0070
:10E2E00000003F0000003F000000000000003F0071
:10E2F00000003F000500000000003F0000003F005C
:10E300000500000000003F0000003F000500000085
:10E3100000003F0000003F000500000000003F003B
:10E3200000003F000600000000003F0000003F002A
:10E330000600000000003F0000003F0006003F0014
:10E3400000003F0000003F0007003E4900003F0082
:10E3500000003F0008003E4900003F0000003F0071
:10E3600008003E4900003F0000003F0008003F4910
:10E3700000003F0000003F0009003F4900003F004F
:10E3800000003F0009003F4900003F0000003F003F
:10E3900009003F4900003F0000003F0009003F0026
:10E3A00000003F0000003F000000984900003F00CF
:10E3B000000000000A0098490000994900000000090
:10E3C0000A00984900003F0000003F000B009849F8
:10E3D00000003F0000003F000B00984900003F0094
:10E3E00000003F000B00984900003F0000003F0084
:10E3F0000B00984900003F0000003F000B003F0069
:10E4000000003F0000003F0000009D4900009E49C1
:10E410000000000000C009E4900009D490000000023
:10E420000D009E4900009D49000000000D009E491E
:10E4300000009D49000000000D009E4900009D491C
:10E44000000000000D009E4900009D4900000000F2
:10E450000D009E4900009D49000000000D003F0096
:10E4600000003F0000003F000000D4FEFFFF1EE25E
:10E4700000E046FFFFFF72E200E04BFFFFFFC6E255
:10E4800000E0000000001AE300E03F4900006EE3F6
:10E4900000E099490000C2E300E09E49000016E454
:10E4A00000E000FA00006AE400E03F0000003F00E6
:10E4B00000003F0000005FFFFFFF60FFFFFF000064
:10E4C00001005FFFFFFF60FFFFFF000001005FFF33
:10E4D000FFFF60FFFFFF000001005FFFFFFF60FF25
:10E4E000FFFF000001005FFFFFFF60FFFFFF000074
:10E4F00001005FFFFFFF60FFFFFF0000010060FF02
:10E50000FFFF5FFFFFFF000002003F0000003F0031
:10E5100000003F00000065FFFFFF3F0000003F00DC
:10E52000030065FFFFFF3F0000003F00030065FFA1
:10E53000FFFF3F0000003F00030065FFFFFF3F00BB
:10E5400000003F00030065FFFFFF3F0000003F00A9
:10E5500003006SFFFFFF64FFFFFF000004006SFF8D
```

```
:10E56000FFFF3F0000000000004003F0000003F00EC
:10E5700000003F0000000000000003F0000003F00DE
:10E58000050000000003F0000003F000500000003
:10E5900000003F0000003F00050000000003F00B9
:10E5A00000003F00050000000003F0000003F00A9
:10E5B00006000000003F0000003F0006000000D1
:10E5C00000003F0000003F0006003F0000003F0049
:10E5D00000003F000700DF9200003F0000003F0006
:10E5E0000800DF9200003F0000003F000800DF92BB
:10E5F00000003F0000003F000800E09200003F00E4
:10E6000000003F000900E09200003F0000003F00D2
:10E610000900E09200003F0000003F000900E09286
:10E6200000003F0000003F0009003F0000003F00E5
:10E6300000003F000000949300003F0000000000035
:10E640000A00949300009593000000000A00949340
:10E6500000003F0000003F000B00949300003F00CB
:10E6600000003F000B00949300003F0000003F00BB
:10E670000B00949300003F0000003F000B009493B8
:10E6800000003F0000003F000B003F0000003F0083
:10E6900000003F000000999300009A9300000000E2
:10E6A0000C009A9300009993000000000D009A93CB
:10E6B000000099930000000000D009A9300009993C8
:10E6C000000000000D009A9300009993000000000E4
:10E6D0000D009A9300009993000000000D009A939A
:10E6E000000099930000000000D003F0000003F0073
:10E6F00000003F0000008FFEFFFFAAE400E060FF83
:10E70000FFFFFEE400E065FFFFFF52E500E00000D0
:10E710000000A6E500E0E0920000FAE500E0959335
:10E7200000004EE600E09A930000A2E600E000FA46
:10E730000000F6E600E03F0000003F0000003F0060
:10E7400000002FFEFFFF30FEFFFF00000D002FFE38
:10E75000FFFF30FEFFFF00000D002FFEFFFF30FE29
:10E76000FFFF00000D002FFEFFFF30FEFFFF000047
:10E770000D002FFEFFFF30FEFFFF00000D002FFEFB
:10E78000FFFF30FEFFFF00000D0030FEFFFF2FFEF9
:10E79000FFFF00000C003F0000003F0000003F00B2
:10E7A000000035FEFFFF3F0000003F000B0035FE7C
:10E7B000FFFF3F0000003F000B0035FEFFFF3F0062
:10E7C00000003F000B0035FEFFFF3F0000003F0050
:10E7D0000B0035FEFFFF3F0000003F000B0035FE41
:10E7E000FFFF34FEFFFF00000A0035FEFFFF3F0081
:10E7F000000000000A003F0000003F0000003F0052
:10E8000000000000003F0000003F000900000081
:10E8100000003F0000003F00090000000003F0032
:10E8200000003F00090000000003F0000003F0022
:10E830000900000000003F0000003F000800000049
:10E8400000003F0000003F00080000000003F0003
:10E8500000003F0008003F0000003F0000003F00B4
:10E860000700771D01003F0000003F000600771DF4
:10E8700001003F0000003F000600771D01003F003F
:10E880000000003F000600781D01003F0000003F002F
```

```
:10E890000500781D01003F0000003F000500781DC5
:10E8A00001003F0000003F000500781D01003F000F
:10E8B00000003F0005003F0000003F0000003F0057
:10E8C0000000B61F01003F00000000000400B61F5A
:10E8D0000100B71F010000000400B61F01003F0047
:10E8E00000003F000300B61F01003F0000003F0092
:10E8F0000300B61F01003F0000003F000300B61FE9
:10E9000001003F0000003F000300B61F01003F0070
:10E9100000003F0003003F0000003F0000003F00F8
:10E920000000BB1F0100BC1F010000000200BC1F53
:10E930000100BB1F010000000100BC1F0100BB1F44
:10E94000010000000100BC1F0100BB1F010000000E
:10E950000100BC1F0100BB1F010000000100BC1F23
:10E960000100BB1F010000000100BC1F0100BB1F14
:10E97000010000001003F0000003F0000003F00D8
:10E980000000A8F9FFFF36E700E030FEFFFF8AE74E
:10E9900000E035FEFFFFDEE700E00000000032E8A7
:10E9A00000E0781D010086E800E0B71F0100DAE80A
:10E9B00000E0BC1F01002EE900E0306F010082E999
:10E9C00000E03F0000003F0000003F000000EFFDBE
:10E9D000FFFFF0FDFFFF00000D00EFFDFFFFF0FD6A
:10E9E000FFFF00000D00EFFDFFFFF0FDFFFF000047
:10E9F0000D00EFFDFFFFF0FDFFFF00000D00EFFD3C
:10EA0000FFFFF0FDFFFF00000D00EFFDFFFFF0FD39
:10EA1000FFFF00000D00F0FDFFFFEFFDFFFF000016
:10EA20000C003F0000003F0000003F000000F5FD2B
:10EA3000FFFF3F0000003F000B00F5FDFFFF3F0020
:10EA400000003F000B00F5FDFFFF3F0000003F000E
:10EA50000B00F5FDFFFF3F0000003F000B00F5FD40
:10EA6000FFFF3F0000003F000B00F5FDFFFFF4FD3E
:10EA7000FFFF00000A00F5FDFFFF3F00000000005F
:10EA80000A003F0000003F0000003F00000000BF
:10EA900000003F0000003F000900000000003F00B0
:10EAA00000003F000900000000003F0000003F00A0
:10EAB0000900000000003F0000003F0009000000C6
:10EAC00000003F0000003F000800000000003F0081
:10EAD00000003F000800000000003F0000003F0071
:10EAE00008003F0000003F0000003F000700D6275D
:10EAF00001003F0000003F000600D62701003F0054
:10EB000000003F000600D62701003F0000003F0044
:10EB10000600D72701003F0000003F000500D7276F
:10EB200001003F0000003F000500D72701003F0023
:10EB300000003F000500D72701003F0000003F0014
:10EB400005003F0000003F0000003F000000652A74
:10EB500001003F00000000000400652A0100B71F0B
:10EB600001000000400652A01003F0000003F0092
:10EB70000300652A01003F0000003F000300652AF2
:10EB800001003F0000003F000300652A01003F0034
:10EB900000003F000300652A01003F0000003F0025
:10EBA0000300[illegible]
:10EBB0000100[illegible]
```

```
:10EBC00001000000001006B2A01006A2A0100000018
:10EBD00001006B2A01006A2A0100000001006B2A73
:10EBE00001006A2A0100000001006B2A01006A2A64
:10EBF00001000000001006B2A01006A2A01000000E8
:10EC000001003F0000003F0000003F0000004CF901
:10EC1000FFFFC2E900E0F0FDFFFF16EA00E0F5FDAE
:10EC2000FFFF6AEA00E000000000BEEA00E0D7272C
:10EC3000010012EB00E0662A010066EB00E06B2A9F
:10EC40000100BAEB00E0306F01000EEC00E00A00BA
:10EC500001003F000000000700000809407B30314
:10EC600010000F09AC022000330B7D0148002E0E6E
:10EC70002F01C200661578000002E11C7A00000432
:10EC80001E2945000008EB363700436F7079726922
:10EC900067687420313939332C2031393934204DAB
:10ECA0004F53542C496E632E00C802000056578BF8
:10ECB0003EAA88A04504B4000BC07517C646FF02E3
:10ECC000C6451605C6451720C6454E14900EE8ECFD
:10ECD0002FEB658B36AA8883C602F64407087406B4
:10ECE00057E85E00EB40F6440704740CFF740157CC
:10ECF000E8080183C404EB2FF6440702741EF644AF
:10ED00000780740CFF740157E8400183C404EB17BB
:10ED1000FF740157E8840183C404EB0BF644070138
:10ED2000740A57E8F101598846FFEB0CC646FF020A
:10ED30006A02900EE81231598A46FF8845145F5ED8
:10ED4000C9C3C828000056C646F7028D46F8508D44
:10ED500046D8506A16900EE8A67D83C4063D0B0087
:10ED600074383D21007403E98B009AAD0206EF333D
:10ED7000F6EB0A688813900EE822A7594681FEE850
:10ED80000375F08D46D8506A42900EE8727D83C4B8
:10ED900004FF7604E8850259EB5BF746F90001743D
:10EDA00004C646F7008D46D8506A42900EE8507D62
:10EDB00083C4049A2D0000D0C70603810053C70600
:10EDC000018112049A000006EF3D010075229A9617
:10EDD0000206EF3D010075186A0B8D46F4509A59F2
:10EDE0000E2BF283C4043D010075059AFF1B2BF224
:10EDF0009A520000D08A46F75EC9C3C8020000C616
:10EE000046FF029A000000D00BC0743A684A04E83A
:10EE1000A2AF593D01007409FF7604E8FE0159EBE9
:10EE2000208B560681FAFE007603BAFE006A0D5268
:10EE3000684A04E8797A83C4060BC07504C646FFA5
:10EE4000009A520000D08A46FFC9C3C8020000C61B
:10EE500046FF029A000000D00BC0743A684A04E8EA
:10EE6000A0AE593D01007409FF7604E8C90159EBD1
:10EE7000208B560681FAFE007603BAFE006A0D5218
:10EE8000684A04E8297A83C4060BC07504C646FFA5
:10EE9000009A520000D08A46FFC9C3C8020000563B
:10EEA000578B76048B7E06C646FF029A000000D080
:10EEB0000BC0745C81FFFE00762581FFFF007604A5
:10EEC0006A02EB026A01900EE87E2F59C6441605CD
:10EED000C644171A804C4E15900EE8E02DEB2C6AB4
:10EEE0000D57684A04900EE8AC7A83C4060BC075CF
```

```
:10EEF0000F57684A04E893AE83C4043D01007407C9
:10EF000056E8330159EB04C646FF009A520000D080
:10EF10008A46FF5F5EC9C3C82A000056578B760435
:10EF2000C646F502BF0300830ECA8601A12E888B58
:10EF3000162C8883EA0A1D0000A30A878916088711
:10EF4000E808508AD00AD274074F8BC70BC075D718
:10EF50000AD27403E9A7009A2D0000D0A128FF89E6
:10EF600046F6830E28FF406A01900EE84DA959C766
:10EF700046F2000033FFC7065EFF0040C70658FF99
:10EF80000000C7065AFFFFFFC7065EFF00C0F70676
:10EF90005EFF200074F88D46F8508D46D6506A16F4
:10EFA000900EE85B7B83C4063D0B00751BF746F9AA
:10EFB00000027414C646F5008D46D6506A42900E83
:10EFC000E83D7B83C404EB148D46D6506A42900E14
:10EFD000E82D7B83C4044783FF30729A807EF5005E
:10EFE0007409FF46F2837EF23272896A00900EE85D
:10EFF000C9A8599A520000D08B46F6A328FF807EFC
:10F00000F5007411C6441604C64417FF804C4E0127
:10F01000900EE8A82C8A46F55F5EC9C3558BEC5666
:10F020008B7604C6441604C6441708804C4E0190E3
:10F030000EE8892C5E5DC3558BEC568B7604C64476
:10F040001604C64417A0804C4E01900EE86E2C5E4C
:10F050005DC3000000000000000000000000000090
:020000020F06E7
:10000000C80A0000565733F6BF02009C8F46FAFA22
:10001000A128FF8946F8F746FA00027401FB900E0A
:10002000E8FB013D01007407C746FC0500EB699C35
:100030008F46FAFAC70628FFFD00F746FA00027459
:1000400001FB803E4504007430C6062F00DCA1038E
:1000500081C1E808A23000A00381A23100A1018182
:10006000C1E808A23200A00181A233006A05682F0E
:10007000009A6BEE00D083C404E8F5048946FC8046
:100080003E4504007412C6062F00FC6A01682F006A
:100090009A6BEE00D083C4048B5EFC83FB0B76036B
:1000A000E9FD00D1E32EFFA70602BE0100A10381F6
:1000B000C1E808B4003D510074243D5300741F3D55
:1000C0005B007402EB20813E0381015B7508C6066C
:1000D0000787FFE9DA00C606078700E9D200C606EF
:1000E000618C01E9CA00813E038100447303E9BFCA
:1000F00000813E0381FF4F7603E9B400A10381250F
:10010000004C8946FE3D0044741A3D004874083D89
:10011000004C7418E9990083268F86FD830E8F8624
:1001200004E98C0083268F86F9E9840083268F8674
:10013000FB830E8F8602EB78A103812500FF8946A1
:10014000F6B90800BBE6012E8B073B46F674078321
:10015000C302E2F3EB232EFF6710EB18EB16A105A9
:1001600081A38D86EB0EA10581A38F86EB06A005EA
:1001700081A20081BE0100EB374F8BC70BC0740317
:10018000E9ACFEEB25900EE82301EB1EFA830E2C62
:10019000FF408B46F825BFFFA328FFFBCD0EEB0ADF
:1001A0004F8BC70BC07403E985FEBE00FF0B76FCC6
```

```
:1001B00083FE017418C6062F00FB8A46FCA230009D
:1001C0006A02682F009A6BEE00D083C4049C8F46AD
:1001D000FAFA8B46F8A328FFF746FA00027401FBEF
:1001E0008BC65F5EC9CB00010008000F0012002023
:1001F0000029005C00686E015C016E016E015E0109
:1002000066016E016E01AA003801A0018501A001FE
:1002100085018C01A001A001A001A0012F00568042
:100220003E578C007405B80100EB3C803E618C00A9
:10023000740AC606618C00BEE02EEB25BED007EB2B
:1002400020C70660FF0000832666FFDFEB0AE81F79
:100250000A803E578C0075CEF70666FF200074EECC
:100260004E0BF675DC33C05ECB558BEC8B4606A38C
:1002700003818B4608A301810EE884FD8BD083FAAD
:10028000175110EE897FF3D01007505B80100EBFF
:1002900003B805FF5DCB33D2F7068D860040750AA3
:1002A000803E628C007403BA01008BC2CBC802008E
:1002B0000056800E03F180E8C710C606618C00A0CE
:1002C0006686FEC8A213F0A16486C1E80804FEA2F7
:1002D0004EF0C646FF036800C468AB07E8EC0B832A
:1002E000C404A305810BC0750C8A46FF04FF884631
:1002F000FF0AC075E18A46FFB4000BC07517810E76
:10030000FD8B0080FA830E2CFF40C70628FF8C006F
:10031000FBCD0EEB4C33F6800E39F0004683FE1910
:1003200072F5C646FF03E87A0CA305810BC0750C75
:100330008A46FF04FF8846FF0AC075EA8A46FFB472
:10034000000BC07517810EFD8B0080FA830E2CFF09
:1003500040C70628FF8C00FBCD0EEB05802603F17D
:100360007F5EC9CB558BEC568B7608C60404C64419
:10037000001448A4606B4002D02008BD883FB047723
:1003800021D1E32EFFA7A903C6440216EB18C644E9
:100390000217EB12C6440218EB0CA0E48D8844024D
:1003A000EB04C644023F5E5DCB880388038E039452
:1003B000039A03558BEC8B56068B5E08C606238C7E
:1003C000828BC2C1E808A2258C8AC224FFA2268C97
:1003D0008BC3C1E808A2278C8AC324FFA2288C6A99
:1003E0000668238CE8ED0983C4040BC074080EE88A
:1003F0002CFE0BC07505830EFF8B405DCBC80E0035
:10040000008B5606C606238C818BC2C1E808A22544
:100410008C8AC224FFA2268C6A0468238CE8B40963
:1004200083C4040BC07507830EFF8B40EB57C706D0
:10043000588C0000C646F3008A46F3B4008D56F48B
:1004400003C250E8F7085B8807803E568C007408AA
:10045000810EFF8BA100EB09FE46F3807EF30A724A
:10046000D78A46F4B400C1E0088A56F5B60003C244
:10047000A3588C8A46F6B400C1E0088A56F7B60045
:1004800003C28946FE8B46FEC9CBFE06FC8B8A0E54
:10049000FC8BEB2380C1FF8AC1B400C1E0028BD882
:1004A0008B87368C8B97348C8AD9B700C1E302894D
:1004B00087368C8997348C0AC975D98AC1B400C132
:1004C000E0028B1603818BD88997348C8AC1B400E3
:1004D000C1E0028B1601818BD88997368C03B10091
```

```
:1004E0008AC1B400C1E0028BD88B87348CA303810E
:1004F0008AC1B400C1E0028BD88B87368CA30181FE
:100500003A0EFC8B7328FEC18AC1B400C1E0028B95
:10051000D88B87368C8B97348C8AD9B700C1E3028D
:100520008987368C8997348C3A0EFC8B72D8FE0EF4
:10053000FC8BC3C8020000C646FF008A4604B40014
:100540005068238CE88D0883C4043D0100740B833C
:100550000EFF8B40C646FF03EB120EE8C0FC3D01C8
:10056000007409830EFF8B40C646FF058A46FFC90B
:10057000C3C8180000565733F6F70603810080748D
:100580004CA103812500C0A3508CF70603810040D5
:100590007407C606238C0BEB05C606238C0AA10143
:1005A00081C1E808A2258CA00181A2268C6A04687A
:1005B000238CE81F0883C4040BC07403E91306836B
:1005C0000EFF8B40B80300E90A06E90506A1038186
:1005D0002500F03D00407403E987018326FD8BF977
:1005E000A1038125000C3D0004740C3D0008740E2D
:1005F0003D000C7415EB22802639F0E7EB1B800ED2
:1006000039F018830EFD8B04EB0F802639F0EF8054
:100610000E39F008830EFD8B02A0608CB4008BD8DD
:1006200083FB057779D1E32EFFA7640CA101812517
:100630001F006BC00B0514056800C450E84E0A8308
:10064000C404A10181253F006BC00605FE026800BD
:10065000C450E8910A83C404EB4FA10181251F0017
:100660006BC00B05CA036800C450E8200A83C404A9
:10067000A10181251F006BC006054A026800C4EB7A
:10068000D0A10181251F006BC00B0529016800C4A2
:1006900050EB066800C4681E01E8F109EBB7830E51
:1006A000FF8B20B80600E92B05F7060381000874CC
:1006B0006DA02487B4002D02008BD883FB03776DD7
:1006C000D1E32EFFA75C0CA1018125C00FC1E80674
:1006D0006BC003054B076800C450E8E20A83C404FA
:1006E000EB4BA1018125C00FC1E8066BC00305EBF0
:1006F000066800C4EBE3A1018125C00FC1E8066BC9
:10070000C00305BB066800C4EBCFA1018125C00F63
:10071000C1E8066BC003058B066800C4EBBBC606C8
:1007200004F100C60605F100C60606F100F706034F
:10073000810027516F7060381000874056 8A86138
:10074000EB0368D6069A9D9400E059F706038100F2
:10075000087503E97C046A03E8800A59E97304E92F
:100760007004A103812500FF8946F8B91F00BBE092
:100770000B2E8B073B46F8740883C302E2F3E9496A
:10078000042EFF673EC606238C006A02E8A4FD59CA
:10079000B4008BF00BC07403E93704BE0100E931EB
:1007A000048126FF8BEC9DF706FD8B00807521F7F9
:1007B00006FF8BA1007519E8D0FCC706038100086D
:1007C000E8AEFD8BF0E816FD83FE017403E9020438
:1007D000F60604F140750681 0EFF8B0040F60638E0
:1007E000F0027406810EFF8B0020A0628CB4000B17
:1007F0000C0750681 0EFF8B0002F706588C0100744D
:100800000058 30EFF8B10F60605F12074058 30EFF9D
```

```
:100810008B01A1FF8BA305818126FF8BDFFEBE012B
:1008200000E99F038126FD8BE786F706FD8B00809C
:100830007521F706FF8BA1007519E84DFCC706036B
:10084000810008E82BFD8BF0E893FC83FE01740324
:10085000E97F03F706588C00107406810EFD8B00AB
:1008600040F706588C02007406810EFD8B0020F7BD
:1008700006588C10007406810EFD8B0010F7065888
:100880008C00047406810EFD8B0008F706588C005E
:10089000027406810EFD8B0001F60605F148740511
:1008A000830EFD8B08A1FD8BA30581E970FF8026D7
:1008B00003F1FBE90D03800E03F104E90503C6060D
:1008C000238C076A02E86BFC59B400E93902C606BA
:1008D000238C08EBEEFF360181E8930959E9E30226
:1008E000803E628C017524E8A0FBC70603810014DA
:1008F000C7060181FF00E878FC8BF0E8E0FB0BF60F
:100900007403E9CD026A00E8650959A0FC8BB400C4
:100910000BC07403E9BB02E9A902C606338C01E9E6
:10092000A102C606338C00E99902803E338C007424
:1009300003E99E02E853FBC70603810052E831FC3D
:100940008BF0E899FB0BF67403E986028126FD8B98
:100950007FDFC606238C116A02E8D7FB59B4008BEF
:10096000F0F706588C0200750AF60604F14075038C
:10097000E95F02810EFD8B0020E953028B1E01818D
:10098000C1EB08A0018124FF8887018CE93402A112
:100990000181A3308CE92B02C70605810000E97DA7
:1009A000FEA0328CB4000BC07403E91602C60632F6
:1009B0008C01E90E02E90B02C606328C00E9030243
:1009C000A10181A32D8CA02D8C24FFA22C8CB00022
:1009D000D0E0A22B8CE9EB01A02B8C0CA08846E880
:1009E000A02C8C8846E9A02B8C0CA18846EAE81F35
:1009F000188D46E8506A03E8341883C4048D46E82D
:100A000050A0038124FF50E8A41883C404E81818F8
:100A1000E9B001A02F8CB4000BC07403E9A401C697
:100A2000062F8C01A02B8C0CA08846E8A02C8C886B
:100A300046E9E8DB178D46E850A0038124FF040255
:100A400050E8EA1783C404E8DE17C6062F8C00E9D5
:100A50007101E96E01C6062F8C00E96601A10181D2
:100A6000A3298CE95D01C70605810000FF36298CAA
:100A70000EE889F959A30581A0568CB4000BC07506
:100A800006BE0100E93C01F606568C077406BE035B
:100A900000E92F01BE0500E92901E92601FF360121
:100AA00081FF36298C0EE80AF983C404F606568CB9
:100AB000077406BE0300E90A01F606568C38750372
:100AC000E90001BE0500E9FA00E9F700C606238C3B
:100AD000806A02E85DFA59B4008BF00BC07503BE62
:100AE000010033FFE856028885528C4783FF047C5F
:100AF000F3E9DE00C606238C0CA00181A2258C6AD6
:100B000003E9C1FDE8B4018BF0E9C600C606238CF9
:100B10000D6A02E81DFA59B4008BF00BC0750B8307
:100B200026FF8BE18126FD8BEFA6A002F1B40089A0
:100B300046FEA005F1F6D0200602F18A46FEA2028A
```

```
:100B4000F1E98E00A0038124FFA2608C803E608CBE
:100B5000007470803E608C017502EB67A0608CB4FD
:100B6000002D02008BD883FB03773ED1E32EFFA735
:100B7000D80BC746FC00C4C746FA8B06BA1000EB78
:100B800028C746FC00C4C746FABB06EBEFC746FCC5
:100B900000C4C746FAEB06BA2200EB0DC746FC00BC
:100BA000C4C746FA4B07BA200033FF3BFA7D14C492
:100BB0005EFA268A47018885018C8346FA03473B03
:100BC000FA7CECC606578C01EB08830EFF8B20BE27
:100BD00006008BC65F5EC9C3720B810B8D0B9C0B2D
:100BE000000000001000200030004000500070008E7
:100BF000000F00100011001200130014001600175F
:100C000000180019002000290050005100520053 24
:100C100000540055005600 5B015B005F00708F09B7
:100C20009809BE08CE08AE08B608B8098507CC0AF0
:100C3000A1095D0A660A9D0AF40AC009D809130AC7
:100C4000550AA10724080C0B040BE008D5081A0963
:100C500022092A09C30BC30B440B7C090A07F606B9
:100C6000E206C706930693068106810 65A062C06FD
:100C7000C8040000F60638F001753E9C8F46FCFA69
:100C8000A0578CB4000BC07510A000F18846FF80FF
:100C90002603F1FEC606578C01F746FC00027401DC
:100CA000FBE899008846FE8A46FFB400C1E0088A46
:100CB00056FEB60003C2A3588CC9C356C606238C81
:100CC00001C606258C00B800C48EC026A08A06A2E4
:100CD000268CC606278C00C606288C006A06682368
:100CE0008CE8F00083C4040BC0750A830EFF8B40B0
:100CF000BE0300EB440EE825F53D0100740A830EA7
:100D0000FF8B40BE0500EB316850C39A9D9400E014
:100D10005968A8619A9D9400E059E86DF7C70603E9
:100D2000810050E84BF8A305810BC07505800E02C9
:100D3000F1058B360581E8A5F78BC65EC3C80200B6
:100D400000F60638F0017526C70660FF000083260E
:100D500066FFDFF60638F0017508F70666FF20002B
:100D600074F1F60638F0017505800E568C08802661
:100D700039F0FD800E03F101C70660FF00008326F5
:100D800066FFDFF60638F0017408F70666FF2000FC
:100D900074F1F60638F0017405800E568C10A00030
:100DA000F18846FF802603F1FEC70660FF0000833E
:100DB0002666FFDFF60638F0017508F70666FF20A5
:100DC0000074F1F60638F0017505800E568C208A05
:100DD00046FFC9C3C8020000568B76048B4E06C678
:100DE00006568C00C606578C00C70660FF000083BD
:100DF0002666FFDFF60638F0017508F70666FF2065
:100E00000074F1F60638F001750F800E568C01C69D
:100E100006578C0133C0E9AF0083F9027506B0FFB5
:100E20002A04EB1D8A048846FFBA02003BD17D0CE0
:100E30008BDA8A000046FF423BD17CF4B0FF2A46A1
:100E4000FF884401800E39F00233D23BD17D6C8B98
:100E5000DA8A00A200F1800E03F101C70660FF00EC
:100E60000083266 6FFDFF60638F0017408F7066691
```

```
:100E7000FF200074F1F60638F001740C800E568CD9
:100E800002802603F1FEEB87802603F1FEC7066091
:100E9000FF0000832666FFDFF60638F0017508F7CD
:100EA0000666FF200074F1F60638F0017508800E22
:100EB000568C04E959FF423BD17C94802639F0FDE1
:100EC000800E03F101B801005EC9C3558BEC56805A
:100ED0002603F1FE802603F1BF800E03F140802639
:100EE00039F0FD834604046A08E84B00596A00E8BB
:100EF0004500596A23E83F005968FF00E838005967
:100F0000803E568C007409C606578C0133C0EB2412
:100F1000BE0400EB16803E568C0075EBC45E04FFE9
:100F20004604268A0750E80E00594681FE04487C94
:100F3000E4B801005E5DC3558BECF60638F0017431
:100F400028C70660FF0000832666FFDFF60638F03C
:100F5000017408F70666FF200074F1F60638F00108
:100F60007407800E568C40EB388A4604A200F1804C
:100F70000E03F101C7066 0FF0000832666FFDFF65F
:100F80000638F0017508F70666FF200074F1F606D2
:100F900038F0017507800E568C80EB05802603F132
:100FA000FE5DC3C82200005657C646DE0E6A028D9B
:100FB00046DE50E81EFE83C4040BC0750AC6065701
:100FC0008C0133C0E9A700E873FD803E568C0075A4
:100FD000ECE869FD803E568C0075E2E85FFD8846CE
:100FE000FD803E568C0075D5E852FD8AD8803E566D
:100FF0008C0075C98A46FDB400C1E0088AD3B600EA
:1010000003C28946FE33FFB2828856DE8A56FD88C7
:1010100056E08AD38856E1BE0400EB0FB800C48EB8
:10102000C0268A95AF4F8852DE474683FE1472EC85
:101030006A148D46DE50E89BFD83C4040BC0750323
:10104000E97AFFE8F7FC803E568C007403E96DFFF7
:101050008346FE088A5EFE8B46FEC1E8088846FD90
:1010600081FF000372A1C606578C01B801005F5EC4
:10107000C9C3C80400006A00E86001598846FDB48D
:101080000069C0FA00C1F8088946FEC9CB558BEC4F
:10109000803E2487047407803E248705750BC45E58
:1010A0000426FF7701E8630059C45E0426FF770930
:1010B000E89F0059C45E0426FF7707E8940059C4EE
:1010C0005E0426FF7705E8890059C45E0426FF7791
:1010D00003E87E0059802603F1FDC45E04268A07DA
:1010E000080603F15DC3558BECC45E0426FF37E8A8
:1010F000190059C45E0426FF7702E80E0059C45E49
:101100000426FF7704E80300595DC3558BEC8B562A
:10111000004802603F1C7802639F0FB800E03F120FE
:1011200033C0802639F0FBF7C201007407800E3906
:10113000F040EB05802639F0BF800E39F004D1EA8B
:10114000403D10007CDC802639F0FB802603F1C78F
:101150005DC3558BEC8B5604802603F1C78026397E
:10116000F0FB802601F1DF8BC2250040C1E80908B1
:101170000601F1802603F1FD8BC2250080C1E80E37
:1011800080603F181E2FF3F800E03F12833C0809F
:10119000 2639F0FBF7C200107407800E39F040EBDF
```

```
:1011A00005802639F0BF800E39F004D1E2403D0DB4
:1011B000007CDC802639F0FB802603F1C75DC35537
:1011C0008BECC45E04268A07A204F1268A4701A29A
:1011D00005F1268A4702A206F15DC3C80200008A13
:1011E0005604C646FF00802603F1C7802639F0FB6E
:1011F000800E03F118C0E20433C0802639F0FBF6FC
:10120000C2807407800E39F040EB05802639F0BFAC
:10121000800E39F004D0E2403D08007CDD802639A4
:10122000F0FB802603F1C768B4009A9D9400E05952
:10123000800E03F11833C0802639F0FBF60638F033
:10124000807404804EFF01800E39F004D066FF40A8
:101250003D07007CE2802639F0FBF60638F080740A
:1012600004804EFF01802603F1C78A46FFC9C3C828
:10127000040000568B56040BD2745E8BC2F7D02547
:10128000FF3FC746FE00008946FC8B56FEB1059A1B
:10129000D2004CF88956FE8946FC83265C8C1E835E
:1012A000265E8CF8B80700BAE0FF2356FC2346FE02
:1012B00009165C8C09065E8CE8570083265C8CFB63
:1012C00083265E8CFF830E5C8C01830E5E8C00E8AF
:1012D0004000C606628C01EB36830E5C8C04830EE4
:1012E0005E8C00E82C00C606628C0033F66850C3A2
:1012F0009A9D9400E0594681FE2C017CF083265C87
:101300008CFE83265E8CFFE80800C606628C005EB9
:10131000C9C3C8040000802603F1C7802639F0FB4A
:10132000800E03F1388B165E8CA15C8CB1089AD2CA
:10133000004CF88956FE8946FCBB1800EB3380262A
:1013400039F0FB8B46FE33D22500800BD07407802A
:101350000E39F040EB05802639F0BF800E39F004DD
:101360008B46FE8B56FCD1E2D1D08946FE8956FCD5
:101370004B0BDB7FC9802639F0FB802603F1C7C900
:10138000C3C606578C01C7065E8C0000C7065C8C7E
:101390001400E87DFFC606628C00C606608C05C698
:1013A00006338C00C606328C00C706308C0000C79E
:1013B00006FF8B0001C706FD8B0000C706508C009E
:1013C000C0C3C864000056576800C468AB07E8FA99
:1013D000FA83C404E8CCFB6A00E8460559686F8CC0
:1013E000E8A404598BD883FB107603E94404D1E3C5
:1013F0002EFFA76518680008E8C804E94704E91249
:1014000001C606648C01C706678C0040C706658C60
:10141000000006800C468A5008D469C50E8920B83CC
:10142000C4068D469C50E87905596A018D469C504A
:10143000E8590B83C4048D469C50E8E504598D4659
:10144000F250686F8CE8360983C4048BF050686BE7
:101450008CE8380B83C404EB20FF76F2686F8CE8CD
:1014600070098 3C4048BF050686B8CE81E0B83C436
:1014700004E88F0650E8AA0459686F8CE81B0959E4
:101480000BC074D5FF36678CFF36658CE83CFA8359
:10149000C404E86E0650E8090559C606648C00E9E4
:1014A00035FFA0738CB4008946ECB90600BB4D181B
:1014B0002E8B073B46EC740783C302E2F3EB0E2E40
:1014C000FF670C803E728C307503E928FF68728CD0
```

```
:1014D000E83406596A01E95B03C70603810004E8A2
:1014E0008FF0A30581680002E90DFFC706038100A4
:1014F00004E87DF0A30581680003E9FBFEC706034D
:10150000810005E90A02680050E9ECFE803E728C19
:10151000307506680051E9DFFE803E728C3175AD92
:10152000680056E9D2FEEBA5EBA3E8C106EBA5C720
:1015300006678C0040C706658C0000A0728CB40062
:1015400005D0FF8946FEB9FF7F8B3E658C8E06670E
:101550008C33C0F3ABAAC41E658C26C647FF006857
:1015600000C4688C008D469C50E8450A83C4068DF3
:10157000469C50E82C04596A018D469C50E80C0AA0
:1015800083C4048D469C50E89803598D46F25068F8
:101590006F8CE8E90783C4048BF050686B8CE8EB30
:1015A0000983C404EB47A0778CB4003D3000740C71
:1015B0003D320074173D3300741EEB1FFF76F26856
:1015C0006F8CE80D0883C4048BF0EB0F8D46F2504E
:1015D000686F8CE8A807EBEDBE010056686B8CE8DD
:1015E000AA0983C404E81B0550E8360359686F8CC8
:1015F000E8A707590BC074AE837EFE037508E802A6
:101600000550E89D03598A46FE509A000000C059D3
:10161000E8F004E92B0233F68A84728C88429C46F7
:1016200083FE0572F3C646A100168D46FC508D461A
:101630009C50E8A00983C406FF76FCE831FCE992DF
:10164000FEE990FE33F68A84728C88429C4683FEC3
:101650000572F3C646A100168D46FA508D469C5081
:10166000E8720983C406FF76FAE89FFAE964FE335C
:10167000F68A84728C88429C4683FE0572F3C646C5
:10168000A100168D46F8508D469C50E8470983C44A
:1016900006FF76F8E8BBFAE939FEA0728C04D08820
:1016A00046EF50E8BF07590BC07503E984016A0192
:1016B0008D469C50E8D50883C404168D469C509AEC
:1016C000929600E083C4048BF08D469C8BD603D0A9
:1016D00052FF360C87E8700983C404168D469C506F
:1016E0009A929600E083C4048BF08D469C8BD603BF
:1016F000D052FF361087E84F0983C4048D469C50B2
:10170000E89F0259E93701E92801C706038100442F
:10171000E85EEEA30581E9BBFDC70603810048EB47
:10172000EFC7060381004CEBE7C70603810020E802
:101730003FEEA10581C1E8088846F0A0058124FF9D
:101740008846F18D469C508D46F0506800C468B3C1
:1017500000E8CA0983C408E99400C7060381002988
:10176000EBCD900EE80BF98BC8BB640033D2F7F3D6
:10177000C1E008508BC133D2F7F3BB0A005233D219
:1017800058F7F3C1E0045A03D08BC15233D2F7F3B8
:101790005803C28946F48D469C50FF76F4E8A808A9
:1017A00083C404168D469C509A929600E083C4042C
:1017B000BA05002BD08956FEBE0400EB108BDE2B41
:1017C0005EFE8D469C03D88A0788429C4E8B46FE5F
:1017D000483BC672E833F63B76FE73128B4EFE8DA5
:1017E0007E9C1E07B83030D1E9F3AB7301AA8D4659
:1017F0009C50E8AD01E9DBFCA0728C88469CA0738C
```

```
:101800008C88469DC6469E00168D46F7508D469C98
:1018100050E8C10783C406807EF7007407800E106D
:10182000F160EB05802610F11F8A46F7A204F1E96A
:10183000A2FC6A008D469C50E8510783C4048D4683
:101840009C50E85D0159E98EFB5F5EC9C3300031F1
:1018500000370038003900400C3140C15D914EBCC
:1018600014FD1406150114A2142A1516162F15447A
:10187000166F169A1629175A17F513FE130A171919
:1018800017211762 17F817C8060000568B76048ACE
:1018900044018846FA8A44028846FBC646FC00801A
:1018A0003C2A7519168D46FE508D46FA50E82507DC
:1018B00083C4063D010075058B46FEEB03B811009D
:1018C0005EC9C3C85200008B4604A30381E8A1ECA3
:1018D0008BD00BD2740583FA017531A1588CC1E805
:1018E000088846FEA0588C24FF8846FF8D46AE50DF
:1018F0008D46FE506800C468B300E8210883C40820
:101900008D46AE50E89B00596A01EB026A008D4695
:10191000AE50E8770683C4048D46AE50E883005984
:10192000C9C3C80200008B5604C646FF008A46FFA2
:10193000B4008BD8C6876F8C000BD2740552E86157
:1019400000598 00E03F180E81D018A56FFB6008B16
:10195000DA88876F8C802603F17FEB13E808018A11
:1019600056FFFEC28856FFB6008BDA88876F8C8AD6
:1019700046FFB4008BD880BF6F8C0A75DF807EFF76
:1019800000074118A46FFB4008BD880BF6E8C0D7531
:1019900003FE4EFF8A46FFB4008BD8C6876F8C00CB
:1019A000C9C3558BEC56578B7E0433F6EB0A8BDE9E
:1019B0008A0150E8130059468BDE80390075EF6AC2
:1019C0000AE80500595F5E5DC3558BEC8A5E04C76B
:1019D0000656FF0040C70650FF0000C70652FF042E
:1019E00001B801C0A3698CA356FFF70656FF20007B
:1019F00074F8A1698CA356FFF70656FF200074F80F
:101A0000A1698CA356FF802639F07F33D2EB30F6E4
:101A1000C3017415F70656FF200074F8A1698CA362
:101A200056FF800E39F080EB13F70656FF20007446
:101A3000F8A1698CA356FF802639F07FD0EB428352
:101A4000FA087CCBF70656FF200074F8A1698CA336
:101A500056FF800E39F080F70656FF200074F8A17B
:101A6000698CA356FF5DC3C706698C01C0C70652C7
:101A7000FF8200B200EB42C70656FF0040C7065087
:101A8000FF2C00A038F0B400A9080075F6A1698CFD
:101A9000A356FFF70656FF200074F8A1698CA356E1
:101AA000FFA038F0B400A90800750EC70652FF0465
:101AB00001C70650FF5A00B2018AC2B4000BC074BD
:101AC000B633DB33D2EB34D1FAF70656FF2000747D
:101AD000F833C033C9EB09F60638F0087401414009
:101AE0003D03007CF2A1698CA356FF83F9017E06B9
:101AF00081CA8000EB0481E27FFF4383FB087CC73F
:101B00008AC2C3B86B8CC3C8F4000056578B7E04DE
:101B100033F6EB01468BDE80390075F88BC6992BC6
:101B2000C2D1F88946FC33F63B76FC7D378A0588BE
```

```
:101B300046AC8A45018846ADC646AE001E8BC6D16E
:101B4000E08D960CFF03C2508D46AC50E8860483AE
:101B5000C4060BC0750533C0E98F004683C7023B3E
:101B600076FC7CC9800E39F00233F63B76FC7D4F63
:101B70008BDED1E38D860CFF03D88A07A200F180AB
:101B80000E03F10133C0EB0140F60638F001740595
:101B90003DA8617CF3F60638F00175F9802603F163
:101BA000FE33C0EB0140F60638F00175053DA86133
:101BB0007CF3F60638F00174F9463B76FC7CB1E81C
:101BC0007BF18846FEE875F18846FF8D46AC508D66
:101BD00046FE506800C468B300E8420583C4088D1F
:101BE00046AC50E8BCFD59B801005F5EC9C3C85A95
:101BF00000005633F6E845F18842F64683FE0A7C3B
:101C0000F48D46A6508D46F6506800C468D100E8B1
:101C10000C0583C4088D46A650E886FD59B801001E
:101C20005EC9C3C810000056578B7604C746FE0035
:101C300000C746FC0000C646FB00C746F400003360
:101C4000FFEB01478BDF80380075F8803C3A740366
:101C5000E9C90083FF0B7703E9C1008A4401884684
:101C6000F68A44028846F7C646F800168D46FE50AE
:101C70008D46F650E85E0383C406837EFE0075033E
:101C8000E999008B46FED1E0050B003BC77403E9E0
:101C90008A00807C083275188A440A8846F68A448D
:101CA0000B8846F78A440C8846F8C646F930EB188C
:101CB0008A44038846F68A44048846F78A4405889D
:101CC00046F88A44068846F9C646FA00168D46FC50
:101CD000508D46F650E8FD0283C40646C746F20022
:101CE00000EB2A8A048846F68A44018846F7C646ED
:101CF000F800168D46F0508D46F650E8D70283C4A2
:101D0000068A46F00046FBFF46F283C6028BC748B0
:101D1000D1E83B46F277CCC746F40100837EF4005D
:101D20007413807EFB00750D8B5E068B46FC890765
:101D30008B46FEEB456800C46844008D46F650E8CB
:101D40006F0283C4068D46F650E856FC5956E8519A
:101D5000FC59837EF40074086800C4685500EB06E3
:101D60006800C4685D008D46F650E8440283C406EE
:101D70008D46F650E82BFC5933C05F5EC9C3558BC6
:101D8000ECFF7606FF7604E899FE83C4040BC0746A
:101D900005B80100EB0233C05DC3C8140000680041
:101DA000C4681201FF7604E8220383C4060BC075E1
:101DB0001D6800C46869008D46EC50E8F30183C4D7
:101DC000068D46EC50E8DAFB59B80100EB0233C04F
:101DD000C9C3C80C000056578B7604C746FA0000EA
:101DE0008D46FE5056E83BFE83C4048946FC837E44
:101DF000FC00746AC746FA010083C60933FF3B7EC4
:101E0000FC7D5B8A048846F68A44018846F7C6460C
:101E1000F800168D46F4508D46F650E8B70183C49D
:101E200006803E648C0074198B46FE2B4606D1E07A
:101E3000C41E658C03D803DF8A46F426884704EB6A
:101E4000148B46FE034606C41E658C03D803DF8A46
:101E500046F426880783C60247 3B7EFC7CA58B465A
```

```
:101E6000FA5F5EC9C3C8080005657807E0402733B
:101E70000433FFEB19807E04047305BF0F00EB0EE3
:101E8000807E04047505BF1F00EB03BF21006A16A6
:101E90009ABC082BF259C7061287FF00C7061487A1
:101EA000FF0033F63BF77D248A4604B400BA005F96
:101EB0000BD089160381900EE845E15668004490E6
:101EC0000EE8A5E383C4043D0100740B6A2C9ABCA0
:101ED000082BF259E9AF00C746FE00008D46F850C6
:101EE0006A009A830D2BF283C4043D020075228B95
:101EF00046FA8B56F8A30E8789160C878A46FCB4DF
:101F000000A310876A2C9ABC082BF259B80100EB89
:101F100077FF46FE837EFE057CC2463BF77C89EB5D
:101F2000ABFA1EB800008ED8C7063000AC02C70658
:101F3000320000D01FFBC7060C810000C6067DF0F2
:101F4000FFC60622F0FFC60623F0FFC6062AF08071
:101F5000C60628F0E0C60620F081C60621F02083E0
:101F60002628FFEFC60610F042800E24F01BC6069E
:101F70001AF001833E0C810074F9830E28FF10F6DD
:101F80000622F001758633C05F5EC9C3558BEC56DF
:101F90008B7604C60440C6440130837E0601750674
:101FA000C6440230EB04C6440231C64403005E5D01
:101FB000C3558BEC568B7604EB0CC45E06268A0761
:101FC0008804FF460646C45E0626803F0075EBC6C1
:101FD00004005E5DC3558BEC5633F633C9C45E0610
:101FE00026C70700008B5E0403D98A178AC2B40093
:101FF0000BC0744F80FA30721080FA39770B8AC2A6
:10200000B40005D0FF8BD0EB2680FA41720E80FA27
:10201000467709 8AC2B40005C9FFEBE980FA61720C
:10202000228 0FA66771D8AC2B40005A9FFEBD6C4E8
:10203000 5E06268B07C1E00403C2268907BE0100A5
:1020400041EBA28BC65E5DC3C8060000 56578B4E9F
:102050000433FFEB218BD183E20F8BC1C1E8048BEA
:10206000C883FA0A73068AC20430EB068AC22C0AB5
:1020700004418843FA47C643FA000BC975D78B5E03
:1020800006C60730C6470130168D46FA509A92961A
:1020900000E083C4048BC883F9027705BA0100EB22
:1020A0000EBA03008B5E06C6470230C647033033C4
:1020B000FF3BF973138BC22BC78B5E0603D88A4391
:1020C000FA8807473BF972ED5F5EC9C3558BEC5642
:1020D0008B7604EB1D8A04C45E06263A077305B8A6
:1020E000FFFFEB378A04C45E06263A07772646FFD1
:1020F0004606803C007409C45E0626803F0075D504
:102100008A04C45E06263A0772D58A04C45E06268F
:102110003A077605B80100EB0233C05E5DC3C8081C
:1021200000005657C746F8000033F633FFE9990020
:10213000C45E0403DE26803F2574138B5E0403DE39
:10214000268A078B5E0A03DF88074647EB7B897682
:10215000FE46C45E0403DE26803F307205B80100EF
:10216000EB0233C050C45E0403DE26803F3977059E
:10217000B80100EB0233C05A85D075D5C746FC00C4
:10218000008BCE4946C746FA0100EB1FC45E04032C
```

```
:10219000D9268A07B40005D0FFF76EFA0146FC493C
:1021A000BA0A008B46FAF7EA8946FA3B4EFE7FDC14
:1021B00033C93B4EFC7D0F8B5E0A03DFC6073F41F0
:1021C000473B4EFC7CF1FF46F8C45E0403DE2680EC
:1021D0003F007403E959FF8B5E0A03DFC607003333
:1021E000F633FFEB22478B5E0A03DF803F3F75F536
:1021F0008B460A03C7508B5E0803DE8A07B4005083
:10220000E845FE83C404463B76F87CDA5F5EC9C3CA
:10221000800E03F130800E39F04033C0403D0200A3
:102220007CFA802639F0BFC3800E39F040C3C80461
:102230000000C646FD80B2003A5604736DC746FEE4
:10224000700EB3C802603F1C733C0403D02007C11
:10225000FA8AC2B4008B5E0603D88A46FD2207B410
:10226000008A4EFED3F8C0E006080639F0800E035F
:10227000F13033C0403D01007CFAD06EFDFF4EFED0
:10228000837EFE007DBE802603F1C733C0403D0241
:10229000007CFA800E03F130F60638F0807404B04A
:1022A00000EB09FEC23A56047293B001C9C3C802DA
:1022B0000000C646FF00B2003A5604736733DBEBFA
:1022C0002A802603F1C733C0403D02007CFA800E0D
:1022D00003F13033C0403D01007CFAA038F0B40077
:1022E0002580008ACBD3F80846FF4383FB077ED1C5
:1022F000802603F1C733C0403D02007CFA802639B6
:10230000F0BF800E03F13033C0403D01007CFA8AFB
:10231000C2B4008B5E0603D88A46FF8807FEC23A25
:1023200056047299802603F1C733C0403D02007CF9
:10233000FA800E39F040800E03F13033C0403D0189
:10234000007CFA802603F1C7C9C30000000000002A
:10235000C80400005657BFF480C646FF028B36AA59
:102360008883C6069A000000D00BC07503E9E1011E
:10237000803E2487047407803E2487007543B102A1
:10238000EB1E8AC1B400BB05002BD8803800740E48
:102390008AC1B400509A491E00E059E9B301FEC158
:1023A00080F90476DD8A04C1E8062501003D0100BC
:1023B000750F8A04C1E8072501000BC07503E98E7B
:1023C000006A059A700000D0590BC07503E98101BD
:1023D0008A04C1E8072501000BC0750F6A079A70CF
:1023E0000000D0590BC07503E966019A838300E0B1
:1023F0000AC07403E95A019AA82200E00BC07408CD
:102400009AC41D00E0E949018A04C1E807250100DA
:102410000BC0746D803E248703740E803E248701B8
:1024200007407803E248702751A8A04C1E8062501D4
:10243000000BC07407C606248702EB1DC60624875E
:1024400001EB168A04C1E8062501000BC074056A79
:1024500005E941FFC6062487008D46FC509AF51910
:102460002BF2593D010074658B1EAA888A46FC88B0
:1024700047168A46FD8847178A46FE884718E9D0DE
:1024800000FF36AA889A129100E0593D01007403BA
:10249000E9BE00803E2487017407803E24870275D0
:1024A00016803EDC8300750FFF359AFA8400E059F0
:1024B0000AC07419E99A006A00FF3664866A106AD5
```

```
:1024C000009A0D004CF8509A34D900D059E8A8046D
:1024D0009A5D9200E09A1CE000D0803E248701744F
:1024E00007803E248702751C9A4D7C00E00AC07468
:1024F00037C7062EDAFFFFC70636DA0F009A8C03BD
:1025000000E0EB4D8A04C1E8072501000BC07510FF
:10251000E857023D01007539E8FA0A3D01007531BE
:10252000E85E003D010075299AF79600E03D010044
:10253000751F9AFF1B2BF2F7066286100075 0E8B33
:102540001EAA88C6471603C6471700EB04C646FFF7
:10255000009A520000D08B1EAA888A46FF88471432
:102560008326CA86DF5F5EC9CB8B1EAA88F7472AFF
:10257000F438740A9AC41D00E0B80400EB0233C0BA
:10258000C3C81A00005657C746F6FFFFC746F4FFF8
:10259000FFBF0100C746F00000C746EE0000C74677
:1025A000FA0000C746F80000C646E800EB308A464D
:1025B000E8B4006BC00E8BD88B8F2F878B9F2D8735
:1025C0008A46E8B4006BC00E8BF08B84358733D21B
:1025D0009AB8004CF80146F81156FAFE46E88A46C9
:1025E000E8B4006BC00E8BD883BF358700740680BB
:1025F0007EE80A75B98326CA86EE8326CA86F183E9
:102600000ECA8608E93501E85FFF3D040075053311
:10261000C0E93A018B46F08B56EEA30A878916086B
:1026200087837EFA0072117707817EF8FF007608B3
:10263000C7062787FF00EB068B46F8A32787C70648
:10264000A5860000C706A38600000EE82B05908B28
:10265000F0A1BE868946F28976E6B90600BB52270C
:102660002E8B073B46E6740883C302E2F3E9800041
:102670002EFF670CEB7A8B46F08B56EE0356F21565
:1026800000008946FE8956FC3B46F675053B56F42C
:10269000742C9AEB5600E08846EAA079838846EBD2
:1026A000A07A838846EDA07B838846E9A07D838855
:1026B00046EC8B46FE8B56FC8946F68956F481FE25
:1026C000E9037503FE4EEB81FEEA037503FE4EED52
:1026D00081FEEC037503FE4EE981FEEB037503FEFC
:1026E0004EEC83FE027509FE4EEAEB0433FFEB4C21
:1026F0008B46F22946F8835EFA000146EE8356F0D7
:1027000000837EF6FF7506837EF4FF742F807EEAD9
:10271000007C18807EEB007C12807EED007C0C80BB
:102720007EE9007C06807EEC007D119A7AE900D07B
:102730008BF8C746F6FFFFC746F4FFFF83FF01751E
:102740000B8B46F80B46FA7403E9BBFE8BC75F5E42
:10275000C9C300000200E903EA03EB03EC03EC2623
:1027600076267626762676267626C81600005657D2
:10277000C746F6FFFFC746F4FFFFBF0100C746F29A
:1027800000000C746F00000C746FA0000C746F80040
:1027900000C646EB00EB308A46EBB4006BC00E8BF4
:1027A000D88B8F2F878B9F2D878A46EBB4006BC009
:1027B0000E8BF08B84358733D29AB8004CF80146E3
:1027C000F81156FAFE46EB8A46EBB4006BC00E8B4E
:1027D000D883BF3587007406807EEB0A75B98326DF
:1027E000CA86EEE97C01E880FD3D040075053 3C032
```

```
:1027F000E981018B46F28B56F0A30A878916088778
:10280000837EFA0072117707817EF8FF007608C791
:10281000062787FF00EB068B46F8A327878326CA87
:1028200086F1830ECA8602C706A5860000C706A3E6
:10283000860000EE81A05908946EC8B36BE860BA2
:10284000C07503E9E1003D020074053DE9037549E7
:102850008B46F28B56F003D61500008946FE89564A
:10286000FC3B46F675053B56F4741A9A515700E046
:102870008846EEA079838846EF8B46FE8B56FC890E
:1028800046F68956F4817EECE9037505FE4EEFEBC2
:1028900008FE4EEEEB03E98E000BF67503E98B00A4
:1028A0008B46F28B56F0A30A878916088878936274C
:1028B000878326CA86F1830ECA8604C706A58600CA
:1028C00000C706A38600000EE88604908946EC8BBC
:1028D00036BE860BC074503D020074053DE9037599
:1028E0004A8B46F28B56F003D61500008946FE89C6
:1028F00056FC3B46F675053B56F4741A9A51570040
:10290000E08846EEA079838846EF8B46FE8B56FC26
:102910008946F68956F4817EECE9037505FE4EEF93
:10292000EB09FE4EEEEB0433FFEB372976F8835EBE
:10293000FA000176F08356F200837EF6FF75068377
:102940007EF4FF741D807EEE007C06807EEF007DAD
:10295000119A7AE900D08BF8C746F6FFFFC746F414
:10296000FFFF83FF01750B8B46F80B46FA7403E9F2
:1029700074FE8BC75F5EC9C356BEF880803E248755
:1029800000740DF6440240740E803EA208007507E4
:10299000C606168802EB05C606168801C7061E88FD
:1029A0000100C70633870000C7063187CC15C7066C
:1029B00035870100B201EB3B8AC2B4006BC00E8BBD
:1029C000D8C7872F870000C7872D8700008AC2B429
:1029D000006BC00E8BD8C78733870000C78731874D
:1029E00000008AC2B4006BC00E8BD8C78735870041
:1029F00000FEC280FA1075C05EC350535152061ECD
:102A0000565755BD00118EDDF60622F0087432F6D9
:102A1000067DF0807507F6067AF040740F6A006A4A
:102A2000076A0AE8790583C406E9D300F6067DF053
:102A30000274046A01EBE8C6067DF008C60622F0BF
:102A400008F60623F11C743BA023F1B400A38A937B
:102A5000C60679F01F8A16AE862A161AF1800E1065
:102A6000F104F7068A930C007402FECA8AC2B4000D
:102A70003B06BE867503EB6E90800E8C9301EB7F58
:102A800090EB63F60622F0407426803E30F002752B
:102A90000EF6068C93017407C60622F040EB11A0D7
:102AA00030F0B400A38A93A08A93506A05E971FFBD
:102AB000F60622F1027411C60622F102802677F092
:102AC000FD800E8C9302EB37F60623F0017430C6BE
:102AD0000623F001FF06BE86F6068C93037420F6EB
:102AE000068C93017409A08A93506A03E932FFA10E
:102AF000BE863B06AE8675076A006A02E922FFC7FA
:102B00000622FF00805D5F5E1F075A595B58CF5059
:102B10005351520615655755BD00118EDD8BEC8366
```

```
:102B2000EC02F60623F110740BA01AF18846FF5050
:102B30006A04EB2DF60622F102740CC60622F1029D
:102B4000802677F0FDEB22F60622F008741BF606CD
:102B50007AF0407408A01AF1506A08EB046A006A1F
:102B6000026A0BE8390483C406C70622FF0080C945
:102B70005F5E1F075A595B58CFC80A00005657A11D
:102B8000AA888946FE830E28FF40EB47C7062EDA47
:102B900000809A0A0800E08BF08A4409B4008BF8A0
:102BA0000BFF7526832628FFBF8A440E8B5EFE88A6
:102BB00047168A440F8847178A44108847189ABDD9
:102BC0001C00E089362EDAE9700189362EDA9A7E09
:102BD0000700E0C7062EDA00009A380700E08BD025
:102BE00083FA0D74A7C706BE8600008D46F7508D88
:102BF00046FA506A009A889C00D083C4063D0100C2
:102C000074248B1EAA88C64714028A46FA8847167F
:102C10008A46FB8847178A46FC8847189ABD1C00DD
:102C2000E033C0E91B01C7068A930000C6068C93F7
:102C300000FF36A586FF36A386FF36AA886A029A69
:102C40002F6800D083C408832628FF9FC70636DA82
:102C50000C009A8C0300E08946F88B5EF88B4704E1
:102C60003D0A00740B3D0D007503E99A00E9CF00A1
:102C7000832628FFBF8B5EF88A4709B4008BF88A49
:102C8000470A8846FD8B46F8A32EDA9A7E0700E0B5
:102C90008BDF83EB0283FB057603E9A200D1E32EF1
:102CA000FFA7452DBF0100E99500F646FD1074060B
:102CB000BFE903E98900F646FD047406BFEC03EBA7
:102CC0007E90BFEA03EB7890F646FDE47405BFEB17
:102CD00003EB6CF646FD107405BFED03EB618B1E34
:102CE000AA88C647160BC64717449ABD1C00E03396
:102CF000FFEB4C807EFD017505BF0200EB41C6066F
:102D00001B849533FFEB388B5EF8807F09007521BB
:102D10008B76F88A440E8B5EFE8847168A440F88AD
:102D200047178A44108847189ABD1C00E033FFEB10
:102D300003BF02008B46F8A32EDA9A7E0700E08BD1
:102D4000C75F5EC9CBA42CAA2C3F2DC82C3F2DF306
:102D50002CC80A000056578B3EAA88830E28FF40D5
:102D6000EB47C7062EDA00809A0A0800E08BF08A4B
:102D70004409B4008946FA837EFA00752383262825
:102D8000FFBF8A440E8845168A440F8845178A4437
:102D9000108845189ABD1C00E089362EDAE9EB014F
:102DA00089362EDA9A7E0700E0C7062EDA00009AEE
:102DB000380700E08BD083FA0D74A78D46F7508D4D
:102DC00046FC506A009A889C00D083C4063D0100EE
:102DD0007420C64514028A46FC8845168A46FD883A
:102DE00045178A46FE8845189ABD1C00E033C0E9A5
:102DF000A901C60624F141800E11F1109AD45400A5
:102E0000E0509A2D5700E0C0E0035A0AD0881626F9
:102E1000F1F706CA86020074086A119A330F00E0BF
:102E200059C606058702A12587A3B086A12587A3D9
:102E3000AE86C60678F01F9A408F00D0C60605877A
:102E400000832628FF9FC70636DA0C009A8C030001
```

```
:102E5000E08946F88B5EF88B47043D0B00740B3D10
:102E60000D007503E9C900E92601832628FFBF8B01
:102E70005EF88A4709B4008946FA8A470A8846FFFD
:102E80008B46F8A32EDA9A7E0700E08B46FA3D02C5
:102E90000074103D0400740B3D07007503E98400C5
:102EA000E9ED008A46FFB4008B1625872BD08916E2
:102EB000BE866810279A9D9400E059802639F0FF5D
:102EC000C7062EDA00009A380700E08BD083FA0D8F
:102ED000753EC70636DA0C009A8C0300E08946F886
:102EE0008B5EF8807F090074508B46F8A32EDA9A27
:102EF0007E0700E0833EBE86057207832EBE8605F0
:102F0000EB06C706BE860000C746FA0200E980004D
:102F1000837EFA027507C746FA0100EB73C746FACB
:102F2000E903EB6CC6061B8495C746FA0000EB600C
:102F30008B5EF8807F090075218B76F88A440E88B5
:102F400045168A440F8845178A44108845189ABD4B
:102F50001C00E0C746FA0000EB2B8B76F88A440C85
:102F6000B4008B1627872BD08916BE86833EBE867B
:102F7000057207832EBE8605EB06C706BE860000D7
:102F8000C746FA02008B46F8A32EDA9A7E0700E0C5
:102F90006A0F9A330F00E0598B46FA5F5EC9CBC8BF
:102FA0000400005657C60679F01F9ADD1400E08031
:102FB0007E040B75059A061500E0C6067EF000C675
:102FC0000620F000C60620F100C6067DF0FFA039FD
:102FD000F08846FFC60610F020A239F0C60610F1B0
:102FE000049A0D0700E08946FC8B5EFC8A46068841
:102FF00047098A460888470A5657558B76FC8B5EE8
:1030000004B805009AB90800E05D5F5E830E28FFF2
:10301000405F5EC9C3C81600005657C746FAFFFF97
:10302000C746F8FFFFC746EC0100C746F20000C7DD
:1030300046F00000C746F60000C746F40000C6464A
:10304000EB00EB308A46EBB4006BC00E8BD88B8F55
:1030500033878B9F31878A46EBB4006BC00E8BF0B1
:103060008B84358733D29AB8004CF80146F4115658
:10307000F6FE46EB8A46EBB4006BC00E8BD883BFDE
:1030800035870074068O7EEB0A75B98326CA86EE02
:1030900830ECA8601E99601E8CEF43D0400750569
:1030A00033C0E99D01A12F878B162D8703168B86D0
:1030B0001500000356F01346F2A30A878916088705
:1030C000837EF60072117707817EF4FF007608C7D1
:1030D000062787FF00EB068B46F4A327878326CAC3
:1030E00086F1830ECA8602C706A5860000C706A31E
:1030F0008600000EE85AFC8BF88B36BE860BC07536
:1031000003E9EB003D020074053DE90375488B4679
:10311000F28B56F003D61500008946FE8956FC3B1B
:1031200046FA75053B56F8741A9A515700E08846DE
:10313000EEA079838846EF8B46FE8B56FC8946FAD3
:103140008956F881FFE9037505FE4EEFEB08FE4E48
:10315000EEEB03E999000BF67503E99900A12F87BF
:1031600008B162D8703168B861500000356F0134629
:1031700F2A30A878916088789362787832
```

```
:10318000F1830ECA8604C706A5860000C706A3867B
:1031900000000EE8BBFB8BF88B36BE860BC0744F6D
:1031A0003D020074053DE903754C8B46F28B56F0E9
:1031B00003D61500008946FE8956FC3B46FA750584
:1031C0003B56F8741A9A515700E08846EEA079836E
:1031D0008846EF8B46FE8B56FC8946FA8956F88165
:1031E000FFE9037505FE4EEFEB0CFE4EEEEB07C755
:1031F00046EC0000EB382976F4835EF6000176F0A9
:103200008356F200837EFAFF7506837EF8FF741EF4
:10321000807EEE007C06807EEF007D12C746FAFFBE
:10322000FFC746F8FFFF8346F0018356F200837E16
:10323000EC01750B8B46F40B46F67403E959FE8BD3
:1032400046EC5F5EC9C3000000000000000000000003
:02000002122BBF
:10000000C804000056C6062F00326A01682F009A05
:100010006BEE00D083C404C70662860000C606F6F5
:100020008B008D76FC9A440000D00BC07508C60684
:100030001B84A7E93A01830E628608C70603810084
:10004000509A000006EF8AD03C017422A01B84B4B1
:10005000000BC07403E9130156529A640306EF8340
:10006000C4048A4402A21B84E90001E9FD00C7061A
:1000700038100209A000006EF8AD03C0175CDC7AD
:10008000060381002 99A000006EF8AD03C0175BC66
:10009000E8E0008AD03C017438B4003D02007428C6
:1000A0003D030074073D04007415EBA0C60403C6AD
:1000B000440130C6440200830E628604E9AC00C6E7
:1000C0000403C644013AEBEBC60404C6440186EBC4
:1000D000E2C646FF0B8A46FF508D46FC500EE8787C
:1000E0000D9083C4043D01007505900EE8101BC7F8
:1000F0000603810011C706018161009A000006EF26
:100100008AD03C017403E943FFC70603810013A1B1
:10011000F28BC1E8058B16F28B2BD0891601819AE0
:10012000000006EF8AD03C017403E91FFFC70603F5
:10013000810011C706018160009A000006EF8AD095
:100140003C017403E905FFC70603810013A1F28B8C
:10015000C1E8058B16F28B03D0891601819A000045
:1001600006EF8AD03C017403E9E1FE9A520000D008
:100170005EC9CBC80A00005657C746F69600F70678
:100180008D8600407406B80400E9BF016A160EE8C7
:100190002A079059C746F80500E99B01C706128750
:1001A000FF00C7061487FF008A46F8A22487B40020
:1001B000BA005F0BD0891603819A000006EF8B5EB0
:1001C000F883FB057603E9EE00D1E32EFFA74F038A
:1001D000FF76F80EE8840190590BC075186A2C0E52
:1001E000E8D9069059803E1B84007503E9AF00E909
:1001F000A400E9A900C706038100039A000006EFE6
:100200008BF03D01007403E90E016A210EE8AC0693
:10021000 9059C606F18B5FE91A01FF76F80EE83AAD
:1002200000190590BC075136A2C0EE88F0690598007
:100230003E1B84007468EB5EEB64C706038100021A
:10024000 9A000006EF8BF03D01007403E9C9009AA3
```

```
:10025000569400E0C606F18BA6BF07006A13EB5167
:10026000BF0200EB4AC706038100029A000006EFB6
:100270008BF03D01007403E99E00FF76F80EE8DA8A
:10028000090590BC0751D6A2C0EE82F06905980FE
:100290003E1B84007408A01B84B400E9AD00B802C2
:1002A00000E9A700C606F18BB433FFEBAF33FF6A5A
:1002B000149A330F00E059576800449A690206EF18
:1002C00083C4048BF03D01007402EB44FF76F6E832
:1002D000650459C646FF00EB438D46FA506A000E8E
:1002E000E8A00A9083C4048BF083FE0274528A460D
:1002F000FFFE46FF3C0272244FC646FF00576800CF
:10030000449A690206EF83C4048BF03D0100740C2B
:100310006A2C0EE8A60590598BC6EB2F0BFF7DB912
:10032000803E248700750D6A2C0EE88F059059B821
:100330000300EB17FF4EF8837EF8007C03E95CFEB8
:100340006A2C0EE876059059B801005F5EC9C3AD0E
:1003500002650260021A023403D001C85800005638
:1003600057C646FD00A003F124048846FCBF0100E7
:100370006A019ABB9800E059C606F88B018B5E06AD
:1003800083FB05772FD1E32EFFA71206C706F48B58
:10039000B607C706F28B2B06EB1AC706F48B6A0466
:1003A000C706F28B8803EB0CC706F48B1204C70652
:1003B000F28B41038D76A8C7049001C74402000068
:1003C000C74404004083C606C7045802C74402005D
:1003D00000A1F28BC1E8048B16F28B03D089540480
:1003E00083C606C7046400C744020000C744040073
:1003F00000C746F600E0C746F4296CC746F2000085
:10040000C746F03800C45EF0268B4702268B17895A
:1004100046FA8956F88B46F68B56F426894702260B
:1004200089178D46E48946E2802602F1FEA1F48B0D
:10043000A30181C706038100539A000006EF884696
:10044000FF3C017403E976018D46E8508D46C650A5
:100450006A169A006B00E083C4063D0B007526C641
:1004600046FE00807EE8007406807EFE0A72168DCD
:1004700046C6506A429A006B00E083C404C606F880
:100480008B00E96401803EF78B007509807EFD00DA
:100490007403E99800C606F78B008A46FDB4006B2A
:1004A000C0068D56A803C28BF0FE46FDC706038129
:1004B0000011C706018160009A000006EF8846FF20
:1004C0003C017403E9F700C706038100138B440263
:1004D000A301819A000006EF8846FF3C017403E9FE
:1004E000DC00C70603810011C706018161009A0084
:1004F0000006EF8846FF3C017403E9C100C706030C
:10050000810O138B4404A301819A000006EF884602
:10051000FF3C017403E9A600C706038100509A005E
:100520000006EF8846FF3C017412E991008A46FDFF
:10053000B4006BC0068D56A203C28BF0807EFD0214
:100540007520A0F68BB4000BC07517C70603810099
:1005500019A000006EF8846FF3C017561C606F619
:10056000B01832628FFBF800E02F101FF34E8C60D
:10057000015980FEFD037303E9F4FE8D46C6506A7F
```

```
:10058000429A006B00E083C404C606F88B009A967A
:100590000206EF0BC07503E9D5FEC70603810020F4
:1005A0009A000006EF8846FF3C017512C7060381DA
:1005B00000299A000006EF8846FF3C01742D8D4605
:1005C000C6506A429A006B00E083C404C606F88BEA
:1005D00000FF76E28A46FF509A640306EF83C40464
:1005E0008B5EE28A4702A21B8433FFC45EF08B4617
:1005F000FA8B56F8268947022689178A46FCB400EA
:100600000BC075086A009ABB9800E0598BC75F5E03
:10061000C9CBA803A8039A039A038C038C03558BB8
:10062000EC56E9E700807E08007564803EE38B01AC
:100630007303E8B113A1E68B8B16E48B3B46067C73
:100640002D7F053B560476266A016800809A690270
:1006500006EF83C4048BD083FA0174058BC2E9D200
:1006600000832EE48B01831EE68B00E99E006A0165
:100670006800C09A690206EF83C4048BD083FA0134
:1006800075DA8306E48B018316E68B00EB7E90809F
:100690003EE38B017303E84D138B36E48B2B76041A
:1006A0006A646A010EE818039083C4040BF67E1591
:1006B000566800809A690206EF83C4048BD083FADF
:1006C00001741BEB976BF6FF566800C09A6902062F
:1006D000EF83C4048BD083FA017403E97EFFFA6AC6
:1006E000006A030EE8D9029083C404BA64002BD0D8
:1006F000BB05008BC299F7FB998B5E068B4E042BD2
:10070000C81BDA891EE68B890EE48BFB8B46068BB1
:1007100056043B06E68B7403E90AFF3B16E48B7430
:1007200003E901FF803EE38B027305E8B812EBDCBE
:10073000B801005E5DC3C3558BEC8B4604EB14C758
:100740000660FF0000832666FFDFF70666FF2000D5
:1007500074F8480BC075E85DC3C802000056578B9B
:100760007E04C746FE0000C706F0830000C606F2FE
:100770008300C706F68330888C1EF883C706FA8389
:1007800001200BE30889A4DD800D03D01007413C6C7
:100790000504C6450144C6450295C6061B8495E975
:1007A00014018B46FE0500028B56FE81C283004277
:1007B0002BC2A3F083C606F28300C706F6834288E5
:1007C0008C1EF883C706FA8332009A4DD800D03DBC
:1007D000010075BBF6440D807403E9C900807C11EB
:1007E000607529807C10027523807C0F11751D8136
:1007F0007C089A937516807C0A2075108326628681
:10080000BFC606248703B80100E9AC00807C1160F4
:1008100007525807C1011751F807C0F1F7519817CD8
:10082000089A937512807C0A20750C83266286BF15
:10083000C606248702EBCF807C11007531807C10C6
:1008400002752B807C0F117525817C089E49751ED1
:10085000807C0A20740C807C0A007406807C0AA0CC
:100860000750C83266286BFC606248701EB98807CC0
:1008700011007532807C1011752C807C0F1F75263D
:10088000817C089E49751F807C0A20740C807C0A3C
:1008900000074068070AA0750D83266286BFC6069A
:1008A0000248700E960FF830E628604C60503C645FF
```

```
:1008B0000130C645020033C05F5EC9C3558BECFAF8
:1008C000807E060B7409807E06167403EB6090C769
:1008D00006DC8B7A18C706DE8B9A0F066A0007269D
:1008E000A13000A3D08B26A13200A3D28B26A13841
:1008F00000A3D48B26A13A00A3D68B26A12000A367
:10090000D88B26A12200A3DA8B26C70620008419E3
:1009100026C70622002BF226C7063800FD0926C787
:10092000063A002BF2076A009ABB9800E059807ED5
:10093000060B7406807E0621752DC606E08B00C767
:100940000656FF0040C7065EFF0040832630FFFCCE
:10095000C70652FF983AC70650FF0000C70656FF69
:1009600001E0C606E38B05807E062C7403EB4E90F7
:10097000066A0007A1D08B26A33000A1D28B26A344
:100980003200A1D48B26A33800A1D68B26A33A002F
:10099000A1D88B26A32000A1DA8B26A3220007C7AB
:1009A000065EFF0040C70656FF0040832630FFFC6E
:1009B0006A009ABB9800E0599AB00100D0FB5DCB69
:1009C000558BEC8A4606B4003D0100740C3D0200D4
:1009D00074163D0300741DEB20FA8B4608A3E18BCF
:1009E000C606E08B01FBEB11803EE08B00750AB878
:1009F0000100EB07A1E18BEB0233C05DCB505351FB
:100A000052061E565755BD00118EDDE828FDC7065B
:100A100022FF00805D5F5E1F075A595B58CF558BE0
:100A2000EC8A4604B4008BD883FB057603E9C50144
:100A3000D1E32EFFA7F70BC7061A00FCA0C7061CC0
:100A40000000E0C7061600FCA0C706180000E0C7BB
:100A50000612009CA1C706140000E0C7060A005C4D
:100A6000A3C7060C0000E0C70602001EE2C706048A
:100A70000000E0C70606006AE4C706080000E0E9D7
:100A80007301C7061A0089A3C7061C0000E0C70649
:100A9000160089A3C706180000E0C706120029A4A3
:100AA000C706140000E0C7060A00E9A5C7060C0047
:100AB00000E0C70602001EE2C706040000E0C70609
:100AC00006006AE4C706080000E0E92801C7061A24
:100AD00000D6A8C7061C0000E0C706160016A6C769
:100AE00006180000E0C706120096ABC70614000007
:100AF000E0C7060A0056AEC7060C0000E0C70602B3
:100B000000AAE4C706040000E0C7060600F6E6C730
:100B100006080000E0E9DD00C7061A006BB1C70651
:100B20001C0000E0C7061600ABAEC706180000E0C8
:100B3000C70612002BB4C706140000E0C7060A005F
:100B4000EBB6C7060C0000E0C7060200AAE4C70621
:100B5000040000E0C7060600F6E6C706080000E04D
:100B6000E99200C7061A00C0BBC7061C0000E0C718
:100B700006160040B7C706180000E0C7061200407E
:100B8000C0C706140000E0C7060A00C0C4C7060CB0
:100B90000000E0C706020036E7C706040000E0C711
:100BA00006060082E9C706080000E0EB48C7061AFF
:100BB000005BCAC7061C0000E0C70616005BC5C77D
:100BC00006180000E0C70612005BCFC7061400003D
:100BD000E0C7060A005BD4C7060C0000E0C70602A7
```

```
:100BE00000C2E9C706040000E0C70606000EECC715
:100BF00006080000E05DC3370A820ACD0A180B63BD
:100C00000BAD0BC80C00005657C646FD00830E28DE
:100C1000FF20C60624F160C646F500E9C500C706F8
:100C20005EFF0040C7065AFF1027C70658FF0000A6
:100C3000C7065EFF00C0C6067DF001B80000F706DB
:100C40005EFF20007542F6067DF0019074F0870685
:100C500058FFC6067DF00190F7065EFF200075285C
:100C6000F6067DF0019074F0870658FF8946FE8AEB
:100C700046FDB400250300D1E08D56F603C28B5625
:100C8000FE8BD88917FE46FD807EFD0372528B468F
:100C9000F60346F80346FABB030033D2F7F38BF8AA
:100CA0008B4EF62B4EF80BC97D036BC9FF8B76F884
:100CB0002B76FA0BF67D036BF6FF8BC16BC06433AA
:100CC000D2F7F73D020073188BC66BC06433D2F7BE
:100CD000F73D0200730A832628FFDF8B46F6EB13ED
:100CE000FE46F5807EF5647403E932FF832628FF13
:100CF000DF33C05F5EC9C3C8020000C646FF008A7A
:100D0000460CB400508B460A8B560883C2FF15FF71
:100D1000FF5052E808F983C4068BD083FA0174109F
:100D2000FF7610529A640306EF83C40433C0EB517C
:100D3000E8B30C807EFF00741E8A46FFB400506A40
:100D4000010EE87BFC83C4046A006A020EE870FCB2
:100D500083C4040BC074F1FF760E8A4606500EE879
:100D600021009083C4043D02007505B80200EB1118
:100D70008A46FFFEC08846FF3C037402EB81B8013F
:100D800000C9CB558BEC568B76086A118A4606B49F
:100D900000D1E08BD8FF97DC8B596A016A010EE81D
:100DA0001EFC83C404EB35F606EA8B01753DF6069E
:100DB000EA8B0274276A228A4606B400D1E08BD8F7
:100DC000FF97DC8B59A1ED8B8B16EB8B8944028945
:100DD00014A0EF8B884404B80200EB226A006A0278
:100DE0000EE8DCFB83C4040BC074BC6A228A46068E
:100DF000B400D1E08BD8FF97DC8B59B801005E5D61
:100E0000CB558BEC568B76046A11E8C30859EB3648
:100E1000F606E98B04742FF606E98B0174166A2234
:100E2000E8AD0859C60404C6440144C64402A1B84A
:100E30000200EB22F606E98B0274CD6A22E89008E4
:100E400059B80100EB10803EE08B0075C36A22E8C0
:100E50007E0859B803005E5DC3558BEC56578B7600
:100E600006830E28FF40EB40C7062EDA00809A0A60
:100E70000800E08BF8807D090174248A450E8804FF
:100E80008A450F8844018A45108844028328628FF3A
:100E9000BF893E2EDA9A7E0700E033C0E9E7008979
:100EA0003E2EDA9A7E0700E0C7062EDA00009A3856
:100EB0000700E08BD083FA0D74AE6A160EE8FCF9D9
:100EC000598A46085056E8C40183C4048BF88BDF66
:100ED00083EB0983FB037750D1E32EFFA7920F56D4
:100EE000E876F8598BF883FF017403E98F00560EFA
:100EF000E8020B90598BF8E98300E98000C60404EE
:100F0000C6440144C644029EC6061B849E830E62EC
```

```
:100F1000860433FFEB6EC60404C6440144C6440293
:100F2000A1C6061B84A1EB4E56E88204598BF88BB0
:100F3000D883EB0983FB037744D1E32EFFA78A0F05
:100F400056E815F8598BF883FF017531560EE8A461
:100F50000A90598BF8EB26C60404C6440144C644E3
:100F6000029EC6061B849EEB0DEBABC60403C64473
:100F70000100C6440200830E62860433FF6A2C0E11
:100F8000E839F9598BC75F5E5DCB400F690F570F8A
:100F90006B0FDF0E160FFD0E280F558BECFAC606F1
:100FA00079F01F9A061500E0C6061AF100807E044B
:100FB00011755BC60624F140800E11F110802620C9
:100FC000F140800E20F110C60670F014C60620F025
:100FD00000C60610F140066A000726C70630003337
:100FE0001026C70632002BF207C606EA8B009AB01D
:100FF0000100D0C6067DF0FFC60616F17FC60622A8
:10100000F1BFC6061AF101C60679F000EB229AB0CC
:101010000100D0C6067DF0FFC60622F1BF066A00B9
:101020000726C7063000FD0926C70632002BF20747
:10103000FB5DC350535152061E565755BD00118ECD
:10104000DDE8F2F6F60622F1107432802620F1EF88
:10105000C60622F120A016F1A2EC8BA015F1A2EB9E
:101060008BA014F1A2EF8BF60622F12075E2800E20
:10107000EA8B02C60679F01FC60622F110C70622C7
:10108000FF00805D5F5E1F075A595B58CFC836006E
:10109000056578B7604C646F700C746EA200DC7B0
:1010A00046E8C4098D46F8508D46CA506A169A0023
:1010B0006B00E083C4063D0B007559807EF8007517
:1010C000258A46FD88048A46FE8844018A46FF88B0
:1010D00044028D46CA506A429A006B00E083C40401
:1010E000B80A00E9AC028A46F7FEC08846F7807E5F
:1010F000F70A72148D46CA506A429A006B00E08368
:10110000C404B80B00E98A02C64606166A2C9A0087
:101110006B00E059807E060B74256A006800519AC6
:10112000690206EF83C4048946EC837EEC01740FE8
:10113000568A46EC509A640306EF83C404EB936A24
:10114000210EE877F7596A0068015B9A690206EF99
:1011500083C4048946EC837EEC0175D4C7061287EC
:101160000000C70614870000A02487B4008BD88332
:10117000FB057754D1E32EFFA7A213BF46FFFF76EE
:10118000E86800809A690206EF83C4048946EC830C
:101190007EEC01759B6A006800449A690206EF8341
:1011A000C4048946ECEB21BF60FFFF76E86800804D
:1011B0009A690206EF83C4048946EC837EEC0174CD
:1011C00003E96CFF6A10EBCF837EEC017403E95FE7
:1011D000FF803E07870074196A0068005B9A690205
:1011E00006EF83C4048946EC837EEC017403E93F77
:1011F000FFFAC706E68B0000C706E48BF401FBC7C5
:1012000046F00000C746EE0000EB4C568D46F2500B
:10121000 6A00A1E68B8B16E48B83C29715FFFF5003
:10122000526A000EE8D0FA83C40C8946EC0BC075F4
:10123000033E99EFE3D02007402EB148BC7993B56F6
```

```
:10124000F47C0C75373B46F27205EB30E983FE8384
:1012500046EE018356F0008B46EABB690099F7FB26
:10126000993B56F075A53B46EE75A08D46CA506A6F
:10127000429A006B00E083C404E91301FA8B46F440
:101280008B56F2A3E68B8916E48BFBA02487B4006F
:101290008BD883FB057719D1E32EFFA79613BF499F
:1012A000FFC746E6DEFEEB08BF63FFC746E698FED3
:1012B0008B46E6998956F08946EEEB53568D46F2F9
:1012C000506A008B46F08B56EE83C2011500005029
:1012D000526A000EE820FA83C40C0BC07503E9F1D2
:1012E000FD3D02007402EB1F8B46F48B56F23B4629
:1012F000F075053B56EE742CFA8B46F48B56F2A330
:10130000E68B8916E48BFB8346EE018356F0008B57
:10131000C7993B56F07FA57403E94FFF3B46EE7734
:101320009BE947FF8B4EF48B5EF2BAFFFFB8FFFFDD
:101330009AB8004CF805FFFF83D2FF505233D2B861
:10134000500595B9AB8004CF88A56F6B600BB0502
:1013500000508BC299F7FB5A2BD04A526A010EE813
:101360005EF683C40456E898FA598946EC8D46CA5D
:10137000506A429A006B00E083C404837EEC0175DE
:1013800005B80900EB0C837EEC027503E951FDB84A
:101390000C005F5EC9C39E129E12A812A812B01262
:1013A000B0127B117B11A711A711C811C811C83A3F
:1013B000000056578B7604C646F700C746EA200D54
:1013C0008D46F8508D46C6506A169A006B00E08331
:1013D000C4063D0B007555807EF80075258A46FDD4
:1013E00088048A46FE8844018A46FF8844028D4666
:1013F000C6506A429A006B00E083C404B80A00E950
:10140000B2028A46F7FEC08846F7807EF70A721459
:101410008D46C6506A429A006B00E083C404B80B44
:1014200000E990026A2C9A006B00E0596A0068009B
:10143000519A690206EF83C4048946EC837EEC016D
:10144000740F568A46EC509A640306EF83C404EB8B
:101450009D6A0068015B9A690206EF83C4048946AD
:10146000EC837EEC0175DBA02487B4008BD883FB72
:10147000057764D1E32EFFA7C416BF8C3CC746E8AE
:101480000000C746E69E49576800C09A690206EF09
:1014900083C4048946EC837EEC0175A66A0068006B
:1014A000449A690206EF83C4048946ECEB29BF50D5
:1014B00046C746E80000C746E69A93576800C09AB8
:1014C000690206EF83C4048946EC837EEC01740351
:1014D000E96FFF6A10EBC7837EEC017403E962FFDA
:1014E000C70612870000C706148700000803E0787E2
:1014F0000074196A0068005B9A690206EF83C404ED
:101500008946EC837EEC017403E936FFFAC706E6F0
:101510008B0000893EE48BFBC746F00000C746EE17
:10152000000EB4F568D46F2506A00A1E68B8B16F9
:10153000E48B83C26915000050526A000EE8B7F7C9
:1015400083C40C8946EC0BC07503E9A1FE3D020083
:10155000 7402EB178B46F48B56F23B46E87C0C7515
:1015600073B56E67205EB30E983FE8346EE018396
```

```
:1015700056F0008B46EABB690099F7FB993B56F0A1
:1015800075A23B46EE759D8D46C6506A429A006B29
:1015900000E083C404E91901FA8B46F48B56F2A3E8
:1015A000E68B8916E48BFBA0248.7B4008BD883FBE1
:1015B000057731D1E32EFFA7B816C746E80000C76C
:1015C00046E66C4AC746E40000C746E2A849EB1469
:1015D000C746E80000C746E69494C746E40000C743
:1015E00046E2A4938B46E48B56E28946F08956EE98
:1015F000EB4B568D46F2506A01FF76F0FF76EE6AAD
:10160000000EE8F2F683C40C0BC07503E9DFFD3D64
:1016100002007402EB1F8B46F48B56F23B46F075CA
:10162000053B56EE7429FA8B46F48B56F2A3E68BF3
:101630008916E48BFB8346EE018356F0008B46F05F
:101640008B56EE3B46E87CAA75053B56E672A38BAB
:101650004EE88B5EE62B5EF21B4EF483C30A83D109
:10166000033D2B805009AB8004CF88A56F6B60096
:10167000BB0500508BC299F7FB5A2BD04A526A0126
:101680000EE83CF383C40456E876F7598946EC8D9E
:1016900046C6506A429A006B00E083C404837EEC25
:1016A000017505B80900EB0C837EEC027503E94B6C
:1016B000FDB80C005F5EC9C3BA15BA15D015D015B8
:1016C000E415E4157A147A14AE14AE14D714D714B2
:1016D000558BECFAC60679F01F9ADD1400E09AB03B
:1016E0000100D0C6067EF000C6067DF0FF807E04B5
:1016F000117403E9B100803E2487027407803E2400
:10170000870375078 00E28F040EB05802628F0BF80
:10171000800E28F080C60625F002C60616F040C6E8
:101720000615F000C60614F000C60657F000C606FF
:1017300058F000C60659F000C60631F000C6063261
:10174000F003C60631F001C60632F00FC60620F0DF
:10175000CAC60621F08DC60670F028C6067EF08A3D
:10176000C60612F000C60626F009C60677F002C6C5
:101770000610F000066A000726C7063000BD1726CF
:10178000C70632002BF207C606E98B00C60679F0C1
:101790000CC60622F0FFC6067DF0FFC60623F0FF4A
:1017A000C6061AF001EB13803E2487027407803EC0
:1017B0002487037505802628F0BFFB5DC350535175
:1017C00052061E565755BD00118EDD8BEC83EC0280
:1017D000E863EF8A1622F08A1E23F0F6C38D742F79
:1017E000F6C38C7407800EE98B04EB50800EE98BF6
:1017F000048A1E30F00ADB7516800EE98B02C606DD
:10180000079F01F9AB00100D0C6067DF0FFEB5BF6C1
:10181000C2407415800EE98B048A1E30F0F6C30DA9
:1018200074DC800EE98B01EBD5F6C20874328A1E97
:101830007DF0F6C3827411800EE98B05C60679F03F
:101840001F9ADD1400E0EBBBF6C3087413A07AF016
:10185000 8846FFF646FF4074E8800EE98B08EBE10E
:10186000F6C2027405C60622F002C70622FF0080F7
:10187000C95F5E1F075A595B58CF558BECFA9ADD4A
:101880001400E0C6061AF0009AB00100D0837E046E
:10189000117555800E24F000803E2487027407806 5
```

```
:1018A0003E2487037505800E28F0C0C60620F0018F
:1018B000C60621F000C60670F028066A000726C793
:1018C000063000111926C70632002BF207C606EAB9
:1018D0008B00C60610F002C60622F0FFC60623F0F3
:1018E000FFC6061AF001EB26066A000726C706386F
:1018F00000FD0926C7063A002BF207803E24870226
:10190000740780 3E2487037505802628F03FFB5D21
:10191000C350535152061E565755BD00118EDDE877
:1019200014EE8A1622F0F6C2017449F6C2807407DA
:10193000800EEA8B01EB33800EEA8B02A016F0A238
:10194000EC8BA015F0A2EB8B813EEB8B0696760814
:10195000C706ED8BFFFFEB06C706ED8B0000A0145A
:10196000F0A2EF8BA0E38BA2F08B9AB00100D0C65F
:10197000062 2F001C70622FF00805D5F5E1F075A46
:10198000595B58CF50535152061E565755BD001142
:101990008EDDA0E38B04FFA2E38B0AC0751BC60695
:1019A000E38B05C606E88B01F60603F104740A838F
:1019B00006E48B018316E68B00E81000C70622FFC1
:1019C00000805D5F5E1F075A595B58CF803EE08BF9
:1019D000007412833EE18B007507C606E08B00EBB6
:1019E00004FF0EE18BC3FAC606E88B00FB803EE8DD
:1019F0008B0074F9C3C8040000568B7606F70662A4
:101A00008640007503E9AD00A02487B4003D0400C2
:101A100074073D05007413EB22C746FCCED5C746BC
:101A2000FE00E0C6064EF000EB21C746FCFFD5C71E
:101A300046FE00E0C6064EF002EB10C60403C644A4
:101A40000131C644020033C0E9A9016A00A024871D
:101A5000B400BA005F0BD0529A690206EF83C40447
:101A60008BD083FA01740C56529A640306EF83C438
:101A700004EBD3C45EFC268B07A36486813E648698
:101A8000000475046A33EB026A229A2D1000E059B3
:101A9000A02487B40050E885EF59C45EFC268B472C
:101AA00007A36A86268B4702A36686268A4704A276
:101AB0007086E9AD00A02487B4008BD883FB037641
:101AC00003E977FFD1E32EFFA7F71BC746FC0AD532
:101AD000C746FE00E0C6064EF000EB2CC746FC3BB6
:101AE000D5C746FE00E0EB16C746FC6CD5C746FEE0
:101AF00000E0EBE1C746FC9DD5C746FE00E0C60608
:101B00004EF002EB03E933FFA03F88B400A36686E2
:101B1000A06686A27086A06686FEC8A213F0803EEC
:101B200024870274078 3E2487037508A138882D16
:101B3000BA00EB06A138882D5F00A36A86A0408812
:101B4000B4002507003D01007508C7066486000241
:101B5000EB06C70664860004A02487B40050E8BDE5
:101B6000EE59A16486A3688633C98BC16BC005C4D6
:101B70005EFC03D8268B470B268B57098BD96BDB72
:101B8000058987798689977786 8BC16BC0058B5EBF
:101B9000FC03D8268A470D8BD96BDB0588877B86AB
:101BA0004183F9047CC4C45EFC268B471FA32488B0
:101BB000268B4721A32688268B4723A32888268B9C
:101BC0004725A32A88268B4729268B5727A32E88AB
```

```
:101BD00089162C88268B472BA37186268B472F26A8
:101BE0008B572DA3758689167386268B471DA38B6D
:101BF00086B801005EC9CBCB1ADC1AE81AF41AC801
:101C0000100000565733FFC746F80000C746F600DD
:101C100000C646F500C746F24000C746F0003083D4
:101C2000266286EC9A0D0700E08BF00BF67503E94F
:101C30004E02C746FE0000E9CF01837EFE047232E9
:101C40000BFF7503E9CB018B5EF66BDB058A877BA7
:101C500086B400508B5EF66BDB05FFB77986FFB765
:101C600077869AE89300E083C4068956FC8946FA91
:101C7000EB338B5EFE6BDB058A877B86B400508B73
:101C80005EFE6BDB05FFB77986FFB777869AE89330
:101C900000E083C4068956FC8946FAB0018A4EFEEC
:101CA000D2E08846F4C7441201008B46FC8B56FAFA
:101CB00089441089540EC6441400C6441500C64415
:101CC0001600C6441A03C6440800830E28FF406A63
:101CD000006A03FF36FE80900EE8112783C4063D9C
:101CE000100750883262 8FFBFE92601C7062EDA02
:101CF0000300893630DAC70636DA03009A8C03000F
:101D0000E08BF0832628FFBF807C09017403E9F58E
:101D1000009A5D9200E083266286FC803E24870064
:101D20007407803E2487017505E85801EB03E8A697
:101D3000028AD00AD27403E9CC00803E8E880175F5
:101D400019E85E098AD00AC0740B80FA067403E9A8
:101D5000B400E9BD00830E628601803E8E88027465
:101D600007803E8E8801756C803E24870074078052
:101D70003E2487017505E8E90BEB03E8D10E8AD014
:101D80000AD2740B80FA067403EB7B90E98300831C
:101D90007EFE047503EB7B90830E628602A196881B
:101DA0003B46F8761A8946F88B46FE8946F6BF010F
:101DB000008A46F48846F5837EFE037517EB53A12F
:101DC00096883B46F8750D8A46F40846F547837EAB
:101DD000FE03743E803E8E8800752BC45EF026C6DE
:101DE00047040026C647050226C647070126C64700
:101DF000090A26C6470C0226C6470D01BF04008308
:101E00000E628602EB0CFF46FE837EFE047703E93A
:101E100028FE89362EDA9A7E0700E0F7068D8600C6
:101E200020752783FF0474220BFF761E803E2487D3
:101E3000007417803E24870174106A018A46F550A9
:101E40009A1DCC00D083C4048BF883FF027707C6A9
:101E500006B88001EB05C606B8800083FF02721148
:101E60009A1CE000D03D01007516830E628610EBCF
:101E70000F83266286EC830E6286209A5D9200E0D4
:101E80005F5EC9CB56BEF083C7040000C6440200A3
:101E9000C7440674888C5C08C7440A1E009A4DD853
:101EA00000D03D01007406B80900E92801813E9088
:101EB000880A0A7406B80400E91A01803E8E880177
:101EC000740A803E8E88027403E90201A18C883B6B
:101ED000062888770783 E8C8800750 6B80500E9D8
:101EE000F300A18C88A31E88A08E88A21688BA88C9
:101EF000888BDA8B47028B1783E2FF25FF00A32F25
```

```
:101F00008789162D87BA84888BDA8B47028B1783D3
:101F1000E2FF25FF00A3338789163187A18C88A3B0
:101F200035878B1E8C8833C98B162F87A12D879AF6
:101F3000B8004CF889163987A33787B201EB3B8A82
:101F4000C2B4006BC00E8BD8C7872F870000C7872D
:101F50002D8700008AC2B4006BC00E8BD8C78733B0
:101F6000870000C787318700008AC2B4006BC00EAB
:101F70008BD8C78735870000FEC280FA1075C0F77E
:101F800006628640007407C606178800EB05C60681
:101F90001788018B1E1E8833C98B162F87A12D87AA
:101FA0009AB8004CF889162288A32088A122888B31
:101FB00016208883EA011D0000A36E8689166C86B0
:101FC000C7069D860F00C7069B86FFFFEB05B80876
:101FD00000EB0233C05EC356BEF083C7040000C6E8
:101FE000440200C7440674888C5C08C7440A1E007B
:101FF0009A4DD800D03D01007406B80900E9A0064A
:10200000813E90880A0A7406B80400E99206803E70
:102010008E8801740D803E8E88027406B80800E92F
:102020007E06A08E88A21688A18C883D0100740BC4
:102030003D10007503E9C200E91406803E248702C2
:10204000752CC7061E880100C7062F871100C7061A
:102050002D8749C0C70633870000C70631871D0892
:10206000C70639871100C706378749C0EB2AC7065C
:102070001E880100C7062F870900C7062D8771B883
:10208000C70633870000C70631870908C7063987A6
:102090000900C706378771B8C70635870100B20146
:1020A000EB508AC2B4006BC00E8BD8C7872F870055
:1020B00000C7872D8700008AC2B4006BC00E8BD882
:1020C000C78733870000C787318700008AC2B40002
:1020D0006BC00E8BD8C787358700008AC2B4006BEF
:1020E000C00E8BD8C78739870000C78737870000A5
:1020F000FEC280FA1075ABE95A05803E248702744F
:1021000003E9A302C7061E881000C7062F87000038
:10211000C7062D8706C1C70639870000C70637875F
:1021200006C1C70633870000C70631875D00C706B2
:1021300035870100C7063D870000C7063B877FCD76
:10214000C70647870000C70645877FCDC70641877A
:102150000000C7063F875D00C70643870100C7062A
:102160004B870000C70649879BD9C70655870000E3
:10217000C70653879BD9C7064F870000C7064D8700
:102180005D00C70651870100C70659870000C706D2
:102190005787B7E5C70663870000C7066187B7E5BD
:1021A000C7065D870000C7065B875D00C7065F87BF
:1021B0000100C70667870000C7066587B4F1C70638
:1021C00071870000C7066F87B4F1C7066B870000F0
:1021D000C70669877C00C7066D870100C70675873B
:1021E0000000C7067387D0FDC7067F870000C706BB
:1021F0007D87D0FDC70679870000C70677877C00FA
:10220000C7067B870100C70683870100C706818751
:10221000EC09C7068D870100C7068B87EC09C70646
:1022200087870000C70685877C00C70689870100CD
```

```
:10223000C70691870100C7068F870816C7069B87C8
:102240000100C70699870816C70695870000C706CC
:1022500093877C00C70697870100C7069F87010008
:10226000C7069D872422C706A9870100C706A7873E
:102270002422C706A3870000C706A1877C00C706E3
:10228000A5870100C706AD870100C706AB87402EB2
:10229000C706B7870100C706B587402EC706B187B6
:1022A0000000C706AF877C00C706B3870100C706DA
:1022B000BB870100C706B9873D3AC706C58701003D
:1022C000C706C3873D3AC706BF870000C706BD875C
:1022D0009B00C706C1870100C706C9870100C70662
:1022E000C7875946C706D3870100C706D187594615
:1022F000C706CD870000C706CB879B00C706CF87E0
:102300000100C706D7870100C706D5877552C706E3
:10231000E1870100C706DF877552C706DB8700002B
:10232000C706D9879B00C706DD870100C706E5877A
:102330000100C706E387915EC706EF870100C70665
:10234000ED87915EC706E9870000C706E7879B0017
:10235000C706EB870100C706F3870100C706F187B0
:10236000AD6AC706FD870100C706FB87AD6AC706D1
:10237000F7870000C706F5879B00C706F9870100AD
:10238000C70601880100C706FF874D76C7060B8880
:102390000100C70609884D76C70605880000C706F4
:1023A0000388BA00E9A002C7061E881000C7062FDE
:1023B000870000C7062D87B869C70639870000C7A0
:1023C000063787B869C70633870000C706318755C7
:1023D00000C70635870100C7063D870000C7063BDA
:1023E000878F70C70647870000C70645878F70C76D
:1023F0000641870000C7063F875500C7064387018F
:1024000000C7064B870000C70649872277C70655D5
:10241000870000C70653872277C7064F870000C78B
:10242000064D876600C70651870100C70659870019
:1024300000C7065787C67DC70663870000C70661C9
:1024400087C67DC7065D870000C7065B876600C735
:10245000065F870100C70667870000C70665876AB1
:1024600084C70671870000C7066F876A84C7066B3A
:10247000870000C70669876600C7066D870100C729
:1024800006758700000C7067387FD8AC7067F870029
:1024900000C7067D87FD8AC70679870000C70677D3
:1024A000877700C7067B870100C70683870000C7C0
:1024B000068187A191C7068D870000C7068B87A17B
:1024C00091C70687870000C70685877700C70689FA
:1024D000870100C70691870000C7068F874598C708
:1024E000069B870000C70699874598C70695870011
:1024F00000C70693877700C70697870100C7069F26
:10250000870000C7069D87D89EC706A9870000C719
:1025100006A787D89EC706A3870000C706A187889D
:1025200000C706A5870100C706AD870000C706AB38
:10253000877CA5C706B7870000C706B5877CA5C7F7
:1025400006B1870000C706AF878800C706B38701BA
:1025500000C706BB870000C706B98720ACC706C501
```

```
:10256000870000C706C38720ACC706BF870000C727
:1025700006BD878800C706C1870100C706C9870056
:1025800000C706C787B3B2C706D3870000C706D106
:1025900087B3B2C706CD870000C706CB879900C7AF
:1025A00006CF870100C706D7870000C706D5875723
:1025B000B9C706E1870000C706DF8757B9C706DB42
:1025C000870000C706D9879900C706DD870100C7C5
:1025D00006E5870000C706E387FBBFC706EF870055
:1025E00000C706ED87FBBFC706E9870000C706E7FF
:1025F000879900C706EB870100C706F3870000C76D
:1026000006F1878EC6C706FD870000C706FB878ECA
:10261000C6C706F7870000C706F587AA00C706F9F0
:1026200087010OC70601880000C706FF87EECCC7F8
:10263000060B880000C7060988EECCC7060588008F
:1026400000C7060388BB00C70607880100EB05B872
:102650000500EB4CC606178801803E248702751AD8
:10266000C70622881100C706208849C0C7066E86A3
:102670001100C7066C8648C0EB18C70622880900FF
:10268000C706208871B8C7066E860900C7066C8623
:1026900070B8C7069D860F00C7069B86FFFF33C034
:1026A0005EC3C80800005657BFF0839A0D0700E0CC
:1026B0008BF00BF67506B80600E9A202803E24876F
:1026C000007407803E2487017514803E838800745F
:1026D00003E9E101C746FC8188A08088EB12803EB7
:1026E0007B88007403E9CD01C746FC7988A078880F
:1026F0008846FB8A46FBB400508B5EFC6A00FF37BD
:102700009AE89300E083C40689541089440E817CC2
:1027100010008075098370E007503E98E01C744A3
:10272000120100C6441400C6441500C6441600C673
:10273000441A03C6440800830E28FF406A006A0357
:10274000FF36FE80900EE8A41C83C4063D01007590
:1027500011832628FFBF89362EDA9A7E0700E0E92A
:1027600054FFC7062EDA0300893630DAC70636DA98
:1027700003009A8C0300E08BF0832628FFBF8A4475
:10278000098846FA89362EDA9A7E0700E0807EFABA
:1027900017403E98101C7050000C6450200C74571
:1027A0000692888C5D08C7450A04009A4DD800D06F
:1027B0003D01007567833E9488017406B80400E902
:1027C0009C01A192883B0624887606B80200E98D18
:1027D00001C7060F880030A19288A30D88C1E002CE
:1027E0008946FEA10F880346FE050400A31A88A1AE
:1027F0000D8801061888C7050000C6450200A10F14
:10280000888945O6C745084000A16486C1E8028959
:10281000450A9AA6D800D03D01007411689500 9A27
:102820006A1E00E059C6061B8495E989FE8B46FEA8
:102830003B0664867703E92301C746F864869A0D50
:10284000700E08BF00BF67503E96AFE8B5EF88AF1
:1028500078844148A4701884415C6441600C644B4
:102860001A03C64408008B4EFE2B0E64868BC133C0
:10287000D2F736648668944 12A164864885C1740300
:10288000FF44128A46FBB40040508B5EFC6A00FF96
```

```
:10289000379AE89300E083C40689541089440E8176
:1028A0007C1000807515837C0E00750F89362EDA3A
:1028B0009A7E0700E0B80B00E9A300830E28FF40D2
:1028C0006A006A03FF36FE80900EE8201B83C40670
:1028D0003D0100751189362EDA9A7E0700E08326C5
:1028E00028FFBFE9D0FDC7062EDA0300893630DAAB
:1028F000C70636DA03009A8C0300E08BF0832628A3
:10290000FFBF8A44098846FA89362EDA9A7E070084
:10291000E0807EFA017405B80100EB42A16486896B
:1029200005C6450200A10F8803066486894506C7CF
:1029300045084000 8B46FE2B066486C1E8028945A7
:102940000A9AA6D800D03D010074116895009A6AD1
:102950001E00E059C6061B8495E95AFD33C05F5E30
:10296000C9C3C81000005657BFF083803E7F88005F
:1029700074 06B80B00E9D302C746F67D88A07C88B0
:1029800008846F59A0D0700E08BF00BF67503E955C4
:10299000028A46F5B400508B5EF66A00FF379AE86B
:1029A0009300E083C40689541089440E817C100092
:1029B000807511837C0E00750B89362EDA9A7E079E
:1029C00000E0EBAEC744120100C6441400C6441533
:1029D00000C6441600C6441A03C6440800830E28E5
:1029E000FF406A006A03FF36FE80900EE8FE1983FE
:1029F000C4063D0100751189362EDA9A7E0700E083
:102A0000832628FFBFE9DE01C7062EDA03008936D8
:102A100030DAC70636DA03009A8C0300E08BF083C5
:102A20002628FFBF8A44098846F489362EDA9A7E22
:102A30000700E0807EF4017403E96A01C705000025
:102A4000C6450200C7450696888C5D08C7450A0A38
:102A5000009A4DD800D03D010074116895009A6A23
:102A60001E00E059C6061B8495E97A01833E9E88C4
:102A7000027524A196883B0624887606B80300E9EF
:102A8000C901803E9D8800750E803E9C88017507B7
:102A9000803E9888017406B80400E9AE01A11A8846
:102AA000A31388A19688A31188C1E0038B1613880D
:102AB00003D083C20A89161C88A1118801061888D0
:102AC000A19688C1E003050A008946FC3B0664869E
:102AD0007703E9D700C746F064869A0D0700E08BBC
:102AE000F00BF67503E9FE008B5EF08A078844144C
:102AF0008A4701884415C6441600C6441A03C644D2
:102B000008008B4EFC2B0E64868BC133D2F73664E3
:102B100086894412A164864885C17403FF44128AE1
:102B200046F5B40040508B5EF66A00FF379AE89392
:102B300000E083C40689541089440E817C10008013
:102B40007509837C0E007503E96EFE830E28FF4035
:102B50006A006A03FF36FE80900EE8901883C40670
:102B60003D0100751089362EDA9A7E0700E0832633
:102B700028FFBFEB71C7062EDA0300893630DAC7AB
:102B80000636DA03009A8C0300E08BF0832628FFD8
:102B9000BF8A44098846F389362EDA9A7E0700E018
:102BA000807EF3017406B80100E99F00C7050000AC
:102BB000C6450200A113888945 06C7450840008B19
```

```
:102BC00046FC89450A8B450AC1E80289450A9AA64E
:102BD000D800D03D010074136895009A6A1E00E089
:102BE00059C6061B8495B80600EB60A11388050A38
:102BF00000C746FA40008946F88B361188B9E0B123
:102C0000C646FF00EB3FC45EF826803F007527C430
:102C10005EF8268A4701B400C1E008268A5702B64A
:102C20000003C28BD0268A5F033BD17C093BD17560
:102C30000A3A5EFF7305B80C00EB108BCA885EFF82
:102C40008346F8084E0BF675BD33C05F5EC9C3C836
:102C50001000005657BFF083803E7788007406B896
:102C60000B00E9BE02C746F67588A074888846F551
:102C70009A0D0700E08BF00BF67503E940028A46D7
:102C8000F5B400508B5EF66A00FF379AE89300E0D7
:102C900083C40689541089440E817C10008075110C
:102CA000837C0E00750B89362EDA9A7E0700E0EBE6
:102CB000AEC744120100C6441400C6441500C64401
:102CC0001600C6441A03C6440800830E28FF406A53
:102CD000006A03FF36FE80900EE8111783C4063D9C
:102CE00001007511893 62EDA9A7E0700E0832628C6
:102CF000FFBFE9C901C7062EDA0300893630DAC7FB
:102D00000636DA03009A8C0300E08BF0832628FF56
:102D1000BF8A44098846F489362EDA9A7E0700E095
:102D2000807EF4017403E95501C7050000C6450221
:102D300000C7450696888C5D08C7450A0A009A4D6B
:102D4000D800D03D010074116895009A6A1E00E019
:102D500059C6061B8495E96501833E9E8802740668
:102D6000B80400E9BD01A19C883B0624887606B81A
:102D70000300E9AE01A11A88A31388A19C88A311BE
:102D800088C1E0038B16138803D083C20A89161CFE
:102D900088A1118801061888A19C88C1E003050A52
:102DA000008946FC3B0664867703E9D700C746F0F6
:102DB00064869A0D0700E08BF00BF67503E9FE00C0
:102DC0008B5EF08A078844148A4701884415C644FC
:102DD0001600C6441A03C64408008B4EFC2B0E6432
:102DE000868BC133D2F7366486894412A164864843
:102DF00085C17403FF44128A46F5B40040508B5ECF
:102E0000F66A00FF379AE89300E083C406895410FD
:102E100089440E817C1000807509837C0E00750347
:102E2000E983FE830E28FF406A006A03FF36FE80B6
:102E3000900EE8B81583C4063D0100751089362E42
:102E4000DA9A7E0700E0832628FFBFEB71C7062EC3
:102E5000DA0300893630DAC70636DA03009A8C03C3
:102E600000E08BF0832628FFBF8A44098846F38957
:102E7000362EDA9A7E0700E0807EF3017406B801F0
:102E800000E99F00C7050000C6450200A11388891C
:102E90004506C7450840008B46FC89450A8B450A14
:102EA000C1E80289450A9AA6D800D03D01007413F2
:102EB0006895009A6A1E00E059C6061B8495B806FC
:102EC00000EB60A11388050A00C746FA4000894656
:102ED000F88B361188B9E0B1C646FF00EB3FC45EFF
:102EE000F826803F007527C45EF8268A4701B400A3
```

```
:102EF000C1E008268A5702B60003C28BD0268A5F3B
:102F0000033BD17C093BD1750A3A5EFF7305B80CCF
:102F100000EB108BCA885EFF8346F8084E0BF675EF
:102F2000BD33C05F5EC9C3C8060000568A4608B4F8
:102F30000050FF7606FF76049AE89300E083C4060B
:102F40008956FE8946FC9A0D0700E08BF00BF6755A
:102F500004B006EB7DC7441201008B46FE8B56FC85
:102F600089441089540E8A460A24FF8844178B46E8
:102F70000AC1E80824FF8844188B460C24FF8844C3
:102F800019C6440805830E28FF406A006A03FF360D
:102F9000FE80900EE8561483C4063D01007505833B
:102FA0002628FFBFC7062EDA0300893630DAC706A7
:102FB00036DA03009A8C0300E08BF0832628FFBFEB
:102FC0008A44098846FB89362EDA9A7E0700E08A11
:102FD00046FB5EC9C3C80A000056C746F60000C7D4
:102FE00046F800008B46F83B46F67D376A006800DD
:102FF000308A46080246F8508B46F6998B5E068B5F
:103000004E0403C813DA5351E81CFF83C40A8846F0
:10301000FB3C017403E9EB00FF46F88B46F83B46A6
:10302000F67CC96A006800328A46080246F6508B70
:1030300046F6998B5E068B4E0403C813DA5351E8AB
:10304000E5FE83C40A8846FB3C017403E9B4009A98
:103050000D0700E08BF00BF67505B006E9A7008AB6
:1030600046 08B4000346F640508B46F6998B5E0640
:103070008B4E0403C813DA53519AE89300E083C4DB
:10308000068956FE8946FCB819002B46F648894445
:10309000128B46FE8B56FC89441089540EC6441789
:1030A00000C6441800C6441900C6440805830E280B
:1030B000FF406A006A03FF36FE80900EE82E1383FD
:1030C000C4063D01007505832628FFBFC7062EDA1A
:1030D0000300893630DAC70636DA03009A8C03001B
:1030E000E08BF0832628FFBF8A44098846FB893697
:1030F0002EDA9A7E0700E0FF46F6837EF6147D0303
:10310000E9DCFE8A46FB5EC9C3C808000056578B3F
:103110003EAA88C746FE5E08BEF083C646FD026A28
:10312000C6A046861089A966900E083C4060BC0C3
:1031300074079AC41D00E0EB71FF76FEE87A00592F
:103140000AC07566C744030030C6440500C7440A78
:10315000002C6440CFF9A07D900D0FF76FEE8DAD9
:10316000059C41E1200268B470C998956FA8946CD
:10317000F8268A571052FF76FA50E858FE83C406A4
:103180003C017526C41E1200268B4711998956FAF8
:1031900008946F8268A571052FF76FA50E836FE83A1
:1031A000C4063C017504C646FD009A520000D08A50
:1031B00046FD8845145F5EC9CBC802000056578B98
:1031C0007E04BEF083C646FF02807D030074138A2E
:1031D0004503506A009AEF1D00E083C4048A46FF4D
:1031E000EB55807D020174058A4502EBE5813D00C7
:1031F0003077EA833D00743D6A00FF356A006A005B
:103200009AEF6500E083C4080AC0740F9AC41D00D9
:10321000E0C646FFFEBC6EB1CEBC28B05894403FF
```

```
:10322000C6440500B800302B0589440AC6440CFF8B
:103230009A07D900D0B0005F5EC9C3C80600005627
:10324000578B7E04C746FEF083C746FC4000C74646
:10325000FA6EDE6A1E6800E0688AECFF76FCFF7694
:10326000FA9A479600E083C40AC45EFA26C6471F4E
:1032700001803E2487027403E9F7008A0524FF26B3
:1032800088472 08B0525FFFFC1E80824FF268847D3
:10329000 2133C024FF2688472233C0C1E80824FF19
:1032A0002688472326C647240026C647250026C66B
:1032B00047260026C64727008A0524FF2688472878
:1032C0008B0525FFFFC1E80824FF2688472933C066
:1032D00024FF2688472A33C0C1E80824FF268847F0
:1032E0002B26C6472C0026C6472D0026C6472E0093
:1032F00026C6472F378A0524FF268847308B0525A9
:10330000FFFFC1E80824FF2688473133C024FF2689
:1033100088473233C0C1E80824FF2688473326C6D1
:1033200047346126C64735D026C647360526C647E8
:1033300037008A0524FF268847388B0525FFFFC103
:10334000E80824FF2688473933C024FF2688473AF7
:1033500033C0C1E80824FF2688473B26C6473C986F
:1033600026C6473DD026C6473E0526C6473F00E94C
:10337000F700C45EFA8A0524FF268847208B0525BE
:10338000FFFFC1E80824FF2688472133C024FF2619
:1033900088472233C0C1E80824FF2688472326C671
:1033A00047240026C647250026C647260026C647CE
:1033B00027008A0524FF268847288B0525FFFFC1A3
:1033C000E80824FF2688472933C024FF2688472A97
:1033D00033C0C1E80824FF2688472B26C6472C00A7
:1033E00026C6472D0026C6472E0026C6472F648ACC
:1033F0000524FF268847308B0525FFFFC1E80824F8
:10340000FF2688473133C024FF2688473233C0C1A6
:10341000E80824FF2688473326C64734A926C6472E
:1034200035D826C647360A26C64737008A0524FF00
:1034300026884 7388B0525FFFFC1E80824FF26882A
:1034400047393 3C024FF2688473A33C0C1E80824EF
:10345000FF2688473B26C6473F0026C6473E0A262A
:10346000C6473DD926C6473C128B5EFEC7470300C0
:1034700032C6470500C747066EDEC747084000C78B
:10348000470A40009A6CD700D08B5EFEC7470340C6
:1034900032C6470500C7470AC001C6470CFF9A0756
:1034A000D900D05F5EC9C3C802000056579A4400D5
:1034B00000D00BC07531830E28FF40C606DD8D009D
:1034C000830EDE8D01C606E28D04C606E38D44C67A
:1034D00006E48D9EC6061B849EC706038100529A91
:1034E000000006EFE94A02FF06728D803E0C8E0056
:1034F0007506A10381A3708D83063F0401831641E5
:1035000040080 3E0C8E007508A003F12404A2DCA8
:103510008D6A019ABB9800E059A00C8EFEC0A20CE7
:103520008E3C0A7391C706038100209A000006EFC3
:103530008BD03D0100742 830E28FF40C606DD8D28
:1035400000830EDE8D0168E48D68E38D68E28D52A4
```

```
:10355000E8F50D83C408A0E48DA21B84E9D201C75D
:1035600006038100299A000006EF8BD03D0100750B
:10357000C68B16728D4A83E20F8BDA6BDB06A18D48
:10358000868987748D8BDA6BDB06A18F86898776B7
:103590008D8BDA6BDB06A1588C8987788DA18D869E
:1035A0000906E68DA18F860906E88DA1588C0906CB
:1035B000EA8D9C8F46FEFAC6062F00DAA08D86A201
:1035C0003000A18D86C1E808A23100A08F86A2320A
:1035D00000A18F86C1E808A233006A05682F009A0F
:1035E0006BEE00D083C404F746FE00027503E9F8D1
:1035F00000FBE9F400BFA000BE2080853EE68D758B
:10360000068536E88D740DE82B013C167403E9D865
:1036100000E905FFF706E88D0001740DE877013C2D
:10362000167403E9C300E9F0FEF706E88D00207484
:103630000DE82A023C167403E9AE00E9DBFEF7064A
:10364000E88D0800740DE813033C167403E9990033
:10365000E9C6FEF706E68D0100740DE87A063C1611
:1036600007403E98400E9B1FEF706E88D0010740ADE
:10367000E881093C167572E99FFEBE01088536E8AF
:1036800008D740AE807043C16755FE98CFEF706E6C0
:1036900008D0200740AE8F70A3C16754DE97AFEBE01
:1036A0001040BF1000853EE68D75068536E88D74A6
:1036B0000AE840073C167531E95EFEF706E68D081C
:1036C00000740AE855053C16751FE94CFEF706EA3A
:1036D0008D0008740AE8B70B3C16750DE93AFEE850
:1036E0005B083C167503E930FEF706DE8D010075B8
:1036F00021F706E68DBF017403E9F9FEF706E88DB0
:10370000F9F97403E9EEFEF706EA8D00087403E99F
:10371000E3FE803EDC8D007518F7068D860040754F
:1037200010F7068D86000275086A009ABB9800E0C3
:10373000595F5EC9CB830EDE8D01C606E28D04C6DD
:1037400006E38D44F7068F8600807405C606E48D77
:10375000A4F7068F8620007405C606E48DA1F7063F
:1037600008D8680007405C606E48D9FF7068D862041
:1037700007405C606E48DA5A0E48DA21B84830E0B
:1037800028FF40C606DD8D008326628608C7061224
:1037900087FF00B00BC3C8020000C70603810050BA
:1037A0009A000006EF8946FE3D01007438E83604B1
:1037B00068E48D68E38D68E28D8A46FE50E8880BE8
:1037C00083C408830E28FF40C606DD8D00830EDE0D
:1037D0008D01A0E48DA21B848326628608C7061291
:1037E00087FF00EB75C706038100209A000006EFF3
:1037F0008946FE3D010075B5C706038100299A0080
:1038000006EF8946FE3D010075A2F7068F86008F
:10381000017411C606E28D04C606E38D44C606E4B3
:103820008DA0EB9FF7068D86BF017510F7068F867A
:10383000F9F97508F706588C00087404B016EB1CEB
:10384000FA8126E68DE1FC8126E88DAEA6C7061436
:1038500087FF00C7061287FF00FBB00BC9C3C80271
:1038600000000A0E58DFEC0A2E58D3C037229F7069D
:1038700DE8D020075748 30EDE8D02C606E28D04B5
```

```
:10388000C606E38D44C606E48D15A0E48DA21B8414
:10389000C606DD8D00EB53F7068D860040754BC7DD
:1038A00006038100569A000006EF8946FE3D01009E
:1038B0007438830E28FF40E82C03830EDE8D01C68A
:1038C00006DD8D0068E48D68E38D68E28D8A46FE32
:1038D00050E8740A83C408A0E48DA21B8483266286
:1038E0008608C7061287FF00EB6EC70603810050EB
:1038F0009A000006EF8946FE3D010075B5C7060334
:1039000081002O9A000006EF8946FE3D010075A265
:10391000C706038100299A000006EF8946FE3D0193
:1039200000758FF7068D86BF017510F7068F86F933
:10393000F97508F706588C00087404B016EB1BFAEA
:103940008126E68DE0FC8126E88D26878326628627
:1039500008C7061287FF00FBB00BC9C3C8020000EE
:10396000830EDE8D08F706DE8D02007514C606E2B2
:103970008D03C606E38D3AC606E48D00C606DD8DCE
:1039800000C706038100209A000006EF8946FE3D2D
:10399000010074398 30E28FF40E84A02830EDE8D51
:1039A00001C606DD8D0068E48D68E38D68E28D8ACE
:1039B00046FE50E8920983C408A0E48DA21B8483CC
:1039C00026628608C7061287FF00E9BC00F7068D4D
:1039D000860040753DC70603810044C7060181008B
:1039E000009A000006EF8946FE3D010075A6C70655
:1039F000038100569A000006EF8946FE3D010075DE
:103A0000939A1E0206EF0BC075086A01E84F0A5927
:103A1000EB77FA8126E68DE0FC8126E88D26878308
:103A200026628608C7061287FF00FBC706038100CF
:103A3000509A000006EF8946FE3D01007403E953E9
:103A4000FFC706038100209A000006EF8946FE3D6D
:103A500001007403E93DFFC706038100299A0000B5
:103A600006EF8946FE3D01007403E927FFF7068D46
:103A700086BF017510F7068F86F9F97508F70658A5
:103A80008C00087404B016EB02B00BC9C3C8020066
:103A900000A00E8EFEC0A20E8E803E0E8E067459C1
:103AA000C706038100509A000006EF8946FE3D01DB
:103AB000007559C706038100209A000006EF894669
:103AC000FE3D01007546C706038100299A000006E5
:103AD000EF8946FE3D01007533F7068D86BF0175FF
:103AE00013F7068F86F9F9750BF706588C000875E1
:103AF00003E9DA00B016E9EB00C706038100519A2A
:103B0000000006EF8946FE3D0100743983 0E28FF50
:103B100040E8D200830EDE8D01C606DD8D0068E42C
:103B20008D68E38D68E28D8A46FE50E81A0883C4EA
:103B300008A0E48DA21B848326628608C70612872C
:103B4000FF00E99D00810EDE8D0004C7061287FF8D
:103B500000C7061487FF00C706038100509A0000C3
:103B600006EF8946FE3D010075A2C70603810020CD
:103B70009A000006EF8946FE3D0100758FC70603D7
:103B80008100299A000006EF8946FE3D010074037A
:103B9000E979FFF7068D86BF017403E956FFF70642
:103BA0008F86F9F97403E94BFFF706588C00087407
```

```
:103BB00003E940FF9A1E0206EF0BC074099A9602B1
:103BC00006EF0BC075086A00E8930859EB14FA81F8
:103BD00026E68DE1FC8126E88DAEA7C7061287FF99
:103BE00000FBB00BC9C3800E03F180830EDE8D0194
:103BF000C606E28D04C606E38D44C606E48DA5A084
:103C0000E48DA21B84830E28FF40C606DD8D008351
:103C100026628608C7061287FF00C3C8020000F7A5
:103C200006DE8D02007519830EDE8D02C606E28D5A
:103C300004C606E38D44C606E48DA8C606DD8D00E5
:103C4000C706038100509A000006EF8946FE3D0139
:103C5000007438830E28FF40E88BFF830EDE8D0151
:103C6000C606DD8D0068E48D68E38D68E28D8A46C6
:103C7000FE50E8D30683C408A0E48DA21B848326EB
:103C8000628608C7061287FF00EB49C7060381005A
:103C9000209A000006EF8946FE3D010075B5C70673
:103CA000038100299A000006EF8946FE3D01007558
:103CB000A2F7068D86BF017510F7068F86F9F97594
:103CC00008F706588C00087404B016EB09FA83262E
:103CD000E68DF7FBB00BC9C3C8020000830EDE8D72
:103CE00040F706DE8D0E007514C606E28D03C6068B
:103CF000E38D3AC606E48D00C606DD8D009AE31E0C
:103D000000E08326628608C7061287FF00C7060305
:103D10008100509A000006EF8946FE3D010074398B
:103D2000830E28FF40E8BEFE830EDE8D01C606DD51
:103D30008D0068E48D68E38D68E28D8A46FE50E868
:103D4000060683C408A0E48DA21B8483266286082D
:103D5000C7061287FF00E99700C706038100209A73
:103D6000000006EF8946FE3D010075B4C7060381D9
:103D700000299A000006EF8946FE3D010075A1F773
:103D8000068D86BF017510F7068F86F9F97508F75D
:103D900006588C00087404B016EB57C70603810060
:103DA000529A000006EF8946FE3D01007403E96F58
:103DB000FFC706038100209A000006EF8946FE3DFA
:103DC00001007403E959FFF7068D860040740783EC
:103DD00026E68DFEEB1AFA8126E68DE0FC8126E8C8
:103DE0008DAEA7C70662860800C7061287FF00FBD4
:103DF000B00BC9C3C8040000803EF88B007414FAED
:103E00008326E68DEF8126E88DEFBFC6060C8E0077
:103E1000E92501830EDE8D10C7061287FF00C74615
:103E2000FE1040F7068D8610007555A18F8623463B
:103E3000FE3D0040754AA00D8EFE060D8EB4003D7D
:103E400000200740C3D040074073D0600741DEB5520
:103E5000A1508CA30381C706018164009A0000066B
:103E6000EF8946FC3D0100743CEB4DC70603810021
:103E7000519A000006EF8946FC3D0100753AEB13AC
:103E8000C706038100519A000006EF8946FC3D01F8
:103E9000007525810EDE8D0004C7061287FF00C75E
:103EA000061487FF00C706038100509A000006EF42
:103EB0008946FC3D0100743283 0E28FF40E826FD50
:103EC000830EDE8D01C606DD8D0068E48D68E38D0E
:103ED00068E28D8A46FC50E86E0483C408A0E48D35
```

```
:103EE000A21B848326628608EB4FC706038100204D
:103EF0009A000006EF8946FC3D010075BBC706032A
:103F00008100299A000006EF8946FC3D010075A852
:103F1000F7068D86BF017510F7068F86F9F97508CB
:103F2000F706588C00087404B016EB0FFA8326E6E7
:103F30008DEF8126E88DEFBFFBB00BC9C3C802002F
:103F400000810EDE8D0001C706038100509A00003B
:103F500006EF8946FE3D01007438830E28FF40E8D5
:103F600084FC830EDE8D01C606DD8D0068E48D685D
:103F7000E38D68E28D8A46FE50E8CC0383C408A036
:103F8000E48DA21B848326628608C7061287FE0081
:103F9000EB5EC706038100209A000006EF8946FE0B
:103FA0003D010075B5C706038100299A000006EFA0
:103FB0008946FE3D010075A2F7068D86BF0175108A
:103FC000F7068F86F9F97508F706588C000874040F
:103FD000B016EB1EFA8126E68DFFFCF7068D8600F3
:103FE000407406C70662860800C7061287FF00FBFA
:103FF000B00BC9C3C8020000803EF88B007420805B
:104000002602F1FE8126E88DFFEFC606F78B01C67A
:10401000060C8E00B000A2D48DA2D58DE96C018370
:104020000EDE8D20C706038100509A000006EF893E
:1040300046FE3D01007433830E28FF40E8A7FB8352
:104040000EDE8D01C606DD8D0068E48D68E38D68A7
:10405000E28D8A46FE50E8EF0283C408A0E48DA2F8
:104060001B848326628608E92101C706038100209C
:104070009A000006EF8946FE3D010075BAC70603A7
:10408000810029 9A000006EF8946FE3D010075A7D0
:10409000F7068D86BF017510F7068F86F9F975084A
:1040A000F706588C00087405B016E9E000F7068D95
:1040B0008600407403E9C500C70603810011C706E6
:1040C00001816A009A000006EF8946FE3D010074F6
:1040D00003E963FFC706038100129A000006EF8917
:1040E00046FE3D01007403E94DFFA1F28BC1E803D8
:1040F0008B16F28B03D03B1605817626A1F28BC17D
:10410000E8038B16F28B2BD03B1605817314C60681
:10411000D48D00A0D58DFE06D58D3A06F18B765D47
:10412000EB2EA0D48DFE06D48D3C037323C706036B
:10413000810053A1F48BA301819A000006EF894608
:10414000FE3D01007403E9EEFEC606D58D00EB2DA1
:10415000C706038100529A000006EF8946FE3D0122
:1041600007403E9D1FE830EDE8D01C606DD8D00ED
:10417000C606E28D04C606E38D86E997FEFA81261F
:10418000E68DFFFC8126E88DFFEFFBB00BC9C3C8AD
:1041900020000F7068D86002075379AE31E00E0C6
:1041A000826628608C7061287FF00F706DE8D02A7
:1041B000007403E9CE00830EDE8D02C606E28D0296
:1041C000C606E38D04C606E48D00C606DD8D00E953
:1041D000B200810EDE8D8000F706DE8D4E0075196F
:1041E000830EDE8D02C606E28D03C606E38D27C66A
:1041F00006E48D00C606DD8D00C706038100509AD7
:10420000000006EF8946FE3D01007436830E28FF4C
```

```
:1042100040E8D2F9830EDE8D01C606DD8D0068E42C
:104220008D68E38D68E28D8A46FE50E81A0183C4EA
:1042300008A0E48DA21B848326628608C706128725
:10424000FF00C706038100209A000006EF8946FEA2
:104250003D010075B7C706038100299A000006EFEB
:104260008946FE3D010075A4F7068D86BF017510D5
:10427000F7068F86F9F97508F706588C000874045C
:10428000B016EB09FA8326E68DFDFBB00BC9C3C857
:10429000020000C706038100509A000006EF89461D
:1042A000FE3D01007438830E28FF40E838F9830E84
:1042B000DE8D01C606DD8D0068E48D68E38D68E261
:1042C0008D8A46FE50E8800083C408A0E48DA21BBE
:1042D000848326628608C7061287FF00EB66C7063E
:1042E000038100209A000006EF8946FE3D01007518
:1042F000B5C706038100299A000006EF8946FE3DF6
:10430000010075A2F7068D86BF017510F7068F862E
:10431000F9F97508F706588C00087404B016EB26F6
:10432000FF06DA8DA1DA8D3D680172108306D68D05
:10433000018316D88D00C706DA8D0000FA8126EABF
:104340008DFFF7FBB00BC9C3558BEC56578B7E0620
:104350008B760AC605048B5E08C607448A4604B4F9
:10436000002D02008BD883FB037716D1E32EFFA725
:104370008843C60416EB0DC60417EB08C60418EBF9
:1043800003C6043F5F5E5DC37243724377437C4361
:10439000C802000056F70628FF40007404B000EB86
:1043A00002B0018846FF830E28FF40EB1CC7062E93
:1043B000DA00809A0A0800E08BF0807C0900741D06
:1043C00089362EDA9A7E0700E033F6C7062EDA0029
:1043D000009A380700E08BD083FA0D74D0807EFFFE
:1043E00007405832628FFBF8BC65EC9CBC80200B8
:1043F0000056578B7E0AF70628FF40007404B00071
:10440000EB02B0018846FF830E28FF400EE880FFD4
:104410008BF00BF675108B4606A3FC808B4608A329
:10442000FE8033D2EB270BFF74178A440E884516A3
:104430008A440F8845178A44108845189ABD1C0085
:10444000E089362EDA9A7E0700E0BA0100807EFF0E
:1044500007405832628FFBF8BC25F5EC9CB558BD6
:10446000EC830E28FF40837E04007403E877F78313
:104470000EDE8D01C606DD8D00C606E28D04C60681
:10448000E38D44C606E48D188326628608C70612AB
:1044900087FF00C6061B84185DC3000000000000F3
:1044A000C8060000568B760656E8530B5956E8AE00
:1044B0000659C646FE00C646FFFFEB278A46FEB4F5
:1044C000006BC0268BD88A87B98F3A46FF73118A52
:1044D00046FEB4006BC0268BD88A87B98F8846FF0A
:1044E000FE46FE807EFE0375D3807EFFFF7513C6F9
:1044F000440900C6441903C6441A11C6441B00E906
:104500004C01C646FE00E939018A46FEB4006BC084
:10451000268BD88A87B98F3A46FF7403E920018D2C
:1045200046FA508A46FEB4006BC026059E8F50E8BE
:10453000501983C404B4002D02008BD883FB067687
```

```
:1045400003E9FB00D1E32EFFA754468A46FEB400E0
:104550006BC0268BD88A87A48FFEC08A56FEB60011
:104560006BD2268BDA8887A48F3C0A7403E9CF00CC
:104570008A46FEB4006BC0268BD8C687B98FFFE988
:10458000BD00C64409008A46FA8844198A46FB8859
:10459000441A8A46FC88441BE9B3008A46FEB400EC
:1045A0006BC0268BD88A87B88FFEC08A56FEB600AD
:1045B0006BD2268BDA8887B88F3C0F7502EBB18AF5
:1045C00046FEB4006BC0268BD8F687B78F01756F97
:1045D0008A46FEB4006BC026059E8F50E8E2025961
:1045E000EB5DEB8CC64409018A46FEB4006BC02625
:1045F0008BD88A87C08F8844108A46FEB4006BC06F
:10460000268BD88A87C28F8844128A46FEB4006BF4
:10461000C0268BD88A87C18F8844118A46FEB40091
:104620006BC0268BD88A87BE8F88440E8A46FEB41C
:10463000006BC0268BD88A87BF8F88440FEB0FFE94
:1046400046FE807EFE037403E9BEFEE964FEE8E2F6
:10465000025EC9CB82459B45E2453F463F46E44565
:104660004B45558BEC568B76048A44020C04A224ED
:10467000F18A4403A225F18A4404A226F1C6063138
:10468000F0008A04A232F0C60631F0018A4401A289
:1046900032F05E5DC3802624F1EF802611F1FEA08A
:1046A000588FA248F1A0598FA249F1A0638FA2416F
:1046B000F1A0628FA243F1A0658FA23DF1A0648FAB
:1046C000A23FF1A0678FA23CF1A0668FA23EF1C687
:1046D0000684F085C60670F014C3C80C0000565757
:1046E0008B7E048A450B50FF7509FF75076A01FF31
:1046F000361C00FF361A009A6CA200D083C40C88C6
:1047000046F5B400C1E005C41E1A0003D8268A4746
:10471000108846FF837D0E0075088A4517B400484F
:10472000EB058A4517B400D1E0C41E948F03D82648
:104730008B378B5E0633C933D2B810279AB8004C3A
:10474000F88956FC8946FA6A005652509A14004C71
:10475000F88956FC8946FA8B4608C746F800008956
:1047600046F633C9BB10278B56F89AB8004CF88927
:1047700056F88946F68A4504B4009950528B56FC87
:104780008B46FA595B9AB8004CF88A1E778FB700AF
:10479000D1E3C436948F03F350268B045233D2599D
:1047A0005B9AB8004CF82946F61956F88A46FFB4C9
:1047B00000C1E005C41E1A0003D8268B5F048A4599
:1047C0000BB4002BD833C98A46FFB400D1E0C436FD
:1047D000948F03F0268B0433D29AB8004CF85052D1
:1047E0008B56FC8B46FA595B9AB8004CF82946F672
:1047F0001956F86A00681027FF76F8FF76F69A14C3
:10480000004CF88956F88946F6A0778FB400C1E0CD
:1048100002C41E8C8F03D8268B4F02268B1F8B461B
:10482000F69AB8004CF88956F88946F66A0168A0ED
:1048300008652509A14004CF88956F88946F68945F4
:104840001C8A46FFB400D1E0C41E948F03D8268B87
:1048500007C746F800008946F6A0778FB400C1E08C
:1048600002C41E8C8F03D8268B4F02268B1F8B56BB
```

```
:10487000F88B46F69AB8004CF88956F88946F66ADD
:104880000168A08652509A14004CF88956F889465F
:10489000F68B4EFC8B5EFA9AB8004CF88956F88974
:1048A00046F66A0068102752509A14004CF8895650
:1048B000F88946F68B451C0346F689451C5F5EC9A0
:1048C000C3558BEC568B7604837C0E007541FE4CF1
:1048D00016FE4C178A4416B400C1E005C41E1A0027
:1048E00003D8268A47048844158A4417B400D1E0C7
:1048F000C41E908F03D8268B078944118A4417B4AD
:1049000000D1E0C41E988F03D8268B0789441380FA
:104910007C0B007405FE4C0BEB10836C0701835C71
:1049200009008A441504FF88440BFF4C0EFF440C19
:104930005E5DC3E85FFDFA066A0007A1688F26A3E3
:10494003000A16A8F26A3320007FBA1608FA3CAA3
:1049500086A15C8F8B165A8FA30A8789160887A1B8
:10496000528FA32787A1568F8B16548FA318878940
:10497000161687A05E8FA21A87C3558BECC7065EFA
:10498000FF00408B4604A35AFFC70658FF0000C72C
:10499000065EFF00C0F7065EFF200074F85DC3C826
:1049A0000A000056578B760433FFC746F80000C74D
:1049B00046F60000C646FF00E986008D46FC508D95
:1049C00046FA50FF760656E8AD0A83C408B4008B59
:1049D000D03D0900741A3D0A0074073D0B00740BAA
:1049E000EB58C6441BFFB006E98000B00BEB7C908F
:1049F0008A4417B400D1E0C41E908F03D8268B07D9
:104A00003B46FA72398A4417B400D1E0C41E988F2D
:104A100003D8268B078A16778FB600D1E2C41E9082
:104A20008F03DA2603073B46FC72138B46FA0146D6
:104A3000F68B46FC0146F847EB048AC2EB2DFE4696
:104A4000FF807EFF047403E971FF8B46F633D2F7D3
:104A5000F78946FA8B46F833D2F7F78946FC50FFC0
:104A600076FA56E874FC83C406B0095F5EC9C3C811
:104A700002000056578B7E048B7606804D1904FF8A
:104A800076088D46FF5057E86C0D83C40688048075
:104A90003C057405B000E9C2008A46FFB40025F069
:104AA000003DA000740B8A46FF88451BC60406EB38
:104AB000E3F646FF0F7405B80100EB0233C0250191
:104AC000008066FEFDD0E00846FE8075190CFF767A
:104AD000088D46FF5057E81D0D83C4068804803CAE
:104AE0000575B1806519F78A46FFB40025F0003DD1
:104AF000A000740B8A46FF88451BC60406EB95F69A
:104B000046FF0F7405B80100EB0233C02501008099
:104B100066FEFE0846FE8A46FE2501003D01007540
:104B2000388A46FED1E82501000BC0752C8B1E9CEF
:104B30008FF60702740C8B5E08C60708C647010093
:104B4000EB0A8B5E08C60703C64701118B5E08C6D9
:104B5000470200C60402E93BFFB0015F5EC9C3C85B
:104B600004000056578B7E048B45158B5513A36F9D
:104B70008F89166D8F8A4517A2718F8B450C8B55C7
:104B80000AA3748F8916728FA0718F50FF366F8FB2
:104B9000FF366D8F6A01FF361C00FF361A009A6CD3
```

```
:104BA000A200D083C40C8846FCB400C1E005C41E3A
:104BB0001A0003D8268A4704A2768F8A46FCB400DE
:104BC000C1E0058B1E1A0003D8268A4710A2778FF2
:104BD000A0718FB4008A56FCB600C1E2058B1E1A84
:104BE0000003DA268A570AB6002BC28A56FCB600A2
:104BF000C1E2058B1E1A0003DA8B0E6F8F8B166DC8
:104C00008F262B5706261B4F088A5EFCB700C1E390
:104C1000058B361A0003F350268B44045233D25BC3
:104C20009AB8004CF85A03D08956FEC646FD00E9F2
:104C300028028A46FDB4006BC0268A55108BD8889E
:104C400097C08F8A46FDB4006BC0268A55118BD859
:104C50008897C18F8A46FDB4006BC0268A55128B97
:104C6000D88897C28F8A46FDB4006BC0268A550E3D
:104C70008BD88897BE8F8A46FDB4006BC0268A55B4
:104C80000F8BD88897BF8F8A46FDB4006BC0268BE8
:104C9000D8C687A38F008A46FDB4006BC0268BD888
:104CA000C687B68F008A46FDB4006BC0268BD8C677
:104CB00087C38F008A46FDB4006BC0268BD8C68799
:104CC000BC8F008A46FDB4006BC0268BD8C687B85F
:104CD0008F008A46FDB4006BC0268BD8C687B78F7D
:104CE000008A46FDB4006BC0268BD8C687B98FEE0C
:104CF0008A46FDB4006BC0268A56FD8BD88897BDC6
:104D00008F8A46FCB400C1E005C41E1A0003D826F1
:104D10008A4704B6006BD2268BDA8887B38F8A461F
:104D2000FCB400C1E0058B1E1A0003D8268A471088
:104D30008A56FDB6006BD2268BDA8887B58F8A46F5
:104D4000FDB4006BC0268A56FC8BD88897B48F8A36
:104D500046FDB4006BC0268B166F8F8B1E6D8F8B3C
:104D6000F08994A78F899CA58F8A46FDB4006BC0FB
:104D7000268A16718F8BD88897A98F8A46FDB40032
:104D80006BC0268BD8C787AA8F00008A46FDB40067
:104D90006BC0268B56FE8BD88997AC8F8A46FCB4A5
:104DA00000D1E0C41E908F03D8268B078A56FDB62B
:104DB000006BD2268BDA8987AF8F8A46FCB400D18C
:104DC000E0C41E988F03D8268B078A56FDB6006B69
:104DD000D2268BDA8987B18F8A46FDB4006BC02654
:104DE000059E8F50E8DAFA59A0718FB4008A1676C2
:104DF0008FB6004A3BC275318A46FDB4006BC026AF
:104E00008BD8C687A28F008A46FDB4006BC0268B64
:104E1000166F8F8B1E6D8F83C30183D2008BF08939
:104E200094A08F899C9E8FEB2E8A46FDB4006BC0A8
:104E3000268B166F8F8B1E6D8F8BF08994A08F89B8
:104E40009C9E8F8A46FDB4006BC0268A16718FFE29
:104E5000C28BD88897A28FFE46FD807EFD03740327
:104E6000E9CFFD5F5EC9C3C804000056578B7604C6
:104E70008B7E08FAA0778FB400D1E0C41E908F0318
:104E8000D8268B07A3848F8B4411A3808F8B441368
:104E9000A3828F8B441CA3868F8A4417B400D1E071
:104EA000C41E948F03D8268B07C746FE0000894690
:104EB000FC8A4417B400C1E002C41E8C8F03D826BC
:104EC0008B4F02268B1F8B56FE8B46FC9AB8004CEC
```

```
:104ED000F88956FE8946FC6A0168A08652509A14E9
:104EE000004CF88956FE8946FCA3888FA0778FB4C2
:104EF00000D1E0C41E948F03D8268B07C746FE005E
:104F0000008946FCA0778FB400C1E002C41E8C8FDC
:104F100003D8268B4F02268B1F8B56FE8B46FC9A9E
:104F2000B8004CF88956FE8946FC6A0168A0865292
:104F3000509A14004CF88956FE8946FCA38A8FF6D5
:104F40000626F1407426C60641F173C60643F1A059
:104F5000F6441902740CC6063DF1AFC6063FF1B522
:104F6000EB0AC6063CF1AFC6063EF1B5F644190899
:104F70007405C60684F09F8A4419A27E8FC6067FF8
:104F80008F008B440EA37C8F8B440CA3788F8A44B4
:104F90000B50FF7409FF74079A41B100D083C40617
:104FA000A37A8F833E7A8F0075168B5E06A1828F5F
:104FB0008907833E7C8FFF751BA1848FEB19EB144F
:104FC0008B5E06A1808F8907833E7A8F017505A1CC
:104FD000828FEB03A1808F8905066A000726C7062A
:104FE00030004C5126C70632002BF226C706480077
:104FF000A35326C7064A002BF207FB5F5EC9C355C1
:105000008BEC568B7604FAE8BF11FB803E248704B4
:105010007532C706948FDEDEC706968F00E0C7069E
:10502000908F0ADFC706928F00E0C706988F36DFA1
:10503000C7069A8F00E0C7068C8F86DEC7068E8F64
:1050400000E0EB6A813E648600027532C706948FE9
:10505000EADFC706968F00E0C706908F2EE0C706EE
:10506000928F00E0C706988F72E0C7069A8F00E023
:10507000C7068C8F62DFC7068E8F00E0EB30C70655
:10508000948F46E1C706968F00E0C706908F8EE1A9
:10509000C706928F00E0C706988FD6E1C7069A8FA1
:1050A00000E0C7068C8FB6E0C7068E8F00E0FA06D8
:1050B0006A000726A13000A3688F26A13200A36AE8
:1050C0008F07FBA049F1A2598FA048F1A2588FA0E9
:1050D00041F1A2638FA043F1A2628FA03DF1A265CE
:1050E0008FA03FF1A2648FA03CF1A2678FA03EF198
:1050F000A2668F8BC6050E00A31090A1CA86A3607E
:105100008FA10A878B160887A35C8F89165A8FA1F7
:10511000278 7A3528FA118878B161687A3568F89CE
:1051200016548FA01A87B400A35E8FF6441801743A
:10513000B8B1E1090C60700C64701008BC60518D2
:1051400000A39C8FC6066C8F005E5DC35053515206
:10515000061E565755BD00118EDD8BEC83EC02F612
:10516000622F0087503E9AC01F6067DF00175032F
:10517000E9EC00C6067DF001FF0E788FA1788F3D27
:1051800001007518F6067E8F02742DA079F0B40028
:10519000A9400075F6800E11F101EB1C833E788F5B
:1051A000007D15A07F8FB400A90200750BE81910CF
:1051B0006A0068CC00E9D501FF067C8FF6067F8F78
:1051C00004755FFF0E7A8FA17A8F0BC07554F606B7
:1051D0007E8F01741B802624F1EFA0868FA248F1F8
:1051E000A0878FA249F1800E24F110800E7F8F01DD
:1051F000833E7C8FFF7516FF36848FFF36828FE8E3
```

```
:1052Q000430D83C404A1848FA3808FEB0EFF3680EF
:105210008FFF36828FE82D0D83C404800E7F8F04AC
:10522000EB3D833E7A8F017506FF36828FEB04FFDC
:1052300036808FFF36808FE80B0D83C404F6067F1F
:105240008F01741B802624F1EFA08A8FA248F1A061
:105250008B8FA249F1800E24F11080267F8FFEF6FD
:10526000067DF0047503EB7A90F6067E8F0C74636E
:10527000F6067E8F047406C646FE10EB04C646FE94
:1052800000C646FF00682701E8EFF6598A46FE840B
:105290000638F07403FE46FF6A2DE8DDF6598A46AB
:1052A000FE840638F07403FE46FF6A2DE8CBF659FB
:1052B0008A46FE840638F07403FE46FF8A46FFB431
:1052C00000D1F88846FFE8000F8A46FF5068A0002A
:1052D000E9BA00C6067DF004802677F0FD800E7FD7
:1052E0008F02F6067DF082740BE8DD0E6A0068FD21
:1052F00000E99900F6067DF008741AF6067AF04087
:10530000740BE8C40E6A0068FE00E98000C6067DE2
:10531000F008EB7F90F60623F11C7431F60623F1BA
:1053200010740FF60627F1807403E980FEC6062389
:10533000F110F60623F108740AE88D0E6A0068BBC6
:1053400000EB4AE8830E6A00689900EB40F60622FB
:10535000F040742BF60630F00C740AE86B0E6A000D
:1053600068FB00EB28F60630F0C0740AE85A0E6AB3
:10537000006888 00EB17E8500E6A006A77EB0EF6BB
:105380000623F001740DE8400E6A006A00E87B0B0A
:1053900083C404C70622FF0080C95F5E1F075A59F5
:1053A0005B58CF50535152061E565755BD00118EB3
:1053B000DDFF0E788F833E788F007518F6067E8F9E
:1053C000017511E8030E6A0068DD00E83D0B83C437
:1053D00004E99300833E788F017518F6067E8F02EC
:1053E000742CA079F0B400A9400075F6800E11F17C
:1053F00001EB1B833E788F007D14A07F8FB400A942
:1054000000200750AE8C20D6A0068CC00EBBDF70621
:105410005EFF00107405BE5AFFEB03BE5CFFF6068C
:105420007F8F047539FF0E7A8FA17A8F0BC07407B6
:105430003D01007424EB27FF067C8FA17C8F3DFF8C
:10544000FF750AA1848F8904A3808FEB05A1808F4B
:1054500089048 00E7F8F04EB0EA1828FEB03A18065
:105460008F8904FF067C8FC70622FF00805D5F5E88
:105470001F075A595B58CFC8320000565 78B760425
:105480008B7E06C746F6F6428D46F8508D46CE50C6
:105490006A169A006B00E083C4063D0B00753A80E3
:1054A0007EF80075346A00E8BB0B598A46FD880512
:1054B0008A46FE8845018A46FF8845028D46CE50C1
:1054C0006A429A006B00E083C404832628FFDF80D1
:1054D0002639F0FFB002E932026A00E8870B5989E9
:1054E00046EE837EEE01741D8D46CE506A429A00D0
:1054F0006B00E083C404578A46EE509A640306EFBB
:1055000083C404EBCFFF361090E856F159A16D8F9C
:105510000B066F8F740B8A440B508B44074850EB7B
:10552000046A006AFEE8E70183C4048D46EB508DEF
```

```
:1055300046F0506A009A889C00D083C4063D010062
:1055400074248A46F088058A46F18845018A46F225
:10555000845028D46CE506A429A006B00E083C4B3
:1055600004B004E9A501A16D8F0B066F8F75059A34
:10557000FF9300E0A0718F50FF366F8FFE366D8F65
:105580006A01FF361C00FF361A009A91AA00D083E8
:10559000C40C8D46EE509AEB9D00D059837EEE01EF
:1055A00075118A441F50E8BC0A598946EE837EEE85
:1055B0000174168D46CE506A429A006B00E083C497
:1055C00004832628FFDFE92DFF800E39F0006A00F2
:1055D0006A0BE8980983C4048BC6050700506A1655
:1055E000E88A0983C404C70656FF0040C70652FF75
:1055F000FFFFC70650FF0000C70656FF00C0C606E3
:105600007DF001B800008B4EF6F6067DF00190E1CA
:10561000F8870650FFE3358946F4C6067DF0019011
:105620008BC6050700506A21E8420983C404B40010
:105630008946EE837EEE037507F60679F02075E065
:10564000837EEE0374BD837EEE02741D8D46CE50C4
:105650006A429A006B00E083C404802639F0FF831D
:105660002628FFDFB003E9A200566A16E8FE088389
:10567000C4048B4EF6F6067DF00190E1F8A150FFD0
:10568000E3308946ECC6067DF00190566A21E8DCDD
:105690000883C404B4008946EE837EEE037507F6E2
:1056A0000679F02075E5837EEE0374C6837EEE02F4
:1056B000742F8D46CE506A429A006B00E083C4047A
:1056C000832628FFDF802639F0FF8A4405FEC08844
:1056D00044053C057407FE4404B00BEB2EB00AEB06
:1056E0002A8B5E0A8B46EC89078B5E088B46F48911
:1056F000078D46CE506A429A006B00E083C4048353
:105700002628FFDF802639F0FFB0095F5EC9C35548
:105710008BEC56C70627870100C706CA861800BE4D
:1057200008878A4606B40089048B46048944025ED1
:105730005DC3C8020000568B76048A4418FEC088F8
:1057400044183C08742EFF76068D46FF5056E8A597
:105750000083C4068AD080FA0575368A46FFB400F5
:105760000BC07508C6441B00B007EB258A46FF88AE
:10577000441BEB1B8A4424B4002503003D03007541
:105780000A804C2440C6441807EBBBC6441BFFB03C
:10579000065EC9C3C8020000568B76048A4425FE03
:1057A000C08844253C08742EFF76068D46FF50566F
:1057B000E8430083C4068AD080FA0575368A46FF1E
:1057C000B4000BC07508C6441B00B007EB258A4621
:1057D000FF88441BEB1B8A4424B4002503003D03CF
:1057E00000750A804C2440C6442507EBBBC6441B09
:1057F000FFB0065EC9C3C836000056578B7E048BC7
:1058000076088D46F8508D46CA506A169A006B008D
:10581000E083C4063D0B007403E98400832628FF5F
:10582000DFE871EEF6451901740CA0588FA248F11B
:10583000A0598FA249F1807EF80075286A00E824FB
:1058400008598A46FD88048A46FE8844018A46FF34
:10585000884402 8D46CA506A429A006B00E083C4B5
```

```
:1058600004E9CC028D46CA506A429A006B00E0837C
:10587000C4046A00E8EE07598846ED807EED0174A5
:105880001A8D46CA506A429A006B00E083C40456DF
:105890008A46ED509A640306EFEBC3B001E9920229
:1058A0006A00E8C007598846ED807EED0175D2FF99
:1058B000361090E8ACED59833E6F8F007C147F0763
:1058C000833E6D8F00760BA0718F50A16D8F485075
:1058D000EB046A006AFEE836FE83C4048D46E75096
:1058E0008D46EE506A009A889C00D083C4063D0124
:1058F0000074248A46EE88048A46EF8844018A466A
:10590000F08844028D46CA506A429A006B00E083D8
:10591000C404B004E91B02A16D8F0B066F8F7505DF
:105920009AFF9300E08A451F50E83907598846EDF1
:10593000807EED01752EA0718F50FF366F8FFF3680
:105940006D8F6A01FF361C00FF361A009A91AA007B
:10595000D083C40C8D46F6509AEB9D00D059837EBF
:10596000F60174168D46CA506A429A006B00E083B5
:10597000C404832628FFDFE915FF8D46E8508D46D5
:10598000EA5057E8E1F483C4066A006A0BE8DD05D3
:1059900083C4048BC7050700506A16E8CF0583C48B
:1059A000049A83BF00D0051400C1E8028946F4BA06
:1059B00012008B46F4F7EA8946F48B46F40504009E
:1059C000BB050033D2F7F38946F4832666FFDFC7B1
:1059D00046F200008BC7050700506A21E88E058358
:1059E000C4048846EDF70666FF2000740883266627
:1059F000FFDFFF46F2807EED0375088B46F23B46E3
:105A0000F475D1807EED0174088B46F23B46F47547
:105A100018832628FFDF8D46CA506A429A006B0021
:105A2000E083C404B003E90901FF76E8FF76EA5792
:105A3000E86B0683C4068D46CA506A429A006B0022
:105A4000E083C404C70636DA0C009A8C0300E08BAE
:105A5000F8832628FFDFE83CEC8B45043D0A007400
:105A6000493D0D007403E9BE00E85D07807D090033
:105A7000751A6A00E8EE05598A450E88048A450FB2
:105A80008844018A4510884402E99B00893E2EDA49
:105A9009A7E0700E06A00E8CB05598846ED807ED3
:105AA000ED017403E9E8FDE9F1FD832628FFBF80DD
:105AB0007D09FE7516893E2EDA9A7E0700E0C6043F
:105AC00004C6440144C6440295EB20807D09FD7460
:105AD00006807D09FC751C893E2EDA9A7E0700E05F
:105AE000C60404C6440141C64402006A00E87505C4
:105AF00059EB3D807D09A07507B0A00A450AEB036C
:105B00008A45098B5E068807893E2EDA9A7E070051
:105B1000E06A00E84F05598846ED807EED01740388
:105B2000E96CFDB005EB0B893E2EDA9A7E0700E0AA
:105B3000B0025F5EC9C3C8020000568B7604FF76D0
:105B4000068D46FF5056E8ADFC83C4068AD080FA25
:105B50000575148A46FF88441B807EFF007504B0DB
:105B600007EB06B006EB028AC25EC9C3C80200009A
:105B7000568B7604813E648600027504B105EB0203
:105B8000B10A8A4420B4008AD1B600F7EA8A5421C7
```

```
:105B9000B6003BC274358A4420B4008AD1B600F7FF
:105BA000EA8A5421B6003BC27E138A4421B4008A9B
:105BB000D1B60052995BF7FB884420EB0E8AC1B442
:105BC000008A5420B600F7EA884421807C200873BC
:105BD0003FFE44208A4420B4008AD1B600F7EA8808
:105BE0004421FF76068D46FF5056E809FC83C40623
:105BF0008AD080FA0575328A46FFB4000BC075085A
:105C0000C6441B00B007EB218A46FF88441BEB17F4
:105C10008A4424B4002503003D03007506804C240B
:105C200040EBBFC6441BFFB0065EC9C3C8020000FC
:105C3000568B76048A4423B4002507003D07007480
:105C4000368A4423FEC0884423FF76068D46FF50E3
:105C500056E8A2FB83C4068AD080FA0575328A46CC
:105C6000FFB4000BC07508C6441B00B007EB218AC7
:105C700046FF88441BEB178A4424B4002503003DEB
:105C800003007506804C2440EBBFC6441BFFB006E2
:105C90005EC9C3C802000056578B76048B7E068A05
:105CA0004424B4002503003D0300743B3D400075CF
:105CB00003E981008A442404FF884424578D46FE6A
:105CC0005056E831FB83C4068846FF807EFF05748A
:105CD000058A46FFEB658A46FEB4000BC0744C8A09
:105CE00046FE88441BEB52F6441903751C803E6C3B
:105CF0008F007515578D46FF5056E872ED83C40628
:105D00000AC074CDC6066C8F01804C2440578D4666
:105D1000FE5056E8E0FA83C4068846FF807EFF0501
:105D200075AF8A46FEB4000BC075B4C6441B00B004
:105D300007EB08EBAAC6441BFFB0065F5EC9C3C8E9
:105D4000020000568B76048B56068A4424B4002544
:105D50001800C1F8033D010074308A442404F88817
:105D60004424528D46FF5056E88BFA83C4068AD0ED
:105D700080FA0574048AC2EB478A46FFB4000BC060
:105D8000742E8A46FF88441BEB34F6441902752AA8
:105D9000804C1902528D46FF5056E859FA83C406CA
:105DA0008AD080FA0575CE8A46FFB4000BC075D242
:105DB000C6441B00B007EB08EBC8C6441BFFB00687
:105DC0005EC9C3C802000056578B76048B7E0680DE
:105DD0007C1E007537C6441E01C6442202578D46FC
:105DE000FF5056E810FA83C4068AD080FA0574057D
:105DF0008AC2E989008A46FFB4000BC07506C64412
:105E00001B00EB6E8A46FF88441BEB70F6441901B9
:105E100075668B1E10908A47028844228A440B5074
:105E2000FF7409FF74079A41B100D083C4063B4454
:105E30000C731C5756E867EB83C4048AD0B4003D4A
:105E40000900740B3D0B007433EBA5EB2FEBA18025
:105E50004C1901578D46FF5056E89AF983C4068ABB
:105E6000D080FA05758A8A46FF88441B807EFF0031
:105E7000750AB007EB08EB04C6441BFFB0065F5E73
:105E8000C9C3C8020000568B76048B56068A441B91
:105E9000B4008946FEB90600BBF35E2E8B073B4675
:105EA000FE740783C302E2F3EB2E2EFF670C5256FB
:105EB000E883FCEB385256E809FFEB315256E87E96
```

```
:105EC000FEEB2A5256E8CBFDEB235256E85DFDEB84
:105ED0001C5256E8BEF8EB158B1E9C8FF60701741A
:105EE000075256E84CF8EB055256E87FFC83C40491
:105EF0005EC9C388009900BB00CC00DD00EE00D174
:105F00005ECA5EC35EBC5EB55EAE5EC80200005691
:105F1000579A0D0700E08946FE8B5EFE8A4604888C
:105F200047098A460688470A5657558B76FEBB0AAC
:105F300000B803009AB90800E05D5F5E830E28FF99
:105F4000405F5EC9C3558BECC7065EFF00408326E9
:105F500030FFFD8B4604A35AFF8B4606A35CFFC7A8
:105F60000658FF0000C7065EFF03E05DC3C80600D9
:105F700000568B76068A4604B4003D0B00740D3D36
:105F80001600742D3D21007464E9D400FAC6062180
:105F9000F100C60620F100C6067EF000C6067DF0C0
:105FA000FF9AB00100D0C60610F104FBB001E9B1C0
:105FB00000FAC60610F1808A4404A217F18A04A2EE
:105FC00018F18A4401A219F1C60616F17FC606220D
:105FD000F1FE800E24F140800E11F110C60677F01C
:105FE00002C60670F014C60679F000EBBEF6062273
:105FF000F1047442C60610F140C60622F120A01436
:10600000F18846FEA015F18846FAA016F18846FBF5
:10601000F60622F12075E28B44028B143B46FC7C91
:10602000197F053B56FA7612C60679F01F566A1696
:10603000E83AFF83C404B003EB288A44043A46FEDE
:10604000750F8B44028B143B46FC75053B56FA7466
:1060500006E87501E955FFC60679F01FB002EB02AC
:10606000B0005EC9C3558BEC8A4604B4000BC07403
:106070000C3D0100740E3D02007410EB1D6A0068B7
:10608000006AEB0C6A0068016AEB056A0068026A44
:106090009A690206EF83C4048BD08BC25DC3558B13
:1060A000EC568B7604FAC60610F1008B1E9C8FF618
:1060B00007017407C60610F008EB05C60610F000CD
:1060C000FF7608FF7606E87CFE83C404832628FF5B
:1060D000FEC60621F11CC60620F180C60621F0018D
:1060E000C6067EF08FC60620E0C8C60677F002F618
:1060F0004419047407C60670F0FFEB05C60670F07D
:1061000014C60612F000800E24F140800E11F1102A
:106110008BC605200050E849E559833E788F01750C
:106120000CF6067E8F027405800E11F101833E7A13
:106130008F007531F6067E8F017416A0868FA248F7
:10614000F1A0878FA249F1800E7F8F01800E24F18C
:1061500010833E7C8F017506A1848FA3808F800EF3
:106160007F8F04EB18F6067E8F017411A0888FA232
:1061700048F1A0898FA249F1800E24F1108B440EC2
:10618000A37C8FA06E8FA216F1A06D8FA215F1A037
:10619000718FA214F1A0748FA259F0A0738FA2582E
:1061A000F0A0728FA257F0C6067DF0FFC60622F15E
:1061B000FFC60622F0FFC60679F00CC6061AF001EB
:1061C000C6061AF101FB5E5DC3C60621F100C606D4
:1061D00020F100C6067EF000C60620F000C6067953
:1061E000F01F9ADD1400E0C6067DF0FF9AB00100B2
```

```
:1061F000D0C60610F104C7065EFF0040C70656FF72
:1062000000040832630FFFC6A009ABB9800E059C327
:02000002184C98
:10000A00590E5133C9EB16590E51B90100EB0E596D
:10001A000E51B90200EB06590E51B9030055565755
:10002A008BEC8BF98B460A8B560C8B5E0E8B4E1023
:10003A000BC975080BD274690BDB7465F7C701002D
:10004A00751C0BD2790AF7DAF7D883DA0083CF0C5A
:10005A000BC9790AF7D9F7DB83D90083F7048BE94F
:10006A00B920005733FF33F6D1E0D1D2D1D6D1D758
:10007A003BFD720B77043BF372052BF31BFD40E249
:10008A00E75BF7C3020074068BC68BD7D1EBF7C3C5
:10009A0004007407F7DAF7D883DA005F5E5DCA08EE
:1000AA0000F7F3F7C7020074019233D2EBED5696CC
:1000BA009285C07402F7E3E30591F7E603C196F768
:1000CA00E303D65ECB5B0E5380F91073108BD8D343
:1000DA00E0D3E2F6D980C110D3EB0BD3CB80E91081
:1000EA009233C0D3E2CB5B0E5380F91073108BDAD4
:1000FA00D3E8D3FAF6D980C110D3E30BC3CB80E996
:06010A00109299D3F8CB1E
:020000021FFFDE
:0D000000FABAA0FFB83CC0EFEA000000E033
:040000031FFF0000DB
:00000001FF

CODE_LO.HEX
:020000020000FC
:10000000C80C00005657C746FCFFFFC706C68B004A
:1000100040C706C48B0000C706C28B0000C706C0DD
:100020008B0010C41EC08B26C6075026C64701266B
:1000300026C647028A26C647030726C64704242643
:10004000C647058026C647068A26C64707E026C655
:1005000047082626C647098A26C6470A0726C647EE
:100060000B2426C6470C8026C6470D3226C6470EEF
:10007000C426C6470F7426C64710F726C647115830
:1000800026C64712CB8A4606B4008BD883FB03767C
:1000900003E98B00D1E32EFFA77F02C746FA00C019
:1000A000C746F85555C746F600C0C746F4AA2AC742
:1000B00006CA8B00C0C706C88B0000BE0040BF0147
:1000C00000EB5CC746FA00C0C746F85555C746F670
:1000D00000C0C746F4AA2AC706CA8B00D0EB36C7B1
:1000E00046FA00E0C746F85555C746F600E0C74651
:1000F000F4AA2AC706CA8B00E0EB1AC746FA00E04A
:10010000C746F85555C746F600E0C746F4AA2AC7C1
:1001100006CA8B00F0C706C88B000033F633FF8099
:100120000E03F180897EFE8936BE8BEB2EC45EF80D
:1001300026C607AAC45EF426C60755C45EF826C6BE
:1001400078026C607AAC45EF426C60755900EE8A7
:100150003501FF46FE8106BE8B0040837EFE0472A1
:10016000CC8936BE8BC45EF826C607AAC45EF426C8
:10017000C60755C45EF826C607F0C41EC88B031E0A
```

```
:10018000BE8B26803FFF750CA1BE8BFF06BE8B3B4E
:1001900046FC72E6FF0EBE8BA1BE8BC41EC88B034D
:1001A000D826803FFF7403E80D01802603F17F8984
:1001B00036BE8BA1BE8B3B46FC7333C45EF826C6AD
:1001C00007AAC45EF426C60755C45EF826C607A073
:1001D000900EE8C500F706BE8BFF0F75058036034D
:1001E000F180FF06BE8BA1BE8B3B46FC72CDC45E88
:1001F000F826C607AAC45EF426C60755C45EF826CC
:10020000C607A0900EE89200800E03F1808936BEEA
:100210008BC45EF826C607AAC45EF426C60755C47A
:100220005EF826C607F0C41EC88B031EBE8B268A46
:1002300007C41EC48B031EBE8B263A07750CA1BED5
:100240008BFF06BE8B3B46FC72DCFF0EBE8BA1BE55
:100250008BC41EC88B03D8268A07C41EC48B031EFA
:10026000BE8B263A077403E84D00802603F17F8099
:100270007E0603720668FFFF6A00CB5F5EC9CB9BF8
:1002800000C300DF00FB006A00680010C41EC88BBA
:10029000031EBE8B26C60730CBCB6A00680010C495
:1002A0001EC48B031EBE8B268A07C41EC88B031E6A
:1002B000BE8B268807CBCB33DB800E03F18033D295
:1002C00033C0403D60EA72FA4283FA1472F233D2CC
:1002D000803603F18033C0403D60EA72FA4283FA0F
:0A02E0000772ED4383FB0372D0C3E5
:020000020400F8
:1000000057616974696E6720666F72205846207464
:100010006F20676F206C6F7700576169746965736
:1000200020666F7220584620746F20676F206869C1
:10003000676800626164206867820 6E756D62652E
:1000400072212100636865636B73756D206973208D
:1000500042414421004368656 36B6564004E6F74E0
:1000600020636865636B656400656F662072656315
:1000700020726563656976656400 50726F677261AE
:100080006D2073746172742E2E2E2E00446F776E65
:100090006C6F6164466C617368204545 0524F4DEA
:1000A000732E2E2E004453502064 6F776E6C6F6158
:1000B000643A004453502043 4D4D442053746174BE
:1000C00075733A2020253032782025303278206828
:1000D000004453502053746174 75733A20202530C6
:1000E000327820253032782025 3032782025303281
:1000F000782025303278202530 3278202530327 82B
:10010000202530327820253032 78202530327 82072
:1001100068003A3030303030303031464600000030
:10012000208C0F491002000B1F000020900D3D0C89
:1001300002008B1A000020840D991D02008B1A000A
:1001400000207C0D711402008B1A000020700D89B4
:10015000170 2008B1A000020680DA91B02008B1AE1
:10016000000 0205C0DA51902008B1A000020540D20
:1001700049 0A02008B1A0000204C0DD11D02008B91
:10018000 1A000020400DC51A02008B1A000020380A
:10019000 0DD51B02008B1A0000202C0DE51C02005F
:1001A0008B1A000020240DA51302008B1A000020DA
```

```
:1001B000180D810E02008B1A000020100D7D0D021B
:1001C000008B1A000020040DC11402008B1A0000DD
:1001D00020FC0CB51202008B1A020020540D4109BC
:1001E00002008B1A06331614040006361614040097
:1001F000063916140400640161404000640161 4AE
:100200000400064216140400064616140400064 8AC
:100210001614040006491614040006511614040 0AE
:100220000651161404000661161404000663161421
:100230000400066716140400066916140400067 0C
:100240001614040006451620040006331617040091
:100250000636161404000639161404000640161457
:100260000400064016140400064216140400064654
:100270001614040006481614040006491614040057
:100280000651161404000651161404000661 4D3
:100290000400066316140400066716140400669B9
:1002A0001614040006701614040006511614040 0F7
:1002B000066116140400066316140400066716147B
:1002C000040006691614040006701614040006 5192
:1002D0001614040006611614040006631614040 0C4
:1002E000066716140400066916140400067016 1436
:1002F000040006511614040006651608040006 33AF
:100300001617040006361614040006391614040 0E5
:100310000640161404000640161404000642161483
:100320000400064616140400064816140400064984
:100330001614040006511614040006511614040085
:100340000661161404000663161404000667 1614EA
:100350000400066916140400067016140400065101
:100360001614040006611614040006631614040033
:100370000667161404000669161404000670 1614A5
:100380000400065116140400066116140400066 3E6
:100390001614040006671614040006691614040 0F7
:1003A0000670161404000651161404000661161493
:1003B000040006691614040006701614040006 51A1
:1003C0001614040006651608040002002 0C405592E
:1003D0000F02001B0A020020C005390902001B0A97
:1003E000000020E005390F02001B0A020020B805BA
:1003F000310702001B0A020020B405390802001B65
:100400000A000020D805791D02001B0A000020D830
:10041000053D0E02001B0A000020D405851E0200C7
:100420001B0A000020D405410E02001B0A00002018
:10043000D00571180 2001B0A000020D005611402CB
:10044000001B0A000020CC05811A02001B0A0000D4
:1004500020C8059D1F02001B0A000020C8058D1B37
:1004600002001B0A020020880555090 2001B0A022F
:1004700000208405790D02001B0A020020800585FA
:100480000E02001B0A0200207C05910F02001B0ACD
:1004900002002078057 90C02001B0A020020740576
:1004A0004D0702001B0A020020700575 0B02001B9D
:1004B0000A0200206C05810C02001B0A000020B417
:1004C000057512020 01B0A0200206405A50F020038
:1004D0001B0A020020600589 0C02001B0A02002092
```

```
:1004E0005C05A10E02001B0A020020580559070 2F4
:1004F000001B0A000020AB05811202001B0A02004B
:10050000205005890B02001B0A0200204C057509CA
:1005100002001B0A020020C4053D0A02001B0A0259
:10052000020C00539090 2001B0A020020BC053565
:10053000802001B0A020020B8053D0902001B0A40
:1005400002002 0B405450A02001B0A020020B00583
:10055000610E02001B0A000020D80555140 2001B82
:100560000A000020D805711A02001B0A000020D4DE
:10057000055112020 01B0A020020A005650D0200B1
:100580001B0A020020A00585110 2001B0A020020A0
:100590009C05811002001B0A020020980565 0C02D0
:1005A000001B0A000020CC058D1C02001B0A000065
:1005B00020C805811902001B0A0200208C05850F46
:1005C00002001B0A02002088054D0802001B0A02D7
:1005D00000208405710C02001B0A020020800585A2
:1005E0000E02001B0A0200207C056D0B02001B0A94
:1005F00002002078055D0902001B0A020020780530
:100600008D0E02001B0A02002074057D0C02001BE7
:100610000A020020700559080 2001B0A000020B4DD
:10062000056D1102001B0A000020B00569100200D0
:100630001B0A0200206405A50F02001B0A0200200D
:1006400060058 90C02001B0A0200205C05810B0278
:10065000001B0A000020AB05490A02001B0A00002B
:1006600020AB05650E02001B0A000020A405590CF2
:100670002001B0A0200204C05950C02001B0A0018
:10068000020A005550B02001B0A7E006F000071C0
:1006900000007300007500007600007800079000B
:1006A000007A00007B00007D00007F0000810000D8
:1006B00083000850000860000880006F00007144
:1006C0000000730000750000760000780000790 0DB
:1006D000007A00007B00007D00007F0000810000A8
:1006E00083000850000860000880059021B390243
:1006F0001B29021B31021B39021B69021B3D021B15
:1007000059021B41021B71021B61021B6D021B413E
:10071000021B69021B55021B79021B59021B39027D
:100720001B29021B31021B39021B69021B3D021BE4
:1007300059021B41021B71021B61021B6D021B410E
:10074000021B69021B55021B79021B3D021B390269
:100750001B35021B3D021B45021B61021B55021B80
:1007600035021B51021B65021B85021B81021B65A2
:10077000021B79021BA5021B85021B3D021B3902CD
:100780001B35021B3D021B45021B61021B55021B50
:1007900035021B51021B65021B85021B81021B6572
:1007A000021B79021BA5021B85021B0000000079B9
:1007B00080170F79800889798008 8A7980088B7979
:1007C00080089C79800A5D79800A5E79800A5F7969
:1007D000800A6079800A610000000000000000000CB
:1007E000000000000000000000000000000000000009
:1007F00000000079800ACE79800ACF000000000056
:10080000000000000000000000000000000000BE2A
```

```
:1008100042BC00AE070810AE2A0000AE284000AE71
:1008200029FF19AE25018FAE260020AE04010CAEC3
:1008300005FFFFBE59BC009060906190649065908 8
:1008400066AE620020BC06AE00FFFFBE59BC099038
:100850000E900F906BAE18E000AE19FC93AE1A1C10
:1008600093AE1BD26FAE1CEE98AE0900C8AE24202A
:1008700000AE25036DAE26E36DAE27D26FAE28EE37
:1008800098AE0A0016AE302000AE3100CBAE32E09A
:10089000CBAE332E75AE34EDA1AE0B0003AE0C0023
:1008A00007AE368000AE010000AE030000AE1D00B2
:1008B00000AE000FFFAE290000AE0216FFBE40EFF3
:1008C00000BE3ABE3A0864BFC002008864BC096931
:1008D0000EBC003069906A20699069BE3A690FB811
:1008E00001900F798008A5BE47B9008853BC091054
:1008F0000EB801900EE38808974F0EE10008AE088D
:1009000064BFC00038885679800 8B48B00885608C8
:1009100064BFC000D88B00885788648B0088560855
:1009200053BE026C36BFB0FFC0901130079012BFAB
:1009300001BE597317541C7216541BBE049837BE5F
:10094000597314541A721354197212476BE2000946
:1009500019541 8BE0498387338BF0054091037BEB4
:10096000046C36885E6C369016BFEEE30408E5BE74
:1009700001E30408EC79800919BF807FFF90166CB1
:1009800036885E79800919BF80800090166C3688A1
:100990005E798009191012BE0088563000E3040900
:1009A00003691D8857E30808FF79800926BA01907A
:1009B0001D798009268857691DBA04E38C090E69E0
:1009C0001DB801901DBA04E3440926696BBFC00439
:1009D00000906B0865BFC000018851886579800967
:1009E00026B9038853476BE10008F3BB058B0088E9
:1009F00056BB018B0088578B008B0088560853BE6E
:100A0000026C36901E3006901F0865BFC000048837
:100A1000658851BF01BE597323542872225427BEE2
:100A2000049837BE5973215426722054257 21F48EA
:100A30006BE20009915424BE0498387338BF005407
:100A40000A1037BE04200190226C3688586C36BFDD
:100A5000EEE3040958BE01E304095F79800991BF00
:100A6000807FFF90226C36885879800991BF808002
:100A70000090226C3688587980099110 1FBE00883A
:100A8000563002E304097669298857E30809727928
:100A90008009A4BA019029798009A488576929BAE4
:100AA00004E38C09816929B8019029BA04E3440957
:100AB000A4696BBFC01000906B0865BFC0000188BF
:100AC000518865798009A4BF800001385379800925
:100AD000994F0EE100098CBF8000028853BB018B47
:100AE00000486BE1000966BB018B008856BB018B97
:100AF0000088578B008B00885608534F0EE1000A80
:100B0000296C36902A102A3008902BBFEEE3040996
:100B1000B7BE01E30409BB102B798009BDBF807FFC
:100B2000FF798009BDBF808000902B4A6BE10009EE
:100B3000F4BF01BE59732F5434722E5433BE04983F
```

```
:100B400037BE59732D5432722C5431722B496BE2DB
:100B5000000A525430BE0498387338BF00540B104A
:100B600037BE04922EBFECE30409E6BE01E304099C
:100B7000ED102E6C36885979800A52BF807FFF9025
:100B80002E6C36885979800A52BF808000902E6C76
:100B900036885979800A52BE02902BBF01BE597324
:100BA000235434722254 33BE049837BE59732D54E3
:100BB00032722C5431722B5430BE0498387338BFC3
:100BC00000540C1037BE04BE09BE0920016C3688E3
:100BD000586C369022BFEEE3040A1BBE01E3040A00
:100BE0002279800A52BF807FFF90226C3688587924
:100BF000800A52BF80800090226C36885879800A23
:100C0000529010 0822BFB00100E3880A330864BF85
:100C1000B0FF7F8864BF80000488536910BFE5BFC0
:100C2000B003FF9010BB038B008856BB018B00887C
:100C3000578B008B0088560853BFE5BEB003FF9069
:100C40000D0822BFB00100E3880A520864BFB0FF5C
:100C50007F88640865BFB00008E3880A5C0865BF48
:100C6000B0FFFB88518865BE3ABE3ABE3ABE3ABE76
:100C70003AE0000A65BE4DBE3ABC004732E1000AC8
:100C8000924E64E1000AC34D64E1000A838B8C0438
:100C90006710A084674564E2000A7BBF0C00645CB7
:100CA0008004001068850BF0C00645C800004BEA3
:100CB0004C8B89BE3A8B8C046718804564E2000A2D
:100CC0008A18689850BF0C00645C800004BE4C8B8E
:100CD00089BE3A4E64E2000AA64D64E1000AB18B77
:100CE0008C04670850BFB000FF6D809080BF0C007F
:100CF000645C800004BE4C8B89BE3A0864BFC000AF
:100D00000688648B8CBF0C04F08B9C846779800A06
:100D1000B38B8C04671067BFA004F9E38C0AB98B0E
:100D2000AC846718509080BF0C00645C800004BEE7
:100D30004C8B89BE3A0864BFC00001BFB0FFFD887C
:100D4000640804BFB0FEFF8804BE3ABE3ABE3A8AC9
:100D5000A080A08180B01400EAB901B2108BE090AD
:100D6000A0B90290A0B90190807C151080780B90FA
:100D7000807C0C1080BA01E3080AF4B9017807906E
:100D800080BE41BC001065BFB0FFEF9065BC009015
:100D900051BE4079800B007807AE80FFFFBE41BC9A
:100DA000001065BFC000109065BC009051BE40733C
:100DB00090BE80C9798C80BC061000BFA0FFFFE305
:100DC000880CC3BE4778061080E3CC0CC3BC091066
:100DD0006BBFB001008B8990801080E3880CC3103A
:100DE0006BBFB0FFFE906B8B8A1080BA05E38C0B53
:100DF0003DB9007C0490801080784308 0E38C0C36
:100E0000AC7C0C108990A07A800CDF8B9AB2048B9A
:100E1000E01080B8019080BE4710807804308 07C5C
:100E20000CE3440B2A79800CAC1080BA0AE3CC0B9B
:100E30004E7C057380BE803DF77C028C8078027307
:100E400080C09578088C8079800B597C057380BEB2
:100E500080266B7C028C8078027380C06378088C5B
:100E600080108990A0BF803DF77A801736BE008B36
```

```
:100E70008A78029080B9007C079080106BBFB0FF29
:100E80007F906BB900BC099022BC00AE5880007CFA
:100E9000051089BF908000BC00905CB90590A07AD5
:100EA00080168F8B90BE41BC001066BFC00024909E
:100EB00066BFB0FFE790668B8AB2108BE013806D3F
:100EC000669066BC009052BFB0FFDBBC009066BC71
:100ED000009052BE40B9008B909080BE477C0710B6
:100EE00080BA01E3CC0CA27C04B900908078059014
:100EF000807C051080BFA01770E38C0BCF780510A5
:100F000080780830 80E38C0BCF7C0D1080B8019086
:100F100080BC001054BFB000FF780A9088BC00105D
:100F200055BFB000FF9080188A208090A030807C50
:100F300006908 07C051080BFA01770E38C0BCF78E3
:100F4000051080780830807C0DE3440BAEB20E8B28
:100F5000E010A09090BE461E89998A7C11108930BD
:100F60008A780B9080BC00105EBFB000FF7C0390BD
:100F700088BC00105FBFB000FF9080188A2080906E
:100F800080BE477803 1080BFA02440E3CC0BF6BCA2
:100F900008107F8B90908079800C231080BFA00474
:100FA00080E3CC0C0A1098BFA00480908019899926
:100FB000801088BF9004009080058D108A90807901
:100FC000800C231080BA80E3CC0C1C1098BA80905F
:100FD000801C8999801088BF9003809080048C10B9
:100FE0008A908079800C231098BF90030090800332
:100FF0008B108A9080780B10A090807C0C1080BAA7
:101000007DE38C0C3D78091080BA01E3080C3D7C2F
:101010000B1080BFA007D0E3CC0C3DB900780B903B
:10102000A0B90190A0B9009080B2128BE010A0305E
:1010300080E3880C50BE41BC001066BFB0FFE79053
:10104000667C0313806D669066BC009052BE40B211
:10105000058BE0108990A0BF807EF47A801736BEA1
:101060001E8B8A780E1089B8029080BE1F738890FC
:10107000806B8A7C0D90A0BE02208078059080BE97
:101080004710A0BE003080E38C0C748B907390549A
:10109000908C8079800C888B901080E3CC0C807CC5
:1010A000097380BE803DF778078C8079800C887C3E
:1010B000097380BE803DF7BE03BE027807908010A2
:1010C00080BF908000BC00905C7C061080BFA017A1
:1010D00070E3440C9BB90078049080BC09106BBF8E
:1010E000C00001906BB2088BE01080BA017C04E371
:1010F000040B9DB2028BE0108990AA7C06108990A7
:10110000A07A800D457C02BE41BC001065BFC000C6
:10111000029065BC009051BFB0FFFDBC009065BC63
:10112000009051BE408B89B93290A07A80168F8B87
:1011300090 79800CC8BC09106BBFC00001906BBED9
:1011400047BC09106BBFB000018B8990801080E311
:10115000880CDBBE41BC001066BFC000019066BCBD
:10116000009052BE407C1500907680EF008AA080EF
:10117000A08180B00400EAB900BC029044BC029097
:1011800045BF0AFFFD8BE01080BA01E3080CF77839
:1011900004AEA0266BAE80C97979800CFC7804AED1
```

```
:1011A000A0D995AE803687BC09106BBFB0FF7F9089
:1011B0006B8B901080BF908000BC00905CB900BC2D
:1011C000099022BC00AE58800078029080BE471083
:1011D00080BA06E38C0D378B89B90190A07A80160E
:1011E0008F8B90BE47BC021044BC09301EE38C0DAF
:1011F00024101EBC029044BC021045BC09301EE302
:10120000CC0D2D101EBC0290458B8AB2038BE010D2
:1012100080B80190801089BA06E3440D158B8A8B43
:1012200090108990AA7C05108990A07A800D457C49
:10123000027C0500907680EF008AA080A08180B0BB
:1012400004O0EAB900B2018BE090807C041080BAFF
:1012500001E3080D92BE4778041080BFA01770B557
:1012600001E3440D5CB500BC09101EBC093006B496
:1012700001E3440D64B4008B88848010808580 6E07
:10128000809080 1080E3880DCF8B8A1080B8019009
:1012900080BC021045BC09301EE3CC0D7A101EBC88
:1012A0000290451080BFA01770B301E3440D81B3D5
:1012B00000BC09101EBC093006B501E3440D89B518
:1012C000008B888580108083806E8AE3080D6E799C
:1012D000800DCFBE4778041080BFA01770B401E323
:1012E000440D9BB400BC09101EBC093006B301E3D9
:1012F000040DA3B3008B888380108084806E80905F
:10130000801080E3880DCF8B8A1080B8019080BC5C
:10131000021044BC09301EE38C0DB9101EBC0290B3
:10132000441080BFA01770B501E3440DC0B500BCE8
:1013300009101EBC093006B401E3040DC8B4008BCB
:10134000888480108085806E8AE3080DAD8B8A7C4E
:10135000051080BF908000BC00905CB900780690BA
:10136000801080BA03E38C0E008B89B90190A07ABB
:1013700080168F8B90BE47BC021044BC09301EE320
:101380008C0DED101EBC029044BC021045BC09300F
:101390001EE3CC0DF6101EBC0290458B8AB2028B68
:1013A000E01080B80190801089BA03E3440DDEBCE0
:1013B0000910028B8A8BA09090AE027FFFBC0910AF
:1013C0006BBFC00080906BB900908010 80BA03E3BF
:1013D0008C0E358B89B90190A07A80168F8B90BEC8
:1013E00047BC021044BC09301EE38C0E22101EBC08
:1013F000029044BC021045BC09301EE3CC0E2B10F9
:101400001EBC0290458B8AB2028BE01080B801901E
:10141000801089BA03E3440E13BC00AE5C8000B9AF
:10142000008B8A8B9090A090801080BA18E38C0E6D
:101430006F8B89B90190A07A80168F8B9ABE47BCBA
:10144000009101FBE00B2038BE0738890806B809000
:10145000801080E3880E5F8B8A7C021080B8019038
:10146000801080BA0AE38C0E6F79800E678B8A7CBD
:10147000021080E3CC0E671080BA0190808BA01020
:10148000080B80190801089BA18E3440E428B8AB26A
:10149000038BE01089BC0990027C0500907680EFF8
:1014A000008AA080A08180B00200E0BC00AE5C8019
:1014B00000BE41BC001065BFC000209065BC00901C
:1014C00051BE40B9008B8AB2018BE09080BE4710BC
```

```
:1014D00080BA32E38C0EB18B89BF8098C9BC009072
:1014E00059B9FA90A07A80168F8B90BC00AE5980C3
:1014F00000BF8002EE90A07A80168F8B9AB2018B8B
:10150000E01080B8019080BE471089BA32E3440EE3
:1015100095BC00AE5998C98B89BF80138890A07A7A
:10152000080168F8B907C0300907680EF008AA080DD
:10153000A08180B00600EAB900B2018BE09080BEC5
:10154000471080BA03E38C0ED9058D8BE0B9007883
:10155000002908A1080B80190801080BA03E3440E94
:10156000CDBC091007780490B9007C04908010ED
:1015700080BA03E38C0F007380C28F78041089BF98
:10158000A0028FBE04BC0990077A800FD2BE1E8BCA
:101590008AB2018BE0048C8BE0BE1F7802908A1027
:1015A00080B8019080BE471080BA03E3440EE48BFC
:1015B000A0108078023080E3CC0F5579800F201086
:1015C00080B80190807804108OBFA0028F9080BF07
:1015D000A0028FBC0990077C0210A090807C0210B2
:1015E000A090897A800FD28B8AB2028BE09080BE65
:1015F00047B2028BE0108078023080B301E3040F21
:101600002AB3007C031080BA14B501E3440F31B54E
:10161000008B888580108083806E8AE3080F0879AC
:10162000800F6B8B8A1080B80190807804108OBF87
:10163000900028F9080BF90028FBC0990077C0210AF
:1016400090908078021090908 97A800FD2BE1EBE52
:101650001F8B8AB2048BE09080BE4710807C0230E2
:1016600080B401E3040F5DB4008B901080BA14B312
:1016700001E3440F64B3008B888380108084806E04
:101680008AE3080F3B78041089BC0990077C0700A7
:1016900090768OEF008AA080A08180B00400EAB933
:1016A00000B2038BE0909090909080BE471080BA7B
:1016B00008E38C0FA18B89B93290A07A80168F8BAA
:1016C00090B90190A07A800CDF8B9ABE47BC021BB8
:1016D00044B2028BE02F8099A0BC021B452F809959
:1016E000807C021080B80190801089BA08E3440F12
:1016F00084B9008B8A90801080BA08E38C0FC68B67
:1017000089B93290A07A80168F8B90B90090A07A18
:10171000800CDF8B9ABE47BC021B44B2028BE02FC9
:101720008099A0BC021B452F8099807C021080B854
:1017300001908O1089BA08E3440FA98B8A8BA0100E
:10174000A0208890801E89BC0999067C05009076AF
:1017500080EF008AA080A08180B00300EAB900B2C7
:10176000028BE09080BE41BC001064BFB0FDFF90D2
:1017700064BE4079800FE9B90190A07A80168F8B02
:1017800090BE47BC001064BFB002008B89908010EF
:1017900080E3080FFE8B8AB2018BE01080B80190C5
:1017A00089BA01BFA009C4E3440FE4B9008B8AB22F
:1017B000018BE090801080BA08E38C10248B89B9EB
:1017C0003290A07A80168F8B90B90190A07A800C0D
:1017D000DF8B98BE47BC021044BC02304590801A93
:1017E0008AB2028BE02F8099901080B8019080100F
:1017F00089BA08E3441008B9008B8A90801080BA37
```

```
:1018000008E38C10488B89B93290A07A80168F8BB0
:1018100090B90090A07A800CDF8B98BE47BC021074
:1018200044BC02304590801A8AB2028BE02F809926
:10183000901080B80190801089BA08E344102C8B76
:101840008A8BA010808B897C0400907680EF008AC0
:10185000A080A08180B00200EAB900B2018BE090C4
:1018600080BE471080BA32E38C106C1088BF9004A1
:10187000B99080058DB900908A1080B801908010D1
:1018800080BA32E344105E8B897A800830BE47BC50
:10189000001064BFB00001908010800E388107A7A55
:1018A0008010F3BE47BC001064BFB00200908010EF
:1018B00080E38810DABC001060E388109BBC001045
:1018C0006ABC003060E3CC109BBE41BC001065BF19
:1018D000C000019065BC009051BC09106BBFC000F6
:1018E00010906BBE40BC001061E38810B3BC0010C8
:1018F0006ABC003061E38C10B3BE41BC001065BF10
:10190000C000019065BC009051BC09106BBFC000C5
:1019100010906BBE40BC09106BBFB000809080106F
:1019200080E38810D3BDFF107FBFB00040E30810F4
:10193000D3BC09106BBFB00004E30810CEB900900F
:10194000A07A800CDF8B90798010D3B90190A07AB7
:10195000800CDF8B90BE41BC001064BFB0FDFF90D7
:1019600064BE40BE47BC001065BFB0000890801048
:1019700080BA08E308106FBC001064BFB00080900C
:10198000801080E388106FB90090A07A8016A68B33
:10199000907980106F8AA080A08180B00300E0BCA5
:1019A00009106BBFC08000906BBFB0BFFF906BBFD2
:1019B000B0DFFF906B7A801663BAFFE30811BCBEFC
:1019C00047BC091770BFBF00FF8B8AB2018BE0993B
:1019D000807980118188897A8011D7798011BE8BB3
:1019E000897A8011E0798011BE8B897A80122479FE
:1019F0008011BE8B897A8012AC798011BE8B897A76
:101A00008013B9798011BE8B897A8014097980118D
:101A1000BE8B897A801425798011BE8B897A8014D7
:101A20003C798011BE8B897A80144A798011BE8BF3
:101A300089B90190A0A8A004F17A800AD07C02792B
:101A40008011BE8B89B90090A0A8A004F17A800A09
:101A5000D07C02798011BE8B897A801458798011EC
:101A6000BE8B897A8014D8798011BE8B897A8014D4
:101A7000FE798011BE8B897A80150D798011BE8B1D
:101A8000897A801520798011BE8B897A8015B87982
:101A90008011BE8B897A8015D5798011BE8B897AA9
:101AA000801604798011BE8B897A80162F79801177
:101AB000BE1080E3881113BA01E3881118BA01E35C
:101AC00088111DBA01E3881122BA01E3881127BAEF
:101AD00001E388112CBA01E3881131BA01E38811BE
:101AE00036BA01E388113BBA02E3881140BA01E338
:101AF00088114ABA01E3881154BA01E3881159BA2E
:101B000001E388115EBA01E3881163BA02E3881128
:101B100068BA6FE388116DBA01E3881172BA01E304
:101B20008811777980117C7A801649BE41BC0010FB
```

```
:101B300064BFB0FFFE9064BF8004EBBC009067BC44
:101B4000001064BFC000049064BE400804BFC00120
:101B5000008804BE697C0400907680EF008AA08033
:101B6000A08180B00100E07C0200907680EF008AC6
:101B7000A080A08180B00100E0BC006967BE46BFC4
:101B8000A004F0BA02E38811F17A80162F7980124E
:101B9000207A8012247A8014257A800E797A801235
:101BA000AC7A801409BC09106BBFB0FFDF906BBC2E
:101BB00000AE5C4209B9FA90A07A80168F8B90B97A
:101BC0000090A0BF800BB890A07A800AD07C02B9A8
:101BD0006490A07A80168F8B90B90090A0B9C890BD
:101BE000A07A800AD07C027A800EBF7A800F737C44
:101BF0000200907680EF008AA080A08180B0020071
:101C0000E0BC006967BE46BFA004F0BA02E38812D8
:101C1000357A80162F798012A7BC09106BBFB0E00F
:101C20000F906BBC091071BC02903FBC091072BCD4
:101C3000029040B900BC029041BC00905BBC02AE77
:101C40004240001142BC00905ABE41BC001065BF2A
:101C5000B000039065BC009051BE40B96490A07A7A
:101C600080168F8B90BC09100DBC099004BC091024
:101C700010BC099005BC09101EBC099006BC0910D7
:101C800011BC099007BC09102ABC099008BC0910B6
:101C90006BBFB0FDFF906BBFC00008906BBE41BC36
:101CA000001065BFC000089065BC009051BE40B9EF
:101CB000008B8AB2018BE09080BE471080BFA007E6
:101CC000D0E38C12A78B89BC001064BFB000809059
:101CD000801080E388129EB90190A07A8016A68BAE
:101CE0009AB2018BE01080B8019080BE478B8AB217
:101CF000018BE01089BFA007D0E344128C8B897C54
:101D00000300907680EF008AA080A08180B004005C
:101D1000EABC09106BBFB0FEFF906BBC091005B2A6
:101D2000018BE09080B900BC099016BC00AE5E80CB
:101D300000BC09AE157D001015BF908000BC00905E
:101D40005DBE41BC001065BFC000809065BC0090C6
:101D500051BE408B89B99690A07A80168F8B90BE29
:101D600047BC091015BFA08300E3CC12FFB919903E
:101D7000A07A80168F8B9ABE47BC091010B2018BD7
:101D8000E03080E3CC12EE10109080BC091015BF3B
:101D9000908000BC00905DBC091015BFA0010090B0
:101DA000151015BFA083008B89E30412DF8B8AB264
:101DB000018BE01088BC09300590801E8A2F0599A0
:101DC000807980134EB900B2028BE090801080BA07
:101DD00020E38C13438B89B90190A07A80168F8BF6
:101DE00090BE47BC091011BC093007B501E30413CC
:101DF00022B500BC0910108B8AB2018BE03080B490
:101E000001E304132CB4008B888480108085806EDD
:101E1000809080108E388133ABC09106BBFC0012A
:101E200000906B8B8A8BA01080B80190801089BACB
:101E300020E3441314BC091015BF908000BC00902F
:101E40005DBC091015BF9001009015BC09106BBF57
:101E5000B001008B8990801080BFA00100B301E326
```

```
:101E600008135BB300BC091015BFA07D00B501E3EA
:101E7000441363B5008B88858010808380 6E8AE36D
:101E800008130BBC09106BBFB001008B8990801048
:101E900080BFA00100E30813B4B9008B8AB2038BA2
:101EA000E090801080BFA001F4E38C13B48B89BC58
:101EB000001064BFB0008090801080E38813ACB93C
:101EC0000190A07A8016A68B90BE47BC021042BF3C
:101ED000A04000E38C139E1042B88090428B889003
:101EE000801180BC00905A798013A61042BA80906D
:101EF000428B8890801180BC00905A8B8AB2038BF1
:101F0000E01080B80190808B8AB2038BE01089BF0B
:101F1000A001F4E34413808B897C0500907680EF68
:101F2000008AA080A08180B00200EAB900B2018BD3
:101F3000E09080BC00AE5C8000798013E9B901902C
:101F4000A07A80168F8B9AB2018BE01080B8019036
:101F500080BE47BC09101EBC093006BE00BFA010E1
:101F600000E38C13E9BC09106BBFC00080906BBE0E
:101F700041BC001065BFC000409065BC009051BEE0
:101F800040BE47BC09106BBFB000808B89908010A9
:101F900080BA80B501E30813F6B5008B8A1080BFC4
:101FA000A007D0B401E34413FEB4008B88848010F2
:101FB0008085806E89E30813C77C0300907680EFEC
:101FC000008AA080A08180B00100E0B93290A07AA0
:101FD00080168F8B90BE41BC001065BFC000209062
:101FE00065BC009051BE40BC09106BBFC000409062
:101FF0006B7C0200907680EF008AA080A08180B088
:102000000100E0BE41BC001065BFC000409065BC4F
:10201000009051BE40BC09106BBFC00020906B7C8B
:1020200002 00907680EF008AA080A08180B001003D
:10203000E0BC09106BBFC00004906B7C020090767E
:1020400080EF008AA080A08180B00100E0BC091070
:102050006BBFB0FFFB906B7C0200907680EF008A34
:10206000A080A08180B00100E0BE47BE41BC091045
:1020700071BFB001009080 1080E3881474BC001020
:1020800065BFB0FFF79065BC09106BBFB0FDFF9056
:102090006BBFB0FFF7906BBC091071BFB00200902E
:1020A000801080E3881489BC001065BFB0FF7F906A
:1020B00065BC09106BBFB0FBFF906BBFB0FEFF901B
:1020C0006BBC091071BFB0040090801080E38814CD
:1020D0009BBC001065BFB0FFDF9065BC09106BBFF3
:1020E000B0FFBF906BBC091071BFB00800908010AA
:1020F00080E38814B0BC001065BFB0FFBF9065BC22
:1021000009106BBFB0EFFF906BBFB0FF7F906BBC4F
:10211000091071BFB0100090801080E38814C2BC19
:10212000001065BFB0FFBF9065BC09106BBFB0FF6A
:10213000DF906BBC091071BFB020009080 1080E36D
:102140008814CFBC09106BBFB0FFEF906BBC0010C0
:1021500065BC009051BE407C0200907680EF008A02
:10216000A080A08180B00100E0BE41BC001065BF2E
:10217000B0FFFE9065BC009051BC001066BFB0FF80
:10218000FE9066BC009052BC09106BBC009068BF0A
```

```
:10219000B081ECBC09906BBC001064BFC00400901F
:1021A00064BE407C0200907680EF008AA080A0810F
:1021B00080B00100E0BF80030090801080BC0990D7
:1021C0006C7C0200907680EF008AA080A08180B0B5
:1021D0000100E0BE41BC09100FBC09906CBC0910A5
:1021E0000EBC09906DBE407C0200907680EF008AA4
:1021F000A080A08180B00300EAB900B2018BE0901A
:10220000A09080BE41BC001066BFC000029066BCBA
:10221000009052BE40BE47BDFF107FBFB00080E3BC
:1022200008156010 80E30815608B89B93290A07A98
:1022300080168F8B9AB2018BE01080B8019080BE1F
:1022400047108 0BFA003E8E3CC1551B9018BA090E3
:1022500080BDFF107FBFB000808B8990801080E32D
:10226000815608B8AB2028BE01089E388153E8BDB
:1022700089BF8001F490A07A80168F8B90BE47BDF5
:10228000FF107FBFB000809080108 0E38815958B91
:102290008AB2028BE01080E30815958B89B93290E1
:1022A000A07A80168F8B9AB2018BE01080B80190D3
:1022B00080BE471080BFA01388E3CC158AB9018B7C
:1022C000A09080BDFF107FBFB00080E3881595B25D
:1022D000028BE01089E3881577BE41BC001066BF11
:1022E000B0FFFD9066BC009052BE408B8AB2028B5C
:1022F000E01080BA01E30815B3BE41BC001066BF10
:10230000C000019066BC009052BC09106BBFC000B9
:1023100002906BBE408B897C0400907680EF008A2F
:10232000A080A08180B00100E0BC02182190801044
:1023300080BC09906CBC026D22BC09906CBC021878
:1023400023908 01080BC09906DBC026D24BC099064
:102350006D7C0200907680EF008AA080A08180B022
:10236000040 0EABE46BF8004F0B2018BE09080B862
:1023700001908005AD108A9090BF8004EB9080B8EA
:1023800001908 6980BFA004F0E38C15FF8BA0044E
:1023900090038C108B908A1080B80190A01080B8A8
:1023A000019090 9A0BFA004F0E34415F08B897CF4
:1023B000050090 7680EF008AA080A08180B00400A4
:1023C000EABF8004F0B2018BE09080B801908005F4
:1023D000AD108A9090 1080B80190806980BC006632
:1023E00067E304162A04A0039C108B908A1080B81F
:1023F0000190A01080B80190906980BC006667E3EE
:10240000CC161B8B897C0500907680EF008AA0801B
:10241000A08180B00100E0BC09106BBFB07FFF90CD
:102420006BBFC02000906BBE41BC001066BFC000F7
:10243000019066BC009052BE407C0200907680EF16
:10244000008AA080A08180B00100E0BC09106BBFB1
:10245000B07FFF906BBFC04000906BBE41BC0010CE
:1024600066BFC000019066BC009052BE407C020076
:1024700907680EF008AA080A08180B00300EABE41
:1024800047B900B2028BE09090BF8004F090806961
:1024900080BC006667E3041683058D178A04AC2FA1
:1024A0008A2F809990 1080B80190806980BC006666
:1024B00067E3CC16758BA01080BFB000FF9080BE84
```

```
:1024C0004710808B897C0400907680EF008AA08082
:1024D000A08180B00200EABC09100EBF0AFFFD8B8C
:1024E000E020807804908010080BC09300EE308164C
:1024F0009C8B897C0300907680EF008AA080A0816D
:102500008OB00200EABC09100DBC093004BC0230E6
:102510003FB2018BE090807C041080E30816D6BCAB
:1025200002104278043080904 2BE471042E38C167D
:10253000D01080E3CC16C8B9009042798016CAAE9C
:10254000427FFF8B89B90190A07A8016A68B90BC40
:10255000021142BC00905A798016EBBC02104178FF
:1025600004308090 41BE471041E38C16E81080E3B0
:10257000CC16E6B9009041798016E8AE417FFF1194
:1025800041BC00905BBE478B8AB2018BE01080BEDD
:1025900000BC003062E3441703BE41BC001065BFBD
:1025A000C000019065BC009051BC09106BBFC00217
:1025B00000906BBE40BE41BC001064BFB0FF7F9076
:1025C00064BE408B897C0300907680EF00BE44BFE0
:1025D000080146BF090146BF00BE47BF801815B8B5
:1025E00001E388171D7A8917217A8910507A891892
:1025F00008BF801815BC00A680B801028A7B991715
:102600002AEF0089090012A680B801028ABEC61707
:1026100033A6A0B8018B00798917247A801799E333
:10262000111763E3881758E100175F8B89908A6957
:1026300080BFD08000E308174B8B9069A0BFD0FF0C
:10264000FFE3881767739054A9BE03BE47E344179E
:10265000557D8017578B00108A108ABE0278030FB1
:10266000908B8A0E908B8A02897C07EF007D801701
:1026700057B9008B907D801769BF800180BF8001B2
:10268000817E8018148B8990A0BF807FFF7D80178A
:10269000578B908B8A7A801799E311178EE38817EE
:1026A00058E10017898B89988A6A89BE47E38C179D
:1026B000857D801757108ABE027D8017578B0010CA
:1026C0008A8B907D801757BE471080BF8001A07E07
:1026D0008018148B0090A0B9007D8017578B908BC9
:1026E0008A90A082A08EA08FA0BE4EBE4ABE42BEDF
:1026F000468180028A7C056AA0E38817BB6A99E359
:102700008817BFBE0098AA6AA9BE0098AA78046973
:10271000A03090E34417C369A0BEC4000F0A80FF35
:10272000007C05BE4EBE4FFF008B8978027802FF09
:10273000008B8A7804BE4BFF00BE4E7C0380A08ACB
:10274000A08180B00100E086A087AEBC0206007BBD
:102750008017D4798017E68B8886801080BA019024
:1027600080078E8B9886801080BF90010190800535
:102770008D1089BE308B8F7B9E17DA798017E680AB
:10278000A08180B00100E0BE47BC021000BA20E387
:102790008C18031000B8019000BA01BF9001018BA2
:1027A000889080058ABF0AFFFE8BE0108D7D80181F
:1027B000049080B900B9018B897C020080EF008011
:1027C000A08180B00100E07E8017C7B90190A08B86
:1027D000907C020080EF00EF0000050121005800 0E
:1027E0004300300032000000010100000000000042
```

```
:1027F000000000000000000000000000000000D9
:10280000000000000000000000000000000000C8
:10281000000000000000000000000000000000B8
:10282000000000000000000000000000000000A8
:10283000000000000000000000000000000000098
:10284000000000000000000000000000000000088
:10285000000000000000000000000000000000078
:10286000000000000000000000000000000000068
:10287000000000000000000000000000000000058
:10288000000000000000000000000000000000048
:10289000000000000000000000000000000000038
:1028A000000000000000000000000000000000028
:1028B000000000000000000000000000000000018
:1028C000000000000000000000000000000000008
:1028D000000000000000000000000000000000F8
:1028E000000000000000000000000000000000E8
:1028F000000000000000000000000000000000D8
:10290000000000000000000000000000000000C7
:10291000000000000000000000000000000000B7
:10292000000000000000000000000000000000A7
:10293000000000000000000000000000000000097
:10294000000000000000000000000000000000087
:10295000000000000000000000000000000000077
:10296000000000000000000000000000000000067
:10297000000000000000000000000000000000057
:10298000000000000000000000000000000000047
:10299000000000000000000000000000000000037
:1029A000000000000000000000000000000000027
:1029B000000000000000000000000000000000017
:1029C000000000000000000000000000000000007
:1029D000000000000000000000000000000000F7
:1029E000000000000000000000000000000000E7
:1029F000000000000000000000000000000000D7
:102A000000000000000000000000000000000000C6
:102A100000000000000000000000000000000000B6
:102A200000000000000000000000000000000000A6
:102A300000000000000000000000000000000096
:102A400000000000000000000000000000000086
:102A500000000000000000000000000000000076
:102A600000000000000000000000000000000066
:102A700000000000000000000000000000000056
:102A800000000000000000000000000000000046
:102A900000000000000000000000000000000036
:102AA00000000000000000000000000000000026
:102AB00000000000000000000000000000000016
:102AC00000000000000000000000000000000006
:102AD000000000000000000000000000000000F6
:102AE000000000000000000000000000000000E6
:102AF000000000000000000000000000000000D6
:102B000000000000000000000000000000000000C5
:102B100000000000000000000000000000000000B5
```

```
:102B2000000000000000000000000000000000A5
:102B3000000000000000000000000000000000095
:102B4000000000000000000000000000000000085
:102B5000000000000000000000000000000000075
:102B6000000000000000000000000000000000065
:102B7000000000000000000000000000000000055
:102B8000000000000000000000000000000000045
:102B9000000000000000000000000000000000035
:102BA000000000000000000000000000000000025
:102BB000000000000000000000000000000000015
:102BC000000000000000000000000000000000005
:102BD000000000000000000000000000000000F5
:102BE000000000000000000000000000000000E5
:102BF000000000000000000000000000000000D5
:102C000000000000000000000000000000000C4
:102C100000000000000000000000000000000B4
:102C200000000000000000000000000000000A4
:102C300000000000000000000000000000000094
:102C400000000000000000000000000000000084
:102C500000000000000000000000000000000074
:102C600000000000000000000000000000000064
:102C700000000000000000000000000000000054
:102C800000000000000000000000000000000044
:102C900000000000000000000000000000000034
:102CA000000000000000000000000000000000024
:102CB000000000000000000000000000000000014
:102CC000000000000000000000000000000000004
:102CD000000000000000000000000000000000F4
:102CE000000000000000000000000000000000E4
:102CF000000000000000000000000000000000D4
:102D000000000000000000000000000000000C3
:102D100000000000000000000000000000000B3
:102D200000000000000000000000000000000A3
:102D300000000000000000000000000000000093
:102D400000000000000000000000000000000083
:102D500000000000000000000000000000000073
:102D600000000000000000000000000000000063
:102D700000000000000000000000000000000053
:102D800000000000000000000000000000000043
:102D900000000000000000000000000000000033
:102DA000000000000000000000000000000000023
:102DB000000000000000000000000000000000013
:102DC000000000000000000000000000000000003
:102DD000000000000000000000000000000000F3
:102DE000000000000000000000000000000000E3
:102DF000000000000000000000000000000000D3
:102E000000000000000000000000000000000C2
:102E100000000000000000000000000000000B2
:102E200000000000000000000000000000000A2
:102E300000000000000000000000000000000092
:102E400000000000000000000000000000000082
```

```
:102E500000000000000000000000000000000072
:102E600000000000000000000000000000000062
:102E700000000000000000000000000000000052
:102E800000000000000000000000000000000042
:102E900000000000000000000000000000000032
:102EA00000000000000000000000000000000022
:102EB00000000000000000000000000000000012
:102EC00000000000000000000000000000000002
:102ED00000000000000000000000000000000000F2
:102EE00000000000000000000000000000000000E2
:102EF00000000000000000000000000000000000D2
:102F000000000000000000000000000000000000C1
:102F100000000000000000000000000000000000B1
:102F200000000000000000000000000000000000A1
:102F300000000000000000000000000000000000091
:102F400000000000000000000000000000000000081
:102F500000000000000000000000000000000000071
:102F600000000000000000000000000000000000061
:102F700000000000000000000000000000000000051
:102F800000000000000000000000000000000000041
:102F900000000000000000000000000000000000031
:102FA00000000000000000000000000000000000021
:102FB00000000000000000000000000000000000011
:102FC00000000000000000000000000000000000001
:102FD00000000000000000000000000000000000F1
:102FE00000000000000000000000000000000000E1
:102FF00000000000000000000000000000000000D1
:1030000000000000000000000000000000000000C0
:1030100000000000000000000000000000000000B0
:1030200000000000000000000000000000000000A0
:1030300000000000000000000000000000000000090
:1030400000000000000000000000000000000000080
:1030500000000000000000000000000000000000070
:1030600000000000000000000000000000000000060
:1030700000000000000000000000000000000000050
:1030800000000000000000000000000000000000040
:1030900000000000000000000000000000000000030
:1030A00000000000000000000000000000000000020
:1030B00000000000000000000000000000000000010
:1030C00000000000000000000000000000000000000
:1030D00000000000000000000000000000000000F0
:1030E00000000000000000000000000000000000E0
:1030F00000000000000000000000000000000000D0
:1031000000000000000000000000000000000000BF
:1031100000000000000000000000000000000000AF
:103120000000000000000000000000000000000009F
:103130000000000000000000000000000000000008F
:103140000000000000000000000000000000000007F
:103150000000000000000000000000000000000006F
:103160000000000000000000000000000000000005F
:103170000000000000000000000000000000000004F
```

```
:10318000000000000000000000000000000000003F
:10319000000000000000000000000000000000002F
:1031A000000000000000000000000000000000001F
:1031B000000000000000000000000000000000000F
:1031C00000000000000000000000000000000000FF
:1031D00000000000000000000000000000000000EF
:1031E00000000000000000000000000000000000DF
:1031F00000000000000000000000000000000000CF
:10320000000000000000000000000000000000000BE
:10321000000000000000000000000000000000000AE
:1032200000000000000000000000000000000000009E
:1032300000000000000000000000000000000000008E
:1032400000000000000000000000000000000000007E
:1032500000000000000000000000000000000000006E
:1032600000000000000000000000000000000000005E
:1032700000000000000000000000000000000000004E
:1032800000000000000000000000000000000000003E
:1032900000000000000000000000000000000000002E
:1032A000000000000000000000000000000000001E
:1032B000000000000000000000000000000000000E
:1032C00000000000000000000000000000000000FE
:1032D00000000000000000000000000000000000EE
:1032E00000000000000000000000000000000000DE
:1032F00000000000000000000000000000000000CE
:10330000000000000000000000000000000000000BD
:1033100000000000000000000000000000000000AD
:1033200000000000000000000000000000000000009D
:1033300000000000000000000000000000000000008D
:1033400000000000000000000000000000000000007D
:1033500000000000000000000000000000000000006D
:1033600000000000000000000000000000000000005D
:1033700000000000000000000000000000000000004D
:1033800000000000000000000000000000000000003D
:1033900000000000000000000000000000000000002D
:1033A000000000000000000000000000000000001D
:1033B000000000000000000000000000000000000D
:1033C00000000000000000000000000000000000FD
:1033D00000000000000000000000000000000000ED
:1033E00000000000000000000000000000000000DD
:1033F00000000000000000000000000000000000CD
:10340000000000000000000000000000000000000BC
:1034100000000000000000000000000000000000AC
:1034200000000000000000000000000000000000009C
:1034300000000000000000000000000000000000008C
:1034400000000000000000000000000000000000007C
:1034500000000000000000000000000000000000006C
:1034600000000000000000000000000000000000005C
:1034700000000000000000000000000000000000004C
:1034800000000000000000000000000000000000003C
:1034900000000000000000000000000000000000002C
:1034A000000000000000000000000000000000001C
```

```
:1034B000000000000000000000000000000000000C
:1034C000000000000000000000000000000000000FC
:1034D000000000000000000000000000000000000EC
:1034E000000000000000000000000000000000000DC
:1034F000000000000000000000000000000000000CC
:10350000000000000000000000000000000000000BB
:10351000000000000000000000000000000000000AB
:10352000000000000000000000000000000000000009B
:10353000000000000000000000000000000000000008B
:10354000000000000000000000000000000000000007B
:10355000000000000000000000000000000000000006B
:10356000000000000000000000000000000000000005B
:10357000000000000000000000000000000000000004B
:10358000000000000000000000000000000000000003B
:10359000000000000000000000000000000000000002B
:1035A000000000000000000000000000000000000001B
:1035B000000000000000000000000000000000000000B
:1035C000000000000000000000000000000000000FFB
:1035D000000000000000000000000000000000000EEB
:1035E000000000000000000000000000000000000DDB
:1035F000000000000000000000000000000000000CCB
:10360000000000000000000000000000000000000BBA
:10361000000000000000000000000000000000000AAA
:10362000000000000000000000000000000000000099A
:10363000000000000000000000000000000000000088A
:10364000000000000000000000000000000000000077A
:10365000000000000000000000000000000000000066A
:10366000000000000000000000000000000000000055A
:10367000000000000000000000000000000000000044A
:10368000000000000000000000000000000000000033A
:10369000000000000000000000000000000000000022A
:1036A000000000000000000000000000000000000011A
:1036B000000000000000000000000000000000000000A
:1036C000000000000000000000000000000000000FFA
:1036D000000000000000000000000000000000000EEA
:1036E000000000000000000000000000000000000DDA
:1036F000000000000000000000000000000000000CCA
:10370000000000000000000000000000000000000B9
:10371000000000000000000000000000000000000A9
:10372000000000000000000000000000000000000099
:10373000000000000000000000000000000000000089
:10374000000000000000000000000000000000000079
:10375000000000000000000000000000000000000069
:10376000000000000000000000000000000000000059
:10377000000000000000000000000000000000000049
:10378000000000000000000000000000000000000039
:10379000000000000000000000000000000000000029
:1037A000000000000000000000000000000000000019
:1037B000000000000000000000000000000000000009
:1037C000000000000000000000000000000000000F9
:1037D000000000000000000000000000000000000E9
```

```
:1037E00000000000000000000000000000000000D9
:1037F00000000000000000000000000000000000C9
:10380000000000000000000000000000000000000B8
:10381000000000000000000000000000000000000A8
:1038200000000000000000000000000000000000098
:1038300000000000000000000000000000000000088
:1038400000000000000000000000000000000000078
:1038500000000000000000000000000000000000068
:1038600000000000000000000000000000000000058
:1038700000000000000000000000000000000000048
:1038800000000000000000000000000000000000038
:1038900000000000000000000000000000000000028
:1038A00000000000000000000000000000000000018
:1038B00000000000000000000000000000000000008
:1038C00000000000000000000000000000000000F8
:1038D00000000000000000000000000000000000E8
:1038E00000000000000000000000000000000000D8
:1038F00000000000000000000000000000000000C8
:10390000000000000000000000000000000000000B7
:10391000000000000000000000000000000000000A7
:1039200000000000000000000000000000000000097
:1039300000000000000000000000000000000000087
:1039400000000000000000000000000000000000077
:1039500000000000000000000000000000000000067
:1039600000000000000000000000000000000000057
:1039700000000000000000000000000000000000047
:1039800000000000000000000000000000000000037
:1039900000000000000000000000000000000000027
:1039A00000000000000000000000000000000000017
:1039B00000000000000000000000000000000000007
:1039C00000000000000000000000000000000000F7
:1039D00000000000000000000000000000000000E7
:1039E00000000000000000000000000000000000D7
:1039F00000000000000000000000000000000000C7
:103A000000000000000000000000000000000000B6
:103A100000000000000000000000000000000000A6
:103A200000000000000000000000000000000000096
:103A300000000000000000000000000000000000086
:103A400000000000000000000000000000000000076
:103A500000000000000000000000000000000000066
:103A600000000000000000000000000000000000056
:103A700000000000000000000000000000000000046
:103A800000000000000000000000000000000000036
:103A900000000000000000000000000000000000026
:103AA00000000000000000000000000000000000016
:103AB00000000000000000000000000000000000006
:103AC00000000000000000000000000000000000F6
:103AD00000000000000000000000000000000000E6
:103AE00000000000000000000000000000000000D6
:103AF00000000000000000000000000000000000C6
:103B000000000000000000000000000000000000B5
```

```
:103B1000000000000000000000000000000000A5
:103B2000000000000000000000000000000000095
:103B3000000000000000000000000000000000085
:103B4000000000000000000000000000000000075
:103B5000000000000000000000000000000000065
:103B6000000000000000000000000000000000055
:103B7000000000000000000000000000000000045
:103B8000000000000000000000000000000000035
:103B9000000000000000000000000000000000025
:103BA000000000000000000000000000000000015
:103BB000000000000000000000000000000000005
:103BC000000000000000000000000000000000F5
:103BD000000000000000000000000000000000E5
:103BE000000000000000000000000000000000D5
:103BF000000000000000000000000000000000C5
:103C000000000000000000000000000000000B4
:103C100000000000000000000000000000000A4
:103C200000000000000000000000000000000094
:103C300000000000000000000000000000000084
:103C400000000000000000000000000000000074
:103C500000000000000000000000000000000064
:103C600000000000000000000000000000000054
:103C700000000000000000000000000000000044
:103C800000000000000000000000000000000034
:103C900000000000000000000000000000000024
:103CA000000000000000000000000000000000014
:103CB000000000000000000000000000000000004
:103CC000000000000000000000000000000000F4
:103CD000000000000000000000000000000000E4
:103CE000000000000000000000000000000000D4
:103CF000000000000000000000000000000000C4
:103D000000000000000000000000000000000B3
:103D100000000000000000000000000000000A3
:103D200000000000000000000000000000000093
:103D300000000000000000000000000000000083
:103D400000000000000000000000000000000073
:103D500000000000000000000000000000000063
:103D600000000000000000000000000000000053
:103D700000000000000000000000000000000043
:103D800000000000000000000000000000000033
:103D900000000000000000000000000000000023
:103DA000000000000000000000000000000000013
:103DB000000000000000000000000000000000003
:103DC000000000000000000000000000000000F3
:103DD000000000000000000000000000000000E3
:103DE000000000000000000000000000000000D3
:103DF000000000000000000000000000000000C3
:103E000000000000000000000000000000000B2
:103E100000000000000000000000000000000A2
:103E200000000000000000000000000000000092
:103E300000000000000000000000000000000082
```

```
:103E400000000000000000000000000000000072
:103E500000000000000000000000000000000062
:103E600000000000000000000000000000000052
:103E700000000000000000000000000000000042
:103E800000000000000000000000000000000032
:103E900000000000000000000000000000000022
:103EA00000000000000000000000000000000012
:103EB00000000000000000000000000000000002
:103EC00000000000000000000000000000000F2
:103ED00000000000000000000000000000000E2
:103EE00000000000000000000000000000000D2
:103EF00000000000000000000000000000000C2
:103F000000000000000000000000000000000B1
:103F100000000000000000000000000000000A1
:103F200000000000000000000000000000000091
:103F300000000000000000000000000000000081
:103F400000000000000000000000000000000071
:103F500000000000000000000000000000000061
:103F600000000000000000000000000000000051
:103F700000000000000000000000000000000041
:103F800000000000000000000000000000000031
:103F900000000000000000000000000000000021
:103FA00000000000000000000000000000000011
:103FB00000000000000000000000000000000001
:103FC00000000000000000000000000000000F1
:103FD00000000000000000000000000000000E1
:103FE00000000000000000000000000000000D1
:103FF00000000000000000000000000000000C1
:104000000000000000000000000000000000B0
:104010000000000000000000000000000000A0
:104020000000000000000000000000000000090
:104030000000000000000000000000000000080
:104040000000000000000000000000000000070
:104050000000000000000000000000000000060
:104060000000000000000000000000000000050
:104070000000000000000000000000000000040
:104080000000000000000000000000000000030
:104090000000000000000000000000000000020
:1040A0000000000000000000000000000000010
:1040B0000000000000000000000000000000000
:1040C00000000000000000000000000000000F0
:1040D00000000000000000000000000000000E0
:1040E00000000000000000000000000000000D0
:1040F00000000000000000000000000000000C0
:104100000000000000000000000000000000AF
:104110000000000000000000000000000000009F
:104120000000000000000000000000000000008F
:104130000000000000000000000000000000007F
:104140000000000000000000000000000000006F
:104150000000000000000000000000000000005F
:104160000000000000000000000000000000004F
```

```
:10417000000000000000000000000000000000003F
:10418000000000000000000000000000000000002F
:10419000000000000000000000000000000000001F
:1041A000000000000000000000000000000000000F
:1041B0000000000000000000000000000000000FF
:1041C0000000000000000000000000000000000EF
:1041D0000000000000000000000000000000000DF
:1041E0000000000000000000000000000000000CF
:1041F0000000000000000000000000000000000BF
:10420000000000000000000000000000000000000AE
:10421000000000000000000000000000000000009E
:10422000000000000000000000000000000000008E
:10423000000000000000000000000000000000007E
:10424000000000000000000000000000000000006E
:10425000000000000000000000000000000000005E
:10426000000000000000000000000000000000004E
:10427000000000000000000000000000000000003E
:10428000000000000000000000000000000000002E
:10429000000000000000000000000000000000001E
:1042A000000000000000000000000000000000000E
:1042B0000000000000000000000000000000000FE
:1042C0000000000000000000000000000000000EE
:1042D0000000000000000000000000000000000DE
:1042E0000000000000000000000000000000000CE
:1042F0000000000000000000000000000000000BE
:10430000000000000000000000000000000000000AD
:10431000000000000000000000000000000000009D
:10432000000000000000000000000000000000008D
:10433000000000000000000000000000000000007D
:10434000000000000000000000000000000000006D
:10435000000000000000000000000000000000005D
:10436000000000000000000000000000000000004D
:10437000000000000000000000000000000000003D
:10438000000000000000000000000000000000002D
:10439000000000000000000000000000000000001D
:1043A000000000000000000000000000000000000D
:1043B0000000000000000000000000000000000FD
:1043C0000000000000000000000000000000000ED
:1043D0000000000000000000000000000000000DD
:1043E0000000000000000000000000000000000CD
:1043F0000000000000000000000000000000000BD
:10440000000000000000000000000000000000000AC
:10441000000000000000000000000000000000009C
:10442000000000000000000000000000000000008C
:10443000000000000000000000000000000000007C
:10444000000000000000000000000000000000006C
:10445000000000000000000000000000000000005C
:10446000000000000000000000000000000000004C
:10447000000000000000000000000000000000003C
:10448000000000000000000000000000000000002C
:10449000000000000000000000000000000000001C
```

```
:1044A000000000000000000000000000000000000C
:1044B000000000000000000000000000000000000FC
:1044C000000000000000000000000000000000000EC
:1044D000000000000000000000000000000000000DC
:1044E000000000000000000000000000000000000CC
:1044F000000000000000000000000000000000000BC
:104500000000000000000000000000000000000AAB
:104510000000000000000000000000000000000009B
:104520000000000000000000000000000000000008B
:104530000000000000000000000000000000000007B
:104540000000000000000000000000000000000006B
:104550000000000000000000000000000000000005B
:104560000000000000000000000000000000000004B
:104570000000000000000000000000000000000003B
:104580000000000000000000000000000000000002B
:104590000000000000000000000000000000000001B
:1045A000000000000000000000000000000000000B
:1045B000000000000000000000000000000000000FB
:1045C000000000000000000000000000000000000EB
:1045D000000000000000000000000000000000000DB
:1045E000000000000000000000000000000000000CB
:1045F000000000000000000000000000000000000BB
:104600000000000000000000000000000000000AAA
:104610000000000000000000000000000000000009A
:104620000000000000000000000000000000000008A
:104630000000000000000000000000000000000007A
:104640000000000000000000000000000000000006A
:104650000000000000000000000000000000000005A
:104660000000000000000000000000000000000004A
:104670000000000000000000000000000000000003A
:104680000000000000000000000000000000000002A
:104690000000000000000000000000000000000001A
:1046A000000000000000000000000000000000000A
:1046B000000000000000000000000000000000000FA
:1046C000000000000000000000000000000000000EA
:1046D000000000000000000000000000000000000DA
:1046E000000000000000000000000000000000000CA
:1046F000000000000000000000000000000000000BA
:1047000000000000000000000000000000000000A9
:104710000000000000000000000000000000000099
:104720000000000000000000000000000000000089
:104730000000000000000000000000000000000079
:104740000000000000000000000000000000000069
:104750000000000000000000000000000000000059
:104760000000000000000000000000000000000049
:104770000000000000000000000000000000000039
:104780000000000000000000000000000000000029
:104790000000000000000000000000000000000019
:1047A000000000000000000000000000000000000009
:1047B000000000000000000000000000000000000F9
:1047C000000000000000000000000000000000000E9
```

```
:1047D000000000000000000000000000000000D9
:1047E000000000000000000000000000000000C9
:1047F000000000000000000000000000000000B9
:10480000000000000000000000000000000000A8
:10481000000000000000000000000000000000098
:10482000000000000000000000000000000000088
:10483000000000000000000000000000000000078
:10484000000000000000000000000000000000068
:10485000000000000000000000000000000000058
:10486000000000000000000000000000000000048
:10487000000000000000000000000000000000038
:10488000000000000000000000000000000000028
:10489000000000000000000000000000000000018
:1048A000000000000000000000000000000000008
:1048B0000000000000000000000000000000000F8
:1048C0000000000000000000000000000000000E8
:1048D0000000000000000000000000000000000D8
:1048E0000000000000000000000000000000000C8
:1048F0000000000000000000000000000000000B8
:10490000000000000000000000000000000000A7
:10491000000000000000000000000000000000097
:10492000000000000000000000000000000000087
:10493000000000000000000000000000000000077
:10494000000000000000000000000000000000067
:10495000000000000000000000000000000000057
:10496000000000000000000000000000000000047
:10497000000000000000000000000000000000037
:10498000000000000000000000000000000000027
:10499000000000000000000000000000000000017
:1049A000000000000000000000000000000000007
:1049B0000000000000000000000000000000000F7
:1049C0000000000000000000000000000000000E7
:1049D0000000000000000000000000000000000D7
:1049E0000000000000000000000000000000000C7
:1049F0000000000000000000000000000000000B7
:104A00000000000000000000000000000000000A6
:104A10000000000000000000000000000000000096
:104A20000000000000000000000000000000000086
:104A30000000000000000000000000000000000076
:104A40000000000000000000000000000000000066
:104A50000000000000000000000000000000000056
:104A60000000000000000000000000000000000046
:104A70000000000000000000000000000000000036
:104A80000000000000000000000000000000000026
:104A90000000000000000000000000000000000016
:104AA0000000000000000000000000000000000006
:104AB0000000000000000000000000000000000F6
:104AC0000000000000000000000000000000000E6
:104AD0000000000000000000000000000000000D6
:104AE0000000000000000000000000000000000C6
:104AF0000000000000000000000000000000000B6
```

```
:104B000000000000000000000000000000000000A5
:104B100000000000000000000000000000000000095
:104B200000000000000000000000000000000000085
:104B300000000000000000000000000000000000075
:104B400000000000000000000000000000000000065
:104B500000000000000000000000000000000000055
:104B600000000000000000000000000000000000045
:104B700000000000000000000000000000000000035
:104B800000000000000000000000000000000000025
:104B900000000000000000000000000000000000015
:104BA00000000000000000000000000000000000005
:104BB00000000000000000000000000000000000F5
:104BC00000000000000000000000000000000000E5
:104BD00000000000000000000000000000000000D5
:104BE00000000000000000000000000000000000C5
:104BF00000000000000000000000000000000000B5
:104C000000000000000000000000000000000000A4
:104C100000000000000000000000000000000000094
:104C200000000000000000000000000000000000084
:104C300000000000000000000000000000000000074
:104C400000000000000000000000000000000000064
:104C500000000000000000000000000000000000054
:104C600000000000000000000000000000000000044
:104C700000000000000000000000000000000000034
:104C800000000000000000000000000000000000024
:104C900000000000000000000000000000000000014
:104CA00000000000000000000000000000000000004
:104CB00000000000000000000000000000000000F4
:104CC00000000000000000000000000000000000E4
:104CD00000000000000000000000000000000000D4
:104CE00000000000000000000000000000000000C4
:104CF00000000000000000000000000000000000B4
:104D000000000000000000000000000000000000A3
:104D100000000000000000000000000000000000093
:104D200000000000000000000000000000000000083
:104D300000000000000000000000000000000000073
:104D400000000000000000000000000000000000063
:104D500000000000000000000000000000000000053
:104D600000000000000000000000000000000000043
:104D700000000000000000000000000000000000033
:104D800000000000000000000000000000000000023
:104D900000000000000000000000000000000000013
:104DA00000000000000000000000000000000000003
:104DB00000000000000000000000000000000000F3
:104DC00000000000000000000000000000000000E3
:104DD00000000000000000000000000000000000D3
:104DE00000000000000000000000000000000000C3
:104DF00000000000000000000000000000000000B3
:104E000000000000000000000000000000000000A2
:104E100000000000000000000000000000000000092
:104E200000000000000000000000000000000000082
```

```
:104E300000000000000000000000000000000072
:104E400000000000000000000000000000000062
:104E500000000000000000000000000000000052
:104E600000000000000000000000000000000042
:104E700000000000000000000000000000000032
:104E800000000000000000000000000000000022
:104E900000000000000000000000000000000012
:104EA00000000000000000000000000000000002
:104EB00000000000000000000000000000000F2
:104EC00000000000000000000000000000000E2
:104ED00000000000000000000000000000000D2
:104EE00000000000000000000000000000000C2
:104EF00000000000000000000000000000000B2
:104F000000000000000000000000000000000A1
:104F100000000000000000000000000000000091
:104F200000000000000000000000000000000081
:104F300000000000000000000000000000000071
:104F400000000000000000000000000000000061
:104F500000000000000000000000000000000051
:104F600000000000000000000000000000000041
:104F700000000000000000000000000000000031
:104F800000000000000000000000000000000021
:104F900000000000000000000000000000000011
:104FA00000000000000000000000000000000001
:104FB0004B004C004E00510055005A006000660046
:104FC0006C0073007A00810088008F0096009E00BC
:104FD000A500AC00B300BA00C100C800CF00D600E5
:104FE000DD00E300EA00F100F700FE0104010B011F
:104FF000110118011E0124012B01310137013D016E
:10500000430149014F0155015B01610167016D01D8
:10501000720178017E01830189018F0194019A0157
:105020009F01A501AA01B001B501BB01C001C501E5
:10503000CB01D001D501DA01E001E501EA01EF0180
:10504000F401F901FE02040209020E021302180221
:105050001D02220226022B02300235023A023F02D2
:10506000440248024D02520257025B02600265028E
:105070006A026E02730278027C02810285028A0251
:105080008F02930298029C02A102A502AA02AE021C
:10509000B302B702BC02C002C402C902CD02D202EE
:1050A000D602DA02DF02E302E702EC02F002F402C7
:1050B000F9031A033C035C037B039903B603D20391
:1050C000EE04090423043C0455046D0485049C0487
:1050D000B304CA04E004F5050B05200534054805B2
:1050E0005C05700584059705AA05BC05CF05E1059B
:1050F000F306050616062806390064A065B066B0601
:105100007C068C069C06AD06BC06CC06DC06EB06CF
:10511000FA070A07190728073607450754076207E1
:1051200071077F078D079B07A907B707C507D20738
:10513000E007ED07FB08080815082208F083C08BF
:10514000490856086308 6F087C0888089508A10874
:10515000AD08BA08C608D208DE08EA08F60902094E
```

```
:105160000E09190925093109 3C09480953095E0945
:105170006A09750980098B099709A209AD09B8095F
:10518000C309CD09D809E309EE09F80A030A0E0A92
:10519000180A230A2D0A380A420A4C0A570A610AD9
:1051A0006B0A760A800A8A0A940A9E0AA80AB20A38
:1051B000BC0B0A0B560BA00BE90C2F0C740CB80C93
:1051C000FA0D3B0D7B0DBA0DF70E340E6F0EAA0EC5
:1051D000E30F1C0F540F8B0FC10FF7102C10601032
:1051E0009410C710FA112B115D118E11BE11ED1222
:1051F0001D124C127A12A812D51302132F135B132F
:10520000871388138813881388138813881388138813C7
:10521000881388138813881388138813881388138813B6
:10522000881388138813881388138813881388138813A6
:10523000881388138813881388138813881388138813881396
:10524000881388138813881388138813881388138813881386
:10525000881388138813881388138813881388138813881376
:10526000881388138813881388138813881388138813881366
:10527000881388138813881388138813881388138813881356
:10528000881388138813881388138813881388138813881346
:10529000881388138813881388138813881388138813881336
:1052A0008813881388138813881388138813880138
:1052B0005C00AE007400570046003A0032002B003C
:1052C000270023002000 1D001B00190017001600F6
:1052D000140013001200110011001000 0F000E0046
:0152E0000EBF
:020000021000EC
:10000000568B36AA88900EE823003D01007505B88E
:100010000100EB17C6441602C6441705804C4E017A
:10002000C64414029ABD1C00E033C05ECB900EE8BB
:1000300012003D0100750A832628FFBFB80100EBBE
:100040000233C0CB800E03F180832628FFBFB801A6
:1000500000CB568B36A088F7442D0600740BC706DC
:10006000038100449A000006EF802603F17F5ECBF7
:10007000558BEC56578B7E068B36AA88C7060381B4
:1000800000209A000006EF3D0100741AC6441604D1
:10009000C6441708C6441816804C4E019ABD1C0071
:1000A000E033C0E90501F7068D860040741583FF33
:1000B000017F03E9F200C6441602C644173AEBD8A2
:1000C000E9E500F7068D860002740D83FF027F03C9
:1000D000E9D500EB13E9D000F70662860400741539
:1000E00083FF037F03E9C000C6441602C644170419
:1000F000EBA6E9B300F706628640007432803E2426
:10010000870374078 03E2487047524F7068D8600D4
:10011000207413 83FF047F03E98D0083FF05742996
:10012000C6441603EB6383FF057E7DEBF3EB79F7A3
:1001300006628610007559F7068D8600207432839A
:10014000FF067E6483FF07750BC6441607C6441777
:1001500027E944FFC6441603F706628620007407A9
:10016000C6441719E931FFC6441731E92AFFE927C8
:10017000FF83FF077E32C6441603F706628620001F
:100180007407C6441719E90FFFC6441731E908FF81
```

```
:10019000F7068D860020741083FF09750BC6441680
:1001A00007C6441727E9F0FEB801005F5E5DCB008B
:1001B00050A039F0800E10F02024FFA239F058C66C
:1001C0000620F000C60621F000C60622F0C7C606CB
:1001D00023F0FFCB5556579CFA0650B800008EC04E
:1001E00058268B360000268B3E020026C7060000EC
:1001F00083C426C706020000D08936FD83893EFFEE
:1002000083C606B68000079D8B2EA08833DBF74699
:10021000680100740 3EB62908B86A6008B96A800A1
:1002200003464E83D20089467F8996810089868362
:10023000008996850 08B5E0A8B4E0C3BD177257228
:10024000043BC3771F2BD81BCA83C30183D100F79C
:10025000C1FFFF74058B5E2FEB0C3B5E2F76078B87
:100260005E2FEB0233DB899E8B000BDB740BC746E2
:100270007D0100C7868D0000009CFA0650B8000082
:100280008EC0588B36FD838B3EFF832689360000 57
:1002900026893E0200079D5F5E5DCBC6062E0000EC
:1002A000C6061E8F00C7061C8E0000C31E50535585
:1002B000B800118ED8A022F08A2623F024CF800E19
:1002C00010F040C60622F0C1A8017435F6C42075AE
:1002D000238A1E14F0A015F08A2616F083E33F8BC4
:1002E0002EA0888986AA00899EAE00C7060C8102CE
:1002F00000EB2C90B017E81EECC6060B8100EB0D4E
:10030000908AC4B416E8DEEBC6060B8107C7060C5C
:1003100081040 0FE0E10817506C7060C8106005D83
:100320005B58C70622FF00801FCF601EB800118EE9
:10033000D88A0E22F0A01E8FF6D022C88A2E23F073
:100340008A1630F08A3627F08A1E7DF08A3E7EF0CB
:100350008B3E1C8E898D1E8E8995208E83C70481CD
:10036000E7FF00893E1C8EF6C7017450518A0E22A9
:10037000F0F6C108597466F6C3017521F6C304741A
:100380003BC6067DF00480267EF0FE80267EF0FBD4
:1003900080262AF07FC60622F008E9520351B942AE
:1003A00000E2FE59C60624F063C7063EF00100C60F
:1003B000067DF001C60622F008E93303F6C1087491
:1003C0001CF6C3827514F6067AF040750DF6C50862
:1003D0007408C6067DF008E91503E97B02F6C5201E
:1003E000743580262 0F0F7802620F0FD800E1E8FC9
:1003F00008800E1E8F02A1B0863B06AE867503E90B
:100400005602E8F302C60679F01FC6062E0003C6A0
:100410000623F020E9D802F6C1017503E9B001F71F
:10042000C140AC7403E93002B21DC60631F0398A0E
:100430002632F0C60631F038A032F0E877EAC60678
:1004400023F001C60622F0018306087 0183160AFD
:100450008700FF06BE86A1A3868B16A586030668C5
:100460008683D2003B169D867708720C3B069B86DE
:1004700007206B80000BA0000A3A3868916A586FFFD
:100480000EB48633FFFF0EB086740A833EB4860036
:1004900074038 3CF01FF0E9186740383CF04FF0E94
:1004A000B686740683CF02EB2B90A1B8863D000080
:1004B000750CA1B4863B06BC867603A1BC86F726E4
```

```
:1004C000BA8605FF0083D2008AF28AD48916B686DE
:1004D0002916B886F7C701007431803E2E000074DB
:1004E0002AA02E00B400A30981C60679F01F606A15
:1004F000009ABB9800E083C402619ADD1400E00E0C
:10050000E8ADFCC6067DF0FFE9B901D1E72EFFA5F5
:1005100012053405 2B0534052B0534052205340559
:10052000EF06C70609810000EB7B90C70609810131
:1005300000EB4890C70609810200E8300F3D01003A
:1005400075390633C08EC0B8200726A33000078354
:100550003EB086007425833EF18600741E803E2ED8
:1005600000007517A1B0863B06AE86750E830EDFC0
:1005700086028 10EDF868000EB2B908326DF86FDCE
:1005800008126DF867FFFC60679F01F606A009ABB6E
:1005900098 00E083C402619ADD1400E00EE810FCCC
:1005A000C6067DF0FF9A0D0700E03D00007503E9E7
:1005B0003D018BF8A1BE868945 18C706BE8600009E
:1005C000A1088789450EA10A87894510E90D01F622
:1005D000C1027503EB7790C60622F002C6067DF0D5
:1005E00040B101FF0E9386FF0EAE867407833E93E3
:1005F00086007502B100833E9D860F7507833E9B82
:1006000086FF743C8B36B0862B36AE86A168868B0F
:100610001EA3868B16A58603D883D20083FE02759F
:1006200005 03D883D2003B169D86721477063B1EC5
:1006300098 6720CB1008936B086C706AE86000074
:1006400080F9007405C6061AF001E9A200F6C1049B
:1006500074 03E8C80DE99700E89D00C60679F01F0D
:1006600060 6A009ABB9800E083C402619ADD1400BE
:10067000E00EE83BFBC6067DF0FFF6C1807409C7BB
:1006800006 09810300EB3D90F6C1407410C70609CE
:1006900081 0500B4418AC2E84CE8EB2890F6C10815
:1006A000741CF6C308740EC70609811200B014E862
:1006B00065E8EB1090C70609810700EB0790C706B5
:1006C000098109009A0D0700E03D000074218BF8B4
:1006D000A1088789450EA10A87894510A10981884B
:1006E00045098BF7A1FE80BB0A009AB90800E0C754
:1006F0000622FF00801F61CF8AC524AC750380E10C
:100700007FA079F0A2CF86A07AF0A2D086A07DF05B
:10071000A2D186882ECC868816CE868836CD86C312
:10072000601EB800118ED88A0E22F0320E1E8F8AFB
:100730002E23F08A1630F08A3627F08A1E7DF0F6D6
:10074000C108741CF6C3827514F6067AF040750D64
:10075000F6C5087408C6067DF008E9E601E9F8FE6A
:10076000F6C520743280262 0F0F7802620F0FD8028
:1007700000E1E8F08800E1E8F02A1B0863B06AE862D
:1007800075 03E94401C60679F01FC6062E0013C69C
:1007900006 23F020E9AC01F6C1017503E99900F7E1
:1007A000C140AC7403E92101830EDF8602C6062333
:1007B000F001C60622F0018306E586018316E7866E
:1007C00000FF06EF86FF0EF186FF0EB086FF0EEDEE
:1007D00086A1A3868B16A5860306 88683D200238E
:1007E000069B8623169D86A3A3868916A586F706F3
```

```
:1007F000DF860400740FC706ED860000C706098176
:100800001500E9E400803E2E0000740BA02E00B419
:1008100000A30981E9D200833EB086007411833EB3
:10082000ED8600740A833EF186007403E91401C763
:100830000609811500E9B100F6C1027503EB7F904E
:10084000C60622F002C6067DF040B101FF0EF38617
:10085000FF0EAE867407833EF386007502B1008BEF
:1008600036B0862B36AE86833E9D860F7507833E57
:100870009B86FF743C8B36B0862B36AE86A168868D
:100880008B1EA3868B16A58603D883D20083FE0217
:10089000750503D883D2003B169D86721477063BFC
:1008A0001E9B86720CB1008936B086C706AE8600E4
:1008B0000080F9007405C6061AF001E931FEF6C1A0
:1008C000047406E8570BEB7B90C70609811300F60A
:1008D000C5AC7515F6C1087410A07DF0A8087409A0
:1008E000A27DF0C70609811400C6067F9F01F606A70
:1008F000009ABB9800E083C402619ADD1400E00E08
:10090000E8ADF8C6067DF0FF8326DF86FD9A0D0769
:1009100000E03D0000742C8BF8A10981884509A1F5
:10092000E58689450EA1E786894510A1EF868945B0
:10093000128BF7B80600BB0A009AB90800E0830ED4
:10094000DF8608C70622FF00801F61CF601EB80047
:10095000118ED88A0E22F0320E1E8F8A2E23F08A34
:1009600Q1630F08A3627F08A1E7DF08A3E7EF0F639
:10097000C1087466F6C7017445F6C3017521F6C354
:1009800004743BC6067DF00480267EF0FE80267E41
:10099000F0FB80262AF07FC60622F008E9100251FB
:1009A000B94200E2FE59C60624F063C7063EF001D4
:1009B00000C6067DF001C60622F008E9F101F6C383
:1009C000827514F6067AF040750DF6C5087408C6EF
:1009D000067DF008E9D801E96401F6C52074358088
:1009E0002620F0F7802620F0FD800E1E8F08800E56
:1009F0001E8F02A1B0863B06AE867503E93F01E873
:100A0000F6FCC60679F01FC6062E0003C60623F0C4
:100A100020E99B01F6C1017503E9AC00F7C140ACC8
:100A20007403E91901C60623F001C60622F001830A
:100A300006087018316 0A8700A1A3868B16A58660
:100A400003066886 83D2003B169D867708720C3BAE
:100A5000069B867206B80000BA0000A3A38689161A
:100A6000A586FF0EB486FF0EB0867528C7060981DD
:100A70000200C60679F01F606A009ABB9800E08306
:100A8000C402619ADD1400E00EE824F7C6067DF08A
:100A9000FFE9FC00803E2E0000742AA02E00B40066
:100AA000A30981C60679F01F606A009ABB9800E02E
:100AB00083C402619ADD1400E00EE8F3F6C6067DF9
:100AC000F0FFE9CB00E9E700F6C1027503EB6F9098
:100AD000C60622F002C6067DF040B101FF0EAE86CA
:100AE0007403EB0390B100833E9D860F7507833E30
:100AF0009B86FF743C8B36B0862B36AE86A168860B
:100B00008B1EA3868B16A58603D883D20083FE0294
:100B1000750503D883D2003B169D86721477063B79
```

```
:100B20001E9B86720CB1008936B086C706AE860061
:100B30000080F9007405C6061AF001EB7290E8B760
:100B4000FBC60679F01F606A009ABB9800E083C478
:100B500002619ADD1400E00EE855F6C6067DF0FF4E
:100B6000F6C1807409C70609810300EB2390F6C122
:100B7000407409C70609810500EB1590F6C1087499
:100B800009C706098107 00EB0790C706098109001C
:100B90009A0D0700E03D000074158BF8A1098188CB
:100BA00045098BF7A1FE80BB0A009AB90800E0C78F
:100BB0000622FF00801F61CF601EB800118ED88A08
:100BC0000E22F08A2E23F08A1630F08A3627F08A19
:100BD0001E7DF08A3E7EF0F6C7017453F6C108749C
:100BE0004EF6C301752AF6C3047444C6067DF004AC
:100BF00080267EF0FE80267EF0FB80262AF07FC7CE
:100C0000063EF00100C60622F00883E1F7EB2090D3
:100C100051B94200E2FE59C60624F063C7063EF011
:100C20000100C6067DF001C60622F008E91F01F7A3
:100C3000C148A07408F6C6C0750BEB7D90F6C6C01F
:100C4000740980CD2080C980EB6F90F6C1017503D7
:100C5000EB4490C60622F00183060887 0183160A3A
:100C60008700FF06BE86FF0EB486FF0EB086752392
:100C7000C60679F01F606A009ABB9800E083C40240
:100C8000610EE82BF5C6067DF0FFC706078102005E
:100C9000E99C00E9B800F6C1027413C60622F0020E
:100CA000FF0EAE867405C6061AF001E9A000F6C173
:100CB000047406E86707E99500C60679F01F606AC4
:100CC000009ABB9800E083C402618AC524A0750322
:100CD00080E17FA079F0A2CF86A07AF0A2D086A092
:100CE0007DF0A2D1869ADD1400E00EE8C2F4C606BB
:100CF0007DF0FF882ECC868816CE868836CD86F687
:100D0000C1807409C70607810400EB2390F6C14037
:100D10007409C70607810600EB1590F6C10874092F
:100D2000C70607810800EB0790C70607810A009AEB
:100D30000D0700E03D000074158BF8A10781884580
:100D4000098BF7A1FE80BB0C009AB90800E0C7062A
:100D500022FF00801F61CF601EB800118ED88A0E5E
:100D600022F08A2E23F08A1630F08A3627F08A1E67
:100D70007DF08A3E7EF0F6C7017453F6C108744ECA
:100D8000F6C301752AF6C3047444C6067DF00480D8
:100D9000267EF0FE80267EF0FB80262AF07FC706A6
:100DA0003EF00100C60622F00883E1F7EB209051E7
:100DB000B94200E2FE59C60624F063C7063EF001C0
:100DC00000C6067DF001C60622F008E9B601F7C1AB
:100DD00048A07408F6C6C0750BE91301F6C6C074C6
:100DE0000980CD2080C980E90501F6C1017503E9BC
:100DF000A000C60622F001A1218FA3A3868B161F97
:100E00008F8916A5868306088701 83160A8700FF47
:100E10000EB486FF06BE86F706CA864000742AFF17
:100E20000EC6860BC27509C70607811000EB4190FC
:100E3000FF0EB0867510833EB48600752DC7060779
:100E4000811100EB2B90E93B01FF069186FF0EC656
```

```
:100E500086FF0EB0867413833EC686007403E923B2
:100E600001C70607810F00EB0790C7060781020044
:100E7000C60679F01F9ADD1400E00EE832F3C606CC
:100E80007DF0FF606A009ABB9800E083C40261E9CC
:100E9000D300F6C102744DC60622F002A1A3868BD0
:100EA00016A5860306688683D2003B169D86720CC3
:100EB00077063B069B86720433C033D2A3218F8909
:100EC000161F8F833EC686017417FF0EAE867411FF
:100ED000F706CA86400074040BC27405C6061AF0F1
:100EE00001E9A000F6C1047406E83105E99500C6E1
:100EF0000679F01F606A009ABB9800E083C4026123
:100F00008AC524A0750380E17FA079F0A2CF86A0D6
:100F10007AF0A2D086A07DF0A2D1869ADD1400E0FE
:100F20000EE88CF2C6067DF0FF882ECC868816CEA1
:100F3000868836CD86F6C1807409C706078104000D
:100F4000EB2390F6C1407409C70607810600EB1534
:100F500090F6C1087409C70607810800EB0790C71F
:100F60000607810A009A0D0700E03D000074158B0A
:100F7000F8A107818845098BF7A1FE80BB0B009A79
:100F8000B90800E0C70622FF00801F61CF601EB8CD
:100F900000118ED88A0E22F08A2E23F08A1630F0A5
:100FA0008A3627F08A1E7DF08A3E7EF0F6C70174ED
:100FB0004DF6C1087448F6C3017524F6C304743EA7
:100FC000C6067DF00480267EF0FE80267EF0FB8043
:100FD000262AF07FC60622F00883E1F7EB20905125
:100FE000B94200E2FE59C60624F063C7063EF0018E
:100FF00000C6067DF001C60622F008E94501F7C1EA
:1010000048A07408F6C6C0750BE9A200F6C6C07405
:101010000980CD2080C980E99400F6C1017503EBF9
:101020004E90C60622F001A1218FA3A3868B161F26
:10103000 8F8916A586830608870183160A8700FF15
:101040000EB486FF0EB0867523C60679F01F606A5F
:10105000009ABB9800E083C402610EE852F1C60614
:101060007DF0FFC70607810200E9B800E9D400F669
:10107000C102743AC60622F002A1A3868B16A58689
:1010800003066886 83D2003B169D86720C77063B6A
:10109000069B86720433C033D2A3218F89161F8F1B
:1010A000FF0EAE867405C6061AF001E99500C60665
:1010B00079F01F606A009ABB9800E083C402618ADD
:1010C000C524A0750380E17FA079F0A2CF86A07A25
:1010D000F0A2D086A07DF0A2D1869ADD1400E00EA9
:1010E000E8CDF0C6067DF0FF882ECC868816CE8629
:1010F0008836CD86F6C1807409C70607810400EBE7
:101100002390F6C1407409C70607810600EB1590CD
:10111000F6C1087409C70607810800EB0790C706E7
:1011200007810A009A0D0700E03D000074158BF856
:10113000A107818845098BF7A1FE80BB0B009AB9F6
:101140000800E0C70622FF00801F61CF601EB800C4
:10115000118ED88A0E22F08A2E23F08A1630F08A59
:101160003627F0F6C1087403E98300F6C52074033E
:10117000EB7C90F6C1017503EB5C90F7C148A0745D
```

```
:1011800003EB6B90F6C6C0740980C98080CD20EB5C
:101190005D90C60622F00183060887018316 0A8740
:1011A00000FF06BE86FF0EB0867403E9D400C706B2
:1011B00007810200C60679F01F9ADD1400E00EE8F0
:1011C000EEEFC6067DF0FF606A009ABB9800E083F0
:1011D000C40261E98D00F6C1027413C60622F00252
:1011E000FF0EAE867405C6061AF001E99400F6C536
:1011F000A0750380E17FA079F0A2CF86A07AF0A24B
:10120000D086A07DF0A2D186606A009ABB9800E0EB
:1012100083C40261C60679F01F9ADD1400E00EE86F
:101220008EEFC6067DF0FF882ECC868816CE868887
:1012300036CD86F6C1807409C70607810400EB230A
:1012400090F6C1407409C70607810600EB1590F6B9
:10125000C1087409C70607810800EB0790C7060795
:10126000810A009A0D0700E03D000074158BE8A17B
:1012700007818845098BF7B80200BB0B009AB908B3
:1012800000E0C70622FF00801F61CF601EBA001178
:101290008EDA8A0E22F0320E1E8F8A2E23F08A16E4
:1012A00030F08A3627F08A1E7DF0F6C1087417F6F2
:1012B000C382750FF6067AF0407508C6067DF00801
:1012C000E95101E9DD00F6C520743580262 0F0F7EC
:1012D000802620F0FD800E1E8F08800E1E8F02A13A
:1012E000B0863B06AE867503E9B800E80AF4C60688
:1012F00079F01FC6062E0003C60623F020E914016C
:10130000F6C1017503E98300F7C140AC7403E992AB
:1013100000C60623F001C60622F00183060887 01F5
:1013200083160A8700FF06BE86FF0EB0867528600A
:101330006A009ABB9800E083C40261C60679F01F78
:101340009ADD1400E00EE867EEC6067DF0FFC706E2
:1013500009810200E99E00F6062E0000742A606AE8
:10136000009ABB9800E083C40261C60679F01F9A18
:10137000DD1400E00EE838EEC6067DF0FFA02E007A
:10138000B400A30981EB6E90E98900F6C1027413E1
:10139000C60622F002FF0EAE867405C6061AF001DC
:1013A000EB7290E852F3C60679F01F606A009ABBB0
:1013B0009800E083C402619ADD1400E00EE8F0EDCD
:1013C000C6067DF0FFF6C1807409C70609810300D7
:1013D000EB2390F6C1407409C70609810500EB159F
:1013E00090F6C1087409C70609810700EB0790C78A
:1013F00006098109009A0D0700E03D000074158B75
:10140000F8A109818845098BF7A1FE80BB0A009AE3
:10141000B90800E0C70622FF00801F61CF601EBA36
:1014200000118EDA8B36A088C60622F004B23FB8CF
:10143000FF7F8BBC93003BBCB80173238B8CAD0149
:1014400083C1043BF9721806B840008EC0268B4554
:101450000186C4268A550383C70489BC9300078884
:101460001617F0A218F0882619F01F61C3511EBA92
:1014700000118EDAB800008326DF86BFF706DF860C
:10148000010074 31F706CA8660007529833EB48670
:1014900000752283 3EED8600741B8B0E9186890EAB
:1014A000F186890EF386A1A386A3E986A1A586A36A
```

```
:1014B000EB86B801001F59C3C80400005657C70681
:1014C00036DA0C009A8C0300E08BF08B7C04FA83F4
:1014D0002628FFBFA1CA868946FCA128FF8946FEAF
:1014E000830E28FF21FB8BDF83FB0E771DD1E32EBC
:1014F000FFA73F1556E865005989362EDAC706362C
:10150000DA02009A8C0300E0EB0989362EDA9A7E23
:101510000700E0FA8B46FCA3CA868B46FEA328FF91
:10152000830E28FF40FBFF36AA88576A039AED43D3
:101530002BF283C4060BC075EDEB835F5EC9C3F469
:1015400014F414F4140A15F414F4140A150A150A00
:10155000150A150A150A150A150A151315C82400C7
:1015600000568B76048D46DC506A0AE8A90A83C4CB
:10157000048A4408B4008BD883FB067772D1E32E2B
:10158000FFA70716F706628640000740B6A0356E849
:10159000730883C404EB616A006A08EB10F7066203
:1015A00086400074046A04EBE56A006A4056E8C3AA
:1015B0000083C406EB42F706628640000740656E8D4
:1015C000DF0BEB2856E84003EB22F706628640006B
:1015D0007402EBEA56E85004EB12569AA0442BF240
:1015E000EB0A56E82F00EB0456E8750059EB09C6E4
:1015F000061B8485C64409008D46DC506A14E81633
:101600000A83C4045EC9C38415CA15B615DA159DCC
:1016100015E215E815558BEC568B7604C606048743
:1016200003EB34C706CA86020068E20056E8E90503
:1016300083C404807C09017518C706CA8604006843
:10164000E20056E8D30583C404807C0902750FEBE1
:1016500006807C09007407803E04870077C55E5DC4
:10166000C3558BEC68E2006A08FF7604E805008346
:10167000C4065DC3C80A000056578B7604C746F8F7
:101680000000803E4504007416C6062F00F08A4410
:1016900012A230006A02682F00E87FD783C4048357
:1016A0000ECA8601BFA3868A441488058A44158819
:1016B00045018A4416884502C64503008B44108BB9
:1016C000540EA30A87891608878B4412A32787A381
:1016D000B4866800D0684C09E8600A83C404C74433
:1016E000180000C7441C0000C606048703FAC6069B
:1016F00012F000837EF8007403E9BC00C60624F0F3
:1017000063837E06087513807E08E27506C646F779
:101710000FEB0F9A415600E0EB059A785600E088EF
:1017200046F78A46F7A225F0C60628F040837E06D3
:1017300008751E807E08E27506C646F71AEB259AE4
:10174000E15500E0C0E0048846F79A455400E0EB1C
:10175000109A025600E0C0E0048846F79AD454007C
:10176000E00846F78A46F7A226F0C60631F0008365
:101770007E06087514807E08E27507C60632F008FA
:10178000EB0F9A9F5500E0EB059AC05500E0A2329E
:10179000F0C60631F001837E06087514807E08E2EB
:1017A0007507C60632F040EB0F9AAF5600E0EB0526
:1017B0009ACD5600E0A232F0837E06087507C60671
:1017C00077F002EB05C60677F006C60620F0CBC61A
:1017D0000621F020C6067EF08A832628FFEFFB8DC7
```

```
:1017E00046FA50900EE86E8159884409807C0901C0
:1017F0007407C6440900E9F200C70636DA0C009AFD
:101800008C0300E08BF88B55048B45188944188AAB
:10181000450988440983FA0A755F893E2EDA9A7E63
:101820000700E0807C0902751C833EB48600740EBC
:10183000A1B486A32787C746F80000E9AAFEC644DC
:101840000901E9A600807C0903740C807C090574F9
:1018500006807C0907759B6A0156E854AC83C40472
:101860003D0200758DC70627870100C746F80100B5
:10187000E97AFEE97CFFE979FF83FA0D755B6A017D
:1018800057E82DAC83C4043D02007536893E2EDA3C
:101890009A7E0700E0C644090233FFEB16893E2E0C
:1018A000DA9A380700E08946FE837EFE0A7503E96E
:1018B00047FF47837EFEFF75E4A1B486A32787E92F
:1018C0002BFE5756E8A50883C404C6440900893E88
:1018D0002EDA9A7E0700E0EB12893E2EDA9A7E0716
:1018E00000E0C6440900C6061B8486FAE80B07C65A
:1018F0000621F000C6067EF000C60622F0C7C60626
:1019000077F002FB5F5EC9C3C80A000056578B76AA
:10191000048B44108B540E83C2FF15FFFF8946FED3
:101920008956FCC6060487038B7C128B44108B54AB
:101930000EA30A87891608878A44178846F88A44BE
:10194000188846F98A44198846FAC646FB008B4631
:10195000FA8B56F8A3A5868916A386A10A878B164B
:1019600008878944089540EA1A5868B16A3868901
:1019700046FA8956F88A46F88844178A46F9884410
:10198000188A46FA884419897C12C706CA86030059
:101990006A0056E8830283C4048946F6B90500BB91
:1019A000141A2E8B073B46F6740783C302E2F3EB4F
:1019B000542EFF670A8BC6050C00508BC6050B0022
:1019C000508BC6050A00508A440950900EE8D13B5E
:1019D00083C408C6440900EB378B46FE8B56FC3B9C
:1019E000060A8775063B1608877412C60604870325
:1019F000A10A878B1608878946FE8956FCA10887AD
:101A00002B440E2BF80BFF7403E94FFFC64409016A
:101A10005F5EC9C30A0014001E0028003200D319FB
:101A2000B519D919D319FD19C8160000056578B7668
:101A3000048B44108B540E83C2FF15FFFF8946FEB2
:101A40008956FC8B44108B540E8946F68956F48BCC
:101A500044128946EE8A44178846F88A4418884614
:101A6000F98A44198846FAC646FB008B46FA8B561B
:101A7000F88946F28956F0C60604870333FF8B4681
:101A8000F68B56F403D7150000894410895 40E8B49
:101A9000C7F72E68868B56F28B5EF003D883D20090
:101AA0008956FA895EF88A46F88844178A46F98882
:101AB00044188A46FA8844198B46EE2BC78944128B
:101AC000C706CA8603006A0056E84D0183C404892C
:101AD00046ECB90500BB051C2E8B073B46EC740792
:101AE00083C302E2F3EB562EFF670A8BC6050C0098
:101AF000508BC6050B00508BC6050A00508A44095E
:101B000050900EE89B3A83C408C6440900E9DD0002
```

```
:101B10008B46FE8B56FC3B060A8775063B160887EC
:101B20007412C606048703A10A878B1608878946A4
:101B3000FE8956FCA108872B440E894412837C122F
:101B4000007503E998008B46F68B56F403D7150011
:101B5000089441089540E8BC7F72E68868B56F285
:101B60008B5EF003D883D2008956FA895EF88A46E4
:101B7000F88844178A46F98844188A46FA8844192E
:101B8000C706CA8605006A0056E88D0083C404892A
:101B900046EAB90500BBF11B2E8B073B46EA7407EA
:101BA00083C302E2F3EB372EFF670AE93DFFE93A10
:101BB000FF8B46FE8B56FC3B060A8775063B1608D4
:101BC000877412C606048703A10A878B16088789C3
:101BD00046FE8956FCA108872B440E894412037CDB
:101BE000123B7EEE7403E995FEC64409015F5EC9AF
:101BF000C30A0014001E00280032000AE1BAE1BB149
:101C00001BAE1BDE1B0A0014001E00280032000958
:101C10001BEB1A101B091B3D1BC808000056578BF5
:101C20007604803E4504007423807C08027507C654
:101C3000062F00F1EB05C6062F00F28A4412A230EF
:101C4000006A02682F00E8D2D183C404BFA3868A49
:101C5000441788058A44188845018A441988450232
:101C6000C64503008B44108B540EA30A87891608BF
:101C7000878B4412A327876800D0688D0FE8BB04C8
:101C800083C404C60612F000807E06E27506C646CE
:101C9000F91AEB139A2D5700E0C0E0048846F99A30
:101CA000D45400E00846F98A46F9A226F0C6062474
:101CB000F063C60628F040C60677F00AF706CA8623
:101CC0000200740FC606D0F008C606DCF003800ED2
:101CD00012F002C7441C0000FA802603F17F6A005C
:101CE0009ABB9800E059900EE8C5E4C60620F0CFF4
:101CF000C60621F0A0C6067EF08A832628FFEFFBE9
:101D00008D46FA50900EE8E57D598844093C0174EF
:101D1000188A46FA88440A8A46FB88440B8A46FC9D
:101D200088440CBE2800E9C200C70636DA0C009AC7
:101D30008C0300E08BF88B55048A4509884409839D
:101D4000FA0B7558893E2EDA9A7E0700E080263914
:101D5000F0FF6810279A9D9400E059C7062EDA001C
:101D6000009A380700E08946FE837EFE0D74BA8033
:101D70007C09027505BE3200EB71807C0904740C8D
:101D80007C09067406807C0908755756E8DFA830
:101D9000593D12007552EB24EB4EEB4783FA0D755B
:101DA00039802639F0FF57E8C5A8593D1200751152
:101DB00057681E009A109600E083C404BE1E00EB14
:101DC0002A5756E8A60383C40457681E009A109643
:101DD00000E083C404BE0A00EB11893E2EDA9A7E2D
:101DE0000700E0C6061B8487BE1400FAE80B02C693
:101DF00006D0F009C606DCF002802612F0FDFB8B4F
:101E0000C65F5EC9C3C80E000056578B7E04803E75
:101E10004504007416C6062F00F08A4512A2300051
:101E20006A02682F00E8F3CF83C404830ECA8601D8
:101E30008B45128946FC802603F17F6A009ABB9885
```

```
:101E400000E059900EE868E3C745180000C7451C3C
:101E500000008A451AA204878B45108B550E035546
:101E6000121500002B56FC1D0000A30A87891608D6
:101E7000878B46FCA32787BEA3868A451488048ADD
:101E800045158844018A4516884402C64403008BE0
:101E90001E648633C98B45122B46FC33D29AB80098
:101EA0004CF80106A3861116A5868D46F3508D4683
:101EB000F4506A00900EE8CF7D83C40688450980FF
:101EC0007D09017403E9D800FF7606E8030159A1F2
:101ED000B0868946F89A280900E08BF00BC074F5AB
:101EE0008B44048946FE8B44188945188A44098826
:101EF000450956681E009A109600E083C404837E4C
:101F0000FE0A7540807D09027503E99900807D090C
:101F100003740F807D09057409807D09077403EB44
:101F20007F908B46F83B06B086740CC60604870388
:101F30002B06B0862946FC57E8FDB5593D020075D1
:101F40005FE914FF837EFE0D755156E8EAB5593DF1
:101F500002007530893 62EDA9A7E0700E0C6450900
:101F60000233F6EB1689362EDA9A380700E08946F6
:101F7000FA837EFA0A7503E95BFF46837EFAFF75F2
:101F8000E4E9D4FE5657E8E30183C404C6450900DA
:101F900089362EDA9A7E0700E0EB05C6061B84869A
:101FA000C6450900EB04C6450901FAE84C00900E4D
:101FB000E8FDE1C6067EF000C60620F100C6062157
:101FC000F100C60622F1FFC60623F1FFFB5F5EC9E2
:101FD000C3558BEC6800D0682E77E85E0183C4049B
:101FE000FF36A586FF36A386FF36AA888A460450A8
:101FF000900EE83A4883C4085DC31E06B800118EEF
:10200000D8B800008EC0A1248F26A33000A1268F4F
:1020100026A33200071FC3558BEC568B7606807EB5
:10202000040A7403E98B00A10A878B160887894488
:1020300028914A1CA86894404A1A5868B16A386A9
:10204000894408895406A1278789440AA1B0868952
:1020500044 0CA1B48689440EA1AE86894410A00424
:10206000878844 12A118878B1616878944158954CE
:1020700013A01A87B400894417A0CC86884419A0FD
:10208000CE8688441AA0CD8688441BA0CF8688447B
:102090001CA0D08688441DA0AB8688441EA0AC86B8
:1020A00088441FA0AD86884420A1F586894421E993
:1020B00086008B44028B14A30A87891608878B44F9
:1020C00004A3CA868B44088B5406A3A5868916A34D
:1020D000868B440AA327878B440CA3B0868B440EBF
:1020E000A3B4868B4410A3AE868A4412A204878BC5
:1020F00044158B5413A31887891616878A4417A290
:10210000 1A878A4419A2CC868A441AA2CE868A44A7
:10211000 1BA2CD868A441CA2CF868A441DA2D086EB
:10212000 8A441EA2AB868A441FA2AC868A4420A29F
:10213000AD868B4421A3F5865E5DC3558BECFA1EFC
:1021400006B800118ED8B800008EC026A13000A3BA
:10215000248F8B460426A3300026A13200A3268FAD
:10216000 8B460626A33200071FFB5DC3558BEC563A
```

```
:10217000578B7604807C090075178B7E068A450E86
:1021800088440A8A450F88440B8A451088440CEB22
:102190000CC6440A04C6440B44C6440C9E5F5E5DF4
:1021A000C3558BEC568B7604807C08027507C606F7
:1021B0002F00F1EB05C6062F00F28A4412A2300070
:1021C0006A02682F00E853CC83C404830ECA8602D7
:1021D0008326CA86FB56E81F0059807C08027415C6
:1021E000807C0901750F8326CA86FD830ECA86048A
:1021F00056E80400595E5DC3C80A000056578B7E3E
:1022000004837D12007507C6450901E9B202800EFC
:10221000058701BEA3868A451788048A4518884425
:10222000018A4519884402C64403008B45108B552A
:102230000EA30A87891608878B4512A3B086A3B41C
:1022400086A327876800D068CC8DE8EEFE83C4049F
:10225000C60612F000800E77F0028B45108B550EEB
:1022600003551215000002B16B0861D0000A30A8727
:1022700089160887A1B086A32787BEA3868A45173B
:1022800088048A45188844018A4519884402C6444E
:1022900003008B1E648633C98B45122B06B0863330
:1022A000D29AB8004CF80106A3861116A5868D4671
:1022B000F7508D46F8506A00900EE8CB7983C4063B
:1022C0003D010074128A46F888450A8A46F9884515
:1022D0000B8A46FA88450CC60624F141800E11F19E
:1022E000109A2D5700E09AD45400E0F706CA8602EF
:1022F0000074086A119A330F00E059813EB086FFDE
:1023000007308A1B086A3AE86EB06C706AE86FFB3
:1023100000A1B0868946FC900EE8246C9A2809003A
:10232000E08BF00BC074F58B54048B441489451476
:102330008A440988450983FA0B7403E9C8006810C8
:10234000279A9D9400E059802639F0FFC7062EDABF
:1023500000009A380700E08946FE837EFE0D750E68
:1023600056681E009A109600E083C404EBAE807D90
:1023700009027513C645090156681E009A10960099
:10238000E083C404E9FA00807D0904740C807D09AF
:1023900006740680 7D09087549C6451B008B46FCFE
:1023A0003B06B0867405C6060487038A450988453E
:1023B0000D57E805B2593D12007503E997FE8BC72A
:1023C000050C00508BC7050B00508BC7050A005049
:1023D0008A450950900EE8C83183C408C6450900F3
:1023E000EB9656681E009A109600E083C404C6451A
:1023F0000A04C6450B44C6450C90C6061B8490C60D
:10240000450900EB7C9083FA0D75618BD6802639E7
:10241000F0FF807D0900743DC6067DF0FF8BDA8AEF
:10242000470CB4008B16AE862BD00116B086A1B037
:1024300086050A003B451272088B4512A3B086EB55
:10244000058306B0860A56681E009A109600E0833F
:10245000C404E900FE8BDA8A470E88450A8A470FD2
:1024600088450B8A471088450CE90CFF56681E000A
:102470009A109600E083C404C6450900C6061B8472
:1024800087FAE875FB830E28FF10C60620F000C609
:10249000621F000C60620F100C60621F100C6069E
```

```
:1024A0007EF000C6067DF0FFC60622F0C7C60622F3
:1024B000F1866A0F9A330F00E05980260587FEFBEC
:1024C0005F5EC9C3C8080000565733FF8B362787A5
:1024D0008BC63D0A007603BE0A00A1BE86403BC6FD
:1024E00073058B36BE864683FE0176578BC6480140
:1024F00006B4868BC6482906BE868BC648290608C0
:1025000087831E0A8700F706CA860200751C8BDEC9
:1025100033C983EB0183D900A1688633D29AB8000E
:102520004CF82906A3861916A586F706CA86020066
:102530007511F706CA8640007509FA8BC648010670
:10254000C686FB833EBE86007619F706CA86020061
:102550007511F706CA8640007509FAA1BE86010604
:102560009186FBC746FC00008D46FB508D46F95016
:102570008D46FF508D46FA50FF360A87FF360887 92
:10258000E8DC0083C40C3D01007503EB7C90803EC9
:102590001B84007550807EFA037406807EF99E7558
:1025A000449A815500E0A880743BF706CA8601086A
:1025B000753383FF03730A900EE8BEC33D010074B8
:1025C0001C8B1EAA88804F4E016A006A326A046A18
:1025D0000253E84F1983C40A33C0EB7F9047830E40
:1025E000CA8620EB658A46F9508A46FF508A46FA29
:1025F000506A02FF360A87FF360887FF36AA88909E
:102600000EE84C1883C40EEBCFFF46FC8306088708
:10261000183160A8700FF0EB48633FFF706CA86C9
:1026200002007512F706CA864000750AFAFF069185
:1026300086FF0EC686FBF706CA860200750CA168E7
:10264000860106A3868316A586003976FC7303E906
:1026500016FFC706BE860000B801005F5EC9C3C88A
:10266000160000 56579A0D0700E08BF00BF6750523
:1026700033C0E93B01C7441201008B46068B560468
:10268000894410895 40EF706CA8602007412C644A3
:10269000170 0C6441800C6441900C6440802EB18C7
:1026A000BFA3868A058844178A45018844188A454D
:1026B00002884419C6440801A012F08846EBA10A1A
:1026C000878B1608878946F28956F0A1B08689461D
:1026D000FEA1AE868946FCA1B4868946FAA1278769
:1026E0008946F8A00487B4008946F6A1A5868B1612
:1026F000A3868946EE8956ECA1CA868946F4830EE4
:1027000028FF40FF36AA886A03FF36FE809AED4311
:102710002BF283C4063D0100750433FFEB3EC70670
:102720002EDA0300893630DAC70636DA03009A8CCF
:10273000300E08BF08A440A8B5E0888078A440B0A
:10274008B5E0A88078A440C8B5E0C88078A440DCE
:10275008B5E0E88078A4409B4008BF8832628FF15
:10276000BF89362EDA9A7E0700E08A46EBA212F085
:102770008B46F28B56F0A30A87891608878B46FE94
:10278000A3B0868B46FCA3AE868B46FAA3B4868B99
:1027900046F8A327878A46F6A204878B46EE8B5617
:1027A000ECA3A5868916A3868B46F4A3CA868BC79D
:1027B0005F5EC9C3C8040000A1CA868946FC830EB7
:1027C000CA86028326CA86FBFF760EFF760CFF764A
```

```
:1027D0000AFF7608FF7606FF7604E882FE83C40CC3
:1027E0008946FE8B46FCA3CA868B46FEC9C3C80435
:1027F00000005657C70636DA0C009A8C0300E08BAF
:10280000F8837D04007410C6061B848B893E2EDA83
:102810009A7E0700E0EBDD832628FFBF8B750B89CE
:1028200036AA88570EE81A0190593D01007403E951
:10283000B7008A440BB4003D2F00745A3D3E00742B
:10284000073DE800740FEB54E8370557E899055940
:10285000E85105EB4C8BC60502008946FC8B5EFCFB
:102860008A4703B400251C008946FEB90600BB2A2E
:10287000292E8B073B46FE740783C302E2F3EB214C
:102880002EFF670CEB16EB1457E85C05598026A762
:10289000F0FEEB0DEBB257E8A90CEB0457E8480546
:1028A00059803E1B8400740EC6441402A01B845041
:1028B0009A6A1E00E059F706CA862000742B803EF3
:1028C0001B840075249A1F9700E03D01007415C613
:1028D000441603C6441719C644140280644EDF9A96
:1028E000BD1C00E08326CA86DF830E28FF40566A9F
:1028F000006A019AED432BF283C4060BC075EF8981
:102900003E2EDAC70636DA02009A8C0300E08064B5
:102910002CAFC7062EDAFFFFC70636DA0F009A8CF7
:1029200003300E0E9CEFE5F5EC9C3000004000800BA
:10293000100014001800862888289428862888828E3
:10294000942BC804000056578B7E068B750BC6066C
:10295000CD8600C606CC8600C606CE8600C606CF4B
:1029600086000C606D08600C606D18600C6450D0084
:10297000C745180000C64414008B4248945120B37
:10298000C07503E95E028B44228B5420894510896F
:10299000550EA164868945166A0050FF369D86FF54
:1029A000369B869A14004CF8A39186A395868B4497
:1029B000228B5420A30A8789160887A300878916CB
:1029C000FE868B4424A3B086A3B286A3B486A32735
:1029D00087C706BE860000C60612F000807C0B2F5B
:1029E0007503E98F009A635500E088451B9A2356CA
:1029F00000E088451A802612F0F79AAF5600E0A250
:102A00002E8F9A9F5500E0A22F8F807C0B3E750F72
:102A1000F6440A027402EB2EC6062C8F02EB2C80C1
:102A20007C0BE8750AF6440A027414EB19EB10F6F5
:102A3000451B01750A8A451BB400A908007507C625
:102A4000062C8F01EB05C6062C8F009A635500E01B
:102A5000A8107405800E12F0019A455400E0A233CC
:102A60008F9AE15500E0C0E0040806338F9A415682
:102A700000E0EB609A815500E088451B9AEB560018
:102A8000E088451A802612F0F79ACD5600E0A22E73
:102A90008F9AC05500E0A22F8FF6451B01750A8A58
:102AA000451BB400A908007507C6062C8F01EB056D
:102AB000C6062C8F009A025600E0C0E0048846FF4C
:102AC0009AD45400E0A2338F8A46FF0806338F9AC7
:102AD000785600E0A2328F8A440BB4003D2F007478
:102AE0006F3D3E0074073DE800740DEB68817D1674
:102AF00000027555EB4CEB5183C6028A4403B400C7
```

```
:102B0000251C008946FCB90400BBEA2B2E8B073B31
:102B100046FC740783C302E2F3EB3A2EFF6708EB2F
:102B20003483451604800EA7F001EB298A4408B4CB
:102B300000A902007505C6062C8F02817D160002D1
:102B40007507C745166202EB0CC74516B004EB05C6
:102B5000830ECA86408B4516A368869A415400E0CE
:102B6000B400A3BA866A00FF366886A19D868B16DC
:102B70009B8683C20115000050529A14004CF8A3A2
:102B8000BC863B06B4867309A1BA86F72EBC86EBD9
:102B900007A1B486F72EBA8605FF00C1E808A3B6E0
:102BA00086A1B4862B06B686A3B886C60631F00188
:102BB000A02C8FB4000BC074193D010074073D02B6
:102BC000007417EB1AC606308F00A0308FA232F0C7
:102BD000ER0DA02E8FA2308FEBF0800E12F008B814
:102BE0000100EB0233C05F5EC9CB04000800140093
:102BF0001300212B2C2B212B2C2B558BECFA1EB8DB
:102C000000008ED8C70630002A03C706320000D065
:102C10001F8A4606506A08E8480083C4048026528A
:102C2000F0FD6A08E80A0F596A08E8920E59FB5D40
:102C3000CBFA1EB800008ED8C70630002A03C7069C
:102C4000320000D01F6A016A40E8160083C4048085
:102C50002652F0FD6A40E8D80E596A40E8600E59E5
:102C6000FBC3558BECC60679F01FC60622F0FFC6E3
:102C7000067DF0FFC6067EF08AA039F0A22D8F8374
:102C80007E04087514C60677F002807E0600750E75
:102C9000C60610F020EB0CEB05C60677F006C6065C
:102CA00010F028A02D8FA239F05DC3565733FFBE18
:102CB0007017FAC60679F01F9ADD1400E0832666C5
:102CC000FFDFEB1BF70666FF20007413832666FF09
:102CD000DF478BC73BC6720733F6802652F0FDF6FE
:102CE0000652F00274040BF675DAF706CA86000481
:102CF00074468126CA86FFFBA1C2860106FE868332
:102D000016008700A1C28601069186A1C28601062F
:102D10009386A1C2862906B286A1C2862906C086EC
:102D20008B1EC28633C9A1688633D29AB8004CF88C
:102D30000106A7861116A986802603F17F6A009AEC
:102D4000BB9800E059900EE866D4C6067EF000C637
:102D5000067DF0FF800E10F104C60620F100C606C5
:102D600021F100C60622F1FFC60623F1FF800E24E2
:102D7000F1406A00E8480D596A00E8B40D59FB5F5C
:102D80005EC3800EA7F001800EA8F001800EA9F0AE
:102D900001F706628640007505800EAAF001C6069E
:102DA0003FF010C38026A7F0FE8026A8F0FE802604
:102DB000A9F0FEF706628640007505802 6AAF0FE9F
:102DC000C6063FF000802612F0F7C3B8FFFF2B06BF
:102DD00027873B06ED867308C7062787FFFFEB07AB
:102DE000A1ED8601062787CBC806000056578B7ECB
:102DF00004C646FE008B450B8946FCC646FF008B89
:102E00005EFC804F2C108126CA86FFFBC706A58674
:102E10000000C706A3860000C706A9860000C706F3
:102E2000A7860000C706C0860000C706C48600004B
```

```
:102E3000C706C2860000C6061681018A451AA2048A
:102E400087A02C8F500EE8B1FD59C706DF86000021
:102E5000A02883B400A9010075148B5EFC807F0B51
:102E6000087406807F0B287505900EE866D3830EE4
:102E7000DF8640F706DF86010074168A46FEB4003E
:102E80000BC0750D8A46FFB4000BC075040EE83AFE
:102E9000FF8A46FE500EE8750990593D01007417EF
:102EA000E808FEC7062EDAFFFFC70636DA0F009ADB
:102EB0008C0300E0E90006C70636DA0C009A8C03A2
:102EC00000E08BF08A451B88441B8B45168944160D
:102ED000837C040A7403E9EF02807C090075298B66
:102EE00044180106C0868A451AA2048789362EDA5C
:102EF0009A7E0700E0F706CA86000475BA0EE8CF8E
:102F000009900BC074B1EB98807C09027403E9EF5F
:102F100000807EFF007506807EFE007418FF76FC40
:102F200057E8970583C4043C01750A8B44180106D1
:102F3000C086E92305C646FF00C646FE008B44183E
:102F40000106C0868A451AA2048789362EDA9A7E3F
:102F50000700E0F706CA86000475120EE8710990B2
:102F60000BC07403E939FF810ECA860004833E91C9
:102F700086007503EB7E90833EB486007409A1B48D
:102F800086A32787E9E7FE833EED86007503E926E1
:102F9000FFF706DF8601007503E91BFFF706DF86F2
:102FA00080007403E910FFF706CA8620007403E965
:102FB00005FF810EDF868200A1ED86A32787A1E3AE
:102FC000868B16E186A30A8789160887A1E3868B7C
:102FD00016E186A300878916FE868A46FF500EE812
:102FE0002C0890593D01007503E9CBFE8326DF864E
:102FF000FEE9C3FE833EB486007503E9B9FEEB30FB
:10300000807C090175338B44180106C0868A451AF5
:10301000A2048789362EDA9A7E0700E0F706CA8670
:1030200000004750C0EE8A808900BC07403E970FE4C
:10303000810ECA860010E97EFE807C0905740F802F
:103040007C09037409807C09077403E9F700802672
:1030500007EF0FA803E048700753C807EFE00753667
:103060008B5EFC8A470B508A451B50900EE81D3B37
:1030700083C4043C01751F89362EDA9A7E0700E06E
:10308000C606048714C70627870100C646FF00C688
:1030900046FE01E9D8FD8A46FE5056E8139483C4E3
:1030A000043D0200751B89362EDA9A7E0700E0C7C0
:1030B00006278701008007EFE007403E9B0FDE9B4B5
:1030C00000803E1688007566F706CA860100755EA8
:1030D000807C090C7512807C090D750C807C090BB5
:1030E0007506807C090E7446817D16000274078186
:1030F0007D1600047538E8D5633D010075308936CA
:10310002EDA9A7E0700E08A451AA20487F706CADB
:1031100860004750C0EE8B707900BC07403E97FB6
:10312000FD833EB486007503E98CFDE9A401F645F4
:10313001B207404FF06BE86A1BE860106C086560B
:10314006A01E91603807C091275558936 2EDA9AD0
:10315007E0700E080267EF0FA833EB48600750389
```

```
:10316000E93DFD803E04870074120EE8410F90C7D0
:1031700006278701 00C646FF01E9F2FCE82CFB6A3E
:10318000006A116A036A02FF360A87FF360887FF62
:1031900076FC0EE8BA0C9083C40EE906FDE900FD4A
:1031A000807C0909751580267EF0FAE8FDFAFF7625
:1031B000FC56E8A80D83C404E9F00280267EF0FAEC
:1031C000C6061B848AE9E002837C04087403E914C0
:1031D000028126CA86FFFB807C090B7403E99901F2
:1031E000802652F0FDC6061681018B1EAA88804FEC
:1031F0002C4089362EDA9A7E0700E0C6062F00237F
:103200006A01682F00E813BC83C404A1C2860106CA
:10321000FE868316008700A1C2862906B286A1C257
:10322000862906C086813E68860002750EA1C28688
:1032300033D2B1099AD2004CF8EB108B1EC2863300
:10324000C9A1688633D29AB8004CF80106A7861146
:1032500016A986FAA1C2860106 9186A1C286010638
:103260009386F706DF860100740EA1C2860106F17F
:1032700086A1F1860106F386FB833EB28600745F69
:10328000F706CA86800074258126CA867FFF6A00F9
:10329000E89E08599AA82200E08846FB0AC0740DEF
:1032A000FF76FC50E85A0D83C404E9F3FBFA6A0880
:1032B000E87E0859FB0EE81706900BC07403E9DF9F
:1032C000FBF706CA8600107503E9EBFB8126CA8668
:1032D000FFEFA1B486A32787C646FF00E98FFB83D3
:1032E0003EED86007460F706DF8601007458F7062D
:1032F000DF8680007550F706CA8620007548810E6B
:10330000DF868200A1ED86A32787A1E3868B16E1E5
:1033100086A30A8789160887A1E3868B16E186A310
:1033200000878916FE86A19186A3F186A19186A3C6
:10333000F3868A46FF500EE8D40490593D0100748C
:10334000058326DF86FEF706DF8601007425F70673
:10335000CA862000751D9A7F7400E08946FA3D17E1
:10336000007503E951FB837EFA187503E9FFFAC67D
:10337000450D16E835F9E93E01807C090C7406809C
:103380007C090D753BFF76FC8A440A50E8720C8379
:10339000C404807C0A0E752D89362EDA9A7E0700C9
:1033A000E0C6062F00266A01682F00E86DBA83C4C4
:1033B000040EE81B05900BC07503E9FAFAE9E0FA80
:1033C000C6061B848AE8E3F8C7062EDAFFFFC706A5
:1033D00036DA0F009A8C0300E089362EDA9A7E07DF
:1033E00000E0E9D200837C040D7403E9B500807C21
:1033F000090174268BFE8A4510508A450F508A4574
:103400000E506A02FF360A87FF360887FF76FC0EE9
:10341000E83D0A9083C40EE98E00FF76FC9A6A9715
:1034200000E0590BC075156A02FF360A87FF36089F
:1034300087FF76FCE88C0A83C408EB6C8A46FE5052
:1034400056E86D9083C4043D0200750CC7062787BB
:10345000 0100C646FF01EB0B566A00E83A0783C439
:1034600004EB5489362EDA9A7E0700E0833EB48658
:10347000007503E941FAF706CA8600107403E936BD
:10348000FA33F633D2EB1489362EDA9A380700E095
```

```
:103490008BD083FA0A7503E91DFA4683FAFF75E7B4
:1034A000E9CBF9C6061B848BE800F889362EDA9A38
:1034B0007E0700E0E9ECF95F5EC9C3558BEC565717
:1034C0008B76048B7E06803E1688007444807D0BCC
:1034D000E8743EF706CA8611007536817C16000234
:1034E0007407817C1600047528F6441B40742283FF
:1034F0002E088701831E0A870057E8E499593D0189
:1035000000740 4B001EB3883060887 0183160A872C
:1035100000F6441B0474266A006A186A016A02A154
:103520000A878B16088783EA011D00005052570E48
:10353000E81D099083C40EF6441B0275C6B0005FF7
:103540005E5DC3C806000056578B7E04C646FF006A
:103550008B450B8946FCC646FB00C6450D00C706D9
:10356000 9186FFFFC706A5860000C706A38 6000058
:10357000C706C0860000C706C4860000C706C2860C
:103580000000C706B686FFFFE8A6F6C706DF86007E
:10359000008126CA86DFFB8A46FF500EE86F029044
:1035A000593D01007417E802F7C7062EDAFFFFC77E
:1035B0000636DA0F009A8C0300E0E94D02833EB430
:1035C00086007507C6061B8484EBDBC70636DA0C5B
:1035D000009A8C0300E08BF0837C040A7403E96298
:1035E00001807C0900750B89362EDA9A7E0700E08F
:1035F000EBD9807C0902756489362EDA9A7E070041
:10360000E0833EB486007506E8A0F6E9FC01807E02
:10361000FB007506807EFF0074B1F6451B04743311
:103620006A006A176A016A02A10A878B16088783F3
:10363000EA011D00005052FF76FC0EE8120890834C
:10364000C40EF6451B027403E95BFFC646FB00C6C9
:1036500046FF00A1B486A32787E935FF807C0905D2
:10366000740C807C09037406807C090775718A4696
:10367000FF5056E83B8E83C4043D02007516893620
:103680002EDA9A7E0700E0C70627870100C646FBB0
:1036900001E9FDFE803E04870075348A46FFB400D0
:1036A0000BC0752BF6451B087525F6451B01751FCC
:1036B00089362EDA9A7E0700E0C606048714C7060C
:1036C00027870100C646FB00C646FF01E9C2FEE8A7
:1036D000D9F5FF76FC56E8840883C404E91F01800D
:1036E0007C0912755089362EDA9A7E0700E0833EF7
:1036F000B486007503E9AEFE803E04870074120EA6
:10370000E8AC0990C646FB01C70627870100E9809F
:10371000FEE897F56A006A116A036A02FF360A87B3
:10372000FF360887FF76FC0EE825079083C40EE974
:1037300077FEE971FE807C09097494C6061B848EAD
:10374000E9B800837C040D7403E9AA00807C0901B8
:1037500074268BFE8A4510508A450F508A450E50BC
:103760006A02FF360A87FF360887FF76FC0EE8DF1D
:1037700069083C40EE98300FF76FC9A6A9700E006
:10378000590BC075156A02FF360A87FF360887FF96
:1037900076FCE82E0783C408EB618A46FF5056E8A2
:1037A0000F8D83C4043D0200750CC70627870100F6
:1037B000C646FB01EB0B566A00E8DC0383C404EB4E
```

```
:1037C0004989362EDA9A7E0700E0833EB48600757A
:1037D00003E9F7FD33F633D2EB1489362EDA9A3843
:1037E0000700E08BD083FA0A7503E9DEFD4683FA11
:1037F000FF75E7E99BFDC6061B848DE8ADF48936AD
:103800002EDA9A7E0700E0E99FFD5F5EC9C3C80417
:1038100000000FA802603F17F6A009ABB9800E05905
:10382000C6067DF0FFC60623F0FF900EE881C9C6EC
:1038300062F08FC60621F020C6067EF08A832679
:1038400028FFEF8A4606B4000BC07531C60624F087
:1038500063A0328FA225F0A0338FA226F0C60628DF
:10386000F040C60631F001A0308FA232F0C606311A
:10387000F000A02F8FA232F0C606028700FBA191B4
:1038800086A39386A1F186A3F386A02C8F506A08A5
:10389000E8CFF383C4048D46FC50900EE8B760591E
:1038A0003D010074268A46FE508A46FD508A46FC39
:1038B000506A02FF360A87FF360887FF36AA880E4D
:1038C000E88D059083C40E33C0EB03B80100C9CB6B
:1038D000C8040000565733F68B3EAA88833EC08644
:1038E0000075098126CA86FFFBE9CB01A0FC82B4E2
:1038F00000C1E0088A16FD82B60003C28BD00BD24D
:1039000075048B16BC86A1C4860306C0863BC272B2
:10391000408BC22B06C486A3C286813E6886000205
:10392000750B33D2B1099AD2004CF8EB108B1EC242
:103930008633C9A1688633D29AB8004CF88956FEFE
:103940008946FCC706C4860000810ECA868000EB4B
:1039500039813E68860002750EA1C08633D2B10956
:103960009AD2004CF8EB108B1EC08633C9A1688632
:1039700033D29AB8004CF88956FE8946FCA1C0861D
:10398000A3C286A1C0860106C486A1A9868B16A7FC
:1039900060356FC1346FE3B069D86727075063BF9
:1039A000169B867268A19D868B169B8683C2011525
:1039B00000003B06A98675143B16A786750EC70640
:1039C000A9860000C706A7860000EB41A19D868B53
:1039D000169B8683C2011500002B16A7861B06A91D
:1039E000868946FE8956FC813E68860002750A502B
:1039F00052E8130783C404EB116A00FF366886FFA0
:103A000076FEFF76FC9A14004CF8A3C286FF76FE81
:103A1000FF76FCFF36A986FF36A786E8830383C4BA
:103A2000086A00E80B01599A322300E08BF00BC0C2
:103A300075708A450FB4008BD88A87A288A243F09C
:103A4000FA6A08E8EB0059FBC60642F012C60652B5
:103A5000F008800E52F002810ECA8600046A00FF50
:103A6000366886FF36A986FF36A7869A14004CF87A
:103A70008BD0C6062F0022C1E808A230008816317C
:103A8000006A00FF366886FF76FEFF76FC9A140017
:103A90004CF8A232006A04682F00E87EB383C404A5
:103AA000EB156A0257E8850383C404FAC60647F09B
:103AB00013C60649F011FB0BF68BC65F5EC9CBC877
:103AC0000200008B46048946FEB90400BB213B2E50
:103AD0008B073B46FE740783C302E2F3EB412EFFE4
:103AE00067081EB800008ED8C7063400601FC706DE
```

```
:103AF000360000E01FEB281EB800008ED8C7063441
:103B000000006EC706360000E01FEB131EB8000071
:103B10008ED8C7063400EE6EC706360000E01FC917
:103B2000C3000004000800400OE23A0C3BF73AF7FB
:103B30003AC80200008B56048956FEB90400BB88BF
:103B40003B2E8B073B46FE740783C302E2F3EB2850
:103B50002EFF6708C60647F001C60649F001EB18BC
:103B6000C60647F013EB0CC60647F003EBEBC606A0
:103B700047F003C60649F0110BD2740AC60646F098
:103B80003DC60648E0FFC9C300000400080040001D
:103B9000543B6E3B603B673B558BEC568B7606E89F
:103BA00009F1833EC086007403E82E00837E040082
:103BB000740BFF36AA8856E8A30383C40489362E03
:103BC000DA9A7E0700E0C7062EDAFFFFC70636DA6C
:103BD0000F009A8C0300E05E5DC3C808000005657D2
:103BE000A1AA888946FEC746FC0000BF7017833E25
:103BF000C086007503E99F01A0FC82B400C1E00803
:103C00008A16FD82B60003C28BF00BF67503BE80E8
:103C1000003936C486723B813E68860002750D8B82
:103C2000C633D2B1099AD2004CF8EB0E8BDE33C901
:103C3000A1688633D29AB8004CF88956FA8946F8BA
:103C40008936C286C706C4860000810ECA868000F7
:103C5000EB39813E68860002750EA1C08633D2B171
:103C6000099AD2004CF8EB108B1EC08633C9A168AC
:103C70008633D29AB8004CF88956FA8946F8A1C022
:103C800086A3C286A1C0860106C486A1A9868B161A
:103C9000A7860356F81346FA3B069D867303EB7E10
:103CA0009075063B169B867275A19D868B169B862A
:103CB00083C2011500003B06A98675143B16A78632
:103CC000750EC706A9860000C706A7860000EB4E42
:103CD000A19D868B169B8683C2011500002B16A71B
:103CE000861B06A9868946FA8956F8813E688600B1
:103CF00002750A5052E80F0483C404EB116A00FFF6
:103D0000366886FF76FAFF76F89A14004CF88B1620
:103D1000C08603D08916C0868126CA867FFFFF76BB
:103D2000FAFF76F8FF36A986FF36A786E872008389
:103D3000C4089A322300E00BC075628B5EFE8A478E
:103D40000FB4008BD88A87A288A243F0C60646F03B
:103D50003FC60648F0FFC60642F012C60652F008FB
:103D6000800E52F002832666FFDFEB1EF70666FF29
:103D700020007416832666FFDFFF46FC8B46FC3B63
:103D8000C7720733FF802652F0FDF60652F0027428
:103D90000C0BFF75D7EB068126CA86FFFB5F5EC959
:103DA000C3C8040000568D76048A4402A25CF08ADF
:103DB0004401A25BF08A04A25AF08B46068B56049B
:103DC00003560813460A83EA011D00008946FE894E
:103DD00056FC8D76FC8A4402A25FF08A4401A25E02
:103DE000F08A04A25DF0802652F0FD5EC9C3C804CB
:103DF0000000568D76FCC6440300A05CF0884402A7
:103E0000A05BF0884401A05AF088046A00FF366481
:103E100086FF76FEFF76FC9A14004CF80306FE86B9
```

```
:103E20001316008789568FE8946FC5EC9C3558BEC84
:103E3000568B7604E8B7FF89160784A305848A4663
:103E400006884414804C4E209ABD1C00E05E5DC381
:103E5000C8060000568B7606F706CA861000743234
:103E60008D46FA508D46FC50FF760AFF7608900E7C
:103E7000E8B66283C4088B56FE8B46FCB1089AD222
:103E8000004CF80346FA83D20089160784A3058400
:103E9000EB0D8B460A8B5608A307848916058848A86
:103EA000460C884414804C4E208A460E8844168A5C
:103EB00046108844178A46128844189ABD1C00E0B0
:103EC0005EC9CBC8060000568B7604F706CA86107A
:103ED0000074328D46FA508D46FC50FF7608FF760E
:103EE00006900EE8436283C4088B56FE8B46FCB1F5
:103EF000089AD2004CF80346FA83D2008916078448
:103F0000A30584EB0D8B46088B5606A307848916 00
:103F100005848A460A884414804C4E209ABD1C00B1
:103F2000E05EC9C3558BEC568B7604A10A878B16CD
:103F30000887A3038489160184804C4E418A460673
:103F40008844148A46088844168A460A8844178A90
:103F5000460C8844189ABD1C00E05E5DC3C8020090
:103F600000568B7604B200C646FF00837C040A74B8
:103F700006837C040D755A8A4409B4002D03008B16
:103F8000D883FB137726D1E32EFFA7D93FB203B125
:103F900001EB1EB203B100EB18B203B112EB12B287
:103FA00003B111EB0CC6061B8495EB05C6061B84FA
:103FB000A20AD274218A46FF5051526A02FF360A81
:103FC00087FF360887FF76060EE884FE83C40EEB73
:103FD00005C6061B848B5EC9C38D3F8D3F993F9FED
:103FE0003F9F3FAC3F9F3F9F3FAC3FAC3FA53FACA7
:103FF0003FAC3FAC3F9F3FAC3FAC3FAC3F9F3F939C
:104000003FC8020000568B7606B200C646FF02800B
:10401000 2652F0FD8A4604B4002D04008BD883FBA1
:104020000A7746D1E32EFFA79940F7442A0010747F
:1040300004B143EB02B149B20BEB42F7442A00084A
:1040400075 06B20BB149EB35B205B13DEB2FB205A8
:10405000B143EB29B20BF7442A40007402EB06B1DE
:1040600047EB1AB20BB148EB14E882FD89160784BE
:10407000A30584804C4E208A54168A4C170AD274A9
:1040800015885416884C178A46FF884414804C4E75
:10409000019ABD1C00E05EC9C32A405440694069D2
:1040A0004069404E403B4063406940694069407D405616
:1040B0008B36AA88FAFE0E0487802603F17F6A00F9
:1040C0009ABB9800E059C6067DF0FFC60623F0FFB4
:1040D000900EE8DBC0C60620F0CFC60621F0AC9AF1
:1040E000D70D00E06A119A070E00E059807C0B3E64
:1040F000740F807C0BE8750C83C602F644030874C9
:1041000003E87EECFB5ECB558BEC8B46048B5606AE
:10411000 8AC48AE28AD632F6D0EAD1D8894604899E
:1041200056068B56068B46045DC3C80A00005657D8
:10413000C70636DA0C009A8C0300E08BF8837D0406
:1041400000741 0C6061B8491893E2EDA9A7E070001
```

```
:10415000E0EBDD832628FFBF8B750B8936AA8880AC
:104160007C0B0475089A009300E0E97C02C64414B5
:10417000008326CA86DFC606368F00C706DF8600A4
:1041800000C6061681018B44248945140BC07503B3
:10419000E95602F706CA8601007445A171-86993B6B
:1041A00054227F1B75053B442077148B44228B548B
:1041B000203B067586722977063B1673867621C6E4
:1041C000441402804C4E15C7444F0500C6441605E2
:1041D000C6441723C64418009ABD1C00E0E9090232
:1041E000A164868945168B44228B54208945108909
:1041F000550EC60679F01FC60610F0019A09570041
:10420000E0C0E0048846FD9A455400E00846FD8A77
:1042100046FDA2398F9A415600E0A2388FC6067734
:10422000F002C60670F0289ACD5600E0A2378FC67D
:104230000631F0009AC05500E0A232F09A635500B2
:10424000E088451B9A515700E088451AC60612F0CF
:1042500000C60631F001F6451B01750A8A451BB4FC
:1042600000A908007507C60632F000EB06A0378FDC
:10427000A232F0802612F0F78A440BB4008946FA85
:10428000B90900BB8E442E8B073B46FA740883C3E2
:1042900002E2F3E953012EFF6712830ECA8640F64D
:1042A000440A047478810ECA860040EB70EB6E817C
:1042B0003E648600027507C745166202EB05C745D6
:1042C00016B004810ECA86040857E80E0359E8CCDC
:1042D00002E915018BC60502008946F68B5EF68A57
:1042E0004703B400251C008946F8B90800BB6E449A
:1042F0002E8B073B46F8740883C302E2F3E9E9001A
:104300002EFF67106A069A491E00E059C64414023F
:10431000E9D600830ECA8601830ECA860457E8BA1E
:104320000259E9C400830ECA86048345160480 0E30
:10433000B7F001800E11F02057E89F025980261136
:10434000F0DF8026B7F0FEE99F00810ECA860408E0
:10435000813E648600027507C745166202EB05C7F9
:1043600 04516B00457E8730259E83102802612F06E
:10437000F7EB76C706C086FFFF9AA82200E08946C1
:10438000FE0BC0750757E8840959EB5A837EFE0B74
:10439000754AC6061F84079ADF3300E08846F70A8D
:1043A000C07439B4008946FEEB32EB30C706C086D4
:1043B000FFFF9AA82200E08946FE0BC07502EBC5FC
:1043C000837EFE0B7516C6061F84079ADF3300E056
:1043D0008846F70AC07405B4008946FE56FF76FE8B
:1043E000E81EFC83C404E8C900803E1B8400740EF0
:1043F000C6441402A01B84509A6A1E00E059F706B6
:10440000CA862000742B803E1B840075249A1F9757
:1044100000E03D01007415C6441603C6441719C6D2
:1044200044140280644EDF9ABD1C00E08326CA86D5
:10443000DF830E28FF40566A006A029AED432BF292
:1044400083C4060BC075EF893E2EDAC70636DA0242
:10445000009A8C0300E0C7062EDAFFFFC70636DAA3
:104460000F009A8C0300E0E9C6FC5F5EC9C3000040
:1044700004000800C0010001400180 01C00184371
```

```
:1044800025434A430443134325434A430443090055
:104490000A000C002A002C002E003F00EA00EC006D
:1044A000AC43AD42AC439F42AC439A42AF42D4428C
:1044B0007343C806000056FA6A009ABB9800E05998
:1044C000C60679F01F8126CA86FFFB6A00E8EFF571
:1044D00059802652F0FD6A00E856F659C60620F0CB
:1044E00000C60621F000C60620F100C60621F10034
:1044F000C6067DF0FFFB8326CA86F9800E03F18095
:10450000C70603810044803E2487007407803E2450
:1045100087017505A11487EB0AA11287C1E0060B7C
:1045200061487A301819A000006EF8946FE3D012B
:1045300074368B36AA88C64414028D46FA508A17
:1045400046FE509A640306EF83C4048A46FA884400
:10455000168A46FB8844178A46FC884418A21B84A6
:10456000804C4E019ABD1C00E0802603F17F6A005A
:104570009ABB9800E0595EC9C3800EB7F001800E67
:10458000B8F001800EB9F001800EBAF001C6063F06
:10459000F010800E12F008800E11F020C3C6061134
:1045A000F01A8026B7F0FE8026B8F0FE8026B9F01B
:1045B000FE8026BAF0FEC6063FF000802612F0F715
:1045C000802611F0DFC38326CA86FD802612F0FD07
:1045D000C606D0F009C606DCF002C3558BEC565770
:1045E0008B7E048B750B8B4514A3B286830ECA8613
:1045F00004C706C0860000C706C6860000C706A519
:10460000860000C706A3860000C706A9860000C76B
:1046100006A7860000C706A1860000C7069F860081
:10462000008B4516A368866A0050FF369D86FF36CC
:104630009B869A14004CF8A39186A39586F706CA28
:1046400086400074 1F8B45108B550EA3D7868916A4
:10465000D586C706D9860000A19186A3DB86A191E5
:1046600086A3DD868126CA86FFFBF706CA86004040
:1046700075058 30ECA8602E8EC0C804C2C50E8D8F5
:104680000A0BC07537810ECA868000F706CA8600FD
:1046900040751957E87606593D0100751FF706CA9F
:1046A0008600087412E8D1FEEB0DEB0BF706CA8604
:1046B000000087403E8C2FE57E80500595F5E5DC359
:1046C000C804000056578B5E048B7F0B8B47108B02
:1046D000570EA30A87891608878B4714A3B086A3B1
:1046E000B486A327878B4716A36886C706BE8600B5
:1046F00000C706A5860000C706A3860000C706A15E
:1047000086000C7069F8600008126CA86FDFDE858
:10471000540CC7063A8F00008B5E048A471AA20425
:1047200087E825053D01007428E886FD6A02FF360A
:104730000A87FF36088757E889F783C408C7062E1B
:10474000DAFFFFC70636DA0F009A8C0300E0E9F4BF
:1047500004C70636DA0C009A8C0300E08BF08B5EFF
:10476000048A471B88441B837C04087403E93501D1
:10477000807C090B7403E9D90089362EDA9A7E070A
:1047800000E0C6062F00256A01682F00E88CA6838A
:10479000C404C606168101FAA1C2860106C686A116
:1047A000C2860106FE868316008700A1C2862906FE
```

```
:1047B0009186FBA1C2862906B2868B1EC28633C9AA
:1047C000A1688633D29AB8004CF80106A786111664
:1047D000A9868126CA86FFFBF706CA860002743DB9
:1047E0008126CA86FFFD8126CA86FF7F810ECA8682
:1047F0000001C7063A8F00008B5E048A471AA204A4
:1048000087E845043D010074146A02FF360A87FFF9
:1048100036088757E8ACF683C408E920FFF706CAD4
:1048200086800074138126CA867FFF0EE8FD0D90F6
:104830003D01007403E905FF833EB286007503E97C
:104840000FFFE814090BC07503E905FFE863FCE9F5
:10485000E701807C090C7523578A440AB40050E8AC
:10486000FE0B83C4040BC07403E9B00389362EDA4F
:104870009A7E0700E0E9D500E9A103807C090D7567
:10488000198936 2EDA9A7E0700E057E8260C593D42
:1048900001007503E9BAFEE9B300C6061B8490E87F
:1048A00010FCE99403837C040B7403E9C702F70648
:1048B000CA86008074098126CA86FF7FE95D03806D
:1048C0002639F0FF807C09027403E9CE0089362E78
:1048D000DA9A7E0700E06810279A9D9400E059C795
:1048E000062EDA00009A380700E08BD083FA0D75A7
:1048F00009810ECA860080E957FE803E368F00741B
:104900000A830ECA8620C606368F00833E3A8F0081
:1049100074418B5E04F6471B047438A10A878B161A
:1049200088783EA011D0000A3078489160584C651
:1049300045140 2804D4E20C6451601C64517009A03
:10494000BD1C00E08B5E04F6471B027406E862FBA8
:10495000E9EAFDF706CA860004750AE8FB070BC002
:104960007403E9D400833EB4860074298126CA8684
:10497000FF7FA1B486A32787C7063A8F00008B5E0E
:10498000048A471AA20487E8BF023D01007503E9C3
:10499000BFFDE994FDE81AFBE9AA02807C090F75C6
:1049A0003F89362EDA9A7E0700E0F706CA860004B1
:1049B0007519833EC68600740BE88D023D010074B4
:1049C0000AE965FDE892070BC0756E810ECA860084
:1049D000028126CA86FFFE8126CA86FF7FE971FD15
:1049E000807C09107576A19586A3D98657E8A90E13
:1049F000593D01007403E9A6FE89362EDA9A7E0736
:104A000000E0833EB48600744AA1B486A32787C71A
:104A1000063A8F00008B5E048A471AA20487A1DD44
:104A200086A391868126CA86FF7FF706CA86000480
:104A30007513E824070BC0740C6A0257E8EEF38381
:104A4000C404E9F8FCE801023D01007503E901FD39
:104A5000E9D6FCE855E2E9E4FCE943FE807C091173
:104A600075216A00FF366886FF36A586FF36A38665
:104A70009A14004CF8A3D98657E81D0E59E82BE28A
:104A8000E9B601807C0904740F807C0906740980F2
:104A90007C09087403E9D00080267EF0FA56E8CE3F
:104AA0007B598946FE837EFE12750DE8C7833D0162
:104AB000007405C746FE0300837EFE0375178A4512
:104AC0000B508A441B50E8790D83C4040AC0750555
:104AD000C746FE0100837EFE12751DC7063A8F0190
```

```
:104AE00000C70627870100E85F013D01007403E964
:104AF0004401E92701E93E01837EFE037551833EAF
:104B0000348F0372126A006A326A046A0257E81329
:104B1000F483C40AE922015768348FE83F0C83C448
:104B2000043D01007403E90D018B5E048A471AA25B
:104B30000487C7063A8F0100C70627870100E808E7
:104B4000013D01007403E9ED00E9D000E9E70083CD
:104B50007EFE017405C6061B8490E855F95756E899
:104B6000C70983C404E9D10080267EF0FAC6061B7B
:104B70008490E9C100837C040D7403E9B3008026AE
:104B800039F0FF56E86608590BC07503E9B600F71F
:104B900006CA860080742D8126CA86FF7F5756E894
:104BA000D40A83C4048BD083FA01757CC7063A8F7C
:104BB0000000C70627870100E88E003D01007568E8
:104BC000EB5AEB64F706CA8600017503E982FBC75E
:104BD00046FC00008B46FCA32EDAFF46FC9A380701
:104BE00000E08BD083FA0874EB83FA0D74E683FA45
:104BF0000B7506810ECA8600805756E8780A83C472
:104C0000048BD083FA017520C7063A8F0000C706CF
:104C100027870100E832003D0100750C89362EDA45
:104C20009A7E0700E0E929FBE887F8C6451402EB05
:104C300008C6061B8491E879F889362EDA9A7E0731
:104C400000E0E9F8FA5F5EC9C3C8040000802603EB
:104C5000F17F6A009ABB9800E059C60623F0FFC6B0
:104C6000067DF0FF8126CA86FFFE833EC68600755C
:104C700003E98E00A1C6863B06B0867303A3B08607
:104C8000833E3A8F007521C60624F063A0388FA2B8
:104C900025F0A0398FA226F0C60628F040C60602ED
:104CA0008700C706348F0000C60620F0CFC6062155
:104CB000F0A0C6067EF08AA10A878B160887A34259
:104CC0008F8916408F8D46FC50900EE8204E593D3E
:104CD000010074268A46FE508A46FD508A46FC50E2
:104CE0006A02FF360A87FF360887FF36AA88900EC9
:104CF000E85DF183C40E33C0EB11810ECA8600015A
:104D0000EB06810ECA860002B80100C9C3C80A00BA
:104D10000056578B7E048B450B8946FE8B45108BC6
:104D2000550EA30A87891608878B4514A3B086A35E
:104D3000B486A32787830ECA8602E82906C7063AE7
:104D40008F00008A451AA20487FA802603F17F6A41
:104D5000009ABB9800E059C60620F0CFC60621F0A5
:104D6000A0C60623F0FFC6067DF0FFC6067EF0084B
:104D7000832628FFEF833E3A8F007521C60624F074
:104D800063A0388FA225F0A0398FA226F0C606288E
:104D9000F040C606028700C706348F0000FB8D4630
:104DA000FA50900EE8474D598946F83D01007424A9
:104DB0008A46FC508A46FB508A46FA506A02FF3601
:104DC0000A87FF360887FF76FE900EE882F083C4DC
:104DD0000EE97E03C70636DA0C009A8C0300E08BDE
:104DE000F08A451B88441B8B46FE89440B837C0458
:104DF0000C7403E98601F706CA86008074118126C7
:104E0000CA86FF7F89362EDA9A7E0700E0EBC580DE
```

```
:104E10002639F0FF807C09027403E9A200833EB4C6
:104E20008600740B6810279A9D9400E059EB37E8D0
:104E30002F0A3D0100742FE878F6E889F7FF76FE27
:104E400056E8E50683C40489362EDA9A7E0700E028
:104E5000C7062EDAFFFFC70636DA0F009A8C03006A
:104E6000E033C0E9EF02C7062EDA00009A380700E7
:104E7000E08BD083FA0D7508810ECA860080EB8422
:104E80008126CA86FF7F803E368F00740AC60636AA
:104E90008F00830ECA8620833EB486007412A1B4AC
:104EA00086A3278789362EDA9A7E0700E0E98DFEF1
:104EB00089362EDA9A7E0700E0E80AF7E993028045
:104EC000267EF0FA56E8A777598946F6837EF603E0
:104ED000751A8B5EFE8A470B508A451B50E86209A3
:104EE00083C4040AC07505C746F60100837EE61226
:104EF0007512C7063A8F010089362EDA9A7E0700AE
:104F0000E0E9C601837EF6037546893 62EDA9A7E7D
:104F10000700E0833E348F03730A900EE85B9A3DEE
:104F2000010074146A006A326A046A02FF76FEE8BD
:104F3000F2EF83C40AE918FFC606368F01FF063474
:104F40008FC7063A8F0100C70627870100E9F3FDE6
:104F5000837EF6017512E859F5E86AF6FF76FE568B
:104F6000E8C60583C404EB08C6061B8492E842F534
:104F700089362EDA9A7E0700E0E9D4FE837C0408A5
:104F80007403E9C200807C090B756DC6062F0025ED
:104F90006A01682F00E8839E83C40489362EDA9A5A
:104FA0007E0700E0C606168101FAA1C2860106C688
:104FB00086A1C28629069186FBA1C2862906B286F1
:104FC0008B1EC28633C9A1688633D29AB8004CF8CA
:104FD0000106A7861116A9868126CA86FFFB0EE860
:104FE0004A06903D01007403E965FEE86B010BC0C1
:104FF0007503E9DFFDE969FE807C090C751DFF760C
:10500000FE8A440AB40050E8560483C4043D0100FB
:105010007503E9EFFDE93401E9E9FD807C090D75CF
:105020001E89362EDA9A7E0700E0FF76FEE88404B9
:10503000593D01007503E99BFDE876F4E911FEC6D0
:10504000061B8492E90501837C040D7403E9F700D3
:1050500080 2639F0FF56E89403590BC07503E90028
:10506000FE89362EDA9A7E0700E0FF76FE9AE197F7
:1050700000E0590BC07503E9B900F706CA86008045
:10508000 7507833EB08600744A8126CA86FF7F83F7
:1050900006B486038B45143B06B4867318A3B48606
:1050A0008B45108B550EA30A87891608878B4514EC
:1050B000A3B086EB0F832E08870383 1E0A87008325
:1050C00006B08603C7063A8F0000C706278701008F
:1050D000E976FC33F689362EDA469A380700E08BFB
:1050E000D083FA0874EF83FA0D74EA83FA0C75061C
:1050F000810ECA8600808306B486038B45143B0666
:10510000B4867318A3B4868B45108B550EA30A87FB
:1051100089 1608878B4514A3B086EB0F832E08876A
:10512000 03831E0A87008306B08603C60620F0CFDD
:10513000E916FCC7062EDAFFFFC70636DA0F009A1B
```

```
:105140008C0300E0E902FCC6061B8493E863F3E9E4
:10515000F5FC8B46F85F5EC9C3C808000005657339C
:10516000FFA1AA888946F88B369186833EB28600D5
:105170007503E9E5010BF67503E9DE01A0FC82B4D5
:1051800000C1E0088A16FD82B60003C28946FE838C
:105190007EFE007505C746FE8000A1B2863B46FE36
:1051A000723F3976FE77208B5EFE33C9A168863365
:1051B000D29AB8004CF88956FC8946FA810ECA8604
:1051C00080008B46FEEB338BDE33C9A1688633D279
:1051D0009AB8004CF88956FC8946FA8936C286EBA3
:1051E0001C8B1EB28633C9A1688633D29AB8004C94
:1051F000F88956FC8946FAA1B286A3C2863936C21E
:1052000086761A8936C2868B1EC28633C9A1688605
:1052100033D29AB8004CF88956FC8946FAA1A9867F
:105220008B16A7860356FA1346FC3B069D8673032E
:10523000EB7C9075063B169B867273A19D868B1640
:105240009B8683C2011500003B06A98675143B1698
:10525000A786750EC706A9860000C706A7860000A8
:10526000EB4CA19D868B169B8683C2011500002BFB
:1052700016A7861B06A9868946FC8956FA6A00FF8E
:1052800036688650529A14004CF8A3C2866A00FF12
:1052900036688FF76FCFF76FA9A14004CF88B1677
:1052A000C08603D08916C0868126CA867FFFFF7616
:1052B000FCFF76FAFF36A986FF36A786E8E2EA8386
:1052C000C4086A00E86AE8599A322300E08BF80BB8
:1052D000C07403EB77908B5EF88A470FB4008BD8CD
:1052E0008A87A288A243F0FA6A04E844E859FBC618
:1052F0000642F010C60652F000800E52F002810EF7
:10530000CA8600046A00FF366886FF36A986FF3623
:10531000A7869A14004CF88946FEC6062F0024C1C1
:10532000E808A230008A46FEA231006A00FF366813
:1053300086FF76FCFF76FA9A14004CF8A232006AD7
:1053400004682F00E8D49A83C404EB14FAC6064715
:10535000F003C60649F011FBEB068126CA86FFFB67
:105360008BC75F5EC9C3C8020000FA6A04E84FE752
:1053700059F706CA860200741151EB800008ED8C7F9
:10538000063000B80BC706320000D01FEB131EB862
:1053900000008ED8C7063000570DC706320000D077
:1053A0001FC60679F01FC60622F0FFC6067DF0FF75
:1053B000C60620F0CFC60621F0A0A039F08846FF2F
:1053C000C60610F021A239F0C6067EF08AA0398FF9
:1053D000A226F0C60677F00AF706CA860200740A0B
:1053E000C606D0F008C606DCF003FBC9C3C802003D
:1053F0000056578B7E048B36AA888A4509B40089EB
:1054000046FE57E86972593D1200744DE8A3F083D7
:105410007EFE01741E8BD78BDA8A470E8844168A6B
:10542000470F8844178A47108844186A0256E8FCD8
:10543000E9EB055657E8F10083C404893E2EDA9A59
:105440007E0700E0C7062EDAFFFFC70636DA0F0038
:105450009A8C0300E033C0EB03B801005F5EC9C360
:10546000C802000056578B76048B7E06C746FE00A6
```

```
:1054700000FA6A00E8BAE659FB83FE0E741383FE55
:10548000057504836 52ABF5756E875EB83C404EBA2
:105490001CC6062F00266A01682F00E87D9983C488
:1054A00004E8B5FC0BC07505C746FE01008B46FE3F
:1054B0005F5EC9C3558BEC56578B760433FFFA6A8F
:1054C00000E86DE659FBA01681B4000BC0740A8A8F
:1054D0004411B400A98000750B566A05E822EB83DD
:1054E000C404EB3FA0168104FFA21681C6061F84E8
:1054F000039ADF3300E08BD00BC0740D83FA05757F
:10550000048364 2ABF5652EBD3C6062F00266A01D5
:10551000682F00E8059983C404E83DFC0BC07503BF
:10552000BF01008BC75F5E5DC3C804000056578B88
:1055300076048B7E06C646FF00C646FD00837C04CB
:105540000B740C837C040C7406837C040D75498AEF
:10555000452CB400A92000754 8D46FD508D46EEB3
:10556000508D46FF508A4409500EE834009083C4A1
:1055700008807EFF0074268A46ED508A46FE508AC7
:1055800046FF506A02FF360A87FF36088757900E9B
:10559000E8BDE883C40EEB05C6061B84915F5EC9B7
:1055A000C3558BEC56578B76088B7E0A8B560C8A2C
:1055B0004606B4002D03008BD883FB13773DD1E35F
:1055C0002EFFA70456C60403C60501EB33C6040329
:1055D000C60512EB06C60403C605008BDAC6070033
:1055E000EB1EC60404C605448BDAC607A1C6061B1B
:1055F00084A1EB0CC6061B8495EB05C6061B84A391
:105600005F5E5DCBC555C555CD55FB55FB55FB556F
:10561000E255FB55FB55FB55F455FB55FB55FB552A
:10562000E255FB55FB55FB55E255D555C802000028
:1056300056FA6A00E8FAE459FB9AA82200E08BF0D7
:105640000BC0742C83FE0B7515C6061F84079ADFEA
:10565000330 0E08846FF0AC07404B4008BF0E851C0
:10566000EEFF36AA8856E898E983C40433C0EB03FA
:10567000B801005EC9CBC804000056578B7E048B6E
:1056800036 08872B36408F83FE037603BE03000166
:1056900036B4862936BE8629369186 0136C68629D5
:1056A000360887831E0A87008B1E688633C98BC61F
:1056B00033D29AB8004CF83B16A586721277063B97
:1056C00006A386760A8306A386008316A586108B1A
:1056D0001E688633C98BC633D29AB8004CF82906A7
:1056E000A3861916A586A10A878B1608878946FE08
:1056F0008956FCEB50E87D773D010074268B5E06F1
:105700008A470B508A451B50E8370183C4043C018B
:10571007522FF760668348FE8420083C4043D0199
:1057200000750D8306088701831 60A87004EEB1566
:1057300033C0EB2557E82B7059FF760657E8E9FD93
:1057400083C404EBEB0BF675AC8B46FE8B56FCA3C7
:105750000A8789160887B801005F5EC9C3558BECBC
:1057600056578B76048B3CEB32900EE80C923D0141
:10577000007413 6A006A326A046A02FF7606E8A3BC
:10578000E783C40AEB3BFF04E8EA763D0100750AB3
:10579000C606368F01B80100EB294783FF0372C9A3
```

```
:1057A00068A6006A446A046A02FF360A87FF360860
:1057B00087FF7606900EE897E683C40EC6061B8424
:1057C000A633C05F5E5DC3803ECC86007418F606CB
:1057D000CC86807405BA0300EB65F606CC8620748F
:1057E0005EBA0500EB59803ECE86007424F606CEE4
:1057F00086CC7405BA0900EB46F606CE8602740C18
:10580000F606CC86107405BA0600EB33BA0A00EB34
:105810002E803ED086007424F606D086187513F6C6
:1058200006D086407405BA0D00EB14F606D18682C8
:105830007405BA0C00EB08BA0B00EB03BA0E008B30
:10584000C2C3558BEC807E06EA7412F706CA860145
:1058500008750AF64604807404B001EB02B0005DDE
:10586000C3C7060381004C803E2487007407803E36
:1058700024870175O5A11487EB0AA11287C1E006F0
:105880000B061487A301819A000006EF3D01007406
:10589000433C0EB03B80100C3C80C00005657B86E
:1058A0002C872D62868946FCFA1E06B800118ED818
:1058B0008EC0BE6286BF24848B4EFCFCF3A4071FFF
:1058C000FBA024F08846F5A025F08846F6A026F037
:1058D0008846F7C60624F0639A785600E08846F4B6
:1058E000A225F09A025600E0C0E0048846F49AD45B
:1058F0005400E00846F48A46F4A226F0E832D39A2F
:10590000C05500E0A24D8FC60631F000A232F09AD9
:10591000CD5600E0A24C8FC60631F0019A815500A9
:10592000E08846F4F646F4017507B400A90800754E
:1059300007C60632F000EB06A04C8FA232F09AEBBD
:105940005600E0A24A8FA20487A1D7868B16D5867F
:10595000A30A8789160887A1D986A3B086A1D9860C
:10596000A3B286A1D986A3B486A1D986A32787C767
:1059700006BE860000C7069186FFFFC706A5860003
:1059800000C706A3860000C706D9860000C6064BDE
:105990008F00FF7604E88600598946FEA10A878BAE
:1059A0001608878946FA8956F8FA1E06B800118E3D
:1059B000D88EC0BE2484BF62868B4EFCFCF3A40745
:1059C0001FFB900EE87DA6C706038100209A000009
:1059D00006EFC706038100299A000006EF8B46FAFE
:1059E0008B56F8A3D7868916D586C706D9860000B8
:1059F000A1DD86A3DB86803E4B8F007405830ECA33
:105A00008620E861F98A46F5A224F08A46F6A225A6
:105A1000F08A46F7A226F08B46FE5F5EC9C3C80A2D
:105A2000000056578B7E04C646FE00C646FF009A0D
:105A3000635500E08846FBFA802603F17F6A009AEE
:105A4000BB9800E059C60620F0CFC60621F0ACC6D0
:105A5000067DF0FFC60623F0FF900EE852A7800EE9
:105A600010F008C60620F0CFC60621F0ACC6067EB0
:105A7000F08A832628FFEFFBA19186A39386C706B1
:105A8000B686FFFF8D46F850900EE8C93E593D019D
:105A9000007419E815D2C7062EDAFFFFC70636DAFA
:105AA0000F009A8C0300E033C0E94E02833EB486B7
:105AB000007506E8F5D1E95501C70636DA0C009AFB
:105AC0008C0300E08BF0837C040A7403E9A5018059
```

```
:105AD0007C09007406807C0902755289362EDA9A98
:105AE0007E0700E0807EFE007506807EFF00741851
:105AF000578A46FB508A46FF50E8020283C4063CA0
:105B0000017505E8A5D1EB9FA04A8FA20487C64680
:105B1000FE00C646FF00833EB486007496833EB006
:105B200086007595A1B486A32787E90AFF807C09C2
:105B300005740C807C09037406807C0907757280EB
:105B40003E0487007531807EFF00752B8A46FB502E
:105B5000E82702593C01751F89362EDA9A7E070024
:105B6000E0C606048714C70627870100C646FE0064
:105B7000C646FF01E9C0FE8A46FF5056E8326983F7
:105B8000C4043D0200751689362EDA9A7E0700E0BD
:105B9000C70627870100C646FE01E99AFE5756E868
:105BA000BBE383C40489362EDA9A7E0700E0E9F667
:105BB000FE807C0912755D89362EDA9A7E0700E038
:105BC000833EB486007433803E0487007407D900ECB
:105BD000E8DCE4C6064B8F01E95CFEE8CDD06A0044
:105BE0006A116A036A02FF360A87FF3608875790F0
:105BF0000EE85CE283C40EE99CFEE8AED0C7062E38
:105C0000DAFFFFC70636DA0F009A8C0300E0B8010E
:105C100000E995FE807C0909750EE88ED05756E89C
:105C20003BE383C404E9C600C6061B848EE87BD030
:105C300089362EDA9A7E0700E0C7062EDAFFFFC704
:105C40000636DA0F009A8C0300E0A10A878B16084B
:105C500087A3078489160584C6451604C6451744DC
:105C6000C645188E804D4E21C64514029ABD1C00B3
:105C7000E0E933FE837C040D756C8976F6807C093F
:105C800001753C579A6A9700E0590BC07431893608
:105C90002EDA9A7E0700E0833EB486007503E91889
:105CA000FE33F6EB1189362EDA9A380700E0894682
:105CB000FC837EFC0A46837EFCFF75E9E978FDE8FB
:105CC000E9CF8B5EF68A4710508A470F508A470EFD
:105CD000506A02FF360A87FF36088757900EE86F32
:105CE000E183C40EEB08C6061B848DE8BDCF893660
:105CF0002EDA9A7E0700E0E99CED5E5EC9C3558BF2
:105D0000EC568B7608F706CA8611007530F6460603
:105D100080742A832E088701831E0A870056E8BAFA
:105D200074593D01007404B001EB4CC6064B8F0161
:105D3000E8FECE83060887018316 0A8700F646062A
:105D4000047506807E0400742C6A006A186A016A71
:105D500002A10A878B16088783EA011D00005052B2
:105D600056900EE8EAE083C40EF646060275B88047
:105D70007E040075B2B0005E5DC3558BEC8A56049C
:105D80008AC2B400A9800075168AC2B400A90200B4
:105D9000750D8AC2B400A904007504B000EB02B00E
:105DA000015DC356C70636DA0C009A8C0300E08BFF
:105DB000F0837C04007410C6061B848B89362EDAAF
:105DC0009A7E0700E0EBDD832628FFBF56E832000D
:105DD00059830E28FF40FF36AA886A006A049AEDAC
:105DE000432BF283C4060BC075EC89362EDAC70646
:105DF00036DA02009A8C0300E09AC29500E0EBA428
```

```
:105E00005EC3C806000056578B7E048B750B89361F
:105E1000AA88C6450D00C745180000C64414008B6B
:105E200044248945120BC07503E97601F706CA863A
:105E30000100743EA17186993B54227F1B75053B7E
:105E4000442077148B44228B54203B0675867222A3
:105E500077063B167386761A6A006A116A036A022D
:105E6000FF7422FF742056900EE8E4DF83C40EE92D
:105E70003001A164868945168B44228B54208945C4
:105E80001089550E807C0B2F740F9A635500E088A3
:105E9000451B9A235600E0EB0D9A815500E088459A
:105EA0001B9AEB5600E088451A8A440BB4008946D9
:105EB000FEB90500BBC65F2E8B073B46FE74088308
:105EC000C302E2F3E998002EFF670A57E80B01E9E5
:105ED0008C00817D1600027507C745166202EB052E
:105EE000C74516B00457E8F10059E8B7CEEB708B00
:105EF000C60502008946FA8B5EFA8A4703B400257C
:105F00001C008946FCB90800BBA65F2E8B073B46E8
:105F1000FC740783C302E2F3EB452EFF6710EBAB83
:105F2000EBA98345160457E8B000598026A7F0FE78
:105F3000EB2D817D1600027507C745166202EBA5A1
:105F4000C74516B004EB9E6A069A491E00E059C682
:105F5000441402EB0A830ECA864057E8F60D5980B6
:105F60003E1B8400740EC6441402A01B84509A6A1F
:105F70001E00E059F706CA8620007426803E1B8466
:105F800000751F9A1F9700E03D01007415C6441666
:105F900003C6441719C644140280644EDF9ABD1C20
:105FA00000E05F5EC9C30000040008000C001000A0
:105FB000140018001C00205F225F325F475F205FE3
:105FC000225F325F475F080028002F003E00E80094
:105FD000CB5ECB5E555FD25EEF5EC81200005657B7
:105FE0008B7E048B450B8946FAC646F9006A00FF92
:105FF000366886A19D868B169B8683C2011500009C
:1060000050529A14004CF8A3BC868B4516A36886A0
:106010008B45108B550EA30A8789160887A3008726
:106020008916FE868B4512A3B086A3B286A3B486DA
:10603000A32787C706C0860000C706C4860000C71E
:1060400006C2860000C706BE8600008B5EFA804F3F
:106050002C508126CA86FFFBC706A5860000C7060E
:10606000A3860000C706A9860000C706A786000011
:10607000817D1600027510FF369D86FF369B86E8EF
:1060800085E083C404EB126A00FF7516FF369D8617
:10609000FF369B869A14004CF8A39186C706B686F5
:1060A0000100C706B8860100C6061681018A451A96
:1060B000A20487F6451B017406C646F817EB04C612
:1060C00046F818FA6A08E868DA596A08E8F0D9590F
:1060D000FBC706DF860000A02883B400A901007575
:1060E000148B5EFA807F0B087406807F0B28750581
:1060F000900EE8DFA0F706DF860200751B830EDF37
:106100008640F706DF860100740E8A46F9B4000B5C
:10611000C07505900EE8B3CC8D46EF508D46F0501B
:106120006A00900EE8613B83C4063D010074248A36
```

```
:1061300046F2508A46F1508A46F0506A02FF360A0B
:1061400087FF360887FF76FA900EE803DD83C40EDA
:10615000E9D006FF36A586FF36A386FF750B6A00D9
:106160000EE8CB069083C4089A280900E08BF00B58
:10617000C074F58A451B88441B8B451689441683D9
:106180007C040A7403E96F03807C09007533C646FA
:10619000F9008B44180106C0868A451AA20487F7C5
:1061A00006CA860004750C900EE824D70BC0740351
:1061B000E95F0656681E009A109600E083C404EB5F
:1061C000A7807C09027403E9FF00807EF900745CFB
:1061D000F6451B0474568B5EFA804F4E01F6451B44
:1061E000017404B001EB02B001508A46F8506A0114
:1061F0006A02A10A878B16088783EA011D000050F6
:1062000052FF76FA900EE847DC83C40EF6451B0277
:10621000741AE896CA8B44180106C086A1C0860B82
:10622000C07503E9EF05E8B1D9E9E905C646F9000B
:106230008B44180106C0868A451AA20487F706CA4D
:1062400860004750C900EE886D60BC07403E9C175
:10625000056681E009A109600E083C404833E91A0
:1062600086007503E95E02833EB486007403E9503C
:1062700004833EED86007503E9EDFEF706DF860137
:10628000007503E9E2FEF706DF8602007403E9D732
:10629000FEF706DF8608007403E9CCFE830EDF8676
:1062A00002A1ED86A32787A1E3868B16E186A30AC8
:1062B0008789160887A1E3868B16E186A300878964
:1062C00016FE86E92FFEE9FC01807C090175308B02
:1062D00044180106C0868A451AA20487F706CA86B2
:1062E0000004750C900EE8E7D50BC07403E9220595
:1062F00056681E009A109600E083C404E9C6018027
:106300007C0905740F807C09037409807C0907747B
:1063100003E9DB01807EF901751C8B46FE8B56FC80
:106320003B060A8775063B160887740A8A451AA237
:106330000487C646F90056E8FE71593D0200753BD8
:1063400056681E009A109600E083C404807EF9010E
:106350007411C646F901A10A878B1608878946FE83
:106360008956FC8A451B50FF360A87FF360887FF8F
:1063700076FAE8690D83C408E97AFDC646F700A0FD
:106380004304B4000BC07403E9C8008A451B50FFE6
:1063900076FAE83A0883C4048946F48326DF86BF88
:1063A000837EF4017535F6451B04742F8B5EFA80ED
:1063B0004F4E01F6451B017404B007EB02B00550C7
:1063C0008A46F8506A016A02FF360A87FF36088754
:1063D000FF76FA900EE878DA83C40EF6451B207536
:1063E00006837EF4017504FF06BE86837EF4017584
:1063F0003FF6451B407439FF76FAE8E46A593D01DF
:10640000007417E8A5C8A1BE860106C086A1C08693
:106410000BC07503E9FE03E90CFEC646F701FF0E4B
:10642000B486830608870183160A8700FF0E9186CB
:10643000837EF401751DF6451B027417E86CC8A134
:10644000BE860106C086A1C0860BC07503E9C503E0
:10645000E9D3FD807EF7007475A1BE860106C08673
```

```
:10646000F706CA860004750C900EE863D40BC0745E
:1064700003E99E0356681E009A109600E083C40448
:10648000833E918600743E833EB486007415C70631
:10649000BE860000A1B486A327878A451AA2048776
:1064A000E952FC833EED86007503E9BBFCF706DF8D
:1064B0008601007503E9B0FCE8B2AF0BC07503E9D3
:1064C000DAFDE9D7FD810ECA860010E99AFCE8DA08
:1064D000C7FF76FA56E885DA83C404A1BE860106B2
:1064E000C086A1C0860BC07503E92903E937FDC644
:1064F000061B848AE91B03837C04087403E92602D3
:106500008126CA86FFFB807C090B7403E9BB0180EE
:106510002652F0FDC60616810156681E009A109696
:1065200000E083C404803E4504007410C6062F00BA
:10653000236A01682F00E8E28883C404FAA1C286B6
:106540000106FE868316008700A1C2860106918699
:10655000A1C2862906B286A1C2862906C086813ECE
:1065600068860002750EA1C28633D2B1099AD200A4
:106570004CF8EB108B1EC28633C9A1688633D29AC1
:10658000B8004CF80106A7861116A986F706DF8623
:106590000100740DA1C2860106F186A1F186A3F364
:1065A00086FB833EB286007403E9BF00F706DF86F0
:1065B00001007503E96C02F706CA8620007403E93E
:1065C0006102F706CA8600107503EB7E90833EEDEC
:1065D00086007476F706DF860100746EF706DF86A4
:1065E00002007566E886AE0BC07503E935028126A8
:1065F000CA86FFEF830EDF8602A1ED86A32787A15F
:10660000E3868B16E186A30A8789160887A1E386AD
:106610008B16E186A300878916FE868D46EF508D86
:1066200046F0506A00900EE85E3683C4063D0100D5
:106630007403E9EE01FF36A586FF36A386FF750BCE
:106640006A000EE8E9019083C4089A7F7400E08B29
:10665000D083FA177503E90FFB83FA187503E994E1
:10666000FAC6450D16E843C6E9C001F706CA86809A
:1066700000074298126CA867FFFFA6A00E8B2D459DD
:10668000FB9AA82200E08846EE0AC0740FFF76FA53
:10669000B40050E86BD983C404E98701FA6A08E8BA
:1066A0008FD459FB900EE827D20BC07403E9730115
:1066B000F706CA8600107503E9ADFA8126CA86FF7F
:1066C000EFA1B486A32787E92BFA807C090C740913
:1066D000807C090D7403E916FEFF76FA8A440AB439
:1066E0000050E81CD983C404807C0A0E7403E9219D
:1066F0000156681E009A109600E083C404803E454F
:1067000004007410C6062F00266A01682F00E80AEC
:106710008783C404900EE8B7D10BC07503E948FA2B
:10672000E90001E9C9FD837C040D7403E9DE008002
:106730007C090174268BFE8A4510508A450F508AC9
:10674000450E506A02FF360A87FF360887FF76FA41
:10675000900EE8FBD683C40EE9B700FF76FA9A6A7A
:106760009700E0590BC075166A02FF360A87FF369C
:10677000887FF76FAE84BD783C408E9940056E807
:10678000B66D593D0200752E807EF9017411C64622
```

```
:10679000F901A10A878B1608878946FE8956FC8A6B
:1067A000451B50FF360A87FF360887FF76FAE82D2B
:1067B0000983C408EB14E8F2C4A1BE860106C086B2
:1067C000A1C0860BC0744EE95CFA56681E009A1090
:1067D0009600E083C404833EB486007503E988F91B
:1067E000F706CA8600107403E97DF933F633D2EB5D
:1067F0001489362EDA9A380700E08BD083FA0A75AE
:1068000003E964F94683FAFF75E7E9E8F8C6061B71
:10681000848BE896C456681E009A109600E083C4E4
:1068200004EB03E885C49AC29500E05F5EC9C3C863
:106830000E000056578B7E08C646F900C646F80083
:10684000FAC6062E0000C6064E8F00833E0E870055
:106850007510833E0C87FF7509C646F801C6062CE5
:1068600000039O0EE84999C60620F0C8C60621F03C
:1068700001C6067EF08A807EF8007404B0C2EB0286
:10688000B082A220F1C60621F11CC60678F000C62F
:106890000670F0148A4606B4000BC074073D03006E
:1068A0007402EB2FC60677F0029A455400E0884642
:1068B000FA9AE15500E0C0E0030846FA9A41560012
:1068C000E08846FB9AAF5600E08846F79A9F55004D
:1068D000E0EB37C60677F0069AD45400E08846FA13
:1068E0009A025600E0C0E0030846FA9A785600E0A3
:1068F0008846FB807E06027504804EFB089ACD56C2
:1069000000E08846F79AC05500E08846F6C60610B3
:10691000F100C60610F000802612F0F68A4606B492
:10692000000BC074133D01007503E9E6003D04004F
:106930007503E9FB00E9FC008A450BB4008946F4C5
:10694000B90400BB7D6B2E8B073B46F4740883C3F0
:1069500002E2F3E9DE002EFF6708F6450A02750C35
:10696000C646F901C646F750C646F608E813C4E91C
:10697000C2008BC70502008946FC8B5EFCF6470807
:1069800002750CC646F901C646F750C646F6088B96
:106990005EFC8A4703B400251C008946F2B9060054
:1069A000BB656B2E8B073B46F2740883C302E2F390
:1069B000E981002EFF670C800EA7F001EB7690EBCB
:1069C000AB9A635500E08846FFF646FF017402EB80
:1069D000118A46FFB400A908007513803E048701A0
:1069E000760CC646F700C646F600C646F901F646DE
:1069F000FF10740F800E12F001C60621F110C606BA
:106A000020F088F706DF8601007429A1F186A3F340
:106A100086EB219A815500E08846FFF646FF017516
:106A200007B400A90800750CC646F700C646F60074
:106A3000C646F901C60631F0018A46F7A232F0C611
:106A40000624F1418A46FAA226F18A46FBA225F1E4
:106A5000800E11F110C60631F0008A46F6A232F01F
:106A6000807EF900750C807E0600740B807E060324
:106A70007405800E10F008BE16878A04A215F14630
:106A80008A04A216F1A01A87A214F18D760A8A044C
:106A9000A257F0468A04A258F0468A04A259F08B05
:106AA0001625870BD2750B6A009ABB9800E059E94E
:106AB000A90081FAFF007603BAFF008916B0868923
```

```
:106AC00016AE86807EF80074083FA017603BA0158
:106AD0000088162D008816508F88164F8F88161A3A
:106AE000F088161AF18A4606B4000BC0740C3D01FA
:106AF0000074243D02007434EB45F706DF86020083
:106B000074151EB800008ED8C70630000175C70680
:106B1000320000D01FEB281EB800008ED8C7063008
:106B2000006471C706320000D01FEB131EB80000CE
:106B30008ED8C7063000FA29C706320006EF1FC6F6
:106B40000679F00C803E4504007410C6062F002D17
:106B50006A01682F00E8C38283C404832628FF8F5C
:106B6000FB5F5EC9CB040008000C00140018001C79
:106B700000B769BF69BF69B769BF69BF6908002805
:106B8000003E00E800C169C1695A697269558BEC21
:106B90008A56068A46083C0874043C28752DF6C2BD
:106BA0001075288AC2B400A94000751B8AC2B400BF
:106BB000A9200075128AC2B400A9020075098AC210
:106BC000B400A904007404B001EB02B0005DCBC8AE
:106BD00006000056578B7E048A450B508A460650A5
:106BE0000EE8A9FF83C4040AC0750533C0E960013B
:106BF0009A0D0700E08BF00BF674F0A10A878B1654
:106C000008878946FC8956FAC6440803A1A5868BE5
:106C10016A38689440C89540AC60631F001A032B5
:106C2000F088440FC70627870100900EE89455A00E
:106C30001A87884417A118878B16168789441589E7
:106C40005413C60631F000A032F088440EA024F19F
:106C5000884410A025F1884411A026F1884412C769
:106C6000441E0000C7441C0000F64606017404B030
:106C700001EB02B0008AD0F6066D8302740380CA6D
:106C800002885418800E03F180830E28FF40576A53
:106C900003FF36FE809AED432BF283C4063D0100CC
:106CA000751E8B46FC8B56FAA30A878916088789BE
:106CB000362EDA9A7E0700E0832628FFBFE92BFFF5
:106CC000C7062EDA0300893630DAC70636DA030043
:106CD0009A8C0300E08BF0832628FFBF8B46FC8B49
:106CE00056FAA30A8789160887A4409B400894698
:106CF000FE3D0100752FA168860106A3868316A5B7
:106D00008600A1A5868B16A3863B069D86723575E7
:106D1000063B169B86722DC706A5860000C706A3F4
:106D2000860000EB1F8A441B508A441A508A44197B
:106D3000506A02FF360A87FF36088757900EE80F21
:106D4000D183C40E89362EDA9A7E0700E08B46FE88
:106D50005F5EC9C3C80E000056578B7E048B450B7F
:106D60008946FEC646FD00C746FAFFFC746F8FF44
:106D7000FF8B4516A368868B45108B550EA30A879B
:106D800089160887A300878916FE868B4512A3B053
:106D900086A3B286A3B486C706BE860000C7069146
:106DA00086FFFFC706A5860000C706A3860000C7AA
:106DB00006B6860100C706B88601008A451AA204F5
:106DC00087F6451B017406C646FC17EB04C646FC55
:106DD00018FA6A40E85ACD596A40E8E2CC59FBC734
:106DE00006DF8600008126CA86DFFB8D46F3508DC4
```

```
:106DF00046F4506A00900EE88E2E83C4063D0100D2
:106E000074248A46F6508A46F5508A46F4506A023F
:106E1000FF360A87FF360887FF76FE900EE830D0EF
:106E200083C40EE9AC02833EB486007508C6061B17
:106E30008484E99D02FF36A586FF36A386FF750B85
:106E40006A010EE8E9F983C4089A280900E08BF08A
:106E50000BC074F5837C040A7403E98101807C090A
:106E6000007409807C09027403EB7F9056681E0051
:106E70009A109600E083C4048A451AA20487833ED0
:106E8000B486007503E94A02807EFD007445F6452C
:106E90001B04743F8B5EFE804F4E01F6451B017450
:106EA00004B001EB02B001508A46FC506A016A024C
:106EB000A10A878B16088783EA011D00005052FF44
:106EC00076FE900EE889CF83C40EF6451B0274034C
:106ED000E9FF01C646FD00833EB086007403E96801
:106EE000FFA1B486A32787E9FBFE807C0905740C0B
:106EF000807C09037406807C09077563807EFD0130
:106F0000751C8B46FA8B56F83B060A8775063B16AE
:106F10000887740A8A451AA20487C646FD0056E807
:106F20001666593D0200752A56681E009A10960092
:106F3000E083C404807EFD017503EB7990C646FDB5
:106F400001A10A878B1608878946FA8956F8EB65EE
:106F5000EB63FF76FE56E804D083C404E962018047
:106F60007C0912756856681E009A109600E083C46A
:106F700004833EB486007503E95701FA802603F1C5
:106F80007F6A009ABB9800E059C6067DF0FFC606EE
:106F900022F1809AD70D00E06A229A070E00E0598C
:106FA000813E6486000475086A109A330F00E05928
:106FB000FBC646FD018A451B50FF360A87FF36088F
:106FC00087FF76FEE8170183C408E918FE807C0974
:106FD000097503E97CFFC6061B848EE9E300837C08
:106FE000040D7403E9D500807C090174268BFE8AA8
:106FF0004510508A450F508A450E506A02FF360AE6
:1070000087FF360887FF76FE900EE843CE83C40ED6
:10701000E9AE00FF76FE9A6A9700E0590BC075163C
:107020006A02FF360A87FF360887FF76FEE893CEAE
:1070300083C408E98B0056E8FE64593D0200752EB2
:10704000807EFD017411C646FD01A10A878B1608DA
:10705000878946FA8956F88A451B50FF360A87FF0A
:1070600360887FF76FEE8750083C408EB16E83A19
:10707000BCA1BE860106C086A1C0860BC07445E8CF
:1070800058CBEB4056681E009A109600E083C4046B
:10709000833EB486007503E9AFFD33F633D2EB14BB
:1070A00089362EDA9A380700E08BD083FA0A750306
:1070B000E996FD4683FAFF75E7E929FDC6061B84BC
:1070C0008DE8E7BB56681E009A109600E083C40462
:1070D000EB03E8D6BB9AC29500E05F5EC9C3558B4F
:1070E000EC568B76048A560AF6C2047511F6C20273
:1070F000750CF6C208740F803E0487007508C70639
:10710000027870100EB06A1B486A32787F6C2017486
:1071100004B217EB02B218B101804C4E0151526A11
```

```
:10712000016A00FF7608FF760656900EE821CD83AF
:10713000C40E5E5DC3000000000000000000000FF
:107140009CFABB1E00B907008B370BF6751083C382
:1071500002E2F5509A0D0700E08BF058EB04C707E8
:1071600000009DC3601EB800118ED88B36A088F633
:107170000622F1027440C60622F102C60622F00180
:10718000802620F1BF8B444C8A1E2D00881E4E8F16
:1071900032FF2BC389444C74133D00017203B8FFC6
:1071A00000A21AF1A21AF0A22D00EB0AC60678F08E
:1071B0001F802677F0FDF60623F001742E8B3EAA81
:1071C000888A450B3CE874043C3E75078A450AA84A
:1071D000027411F60630F0EC7432F60612F0017506
:1071E00003E99001C60622F040EB21803E2E00000C
:1071F0007417F60610F0107510F60623F00175BD31
:10720000A02E00A20981E9C502E97A01FE0E4F8F86
:10721000750EA02D00A2508FA24F8FC6064E8F0074
:10722000803E4504007416B21DC60631F0398A2628
:1072300032F0C60631F038A032F0E8787CC606237A
:10724000F0018384A600018394A80000FF445CFF42
:107250004C528B44068B5C418B544303D883D20041
:107260003B543B720B77053B5C39720433DB33D202
:10727000895C4189544333FFFF4C4E7409837C522F
:1072800000740383CF01FF4C2F740383CF04FF4CA2
:1072900054740583CF02EB178B445605080025FE76
:1072A000FF3D20007203B8200089445689445D4D120
:1072B000E72EFFA5B672D472CD72D472CD72D4729D
:1072C000C672D4726D73C606098100EB56C60609F4
:1072D0008101EB48C606098102E891A13D010075D4
:1072E0003B0633C08EC0B8017526A3300007F78473
:1072F0008B00FFFF740D837C4E007407834C7D026E
:10730000EB2190C60679F01F606A009ABB9800E0F6
:1073100083C40261C60620F000EB089083647DFD03
:10732000E84F05E81AFE83FE007503E9CA018B3EAB
:10733000A0888B455C894418C7455C00008B453D9F
:107340008B553F88441C88641D88541EC6441F000A
:107350008B45418B554389453D89553FA00981881F
:1073600044409A1FE80BB0A009AB90800E08B36A050
:1073700088E942FEC606098105E85C03803E4504B3
:10738000007400E94801F60630F00875E7F6067A61
:10739000F0407417C606098107E83C03803E4504A7
:1073A000007405B014E86F7BE92301F60622F008AB
:1073B0007412A07DF0A808740BA27DF0C60622F01E
:1073C00008E9A7FD8A2E23F1F6C51C7503E99B0089
:1073D000F60627F140740FF60620F1407408C60641
:1073E00022F180E91201F60612F0017412F6C504CA
:1073F000740DC60622F180C6062E0003E9E5FD8A5B
:107400001E4E8F0ADB75088A1E2D002A1E1AF1FEF9
:10741000CB8A3E508F2A3E4F8FC60609810353E820
:10742000B6025BC60622F180F6C5107507F6C508E0
:107430007514EB20FEC3803E4504007407B4178A20
:10744000C5E8A27AEB15803E4504007405B018E843
```

9801536-5
26 JUN 1998

```
:10745000C57AEB07803E45040074003ADF7503EB04
:107460006D90A00981A22E00E900FDF60630F01112
:107470007416C606098105E85E02C60630F0118062
:107480003E4504007400EBDAF60622F0087416C6D6
:1074900006098107E84102C60622F008803E45043D
:1074A000007400EB29F60620F140744CF60622F138
:1074B000407445C60622F140FE0E2C00753AC60601
:1074C000098103E81202C60622F180E966FFE8A1FD
:1074D00003E86CFC83FE00741F8B85A60089440EB4
:1074E0008B85A800894410A00981884409A1FE80E9
:1074F000BB0A009AB90800E0C70622FF00801F619E
:10750000CF601EB800118ED88B36A088F60622F107
:10751000027414C60622F102C60622F001C60678DD
:10752000F01F802677F0FDF60623F001742E8B3EC7
:10753000AA888A450B3CE874043C3E75078A450AD4
:10754000A8027411F60630F0EC7432F60612F0015F
:10755000503E9A400C60622F040EB21803E2E0010
:10756000007417F60610F0107510F60623F001757A
:10757000BDA02E00A20981E92901E98400C60623E5
:10758000F001FE0E4F8F834C7D02838483000183C4
:1075900094850000FF848D00FF8C8F00FF4C4EFF10
:1075A0008C8B008B44068B5C418B544303D883D275
:1075B000003B543B720B77053B5C39720433DB3381
:1075C000D2895C41895443F7447D04007409C7841F
:1075D0008B000000EB1B90F7444EFFFF7413F78401
:1075E0008B00FFFF740BF7848F00FFFF7403E9DE4D
:1075F00000C606098115E9AA00C606098113E9A299
:1076000000F60630F00875F1F6067AF0407402EBE9
:10761000E8F60622F0087412A07DF0A808740BA208
:107620007DF0C60622F008E9DEFE8A2E23F1F6C5BB
:107630001C7503EB4C90F60612F0017412F6C504AB
:10764000740DC60622F180C6062E0013E906FF8AD5
:107650001E2D002A1E1AF1FECB8A3E508F2A3E4F65
:107660008FC606098113C60622F180F6C510740282
:10767000FEC33ADF7502EB81A00981A22E00E987E3
:10768000FEF60630F011740CC60630F011C606097D
:107690008113EBE4F60622F0087434C60622F008E3
:1076A000E956FF83647DFDE8C801E893FA83FE0094
:1076B000741D8BFE8B36A088834C7D088BF7A00948
:1076C00081884409B80600BB0A009AB90800E0C7DF
:1076D0000622FF00801F61CF8A0E22F08A2E23F13E
:1076E0008A1630F08A3627F1A079F088446DA07AA6
:1076F000F088446EA07DF088446F606A009ABB9861
:1077000000E083C40261C60679F01FA014F1253F92
:10771000008A1E15F18A3E16F1895C35894437C608
:10772000067DF0FF886C7088546C887471C3601E8D
:10773000B800118ED88B36A088F60622F102743E6E
:10774000C60622F102C60622F001802620F1BF8B78
:10775000444C8A1E2D0032FF2BC389444C74133DC8
:1077600000017203B8FF00A21AF1A21AF0A22D00C4
:10777000EB4CC60678F01F802677F0FDEB40F6064E
```

```
:1077800023F001743CF60630F0EC7403EB6190805A
:107790003E4504007416B21DC60631F0398A263201
:1077A000F0C60631F038A032F0E80977C60623F0BB
:1077B00001FF4C4E7508C606098102E98F00E9A851
:1077C00000F60623F11C7420F60627F140740FF62C
:1077D0000620F1407408C60622F180E98B00C60637
:1077E000098103E8F2FEEB65F60630F0EC740AC698
:1077F00006098105E8E1FEEB54F60622F008742A3A
:10780000A07DF0A8087419F6067AF0407512F60605
:1078100077F002750BA27DF0C60622F008EB4A90C5
:10782000C606098107E8B0FEEB23F60620F1407496
:1078300014F60622F140740DC60622F140FE0E2C0D
:10784000007526EB99C606098109E88BFEE822003F
:10785000E8EDF883FE007411A00981884409A1FEB7
:1078600080BB0A009AB90800E0C70622FF00801F0B
:1078700061CFC60679F01FC6067EF000C6067DF011
:10788000FF0EE82B89606A009ABB9800E083C4026F
:1078900061C60620F100C60621F100C60622F1FFEE
:1078A000C60623F1FFC3C80A00005657FBC70636B9
:1078B000DA0C009A8C0300E08946FE8B5EFE837F23
:1078C00004007407C6061B8491EBE2832628FFBFE1
:1078D0008B7EFE8B750B8936AA88C706DF86000073
:1078E000C6441400C6061681018B44248945140B36
:1078F000C07509807C0B047403E94002F706CA8650
:10790000010074 5A17186993B54227F1B75053B8C
:1079100044207714 8B44228B54203B0675867229B1
:1079200077063B1673867621C6441402804C4E15AA
:10793000C7444F0500C6441605C6441723C644185D
:10794000009ABD1C00E0E9F301A164868945168B0D
:1079500044228B54208945108955 0EC60670F014B8
:10796000C60631F0019ACD5600E0A232F0C60631CB
:10797000F0009AC05500E0A232F09A635500E0880A
:10798000451B9A515700E088451AC60612F000F6CA
:10799000451B01750A8A451BB400A90800750580BE
:1079A0000E12F0088A440BB4008946FAB90A00BBEB
:1079B000D77B2E8B073B46FA740883C302E2F3E9B8
:1079C0007A012EFF67149A502306EFE96E01830EA9
:1079D000CA8640F6440A047406810ECA86004057DF
:1079E000E83B0259E95201813E648600027507C7EF
:1079F00045166202EB05C74516B004810ECA860023
:107A00000857E8190259E8A9CAE81F0FE92D018BA8
:107A1000C60502008946F68B5EF68A4703B4002548
:107A20001C008946F8B90800BBB77B2E8B073B4684
:107A3000F8740883C302E2F3E901012EFF67106ABC
:107A4000069A491E00E059C6441402E9EE00EB8F85
:107A500083451604813E6486000475046A0DEB02BA
:107A60006A0B9A330F00E059800E11F02057E8ADF1
:107A70000159E83DCA813E6486000475046A0EEB34
:107A8000026A0C9A330F00E059E9B000810ECA86F1
:107A90000008813E648600027507C745166202EB46
:107AA00005C74516B00457E8740159E804CAE87AD6
```

```
:107AB0000E802612F0F7E98300C706C086FFFF9A02
:107AC000A82200E08946FC0BC0750757E8D009E9F9
:107AD00011FF837EFC0B7516C6061F84079ADF33E1
:107AE00000E08846F70AC07405B4008946FC56FFDA
:107AF00076FCE80CC583C404EB3FC706C086FFFFD5
:107B00009AA82200E08946FC0BC0750757E88F0948
:107B100059EB26837EFC0B7516C6061F84079ADF79
:107B20003300E08846F70AC07405B4008946FC5665
:107B3000FF76FCE8CBC483C404E876C9803E1B848E
:107B400000740EC6441402A01B84509A6A1E00E002
:107B500059F706CA862000742B803E1B84007524CA
:107B6000830ECA86019A1F9700E03D01007415C676
:107B7000441603C6441719C644140280644EDF9AA3
:107B8000BD1C00E0830E28FF40566A006A059AED8E
:107B9000432BF283C4060BC075EF8B46FEA32EDA8F
:107BA000C70636DA02009A8C0300E09AC29500E01C
:107BB000E9FAFC5F5EC9C3000004000800C001075
:107BC00000140018001C004E7A507A8C7A3F7A4ECE
:107BD0007A507A8C7A3F7A040009000A000C002A55
:107BE000002C002E003F00EA00EC00C679FA7ADF94
:107BF00079FA7AD379FA7ACE79E7790F7AB97A80F5
:107C00000EB7F001800EB8F001800EB9F001C60683
:107C10003FF010800E12F008800E11F020C3558B3B
:107C2000EC56578B7E048B750B8B4514A3B286A341
:107C3000B486C706C0860000C706C6860000C70611
:107C4000A5860000C706A3860000C706A986000017
:107C5000C706A7860000C706A1860000C7069F8644
:107C600000008B4516A368866A0050FF369D86FF8C
:107C7000369B869A14004CF8A39186F706CA864074
:107C800000741F8B45108B550EA3D7868916D58699
:107C9000C706D9860000A19186A3DB86A19186A3A1
:107CA000DD868126CA86FFFBFA6A04E811BE59FB0D
:107CB000804C2C50E8A2D40BC0753F810ECA868040
:107CC00000F706CA860040752257E8D207593D01E1
:107CD000007535F706CA8600087403E821FF8B4556
:107CE00014A3B48657E8240059EB1DF706CA860092
:107CF0000874F1E809FFEBECEBEA6A0256E82DC1E3
:107D000083C4049AC29500E05F5E5DC3C8040000AE
:107D100056578B5E048B7F0B8B47108B570EA30A35
:107D200087891608878B4714A327878B4716A36874
:107D300086C706A5860000C706A3860000C706A161
:107D4000860000C7069F8600008126CA86FDFD8347
:107D50000ECA8604C706129000008A471AA204873A
:107D6000E886033D0100741C6A02FF360A87FF366D
:107D7000088757E84DC183C408E836C79AC2950002
:107D8000E0E961039A280900E08BF00BC074F58BE1
:107D90005E048A471B88441B837C04087403E950F3
:107DA00001807C090B7403E9EF0056681E009A10ED
:107DB0009600E083C404C6062F00256A01682F00E0
:107DC000E8587083C404C606168101FAA1C2860170
:107DD00006C686A1C28629069186A1C2860106FE34
```

```
:107DE000868316008700A1C2862906B286813E6876
:107DF000860002750EA1C28633D2B1099AD2004C18
:107E0000F8EB108B1EC28633C9A1688633D29AB8AC
:107E1000004CF80106A7861116A986FB8126CA86A2
:107E2000FFFBF706CA860002742C8126CA86FF7DF6
:107E3000810ECA860001C706129000008B5E048A7C
:107E4000471AA20487A1B486A32787E89B023D01B5
:107E5000007403E923FFF706CA868000741B81269D
:107E6000CA867FFF900EE8C3D73D01007403E90B7B
:107E7000FFFA6A04E8BABC59FB833EB28600750378
:107E8000E901FFE8D3D20BC07503E9F7FE6A025798
:107E9000E89ABF83C404E9E0FE807C090C7528578A
:107EA0008A440AB40050E8B7D583C4048946FE5614
:107EB000681E009A109600E083C404837EFE00745E
:107EC00003E9C0FEE9B2FE807C090D751C56681EF0
:107ED000009A109600E083C40457E8D7D5593D01B5
:107EE000007503E99EFEE990FEC6061B8490E9E555
:107EF00001837C040B7403E9AB00F706CA8600809B
:107F000075316810279A9D9400E059C7062EDA0053
:107F1000009A380700E08946FC802639F0FF837E0E
:107F2000FC0D750F56681E009A109600E083C4047D
:107F3000E951FEF706CA86008074448126CA86FF8E
:107F40007FE880A53D01007403E98A01F706CA862F
:107F500040007427833EDB86007506C6440910EB9B
:107F60001E833EB086007406C644090FEB11833EA3
:107F7000B486007506C6440911EB04C6440902FF25
:107F800076045756E8570283C4068946FE56681E93
:107F9000009A109600E083C404837EFE027403E915
:107FA0004301E9DFFD837C040D7403E9230180268E
:107FB00039F0FF807C090174268BD68BDA8A471052
:107FC000508A470F508A470E506A02FF360A87FFD1
:107FD00036088757900EE877BE83C40EE9F700573E
:107FE0009AE19700E0590BC075146A02FF360A87C0
:107FF000FF36088757E8CBBE83C408E9D800F706E8
:10800000CA8600017503E97BFDFAF60677F0027572
:1080100003E99C00803E1AF1007403E99200FF0E10
:10802000BE86832E08701831E0A8700FF06C68648
:10803000FBFF06B486FF06DB86FF0ED986A16886A5
:108040002906A386831EA58600C70627870100E8A8
:1080500072A43D01007403EB7D90F706CA864000D0
:108060007427833EDB86007506C6440910EB1E8329
:108070003EB086007406C644090FEB11833EB486F9
:10808000007506C6440911EB04C6440902FF7604D4
:108090005756E8490183C4068946FE56681E009A71
:1080A000109600E083C404837EFE027538E9D4FC98
:1080B000810ECA860080C60620F0CFC60620F18257
:1080C000FB56681E009A109600E083C404FBE9B3D7
:1080D000FCC6061B849156681E009A109600E08329
:1080E000C404E994FC5F5EC9C3C8060000800E7733
:1080F000F0028D46FB508D46FC506A00900EE887DA
:108100001B83C4063D010074288B16AA888A46FE8C
```

```
:10811000508A46FD508A46FC506A02FF360A87FFA5
:1081200036088752900EE827BD83C40E33C0E9ABF2
:10813000008126CA86FFFE833EC6860075166A0049
:108140009ABB9800E059810ECA860002832628FF58
:108150008FE98500A12587A3B086A16886D1E06A52
:108160000050FF369D86FF369B869A14004CF88B94
:10817000D039162587604891 6B086A1B086A32744
:1081800087813EB086FF007308A1B086A3AE86EB60
:1081900006C706AE86FF00A1C6863B06AE86730301
:1081A000A3AE86C60624F141800E11F1109A09573C
:1081B00000E0C0E0038846FF9A455400E00846FF0F
:1081C0008A46FFA226F1900EE8750D3D010074036A
:1081D000E959FF810ECA860001B80100C9C3C8046D
:1081E000000056578B76048126CA86EFFE807C09E4
:1081F00008740F807C09067409807C09047403E903
:108200001701F706CA8640007507A1BE86010691D0
:10821000 8656E8A553598BF83D120075758D46FEBC
:10822000508D46FC508D46FF508D46FD50FF360A5E
:1082300087FF360887E87CA583C40C3D0100751DC7
:10824000C70612900100C70627870100E89AFE3D85
:1082500001007403E93A02B80200E93E02807EFDA3
:1082600000375088A46FE884409EBA68B5E068A469B
:10827000FD8847168A46FF8847178A46FC884718B4
:108280009ABD1C00E08B5E06C6471402E90202E9B3
:10829000FF0183FF037574900EE8DE663D010074F4
:1082A000198B5E06804F4E016A006A326A046A02C8
:1082B00053E870BC83C40AE9D701830ECA86208DB7
:1082C00046FE508D46FC508D46FF508D46FD50FFBA
:1082D000360A87FF360887E8DAA483C40C3D01001C
:1082E0007520C706129000008B5E088A471AA20408
:1082F00087C70627870100E8EFFD3D0100750CE9FF
:1083000055FF807EFD03748FE9470183FF017403ED
:10831000E97901E93C01E97301F706CA8640007575
:1083200007A1BE8601069186807C09027403E98557
:1083300000833E1290007431F6441B04742B6A00D3
:108340006A006A016A02A10A878B16088783EA011C
:108350001D00005052FF7606900EE8F3BA83C40E5B
:10836000F6441B027403E92801F706CA8600047567
:1083700012E8E5CD0BC0740B6A02FF7606E8ADBAD1
:10838000E9D600833EB486007503E9FA00A1B486FD
:10839000A32787C706129000008B5E088A471AA29F
:1083A0000487E844FD3D01007403E98B00E9A7FE62
:1083B000E98500E9D100807C090F751EF706CA86A1
:1083C00000047507E892CD0BC075AD810ECA86001A
:1083D000028126CA86FFFEE97DFE807C09107403B7
:1083E000EB7C90FF7606E88C0C593D0100756383A9
:1083F0003EB486007457A1B486A32787C70612909F
:1084000000008B5E088A471AA20487A1DD86A3912B
:1084100086F706CA8600047514E83DCD0BC0740DBE
:10842006A02FF7606E805BA83C404EB67E8B9FC84
:108430003D01007503E91FFE6A02FF360A87FF3619
```

```
:108440000887FF7606E87BBA83C408EB44E85BA89C
:10845000EB30FF760656E8D0D083C404EB33807C43
:1084600009117528812 6CA86FFFEFF7606E8050CED
:10847000593D010074D7E832A8FF760656E8A9D026
:10848000EBA69AC29500E0B80100EB0FC6061B846C
:1084900090E81EC09AC29500E033C05F5EC9C3C8B1
:1084A00008000056578B5E048B7F0B8B47108B5751
:1084B0000EA30A8789160887 8B4714A3B486A327BF
:1084C00087FA6A04E8F8B559FB830ECA8602C70624
:1084D000129000008B5E048A471AA20487800E77F0
:1084E000F0028D46FC508D46F8506A00900EE897D9
:1084F0001783C4063D0100742A8A46FA508A46F959
:10850000508A46F8506A02FF360A87FF36088757B6
:10851000900EE83BB983C40EE897BF9AC29500E07D
:10852000E90003C60624F141800E11F1109A0957A3
:1085300000E0C0E0038846FD9A455400E00846FD8F
:108540008A46FDA226F16A119A330F00E059A1254F
:1085500087A3B086A12587A32787813EB086FF0029
:108560007308A1B086A3AE86EB06C706AE86FF00F1
:10857000900EE8CB093D010074136A02FF360A87AA
:10858000FF36088757E83BB983C408EB8B9A280964
:1085900000E08BF00BC074F58B5E048A471B8844A7
:1085A0001B897C0B837C040C7403E93A01F706CA2F
:1085B000860080744 8126CA86FF7FE8069F3D01BD
:1085C00000741A56681E009A109600E083C404E8EE
:1085D000E0BE9AC29500E0E87003E94602833EB42B
:1085E000860075535 6681E009A109600E083C404F6
:1085F000E85703B80100E92C026810279A9D9400FF
:10860000E059802639F0FFC7062EDA00009A3807B5
:1086100000E08946FE837EFE0D750F56681E009AA7
:1086200109600E083C404E963FF807C0902751E94
:10863000833EB4860074ADA1B486A3278756681E16
:10864000009A109600E083C404E982FEEB9656E897
:10865000684F598BD03D12007514C7061290010067
:1086600056681E009A109600E083C404EB4483FA17
:10867000037548566 81E009A109600E083C4049063
:108680000EE8F6623D01007415804D4E016A006AE5
:10869000326A046A0257E88BB883C40AEB41830E3E
:1086A000CA8620C706129000008B5E048A471AA271
:1086B0000487C70627870100E922FE83FA01750BAC
:1086C0005756E864CE83C404E9F8FEC6061B8492BC
:1086D00056681E009A109600E083C404E8D3BD9A41
:1086E000C29500E0E93C01837C040875125756E806
:1086F000370183C4040BC07403E991FEE9240183AC
:108700007C040D7403E90701802639F0FF807C09A1
:1087100000174268BD68BDA8A4710508A470F508A0D
:10872000470E506A02FF360A87FF36088757900EB9
:10873000E81DB783C40EE98AFE579AE19700E05915
:108740000BC07503E97CFEFAF60677F00274078029
:108750003E1AF1007414810ECA860080C60620F00D
:10876000CFC60620F182FBE9B1FEFBFF0EBE868379
```

```
:108770002E088701831E0A8700FF06B486C70627D6
:10878000870100E83E9D3D01007403E935FE56680F
:108790001E009A109600E083C404833EB4860074E1
:1087A00009A1B486A32787E924FDE89D019A280939
:1087B00000E08BF00BC07503E938FE837C040D7577
:1087C0002C807C0901743A8BD68BDA8A4710508A48
:1087D000470F508A470E506A02FF360A87FF360855
:1087E0008757900EE869B683C40EE9D6FD837C04F2
:1087F00008750E5756E8310083C4040BC075AEEB04
:10880000256681E009A109600E083C404EB9EC6B0
:10881000061B849356681E009A109600E083C404D9
:10882000E9F5FC33C05F5EC9C3C802000056578B30
:1088300076048B7E06807C090B7403E98200C606F1
:108840002F00256A01682F00E8D06583C4045668AC
:10885001E009A109600E083C404C606168101FA31
:10886000A1C2860106C686A1C2862906916A1C23A
:1088700862906B286813E68860002750EA1C286F0
:1088800033D2B1099AD2004CF8EB108B1EC286335A
:10889000C9A1688633D29AB8004CF80106A78611A0
:1088A00016A986FB8126CA86FFFB900EE87DCD3D8A
:1088B0000100756CE8A2C80BC0756AB80100EB67CF
:1088C000807C090C7526578A440AB40050E890CB86
:1088D00083C4048946FE56681E009A109600E08301
:1088E000C404837EFE0174D3EB33EBCF807C090D8F
:1088F000751A56681E009A109600E083C40457E863
:10890000B2CB593D010074B3EB13EBAFC6061B8429
:1089100092566681E009A109600E083C404E892BB49
:108920009AC29500E033C05F5EC9C38026B7F0FEEF
:1089300080268F0FE8026B9F0FEC6063FF0008023
:10894002612F0F7802611F0DFC38326CA86FD6A5F
:108950000F9A330F00E059C30000000000000000030
:10896000601EB800118ED88A0E23F08A2E22F08A5B
:1089700016227F08A0E22F18A2E23F18A1630F08A09
:1089800036227F18B3EA088F6C102744AC60622F152
:10899000028026201BF8B454C01455C29454E7471
:1089A000238B454E3D07007203B80600A21AF1A2C0
:1089B0001AF089454CF60622F0017405800E22F06B
:1089C00001E9FB00C7454C0000C60678F01F802671
:1089D00077F0FDE9E900F6C5107425F6C640740F7E
:1089E000F60620F1407408C60622F180E9D000B0F6
:1089F00010E83F05E83703C70607810400E9A60031
:108A00008A0E22F0F6C1087503EB7790F6067DF02A
:108A100008745EF6067AF0407557F7456800807571
:108A200050F7454CFFFF7549800E77F002C6067D72
:108A3000F0FF8B455C2945520185A6008395A8006F
:108A4000008B454E0BC07529C60679F01FC606205F
:108A5000F100C60620F000606A009ABB9800E0832F
:108A6000C40261C7455C0000C70607810200EB36FF
:108A700090B011E8BD04E8BB02C70607810800EB0F
:108A80002590F60620F1407415F60622F140740E8A
:108A9000C60622F140FE0E2C007524E951FFB012EB
```

```
:108AA000E89004E88E02E897E683FE007411A107BF
:108AB00081884409A1FE80BB0C009AB90800E0C778
:108AC0000622FF00801F61CF601EB800118ED88A79
:108AD0000E22F18A2E23F18A1630F08A3627F18B86
:108AE0003EA088F6C1027503E98B00C60622F1029A
:108AF000802620F1BF8B454C0185A6008395A800F8
:108B00000001455C29457929455229454E2945648E
:108B10007452F7454EFFFF744BF7456840007407E9
:108B2000F74579FFFF743D8B454E3D07007203B852
:108B30000600F745684000740A8B5D79433BC376B5
:108B4000028BC38B5D643BC376028BC3A21AF1A276
:108B50001AF089454CF60622F0017405800E22F0C9
:108B600001E95101C7454C0000C60678F01F802678
:108B700077F0FDE93F01F6C5107425F6C640740F85
:108B8000F60620F1407408C60622F180E92601B0FD
:108B900020E89F03E82701C70607810400E9FC00DD
:108BA0008A0E22F0F6C1087503E9B500F6067DF0DD
:108BB000087415F6067AF040750EF7456800807562
:108BC00007F7454CFFFF7403E98500800E77F0023C
:108BD000C6067DF0FF8B455C8B5506F7E2014541EB
:108BE000115543F74568400074318B455C0145776A
:108BF000F74579FFFF7508C70607811000EB33833F
:108C00007D4E00750E837D52007521C706078111C8
:108C100000EB1FC70607810F00EB178B455C837DB8
:108C20004E007408C70607810F00EB06C7060781D0
:108C30000200C60679F01FC60620F000C60620F125
:108C400000606A009ABB9800E083C40261EB4D901B
:108C5000B021E8DE02E86C00C70607810800EB3CA3
:108C600090F60620F1407415F60622F140740EC607
:108C70000622F140FE0E2C00753BE912FF606A00EF
:108C80009ABB9800E083C40261C60679F01FB02247
:108C9000E8A002E82E00C70607810A00E8A1E483E5
:108CA000FE007411A10781884409A1FE80BB0B005E
:108CB0009AB90800E0C70622FF00801F61CF8B45EC
:108CC0004CEB05908B454C482A061AF180DC00835A
:108CD0007D5C0075083DFFFF7503E9900001455C70
:108CE000294579294552294564294543DFFFF74A0
:108CF0000C0185A6008395A80000EB0A900185A6CB
:108D0000008395A800FF8B455C0145778B5506F7DE
:108D1000E2014541115543EB5490606A009ABB98BB
:108D200000E083C40261802603F17FEB40908B4515
:108D30004CEB05908B454C482A061AF180DC0083E9
:108D40007D5C0075053DFFFF742301455C8B455C30
:108D50002945523DFFFF740C0185A6008395A800AC
:108D600000EB0A900185A6008395A800FFA015F1ED
:108D70008A2616F18A1E14F183E33F894535895D01
:108D800037A01AF1884572A079F088456DA07AF075
:108D900088456EA07DF088456F606A009ABB980098
:108DA000E083C40261C60679F01FC60620F100C642
:108DB0000622F1FFC60623F1FF0EE8F373C6067D17
:108DC000F0FF886D7088556C887571C3601EB8009F
```

```
:108DD000118ED8BF62868A0E22F18A2E23F18A165E
:108DE00030F08A3627F18A1E22F0F6C5107403E9A6
:108DF000E700F6C3087565F6C102743DC60622F1A8
:108E000002802620F1BFA1B0862B06AE86A3B086D5
:108E100074143D00017203B8FF00A21AF1A21AF007
:108E2000A3AE86E90401C706AE860000C60678F048
:108E30001F802677F0FDE9F100F60620F14075036A
:108E4000E9C500F6C1407503E9BD00C60622F14040
:108E5000FE0E2C007503E99400E9CE00F6067DF0C5
:108E6000087503E9A200A01AF1B400F7D80306AE12
:108E7000862906B086F6067AF040740C3D00007430
:108E80004CFF06B086EB4690833EAE8600753E8072
:108E90000E77F002C60620F000C60620F100C606D6
:108EA0007DF0FF606A009ABB9800E083C40261A075
:108EB00015F18A2616F18A1E14F183E33FA39786E3
:108EC000891E9986C70607810200EB4590E84AFE95
:108ED000C70607810800EB3990F6C640740FF60606
:108EE00020F1407408C60622F180EB3E90A01AF1F2
:108EF000B400F7D80306AE862906B086E81BFEC785
:108F00000607810400EB0A90E80FFEC70607810AF6
:108F100000E82CE283FE007411A10781884409A1B6
:108F2000FE80BB0B009AB90800E0C70622FF008054
:108F30001F61CFC3000000000000000000000001F
:108F4000FAC6067DF0FFC60622F1FFC60623F1FF32
:108F5000C60622F0FFC60623F0FFC60620F008C6AC
:108F60000621F000B0FFA214F0A215F0A216F0C680
:108F70000621F110C60620F1828B1EA088F787AC6F
:108F8000000080740F800E20F140C6062C0003C73D
:108F9000474C0100C6067EF008C60677F02A8B878C
:108FA000B4008B97B800881614F1A215F188261624
:108FB000F1C7475C0000F74768020075128A474115
:108FC000A257F08A4742A258F08A4743A259F0C6F6
:108FD0000610F120C60610F0018B4F4E0BC975121A
:108FE000606A009ABB9800E083C40261B80000E99F
:108FF0008100800E39F000C60679F01D8B474CA227
:109000001AF0A21AF1803E4504007405B02DE8065E
:109010005F06B800008EC0F687A30001741026C753
:1090200006300CC8D26C706320000D0EB3CF68718
:10903000A30002741026C70630000F2B26C7063285
:109040000006EFEB25F74768020074102 6C70630CC
:1090500000608926C706320000D0EB0E26C7063016
:1090600000C88A26C706320000D007832628FF8F53
:10907000B80100FBCBC80A00005657B82C872D62F8
:1090800086894 6FCFA1E06B800118ED88EC0BE62D4
:1090900086BF24848B4EFCFCF3A4071FFB9A7856F2
:1090A00000E004088846F7A225F19A815500E0887F
:1090B00046F7F646F7017507B400A90800750AC619
:1090C0000631F001C60632F0009AEB5600E0A21F0E
:1090D00090A22090A1D7868B16D586A30A878916E1
:1090E0000887A1D986A3B086A1D986A3B286A1D9C3
:1090F00086A3B486C706BE860000C7069186FFFF1A
```

```
:10910000C706A5860000C706A3860000C706D98645
:109110000000C706B6860100C6061E9000FA1EB8FB
:1091200000008ED8C7063400006EC706360000E087
:109130001FFBFF7604E85900598946FEA10A878B78
:10914000160887894 6FA8956F8FA1E06B800118E65
:10915000D88EC0BE2484BF62868B4EFCFCF3A4076D
:109160001FFB8B46FA8B56F8A3D7868916D586C780
:1091700006D9860000A1DD86A3DB86803E1E900016
:10918000740583 0ECA8620E8DCC18B46FE5F5EC98B
:10919000C3C80C000056578B7E04C646F500C64671
:1091A000FE009A815500E08846FF8D46F4508D46BA
:1091B000F6506A00900EE8CF0A83C4063D010074A1
:1091C000228A46F8508A46F7508A46F6506A02FFCD
:1091D000360A87FF36088757900EE873AC83C40EB3
:1091E000E9DD02A12587A3B086833EB086007508 1D
:1091F000C6061B8484E9C802EF36A586FF36A3860F
:10920000FF740B6A01900EE825D683C408833EB430
:1092100086007509E8949AB80100E9AD029A280918
:1092200000E08BF00BC074F5837C040A7403E91B27
:1092300002807C09007409807C09027403E98700BC
:1092400056681E009A109600E083C404807EF500E4
:10925000750680 7EFE007448807EFE00740EC64651
:10926000FE00C60631F001C60632F000F646FF04E5
:10927000742E8B46FC8B56FAA3078489160584C688
:1092800045160 1C6451717804D4E21C64514029A52
:10929000BD1C00E0F646FF027406E80E9AE92802BB
:1092A000A01F90A22090C646F500833EB4860075AC
:1092B00003E960FF833EB086007403E95FFFA1B459
:1092C00086A32787E9E3FE807C0905740F807C096B
:1092D000037409807C09077403E9D400803E209060
:1092E00000741A56681E009A109600E083C404A009
:1092F000209004FFA22090C646F501EB388A46FF75
:10930000B400A90800753E8A46FFB400A9010075A3
:10931000348A46FEB4000BC0752BA01F90A220908B
:10932000C646F500C646FE01C60631F0019ACD5686
:1093300000E0A232F0A10A878B1608878946FC89D3
:1093400056FAE965FEA01F90A2209057E88C3E597E
:109350003D01007433E8539956E8FB4259884409AB
:1093600057 56E8F8AB83C40456681E009A1096005E
:10937000E083C404C7062EDAFFFFC70636DA0F0003
:109380009A8C0300E0E94001807EFE00740EC64620
:10939000FE00C60631F001C60632F000C6061E9079
:1093A0000156681E009A109600E083C404E9FAFD95
:1093B000807C09127403EB7D9056681E009A10960B
:1093C00000E083C404833EB486007452FA8026030E
:1093D000F17F6A009ABB9800E059C60623F1FFC6E8
:1093E0000622F1FFC6067DF0FFC60620F0C8C606BD
:1093F00021F001C60620F180C60621F11C9AD70D86
:1094000000E06A229A070E00E059813E648600045B
:1094100075086A109A330F00E059FBE98CFDE88A61
:1094200098C7062EDAFFFFC70636DA0F009A8C03BC
```

```
:1094300000E0E9E2FD807C0909750A5756E81DAB9A
:1094400083C404EB6AC6061B848EEB63837C040D25
:1094500075588BD6807C0901752D579A6A9700E064
:10946000590BC0740F56681E009A109600E083C412
:1094700004E9A9FD6A02FF360A87FF36088757E824
:1094800041AA83C408EB288BDA8A4710508A470F19
:10949000508A470E506A02FF360A87FF3608875700
:1094A000900EE8ABA983C40EEB05C6061B848DE8BD
:1094B000F99756681E009A109600E083C404EB03E7
:1094C000E8E8979AC29500E033C05F5EC9C3C81E42
:1094D00000005657C746E401008D46F88946E2BFB2
:1094E000F0838B36AA88F706CA8600047503E993D1
:1094F0000033D2BB7017832666FFDFEB2CF70666BE
:10950000FF20007424832666FFDF428BC23BC372B8
:109510001802652F0FDC64419OB814C2A84009A0B
:10952000C41D00E033C0E9F101A052F0B400A9026B
:109530000075CABBB80B33D2832666FFDFEB14F786
:109540000666FF2000740C832666FFDF428BC23B59
:10955000C373C3A046F0B400A9130075E233D283ED
:109560002666FFDFEB14F70666FF2000740C8326E7
:1095700066FFDF428BC23BC3739CA048F0B400A9D6
:10958000100075E2FAC60647F001C60649F00180F0
:109590002603F17F6A009ABB9800E059C60679F06D
:1095A0001FC60620F000C60621F000C6067DF0FFAB
:1095B000FBA127878946F6A10A878B16088789466B
:1095C000FE8956FCA1AE868946F4A1B0868946F292
:1095D000A1B4868946F0A1CA868946EAA197868900
:1095E00046EEA199868946ECA1A5868B16A38689AD
:1095F00046FA8956F8A0CD868846E7A0CE868846EA
:10960C00E8A0CC868846E9A012F08846E6A19D86AF
:109610008B169B8683C201150000A3480489164659
:1096200004E8FA003D01007407C746E40000EB3E81
:10963000A19D868B169B8683C201150000A348045A
:1096400089164604E86B433D010075DD8B46F889B9
:1096500045038B5EE28A4702884505C745064A04F2
:109660008C5D08A1648689450A900EE8FE408B4611
:10967000F6A327878B46FE8B56FCA30A878916081C
:10968000878B46F4A3AE868B46F2A3B0868B46F05A
:10969000A3B4868B46EAA3CA868B46EEA397868B35
:1096A00046ECA399868B46FA8B56F8A3A5868916B5
:1096B000A3868A46E7A2CD868A46E8A2CE868A4657
:1096C000E9A2CC868A46E6A212F0837EE4017547C1
:1096D000A168860106A3868316A58600A1A5868BB0
:1096E00016A386A3A18689169F86FF0E9186FF0E7C
:1096F000B086FF0EB486FF06BE86A1BE860106C0F8
:1097000086C706BE8600008306087018316OA877F
:1097100000A1B486A327878B46E45F5EC9C3C8084F
:1097200000005657C746FE0100C746F846049A0D8A
:109730000700E08BF80BFF750533C0E91402900EAB
:10974000E8802AA118878B1616878946FC8956FA65
:10975000A01A87B4008BF00BF67503E97F008B1E0F
```

```
:10976000668633C98B56FC8B46FA9AB8004CF8894A
:10977000551089450E8975128B5EF88A0788451445
:109780008A47018845158A4702884516C6451A0347
:10979000C6450800830E28FF40FF36AA886A03FFEB
:1097A00036FE809AED432BF283C4063D0100750618
:1097B000C6450900EB17C7062EDA0300893E30DAEA
:1097C000C70636DA03009A8C0300E08BF88326285C
:1097D000FFBF807D09017405C746FE00008BC6F7F8
:1097E0002E648601064604831648040083 7EFE012B
:1097F0007403E99B00A16686483BC67503E99000A7
:109800008B1E668633C98B56FC8B46FA9AB8004C81
:10981000F803C683D20005010083D2008955108960
:10982000450EA166862BC6488945128B5EF88A07CD
:109830008845148A47018845158A4702884516C617
:10984000451A03C6450800830E28FF40FF36AA8844
:109850006A03FF36FE809AED432BF283C4063D0176
:10986000007506C6450900EB17C7062EDA03008906
:109870003E30DAC70636DA03009A8C0300E08BF834
:10988000832628FFBF807D09017405C746FE0000BE
:10989000A1668648F72E64868B169D868B1E9B8656
:1098A00003D883D20083C30183D200891648048978
:1098B0001E4604837EFE017403E98A008B1E6686C1
:1098C00033C98B36B4806BF6058B94A9588B84A76B
:1098D000589AB8004CF889551089450EC7451201B1
:1098E000008B5EF88A078845148A47018845158AE7
:1098F0004702884516C6451A03C6450800830E2848
:10990000FF40FF36AA886A03FF36FE809AED432B9C
:10991000F283C4063D01007506C6450900EB17C772
:10992000062EDA0300893E30DAC70636DA03009ADB
:109930008C0300E08BF8832628FFBF807D0901742B
:1099400005C746FE0000893E2EDA9A7E0700E08BAE
:1099500046FE5F5EC9C3C80E00005657833E278788
:10996000007505 33C0E98201A020F08846F7A021E8
:10997000F08846F6A07EF08846F5A077F08846F499
:10998000FA066A000726A130008946F826A13200AF
:109990008946FA07FBC646FF00830E28FF408D4626
:1099A000F350FF76068A46FF50900EE8DA0283C431
:1099B000068946FCFA066A00078B46F826A33000A3
:1099C0008B46FA26A3320007FB837EFC01740783D3
:1099D0002628FFBFEB8D8A46F7A220F08A46F6A222
:1099E00021F08A46F5A27EF08A46F4A277F0BF16EF
:1099F000878A4501A216F08A05A215F0A01A87A24F
:109A000014F0A0AC86A219F0A0AD86A218F0A0AB0D
:109A100086A217F0BEA3868A4402A259F08A4401A6
:109A2000A258F08A04A257F06067DF001803E24B9
:109A300087027407803E248703751C802628F07FE8
:109A4000807EF3007416800E2AF080800E28F000CD
:109A5000800E7EF005EB05802628F07FA010F02414
:109A600008A210F0E83468C60679F00CC6061AF0B1
:109A7000018A46F3B4000BC0751FC606D08001688A
:109A800000D068EAC09ADC6D00E083C40483262815
```

```
:109A9000FFBF803ED0800174F9830E28FF409AF307
:109AA0006D00E0832628FF9F8A46F3B4000BC07543
:109AB00036803ED08003752F8A46FFFEC08846FF61
:109AC0003C067303E9D2FE8B1EAA88C6471603C65E
:109AD000471793C6471800C647140280674EDF9A9F
:109AE000BD1C00E0E97CFEB801005F5EC9CBC80E7A
:109AF00000005657833E278700750533C0E984016F
:109B0000A020F08846F7A021F08846F6A07EF088D5
:109B100046F5A077F08846F4FA066A000726A130D9
:109B2000008946F826A132008946FA07FBC646FF9F
:109B300000830E28FF408D46F350FF76068A46FFCD
:109B400050900EE8420183C4068946FCFA066A007A
:109B5000078B46F826A330008B46FA26A33200076F
:109B6000FB837EFC017407832628FFBEEB8D8A46AA
:109B7000F7A220F08A46F6A221F08A46F5A27EF0EE
:109B80008A46F4A277F0BF16878A4501A216F08AAA
:109B900005A215F0A01A87A214F0A0AC86A219F0B5
:109BA000A0AD86A218F0A0AB86A217F0BEA3868A4D
:109BB0004402A259F08A4401A258F08A04A257F044
:109BC000F706CA86020074078000E12F002EB0580C9
:109BD0002612F0FDC6067DF001803E248702740740
:109BE000803E2487037515807EF300740F800E2A53
:109BF000F080800E28F000800E7EF005C60610F082
:109C000001C60679F01DC6061AF0018A46F3B400B3
:109C10000BC0751FC606D080016800D068EAC09AE4
:109C2000DC6D00E083C404832628FFBF803ED08023
:109C30000174F9830E28FF409AF36D00E083262813
:109C4000FF9F8A46F3B4000BC07536803ED0800378
:109C5000752F8A46FFFEC08846FF3C067303E9D095
:109C6000FE8B1EAA88C6471603C6471793C6471819
:109C700000C647140280674EDF9ABD1C00E0E97AF7
:109C8000FEB801005F5EC9CBC842000056C646FF61
:109C9000008B4608A324908D4606A334906A006A80
:109CA000006A00E8A12183C4068D46DA50E8021557
:109CB000593D01007403E911010EE8062590681A68
:109CC000876816876A1AE8982183C406682587681A
:109CD000A000E88C2183C4048D46E450E8C80359F1
:109CE0008D46F4508D46BE506A169A006B00E08394
:109CF000C4063D0B00756C8A46FFFEC08846FF8097
:109D00007EFF0C721133F66A006A156A04E8372187
:109D100083C406E9B400807EF400750D33F68A46EC
:109D2000FA508A46F95050EBE46A2C9A006B00E036
:109D3000590EE88E24908D46E450E86A0359832634
:109D400028FFDF813E1287FF007408813E1487FFE1
:109D5000007510E82A133D0100756F8D46DA50E852
:109D6000A915598D46FC508D46DA50E8B20883C4D7
:109D7000048BF06A01E8EF21590BF6744DFF760A67
:109D80008D46EC508D46E450FF76FCE8550183C4C7
:109D9000088BF083FE0A750DE8F2003D01007505A1
:109DA000BE0100EB2583FE1E7420832628FFDF8D75
:109DB00046E4508D46EC50E8C91583C4048BF06A24
```

```
:109DC00000E8A3215983FE0174998D46BE506A4272
:109DD0009A006B00E083C40483FE0174066A00E805
:109DE000852159E826148BC65EC9CBC808000056E9
:109DF0008B76068D46FE50E8A614598846FDFF3640
:109E0000DA80FF36D8800EE8E8059083C4046BC082
:109E1000058B160C008B1E0A0003D88956FA895E42
:109E2000F8807EFD00751A8E46FA268A4704B40033
:109E30003B061287750BA0D380B4003B06148774D1
:109E400040C45EF8268A4704B400C1E0068BD0A067
:109E5000D380B4000BD0C646FD0152FF76FEE81752
:109E60000883C4048904833C01751AA0D380B4001C
:109E7000A31487C45EF8268A4704B400A31287EBB4
:109E800004C70401008A46FDB4005EC9CBC80600C1
:109E9000008D46FE50E80814590BC0740433C0EB23
:109EA00040FF36DA80FF36D8800EE845059083C43F
:109EB000046BC0058B160C008B1E0A0003D8895654
:109EC000FC895EFA8E46FC268A4704B4003B0612E3
:109ED0008775CAA0D380B4003B06148775BFB8014C
:109EE00000C9C3C81E000056578B76068B7E0A6ACF
:109EF000131E68D180168D46E2509AA59500E08326
:109F0000C40AC646FF00A0108750FF360E87FF36F2
:109F10000C878A46FF50FF361C00FF361A000EE8F9
:109F20006F0B9083C40C3D14007506B81E00E972D7
:109F300001A1DA808B16D8808946FC8956FAA0D315
:109F4000808846F9FF7608E85D01596A13168D4648
:109F5000E2501E68D1809AA59500E083C40AA1DA78
:109F6000808B16D8803B46FC770D7403E9B2003B2A
:109F700056FA7703E9AA008A04B400C1E003998B7A
:109F80001EDA808B0ED8802B4EFA1B5EFC3BD377FB
:109F90000C7303E98B003BC17303E98400C41E16F4
:109FA0000026807F0F0275278B44019952508B0E3B
:109FB000DA808B1ED8802B5EFA1B4EFC33D2B8E6BB
:109FC000019AB8004CF852509A0D004CF8EB128AE6
:109FD00004B40050A1D8802B46FA6BC012995BF7ED
:109FE000FBA32290833E2290037C5B832E2290036E
:109FF0008B1E34908A07B4000503003B0622907F35
:10A00000208B1E34908A07B400508B46046BC00F1F
:10A01000992BC2D1F85A03D083C21E3B1622907DE1
:10A0200006B81400EB7D908A46F93A06D380741F77
:10A03000803ED3800074188D46F6500EE8ACFD5972
:10A04000837EF601740433C0EB59C60501EB5180E1
:10A050007EFF007548800E28E0408A04B40050A1AD
:10A0600022905AF7EABB120099F7FB04FFA2CE80B8
:10A07000C606D080000EE87120908A04B40050B863
:10A080000807995BF7FB6BC032A352FFC70650FF6E
:10A090000000C70656FF01E0832628FFFEC6050024
:10A0A000B80A005F5EC9C3C8140000568B76046A04
:10A0B000131E68D180168D46EC509AA59500E0835A
:10A0C000C40AFF361800FF361600E88A0683C40467
:10A0D000C41E160026807F0F027511A0E280B40016
:10A0E000C1E00503D8268B4711894401A0E280B462
```

```
:10A0F00000C1E005C41E160003D8268A4704880460
:10A10000A1E0808B16DE80894405895403A0DC80A1
:10A110008844076A13168D46EC501E68D1809AA5B4
:10A120009500E083C40A5EC9C3C806000056578B79
:10A130007E0CC41E1200268A0F268A47048846FF1A
:10A140008AC1B400C1E0058B16140003D883C32074
:10A150008956FC895EFAE9A900C45EFA268B470A93
:10A16000268B57083B46087D03E990007F083B5645
:10A17000067703E98600836EFA20C45EFA6A002639
:10A18000FF77168B46088B5606262B5708261B474B
:10A190000A50529A0D004CF8C45EFA268B4F0E26D8
:10A1A0008B5F0C03D813CA8B760A894C02891C8BEF
:10A1B0005EFA6A0026FF77168B46088B5606262B1A
:10A1C0005708261B470A50529A1C004CF8C45EFAE6
:10A1D000268A571002D088158A05B40033D226F794
:10A1E00077168B5E0A0107835702008A05B4008B3D
:10A1F0005EFA33D226F77716815EB1DFEC183462B
:10A20000FA203A4EFF7703E94FFFC605FF8B5E0A3F
:10A21000C747020000C707FFFF5F5EC9CBC8060043
:10A2200000C45E06268A07B400488946FA268A4793
:10A2300006B4008BC8C1E0058B560803D883C32041
:10A240008956FE895EFCEB1BC45EFC268B4702260A
:10A250008B173B460C7207770F3B560A770A4183F0
:10A2600046FC203B4EFA76E08BC1C9CBC804000007
:10A2700056807E0A007578C45E06268A4710B400B0
:10A28000488BF0268A4706B4008BC8C1E0058B5680
:10A290000803D88956FE895EFCEB50C45EFC268B11
:10A2A000470D268B570B3B460E7F077C393B560CE0
:10A2B0007234C45EFC268B470D268B570B3B460E33
:10A2C000750E3B560C7509268A470F3A46107216D2
:10A2D0008A4610B400C45EFC263B47047203E90CB6
:10A2E000018AC1E90901418346FC203BCE7EACC412
:10A2F0005E06268A470A3A460A7574268A470BB4D0
:10A30000008BF0268A4710B4008BC8C1E0058B563D
:10A310000803D88956FE895EFCEB50C45EFC268B90
:10A32000470D268B570B3B460E7F077C393B560C5F
:10A330007234C45EFC268B470D268B570B3B460EB2
:10A34000750E3B560C7509268A470F3A4610721651
:10A350008A4610B400C45EFC263B47047302EB81BE
:10A36000E98A00E97BFF418346FC203BCE7EAC803E
:10A370007E0A007578C45E06268A07B400488BF012
:10A38000268A470BB400408BC8C1E0058B560803F2
:10A39000D88956FE895EFCEB50C45EFC268B470DC7
:10A3A000268B570B3B460E7F077C393B560C72348D
:10A3B000C45EFC268B470D268B570B3B460E750E55
:10A3C0003B560C7509268A470F3A461072168A4684
:10A3D00010B400C45EFC263B47047303E902FFEBA4
:10A3E0000CE9FDFE418346FC203BCE7EACB0FE5E18
:10A3F000C9CB558BEC56C41E0A00268A4704B4000C
:10A400008BF0268A07B4008BC8EB248BC16BC00588
:10A41000C41E0A0003D8268B4702268B173B46082A
```

```
:10A42000720C77053B560676058BC148EB07413B1E
:10A43000CE76D88BC65E5DCBC804000056578B7EA7
:10A44000088B760AC6064E0802C41E1200268A47EA
:10A4500004B400268A17B6002BC240A34F088D46CD
:10A4600004A35208C606510800C606540805268AE9
:10A4700007B400C1E0058B16120003D089165708F7
:10A48000A11400A35508900EE83E1FC41E1200261A
:10A490008A07B4008B16590803D0C1E205A1140045
:10A4A00003DA8946FE895EFC803E5B080075048302
:10A4B0006EFC20C45EFC268B4706268B57043B4669
:10A4C00006723F77053B56047638C45EFC268B4700
:10A4D0000A268B57080356041346062B17261BFD
:10A4E000470289450289156A006A208B46FC33D2EF
:10A4F0002B06120083DA0052509A0D004CE88804A3
:10A50000EB0CC745020080C7050000C604FE5F5E75
:10A51000C9C3C80A000056C41E1200268A0F268A24
:10A5200047048846FF8AC1B400C1E0058B161400B9
:10A5300003D88956F8895EF6E9D500C45EF6268B05
:10A54000470E268B570C3B46087C0D7E03E9C8005E
:10A550003B56067603E9C000C45EF6268B470E26FE
:10A560008B570C3B460875113B5606750C268A47DF
:10A57000103A460A7603E99F00C45EF6268B47131D
:10A58000268B57113B46087F0A7D03EB7D903B5697
:10A59000067277C45EF6268B4713268B57113B460F
:10A5A00008750E3B56067509268A47153A460A7203
:10A5B00059C45EF6268B5F1633C98B76F68B560828
:10A5C0008B4606262B440C261B540E9AB8004CF8DA
:10A5D0008956FC8946FA8A460AB40033D2C45EF62C
:10A5E000268A5F10B700508BC352995B592BC81B4A
:10A5F000DA014EFA115EFC8B5EF6268B570A268B2B
:10A6000047080346FA1356FCEB13FEC18346F620B7
:10A610003A4EFF7403E923FFBA008033C05EC9CB12
:10A62000558BEC56578B7E06C705000033F656E86F
:10A6300068175956E8FF1959687C159A9D9400E0EF
:10A6400059C60624F063E82A1B57FF7604E8B508CC
:10A6500083C4048BF00BF6740583FE0175CE83FE74
:10A6600001750F683190682D9068A400E8F2178397
:10A67000C4068BC65F5E5DC3C8060000568B7604B9
:10A680008D46065068A600E8D71783C404FF7606F7
:10A69000569A690206EF83C4048946FE837EFE0152
:10A6A00074298D46FA508A46FE509A640306EF8359
:10A6B000C4048A46FC508A46FB508A46FA50E88613
:10A6C0001783C406C746FE0000EB0CF7C600807473
:10A6D000066A31E88B17598B46FE5EC9C3C8020073
:10A6E0000056578B4E04C41E0E00268B7F02268B0D
:10A6F000174AEB01478BC76BC006C41E0E0003D878
:10A7000026390F7F043BFA7CEB6A006A148BC76B17
:10A71000C006C41E0E0003D88BC1262B07998BDF01
:10A720006BDB068B360E0003F350268B44045299E4
:10A73000595B9AB8004CF852509A0D004CF8894673
:10A74000FE8BC76BC006C41E0E0003D8268B4702C3
```

```
:10A750000346FE5F5EC9C3C8040000A0E280B400E7
:10A76000C1E005014604C45E04A1DA808B16D880DE
:10A77000262B17261B47028946FE8956FCC41E1647
:10A780000026807F0F027403E99000C45E04268BCC
:10A790004711995250 8B4EFE8B5EFC33D2B81B0092
:10A7A0009AB8004CF852509A0D004CF8C45E04263A
:10A7B0008B4F08268B5F0603D813CA890EE0808969
:10A7C0001EDE806A006A1B8B5E04268B471199503F
:10A7D0005233D2B86400595B9AB8004CF852509A80
:10A7E0000D004CF852508B4EFE8B5EFC33D2B86499
:10A7F000009AB8004CF852509A1C004CF8C45E0401
:10A80000268A570AB60003D08916DC80BB6400A1F3
:10A81000DC8033D2F7F3A3DC80EB4DC45E046A0026
:10A8200026FF7704FF76FEFF76FC9A0D004CF8C4F5
:10A830005E04268B4F08268B5F0603D813CA890E49
:10A84000E080891EDE808B5E04268A470AB40050B1
:10A850006A0026FF7704FF76FEFF76FC9A1C004C08
:10A86000F85A03D08916DC80C45E04A1DC8033D2A0
:10A8700026F777040106DE808316E08000A1DC80E5
:10A8800033D226F777048916DC80C9C3C8040000D8
:10A89000C6064E0802C41E1200268A4704B40026CB
:10A8A0008A17B6002BC240A34F088D4608A3520852
:10A8B000C606510808C606540805268A07B400C112
:10A8C000E0058B16120003D089165708A11400A3C7
:10A8D0005508900EE8F21AC41E1200268A07B4002A
:10A8E0008B16590803D0C1E205A1140003DA89468A
:10A8F000FE895EFC803E5B08007504836EFC206A66
:10A90000006A208B46FC33D22B06120083DA0052F9
:10A91000509A0D004CF8A2E380C45EFC8B460A8B73
:10A92000 5608262B5708261B470A268B4F02268BD4
:10A930001F03DA13C8890EDA80891ED8808B460A75
:10A940008B5608A3D6808916D480FF36DA80FF366E
:10A95000D880FF7606FF76040EE806009083C408D0
:10A96000C9C3C8080000C6064E0802C45E06268A8F
:10A9700007B400A34F088D460AA35208C606510823
:10A9800000C606540805268A4706B400C1E0058BB8
:10A99000560603D0891657088B4608A35508900E13
:10A9A000E8261AC45E06268A4706B4008B165908A4
:10A9B00003D0C1E2058B460803DA8946FE895EFCB6
:10A9C000803E5B08007504836EFC20C45EFC8B46F1
:10A9D0000C8B560A262B17261B47028946FA8956E6
:10A9E000F86A006A208B46FC33D22B460683DA00D5
:10A9F00052509A0D004CF8A2E2808B460C8B560AFE
:10AA0000A3DA808916D880C45EFC268A4710A2D3B8
:10AA1000806A0026FF7704FF76FAFF76F89A0D0029
:10AA20004CF8C45EFC268B4F08268B5F0603D813B8
:10AA3000CA890EE080891EDE808B5EFC268A470A6A
:10AA4000B400506A0026FF7704FF76FAFF76F89A82
:10AA50001C004CF85A03D08916DC80C45EFCA1DCD3
:10AA60008033D226F777040106DE808316E080006B
:10AA7000A1DC8033D226F777048916DC8068E38076
```

```
:10AA800068D480FF760CFF760AE8ACF983C408C965
:10AA9000CBC8040000568B460E8B560CA3E0808971
:10AAA00016DE808A4610B400A3DC808A461050FF70
:10AAB000760E528A460A50FF7608FF76060EE8ABFD
:10AAC000F783C40CA2E280803EE280FE7506B814D3
:10AAD00000E98400A0E280B400C1E0058B56088B39
:10AAE0005E0603D88956FE895EFC8E46FE268B5F85
:10AAF0000433C98B76FC8B560E8B460C262B4406F2
:10AB0000261B54089AB8004CF8C45EFC268B4F02F2
:10AB1000268B1F03D813CA8A4610B40003D883D1EA
:10AB2000008B76FC268A440AB4002BD883D900898E
:10AB30000EDA80891ED8808B5EFC268A4710A2D34D
:10AB40008068E38068D480FF36DA80FF36D880E8FA
:10AB5000E6F883C408B80A005EC9CBC812000056E4
:10AB6000578B76048B7E0C8B44058B5403B946E8F7
:10AB70008956F68A4407884F58B45058B55033B75
:10AB8000460875133B5606750E8A45073A460A7500
:10AB9000068A05B400EB50C41E160026807F0A0109
:10ABA000750E8A460A50FF7608FF76066A01EB0C9E
:10ABB0008A460A50FF7608FF76066A00FF361800BC
:10ABC000FF3616000EE8C9FE83C40CC41E1600260C
:10ABD0008A4710B4008A16E280B60003C248C1E07A
:10ABE0000503D8268B47048946F28B1E34908A07CA
:10ABF000B400050C00508B46F25AF7EA05120048E3
:10AC0000BB120033D2F7F38BD08A460AB4003BC2A2
:10AC100073118A460A0246F288460A836E06018349
:10AC20005E08008A460A2AC288460AFF36DA80FF92
:10AC300036D8800EE8BBF783C4048846EF33FF8D17
:10AC400046FE50E85A0590BC07420A18F8625068F
:10AC5000008946FA817EFE00447435837EFA0075D1
:10AC600005BF000AEB2DBF0014EB28A0D380B40071
:10AC70003B061487751A8A46EFB4006BC005C41EE4
:10AC80000A0003D8268A4704B4003B0612877403DF
:10AC9000BF00020BFF745D8B46FE0D0002894 6FE6D
:10ACA000A0D380B4008A56EFB6006BD205C41E0A4A
:10ACB0000003DA268A5704B600C1E2060BC28946B1
:10ACC000FC50FF76FEE8B0F983C4043D0100740532
:10ACD00033C0E92C02A0D380B400A314878A46EFC6
:10ACE000B4006BC005C41E0A0003D8268A4704B40A
:10ACF00000A31287B901000BFF740141C41E1600A6
:10AD000026807F0F0275478BC1F76C01BBE60133CC
:10AD1000D2F7F38A56F502D08856F58B4401995242
:10AD2000508A46F5B4006BC01B9952509A0D004CE6
:10AD3000F80146F61156F88A46F5B400508B4401E6
:10AD4000BB1B0099F7FB8BD85899F7FBEB3C8A04A7
:10AD5000B400508BC15AF7EABB120033D2F7F38A22
:10AD600056F502D08856F58A46F5B4008A14B60026
:10AD700052995BF7FB990146F61156F88A46F5B4ED
:10AD8000008A14B60052995BF7FB8856F5C746F067
:10AD90000000397EF07303897EF08B46F0050002D7
:10ADA00048C1E809BB120033D2F7F38BCAC41E16A0
```

```
:10ADB0000026807F0F0275478BC1F76C01BBE6014F
:10ADC00033D2F7F38A56F502D08856F58B440199B1
:10ADD00052508A46F5B4006BC01B9952509A0D0030
:10ADE0004CF80146F61156F88A46F5B400508B44EB
:10ADF00001BB1B0099F7FB8BD85899F7FBEB3C8AFA
:10AE000004B400508BC15AF7EABB120033D2F7F3F7
:10AE10008A56F502D08856F58A46F5B4008A14B6EB
:10AE20000052995BF7FB990146F61156F88A46F5F0
:10AE3000B4008A14B60052995BF7FB8856F58A462F
:10AE4000F5B400F76EF28A14B600505233D25B5854
:10AE5000F7F38A560AB6003BC27608836E06018372
:10AE60005E08008B46F005000248C1E809BB1200ED
:10AE700033D2F7F38BD88B46088B56063B46F87CCB
:10AE8000107F053B56F67609295E06835E0800EBC7
:10AE900007015EF68356F8008D460A508D4606502F
:10AEA00068A500E8BB0F83C4068D46E5508D46F6B5
:10AEB0005068A500E8AA0F83C4068B46F88B56F6A7
:10AEC0003B46087F0C7C053B56067305B800C0EB7B
:10AED00003B800808B5E0E89078B46F88B56F63BD5
:10AEE00046087C0F7F053B560676088B46F62B46B8
:10AEF00006EB068B46062B46F68B5E108907B801DB
:10AF0000005F5EC9C3C816000056578B76048B7E5F
:10AF100006803E2C9001750B56E8EF0359B80100EE
:10AF2000E95901837C06047D21FF44068B44068990
:10AF3000056A01680180E8361183C4043D0100758B
:10AF400003E93501E91B01E92F016A131E68D1806D
:10AF5000168D46EA509AA59500E083C40A833D0009
:10AF6000746FC70500006A046801C0E8011183C45A
:10AF7000043D01007403E9E900C744080000C41E51
:10AF80001A00268A470BB400268A5710B60003C25F
:10AF9000992BC2D1F88904268A470BB400268A5718
:10AFA00010B60003C2992BC2D1F88944028B04C1A8
:10AFB000E005C41E1A0003D826FF770226FF37FFDC
:10AFC000361C00FF361A000EE897F983C408E982A0
:10AFD00000C41E1A00268A470BB4003B047F0B26D0
:10AFE0008A4710B4003B44027D1AC41E1A00268A08
:10AFF000470BB4003B047E04FF04EBB1FF4C028B13
:10B000004402EBAB837C08047D1BFF44086A0168A3
:10B010000180E85A1083C4043D01007503E95EFF16
:10B02000EB40E959FFA12890FF0E28900BC0750E48
:10B030006A006A156A04E80E0E83C406EB246A00EF
:10B04000680051E832F683C4043D0100751456E8E7
:10B05000B902598D46FE500EE890ED59837EFE01EF
:10B06000740433C0EB166A13168D46EA501E68D17D
:10B07000809AA59500E083C40AB802005F5EC9C348
:10B08000C80C0000C41E1A0026807F0A017516F63F
:10B090000611F10274059AFF9300E0A06686FEC8CF
:10B0A000A213F1EB08A06686FEC8A213F0C41E1A14
:10B0B00000268A4704B400C1E0058B161C0003D8A3
:10B0C0008956FA895EF88E46FA268B4704A366866F
:10B0D000A06686FEC8A213F1268A4710B400A31406
```

```
:10B0E0008726FF770226FF370EE806F383C4046B3A
:10B0F000C0058B160C008B1E0A0003D88956F689F2
:10B100005EF48E46F6268A4704B400A31287C7462B
:10B11000FE0044C1E0060B0614878946FC50FF760A
:10B12000FEE854F583C4043D0100740433C0EB0F02
:10B1300068015BE8D40E593D010075F0B80100C903
:10B14000C3C81A00006A131E68D180168D46E650E7
:10B150009AA59500E083C40A8A460A50FF7608FF44
:10B1600076066A00FF361800FF3616000EE821F951
:10B1700083C40CA0E280B400C1E0058B1618008BDC
:10B180001E160003D88956FE895EFC8E46FE268B6D
:10B1900047042B06DC80488946FA6A13168D46E67A
:10B1A000501E68D1809AA59500E083C40A8B46FAA8
:10B1B000C9CB558BEC900EE8463C6A01E8A80D59C6
:10B1C000C70628900100C70626900C00FF7604E809
:10B1D00039015983262BFFEF802603F17F6A009A00
:10B1E000BB9800E059800E03F180066A000726C76D
:10B1F00062000FBC026C706220000D007C606D0E6
:10B200008000C606CF8000B801005DC3A0E280B414
:10B2100000C1E005C41E1A0003D8268B4704A366AC
:10B2200086803E2487027407803E2487037505804C
:10B230002628F05FA06686FEC8A213F06A04E862C2
:10B240000E59C606450400C350535152061E5657A8
:10B2500055BD00118EDDA022F1B400A332908026EE
:10B2600020F1EFC60622F120A016F1A22E90A01523
:10B27000F1A22D90A014F1A23190F60622F12075D2
:10B28000E2800E2C9001C60679F01FC60622F1104E
:10B29000C70622FF00805D5F5E1F075A595B58CFCB
:10B2A000558BEC568B760433D2F706CA86020074AF
:10B2B0000EC7040048F7068F8604007527EB22F7B7
:10B2C00006CA860400740EC704004CF7068F860277
:10B2D000007511EB0CC7040044F7068F8606007456
:10B2E00003BA01008BC25E5DC3558BECC70656FFE7
:10B2F0000040832630FFFE8B4604A352FFC7065052
:10B30000FF0000C70656FF00C05DC3558BEC568B8F
:10B310007604C744040000C744060000C744080080
:10B32000005E5DC350535152061E565755BD001165
:10B330008EDDA022F0B400A33290800E2C9001A0EC
:10B3400016F0A22E90A015F0A22D90813E2D900611
:10B35000967608C7062F90FFFFEB06C7062F9000D2
:10B3600000A014F0243FA23190C60679F01FC60653
:10B3700022F041C70622FF00805D5F5E1F075A5919
:10B380005B58CFC81E000056578B7E04A12690FF45
:10B390000E26900BC07D116A006A156A04E8A70AA0
:10B3A00083C40633C0E908026A131E68D180168D73
:10B3B00046E2509AA59500E083C40AB9FFFFEB016D
:10B3C000418B45058B55038BD943C1E303C4360636
:10B3D0000003F3263B44027FE77C05263B1473E021
:10B3E000884EF78BC7050700508BC70503005068D0
:10B3F000A200E86C0A83C406B9FFFFEB01418B5E33
:10B40000068B47058B57038BD943C1E303C436062C
```

```
:10B410000003F3263B44027FE47C05263B1473DDE6
:10B42000884EFF8B4606050700508B460605030035
:10B430005068A300E82A0A83C4068A46F7B400C10C
:10B44000E003C41E060003D8268B4706268B57044C
:10B450008946FA8956F88A46FFB4006BC00C01464B
:10B46000F8C45EF8268B5F0A83FB0D7603E92A0198
:10B47000D1E32EFFA7B4B58B5E068A07508A470733
:10B4800050FF7705FF77038A450750FF7505FF7565
:10B4900003E83C0183C40EE9FD00FF7505FF750359
:10B4A000FF76FAFF76F8E85302E9E800FF7505FF3A
:10B4B0007503FF76FAFF76F8E8BA02E9D6008B5EEC
:10B4C00006FF7705FF7703FF7505FF7503FF76FA23
:10B4D000FF76F8E81803E99600FF7505FF7503FF8E
:10B4E00076FAFF76F8E88E03E9A900FF7505FF7587
:10B4F00003FF76FAFF76F8E8F903E99700FF76068E
:10B5000057FF76FAFF76F8E85204E98700FF7606DF
:10B510008B5E068A470750FF7705FF770357E804DD
:10B520000583C40AEB71FF760657FF76FAFF76F8BB
:10B53000E84605EB5FFF7505FF7503FF76FAFF76BA
:10B54000F8E8F605EB4EFF7505FF7503FF76FAFF89
:10B5500076F8E84E06EB3D8B5E06FF7705FF770336
:10B56000FF7505FF7503FF76FAFF76F8E8B10683ED
:10B57000C40CEB23FF7505FF7503FF76FAFF76F821
:10B58000E82507EB0FFF7505FF7503FF76FAFF76D9
:10B59000F8E88D0783C4088946FC6A13168D46E2D5
:10B5A000501E68D1809AA59500E083C40A8B46FCA2
:10B5B0005F5EC9C377B49AB4ACB4BEB4D9B4EBB4CB
:10B5C000FDB40DB526B535B546B557B574B585B5D9
:10B5D000C80600005668005BE82F0A593D01007458
:10B5E0000533C0E913016A00E87C09598D46FC5017
:10B5F0000EE8F7E7598946FE837EFC0175E36A0190
:10B60000E86409598B46068B56043B460C75083B8B
:10B61000560A7503E98D008B46068B56043B460C93
:10B620007F0C7C053B560A7305B801C0EB03B801DB
:10B63000808946FA8B46068B56043B460C7C0F7F6E
:10B64000053B560A76088B46042B460AEB068B46CA
:10B650000A2B46048BF050FF76FAE8120A83C404E2
:10B660003D01007403E979FF8B1E34908A07B40012
:10B670008BD66BD20303C20509008BC8BB1200999D
:10B68000F7FB8BCA8A4610B400508BC15AF7EA996F
:10B69000F7FB8A560802D08856088A46083A460EB2
:10B6A0007654EB45837EFE00754C8B1E34908A07E2
:10B6B000B400050C008BC88A4610B400508BC15AE8
:10B6C000F7EABB120099F7FB8A560802D0885608A1
:10B6D0008A4610B4008A560EB60003C28A5608B6CF
:10B6E000003BC27D046A02EB026A01680180E87EC9
:10B6F0000983C404EB03B801005EC9C3C80200009B
:10B7000068005BE80409593D0100740433C0EB6331
:10B71000C45E04268B072B4608506801C0E84F0919
:10B7200083C4043D010075E46A00E83A08596A00E0
:10B73000C45E0426FF770626FF77046A00FF3618EA
```

```
:10B7400000FF3616000EE848F383C40C8D46FE5009
:10B750000EE897E659837EFE0175B16A01E8070895
:10B7600059C45E04268B470840506801C0E8FF08B2
:10B7700083C404C9C3C802000068005BE88B085991
:10B780003D0100740433C0EB63C45E048B4608269D
:10B790002B0750680180E8D60883C4043D0100757A
:10B7A000E46A00E8C107596A00C45E0426FF770610
:10B7B00026FF77046A00FF361800FF3616000EE8F1
:10B7C000CFF283C40C8D46FE500EE81EE659837EF0
:10B7D000FE0175B16A01E88E0759C45E04268B47E5
:10B7E000084050680180E8860883C404C9C3C802C1
:10B7F000000068005BE81208593D0100740433C082
:10B80000EB72C45E04268B072B4608506801C0E823
:10B810005D0883C4043D010075E46A00E8480759E7
:10B820006A00C45E0426FF770226FF376A00FF36EF
:10B830001800FF3616000EE857F283C40C8D46FE42
:10B84000500EE8A6E559837EFE0175B26A01E8163E
:10B850000759C45E04268B4702268B173B460E7F92
:10B860001075053B560C770968015BE89C0759EB9E
:10B8700003B80100C9C3C802000068015BE88A0779
:10B88000593D0100740433C0EB67C45E048B460865
:10B89000262B0750680180E8D50783C4043D0100CA
:10B8A00075E46A00E8C006596A00C45E0426FF77A2
:10B8B0000626FF77046A00FF361800FF3616000ED2
:10B8C000E8CEF183C40C8D46FE500EE81DE5598389
:10B8D0007EFE0175B16A01E88D065968005BE829B2
:10B8E00007590BC074A06A01680180E8810783C40E
:10B8F00004C9C3C802000068015BE80D07593D0197
:10B9000000740433C0EB53C45E04268B072B460837
:10B91000506801C0E8580783C4043D010075E46A1B
:10B9200000E84306596A00C45E0426FF770226FF3A
:10B93000376A00FF361800FF3616000EE852F18312
:10B94000C40C8D46FE500EE8A1E459837EFE0175BD
:10B95000B26A01E8110659B80100C9C3C81600004F
:10B96000568B76086A131E68D180168D46EA509A67
:10B97000A59500E083C40A68015BE88D06593D0186
:10B9800000740533C0E99A006A00C45E0426FF779C
:10B990000226FF376A00FF361800FF3616000EE851
:10B9A000EFF083C40C6A00E8BD05598D46FE500EC9
:10B9B000E838E459837EFE0175C96A01E8A8055993
:10B9C0008B44058B5403C45E04262B17261B4702A9
:10B9D0000BC07C3A7F0583FA0576336A13168D46D1
:10B9E000EA501E68D1809AA59500E083C40AFF76CC
:10B9F0000A6A00C45E04268B4702268B1783C202A4
:10BA000015000050525 6E81C0083C40AEB148B4406
:10BA100003C45E04262B074050680180E85006836B
:10BA2000C4045EC9C3C804000068015BE8DB0559B3
:10BA30003D0100740433C0EB3E8D46FC508D46FE44
:10BA400050FF760C8A460A50FF7608FF7606FF768E
:10BA500004E807F183C40E3D010075D9837EFC0024
:10BA60007505B80100EB10FF76FC8B46FE2500C083
```

```
:10BA700050E804EC83C404C9C3C8160000568B7692
:10BA8000086A131E68D180168D46EA509AA5950063
:10BA9000E083C40A68015BE87005593D0100740544
:10BAA00033C0E992006A00C45E0426FF770226FFD5
:10BAB000376A00FF361800FF3616000EE8D2EF8313
:10BAC000C40C6A00E8A004598D46FE500EE81BE342
:10BAD00059837EFE0175C96A01E88B0459C45E046E
:10BAE000268B4702268B172B54031B44050BC07C67
:10BAF000327F0583FA05762B6A13168D46EA501EAF
:10BB000068D1809AA59500E083C40AFF760A6A008E
:10BB1000C45E0426FF770226FF3756E807FF83C47A
:10BB20000AEB14C45E04268B07402B4403506801C3
:10BB3000C0E83B0583C4045EC9C3C80200006801B5
:10BB40005BE8C604593D0100740433C0EB53C45E86
:10BB5000048B4608262B07506801B0E8110583C432
:10BB6000043D010075E46A00E8FC03596A00C45E04
:10BB70000426FF770226FF376A00FF361800FF36DB
:10BB800016000EE80BEF83C40C8D46FE500EE85AEB
:10BB9000E259837EFE0175B26A01E8CA0359B80111
:10BBA00000C9C3C802000068015BE85D04593D019B
:10BBB00000740433C0EB67C45E04268B072B460871
:10BBC000506801C0E8A80483C4043D010075E46A1C
:10BBD00000E89303596A00C45E0426FF770626FF37
:10BBE00077046A00FF361800FF3616000EE8A1EE53
:10BBF00083C40C8D46FE500EE8F0E159837EFE01B1
:10BC000075B16A01E860035968005BE8FC03590BF1
:10BC1000C074A06A016801C0E8540483C404C9C3A5
:10BC2000C802000068005BE8E003593D01007404AD
:10BC300033C0EB72C45E048B4608262B07506801A4
:10BC400080E82B0483C4043D010075E46A00E81613
:10BC500003596A00C45E0426FF770226FF376A0094
:10BC6000FF361800FF3616000EE825EE83C40C8D53
:10BC700046FE500EE874E159837EFE0175B26A01FA
:10BC8000E8E40259C45E04268B4702268B173B4624
:10BC90000E7F1075053B560C77096801 5BE86A0357
:10BCA00059EB03B80100C9C3C802000068005BE893
:10BCB0005803593D0100740433C0EB63C45E04268D
:10BCC0008B072B4608506801C0E8A30383C4043DDA
:10BCD000010075E46A00E88E02596A00C45E042619
:10BCE000FF770626FF77046A00FF361800FF361636
:10BCF000000EE89CED83C40C8D46FE500EE8EBE090
:10BD000059837EFE0175B16A01E85B0259C45E0485
:10BD1000268B47084050 6801C0E8530383C404C918
:10BD2000C3C802000068005BE8DF02593D010074EF
:10BD30000433C0EB63C45E048B4608262B075068AF
:10BD40000180E82A0383C4043D010075E46A00E829
:10BD50001502596A00C45E0426FF770626FF7704A1
:10BD60006A00FF361800FF3616000EE823ED83C484
:10BD70000C8D46FE500EE872E059837EFE0175B1CF
:10BD80006A01E8E20159C45E04268B47084050 6806
:10BD90000180E8DA0283C404C9C3558BEC56C41E83
```

```
:10BDA0001A0026807F0A0175046A01EB026A03E823
:10BDB000F10259FA837E04017538066A000726C726
:10BDC00006300048B226C706320000D007C606215A
:10BDD000F000C60620F000C60620F110C60621F1CC
:10BDE00000C60610F140C60670F014800E77F0020F
:10BDF000EB49066A000726C706300024B326C706AB
:10BE0000320000D007C60621F000803E248702746D
:10BE100007803E248703750F800E28F0E0C60624B5
:10BE2000F063800E2AF080C60620F001C60610F0EE
:10BE300002C60622F0FFC60623F0FFC6067EF0000B
:10BE4000FBB801005E5DC3558BEC8B1E24908A46C7
:10BE50000488078A46068847018A46088847025DA3
:10BE6000C3C8080000568D76068A4604A22F008BB0
:10BE700046048946F8B90B00BB3BBF2E8B073B46F7
:10BE8000F8740883C302E2F3E9AD002EFF671166A77
:10BE900001682F00E8842F83C404E99B008B1C8B6E
:10BEA000078946FE8A46FFA230008A46FEA231007C
:10BEB0006A03682F00E8632F83C404EB7B908B1C1C
:10BEC0008B078946FE8A46FFA230008A46FEA231D1
:10BED000008B5C028A07A232006A04682F00E83AED
:10BEE0002F83C404EB528B1C8B47028B178946FCB3
:10BEF0008956FA8A46FBA230008A46FAA231008BA4
:10BF00005C028A07A23200C6064504016A04EB1AE5
:10BF10008B1C8B078946FE8A46FFA230008A46FEAC
:10BF2000A23100C6064504016A03682F00E8EB2E23
:10BF300083C404C6064504005EC9C317001A001B6B
:10BF4000003100A000A200A300A400A500A600A745
:10BF5000008FBEBEBEBEBE8FBE9DBEE6BEE6BEE6C6
:10BF6000BEE6BE10BF10BF558BEC837E0401750981
:10BF7000800E03F1806A01EB026A009ABB9800E030
:10BF8000595DC3C81A00006A131E68D180168D4619
:10BF9000E6509AA59500E083C40A6A006A006A0028
:10BFA0006A00FF361800FF3616000EE8E3EA83C485
:10BFB0000CC41E1600268A4710B400C1E0058B167B
:10BFC000180003D88956FE895EFC8E46FE6A00265C
:10BFD000FF77048B16DA80A1D880262B07261B5703
:10BFE00002B1029AD2004CF852509A14004CF889CF
:10BFF00046FA6A13168D46E6501E68D1809AA595BA
:10C0000000E083C40A8B46FAC9CB558BEC8B5604EF
:10C0100081FA015B750C803E078700740EB8010041
:10C02000EB12A00787B4000BC074F26A0052E84715
:10C03000E683C4045DC3558BECFA830E28FF20FB16
:10C04000687C92E8A3F259C6062C9000837E040116
:10C050007511C60616F17FC60619F17FC60679F07E
:10C0600000EB0A800E24F000C6061AF0015DC355ED
:10C070008BEC568B76060BF67505B80100EB216A42
:10C08000018B46042500C050E8EDE583C4043D0162
:10C0900000740433C0EBE64E8BC60BC075E1EBDADF
:10C0A0005E5DC3558BECC60679F01F8B5E044B8337
:10C0B000FB03772CD1E32EFFA7E2C09ADD1400E04A
:10C0C0009A061500E0C60622F0FFC60622F1FFEB35
```

```
:10C0D0000A9ADD1400E0900EE8D540C6067DF0FF18
:10C0E0005DC3BBC0C5C0D1C0D6C0C70656FF0040A7
:10C0F000832630FFFE802628F0BFCB5053515206D6
:10C100001E565755BD00118EDDFE0ECE80803ED0EE
:10C110008001754FF6067DF001741FC6067DF001A3
:10C12000A0CF80FEC0A2CF803C02720EC606D08097
:10C13000020EE8B5FF802628F0BF803ECE80007555
:10C1400022C606D08003C60679F01F9ADD1400E0EF
:10C15000802628F0BF0EE891FF900EE85240C606F8
:10C160007DF0FFC70622FF00805D5F5E1F075A5902
:10C170005B58CFEB18F70656FF200074109ADD14B9
:10C1800000E06A17E8DAFC59C6062C9002A02C9051
:10C19000B4000BC074DFC70656FF0040803E2C90F1
:10C1A000017518A12F908B162D90A30E8789160C60
:10C1B00087A03190B400A31087EB07FA832628FFED
:10C1C000DFFBC3C80E0000A12787A3D180A10A8787
:10C1D0008B1608878946F88956F6A1CA86251100 6C
:10C1E0003D100075128A46F6506A00FF76F80EE898
:10C1F00020E383C406EB0BF706CA8601007509E845
:10C20000C9228956F88946F6FF76F8FF76F6FF369A
:10C210001C00FF361A00E873E683C408A1E0808B97
:10C2200016DE80A3188789161687A0DC80A21A87DD
:10C23000A0E380B4008BC8C1E005C41E120003D87F
:10C24000268B4713268B57118946F48956F2268A86
:10C2500047158846FB268B4716A36686F706CA86CF
:10C260001100744126 8B4706268B57042B16D88065
:10C270001B06DA8083C2011500008946FE8956FC40
:10C28000A1278733D23B56FE720D77053B46FC76DD
:10C29000068B46FCA32787A11A88A3F586C606ACA1
:10C2A000867FE982008A46FBFEC08846FBB4003BDD
:10C2B000066686750CC646FB008346F2018356F47B
:10C2C000008B46F2A329878A46FBA22B87A11887F9
:10C2D0008B1616878946F48956F2A01A878846FB82
:10C2E000E8C31D8B46F48B56F23B061887750F3B4F
:10C2F00016168775098A46FB3A061A877429A01A0A
:10C300008750FF361887FF3616870EE804E283C48D
:10C31000068956F88946F65250FF361C00FF361A39
:10C3200000E868E583C408A12787A3AE86A1278714
:10C33000A3B086A12787A32587C9CB0000000000F2
:10C34000268B44023E3B46027C117F13268B043E23
:10C350003B460072067708B80000C3B8FFFFC3B8B9
:10C360000100C3268A04247F3E3A4602722A772CB3
:10C37000268A44013E3A4601721E7720268A4402EC
:10C380003E3A460072127714268A44033E3A460427
:10C39000720677 08B80000C3B8FFFFC3B80100C336
:10C3A000268B043E3B46007C127F14268A44023EC4
:10C3B0003A460272067708B80000C3B8FFFFC3B858
:10C3C0000100C363C340C3A0C360066800D0078AEE
:10C3D0001E4E08B700268BBFC3C38BDF8A0E5408DE
:10C3E000FF36550807A14F088A165108B6008B2E54
:10C3F00052088B3E5708C6065B0800E81400720519
```

```
:10C40000C6065B0801891E5C08D3EE893659080709
:10C4100061CB525303FA33D28BD883FB0075058B63
:10C42000F7EB35904B3BD37E03EB2D908BF203F370
:10C43000D1EED3E603F75850FFD03D00007F127CC9
:10C4400002741F03D3D1EA42B80100D3E003F0EB3A
:10C45000D403DAD1EB4BEBCD58588BDE2BD82BF72E
:10C46000F9C358588BDE2BD82BF7F8C3E314601EA2
:10C47000061F03F14E8BFE32F603FA9CFDF3A49DDA
:10C480001F61C3601EB800118ED8B80444B2198B66
:10C490003EAA888845168865178855188O4D4E0134
:10C4A0009ABD1C00E0C606B680011F6133C033D2BE
:10C4B000CFC802000056578B7E04803E43040074B0
:10C4C0000E57E89E0259884509B80100E9740180B9
:10C4D0003E0487007503E95D01A0048704FFA20400
:10C4E0008757E87E02592D03008BD883FB13760310
:10C4F000E93A01D1E32EFFA747C6807E0600750307
:10C50000E9F600C60624F01BE9EE00E9EB00807EA8
:10C5100006007503E9E200F606CD86807427A026A2
:10C52000F08846FFB4002530003D10007E118A4699
:10C53000FF04F08846FF802626F0CF080626F0BECE
:10C540000200E9FC00F606CD86407402EBF1A0CDB6
:10C5500086B4002507003D070075E4A00287FEC0F1
:10C56000A202873C0373D8802628F0FC080628F036
:10C57000EBCDEBCBEBC9807E06007502EB7BA026F2
:10C58000F08846FFB400250F003D07007E0BFE4EED
:10C59000FF8A46FFA226F0EBA6F646FF0F74A080A6
:10C5A00066FFF08A46FFA226F0800E25F020EB8F72
:10C5B000EB8D807E06007502EB3FA025F08846FFDC
:10C5C000B400250F003D0B0074118066FFF0804E13
:10C5D000FF0B8A46FFA225F0E964FFA025F0B40016
:10C5E000A940007403E957FF800E25F0C0E94FFF12
:10C5F000E94CFF807E06007505B80200EB45C606D3
:10C6000031F000C60632F008C60631F001C6063227
:10C61000F028E92AFFE927FFE924FFC645090DEBC9
:10C6200007E91BFFC6450915BE0100EB14BE01005A
:10C63000C645090EEB0BBE010057E8260159884597
:10C64000098BC65F5EC9C3FAC42DC60EC576C5B2D6
:10C65000C52DC615C6F3C518C618C61BC62DC62DD2
:10C66000C62DC621C62DC62DC62DC624C618C65534
:10C670008BEC56578B7604803E430400740E56E8CC
:10C68000E10059884409B80100E9AD00803E048703
:10C69000007503E99000A0048704FFA2048756E810
:10C6A000C10059884409B4002D03008BD883FB12C4
:10C6B000776BD1E32EFFA73DC7C60624F01BB81247
:10C6C00000EB76BF1200A0CD86B400A9800075678C
:10C6D000F606CD86407405BF1200EB5BA0CD86B494
:10C6E000002507003D070075EEA00287FEC0A202EC
:10C6F000873C0373E2802628F0FC803E02870074AA
:10C70000D6800E28F001EBCFEBCDEBCBEBC9EBC71E
:10C71000EBC5EBC3C6440915BF0100EB1ABF01000E
:10C72000C644090EEB11BF03008A441AA2048756BF
```

```
:10C73000E83000598844098BC75F5E5DC3B9C61DE8
:10C74000C7C3C61DC71DC71DC70EC71DC710C7104D
:10C75000C71DC71DC71DC71DC712C71DC71DC71DC4
:10C76000C714C7558BEC568B7604837C040D751269
:10C77000807C09017506B81100E9B100B81500E91F
:10C78000AB008A4409B4002D03008BD883FB0576E7
:10C7900003E99400D1E32EFFA730C88A16CC86F6B1
:10C7A000C2807406BA0300E98100F6C2207405BA9B
:10C7B0000500EB77F6C2187405BA0600EB6DF6C2F9
:10C7C000047405BA0700EB63BA0800EB5E8A16CE64
:10C7D00086F6C2CC7402EB05F6C2027405BA0900F3
:10C7E000EB49BA0A00EB448A1ED1868A16D086F637
:10C7F000C2087402EB19F6C240740AC6061B84957F
:10C80000BA0D00EB26F6C382740AC6061B8496BADC
:10C810000C00EB17F6C210740AF6C3087405BA16BA
:10C8200000EB08BA0B00EB03BA0E008BC25E5DC3CF
:10C830009BC79BC7CDC7CDC7E7C7E7C7C8100000D8
:10C84000056578B7E06BEF083C746FEF880C746FA71
:10C850000000C7050000C746F04000A02487B400D0
:10C86000A90000750D8B5EFE8A4702B400A9400046
:10C870007407803EA2080175588B46F08B160F880E
:10C880008946F48956F2A10D88C1E808C45EF226F3
:10C89000884702A00D8826884703A10D88C1E002C1
:10C8A00005040033D2F73664868905A10D88C1E0FE
:10C8B0000205040033D2F73664868BCA0BC9740CA8
:10C8C000FF05A164862BC18946FAEB05C746FA002D
:10C8D00000A11188C1E003050A008BC88B46F08BCC
:10C8E0001613888946F48956F28BC1C1F808C45ED4
:10C8F000F22688470426884F05A11188C1E808263A
:10C9000088470EA011882688470FA11188C1E0032F
:10C91000050A0033D2F73664868946F8A11188C12A
:10C92000E003050A0033D2F73664868BDA0BDB743A
:10C930000DFF46F8A164862BC38946F6EB05C74672
:10C94000F60000C6067C8801C6067D8801C6067E04
:10C950008801C6067F8801C606808801C6068188D0
:10C9600001C606828801C606838801C6068488013E
:10C97000C606858801C606868801C606878801C660
:10C980000688801C606898801C6068A8801C60607
:10C990008B8801803E2487007407803E24870175C0
:10C9A00028B984888BD9A133878B163187894702B0
:10C9B0008917B988888BD9A12F878B162D8789472E
:10C9C000028917A11E88A38C88C6068E8801C60618
:10C9D0008F8800C70690880A0AA164868946FCC72A
:10C9E00044030000C6440500C7440674888C5C08F4
:10C9F000C7440A1E00900EE8360DC6440500C74421
:10CA0000031E00A164862D040089440AC6440C005C
:10CA1000900EE8F20EA02487B400A90000750D8BDB
:10CA20005EFE8A4702B400A940007407803EA20857
:10CA30000175538B46FC894403C6440500A10F8849
:10CA4000894406C744084000A10D88C1E0020504DE
:10CA50000089440A900EE8130DC64405008B05F7C3
```

```
:10CA60002E64868B56FC03D02B56FA8954038B46D2
:10CA7000FA89440AC6440CFF900EE88A0E8B05F72B
:10CA80002E64860146FC8B46FC894403C64405009F
:10CA9000A11388894406C744084000A1118889442D
:10CAA0000AE8FD0CC64405008B46F8F72E64868B19
:10CAB00056FC03D02B56F68954038B46F689440A5C
:10CAC000C6440CFF900EE83E0E8B46F8F72E6486A7
:10CAD0000146FC8B46FC5F5EC9CBC80A0000568A43
:10CAE00056048B76088AC2B4006BC0058BD88A873F
:10CAF0007B86B400508AC2B4006BC0058BD8FFB7E8
:10CB00007986FFB777869AE89300E083C406895652
:10CB1000FE8946FC8346FC018356FE008D46FB5091
:10CB20008D46F650FF76FEFF76FC900EE8FAD58330
:10CB3000C408807E06177553803E248700740780E2
:10CB40003E248701752EC6068188FFC6068288FFAF
:10CB5000C6068388FFC6068088FF8A46F6A27D88BF
:10CB60008A46F7A27E88C6067F88008A46FBA27C9A
:10CB700088E9A600C6067988FFC6067A88FFC60639
:10CB80007B88FFC6067888FFEB7990803E2487007B
:10CB90007407803E24870175368A46F6A281888A0A
:10CBA00046F7A28288C6068388008A46FBA2808850
:10CBB0000176FC8356FE008D46FB508D46F650FFF5
:10CBC00076FEFF76FC900EE85FD583C408EB8B8A77
:10CBD00046F6A279888A46F7A27A88C6067B88003C
:10CBE0008A46FBA278880176FC8356FE008D46FBC0
:10CBF000508D46F650FF76FEFF76FC900EE829D564
:10CC000083C4088A46F6A275888A46F7A27688C643
:10CC1000067788008A46FBA274885EC9C3C81400E0
:10CC2000005657BEF083C746F400009A0D0700E097
:10CC30008946EC837EEC00750533C0E93302807EC3
:10CC40000800752E8D46F0500EE8F0FB598BC8C6D3
:10CC5000440500894C03A12688F72E64862BC189E0
:10CC6000440AC6440CFF900EE89C0C8B3E2688E9D3
:10CC7000B900807E080175168D46F0500EE8BCFBA9
:10CC8000598BC833D2F73664868BF8E99D00F706D6
:10CC900062860100742BA10D88C1E00205040033F7
:10CCA000D2F7366486408946EEA10D88C1E00205C0
:10CCB000040033D2F73664860BD2740AFF46EEEBDB
:10CCC00005C746EE0100C744030000C6440500A1A5
:10CCD0001388894406C744084000A1118889440A82
:10CCE000E8BE0AA11188C1E003050A0033D2F73675
:10CCF00064868BF8A11188C1E003050A0033D2F7DE
:10CD00003664868BDA0BDB7422478B0E64862BCB62
:10CD1000C64405008BC7F72E64862BC1894403895E
:10CD20004C0AC6440CFF900EE8DC0B807E080175AF
:10CD30001FC746F60000B2018A4EF6D2E2845606BC
:10CD40007403FF46F4FF46F6837EF60472E8EB05B3
:10CD5000C746F400008BDF4333C9A1648633D29AFF
:10CD6000B8004CF88956FA8946F8C746F20000C761
:10CD700046F60000E9DD00803E1B84007403E9E212
:10CD800000B2018A4EF6D2E28456067403E9C1006D
```

```
:10CD9000807E08007406807E08017545803E8E887E
:10CDA0000174066A006A17EB05FF76F06A228A466C
:10CDB000F650E825FD83C406C744030000C64405B9
:10CDC00000C7440674888C5C08C7440A1E00900E95
:10CDD000E85D098B5EF66BDB058A877B86B400EB2A
:10CDE0000F8B5EF66BDB058A877B86B4000346EE0D
:10CDF000508B5EF66BDB05FFB77986FFB777869AB7
:10CE0000E89300E083C4068956FE8946FC576A0011
:10CE10006A00FF76FEFF76FC6A01FF76EC9A1093BB
:10CE200000E083C40E3D0100752457FF76FAFF76BB
:10CE3000F8FF76FEFF76FC6A04FF76EC9A1093000A
:10CE4000E083C40E3D01007505FF46F4EB03FF4689
:10CE5000F2FF46F6837EF6047309837EF2027303C3
:10CE6000E914FF8B46ECA32EDA9A7E0700E08B468E
:10CE7000F45F5EC9CBC8080000569A0D0700E08B2E
:10CE8000F00BF6750433C0EB55A012E08846FFC7CF
:10CE900006278701009OEE829F3A01A87B40050F6
:10CEA000FF361887FF3616879AE89300E083C4069A
:10CEB0008956FC8946FA6A016A006A0052506A0281
:10CEC000569A109300E083C40E8946F889362EDA0C
:10CED0009A7E0700E08A46FFA212F08B46F85EC9F0
:10CEE000C3C81C000056578B7E04C746F60000F7E7
:10CEF000068D8600207423804D4E016A056A186AEB
:10CF0000076A02FF360A87FF36088757900EE83F08
:10CF10006F83C40EB80100E9BD029A635500E08832
:10CF200046FDF646FD047404B002EB02B0008846EC
:10CF3000FEF646FD017404B017EB02B0188846FCFB
:10CF4000F706CA8600047503E9910033D2BB701757
:10CF5000832666FFDFEB2AF70666FF200074228334
:10CF60002666FFDF428BC23BC37216802652F0FD5D
:10CF7000C645190B814D2A84009AC41D00E0E907BB
:10CF800001A052F0B400A9020075CCBBB80B33D29B
:10CF9000832666FFDFEB14F70666FF2000740C8320
:10CFA0002666FFDF428BC23BC373C5A046F0B400C8
:10CFB000A9130075E233D2832666FFDFEB14F70670
:10CFC00066FF2000740C832666FFDF428BC23BC3E2
:10CFD000739EA048F0B400A9100075E2B82C872D0C
:10CFE00062868946FA506862866824 84E829058347
:10CFF000C406A10A878B1608878946F28956F0A1D4
:10D00000CA868946F4A012F08846FFFA6A00E82032
:10D010006B59802603F17F6A009ABB9800E059C6DD
:10D020000679F01FC60620F000C60621F000C606ED
:10D030007DF0FFC60620F100C60621F100C60622DB
:10D04000F1FFC60623F1FF8326DF86FDFBA1A5863F
:10D050008B16A3862B1668861D00008946EA895622
:10D06000E8A1A5868B16A3868946E68956E4C746BD
:10D07000F80000F6066D83017403E9B2009A0D070B
:10D0800000E08BF00BF6750533C0E94A01681F8795
:10D09000681B87FF76F2FF76F09AB09300E083C4B6
:10D0A00008A01F87B40050FF361D87FF361B879AE4
:10D0B000E89300E083C4068956EE8946EC6A01FFD6
```

```
:10D0C00076EAFF76E852506A01569A109300E083A0
:10D0D000C40E8946F83D0100751C6A01FF76E6FF23
:10D0E00076E4FF76EEFF76EC6A04569A109300E041
:10D0F00083C40E8946F889362EDA9A7E0700E083CB
:10D100007EF801752A804D4E01807EFC177504B0B3
:10D1100009EB02B007508A46FC506A018A46FE506D
:10D12000FF76F2FF76F057900EE8246D83C40E83ED
:10D130007EF8017464FF76E6FF76E4FF76EAFF7618
:10D14000E8FF76F2FF76F00EE8E6019083C40C3D2E
:10D1500001007407C746F80000EB3EC746F801001F
:10D16000C746F60100F646FD047404C646FE02807A
:10D170004D4E01807EFC177504B006EB02B00250E4
:10D180008A46FC506A018A46FE50FF76F2FF76F02E
:10D1900057900EE8BA6C83C40E837EF80174158B29
:10D1A00046F28B56F0A30A8789160887 8B46F4A3AC
:10D1B000CA86EB20FF76FA68248468628 6E8580302
:10D1C00083C406837EF6007405830ECA86208A46D1
:10D1D000FFA212F08B46F85F5EC9C3C81400005668
:10D1E00057BF0100B82C872D62868946FC506862C3
:10D1F00086684890E8210383C406A10A878B160835
:10D20000878946F48956F2A1CA868946FAA012F0A7
:10D210008846FFA1A5868B16A3868946F08956EE1F
:10D22000FA802603F17F6A009ABB9800E059C6068F
:10D2300079F01FC60620F000C60621F000C6067D64
:10D24000F0FFFBC60620F100C60621F100C606224B
:10D25000F1FFC60623F1FFFB9A0D0700E08BF00BF0
:10D26000F6750533C0E9C500C746EC00008B46ECF7
:10D27000FF46EC3D0300721B68A6006A446A046A1C
:10D2800002FF7604E89D6C83C40AC6061B84A6339D
:10D29000FFEB55900EE8E2163D010074136A006A38
:10D2A000326A046A02FF7604E8796C83C40AEBDF11
:10D2B000A01F87B40050FF361D87FF361B879AE8F2
:10D2C0009300E083C4068956F88946F66A01FF7622
:10D2D000F0FF76EE52506A01569A109300E083C434
:10D2E0000E3D01007402EB8589362EDA9A7E070026
:10D2F000E083FF01751CFF76FC68489068 6286E851
:10D30000160283C4068A46FFA212F0830ECA862044
:10D31000EB198B46F48B56F283EA011D0000A30A39
:10D3200087891608878B46FAA3CA868BC75F5EC9B2
:10D33000C3C8060000565733FF9A0D0700E08BF074
:10D340000BF6750533C0E90C01C746FA00008B46A1
:10D35000FAFF46FA3D0300721B68A6006A446A049D
:10D360006A02FF36AA88E8BB6B83C40AC6061B8420
:10D37000A6E9D6008B46088B5606A30A87891608AD
:10D3800087900EE8F4153D010074156A006A326A50
:10D39000046A02FF36AA88E88A6B83C40AE9AA00F5
:10D3A000A01F87B40050FF361D87FF361B879AE801
:10D3B0009300E083C4068956FE8946FC6A01FF7625
:10D3C0000CFF760A52506A01569A109300E083C40B
:10D3D0000E3D010074106A57E87E00593D0100754A
:10D3E00003E96AFFEB44A01F87B40050FF361D8796
```

```
:10D3F000FF361B879AE89300E083C4068956FE89AE
:10D4000046FC6A01FF7610FF760E52506A04569A67
:10D41000109300E083C40E3D0100742B6A52E8387B
:10D4200000593D01007503E924FF6A006881006A24
:10D43000046A02FF7608FF7606FF36AA88900EE897
:10D440000E6A83C40EEB03BF010089362EDA9A7E82
:10D450000700E08BC75F5EC9CBC802000033D28BE8
:10D4600046048946FEB90400BB08D52E8B073B460F
:10D47000FE740883C302E2F3E984002EFF6708F715
:10D4800006628640007424F606D2860C7403EB74A0
:10D4900090F606CE86FF756CF606D186827565F627
:10D4A00006D08648755EBA0100EB59F606CC861C9C
:10D4B0007552F606CE86FF754BF606D18682754408
:10D4C000F606D08658753DEBDDF70662864000749F
:10D4D00017F606CE860C752CF606D186827525E6D3
:10D4E00006D08640751EEBBEF606CE860E7515F686
:10D4F00006D18682750EF606D086407507EBA7C664
:10D50000061B849C8BC2C9C352005700720077006F
:10D51000C9D47FD4C9D47FD4558BEC56571E06B8D6
:10D5200000118ED88EC08B76068B7E048B4E08FC45
:10D53000F3A4071F5F5E5DC3558BEC568B760480AA
:10D540003E430400740A56E80D0159884409EB3C37
:10D55000803E0487007502EBEDA0048704FFA2045F
:10D560008756E8F200592D03008BD883FB137718F8
:10D57000D1E32EFFA792D5B80200EB13C644090DE4
:10D58000EB0AC6440915EB04C644090EB801005E57
:10D590005DC377D577D577D577D577D577D577D557
:10D5A00077D577D588D57CD588D588D588D577D5D2
:10D5B00088D588D588D582D577D5558BEC568B768E
:10D5C00004803E430400740D56E88B0059884409DA
:10D5D000B80100EB5B803E0487007434A00487042C
:10D5E000FFA2048756E86F0059884409B4002D054E
:10D5F000008BD883FB117712D1E32EFFA733D6BA65
:10D600001200EB2AC6440915EB21C644090EEB1B98
:10D61000F6441B80740DF706CA8601087505BA0327
:10D6200000EB0B56E8300059884409BA01008BC260
:10D630005E5DC3FFD50AD60AD6FFD50AD60AD6FF45
:10D64000D50AD60AD60AD60AD60AD6FFD50AD60AE7
:10D65000D60AD604D6FFD5558BEC568B7604837C40
:10D66000040D7512807C09017506B81100E9AB0044
:10D67000B81500E9A5008A4409B4002D03008BD831
:10D6800083FB057603E98E00D1E32EFFA71ED78A20
:10D6900016D286F6C2107405BA0500EB7CF6C208F5
:10D6A0007405BA0600EB72F6C2047405BA0700EB03
:10D6B00068BA0800EB638A16CE86F6C2C47402EB21
:10D6C0000AF6C208740AC6061B84A1BA0900EB490F
:10D6D000BA0A00EB448A16D0868A1ED186F6C208A2
:10D6E0007402EB19F6C240740AC6061B8495BA0D83
:10D6F00000EB26F6C382740AC6061B8496BA0C0099
:10D70000EB17F6C210740AF6C3087405BA1600EBDC
:10D7100008BA0B00EB03BA0E008BC25E5DC38FD656
```

```
:10D720008FD6B6D6B6D6D5D6D5D600000000000026
:10D730006006BBF0838B77068B47088EC08B470350
:10D740008A57058B4F0A03F14EB380B740B380A2CE
:10D7500057F0882658F0881659F0268A044EA250B1
:10D76000F0841E79F074FAE2F10761CB6006BBF039
:10D77000838B77068B47088EC08B47038A57058BB0
:10D780004F0AB380A257F0882658F0881659F02621
:10D790008A0446A250F0841E79F074FAE2F107611F
:10D7A000CB0660FCBBF0838B77068B47088EC08B63
:10D7B00047038A5705B91000B380A257F08826584E
:10D7C000F0881659F0268A0446A250F0841E79F09B
:10D7D00074FAE2F153BBF0838B4F0A5BE36C268A49
:10D7E0000446247FA250F0841E79F074FA268A043D
:10D7F00046A250F0841E79F074FA268A0446A2509C
:10D80000F0841E79F074C5268A0446A250F0841E66
:10D8100079F074FA268A0446A250F0841E79F074D6
:10D82000FA268A0446A250F0841E79F074FA268AF9
:10D830000446A250F0841E79F074FA268A0446A2A7
:10D8400050F0841E79F074FAE2946107C360069C7C
:10D85000FDBEF0838B7C068B4C0A03F94FEB0E90D8
:10D8600060069CFCBEF0838B7C068B4C0A8B048A82
:10D8700054028B5C088EC3A257F0882658F0881695
:10D8800059F0A050F0B380B740841E79F074FAA02C
:10D8900050F0843E7AF074049DE9E900AAE2EA9D22
:10D8A0000761B80100CB6006FCBEF0838B7C068B61
:10D8B0004C0A8B048A54028B5C088EC3A257F088F2
:10D8C0002658F0881659F0A050F0B380B740841E57
:10D8D00079F074FAA050F0AA841E79F074FAA0507E
:10D8E000F0AA841E79F074FAA050F0AA841E79F090
:10D8F00074FAA050F0843E7AF07403E98700AAE23B
:10D90000CD0761B80100CB60FCBEF0838B44038A75
:10D9100054058B4C0AA257F0882658F0881659F007
:10D92000B3808A440CE30BA250F0841E79F074FAA1
:10D93000E2F561CB558BEC608B36A088FC8B5606EC
:10D94000C60657F000C60658F000C60659F000B3E8
:10D9500080B033B433B7338B4C02A250F0841E79BD
:10D96000F074FA497419882650F0841E79F074FA1C
:10D9700049740C883E50F0841E79F074FAE2DB4A58
:10D9800075D5615DCB076133C0C3558BEC56578BA2
:10D9900076068B7E081EB840008ED88A64018A44C1
:10D9A000028A54031F886501884502885075F5E17
:10D9B0005DCB608B36A0888B4C0283C10433FFC6DD
:10D9C000854A040047E2F8A146048A164804A25793
:10D9D000F0882658F0881659F0A050F0B380B74070
:10D9E0008B36A0888B54048B4C0233FF841E79F055
:10D9F00074FAA050F0843E7AF07402EB8830854AC5
:10DA00000447E2E84A75E061B80100C3C8040000B9
:10DA100056C746FE4000C746FC0030C7060D8800CA
:10DA200000C70611880000C70618880000C7060F47
:10DA3000880030C45EFC26C7070000A10F880504DB
:10DA400000A31A88C706A3086EDE33F63B36288883
```

```
:10DA50007312B840008EC026C684002800463B36AC
:10DA6000288872EE5EC9CBC80A000056A10D883B1B
:10DA700006248876O533C0E91F03A11D878B161B7A
:10DA800087A3A9808916A780A01F87A2AB80C6069E
:10DA90004E0800A10D88A34F08C606510800C7060E
:10DAA0005208A780C606540802A10F88050400A3E7
:10DAB0005708C70655084000900EE80CE9A15C081D
:10DAC000C746FE40008946FC833E59080075078022
:10DAD0003E5B08007419803E5B08007503E9B602DE
:10DAE000FF0659088306 5C0804E9AA02E9A702E8D0
:10DAF000B90BB840008B1EB4808EC026F687002874
:10DB0000017503E90E016BDB058B87A9308B97A7A5
:10DB1000303B061D877C3D75063B161B8772358B97
:10DB20001EB4806BDB058B87A9308B97A7303B0633
:10DB30001D877403E9DD003B161B877403E9D400DD
:10DB40008B1EB4806BDB058A87AB303A061F877269
:10DB500003E9C000A11D878B161B87A3A980891626
:10DB6000A780A01F87A2AB80C6064E0800A1A3080D
:10DB70002D6EDEC1E802A34F08C606510800C70695
:10DB80005208A780C606540802C70657086EDEC7AB
:10DB900006550840009 00EE82FE8A15C08C746FE35
:10DBA00040008946FC833E5908007403E9E7018080
:10DBB0003E5B08007403E9DD01A12488C1E0020591
:10DBC0006EDE8946F63B06A3087503E9A7FE8B1EA9
:10DBD0005C088BF38B0EA3082BCBB204900EE88B62
:10DBE000E8A11D8724FFC45EFC268807A01B8724AC
:10DBF000FFB400C1E0088B161B87C1EA08B600031A
:10DC0000C226894701A01F87268847038306A308E9
:10DC100004E982018B1EB4806BDB058B87A9308BF6
:10DC200097A7303B061D8775263B161B8775208BF3
:10DC30001EB4806BDB058A87AB303A061F87750FF1
:10DC4000B840008B1EB4808EC026C6870028018B8A
:10DC50000E1A8883C10A8B1E5C088BF32BCBB2048F
:10DC6000900EE807E8A11D8724FFC45EFC26880704
:10DC7000A01B8724FFB400C1E0088B161B87C1EAF4
:10DC800008B60003C226894701A01F8726884703DC
:10DC9000A10F88C746FA40008946F8C45EF8268A74
:10DCA00007B400C1E008268B17C1EA08B60003C21A
:10DCB00040C1F808B400268B17C1EA08268A1FC0A5
:10DCC000E30802DAFEC3B700C1E30803D88B76F895
:10DCD00026891CFF060D88FF06188883061A88040B
:10DCE0008B1EB4806BDB05B840008EC0268B87028C
:10DCF00000268B9700008B1EB4806BDB053B87A949
:10DD00003075353B97A730752F8B1EB4806BDB05C4
:10DD1000B840008EC0268A8704008B1EB4806BDB5F
:10DD2000053A87AB307411B840008B1EB4808EC0AA
:10DD300026808F002801EB548B1EB4806BDB05B866
:10DD400040008EC0268A870400FEC08B1EB4806B04
:10DD5000DB05BA40008EC226888704003A0670862A
:10DD6000752A8B1EB4806BDB05B840008EC02683FD
:10DD70008700001268397020008B1EB4806BDBB6
```

```
:10DD800005B840008EC026C68704000083061388AD
:10DD90000483061C8804B801005EC9CBC8080000D3
:10DDA0005657A18B86C746FE00008946FCC6064E24
:10DDB0000800A10D88A34F08C7065208A780C60611
:10DDC000510800C606540802A10F88050400A35795
:10DDD00008C7065508400033FFC746FA0000A135C2
:10DDE000878946F88BDFD1E3B800408EC026C7870D
:10DDF000001000008BDFD1E3B800408B1657088E6F
:10DE0000C026899700008B5EFA6BDB0E8B872F870D
:10DE10008B972D8783EA011D00008B5EFE8B4EFCE5
:10DE200003CA13D8895EFE894EFC68AB8068A78060
:10DE3000FF76FEFF76FC900EE8EEC283C408900EDB
:10DE4000E886E5833E5908007507803E5B0800744C
:10DE50003B803E5B08007409FF06590883065C0896
:10DE600004A159080146FC8356FE00A15C08A35793
:10DE700008A1590829064F088BDFD1E3B800408B71
:10DE80001659088EC026019700108EB9E8BDF6BDBC6
:10DE900005A1A9808B16A7808987A9088997A7085B
:10DEA0008BDF6BDB05A0AB808887AB088BDFD1E312
:10DEB000B800408EC0268B87001033D28B5EFA6B81
:10DEC000DB0E3B973387720D77063B8731877605EC
:10DED00033C0E943018BDFD1E3B800408EC0268B0D
:10DEE00087001033D28B5EFA6BDB0E3B973387755E
:10DEF000143B873187750EB840008EC026C685005A
:10DF00002801E9E2008BDFD1E3B800408B76FA6BA1
:10DF1000F60E8B9431878EC0262B9700108BF283E0
:10DF200046FC018356FE0068AB8068A780FF76FE42
:10DF3000FF76FC900EE8F1C183C408900EE889E4F6
:10DF4000803E5B0800741283065708O4FF0E4F08DA
:10DF50004E8BC60BC075C8EB9E8BDF6BDB05A1A992
:10DF6000808B16A7808987A9588997A7588BDF6B64
:10DF7000DB05A0AB808887AB588BC6480146FC8385
:10DF800056FE0068AB8068A780FF76FEFF76FC90A7
:10DF90000EE895C183C4088BDF6BDB05A1A9808BDC
:10DFA00016A7808987A9308997A7308BDF6BDB059F
:10DFB000A0AB808887AB30900EE80DE4833E590813
:10DFC000007507803E5B0800741D803E5B0800748E
:10DFD00009FF06590883065C0804A15C08A35708DA
:10DFE000A1590829064F08478BC73B061E88742590
:10DFF000FF4EF88B46F80BC07510FF46FA8B5EFAA1
:10E000006BDB0E8B8735878946F88346FC01835688
:10E01000FE00E9CFFDB801005F5EC9C3E87DFD3DAC
:10E020000100740433C0EB13E84F0B803E178800E7
:10E030007403E80F0DE80400B80100CBC80A000023
:10E0400056A10F88050400C746FE40008946FC33F0
:10E05000F6EB4AC45EFC268A4701B400C1E00826FC
:10E060008A5702B6000BC2998956F88946F6268A65
:10E070004703884 6FBB4005052FF76F69AE89300B7
:10E08000E083C4068BDEC1E302B900408EC126895D
:10E0900097022026898700208346FC04463B360DE4
:10E0A0008875B05EC9C3C81C0000C646E800C60635
```

```
:10E0B000AC867F8B1EB4806BDB058B87A9088B97A2
:10E0C000A7088946F68956F48B1EB4806BDB058A57
:10E0D00087AB088846EBFEC08846EBB4003B06667B
:10E0E00086750C8346F4018356F600C646EB00A104
:10E0F00018878B161687A3A9808916A780A01A8770
:10E10000A2AB80C6064E0800A11188A34F08C60620
:10E11000510800C7065208A780C606540803A11379
:10E1200088050A00A35708C70655084000900EE866
:10E1300097E2A15C08C746FE40008946FC833E5931
:10E14000080075078O3E5B08007472C45EFC268A76
:10E15000470524FFB400C1E008268B570583E2FF82
:10E16000C1EA08B60003C299268A5F04B70033C922
:10E1700003C813DA895EF2894EF08B5EFC268A476B
:10E18000078846EA268A07B400A98000751C8B46DA
:10E19000F28B56F0A3188789161687A46EAA21AC8
:10E1A00087C70627870100E913038B46F28B56F0D9
:10E1B000A3A9808916A7808A46EAE943FF8B46FC1B
:10E1C0003B061C887503E9F402C45EFC268A4701FD
:10E1D00024FFB400C1E008268B570183E2FFC1EAA7
:10E1E00008B60003C299268A1FB70033C903C813B3
:10E1F000DA895EF2894EF08B5EFC268A47038846F8
:10E20000EA8B46F28B56F03B46F67C1F75053B5673
:10E21000F472188B46F28B56F03B46F6751F3B5650
:10E22000F4751A8A46EA3A46EB77128B46F28B5619
:10E23000F08946F68956F48A46EA8846EB8B46F61C
:10E240008B56F48946F28956F08A46EB8846EAA155
:10E25000298733D23B56F27C1F75053B46F0721876
:10E26000A1298733D23B56F2751F3B46F0751A8AB7
:10E2700046EA3A062B877611A12987C746F60000A1
:10E280008946F4A02B878846EB8B46F68B56F4899B
:10E2900046F28956F0A118878B1616872956F01971
:10E2A00046F28B1E668633C98B56F28B46F09AB8BF
:10E2B000004CF88A5EEAB700508BC352995B590351
:10E2C000C813DAA01A87B400992BC81BDA895EE656
:10E2D000894EE4837EE6007F2E7506837EE4FF7719
:10E2E00026A1278733D23B56E67C1C75053B46E4C6
:10E2F00072158B46E4A32787C706A9800000C706CE
:10E30000A7800000E99000A127872946E4835EE604
:10E3100000C706A9800000C706A780FFFF837EE62E
:10E32000007F157506837EE4FF770D8B46E68B56DE
:10E33000E4A3A9808916A780A01A87B40003062742
:10E340008733D2F736668633D2030616871316183C
:10E35000878956F28946F0A01A87B40003062787FA
:10E3600033D2F7366686856EA8A46EAFEC0884681
:10E37000EAB4003B066686750C8346F0018356F2CC
:10E3800000C646EA008B46F28B56F08946F689565F
:10E39000F48A46EA8846EB803E1688017403E91C3D
:10E3A00001833E0D88007503E91201A1F5863B0645
:10E3B0001A887503E90601C746FA40008946F8C481
:10E3C0005EF8268A4701B400C1E008268B5701C1D8
:10E3D000EA08B60003C299268A1FB70033C903C8EA
```

```
:10E3E00013DA895EF2894EF08B5EF8268A4703883D
:10E3F00046EA8B46F28B56F03B46F67C2875053B89
:10E4000056F472218B46F28B56F03B46F67403E9C4
:10E41000AB003B56F47403E9A3008A46EA3A46EBA4
:10E420007603E998008B46F28B56F08946EE8956C2
:10E43000EC8A46EA8846E9A1A7800B06A9807449C0
:10E440008B46F68B56F48946F28956F08A46EB885D
:10E4500046EAFEC08846EAB4003B066686750C8331
:10E4600046F0018356F200C646EA008B46F28B5610
:10E47000F08946F68956F48A46EA8846EB832EA749
:10E480008001831EA98000EB04FF0E27878306F519
:10E4900086048A46E8FEC08846E83C017403E90A1F
:10E4A000FF8B46ECC1E80824FFA2AC868A46EC2428
:10E4B000FFA2AD868A46E9A2AB86E9EEFEA12787D8
:10E4C000A32587A3B086B80100C9C3C8040000E82B
:10E4D000B4008956FE8946FC803E1688017403E923
:10E4E0009C00C6064E08028B1EB480D1E3B80040E3
:10E4F0008EC0268B870010A34F08C6065108008DDA
:10E5000046FCA35208C606540802C7065508004038
:10E510008B1EB480D1E3B800408EC0268B870000EC
:10E520008B160F8883C2042BC2050020A3570890C6
:10E530000EE895DE833E5908007507803E5B0800B3
:10E540007429803E5B08007409FF06590883065C45
:10E550000804A159080146FC8356FE00A15C08A3EB
:10E560005708A1590829064F08EBC4A15C082D00E3
:10E57000208B160F8803D083C2048916F5868B562C
:10E58000FE8B46FCC9C3C81200005657C706B480AC
:10E590000000833E1E880175118B160A87A108872B
:10E5A00003068B8683D200E9FD0033FFA18B86C76B
:10E5B00046FE00008946FCA10A878B16088789461B
:10E5C000F48956F28BDF6BDB0E8B8739878B97379D
:10E5D000878946F08956EE8B46F48B56F23B46F01F
:10E5E000724F75053B56EE72488B46F08B56EE29FE
:10E5F00056F21946F48BDF6BDB0E8B8735870106ED
:10E60000B4808B46F00156FC1146FE8BDF6BDB0EAF
:10E610008B9F358733C98BF76BF60E8B9433878BC3
:10E6200008431879AB8004CF80146FC1156FE47EB3E
:10E63000938BDF6BDB0EFFB72F87FFB72D87FF763E
:10E64000F4FF76F29A14004CF88946F68BDF6BDB08
:10E650000EFFB72F87FFB72D87FF76F4FF76F29A6C
:10E6600024004CF88956FA8946F88B46F60106B420
:10E67000808B5EF633C98BF76BF60E8B9433878BEA
:10E6800008431878BF76BF60E03842D8713942F87C5
:10E690009AB8004CF80146FC1156FE8B56FE8B468C
:10E6A000FC0346F81356FA5F5EC9C333C98BD96BB6
:10E6B000DB058B87A9308B97A7303B061D877F0B27
:10E6C0007C063B161B87730341EBE28BD96BDB05A2
:10E6D0008B87A9308B97A7303B061D877F30750647
:10E6E0003B161B8777288BD96BDB058B87A9308B73
:10E6F00097A7303B061D8775B43B161B8775AE8BFD
:10E70000D96BDB058A87AB303A061F87729F890E6B
```

```
:10E71000B480C3C80A000056578B36B4808B3E1EA7
:10E72000888BDE6BDB05B840008EC0268B8702002D
:10E73000268B9700008946FE8956FC8BDE6BDB0535
:10E74000B840008EC0268A8704008846F7803E16AF
:10E7500088027403E90401B840008EC026F68400E4
:10E7600028007543463B361E88720233F64F8BC72E
:10E770000BC0750533C0E9FD018BDE6BDB05B840CE
:10E78000008EC0268B87020026 8B9700008946FEEC
:10E790008956FC8BDE6BDB05B840008EC0268A876D
:10E7A00004008846F7EBB08A46F78846F68B46FEAB
:10E7B0008B56FC8946FA8956F88A46F7FEC0884689
:10E7C000F73A067086750C8346FC018356FE00C638
:10E7D00046F7008BDE6BDB05B840008B56FE8B4E98
:10E7E000FC8EC026899702002 6898F00008BDE6B85
:10E7F000DB05B840008A56F78EC026889704008B48
:10E80000DE6BDB058B87A9308B97A7303B46FE7C00
:10E810002C75053B56FC72258BDE6BDB058B87A9BF
:10E82000308B97A7303B46FE751E3B56FC75198B07
:10E83000DE6BDB058A87AB303A46F7730BB84000D6
:10E840008EC026808C0028028B46FA8B56F8A31DBA
:10E850008789161B878A46F6E915018B46FE8B567B
:10E86000FCA3A9808916A7808A46F7A2AB80C606BA
:10E870004E0800A10D88A34F08C606510800C70620
:10E880005208A780C606540802A10F88050400A3F9
:10E890005708C70655084000900EE82CDBA1A98058
:10E8A0008B16A7808946FE8956FCA0AB808846F768
:10E8B000FEC08846F73A067086750CC646F7008398
:10E8C00046FC018356FE008BDE6BDB058B87A9308F
:10E8D0008B97A7303B46FE7C2C75053B56FC72257A
:10E8E0008BDE6BDB058B87A9308B97A7303B46FE11
:10E8F00075203B56FC751B8BDE6BDB058A87AB30C6
:10E900003A46F7730DB840008EC026808C0028026E
:10E91000EB2C8BDE6BDB05B840008B56FE8B4EFC80
:10E920008EC026899702002 6898F00008BDE6BDB64
:10E9300005B840008A56F78EC02688970400833EAB
:10E940005908007507803E5B08007413B840008EBC
:10E95000C026F6840028027503E9FFFEE905FEA142
:10E96000A9808B16A780A31D8789161B87A0AB8063
:10E97000A21F87B801005F5EC9C3C808000056A186
:10E9800018883B062488760533C0E9E201E8F6FBE7
:10E99000E880FD3D01007402EBEEE82EFBA1188734
:10E9A0008B161687A3A9808916A780A01A87A2AB09
:10E9B00080C6064E0800A11188A34F08C60651085C
:10E9C00000C7065208A780C606540803A11388058D
:10E9D0000A00A35708C70655084000900EE8E9D979
:10E9E000A15C08C746FE40008946FC833E590800EA
:10E9F0007507803E5B08007467803E178800752F9E
:10EA0000A11D8724FFC45EFC26884704A01B872421
:10EA1000FFB400C1E0088B161B87C1EA08B60003EB
:10EA2000C226894705A01F8726884707E93D01C4FC
:10EA30005EFC26800F80C606AA8000268A4704A2B4
```

```
:10EA4000A980268A4705B400C1E008268B5705C176
:10EA5000EA08B60003C2A3A780268A4707E94EFF4B
:10EA60008B0E1C888B365C082BCEB208900EE8FB10
:10EA7000D9C45EFCA0A980268807A0A780B400C1E5
:10EA8000E0088B16A780C1EA08B60003C2268947B2
:10EA900001A0AB8026884703A11D8724FF26884755
:10EAA00004A01B8724FFB400C1E0088B161B87C19C
:10EAB000EA08B60003C226894705A01F87268847B3
:10EAC00007FF061188FF06188883061C8808A11313
:10EAD00088C746FA40008946F8A02487B4008BD83E
:10EAE00083FB037603E98400D1E32EFFA772EBC416
:10EAF0005EF8268A07B400C1E008268B17C1EA0831
:10EB0000B60003C2050800C1F808B400268B17C17F
:10EB1000EA08268A1FC0E30802DA80C308B700C1EA
:10EB2000E30803D88B76F826891CEB40C45EF826F0
:10EB30008A4706B400C1E008268B5706C1EA08B62A
:10EB40000003C2050800C1F808B400268B5706C1AF
:10EB5000EA08268A5F06C0E30802DA80C308B70025
:10EB6000C1E30803D88B76F826895C06B801005EFD
:10EB7000C9CBEFEAEFEA2CEB2CEBC80800005657A4
:10EB8000A11388050A008946F8C746FE00008B4697
:10EB9000FE3B06288873498B5EFE6BDB05B84000A0
:10EBA0008B76FE6BF6058B94A9588B8CA7588EC07C
:10EBB000268997020026898F00008B5EFE6BDB059D
:10EBC000B840008B76FE6BF6058A94AB588EC02653
:10EBD00088970400FF46FE8B46FE3B06288872B7E6
:10EBE0008B46F8C746FC40008946FA833E118800F0
:10EBF0007506B80100E94801C45EFA268A4704B4E4
:10EC00000033D2268A4F0580C1109AD2004CF88971
:10EC1000161D87A31B87C45EFA268A4707A21F8793
:10EC2000E888FAB840008EC026F6850028017404F2
:10EC300033C0EBC1B840008EC026F68500280275AF
:10EC4000B78BDF6BDB05B840008EC0268B870200D8
:10EC5000268B9700003B061D877C4675063B161BDE
:10EC600087723E8BDF6BDB05B840008EC0268B873A
:10EC70000200268B9700003B061D877403E978FF8E
:10EC80003B161B877403E96FFF8BDF6BDB05B84016
:10EC9000008EC0268A8704003A061F877603E9574C
:10ECA000FFFE061F87A01F873A067086750F830632
:10ECB0001B870183161D8700C6061F87008BDF6B2D
:10ECC000DB058B87A9308B97A7303B061D877F30EC
:10ECD00075063B161B8777288BDF6BDB058B87A9B7
:10ECE000308B97A7303B061D8775473B161B8775F2
:10ECF000418BDF6BDB058A87AB303A061F877232A8
:10ED00008BDF6BDB05B840008B161D878B0E1B87D6
:10ED10008EC026899702002689800008BDF6BDB6F
:10ED200005B840008A161F878EC02688970400E920
:10ED3000C6FEB840008EC026808D002802E9B8FECD
:10ED40005F5EC9C3C804000056578B3E11888B16FE
:10ED5000138883C20A8BF2E98C00C746FE40008903
:10ED600056FCC45EFC26F607807403EB7490C45E08
```

```
:10ED7000FC268A4704A2A980268A4705B400C1E080
:10ED800008268B5705C1EA08B60003C2A3A7802650
:10ED90008A4707A2AB80C6064E0800A11188A34F80
:10EDA00008C606510800C7065208A780C6065408C0
:10EDB00003A11388050A00A35708C7065508400099
:10EDC000900EE804D6833E5908007415803E5B0817
:10EDD00000740E8B165C08C45EFC26800F80E979F7
:10EDE000FF83C6088BD68BC74F0BC07403E96AFF3D
:10EDF0005F5EC9C3000000000000000000000000CA
:10EE000057B90002BF39001E0733C0F3ABC706393C
:10EE1000040000C7063B0400005FCBC80200005698
:10EE2000578B7E048B5606A04504B4000BC0743784
:10EE30009C8F46FEFAEB218B1E3B048A058887399E
:10EE40000047FF063B04813E3B040004720AC706EC
:10EE50003B040000FF0639048BC24A0BC077D8F789
:10EE600046FE00027401FB5F5EC9C3558BECFF7662
:10EE700008FF7606E8A4FF83C4045DCB0000000011
:10EE8000E80100CB9CFA5356803E4504007503E927
:10EE9000B50080FEE07CF880FEEF77F3BE39008B92
:10EEA0001E3B0488304381FB00047528BB0000FF33
:10EEB000063904EB1F9CFA5356803E450400750347
:10EEC000E9840080FAE07CF880FAEF77F3BE39003D
:10EED0008B1E3B0488104381FB00047528BB000097
:10EEE000FF063904EB1F9CFA5356803E450400751B
:10EEF00003EB549080FCE07CF880FCEF77F3BE39A4
:10EF0000008B1E3B0488204381FB00047525BB0059
:10EF100000FF063904EB1C9CFA5356803E45040062
:10EF20007502EB233CE07C1F3CEF771BBE39008B66
:10EF30001E3B0488004381FB00047507BB0000FFF3
:10EF4000063904891E3B045E5B9DC300000000007F
:040000033FFF0000BB
:00000001FF
```

APPENDIX B

```
/*****************************************************************************/
/*  Program Name       : Drive.c                                             */
/*  Description        : 4x 5.25" DSP Servo controller main kernal           */
/*  Part Number        : 562096                                              */
/*  Date               : 8/12/93                                             */
/*  O/S                : N/A                                                 */
/*  Compiler           : TI TMS320C2x/C5x Compiler.#TMDS3242855-02.Rel. 6.0  */
/*  Support Packages   : N/A                                                 */
/*  Author             : Dave Schell                                         */
/*  Required Files     : Drive.c,Interupt.asm,C50_init.asm,Seek.c,Drive.h     */
/*                     : Recal.c                                             */
/*  Hardware Required  : Part # XXXXXX                                       */
/*  Install. Instr.    : Link in with Drive code                             */
/*  Operating Instr.   : N/A                                                 */
/*                                                                           */
/*  Rev History                                                              */
/*    Date     Rev  C#  Init     Change Description                         */
/*  4/14/94    XA   00   DLS   Initial Release                               */
/*****************************************************************************/

#include "drive.h"

main ()
{
/* Debug start */
    int i;
    for (i=0;i<50;i++) Debug_Ram[i] = 0;
/* Debug stop */

    init_regs();
    while(1)
    {
    if ((Cmd_Bits & CmdPending) != 0)   /* Command Ready ? */
       {
       ExecuteCmd();
       }
    if ((Cmd_Bits & Tach_Bit) != 0)   /* If a Rotation happened */
```

```
{
if (TachUpLimit != 0)
{
   if (Tach_Time > TachUpLimit)
   {
   asm("     SETC    INTM");  /* Disable intr while changing image */
   Ctrl_Image |= DSP_Intr;    /* Set DSP Int. Interupt the 188 */
   Ctrl_Port = Ctrl_Image;    /* Write to the port */
   Stat_Buffer[0] |= SpindleError; /* Set the Spindle Error Bit */
   asm("     CLRC    INTM");  /* Re enable interrupts */
   }
}
if (TachLowLimit != 0)
{
   if (Tach_Time < TachLowLimit)
   {
   asm("     SETC    INTM");  /* Disable intr while changing image */
   Ctrl_Image |= DSP_Intr;    /* Set DSP Int. Interupt the 188 */
   Ctrl_Port = Ctrl_Image;    /* Write to the port */
   Stat_Buffer[0] |= SpindleError; /* Set the Spindle Error Bit */
   asm("     CLRC    INTM");  /* Re enable interrupts */
   }
}
if ((Stat_Buffer[0] & FineLoop) != 0)  /* If Fine Loop is closed */
   {
   if ((Stat_Buffer[0] & Jumpback_Out) != 0) /* do jumpback? */
      {
      Do_Jumpback(Seek_Out);
      }
   if ((Stat_Buffer[0] & Jumpback_In) != 0) /* do jumpback? */
      {
      Do_Jumpback(Seek_In);
      }
   }
}
if ((Ctrl_Image & LaserEnable) == LaserEnable)  /* Regulate laser power */
   {
```

```
            if ((Cmd_Bits & SenseSample) != 0)   /* Fwd Sense Sample Available */
               {
               RegulateLaser(LS);
               }
         }
      }
   }

   /*************************************************************************/
   /*  ExecuteCmd decodes and executes interupt recieved commands, when   */
   /*  the command is completed, this routine returns and enables command */
   /*  interupts.                                                         */
   /*************************************************************************/
   void ExecuteCmd (void)
   {
      int temp;

           /* Assume the command is understood and has a good check sum */
      Stat_Buffer[0] |= CmdComplete;   /* Set Command Complete */
      Stat_Buffer[0] &= ~BadChkSum;    /* Clear the Bad Check Sum bit */
      Stat_Buffer[0] &= ~UnknownCmd;   /* Clear the Unknown Command bit */

      if (CheckSum() == 0x00ff)  /* Test 1's Complement Check Sum on Commands */
      {
         temp = (CMD_Buffer[0] >> 8) & 0x00ff;
         switch (temp)
         {
           case 0 : SendStatus();     /* Command 0 = Status only */
                    break;
           case 1 : InitDrive();      /* Command 1 = Initialize drive */
                    break;
           case 2 : LaserOn();        /* Command 2 = Initialize the laser */
                    break;
           case 3:  CaptureFocus();   /* Command 3 = Capture Focus */
                    break;
           case 4:  CaptureFine();    /* Command 4 = Capture Fine Tracking */
                    break;
```

```
            case 5:  CaptureCoarse();  /* Command 5 = Close the Coarse Loop */
                     break;
            case 6:  ClosePinning();   /* Command 6 = Close the Pinning Loop */
                     break;
            case 7:  EnJumpbackIn();   /* Command 7 = Enable Jumpback In */
                     break;
            case 8:  EnJumpbackOut();  /* Command 8 = Enable Jumpback Out */
                     break;
            case 9:  DisJumpback();    /* Command 9 = Disable Jumpbacks */
                     break;
            case 0x0A: MultiTrackSeek(CMD_Buffer[1].Seek_In);
                     break;            /* Command A = Do a Seek toward spindle */
            case 0x0B: MultiTrackSeek(CMD_Buffer[1].Seek_Out);
                     break;            /* Command B = Do Seek away from spindle */
            case 0x0C: OpenLoops();    /* Command C = Open various loops */
                     break;
            case 0x0D: ClearDSPIntr(); /* Command D = Clear DSP to 188 Interrupt */
                     break;
            case 0x0E: VelTabStart (); /* Command E = Read start of Vel Table */
                     break;
            case 0x0F: ReadTimeTick(); /* Command F = Read 32 bit 20us Clock */
                     break;
            case 0x10: SetTachLimit(); /* Command 10h = Set Tach Pulse Limits */
                     break;
            case 0x80: ReadCodeRev();  /* Command 80h = Read DSP Code Rev */
                     break;
            case 0x81: ReadMemory();   /* Command 81h = Read DSP Ram Memory */
                     break;
            case 0x82: WriteMemory();  /* Command 82h = Write DSP Ram Memory */
                     break;
            default: BadCommand();     /* A bad command was sent*/
                     break;
        }
    }
    else BadCheckSum();
    asm("     SETC   INTM");      /* disable interupts */
    Cmd_Bits &= ~CmdPending;      /* Clear the Command Pending Bit */
```

```
    Cmd_Buff_Point = &Stat_Buffer[0];  /* Point to start of the status */
    Cmd_Bits |= 0x0004;                /* Set for the MSByte of the status */
    asm("     CLRC   INTM");           /* enable interupts */
    asm("     lamm   IMR");            /* Get the Interupt Mask Register */
    asm("     or     #0100h");         /* Set enable interupt 4 bit, bit 9 */
    asm("     samm   IMR");            /* Enable interupt 4 */
    asm("     intr   9");              /* do an interupt 4 */
}

void SendStatus (void)                 /* Command 0 = Status only */
{                                /* Do Nothing, Set up else where, just return */
}
void InitDrive (void)                  /* Command 1 = Init laser and servos */
{
    if ((Cmd_Buff_Point - &CMD_Buffer[0]) != 2)
    {
        BadCommand();
    }
    else
    {
        LaserOn();                 /* Turn the laser on */
        ClosePinning();            /* Close the pinning loop, enable Fine PA */
        Retract();                 /* Move the carriage to inner crash stop */
        CaptureFocus();            /* Capture Focus */
        CaptureCoarse();           /* Capture Coarse Tracking */
        Stat_Buffer[0] &= ~PinningLoop; /* open the Pinning loop */
        MultiTrackSeek(3000,Seek_Out);  /* Seek out to the disk */
        Delay(100);
        MultiTrackSeek(200,Seek_Out);  /* Seek out to the disk */
        FocusOffset();             /* Find Optimum Focus for RPP */
        TrackOffset();             /* Find RPP Center value */
    }
}
void LaserOn (void)                    /* Command 2 = laser on and calibrate */
{
    int TimeOut;
```

```
if ((Cmd_Buff_Point - &CMD_Buffer[0]) != 2)
{
    BadCommand();
}
else
{
    Stat_Buffer[0] &= LoopsOpen;  /* Clear Laser, Fine,Crs,Focus,Pin */
    Read_Sense = CMD_Buffer[1];   /* Save desired read sense value */
    Write_Sense = CMD_Buffer[2];  /* Save desired write sense value */
    ReadMSImage = 0;        /* Zero all the initial values */
    ReadMS_DAC = ReadMSImage;
    ReadLSImage = 0x4000;   /* Center range, 15 bits, initial value */
    ReadLS_DAC = (ReadLSImage << 1);  /* write out the value */
    WriteDacImage = 0;
    Write_DAC = WriteDacImage;
    asm("     SETC    INTM");  /* Disable intr while changing image */
    Ctrl_Image &= 0x0003;      /* Open loops, Laser off, leave DSP Int */
    Ctrl_Port = Ctrl_Image;    /* Write to the port */
    asm("     CLRC    INTM");  /* Re enable interrupts */
    Delay(100);    /* Delay 100 * 20 us (2000 us), let laser turn off */
    FwdSen_Zero = Int_FwdSen;  /* Save the laser off value */
    QSum_Zero = Int_QSum;      /* Save the laser off value */
    Fine_Zero = Int_Fine;      /* Save the laser off value */
    Focus_Zero = Int_Focus;    /* Save the laser off value */
    Crs_Zero = Int_Crs;        /* Save the laser off value */
    Stat_Buffer[0] &= ~LaserError;  /* Clr Laser Read Power Error */
    Stat_Buffer[0] |= LaserEnabled;  /* Laser Read Power is Not okay */
    asm("     SETC    INTM");  /* Disable intr while changing image */
    Ctrl_Image |= LaserEnable;   /* Set the laser read on bit */
    Ctrl_Port = Ctrl_Image; /* Turn on the laser */
    asm("     CLRC    INTM"); /* Re enable interrupts */
    TimeOut = 0;
    while(TimeOut < 2000)           /* Regulate the laser for 40ms */
      if ((Cmd_Bits & SenseSample) != 0) /* Fwd Sense Sample Available */
      {
      RegulateLaser(MS);
      TimeOut++;
```

```
        }
    }
}
/*************************************************************************/
/*   Capture Focus                                                       */
/*************************************************************************/
void CaptureFocus(void)          /* Command 3 = Capture Focus and Close Loop */
{
  int MaxQuadSum;
  int Counter;
  int TimeOut;

  Stat_Buffer[0] &= ~FocusLoop;      /* open the focus loop */
  MaxQuadSum = QSum_Zero;          /* Initialize the Quad Sum Value */
  FocMS_Image = 0;                 /* Set to zero value, signed integer */
  Foc_MS_DAC =  ZeroOffset;        /* Write zero value to the DAC */
  FocLS_Image = FocusStart;        /* Set Focus Current DAC to sweep start */
  Foc_LS_DAC = FocLS_Image + ZeroOffset;  /* Write DAC with zero offset */
  asm("     SETC    INTM");  /* Disable intr while changing image */
  Ctrl_Image |= FocusEnable;       /* Set the Focus PA Enable bit on */
  Ctrl_Port = Ctrl_Image;          /* Write out the port value */
  asm("     CLRC    INTM"); /* Re enable interrupts */
  Delay(150);                      /* Delay 3 ms (20 * 150us) */
              /* Find the Max Quad Sum Point */
  while (FocLS_Image > FocusStop)
  {
    Delay(5);                      /* Wait 100 us */
    if (Int_QSum > MaxQuadSum)     /* Get the max quad sum */
    {
      MaxQuadSum = Int_QSum;
    }
    Foc_LS_DAC = FocLS_Image + ZeroOffset;  /* Write DAC with zero offset */
    FocLS_Image -= 256;
  }
    /* Get the Quad Sum Threshold Level, 1/2 of Max Quad Sum */
  MaxQuadSum = ((MaxQuadSum - QSum_Zero) >> 1) + QSum_Zero;
    /* Find the Focus Point and close the loop */
```

```
while ((FocLS_Image < FocusStart) &
                        ((Stat_Buffer[0] & FocusLoop) != FocusLoop))
{
  for(Counter = 0; Counter < 32 ; ++Counter)          /* wait n times */
  {
    Delay(1);
        /* when quad sum okay and Focus negative */
    if ((Int_QSum > MaxQuadSum) & ((Int_Focus - Focus_Zero) > 0))
    {
      Stat_Buffer[0] |= FocusLoop; /* close the focus loop */
    }
  }
  Foc_LS_DAC = FocLS_Image + ZeroOffset;  /* Write DAC with zero offset */
  FocLS_Image += 256;
}
if ((Stat_Buffer[0] & FocusLoop) == FocusLoop)  /* If focus is closed */
{
    TimeOut = 0;
    while(TimeOut < 500)            /* Regulate the laser for 10ms */
    {
      if ((Cmd_Bits & SenseSample) != 0) /* Fwd Sense Sample Available */
      {
        RegulateLaser(MS);
        if (ReadLSImage < 0x4000) /* Center range, 15 bits, initial value */
        {
          ReadLSImage = ReadLSImage + 128;  /* Increment lsb of DAC */
          ReadLS_DAC = (ReadLSImage << 1);  /* write out the value */
        }
        else
        {
          ReadLSImage = ReadLSImage - 128;  /* Decrement lsb of DAC */
          ReadLS_DAC = (ReadLSImage << 1);  /* write out the value */
        }
        TimeOut++;
      }
    }
}
```

```
}
/*************************************************************************/
/*   Capture Fine Tracking                                               */
/*************************************************************************/
void CaptureFine(void)          /* Command 4 = Close the tracking Loop */
{
   int Counter;

   while ((Counter < 2000) & ((Stat_Buffer[0] & FineLoop) != FineLoop))
   {
     Delay(1);
     Counter++;
         /* when Fine Error is close to zero */
     if (abs(Int_Fine - Fine_Zero) < 0x1000)
     {
        Stat_Buffer[0] |= FineLoop;    /* close the fine loop around zero */
     }
   }
   if (Counter < 2000)
   {
     asm("     SETC    INTM");  /* Disable intr while changing image */
     Ctrl_Image |= FineEnable;  /* Set the Fine PA Enable bit on */
     Ctrl_Port = Ctrl_Image;    /* Write out the port value */
     asm("     CLRC    INTM"); /* Re enable interrupts */
     Stat_Buffer[0] |= FineLoop;   /* close the fine loop */
   }
}
/*************************************************************************/
/*   Capture Coarse Tracking                                             */
/*************************************************************************/
void CaptureCoarse(void)        /* Command 5 = Capture Coarse Tracking */
{
     Delay(50);                 /* Let the fine loop settle 1 ms */
     asm("     SETC    INTM");  /* Disable intr while changing image */
     Ctrl_Image |= CrsEnable;   /* Set the Coarse PA Enable bit on */
     Ctrl_Port = Ctrl_Image;    /* Write out the port value */
     asm("     CLRC    INTM");  /* Re enable interrupts */
```

```
    Stat_Buffer[0] |= CoarseLoop; /* close the Coarse loop */
}
/*************************************************************************/
/*   Close the Pinning Loop                                              */
/*************************************************************************/
void ClosePinning(void)          /* Command 6 = Close the Pinning Loop */
{
    asm("     SETC    INTM");   /* Disable intr while changing image */
    Ctrl_Image |= FineEnable;   /* Set the Fine PA Enable bit on */
    Ctrl_Port = Ctrl_Image;     /* Write out the port value */
    asm("     CLRC    INTM");   /* Re enable interrupts */
    Stat_Buffer[0] |= PinningLoop; /* close the Pinning loop */
}
void EnJumpbackIn(void)   /* Command 7 = Enable Jumpback In */
{
   Stat_Buffer[0] |= Jumpback_In;    /* Enable Jumpback Toward the Spindle */
}
void EnJumpbackOut (void)  /* Command 8 = Enable Jumpback Out */
{
    Stat_Buffer[0] |= Jumpback_Out;    /* Enable Jumpback Away from Spindle */
}
void DisJumpback(void)    /* Command 9 = Disable Jumpbacks */
{
    Stat_Buffer[0] &= ~Jumpback_In;     /* Disable Jumpback Toward Spindle */
    Stat_Buffer[0] &= ~Jumpback_Out;    /* Disable Jumpback Away from Spindle */
}
       /* Execute the Open Loops command from the 188 */
/*************************************************************************/
/*       Execute the Open Loops command from the 188                     */
/*************************************************************************/
void OpenLoops(void)              /* Command C = Open Loops */
{
    asm("     SETC    INTM");  /* Disable intr while changing image */
    if(CMD_Buffer[1] & 0x0100)     /* If true disable the laser */
       {
       Ctrl_Image &= ~LaserEnable; /* Clr Laser Bits of control port image */
       Stat_Buffer[0] &= ~LaserError;  /* Clr Laser Power Error Bit */
```

```
        Stat_Buffer[0] &= ~LaserEnabled; /* Laser Read Power is Not okay */
        }
      if(CMD_Buffer[1] & 0x0200)     /* If true disable the focus loop */
        {
        Ctrl_Image &= ~FocusEnable; /* Clr Focus Bit of control port image */
        Stat_Buffer[0] &= ~FocusError; /* Clr Focus Loop Error bit */
        Stat_Buffer[0] &= ~FocusLoop;  /* Open the Focus Loop */
        }
      if(CMD_Buffer[1] & 0x0400)     /* If true disable the Coarse loop */
        {
        Ctrl_Image &= ~CrsEnable;   /* Clr Coarse Bit of control port image */
        Stat_Buffer[0] &= ~CoarseLoop; /* Open the Coarse Loop */
        }
      if(CMD_Buffer[1] & 0x0800)     /* If true disable the Fine loop */
        {
        Ctrl_Image &= ~FineEnable;  /* Clr Fine Bit of control port image */
        Stat_Buffer[0] &= ~TrackingError;  /* Clr Tracking Loop Error Bit */
        Stat_Buffer[0] &= ~FineLoop;   /* Open the Fine Loop */
        }
      if(CMD_Buffer[1] & 0x1000)     /* If true disable the Pinning loop */
        {
        Ctrl_Image &= ~FineEnable;   /* Clr Fine Bit of control port image */
        Stat_Buffer[0] &= ~PinningLoop; /* Open the Fine Loop */
        }
      if(CMD_Buffer[1] & 0x2000)     /* If true clear the spindle error bit */
        {
        Stat_Buffer[0] &= ~SpindleError; /* Clear the spindle error bit */
        }
      Ctrl_Port = Ctrl_Image;        /* Clear the actual bits */
      asm("     CLRC    INTM");      /* Re enable interrupts */
    }
        /* Execute the Clear DSP Interrupt command from the 188 */
    void ClearDSPIntr(void)            /* Command D = Clear DSP to 188 Interrupt */
    {
      asm("     SETC    INTM"); /* Disable interrupts while changing image */
      Ctrl_Image &= ~DSP_Intr;  /* Clear the LSBit of the control port image */
      Ctrl_Port = Ctrl_Image;   /* Clear the actual bit */
```

```
    asm("     CLRC    INTM"); /* Re enable interrupts */
}
        /* Execute the Velocity Table Start Address */
void VelTabStart(void)   /* Command 0Eh = Read Velocity Table Start Address */
{
    Stat_Buffer[1] = ((int) &Vel_Table); /* Store Vel Table Start Addr */
    Stat_Buffer[2] = ((int) &InverseTime); /* Store Inverse Time Start Addr */
}
        /* Execute the Read Time Tick Counter */
void ReadTimeTick()        /* Command 0Fh = Read Time Tick Counter */
{
    asm("     SETC    INTM");  /* Disable intr while storing the values */
    Stat_Buffer[1] = Count_20_MSW; /* Store Time Tick MSWord */
    Stat_Buffer[2] = Count_20_LSW; /* Store Time Tick LSWord */
    asm("     CLRC    INTM"); /* Re enable interrupts */
}
        /* Execute the Set Tach time limits */
void SetTachLimit(void)      /* Command 10h = Set the tach pulse limits */
{
    TachUpLimit = CMD_Buffer[1];   /* Save the upper limit value */
    TachLowLimit = CMD_Buffer[2];  /* Save the lower limit value */
}
        /* Execute the Code Revision Read command from the 188 */
void ReadCodeRev(void)       /* Command 80h = Read the DSP Code Rev Level */
{
    static char Rev[5]={ Revision };  /* Rev level reported by ReadCodeRev */

    Stat_Buffer[1] = ((int) Rev[0] << 8);  /* Get the Character. SHL 8 */
    Stat_Buffer[1] |= (int) Rev[1];      /* Get 2nd Character in buffer */
    Stat_Buffer[2] = ((int) Rev[2] << 8);  /* Get the 3rd Character. SHL 8 */
    Stat_Buffer[2] |= (int) Rev[3];      /* Get 4th Character in buffer */
}
        /* Execute the Memory read command from the 188 */
void ReadMemory(void)         /* Command 81h = Read DSP Ram Memory */
{
    int *Temp_P1,*Temp_P2,Temp;
```

```
    Temp_P1 = &CMD_Buffer[0];           /* Point to 1st Cmd Byte */
    ++Temp_P1;                          /* Point to Address Value */
    Temp_P2 = (int *) *Temp_P1;         /* Load Address into Temp_P2 */
    Temp_P1 = &Stat_Buffer[0];          /* Point to the Status Buffer */
    ++Temp_P1;                          /* Point to the 1st data word */
    while (Temp_P1 < &CMD_Buffer[0])    /* Move all the words */
    {
       *Temp_P1 = *Temp_P2;             /* Store a word of data */
       ++Temp_P1;                       /* Point to next data word */
       ++Temp_P2;                       /* Point to next storage location */
    }
}
        /* Execute the Memory write command from the 188 */
void WriteMemory(void)       /* Command 81h = Write DSP Ram Memory */
{
    int *Temp_P1,*Temp_P2,Temp;

    Temp_P1 = &CMD_Buffer[0];           /* Point to 1st Cmd Byte */
    ++Temp_P1;                          /* Point to Address Value */
    Temp_P2 = (int *) *Temp_P1;         /* Load Address into Temp_P2 */
    ++Temp_P1;                          /* Point to 1st data word */
    while (Temp_P1 <= Cmd_Buff_Point)   /* Move all the words */
    {
       *Temp_P2 = *Temp_P1;             /* Store a word of data */
       ++Temp_P1;                       /* Point to next data word */
       ++Temp_P2;                       /* Point to next storage location */
    }
}
        /* Set up the status buffer saying the command was not understood */
void BadCommand(void)       /*Command ? = an undefined command */
{
    Stat_Buffer[0] &= ~CmdComplete;   /* Clear Command Complete */
    Stat_Buffer[0] |= UnknownCmd;     /* Set Unknown Command bit */
}
        /* Set up the status buffer saying the checksum was bad */
void BadCheckSum(void)
{
```

```
    Stat_Buffer[0] &= ~CmdComplete;    /* Clear Command Complete */
    Stat_Buffer[0] |= BadChkSum;       /* Set Bad Check Sum bit */
}

    /* Calculate the checksum on the command buffer */
int CheckSum(void)
{
    int *Temp_Point,sum;

    sum = 0;                                    /* Initialize the Sum Value */
    Temp_Point = &CMD_Buffer[0];                /* Point to 1st Cmd Byte */
    while (Temp_Point <= Cmd_Buff_Point)        /* Do Summation for all bytes */
    {
       sum += *Temp_Point + (*Temp_Point >> 8);  /* Sum both bytes of word */
       ++Temp_Point;                            /* Point to next command word */
    }
    sum &= 0x00FF;                              /* Clear MSByte */
    return(sum);                                /* Return with Sum Value */
}
/*************************************************/
/*    Delay so many 20us time ticks then return   */
/*************************************************/
void Delay(int ticks)
{
    int Stop_Time;

    Stop_Time = Count_20_LSW + ticks; /* Calculate the stop time */
    while (Stop_Time != Count_20_LSW) /* Repeat until counter equals stop */
    {
    }
}
/*****************************************************************************/
/*     Regulate the laser read power                                         */
/*****************************************************************************/
void RegulateLaser(int MS_LS)
{     /* Integrate around Read_Sense, Desired -  Unsign ADC Value */
  int ReadPCLError;
```

```
    /* Int_FwdSen is a 10 bit unsigned (positive) number */
  ReadPCLError = ((Int_FwdSen - FwdSen_Zero) - Read_Sense);
  if (MS_LS == LS)
    {
5   ReadLSImage = (ReadLSImage - ReadPCLError);
    if (ReadLSImage < 0)  /* Over or Under Flow */
      {
      if (ReadPCLError > 0)   /* UNDER FLOW */
        {
10      ReadLSImage = 0;
        }
      else
        {
        ReadLSImage = 0x7FFF;
15      }
      RegulateLaser(MS);   /* Regulate with the Large bit step */
      }
    ReadLS_DAC = (ReadLSImage << 1);
    }
20  else
    {
    ReadMSImage = (ReadMSImage - ReadPCLError);
    if (ReadMSImage < 0)
      {
25    if (ReadPCLError > 0)   /* UNDER FLOW */
        {
        ReadMSImage = 0;
        }
      else
30      {
        ReadMSImage = 0x7FFF;
        }
      }
    ReadMS_DAC = (ReadMSImage << 1);
35  }
  if (abs(ReadPCLError) < ReadPowerTol)
    {
```

```
    Stat_Buffer[0] &= ~LaserError;  /* Laser Read Power is Okay */
    }
    else
    {
    Stat_Buffer[0] |= LaserError;   /* Laser Read Power is Not okay */
    }
  asm("     SETC   INTM");     /* Disable interupts */
  Cmd_Bits &= ~SenseSample;    /* Clear the Sense Available Bit */
  asm("     CLRC   INTM");     /* enable interupts */
}
/*****************************************************************************/
/*   Program Name      : Drive.h                                             */
/*   Description       : 4x 5.25" DSP Servo controller header file           */
/*   Part Number       : 562096                                              */
/*   Date              : 8/12/93                                             */
/*   O/S               : N/A                                                 */
/*   Compiler          : TI TMS320C2x/C5x Compiler,#TMDS3242855-02,Rel. 6.0 */
/*   Support Packages  : N/A                                                 */
/*   Author            : Dave Schell                                         */
/*   Required Files    : Drive.c,Interupt.asm,C50_init.asm,Seek.c,Drive.h    */
/*                     : Recal.c                                             */
/*   Hardware Required : Part # XXXXXX                                       */
/*   Install. Instr.   : Link in with Drive code                             */
/*   Operating Instr.  : N/A                                                 */
/*                                                                           */
/*   Rev History                                                             */
/*     Date     Rev  C#  Init     Change Description                       */
/*   4/14/94    XA   00   DLS   Initial Release                              */
/*****************************************************************************/


enum Seek_Dir {Seek_Out,Seek_In};  /* direction const Jumpback and seek */
enum Laser_Reg {LS,MS};            /* LS,MS Test for laser regulation */

#define Revision "XA00"            /* The current Revision Level */

#define Retr_Accel 6345            /* (2.0 Gs / 0.0003152 Gs/bit) */
```

```
#define Retr_Pulses 100          /* Number of Retract Pulses */

#define Foc_Step 655             /* Focus Step Size for Auto Focus */

#define JB_Accel 9835            /* (3.1 Gs / 0.0003152 Gs/bit) */
#define JB_Decel -13959          /* (4.4 Gs / 0.0003152 Gs/bit) */
#define Seek_Accel 18718         /* (5.9 Gs / 0.0003152 Gs/bit) */
#define Seek_Decel -13959        /* (4.4 Gs / 0.0003152 Gs/bit) */
#define Hi_BW_Tracks 10          /* Seek length for using high Bandwidth */
#define HiSeekGain 149           /* 149, Wide BW (750 Hz) Gain constant */
#define LowSeekGain 99           /* 99, Low BW (500 Hz) Gain constant */

#define CmdComplete 0x8000       /* Status Word Command Complete Bit */
#define BadChkSum 0x4000         /* Status Word Bad Check Sum Bit */
#define UnknownCmd 0x2000        /* Status Word Unknown Command Bit */
#define TrackingError 0x1000     /* Status Word Tracking Error Bit */
#define SpareBit 0x0800          /* Status Word Spare Bit */
#define FocusError 0x0400        /* Status Word Focus Error Bit */
#define LaserError 0x0200        /* Status Word Laser Control Error Bit */
#define FocusLoop 0x0100         /* Status Word Focus Loop Closed Bit */
#define FineLoop 0x0080          /* Status Word Fine Loop Closed Bit */
#define CoarseLoop 0x0040        /* Status Word Coarse Loop Closed Bit */
#define PinningLoop 0x0020       /* Status Word Pinning Loop Closed Bit */
#define SpindleError 0x0010      /* Status Word Tach Out of Spec Bit */
#define LaserEnabled 0x0008      /* Status Word Laser Read Power is on */
#define Jumpback_In 0x0004       /* Status Word Jumping Back In Bit */
#define Jumpback_Out 0x0002      /* Status Word Jumping Back Out Bit */
#define Bad_Seek 0x0001          /* Status Word Bad Seek/no Vel Table Bit */
#define LoopsOpen 0xE00F         /* Clear Tach, Focus, Coarse, Fine, Pin */

#define SenseSample 0x0080       /* Sense Sample Available Bit */
#define CmdPending 0x0001        /* Command Bits, Command pending Bit */
#define Tach_Bit 0x0200          /* Command Bits, Motor Tach Bit */

#define ReadPowerTol 0x0005      /* Read Power Okay Tolerance */
#define FocusEnable  0x0080      /* Control Port Focus PA Enable Bit */
```

```
#define FineEnable    0x0040      /* Control Port Fine PA Enable Bit */
#define CrsEnable     0x0020      /* Control Port Fine PA Enable Bit */
#define DTCS_Clk_Pol  0x0010      /* Track Crossing Clock Polarity */
#define LaserEnable   0x0008      /* Control Port Laser Enable Bit */
#define Software_TP   0x0002      /* Control Port Software Test Point Bit */
#define DSP_Intr      0x0001      /* Control Port DSP to 188 interrupt Bit */

#define FocusStart  32000         /* Focus Capture Sweep Current Minimum */
#define FocusStop  -32000         /* Focus Capture Sweep Current Maximum */
#define ZeroOffset 0x8000         /* Zero Offset value for the DACs */
#define MaxPositive 0x7FFF        /* Max positive signed integer value */
#define MaxNegative 0x8000        /* Max negative signed integer value */

extern int Read_Sense;        /* Laser Read Sense Desired Level */
extern int Write_Sense;       /* Laser Write Sense Desired Level */
extern int ReadMSImage;       /* Laser Read DAC Bit Image */
extern int ReadLSImage;       /* Laser Read DAC Bit Image */
extern int WriteDacImage;     /* Laser Write DAC 16 Bit Image */
extern int MaxRPP;            /* Maximum RPP Value seen during a jumpback */
extern int MinRPP;            /* Minimum RPP Value seen during a jumpback */


extern int FwdSen_Zero;       /* ADC Forward Sense Value with the laser off */
extern int QSum_Zero;         /* ADC Quad Sum Value with the laser off */
extern int Fine_Zero;         /* ADC Tracking Value with the laser off */
extern int Focus_Zero;        /* ADC Focus Value with the laser off */
extern int Crs_Zero;          /* ADC Coarse Error Zero */
extern int FineDacZero;       /* Fine DAC Zero or Seek Accel Value */
extern int CrsDacZero;        /* Crs DAC Zero or Seek Accel Value */
extern int FocLS_Image;       /* Focus Current LS (Capture) DAC 16 Bit Image */
extern int FocMS_Image;       /* Focus Current MS (Servo) DAC 16 Bit Image */
extern int FineDacImage;      /* Fine Current (Servo) DAC 16 Bit Image */
extern int Cmd_Bits;          /* Command ready Status Flag */
extern int *Cmd_Buff_Point;   /* Command Buffer Pointer */
extern int Stat_Buffer[5];    /* The first word of the status buffer */
extern int CMD_Buffer[10];    /* The first word of the command buffer */
extern int SPC;               /* The Serial Control Input Port */
```

```
extern int Track_Cnt;       /* The Track Crossing Counter Input Port */
extern int Ctrl_Port;       /* The Output Control Port */
extern int Ctrl_Image;      /* The memory image of the Control Port */
extern int Foc_LS_DAC;      /* Focus DAC Memory Location */
extern int Foc_MS_DAC;      /* Focus DAC Memory Location */
extern int Foc_Err_Cnt;     /* Focus Out of limit sample counter */
extern int Focus_Limit;     /* Focus Error Spec Limit Value */
extern int Fine_DAC;        /* Fine DAC Memory Location */
extern int Fine_Err_Cnt;    /* Focus Out of limit sample counter */
extern int Fine_Limit;      /* Focus Error Spec Limit Value */
extern int Crs_DAC;         /* Coarse DAC Memory Location */
extern int Write_DAC;       /* Write DAC Memory Location */
extern int ReadLS_DAC;      /* Read DAC Memory Location */
extern int ReadMS_DAC;      /* Read DAC Memory Location */
extern int Spare_DAC;       /* Spindle or Test DAC Memory Location */
extern int Int_Focus;       /* Focus Interupt Value */
extern int Int_Fine;        /* Fine Interupt Value */
extern int Int_Crs;         /* Coarse Interupt Value */
extern int Int_FwdSen;      /* Forward Sense Interupt Value */
extern int Int_QSum;        /* Quad Sum Interupt Value */
extern int Int_Test;        /* Test Interupt Value */
extern int Count_20_MSW;    /* 20us Time tick counter, upper 16 bit value */
extern int Count_20_LSW;    /* 20us Time tick counter, lower 16 bit value */
extern int TachUpLimit;     /* Tach Pulse upper time limit */
extern int TachLowLimit;    /* Tach Pulse lower time limit */
extern int Tach_Time;       /* Tach Pulse Recurrence Interval time  */
extern int Vel_Table[384];  /* Seek Velocity Table Starting Address */
extern int InverseTime[25]; /* Inverse Time Table for seek velocity calcs */
extern int Debug_Ram[50];   /* Inverse Time Table for seek velocity calcs */

void init_regs(void);       /* Initialize the DSP registars */
void ExecuteCmd(void);
void SendStatus(void);
void InitDrive(void);
void LaserOn(void);
void CaptureFocus(void);
void CaptureFine(void);
```

```
void CaptureCoarse(void);
void ClosePinning(void);
void EnJumpbackIn(void);
void EnJumpbackOut(void);
void DisJumpback(void);
void OpenLoops(void);
void ClearDSPIntr(void);
void VelTabStart(void);
void ReadTimeTick(void);
void SetTachLimit(void);
void ReadCodeRev(void);
void ReadMemory(void);
void WriteMemory(void);
void BadCommand(void);
void BadCheckSum(void);
int CheckSum(void);
void Delay(int ticks);
void RegulateLaser(int);
void Do_Jumpback(int);
void Track_Capture(int,int);
void MultiTrackSeek(int,int);
void Retract(void);          /* Move the carriage to inner crash stop */
void FocusOffset(void);      /* Find the Zero Offsets for Max RPP */
void TrackOffset(void);      /* Find Zero Offset at (Max Rpp + Min RPP)/2 */
int FindPeaktoPeak(void);    /* Find the peak to peak RPP Value */
/*****************************************************************************/
/*   Program Name      : Seek.c                                              */
/*   Description       : 4x 5.25" DSP Servo controller seek routines         */
/*   Part Number       : 562096                                              */
/*   Date              : 12/12/93                                            */
/*   O/S               : N/A                                                 */
/*   Compiler          : TI TMS320C2x/C5x Compiler,#TMDS3242855-02,Rel. 6.0 */
/*   Support Packages  : N/A                                                 */
/*   Author            : Dave Schell                                         */
/*   Required Files    : Drive.c,Interupt.asm,C50_init.asm,Seek.c,Drive.h    */
/*                     : Recal.c                                             */
/*   Hardware Required : Part # XXXXXX                                       */
```

```
/*   Install. Instr.   : Link in with Drive code                          */
/*   Operating Instr.  : N/A                                              */
/*                                                                        */
/*   Rev History                                                          */
/*     Date     Rev  C#  Init     Change Description                      */
/*   04/14/94   XA   00   DLS    Initial Release                          */
/************************************************************************/

#include "drive.h"

/************************************************************************/
/*   Multi Track Seek in or out                                         */
/************************************************************************/
void MultiTrackSeek(Tracks,In_Out)
int Tracks,In_Out;
{
  int Accel,Decel,Sign,i,DeltaTime,OldTime,NewTime;
  int MeasuredVel,DesiredVel,TrackCount,Old_Trk_Cnt,New_Trk_Cnt,DeltaTracks;
  int LoopError,LoopGain,VelError,MaxVelError,OldCrsDacZero;
  int OldHalfTrack,HalfTrack;

  TrackCount = Tracks;                  /* Get the number of track to seek */
       /* Setup the direction dependent parameters */
  if (In_Out == Seek_In)
  {
     Sign = 1;
     asm("     SETC    INTM");   /* Disable intr while changing image */
/* debug */
     Ctrl_Port = Ctrl_Image |= Software_TP;    /* Write to the port */
     Ctrl_Port = Ctrl_Image &= ~Software_TP;    /* Write to the port */
/* debug */
     Ctrl_Image |= DTCS_Clk_Pol; /* Set the DTCS Clock Polarity Bit */
     Ctrl_Port = Ctrl_Image;    /* Write to the port */
     asm("     CLRC    INTM");  /* Re enable interrupts */
  }
  else
  {
```

```
        Sign = -1;
        asm("     SETC    INTM");    /* Disable intr while changing image */
    /* debug */
        Ctrl_Port = Ctrl_Image |= Software_TP;    /* Write to the port */
        Ctrl_Port = Ctrl_Image &= ~Software_TP;    /* Write to the port */
    /* debug */
        Ctrl_Image &= ~DTCS_Clk_Pol; /* Clear the DTCS Clock Polarity Bit */
        Ctrl_Port = Ctrl_Image;      /* Write to the port */
        asm("     CLRC    INTM");    /* Re enable interrupts */
    }
    Decel = Seek_Decel * Sign;


            /* If velocity table initilaized and focus is closed */
    if ((Vel_Table[0] != -1) && (Stat_Buffer[0] & FocusLoop) && (TrackCount > 0)
        && (InverseTime[0] != -1))
    {                                    /* then do the seek */
      Stat_Buffer[0] &= ~Bad_Seek;       /* Clear the bad seek status bit */
      if (TrackCount < 5)
      {
        for (i = 0; i < TrackCount; i++) Do_Jumpback(In_Out);
      }
      else
      {
        if (TrackCount > Hi_BW_Tracks)
        {
          Accel = MaxPositive * Sign;
          LoopGain = HiSeekGain * Sign;   /* Set the Seek Gain for High BW */
        }
        else
        {
          Accel = Seek_Accel * Sign;
          LoopGain = LowSeekGain * Sign;  /* Set the Seek Gain for low BW */
        }
        MaxVelError = abs(MaxPositive / LoopGain);
        OldTime = Count_20_LSW;   /* Get the start time */
        MeasuredVel = 0;          /* Starting Velocity = 0 */
```

```
Stat_Buffer[0] &= ~FineLoop; /* open the fine loop */
FineDacImage = Accel;      /* Update the Image Value */
Fine_DAC = (Accel + ZeroOffset); /* write out the acceleration value */
OldCrsDacZero = CrsDacZero;
CrsDacZero = Accel;        /* Output the coarse loop accel value */
Delay(5);                  /* Wait 100 us for RPP to go away from zero */
New_Trk_Cnt = (Track_Cnt & 0x00FF); /* Get the track counter value */
Old_Trk_Cnt = New_Trk_Cnt; /* Set them equal before starting loop */
if ((Old_Trk_Cnt & 0x0080) == 0) HalfTrack = 1; else HalfTrack = 0;
OldHalfTrack = HalfTrack;  /* Set them equal before starting loop */
while (TrackCount > 1)
{
   if (MeasuredVel < MaxPositive )  /* Velocity > 80.0 mm/s */
   {
     i = 0;
     while ((i < 6000) & (New_Trk_Cnt==Old_Trk_Cnt))
     {
       i++;
       New_Trk_Cnt = (Track_Cnt & 0x00FF); /* Get track count value */
     }
   }
   else
   {
     Delay(1);  /* at high velocity delay 1 time tick */
   }
   New_Trk_Cnt = (Track_Cnt & 0x00FF); /* Get track count value */
   NewTime = Count_20_LSW;       /* Get the current time */
   if ((New_Trk_Cnt & 0x0080) == 0) HalfTrack = 1; else HalfTrack = 0;
   DeltaTracks = (New_Trk_Cnt - Old_Trk_Cnt) & 0x007F;  /* Get Delta */
   Old_Trk_Cnt = New_Trk_Cnt;    /* Save the Track Count Value */
   TrackCount -= DeltaTracks;    /* Update the track counter */
               /* Calculate the number of half tracks */
   DeltaTracks = (DeltaTracks * 2) + HalfTrack - OldHalfTrack;
   OldHalfTrack = HalfTrack;
   DeltaTime = (NewTime - OldTime) - 1;
   OldTime = NewTime;            /* Save the time for next time */
   if (DeltaTime > 24) DeltaTime = 24;
```

```
MeasuredVel = DeltaTracks * InverseTime[DeltaTime];
if (TrackCount > 9280)      /* Tracks > 128+(8*128)+(64*128) */
{
  DesiredVel = Vel_Table[383];
}
else if (TrackCount > 1152)
{
  DesiredVel = Vel_Table[256 + ((TrackCount - 1152) >> 6)];
}
else if (TrackCount > 128)
{
  DesiredVel = Vel_Table[128 + ((TrackCount - 128) >> 3)];
}
else
{
  DesiredVel = Vel_Table[TrackCount];
}
/* Loop Error = LoopGain * (Desired Velocity - Measured Velocity) */
VelError = (DesiredVel - MeasuredVel);
if (abs(VelError) < MaxVelError)
{
  LoopError = LoopGain * VelError;
}
else
{
  if (VelError > 0)
  {
    LoopError = (MaxPositive * Sign);
  }
  else
  {
    LoopError = - (MaxPositive * Sign);
  }
}
FineDacImage = LoopError;     /* Update the Image Value */
Fine_DAC = (LoopError+ZeroOffset);    /* write out accel value */
CrsDacZero = LoopError;  /* Output the coarse loop accel value */
```

```
        }
        CrsDacZero = OldCrsDacZero;
        Track_Capture(In_Out,Decel);
      }
  }
  else                                  /* If Vel Table Not initialized */
  {
    Stat_Buffer[0] |= Bad_Seek;         /* Set bad seek status bit */
  }
}
/*****************************************************************************/
/*     Do a Jumpback in or out                                               */
/*****************************************************************************/
void Do_Jumpback(In_Out)
int In_Out;
{
    int Accel,Decel,i;

    MaxRPP = 0;
    MinRPP = 0;         /* Initialize the min and max values to 0 */
    asm("     SETC   INTM");     /* Disable interupts */
    Cmd_Bits &= ~Tach_Bit;       /* Clear the Tach Bit */
    asm("     CLRC   INTM");     /* enable interupts */
    if (In_Out == Seek_In)       /* do jumpback in */
      {
      Accel = JB_Accel;
      Decel = JB_Decel;
      }
    else                        /* do jumpback out */
      {
      Accel = -JB_Accel;
      Decel = -JB_Decel;
      }
    Stat_Buffer[0] &= ~FineLoop; /* open the fine loop */
    FineDacImage = Accel;     /* Update the Image Value */
    Fine_DAC = (Accel + ZeroOffset);   /* write out the acceleration value */
    for (i = 0; i < 6; i++)    /* Wait 120 us for RPP to go away from zero */
```

```
        {
          Delay(1);
          if (MaxRPP < Int_Fine) MaxRPP = Int_Fine; /* Find RPP Min and Max */
          if (MinRPP > Int_Fine) MinRPP = Int_Fine;
        }
        Track_Capture(In_Out,Decel);
    }
    /*************************************************************************/
    /*      Track Capture After Jumpback or a seek                           */
    /*************************************************************************/
    void Track_Capture (In_Out,Decel)
    int In_Out,Decel;
    {
        int Counter,i;
        int OldDacZero;

                        /* Get ready for Capture */
        OldDacZero = FineDacZero;
        FineDacZero = Decel;
        Counter = 0;
                    /* Wait for 1/2 track */
        if (In_Out == Seek_In)  /* Wait for RPP to go low */
          {
          while (((Int_Fine - Fine_Zero) < 0) & (Counter < 6000))
            {
            Counter++;
            if (MinRPP > Int_Fine) MinRPP = Int_Fine; /* Find RPP Min */
            }
          }
        else                    /* wait for RPP to go high */
          {
          while (((Int_Fine - Fine_Zero) > 0) & (Counter < 6000))
            {
            Counter++;
            if (MaxRPP < Int_Fine) MaxRPP = Int_Fine;  /* Find RPP Max */
            }
          }
```

```
    FineDacImage = Decel;      /* Update the Image Value */
    Fine_DAC = (Decel + ZeroOffset);  /* Write out the deceleration value */
    for (i = 0; i < 3; i++)    /* Wait 60 us */
    {
      Delay(1);
      if (MaxRPP < Int_Fine) MaxRPP = Int_Fine; /* Find RPP Min and Max */
      if (MinRPP > Int_Fine) MinRPP = Int_Fine;
    }
    Stat_Buffer[0] |= FineLoop;  /* Close the fine tracking loop */
    for (i = 0; i < 3; i++)    /* Wait 80 us */
    {
      Delay(1);
      if (MaxRPP < Int_Fine) MaxRPP = Int_Fine; /* Find RPP Min and Max */
      if (MinRPP > Int_Fine) MinRPP = Int_Fine;
    }
    FineDacZero = OldDacZero; /* Remove the deceleration pulse */
}
/*****************************************************************************/
/*     Retract the Carriage to the inner Crash Stop                          */
/*****************************************************************************/
void Retract (void)
{
    int i;

    asm("     SETC    INTM");  /* Disable intr while changing image */
    Ctrl_Image |= CrsEnable;   /* Set the Coarse PA Enable bit on */
    Ctrl_Port = Ctrl_Image;    /* Write out the port value */
    asm("     CLRC    INTM");  /* Re enable interrupts */
    for (i = 0; i < Retr_Pulses; i++)
    {
      Crs_DAC = Retr_Accel + ZeroOffset;   /* Accel toward the spindle */
      Delay(250);              /* for 5 ms */
      Crs_DAC = ZeroOffset;    /* Coast toward the spindle */
      Delay(750);              /* for 15 ms */
    }
    Crs_DAC = Retr_Accel + ZeroOffset;   /* Hold at inner crash stop */
    Delay(5000);               /* for 100 ms */
```

```
}
/*****************************************************************************/
/*   Program Name      : Recal.c                                               */
/*   Description       : 4x 5.25" DSP Servo controller recalibration stuff     */
/*   Part Number       : 562096                                                */
/*   Date              : 2/2/94                                                */
/*   O/S               : N/A                                                   */
/*   Compiler          : TI TMS320C2x/C5x Compiler.#TMDS3242855-02.Rel. 6.0    */
/*   Support Packages  : N/A                                                   */
/*   Author            : Dave Schell                                           */
/*   Required Files    : Drive.c.Interupt.asm.C50_init.asm.Seek.c.Drive.h      */
/*                     : Recal.c                                               */
/*   Hardware Required : Part # XXXXXX                                         */
/*   Install. Instr.   : Link in with Drive code                               */
/*   Operating Instr.  : N/A                                                   */
/*                                                                             */
/*   Rev History                                                               */
/*     Date     Rev  C#  Init     Change Description                         */
/*    4/14/94   XA   00   DLS    Initial Release                              */
/*****************************************************************************/

#include "drive.h"

/*****************************************************************************/
/*   Set focus zero to the optimum RPP Focus Offset                          */
/*****************************************************************************/
void FocusOffset(void)     /* Find the Zero Offsets for Max RPP */
{
    int j.PeaktoPeak[3].Center;

    for (j = 0; j < 3; j++) PeaktoPeak[j] = 0;
    Center = Focus_Zero;
    for (j = 0; j < 3; j++)
    {
      Focus_Zero = Center - Foc_Step + (j * Foc_Step);
      PeaktoPeak[j] = FindPeaktoPeak();
    }
```

```
    if (PeaktoPeak[0] > PeaktoPeak[2])
    {
      while ((j < 20) & (PeaktoPeak[0] > PeaktoPeak[2]))
      {
        Center -= Foc_Step;
        Focus_Zero = Center - Foc_Step;
        PeaktoPeak[2] = PeaktoPeak[1];
        PeaktoPeak[1] = PeaktoPeak[0];
        PeaktoPeak[0] = FindPeaktoPeak();
      }
    }
    else
    {
      while ((j < 20) & (PeaktoPeak[2] > PeaktoPeak[0]))
      {
        Center += Foc_Step;
        Focus_Zero = Center + Foc_Step;
        PeaktoPeak[0] = PeaktoPeak[1];
        PeaktoPeak[1] = PeaktoPeak[2];
        PeaktoPeak[2] = FindPeaktoPeak();
      }
    }
    Focus_Zero = Center;
}
/*************************************************************************/
/*   Set RPP Zero to the center of the peak to peak RPP                  */
/*************************************************************************/
void TrackOffset(void)     /* Find Zero Offset at (Max Rpp + Min RPP)/2 */
{
   int i,Max,Min;

   Max = Min = 0;        /* Initialize the value */

   for (i = 0; i < 8; i++)
   {
     Delay(50);
     Do_Jumpback(Seek_In);
```

```
      Max += MaxRPP >> 4;  /* Max Value / 16 */
      Min += MinRPP >> 4;  /* Min Value / 16 */
    }
    for (i = 0; i < 8; i++)
    {
      Delay(50);
      Do_Jumpback(Seek_Out);
      Max += MaxRPP >> 4;  /* Max Value / 16 */
      Min += MinRPP >> 4;  /* Min Value / 16 */
    }
    Fine_Zero = (Max + Min) >> 1;   /* (Max RPP + Min RPP) / 2 */
  }
  /*************************************************************************/
  /*   Measure the peak to peak RPP value by doing jumpbacks in and out    */
  /*************************************************************************/
  int FindPeaktoPeak(void)  /* Find the peak to peak RPP Value */
  {
    int i,PeaktoPeak;

    PeaktoPeak = 0;        /* Initialize the value */

                /* Clear the Tach Bit */
    asm("     SETC   INTM");     /* Disable interupts */
    Cmd_Bits &= ~Tach_Bit;       /* Clear the Tach Bit */
    asm("     CLRC   INTM");     /* enable interupts */

                /* Wait for the tach to go high */
    while (((Cmd_Bits & Tach_Bit) == 0) && (i++ < 2500)) Delay(1);

    for (i = 0; i < 8; i++)
    {
      Delay(50);
      Do_Jumpback(Seek_In);
      PeaktoPeak += ((MaxRPP - MinRPP) >> 5);  /* Peak to peak / 32 */
    }
    for (i = 0; i < 8; i++)
    {
```

```
        Delay(50);
        Do_Jumpback(Seek_Out);
        PeaktoPeak += ((MaxRPP - MinRPP) >> 5);  /* Peak to peak / 32 */
      }
    return(PeaktoPeak);  /* Return the average pk-pk value/2 */
}
;*****************************************************************************
;   Program Name      : Interupt.asm
;   Description       : DSP Interupt handling routines for the 4x 5.25"
;   Part Number       : 562096
;   Date              : 8/12/93
;   O/S               : N/A
;   Compiler          : TI TMS320C2x/C5x Compiler. #TMDS3242855-02,Rel. 6.0
;   Support Packages  : N/A
;   Author            : Dave Schell
;   Required Files    : Drive.c,Interupt.asm,C50_init.asm,Seek.c,Drive.h
;                     : Recal.c
;   Hardware Required : Part # XXXXXX
;   Install. Instr.   : Link in with Drive code
;   Operating Instr.  : N/A
;
;   Rev History
;     Date     Rev  C#  Init     Change Description
;   4/14/94    XA   00   DLS     Initial Release
;*****************************************************************************

        .title  "Processor Interupt Handlers"

        .length 60

        .mmregs

        .def    ISR1,ISR2,CMD_Intr,Timer
        .def    Tach,Old_Tach_Time,_Tach_Time
        .def    _TachUpLimit,_TachLowLimit
        .def    RCV,XMT,TDMRCV,TDMXMT,TRP,NMISR
        .def    _Count_20_LSW,_Count_20_MSW,_Cmd_Bits,_CMD_Buffer
```

```
        .def    _Fine_DAC,_Crs_DAC,_ReadLS_DAC,_ReadMS_DAC,_Write_DAC
        .def    _Foc_LS_DAC,_Foc_MS_DAC,_Spare_DAC,_Track_Cnt,_SPC
        .def    _Int_QSum,_Int_Fine,_Int_FwdSen,_Int_Crs,_Int_Focus,_Int_Test
        .def    _Stat_Buffer,_Cmd_Buff_Point,_Ctrl_Image,_Ctrl_Port,Sign_Bit
        .def    _QSum_Zero,_Fine_Zero,_Focus_Zero,_FwdSen_Zero,_Crs_Zero
        .def    _FocMS_Image,_FocLS_Image,_FineDacImage,_CrsDacImage
        .def    Focus_N1,Focus_N2,Focus_N3,Focus_D2,Focus_D3,Focus_G
        .def    Fine_N1,Fine_N2,Fine_N3,Fine_D2,Fine_D3,Fine_G
        .def    Crs_N1,Crs_N2,Crs_N3,Crs_D2,Crs_D3,Crs_G,Pin_G
        .def    _Debug_Ram,Focus_Error,Old_Focus_1,_FineDacZero,_CrsDacZero
        .def    _Foc_Err_Cnt,_Focus_Limit,_Fine_Err_Cnt,_Fine_Limit


;  I/O Definition
_SPC        .set    00022h      ;Serial Port Control Register
Cmd_Port    .set    00050h      ;80188/DSP Communication Port
_Ctrl_Port  .set    00051h      ;I/O Control Port, laser, Power Amps, etc.
_Track_Cnt  .set    00051h      ;Track crossing counter read port
ADC_Data    .set    00053h      ;MP87099 ADC Data
ADC_Addr    .set    00053h      ;MP87099 ADC Address
Clock_High  .set    00056h      ;Read to take ADC Clock High
Clock_Low   .set    00057h      ;Read to take ADC Clock Low
_Fine_DAC   .set    00058H      ;7228 fine current DAC
_Crs_DAC    .set    00059H      ;7228 Coarse current DAC
_ReadLS_DAC .set    0005AH      ;7228 Laser Read current DAC
_ReadMS_DAC .set    0005BH      ;7228 Laser Read current DAC
_Write_DAC  .set    0005CH      ;7228 Laser Write current DAC
_Foc_LS_DAC .set    0005DH      ;7228 focus current DAC
_Foc_MS_DAC .set    0005EH      ;7228 focus current DAC
_Spare_DAC  .set    0005FH      ;7228 Spin current DAC


Bit0        .set    15          ;Bit zero in BIT test is a 15
Bit1        .set    14          ;Bit 1 in BIT test is a 14
Bit2        .set    13
Bit3        .set    12
```

```
Bit4        .set    11
Bit5        .set    10
Bit6        .set    9
Bit7        .set    8
Bit8        .set    7
Bit9        .set    6
Bit10       .set    5
Bit11       .set    4
Bit12       .set    3
Bit13       .set    2
Bit14       .set    1
Bit15       .set    0           ;Bit 15 in BIT test is a 0

SBL         .set    5           ;Status Buffer Length
CBL         .set    10          ;Command Buffer Length

: Analog to Digital Converter constants
Focus_ADC   .set    00000H      ;Address zero
QSum_ADC    .set    00001H      ;Address one
Crs_ADC     .set    00002H      ;Address two
Fine_ADC    .set    00003H      ;Address three
FwdSen_ADC  .set    00004H      ;Address four
Test_ADC    .set    00005H      ;Address five

MaxPos      .set    07FFFH      ;Max Positive value for DAC images
MaxNeg      .set    08000H      ;Max Negative value for DAC images
Min_QSum    .set    00240H      ;Minimum QSum before switching refs
Max_Bad_Samples .set 00004H     ;Number of bad samples before Errors Flags

Ref_Select  .set    00004H      ;The reference select bit of Ctrl_Port


:     Timer interupt variables
_Count_20_LSW .usect Time_Ram.1 ;20us counter LSWord. incremented by timer
_Count_20_MSW .usect Time_Ram.1 ;20us counter MSWord. incremented by timer
_Int_QSum     .usect Time_Ram.1 ;Interrupt Quad Sum Value
_Int_Focus    .usect Time_Ram.1 ;Interrupt Focus Value
```

```
Focus_Error     .usect Time_Ram,1   ;_Int_Focus - Zero Offset
Old_Focus_1     .usect Time_Ram,1   ;and old focus value
Old_Focus_2     .usect Time_Ram,1   ;and old focus value
_FocLS_Image    .usect Time_Ram,1   ;Focus LS DAC memory image for capture
_FocMS_Image    .usect Time_Ram,1   ;Focus DAC memory image for servos
Old_FocDac      .usect Time_Ram,1   ;Focus DAC memory image
Focus_N1        .usect Time_Ram,1   ;Focus Loop Constants, Numerator z^0
Focus_N2        .usect Time_Ram,1   ;Focus Loop Constants, Numerator z^-1
Focus_N3        .usect Time_Ram,1   ;Focus Loop Constants, Numerator z^-2
Focus_D2        .usect Time_Ram,1   ;Focus Loop Constants, Denominator z^-1
Focus_D3        .usect Time_Ram,1   ;Focus Loop Constants, Denominator z^-2
Focus_G         .usect Time_Ram,1   ;Focus Loop Constants, Gain
_Foc_Err_Cnt    .usect Time_Ram,1   ;Focus Sample out of spec counter
_Focus_Limit    .usect Time_Ram,1   ;Focus Error In Spec Limit
_Int_Fine       .usect Time_Ram,1   ;Interrupt Fine Value
Fine_Error      .usect Time_Ram,1   ;_Int_Fine - Zero Offset
Old_Fine_1      .usect Time_Ram,1   ;and old Fine value
Old_Fine_2      .usect Time_Ram,1   ;and old Fine value
_FineDacImage   .usect Time_Ram,1   ;Fine DAC memory image
Old_FineDac     .usect Time_Ram,1   ;Fine DAC memory image
_FineDacZero    .usect Time_Ram,1   ;Fine DAC Zero or Seek Accel Value
Fine_N1         .usect Time_Ram,1   ;Fine Loop Constants, Numerator z^0
Fine_N2         .usect Time_Ram,1   ;Fine Loop Constants, Numerator z^-1
Fine_N3         .usect Time_Ram,1   ;Fine Loop Constants, Numerator z^-2
Fine_D2         .usect Time_Ram,1   ;Fine Loop Constants, Denominator z^-1
Fine_D3         .usect Time_Ram,1   ;Fine Loop Constants, Denominator z^-2
Fine_G          .usect Time_Ram,1   ;Fine Loop Constants, Gain
_Fine_Err_Cnt   .usect Time_Ram,1   ;Fine Sample out of spec counter
_Fine_Limit     .usect Time_Ram,1   ;Fine Error In Spec Limit
_Int_Crs        .usect Time_Ram,1   :Interrupt Coarse Value
Crs_Error       .usect Time_Ram,1   ;_Int_Crs - Zero Offset
Old_Crs_1       .usect Time_Ram,1   ;and old Coarse value
Old_Crs_2       .usect Time_Ram,1   ;and old Coarse value
_CrsDacImage    .usect Time_Ram,1   :Coarse DAC memory image
Old_CrsDac      .usect Time_Ram,1   :Coarse DAC memory image
_CrsDacZero     .usect Time_Ram,1   :Coarse DAC Zero or Seek Accel Value
Crs_N1          .usect Time_Ram,1   :Coarse Loop Constants, Numerator z^0
```

```
Crs_N2          .usect Time_Ram,1    ;Coarse Loop Constants, Numerator z^-1
Crs_N3          .usect Time_Ram,1    ;Coarse Loop Constants, Numerator z^-2
Crs_D2          .usect Time_Ram,1    ;Coarse Loop Constants, Denominator z^-1
Crs_D3          .usect Time_Ram,1    ;Coarse Loop Constants, Denominator z^-2
Crs_G           .usect Time_Ram,1    ;Coarse Loop Constants, Gain
Pin_G           .usect Time_Ram,1    ;Pinning Loop Constant, Gain
_Int_FwdSen     .usect Time_Ram,1    ;Interrupt Forward Sense Value
_Int_Test       .usect Time_Ram,1    ;Interrupt Test Value
_FwdSen_Zero    .usect Time_Ram,1    ;ADC Forward Sense Value with the laser off
_QSum_Zero      .usect Time_Ram,1    ;ADC Quad Sum Value with the laser off
_Fine_Zero      .usect Time_Ram,1    ;ADC Tracking Value with the laser off
_Focus_Zero     .usect Time_Ram,1    ;ADC Focus Value with the laser off
_Crs_Zero       .usect Time_Ram,1    ;ADC Postion Error zero value
Sign_Bit        .usect Time_Ram,1    ;Sign Bit value stored here (08000h)
Temp_1          .usect Time_Ram,1    ;Temp Value
Temp_2          .usect Time_Ram,1    ;Temp Value
_Debug_Ram      .usect Time_Ram,50   ;Debug Ram Area


;     Command interupt variables
OldAR           .usect Params,1      ;Old AR storage location for interupts
_Cmd_Bits       .usect Params,1      ;Register to signal a command is ready
                                     ;Bit 0 - 1 = Command Ready
                                     ;Bit 1 - Old Direction Bit
                                     ;Bit 2 - 0 = LSByte, 1 = MSByte
                                     ;Bit 3 - Focus Sample available
                                     ;Bit 4 - Fine Sample available
                                     ;Bit 5 - Coarse Sample available
                                     ;Bit 6 - Quad Sum Sample available
                                     ;Bit 7 - Laser Sense Sample available
                                     ;Bit 8 - Fine I/Test Sample available
                                     ;Bit 9 - Tach Pulse happened

_Ctrl_Image     .usect Params,1      ;memory image of the Control Port
_Cmd_Buff_Point .usect Params,1      ;Storage for cmd pointers

_Stat_Buffer.   .usect Time_Ram.SBL  ;Status Buffer, Length = SBL
```

```
_CMD_Buffer     .usect Time_Ram,CBL   ;Command Buffer, Length = CBL

Old_Tach_Time   .usect Params,1       ;Last Tach pulse time tick
_Tach_Time      .usect Params,1       ;Delta Tach Time
_TachUpLimit    .usect Params,1       ;Tach pulse Upper time limit
_TachLowLimit   .usect Params,1       ;Tach pulse Lower time limit

        .text
ISR1    RETE                          ;INIT1- Track Crossing Signal
ISR2    RETE                          ;INIT2- (Should not happen)
;*************************************************************************
;  Spindle Motor Tach Interrupt Handler, Set the One_Rev bit
;*************************************************************************
Tach                                  ;INIT3- (Tach Pulse)
        LAMM    _Cmd_Bits             ;Tell Kernel a Tach Pulse Happened
        OR      #00200h               ;Set the Tach Pulse bit
        SAMM    _Cmd_Bits             ;Save the new command bits
        LDPK    _Count_20_LSW         ;Point to the timer interupt page
        LACL    _Count_20_LSW         ;Get the current timer value
        LDPK    Old_Tach_Time         ;Point to the Tach time
        SUB     Old_Tach_Time         ;Subtract the old Value
        SACL    _Tach_Time            ;Save the delta value
        ADD     Old_Tach_Time         ;Restore the new time value
        SACL    Old_Tach_Time         ;Save it in the old value
        RETE
;*************************************************************************
;  Timer Interrupt Handler, All Real Time Servos and ADC's are done here!
;*************************************************************************
MSW_Time_Tick                         ;Only do this if lscounter rolled over
        LACL    _Count_20_MSW         ;Increment the 20 us counter        1
        ADD     #1                    ;                                   1
        SACL    _Count_20_MSW         ;Save it                            1
        B       Test_Time_Odd         ;Conitnue                           4
;  Actual start of the timer interupt routine
Timer
:debug
        LAMM    _Ctrl_Image           ;Start of interrupt
```

```
                OR      #02
                SAMM    _Ctrl_Port
                SAMM    _Ctrl_Image             :Start of interrupt
    :debug
    :
    :  Start of  the Focus ADC Conversion and Compensation Loop
    :
    Focus_Start
    : Do the Focus Loop
                LACL    #Focus_ADC              :Load the address
                SAMM    ADC_Addr                :Tell the converter conversion address
    : Update the counter while waiting for the conversion
                LDPK    _Count_20_LSW           :Point to the timer interupt page     2
                LACC    _Count_20_LSW           :Increment the 20 us counter          1
                ADD     #1                      :                                     1
                SACL    _Count_20_LSW           :                                     1
                BCND    MSW_Time_Tick,EQ        :If Counter rolled over inc MSWord    2
    Test_Time_Odd
                BIT     _Count_20_LSW,Bit0      :See if even or odd count             1
                BCND    ODD_Count,TC            :Odd-Fwd Sense, Even-Coarse Loop    2,4
                LAMM    _Cmd_Bits               :Update Command Bits with Sample Data 1
                OR      #00038h                 :Coarse, Fine, Focus available        2
                SAMM    Clock_High              :Take the converter clock high        1
                B       Foc_B_1                 :Do the Even Stuff                    4
    ODD_Count
                NOP                             :One extra clock for ADC timing       1
                SAMM    Clock_High              :Take the converter clock high        1
                LAMM    _Cmd_Bits               :Update Command Bits with Sample Data 1
                OR      #000D8h                 :Sense, Fine, Focus, QSum available   2
                NOP                             :One extra clock for ADC timing       1
    Foc_B_1
                SAMM    Clock_Low               :Take the converter clock low         1
                SAMM    _Cmd_Bits               :Save the results                     1
                NOP
                SAMM    Clock_High              :Take the converter clock high        2
                LAMM    ADC_Data                :Get the result of the conversion     1
                XOR     Sign_Bit                :Make it a signed integer             1
```

```
                AND     #0FFC0h         :Clear the 6 LSBits
                SACL    _Int_Focus      :Save Focus Error                1
        ; Debug
                XOR     Sign_Bit        :Add in the zero offset (8000H)  1
 5              SAMM    _Spare_DAC
                XOR     Sign_Bit        :Add in the zero offset (8000H)  1
        ; Debug
                SUB     _Focus_Zero     :Save the Focus Error            1
                SACL    Focus_Error     :Focus DAC - Zero Value          1
10              SPM     1               :Set for fraction multiply       1
                ZAP                     :                                1
                LT      Old_FocDac      :Vout(N-2)                       1
                MPY     Focus_D3        :Multiply by a constant          1
                LTD     _FocMS_Image    :Vout(N-1) > Vout(N-2)           1
15              MPY     Focus_D2        :Multiply by a constant          1
                APAC                    :Accumulate the results          1
                SACH    Temp_1          :(D2*Vout(N-1)+D3*Vout(N-2) > temp 1
                ZAP                     :                                1
                LT      Old_Focus_2     :Vin(N-2)                        1
20              MPY     Focus_N3        :Multiply by a constant          1
                LTD     Old_Focus_1     :Vi(N-1)>Vi(N-2) acc=Vi(n-2)*N3  1
                MPY     Focus_N2        :Multiply by a constant          1
                LTD     Focus_Error     :Vi(N)>Vi(N-1) acc=acc+Vi(n-1)*N2 1
        ; Focus Error values are updated, Update the focus DAC if the loop is closed
25              BIT     _Stat_Buffer,Bit8  :See if the focus loop is closed  1
                BCND    Focus_Open,NTC  :Branch if the loop is not closed  2
        :
                MPY     Focus_N1        :preg = Vi(n)*N1                 1
                APAC                    :Acc = Acc + Vi(n)*N1            1
30              SACH    Temp_2          :Save result                     1
                LT      Temp_2          :Load the TReg                   1
                SPM     0               :Set for regular multiply        1
                MPY     Focus_G         :PReg = K2*(K3*Vin(N-1) - Vin(N)) 1
                LACC    Temp_1          :acc = (D2*Vout(N-1)+D3*Vout(N-2) 1
35              APAC                    :acc = G*Numerator-Denominator   1
                XOR     Sign_Bit        :Add in the zero offset (8000H)  1
                SAMM    _Foc_MS_DAC     :Write out the value             1
```

```
                XOR     Sign_Bit            :Set the bit back                1
                SACL    _FocMS_Image        :Save the image                  1
    :Loop done unless there is an overflow
                BSAR    15                  :sign extend the 32 bit number   1
    5           BCND    Foc_Pos_OV,GT       :If greater than zero, + overflow 2
                CMPL                        :Ones complement the Acc         1
                BCND    Foc_Neg_OV,GT       :If greater than zero, - overflow 2
                B       Fine_Start          :Do the quad sum loop            4
    Foc_Pos_OV
   10           LACC    #MaxPos             :Write Out Max Positive value    2
                SACL    _FocMS_Image        :Save the image                  1
                XOR     Sign_Bit            :Add in the zero offset (8000H)  1
                SAMM    _Foc_MS_DAC         :Write out the value             1
                B       Fine_Start          :                                4
   15   Foc_Neg_OV
                LACC    #MaxNeg             :Write Out Max Positive value    2
                SACL    _FocMS_Image        :Save the image                  1
                XOR     Sign_Bit            :Add in the zero offset (8000H)  1
                SAMM    _Foc_MS_DAC         :Write out the value             1
   20           B       Fine_Start          :                                4
        :
        :  End of the Focus ADC Conversion and Compensation Loop
        :  Start of the Fine Loop ADC Conversion and Compensation Loop
        :
   25   Focus_Open                          :Focus Loop Open, No Error Check
                LACL    #Fine_ADC           :TES address                     1
                SAMM    ADC_Addr            :Tell the converter conversion address3
                RPT     #4                  :Delay 6 clocks                  6
                NOP
   30           B       Fine_Clk_High       :4 more clock of delay           4
    Fine_Start
    : Do the Fine Tracking Loop
                LACL    #Fine_ADC           :TES address                     1
                SAMM    ADC_Addr            :Tell the converter conversion address3
   35           LACC    Focus_Error         :Get the Focus Error Value       1
                ABS                         :Get the magnitude               1
                SUB     _Focus_Limit        :Compare to out of focus limit   1
```

```
                BCND    Focus_In_Spec.LEQ   :Branch if in spec                  4/2
    Focus_Out_Spec
                LACL    _Foc_Err_Cnt        :Get The Focus Error Count          1
                SUB     #Max_Bad_Samples    :See if at max Number of bad Samples 1
 5              BCND    Fine_Clk_High.GEQ   :If at Max then continue           4/2
                LACL    _Foc_Err_Cnt        :Get The Focus Error Count          1
                ADD     #1                  :Increment the Count                1
                SAMM    Clock_High          :Take the converter clock high      1
                SACL    _Foc_Err_Cnt        :Save the Incremeted Value          1
10              SUB     #Max_Bad_Samples    :See if at max Number of bad Samples 1
                BCND    Fine_Clk_Low.LT     :Continue if not at max count     4/2
                SAMM    Clock_Low           :Take the converter clock low       1
                LACL    _Stat_Buffer        :Set the Bad Focus Bit              1
                OR      #0400H              :Set the Bit                        2
15              SACL    _Stat_Buffer        :Save the Result                    1
    : Debug. In the future. set the 188 interupt here
                B       Fine_Clk_H2         :Continue                           4
    Dec_Foc_Cnt
                SAMM    Clock_High          :Take the converter clock high      1
20              SUB     #1                  :Decrement the Focus Error Count    1
                SACL    _Foc_Err_Cnt        :Save the Decremeted Value          1
                NOP                         :Delay 1 Clock                      1
                NOP                         :Delay 1 Clock                      1
                SAMM    Clock_Low           :Take the converter clock low       1
25              B       Fine_Clk_H2         :Take the Clock Bit Low             4
    Focus_In_Spec
                LACL    _Foc_Err_Cnt        :Get the Focus Error Count          1
                BCND    Dec_Foc_Cnt.NEQ     :If not Zero then decrement       4/2
                NOP
30  Fine_Clk_High
                SAMM    Clock_High          :Take the converter clock high      1
                RPT     #1                  :Delay 3 clocks                     3
                NOP
    Fine_Clk_Low
35              SAMM    Clock_Low           :Take the converter clock low       1
                NOP                         :                                   1
                NOP                         :                                   1
```

```
Fine_Clk_H2
        SAMM    Clock_High          ;Take the converter clock high      2
        LAMM    ADC_Data            ;Get the Data                       3
        XOR     Sign_Bit            ;Make it a signed integer           1
        SACL    _Int_Fine           ;Save Fine Error Value              1
        SUB     _Fine_Zero          ;Save the Fine Error                1
        SACL    Fine_Error          ;Fine Error - Zero Value            1
;Set up for fixed Reference Conversions
        LAMM    _Ctrl_Image         ;                                   1
        OR      #Ref_Select         ;Fixed Reference Bit                2
        SAMM    _Ctrl_Image         ;                                   1
        SAMM    _Ctrl_Port          ;                                   1
        SPM     1                   ;Set for fraction multiply          1
;Do the Loop Compensation
        ZAP                         ;                                   1
        LT      Old_FineDac         ;Vout(N-2)                          1
        MPY     Fine_D3             ;Multiply by a constant             1
        LTD     _FineDacImage       ;Vout(N-1) > Vout(N-2)              1
        MPY     Fine_D2             ;Multiply by a constant             1
        APAC                        ;Accumulate the results             1
        SACH    Temp_1              ;(D2*Vout(N-1)+D3*Vout(N-2) > temp  1
        ZAP                         ;                                   1
        LT      Old_Fine_2          ;Vin(N-2)                           1
        MPY     Fine_N3             ;Multiply by a constant             1
        LTD     Old_Fine_1          ;Vi(N-1)>Vi(N-2) acc=Vi(n-2)*N3     1
        MPY     Fine_N2             ;Multiply by a constant             1
        LTD     Fine_Error          ;Vi(N)>Vi(N-1) acc=acc+Vi(n-1)*N2   1
;Fine Error values are updated. Update the fine DAC if the loop is closed
        BIT     _Stat_Buffer,Bit7   ;See if the fine loop is closed     1
        BCND    FwdSenOrCrs,NTC     ;Branch if the loop is not closed   2
        MPY     Fine_N1             ;preg = Vi(n)*N1                    1
        APAC                        ;Acc = Acc + Vi(n)*N1               1
        SACH    Temp_2              ;Save result                        1
        LT      Temp_2              ;Load the TReg                      1
        SPM     0                   ;Set for regular multiply           1
        MPY     Fine_G              ;PReg = K2*(K3*Vin(N-1) - Vin(N))   1
        LACC    Temp_1              ;acc = (D2*Vout(N-1)+D3*Vout(N-2)   1
```

```
                APAC                    :acc = G*Numerator-Denominator      1
                ADD     _FineDacZero    :Add the DAC Zero Value(or Seek Accel)1
                SACL    _FineDacImage   :Save the image                     1
                XOR     Sign_Bit        :Toggle the MSBit                   1
                SAMM    _Fine_DAC       :Write out the value                1
                XOR     Sign_Bit        :Toggle the MSBit back              1
                  1
:Loop done unless there is an overflow
                BSAR    15              :sign extend the 32 bit number      1
                BCND    Fine_Pos_OV.GT  :If greater than zero. + overflow   2
                CMPL                    :Ones complement the Acc            1
                BCND    Fine_Neg_OV.GT  :If greater than zero. - overflow   2
                B       FwdSenOrCrs     :Do the quad sum loop               4
Fine_Pos_OV
                LACC    #MaxPos         :Write Out Max Positive value       2
                SACL    _FineDacImage   :Save the image                     1
                XOR     Sign_Bit        :Toggle the MSBit                   1
                SAMM    _Fine_DAC       :Write out the value                1
                B       FwdSenOrCrs     :                                   4
Fine_Neg_OV
                LACC    #MaxNeg         :Write Out Max Positive value       2
                SACL    _FineDacImage   :Save the image                     1
                XOR     Sign_Bit        :Toggle the MSBit                   1
                SAMM    _Fine_DAC       :Write out the value                1
:
:  End of  the Fine ADC Conversion and Compensation Loop
:
Fwd_Sen_Addr
: Get the Quad Sum Value
                LACC    #QSum_ADC       :Get the Quad Sum Address
                SAMM    ADC_Addr        :Tell the converter to start
                B       FwdSen_Crs_ADC  :Continue Conversion/Error Checking
:
FineClosed       :Error Check starts here if the Fine loop is closed
                LACC    Fine_Error      :Get the Fine Error Value           1
                ABS                     :Get Magnitude of the error
                SAMM    Clock_High      :Take the converter clock high      1
```

```
                SUB     _Fine_Limit         ;Subtract the Fine error limit
                BCND    Fine_Out_Spec.GT    ;Branch if out of Spec
    Fine_In_Spec
                LACL    _Fine_Err_Cnt       ;Get the error count                1
                SAMM    Clock_Low           ;Take the converter clock low       1
                BCND    Dec_Fine_Cnt.NEQ    ;If not Equal then Decrement        2
                SAMM    Clock_High          ;Take the converter clock high      2
                LAMM    ADC_Data            ;Get the Data                       3
                SACL    Temp_2              ;Save the Results in temp 2
                B       Finish_Fwd_Crs      ;Finish the forward sense or coarse
    ;
    Dec_Fine_Cnt
                SUB     #1                  ;If not Equal then Decrement        1
                SACL    _Fine_Err_Cnt       ;Save the Result                    1
                SAMM    Clock_High          ;Take the converter clock high      2
                LAMM    ADC_Data            ;Get the Data                       3
                SACL    Temp_2              ;Save the Results in temp 2
                B       Finish_Fwd_Crs      ;Finish the forward sense or coarse 4
    ;
    Fine_Out_Spec
                SAMM    Clock_Low           ;Take the converter clock low       1
                NOP
                NOP
                SAMM    Clock_High          ;Take the converter clock high      2
                LAMM    ADC_Data            ;Get the Data                       3
                SACL    Temp_2              ;Save the Results in temp 2         1
                LACL    _Fine_Err_Cnt       ;Get the error count                1
                SUB     #Max_Bad_Samples    ;See if at max number of bad samples 1
                BCND    Finish_Fwd_Crs.GEQ  ;If at max then continue          4/2
                LACL    _Fine_Err_Cnt       ;else increment the error count     1
                ADD     #1                  ;increment                          1
                SACL    _Fine_Err_Cnt       ;Save the count                     1
                SUB     #Max_Bad_Samples    ;Test if now at max count           1
                BCND    Finish_Fwd_Crs.LT   ;continue if not a max count      4/2
                LACL    _Stat_Buffer        ;else set the fine tracking error bit 1
                OR      #1000H              ;Set the Bit                        2
                SACL    _Stat_Buffer        ;Save the result                    1
```

```
: Debug. in the Future set the 188 interupt bit here
        B       Finish_Fwd_Crs      ;Finish the forward sense or coarse
:
FwdSenOrCrs
: Do the Coarse Or Forward Sense Conversion
        BIT     _Count_20_LSW.Bit0  ;See if even or odd count
        BCND    Fwd_Sen_Addr.TC     ;Odd-Fwd Sense. Even-Coarse Loop
: If not forward sense loop then do the coarse loop
        LACC    #Crs_ADC            ;Get the Coarse conversion command
        SAMM    ADC_Addr            ;Tell the converter to start
        RPT     #1
        NOP
FwdSen_Crs_ADC                      ;Start fine loop error checking !!!
        BIT     _Stat_Buffer.Bit7   ;See if the fine loop is closed      1
        BCND    FineClosed.TC       ;Branch if the loop is closed        4/2
        RPT     #1                  ;No error checking if loop is open
        NOP
        SAMM    Clock_High          ;Take the converter clock high       1
        RPT     #1
        NOP
        SAMM    Clock_Low           ;Take the converter clock low        1
        NOP
        NOP
        SAMM    Clock_High          ;Take the converter clock high       2
        LAMM    ADC_Data            ;Get the Data                        3
        SACL    Temp_2              ;Save the value
Finish_Fwd_Crs
        LACC    Temp_2              ;Restore data
        BIT     _Count_20_LSW.Bit0  ;See if even or odd count
        BCND    Fwd_Sense.TC        ;Odd-Fwd Sense. Even-Coarse Loop
        XOR     Sign_Bit            ;Make it a signed integer            1
        SACL    _Int_Crs            ;Save Coarse Error Value             1
        SUB     _Crs_Zero           ;Subtract the zero value             1
        SACL    Crs_Error           ;Crs DAC - Zero Value                1
        BIT     _Stat_Buffer.Bit5   ;See if the Pinning loop is close    1
        BCND    DoPin.TC            ;Branch if pinning is closed         2
        SPM     1                   ;Set for fraction multiply           1
```

```
                ZAP                             :                                       1
                LT      Old_CrsDac              :Vout(N-2)                              1
                MPY     Crs_D3                  :Multiply by a constant                 1
                LTD     _CrsDacImage            :Vout(N-1) > Vout(N-2)                  1
5               MPY     Crs_D2                  :Multiply by a constant                 1
                APAC                            :Accumulate the results                 1
                SACH    Temp_1                  :(D2*Vout(N-1)+D3*Vout(N-2) > temp      1
                ZAP                             :                                       1
                LT      Old_Crs_2               :Vin(N-2)                               1
10              MPY     Crs_N3                  :Multiply by a constant                 1
                LTD     Old_Crs_1               :Vi(N-1)>Vi(N-2) acc=Vi(n-2)*N3         1
                MPY     Crs_N2                  :Multiply by a constant                 1
                LTD     Crs_Error               :Vi(N)>Vi(N-1) acc=acc+Vi(n-1)*N2       1
    : Crs Error values are updated. Update the Crs DAC if the loop is closed
15              BIT     _Stat_Buffer,Bit6       :See if the Coarse loop is closed       1
                BCND    SwitchRef,NTC           :Branch if the loop is not closed       2
    :
                MPY     Crs_N1                  :preg = Vi(n)*N1                        1
                APAC                            :Acc = Acc + Vi(n)*N1                   1
20              SACH    Temp_2                  :Save result                            1
                LT      Temp_2                  :Load the TReg                          1
                SPM     0                       :Set for regular multiply               1
                MPY     Crs_G                   :PReg = K2*(K3*Vin(N-1) - Vin(N))       1
                LACC    Temp_1                  :acc = (D2*Vout(N-1)+D3*Vout(N-2)       1
25              APAC                            :acc = (G*Numerator-Denominator)/4      1
                SFL                             :Shift left, Multiply by 2              1
                SFL                             :Shift left, Multiply by 4              1
                ADD     _CrsDacZero             :Add the DAC Zero Value                 1
                XOR     Sign_Bit                :Add in the zero offset (8000H)         1
30              SAMM    _Crs_DAC                :Write out the value                    1
                XOR     Sign_Bit                :Set the bit back                       1
                SACL    _CrsDacImage            :Save the image                         1
    :Loop done unless there is an overflow
                BSAR    15                      :sign extend the 32 bit number          1
35              BCND    Crs_Pos_OV,GT           :If greater than zero, + overflow       2
                CMPL                            :Ones complement the Acc                1
                BCND    Crs_Neg_OV,GT           :If greater than zero, - overflow       2
```

```
                B       SwitchRef       :Do the quad sum loop                   4
Crs_Pos_OV
                LACC    #MaxPos         :Write Out Max Positive value           2
                SACL    _CrsDacImage    :Save the image                         1
                XOR     Sign_Bit        :Add in the zero offset (8000H)         1
                SAMM    _Crs_DAC        :Write out the value                    1
                B       SwitchRef       :                                       4
Crs_Neg_OV
                LACC    #MaxNeg         :Write Out Max Positive value           2
                SACL    _CrsDacImage    :Save the image                         1
                XOR     Sign_Bit        :Add in the zero offset (8000H)         1
                SAMM    _Crs_DAC        :Write out the value                    1
                B       SwitchRef       :                                       4
: Crs Error values are updated, Do the Pinning Loop
DoPin
                NEG                     :Negate the Coarse Error
                SACL    Crs_Error       :Crs DAC - Zero Value                   1
                SPM     1               :Set for fraction multiply              1
                ZAP                     :                                       1
                LT      Old_FineDac     :Vout(N-2)                              1
                MPY     Crs_D3          :Multiply by a constant                 1
                LTD     _FineDacImage   :Vout(N-1) > Vout(N-2)                  1
                MPY     Crs_D2          :Multiply by a constant                 1
                APAC                    :Accumulate the results                 1
                SACH    Temp_1          :(D2*Vout(N-1)+D3*Vout(N-2) > temp      1
                ZAP                     :                                       1
                LT      Old_Crs_2       :Vin(N-2)                               1
                MPY     Crs_N3          :Multiply by a constant                 1
                LTD     Old_Crs_1       :Vi(N-1)>Vi(N-2) acc=Vi(n-2)*N3         1
                MPY     Crs_N2          :Multiply by a constant                 1
                LTD     Crs_Error       :Vi(N)>Vi(N-1) acc=acc+Vi(n-1)*N2       1
:
                MPY     Crs_N1          :preg = Vi(n)*N1                        1
                APAC                    :Acc = Acc + Vi(n)*N1                   1
                SACH    Temp_2          :Save result                            1
                LT      Temp_2          :Load the TReg                          1
                SPM     0               :Set for regular multiply               1
```

```
                MPY     Pin_G           :PReg = K2*(K3*Vin(N-1) - Vin(N))   1
                LACC    Temp_1          :acc = (D2*Vout(N-1)+D3*Vout(N-2)   1
                APAC                    :acc = (G*Numerator-Denominator)/4  1
                SFL                     :Shift left. Multiply by 2          1
                SFL                     :Shift left. Multiply by 4          1
                ADD     _FineDacZero    :Add the DAC Zero Value             1
                XOR     Sign_Bit        :Add in the zero offset (8000H)     1
                SAMM    _Fine_DAC       :Write out the value                1
                XOR     Sign_Bit        :Set the bit back                   1
                SACL    _FineDacImage   :Save the image                     1
    :Loop done unless there is an overflow
                BSAR    15              :sign extend the 32 bit number      1
                BCND    Pin_Pos_OV,GT   :If greater than zero, + overflow   2
                CMPL                    :Ones complement the Acc            1
                BCND    Pin_Neg_OV,GT   :If greater than zero, - overflow   2
                B       SwitchRef       :Do the quad sum loop               4
    Pin_Pos_OV
                LACC    #MaxPos         :Write Out Max Positive value       2
                SACL    _FineDacImage   :Save the image                     1
                XOR     Sign_Bit        :Add in the zero offset (8000H)     1
                SAMM    _Fine_DAC       :Write out the value                1
                B       SwitchRef       :                                   4
    Pin_Neg_OV
                LACC    #MaxNeg         :Write Out Max Positive value       2
                SACL    _FineDacImage   :Save the image                     1
                XOR     Sign_Bit        :Add in the zero offset (8000H)     1
                SAMM    _Fine_DAC       :Write out the value                1
                B       SwitchRef       :                                   4
    : Read the forward sense and quad sum values
    Fwd_Sense
                SACL    _Int_QSum       :Save the Quad Sum Value
    : Get the forward sense value
                LACC    #FwdSen_ADC     :Get the Forward Sense Address
                SAMM    ADC_Addr        :Tell the converter to start
                LACL    _Int_QSum       :Load it for modification
                BSAR    6               :Make it a 10 bit value
                AND     #03FFH          :Make it positive
```

```
                SACL    _Int_QSum           ;Save the Forward Sense Value
                RPT     #3
                NOP
                SAMM    Clock_High          ;Take the converter clock high      1
                RPT     #1
                NOP
                SAMM    Clock_Low           ;Take the converter clock low       1
                NOP
                NOP
                SAMM    Clock_High          ;Take the converter clock high      2
                LAMM    ADC_Data            ;Get the result of the conversion
                BSAR    6                   ;Make it a 10 bit value
                AND     #03FFH              ;Make it positive
                SACL    _Int_FwdSen         ;Save the Forward Sense Value
SwitchRef
                LAMM    _Ctrl_Image         ;Get the control image
                AND     #0008h              ;See if the laser is on
                BCND    TimeEnd.EQ          ;If laser is off don't switch ref
                LAMM    _Ctrl_Image         ;Set up for Quad Sum Reference
                AND     #~Ref_Select        ;Clear the bit
                SAMM    _Ctrl_Port          ;Write it out
                SAMM    _Ctrl_Image
TimeEnd
;debug
                LAMM    _Ctrl_Image         ;end of interrupt
                AND     #0FDh
                SAMM    _Ctrl_Port
                SAMM    _Ctrl_Image
;debug
                RETE                        ;Timer interupt processing
;
RCV             RETE                        ;Serial Rx (Should not happen)
XMT             RETE                        ;Serial Xmit (Should not happen)
TDMRCV          RETE                        ;TDM Serial Rx (Should not happen)
TDMXMT          RETE                        ;TDM Serial Xmit (Should not happen)
;*****************************************************************************
;  Command Interupt Handler. Interrupt 4
```

```
;*****************************************************************************
CMD_Intr
          BCND   CMD_Stat.BIO          ;If BIO=0.then see is a command or stat
          SETC   XF                    ;else Set the XF Bit and
          RETE                         ;Return
CMD_Stat
          LDP    #000h                 ;Point to page 0;
          BIT    TSPC.Bit8             ;Test Bit 8 of the TSPC (Direction)
          BCND   Dir_Eq_High.TC        ;If Direction is 1 the See if Old = 1
          BIT    _Cmd_Bits.Bit1        ;Test the Old Direction bit
          BCND   CMD_Complete.TC       ;Branch if Old Dir = 1 & Dir = 0
;
Next_Status                            ;Old Dir=0.Dir=0 => ship next status;
          BIT    _Cmd_Bits.Bit2        ;Test the send MSByte or LSByte
          BCND   Stat_MSB.TC           ;Branch MSByte then branch
Stat_LSB
;Note Old Status bit is set
          MAR    *.AR1                 ;Make AR1 active
          SAR    AR1.OldAR             ;Save AR1
          LAR    AR1._Cmd_Buff_Point   ;Load the pointer into AR1
          LACC   *+                    ;Load Status into the Accumulator
          SAMM   Cmd_Port              ;Write Out the Status;
          SAR    AR1._Cmd_Buff_Point   ;Save The Status Pointer
          LAR    AR1.#_Cmd_Bits        ;Toggle the MSByte/LSByte Bit
          XPL    #00004h.*             ;Toggle Bit 2 of the Cmd_Bits
          LAR    AR1.OldAR             ;Restore AR1
          CLRC   XF                    ;Clear the Acknowledge Bit
          RETE                         ;Exit interupt 4
Stat_MSB
          MAR    *.AR1                 ;Make AR1 active
          SAR    AR1.OldAR             ;Save AR1
          LAR    AR1._Cmd_Buff_Point   ;Load the pointer into AR1
          LACC   *.8                   ;Load Status shifted 8 into the Acc.
          SACH   Cmd_Port              ;Write Out the Status;
                                       ;The Status Pointer is unchanged
          LAR    AR1.#_Cmd_Bits        ;Toggle the MSByte/LSByte Bit
          XPL    #00004h.*             ;Toggle Bit 2 of the Cmd_Bits
```

```
                LAR     AR1,OldAR           ;Restore AR1
                CLRC    XF                  ;Clear the Acknowledge Bit
                RETE                        ;Exit interupt 4
        ;
 5      Dir_Eq_High
                BIT     _Cmd_Bits,Bit1      ;Test the Old Direction bit
                BCND    New_CMD,NTC         ;Branch if Old Dir = 0 & Dir = 1
        Next_CMD                            ;Old Dir=1,Dir=1 => get next cmd word:
                                            ;Note Old Status bit is set
10              BIT     _Cmd_Bits,Bit2      ;Test the send MSByte or LSByte
                BCND    CMD_MSB,TC          ;Branch MSByte then branch
        CMD_LSB
        ;Note Old Status bit is set
                MAR     *,AR1               ;Make AR1 active
15              SAR     AR1,OldAR           ;Save AR1
                LAR     AR1,_Cmd_Buff_Point ;Load the pointer into AR1
                LAMM    Cmd_Port            ;Load Command into the Accumulator
                AND     #00FFh              ;Clear the MSBits
                OR      *                   ;Or with the MSByte
20              SACL    *                   ;Save the command word
        ;if AR1 > Command Buffer + Command Buffer Lenght then dec AR1
                LAR     AR1,#_Cmd_Bits      ;Toggle the MSByte/LSByte Bit
                XPL     #00004h,*           ;Toggle Bit 2 of the Cmd_Bits
                LAR     AR1,OldAR           ;Restore AR1
25              CLRC    XF                  ;Clear the Acknowledge Bit
                RETE                        ;Exit interupt 4
        New_CMD
                LAMM    _Cmd_Bits           ;Get the Command Bit Register
                OR      #00006h             ;Set the Old Dir and MSB/LSB bits
30              SAMM    _Cmd_Bits           ;Save the new command bits
                MAR     *,AR1               ;Make AR1 active
                SAR     AR1,OldAR           ;Save AR1
                LAR     AR1,#_CMD_Buffer    ;Load AR1 to the start of Cmd Buffer
                MAR     *-,AR1              ;Decrement the pointer
35              SAR     AR1,_Cmd_Buff_Point ;Save it in the pointer
                B       Save_CMD_MSB
        CMD_MSB
```

```
                MAR     *.AR1                   ;Make AR1 active
                SAR     AR1.OldAR               ;Save AR1
                LAR     AR1._Cmd_Buff_Point     ;Load the pointer into AR1
    Save_CMD_MSB
5               LACC    _Cmd_Buff_Point         ;Get the Pointer Value
    ;Subtract the start of the buffer + Length - 1
                SUB     #(_CMD_Buffer + CBL - 1)
                BCND    Save_Cmd_Point,GEQ      ;Branch if at the end of the buffer
                MAR     *+,AR1                  ;else increment the pointer
10  Save_Cmd_Point
                SAR     AR1._Cmd_Buff_Point     ;Save The Command Pointer
                LACC    Cmd_Port,8              ;Get the MSByte data in Acc. shl 8
                SACL    *                       ;Store the command into the buffer
                                                ;The Status Pointer is unchanged
15              LAR     AR1,#_Cmd_Bits          ;Toggle the MSByte/LSByte Bit
                XPL     #00004h,*               ;Toggle Bit 2 of the Cmd_Bits
                LAR     AR1,OldAR               ;Restore AR1
                CLRC    XF                      ;Clear the Acknowledge Bit
                RETE                            ;Exit interupt 4
20  ;
    CMD_Complete
                LAMM    _Cmd_Bits               ;Tell Kernel a command is ready
                OR      #00001h                 ;Set the Command Ready bit
                AND     #0FFFDh                 ;Clear Old Direction bit
25              SAMM    _Cmd_Bits               ;Save the new command bits
                LAMM    IMR                     ;Get the Interupt Mask Register
                AND     #0FEFFh                 ;Clear interupt 4 enable bit
                SAMM    IMR                     ;Disable interupt 4
                RETE                            ;Exit interupt 4
30  ;
    TRP         RETE                            ;Software trap (Should not happen)
    NMISR       RETE                            ;NMI interupt (Should not happen)
    ;*****************************************************************************
    ;   Program Name        : C50_Init.asm
35  ;   Description         : DSP Initialization for 4x 5.25"
    ;   Part Number         : 562096
    ;   Date                : 8/12/93
```

```
;    O/S                : N/A
;    Compiler           : TI TMS320C2x/C5x Compiler. #TMDS3242855-02.Rel. 6.0
;    Support Packages   : N/A
;    Author             : Dave Schell
;    Required Files     : Drive.c,Interupt.asm,C50_init.asm,Seek.c,Drive.h
;                       : Recal.c
;    Hardware Required  : Part # XXXXXX
;    Install. Instr.    : Link in with Drive code
;    Operating Instr.   : N/A
;
;    Rev History
;      Date     Rev  C#  Init     Change Description
;    4/14/94    XA   00  DLS    Initial Release
;*******************************************************************************
 .include SimSet.equ

            .title  "Processor Initialization, C50_INIT.asm"
            .mmregs
            .ref    ISR1,ISR2,Tach,CMD_Intr,Timer
            .ref    RCV,XMT,TDMRCV,TDMXMT,TRP,NMISR,Sign_Bit
            .ref    _main,_c_int0,_Count_20_LSW,_Cmd_Bits,_Ctrl_Image
            .ref    _Stat_Buffer,_Count_20_MSW,_TachUpLimit,_TachLowLimit
            .ref    Focus_N1,Focus_N2,Focus_N3,Focus_D2,Focus_D3,Focus_G
            .ref    Fine_N1,Fine_N2,Fine_N3,Fine_D2,Fine_D3,Fine_G
            .ref    Crs_N1,Crs_N2,Crs_N3,Crs_D2,Crs_D3,Crs_G,Pin_G
            .ref    _FineDacZero,_CrsDacZero,_Foc_Err_Cnt,_Focus_Limit
            .ref    _Fine_Err_Cnt,_Fine_Limit
            .def    _init_regs,_Vel_Table,_InverseTime,_Read_Sense
            .def    _Write_Sense,_ReadMSImage,_ReadLSImage,_WriteDacImage
            .def    _MaxRPP,_MinRPP

_Vel_Table  .usect V_Table,180h       ;Seek Velocity Table RAM Area
            .bss  _InverseTime,25     ;Inverse time table for seeks
            .bss  _Read_Sense,1       ;Laser Read Sense Desired Level
            .bss  _Write_Sense,1      ;Laser Write Sense Desired Level
            .bss  _ReadMSImage,1      ;Laser Read DAC Bit Image
            .bss  _ReadLSImage,1      ;Laser Read DAC Bit Image
```

```
                .bss  _WriteDacImage,1      ;Laser Write DAC 16 Bit Image
                .bss  _MaxRPP,1             ;Max RPP Value seen during a jumpback
                .bss  _MinRPP,1             ;Min RPP Value seen during a jumpback

; Abs(N1)+Abs(N2)+Abs(N3) must be < 1 to prevent over flow
; Abs(D2)+Abs(D3) must be < 1 to prevent over flow

;Vo(n)=-(D2*Vo(n-1)+D3*Vo(N-2))+(-1)*2*G*(0.5*(N1*Vi(N)+N2*Vi(N-1)+N3*Vi(N-3))
Foc_N1      .set    -8192           ;Foc Loop Const.-N1/4. -1.000*2^13
Foc_N2      .set    -877            ;Foc Loop Const.-N2/4. -0.107*2^13
Foc_N3      .set    7315            ;Foc Loop Const.-N3/4. .893*2^13
Foc_D2      .set    -11665          ;Foc Loop Const.-D2. -.356*2^15
Foc_D3      .set    -4456           ;Foc Loop Const.-D3. -.136*2^15
Foc_G       .set    167             ;Foc Loop Gain Const. 4*36.059(*1.16??)

;Vo(n)=-(D2*Vo(n-1)+D3*Vo(N-2))+(-1)*2*G*(0.5*(N1*Vi(N)+N2*Vi(N-1)+N3*Vi(N-3))
Fin_N1      .set    8192            ;Fin Loop Const. N1/4. 1.000*2^13
Fin_N2      .set    877             ;Fin Loop Const. N2/4. 0.107*2^13
Fin_N3      .set    -7315           ;Fin Loop Const. N3/4. -.893*2^13
Fin_D2      .set    -11665          ;Fin Loop Const. -D2. -.356*2^15
Fin_D3      .set    -4456           ;Fin Loop Const. -D3. -.136*2^15
Fin_G       .set    34              ;Fin Loop Gain Const. 4*8.583

;Vo(n)=-(D2*Vo(n-1)+D3*Vo(N-2))+(-1)*2*G*(0.5*(N1*Vi(N)+N2*Vi(N-1)+N3*Vi(N-3))
Cr_N1       .set    8192            ;Crs Loop Const.-N1/2. (1.000/4)*2^15
Cr_N2       .set    203             ;Crs Loop Const.-N2/2. (0.02482/4)*2^15
Cr_N3       .set    -7989           ;Crs Loop Const.-N3/2. (-.97518/4)*2^15
Cr_D2       .set    11893           ;Crs Loop Const.-D2.   (1.4518/4)*2^15
Cr_D3       .set    -4703           ;Crs Loop Const.-D3.   (-.57412/4)*2^15
Cr_G        .set    7               ;Crs Loop Gain Const. 6.991

Pn_G        .set    7               ;Pinning Loop Gain Const. 7.309

V_TBL       .sect   "vectors"

RESET       B       _c_int0             ;This section will be loaded in
                                        ;program memory address 0h.
```

```
INT1        B       ISR1                ;INIT1- begins processing here
INT2        B       ISR2                ;INIT2- begins processing here
INT3        B       Tach                ;INIT3- Spindle Motor Tach intr
TINT        B       Timer               ;Timer interupt processing
RINT        B       RCV                 ;Serial Recieve processing
XINT        B       XMT                 ;Serial transmit processing
TRNT        B       TDMRCV              ;TDM Serial Recieve processing
TXNT        B       TDMXMT              ;TDM Serial transmit processing
INT4        B       CMD_Intr            ;INIT4- begins processing here
            .space  14*16               ;14 words
TRAP        B       TRP                 ;Software trap processing
NMI         B       NMISR               ;NMI interupt processing

            .text
_init_regs  CLRC    OVM                 ;Allow nornal Overflow in Acc
            LDP     #00h                ;Load the Data Pointer to 00h
 .if Simulator = 1
 ; Need the next line to work with the simulator only.
            SPLK    #0800h,PMST         ;IPTR = 0800h, clear the rest
 ; Need this to work with real system.
 .else
            SPLK    #0810h,PMST         ;Put SARAM into program memory
                                        ;and set IPTR = 0800h
 .endif
            SPLK    #00h,CWSR           ;Wait states are small and short
            SPLK    #00h,PDWSR          ;Set 0 wait states for ext mem
            SPLK    #0FF09h,IOWSR       ;0,1,& 2 wait states at 40MHz
            SPLK    #399,PRD            ;20uS period timer. (50ns*(400-1))
            SPLK    #20h,TCR            ;Reload and Enable the timer
            SPLK    #010Ch,IMR          ;Disable all interupts except the
                                        ;timer, tach (Intr 3) and
                                        ;Command Interupt (Intr 4)
            ZAP                         ;Zero the accumulator
            LDP     #_Count_20_LSW      ;Point to the memory location
            SACL    _Count_20_LSW       ;Zero the 20us count registar;
            LDP     #_Count_20_MSW      ;Point to the memory location
            SACL    _Count_20_MSW       ;Zero the 20us count registar;
```

```
                LDP     #_TachUpLimit           :Point to the memory location
                SACL    _TachUpLimit            :Zero the Tach Pulse check limit
                LDP     #_TachLowLimit          :Point to the memory location
                SACL    _TachLowLimit           :Zero the Tach Pulse check limit
                LDP     #_Stat_Buffer           :Point to the memory location
                SACL    _Stat_Buffer            :Zero the Status Buffer:
                LDP     #_Cmd_Bits              :Point to the memory location
                SACL    _Cmd_Bits               :Zero the Command Bits registar:
    :Reset should have cleared the Control Port. Now Clear the image.
                LDP     #_Ctrl_Image            :Point to the memory location
                SACL    _Ctrl_Image             :Zero Control Port memory image
    : Show that the Velocity Table has not been initialized
                LDP     #_Vel_Table             :Initialize Vel Table to -1
                SPLK    #-1,_Vel_Table          :Say the table is not initialized
    : Show that the Inverse Time Table has not been initialized
                LDP     #_InverseTime           :Initialize Inverse Time to -1
                SPLK    #-1,_InverseTime        :Say the table is not initialized
    : Initailize the Servo Loop Compensation Values
                LDP     #Focus_N1               :Point to the memory location
                SPLK    #Foc_N1,Focus_N1        :Store the initial value
                SPLK    #Foc_N2,Focus_N2        :Store the initial value
                SPLK    #Foc_N3,Focus_N3        :Store the initial value
                SPLK    #Foc_D2,Focus_D2        :Store the initial value
                SPLK    #Foc_D3,Focus_D3        :Store the initial value
                SPLK    #Foc_G,Focus_G          :Store the initial value
                SPLK    #Fin_N1,Fine_N1         :Store the initial value
                SPLK    #Fin_N2,Fine_N2         :Store the initial value
                SPLK    #Fin_N3,Fine_N3         :Store the initial value
                SPLK    #Fin_D2,Fine_D2         :Store the initial value
                SPLK    #Fin_D3,Fine_D3         :Store the initial value
                SPLK    #Fin_G,Fine_G           :Store the initial value
                SPLK    #Cr_N1,Crs_N1           :Store the initial value
                SPLK    #Cr_N2,Crs_N2           :Store the initial value
                SPLK    #Cr_N3,Crs_N3           :Store the initial value
                SPLK    #Cr_D2,Crs_D2           :Store the initial value
                SPLK    #Cr_D3,Crs_D3           :Store the initial value
                SPLK    #Cr_G,Crs_G             :Store the initial value
```

```
        SPLK    #Pn_G.Pin_G             :Store the initial value
        SPLK    #08000h.Sign_Bit        :Store the initial value
        SPLK    #0._FineDacZero         :Store the initial value
        SPLK    #0._CrsDacZero          :Store the initial value
5       SPLK    #0._Foc_Err_Cnt         :Store the initial value
        SPLK    #07FFFH._Focus_Limit    :Store the initial value
        SPLK    #0._Fine_Err_Cnt        :Store the initial value
        SPLK    #07FFFH._Fine_Limit     :Store the initial value
        CLRC    INTM                    :Enable interupts
10      RET                             :Return to the calling program
```



We claim:

1. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens positioned to direct light from said light source between said optical assembly and a respective information storage medium;

an actuator suspending said objective lens for relative motion thereof with respect to said actuator;

a photodetector disposed in a path of light returning from the respective medium, said photodetector positioned to measure return light received from the respective medium;

a monitoring circuit implemented to monitor a Quad Sum signal associated with said return light;

a first servomotor employed to move said objective lens in a tracking direction relative to said actuator;

a second servomotor employed to move said objective lens in a focusing direction relative to said actuator

a first electronic circuit connected to control said first and second servomotors; and

a servo error circuit coupled to said first electronic circuit and said photodetector to determine when said return light exceeds a predetermined value, to search for a first zero crossing determining when said Quad Sum signal exceeds a predetermined amplitude, and to indicate to said first electronic circuit to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude.

This Sheet Has Been Replaced



2. The optical drive system according to claim 1 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

3. The optical drive system according to claim 1 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

4. The optical drive system according to either claim 1, 2 or 3 further including a motor employed to move the respective medium relative to said objective lens, said motor having a support assembly for supporting the respective medium.

5. The optical drive system according to either claim 1, 2, or 3 further including a second electronic circuit responsive to an output signal of said photodetector, said second electronic circuit employed to decode information carried in said return light returned from the respective medium.

6. The optical drive system according to either claim 1, 2 or 3 further including a third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective storage medium and at a second intensity to read information encoded thereon.

7. The optical drive system according to claim 6 wherein said first intensity includes a first write intensity level, a second write power level, and a third write power level.

8. The optical drive system according to either claim 1, 2, 3 or 4

further including a data receiver positioned to accept data that is storable on the respective medium.

9. The optical drive system according to claim 8 further including a data encoder linked to said data receiver to represent said data to be stored in a predetermined format, said data encoder also positioned to direct data to a third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective storage medium and at a second intensity to read information encoded thereon.

10. The optical drive system according to claim 9 further including a write member connected to said third electronic circuit thereby enabled to write information onto the respective medium.

11. The optical drive system according to either claim 1, 2, 3 or 4 wherein said respective information storage medium is removable.

12. The optical drive system according to claim 11 further including a cartridge loading assembly to removably position the respective medium on said support assembly of said motor.

13. The optical drive system according to claim 12 further including third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective storage medium and at a second intensity to read information encoded thereon.

14. The optical drive system according to claim 10 wherein said write member includes a magnetic field generator for producing a magnetic field on a portion of the respective medium and for coacting with said third electronic means and said light source to write and erase information on the

* C L M S *

respective medium.

15. The optical drive system according to either claim 1, 2, or 3 wherein said servo error circuit has a servo error output signal.

16. The optical drive system according to claim 15 further including a normalizing circuit to normalize said servo error output signal to said Quad Sum signal to form a normalized signal that is communicated in a feedback loop to at least one of said servomotors to effect indicated corrections in focusing and tracking.

17. The optical drive system according to claim 10 wherein said write member includes a bias coil assembly having a bar member wrapped in a coil of wire maintained substantially within a bias coil housing.

18. The optical drive system according to claim 17 wherein said bias coil assembly is positionable relative to said respective information storage medium so that when the respective medium is moved relative to said objective lens, a magnetic field may be generated over the entire respective medium thereby allowing information to be written to all portions thereof.

19. The optical drive system according to claim 14 wherein said magnetic field generator includes a bias coil assembly having a bar member wrapped in a coil of wire maintained substantially within a bias coil housing.

20. The optical drive system according to claim 19 wherein said respective information storage medium is removable.

21. The optical drive system according to claim 20 further including a cartridge loading assembly to removably position the respective medium on

said support assembly of said motor.

22. The optical drive system according to claim 21 wherein said bias coil assembly is linked to said cartridge loading assembly to position said bias coil assembly relative to said respective information storage medium so that when the respective medium is moved relative to said objective lens, a magnetic field may be generated over the entire respective medium thereby allowing information to be written to all portions thereof.

23. The optical drive system according to either claim 1, 2, or 3 further including a third servomotor for moving said actuator assembly in said tracking direction relative to the respective medium, and wherein said first electronic means controls said first, second, and third servomotors.

24. The optical drive system according to either claim 1, 2, or 3 wherein the total of said return light has a peak value and said servo error circuit are coupled to said first electronic means for determining when said return light exceeds a half of said peak value.

25. The optical drive system according to either claim 1, 2, or 3 further including a housing structure for positioning components of the optical drive system with respect to one another.

26. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

a photodetector disposed in a path of light returning from the respective medium, said photodetector for measuring return light received from the respective medium;

means for monitoring a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

first electronic means for controlling said first and second servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a hub assembly for supporting the respective medium;

second electronic means responsive to an output signal of said photodetector for decoding information carried in said light returning from the respective medium;

third electronic means for enabling said light source to emit light at a first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon;

data receiving means for accepting data that is storable on the respective medium;

data encoding means being responsive to said data receiving means for representing said data to be stored in a predetermined format, said data encoding means also for directing data to said third electronic means;

a magnetic field generator for producing a magnetic field on a portion

of the respective medium and for coacting with said third electronic means and said light source to write and erase information on the respective medium;

a cartridge loading assembly for removably positioning the respective medium on said hub assembly of said motor; and

servo error detecting means including said photodetector, said servo error detecting means being coupled to said first electronic means for determining when said return light exceeds a predetermined value, for searching for a first zero crossing determining when said Quad Sum signal exceeds a predetermined amplitude, and for indicating to said first electronic means to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude.

27. The optical drive system according to claim 26 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

28. The optical drive system according to claim 26 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

29. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

This Sheet Has Been Replaced

* C L M S *

an objective lens disposed in said objective lens subassembly;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

light detection means disposed in a path of light returning from the respective medium, said light detection means for measuring return light received from the respective medium;

means for monitoring a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

first electronic means for controlling said first and second servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a hub assembly for supporting the respective medium;

second electronic means responsive to an output signal of said light detection means, said second electronic means for decoding information carried in said light returning from the respective medium;

third electronic means for enabling said light source to emit light at a first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon;

data receiving means for accepting data that is storable on the respective medium;

data encoding means being responsive to said data receiving means for representing said data to be stored in a predetermined format, said data encoding means also for directing data to said third electronic means;

write means, coacting with said third electronic means, for writing

* C L M S *

information on the respective medium;

cartridge loading assembly for removably positioning the respective medium on said hub assembly of said motor; and

servo error detecting means coupled to said first electronic means and said light detection means for determining when said return light exceeds a predetermined value, for searching for a first zero crossing after said Quad Sum signal exceeds a predetermined amplitude, and for indicating to said first electronic means to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude.

30. The optical drive system according to claim 29 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

31. The optical drive system according to claim 29 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

32. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

light detection means disposed in a path of light returning from the

This Sheet Has Been Replaced

respective medium for measuring return light received from the respective medium, a total of said return light having a peak value associated therewith;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

means for monitoring a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

a third servomotor for moving said actuator assembly in said tracking direction relative to the respective medium;

first electronic means for controlling said first, second, and third servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a surface for supporting the respective medium;

second electronic means responsive to an output signal of said light detection means for decoding information carried in said return light returning from the respective medium;

third electronic means for enabling said light source to emit light at a first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon;

data receiving means for accepting data that is storable on the respective medium;

data encoding means being responsive to said data receiving means for representing said data to be stored in a predetermined format, said data encoding means also for directing data to said third electronic means;

write means, coacting with said third electronic means, for writing information on the respective medium;

a cartridge loading assembly for removably positioning the respective medium on said surface of said motor;

servo error detecting means coupled to said first electronic means and said light detection means for determining when said return light exceeds one-half said peak value, for searching for a first zero crossing determining when said Quad Sum signal exceeds said one-half peak value, and for indicating to said first electronic means to direct close of focus by said second servomotor when said Quad Sum signal exceeds said one-half peak value; and

a housing structure for positioning components of the optical drive system with respect to one another.

33. The optical drive system according to claim 32 wherein said first servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

34. The optical drive system according to claim 32 wherein said second servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

35. The optical drive system according to any of claims 26, 29, or 32 wherein said first intensity includes a first write intensity level, a second



write power level, and a third write power level.

36. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

an actuator assembly suspending said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

a photodetector disposed in a path of light returning from the respective medium, said photodetector for measuring return light received from the respective medium;

means for monitoring a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

first electronic means for controlling said first and second servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a support assembly for supporting the respective medium;

second electronic means responsive to an output signal of said photodetector for decoding information carried in said light returning from the respective medium;

third electronic means for enabling said light source to emit light at a

* C L M S *

first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon;

data receiving means for accepting data that is storable on the respective medium;

data encoding means being responsive to said data receiving means for representing said data to be stored in a predetermined format, said data encoding means also for directing data to said third electronic means;

a magnetic field generator for producing a magnetic field on a portion of the respective medium and for coacting with said third electronic means and said light source to write and erase information on the respective medium;

a cartridge loading assembly for removably positioning the respective medium on said support assembly of said motor;

servo error detecting means including said photodetector, said servo error detecting means being coupled to said first electronic means for determining when said return light exceeds a predetermined value, for searching for a first zero crossing determining when said Quad Sum signal exceeds a predetermined amplitude, and for indicating to said first electronic means to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude, said servo error detecting means thereby having a servo error output signal; and

electronic circuit means for normalizing said servo error output signal to said Quad Sum signal to form a normalized signal that is communicated in a feedback loop to at least one of said servomotors for effecting indicated corrections in focusing and tracking.

37. The optical drive system according to claim 36 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

This Sheet Has Been Replaced

38. The optical drive system according to claim 36 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

39. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

light detection means disposed in a path of light returning from the respective medium, said light detection means for measuring return light received from the respective medium;

means for monitoring a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

first electronic means for controlling said first and second servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a support assembly for supporting the

* C L M S *

respective medium;

second electronic means responsive to an output signal of said light detection means, said second electronic means for decoding information carried in said return light returned from the respective medium;

third electronic means for enabling said light source to emit light at a first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon;

data receiving means for accepting data that is storable on the respective medium;

data encoding means being responsive to said data receiving means for representing said data to be stored in a predetermined format, said data enco

ding means also for directing data to said third electronic means;

write means, coacting with said third electronic means, for writing information on the respective medium;

a cartridge loading assembly for removably positioning the respective medium on said support assembly of said motor;

servo error detecting means coupled to said first electronic means and said light detection means for determining when said return light exceeds a predetermined value, for searching for a first zero crossing determining when said Quad Sum signal exceeds a predetermined amplitude, and for indicating to said first electronic means to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude, said servo error detecting means thereby having a servo error output signal; and

electronic circuit means for normalizing said servo error output signal to said Quad Sum signal to form a normalized signal that is communicated in a feedback loop to at least one of said servomotors for effecting indicated corrections in focusing and tracking.

This Sheet Has Been Replaced

40. The optical drive system according to claim 39 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

41. The optical drive system according to claim 39 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

42. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

light detection means disposed in a path of light returning from the respective medium for measuring return light reflected from the respective medium, a total of said return light having a peak value associated therewith;

an actuator assembly suspending said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

means for monitoring a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

* C L M S *

a third servomotor for moving said actuator assembly in said tracking direction relative to the respective medium;

first electronic means for controlling said first, second, and third servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a surface for supporting the respective medium;

second electronic means responsive to an output signal of said light detection means for decoding information carried in said return light returning from the respective medium;

third electronic means for enabling said light source to emit light at a first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon;

data receiving means for accepting data that is storable on the respective medium;

data encoding means being responsive to said data receiving means for representing said data to be stored in a predetermined format, said data encoding means also for directing data to said third electronic means;

write means, coacting with said third electronic means, for writing information on the respective medium;

a cartridge loading assembly for removably positioning the respective medium on said surface of said motor;

servo error detecting means coupled to said first electronic means and said light detection means for determining when said return light exceeds one-half said peak value, for searching for a first zero crossing determining when said Quad Sum signal exceeds said one-half peak value, and for indicating to said first electronic means to direct close of focus by said second servomotor when said Quad Sum signal exceeds said one-half peak value, said servo error detecting means thereby having a servo error output signal;

This Sheet Has Been Replaced

electronic circuit means for normalizing said servo error output signal to said Quad Sum signal to form a normalized signal that is communicated in a feedback loop to at least one of said servomotors for effecting indicated corrections in focusing and tracking; and

a housing structure for positioning components of the optical drive system with respect to one another.

43. The optical drive system according to claim 42 wherein said first servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

44. The optical drive system according to claim 42 wherein said second servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

45. The optical drive system according to any of claims 36, 39, or 42 wherein said first intensity includes a first write intensity level, a second write power level, and a third write power level.

46. The optical drive system according to any of claims 26, 29, or 32 wherein said magnetic field generator or said write means includes a bias coil assembly including a bar member wrapped in a coil of wire maintained substantially within a bias coil housing.

47. The optical drive system according to claim 46 wherein said bias coil assembly is linked to said cartridge loading assembly to position said bias coil assembly relative to said respective information storage medium so that when the respective medium is moved relative to said objective lens subassembly, a magnetic field may be generated over the entire respective medium thereby allowing information to be written to all portions thereof.

48. The optical drive system according to any of claims 36, 42, or 45 wherein said magnetic field generator or said write means includes a bias coil assembly including a bar member wrapped in a coil of wire maintained substantially within a bias coil housing.

49. The optical drive system according to claim 48 wherein said bias coil assembly is linked to said cartridge loading assembly to position said bias coil assembly relative to said respective information storage medium so that when the respective medium is moved relative to said objective lens subassembly, a magnetic field may be generated over the entire respective medium thereby allowing information to be written to all portions thereof.

50. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

a photodetector disposed in a path of light returning from the respective medium, said photodetector for measuring return light received from the respective medium;

a monitoring circuit positioned to monitor a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator;

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

a first electrcnic circuit employed to control said first and second servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a support assembly for supporting the respective medium;

a second electronic circuit responsive to an output signal of said photodetector to decode information carried in said light returning from the respective medium;

a third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective storage medium and at a second intensity to read information encoded thereon;

a data receiver positioned to accept data that is storable on the respective medium;

a data encoder linked to said data receiver to represent said data to be stored in a predetermined format, said data encoder also positioned to direct data to said third electronic circuit;

a magnetic field generator located to produce a magnetic field on a portion of the respective medium and to coact with said third electronic circuit and said light source to write and erase information on the respective medium;

a cartridge loading assembly to removably position the respective

* C L M S *

medium on said support assembly of said motor; and

a servo error circuit coupled to said first electronic circuit and said photodetector to determine when said return light exceeds a predetermined value, to search for a first zero crossing determining when said Quad Sum signal exceeds a predetermined amplitude, and indicate to said first electronic circuit to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude.

51. The optical drive system according to claim 50 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

52. The optical drive system according to claim 50 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

53. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

a photodetector disposed in a path of light returning from the

This Sheet Has Been Replaced

* C L M S *

respective medium, said photodetector for measuring return light received from the respective medium;

a monitoring circuit positioned to monitor a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

a first electronic circuit employed to control said first and second servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a support assembly for supporting the respective medium;

a second electronic circuit responsive to an output signal of said photodetector, said second electronic circuit employed to decode information carried in said light returning from the respective medium;

a third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective storage medium and at a second intensity to read information encoded thereon;

a data receiver positioned to accept data that is storable on the respective medium;

a data encoder linked to said data receiver to represent said data to be stored in a predetermined format, said data encoder also positioned to direct data to said third electronic circuit;

a write member connected to said third electronic circuit, said write member thereby capable of writing information onto the respective medium;

a cartridge loading assembly to removably position the respective medium on said support assembly of said motor; and

a servo error circuit connected to said first electronic circuit and said photodetector to determine when said return light exceeds a predetermined

* C L M S *

value, to search for a first zero crossing determining when said Quad Sum signal exceeds a predetermined amplitude, and to indicate to said first electronic circuit to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude.

54. The optical drive system according to claim 53 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

55. The optical drive system according to claim 53 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

56. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

a photodetector disposed in a path of light returning from the respective medium for measuring return light reflected from the respective medium, a total of said return light having a peak value associated therewith;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

This Sheet Has Been Replaced

* C L M S *

a monitoring circuit positioned to monitor a Quad Sum signal associated with said return light;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative to said actuator assembly;

a third servomotor for moving said actuator assembly in said tracking direction relative to the respective medium;

a first electronic circuit employed to control said first, second, and third servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a surface for supporting the respective medium;

a second electronic circuit responsive to an output signal of said photodetector employed to decode information carried in said return light returning from the respective medium;

a third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective storage medium and at a second intensity to read information encoded thereon;

a data receiver positioned to accept data that is storable on the respective medium;

a data encoder linked to said data receiver to represent said data to be stored in a predetermined format, said data encoder also positioned to direct data to said third electronic circuit;

a write member connected to said third electronic means, said write member thereby capable of writing information onto the respective medium;

a cartridge loading assembly to removably position the respective medium on said surface of said motor;

a servo error circuit connected to said first electronic circuit and said photodetector to determine when said return light exceeds one-half said

* C L M S *

peak value, to search for a first zero crossing when said Quad Sum signal exceeds said one-half peak value, and to indicate to said first electronic circuit to direct close of focus by said second servomotor when said Quad Sum signal exceeds said one-half peak value while a relative distance between said objective lens and the respective medium is increasing; and

a housing structure for positioning components of the optical drive system with respect to one another.

57. The optical drive system according to claim 56 wherein said first servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

58. The optical drive system according to claim 56 wherein said second servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

59. The optical drive system according to any of claims 50, 53, or 56 wherein said first intensity includes a first write intensity level, a second write power level, and a third write power level.

60. The optical drive system according to any of claims 50, 53, or 56 wherein said magnetic field generator or said write member includes a bias coil assembly comprising a bar member wrapped in a coil of wire maintained substantially within a bias coil housing.

This Sheet Has Been Replaced

61. The optical drive system according to claim 60 wherein said bias coil assembly is linked to said cartridge loading assembly to position said bias coil assembly relative to said respective information storage medium so that when the respective medium is moved relative to said objective lens subassembly, a magnetic field may be generated over the entire respective medium thereby allowing information to be written to all portions thereof.

62. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

an actuator assembly suspending said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

a photodetector disposed in a path of light returning from the respective medium, said photodetector positioned to measure return light received from the respective medium;

a monitoring circuit implemented to monitor a Quad Sum signal associated with said return light;

a first servomotor employed to move said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor employed to move said objective lens subassembly in a focusing direction relative to said actuator assembly;

a first electronic circuit implemented to control said first and second servomotors;

a motor employed to move the respective medium relative to said objective lens subassembly, said motor having a support assembly for

* C L M S *

supporting the respective medium;

a second electronic circuit responsive to an output signal of said photodetector employed to decode information carried in said light returning from the respective medium;

a third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective storage medium and at a second intensity to read information encoded thereon;

a data receiver positioned to accept data that is storable on the respective medium;

a data encoder linked to said data receiver to represent said data to be stored in a predetermined format, said data encoder also positioned to direct data to said third electronic circuit;

a magnetic field generator located to produce a magnetic field on a portion of the respective medium and to coact with said third electronic circuit and said light source to write and erase information on the respective medium;

a cartridge loading assembly to removably position the respective medium on said support assembly of said motor;

a servo error circuit connected to said first electronic circuit and said photodetector to determine when said return light exceeds a predetermined value, to search for a first zero crossing determining when said Quad Sum signal exceeds a predetermined amplitude, and to indicate to said first electronic circuit to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude, said servo error circuit thereby having a servo error output signal; and

a normalizing circuit to normalize said servo error output signal to said Quad Sum signal to form a normalized signal that is communicated in a feedback loop to at least one of said servomotors to effect indicated corrections in focusing and tracking.

This Sheet Has Been Replaced



63. The optical drive system according to claim 62 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

64. The optical drive system according to claim 62 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

65. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

a photodetector disposed in a path of light returning from the respective medium, said photodetector positioned to measure return light received from the respective medium;

a monitoring circuit implemented to monitor a Quad Sum signal associated with said return light;

a first servomotor employed to move said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor employed to move said objective lens subassembly in a focusing direction relative to said actuator assembly;

* C L M S *

a first electronic circuit connected to control said first and second servomotors;

a motor employed to move the respective medium relative to said objective lens subassembly, said motor having a support assembly for supporting the respective medium;

a second electronic circuit responsive to an output signal of said photodetector, said second electronic circuit employed to decode information carried in said return light returned from the respective medium;

a third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective storage medium and at a second intensity to read information encoded thereon;

a data receiver positioned to accept data that is storable on the respective medium;

a data encoder linked to said data receiver to represent said data to be stored in a predetermined format, said data encoder also positioned to direct data to said third electronic circuit;


a write member connected to said third electronic circuit thereby capable of writing information on the respective medium;

a cartridge loading assembly to removably position the respective medium on said support assembly of said motor;

a servo error circuit coupled to said first electronic circuit and said photodetector to determine when said return light exceeds a predetermined value, to search for a first zero crossing determining when said Quad Sum signal exceeds a predetermined amplitude, and to indicate to said first electronic circuit to direct close of focus by said second servomotor when said Quad Sum signal exceeds said predetermined amplitude, said servo error circuit thereby having a servo error output signal; and

a normalizing circuit to normalize said servo error output signal to said Quad Sum signal to form a normalized signal that is communicated in a feedback loop to at least one of said servomotors to effect indicated

This Sheet Has Been Replaced

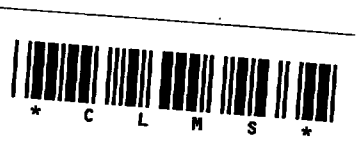

corrections in focusing and tracking.

66. The optical drive system according to claim 65 wherein said first servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

67. The optical drive system according to claim 65 wherein said second servomotor is further employed to move said objective lens during focus capture relative to the respective medium being read while a maximum Quad Sum signal is searched for.

68. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly positioned to direct light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

a photodetector disposed in a path of light returning from the respective medium employed to measure return light reflected from the respective medium, a total of said return light having a peak value associated therewith;

an actuator assembly suspending said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

a monitoring circuit implemented to monitor a Quad Sum signal associated with said return light;

a first servomotor employed to move said objective lens subassembly in a tracking direction relative to said actuator assembly;

* C L M S *

a second servomotor employed to move said objective lens subassembly in a focusing direction relative to said actuator assembly;

a third servomotor employed to move said actuator assembly in said tracking direction relative to the respective medium;

a first electronic circuit employed to control said first, second, and third servomotors;

a motor positioned to move the respective medium relative to said objective lens subassembly, said motor having a surface for supporting the respective medium;

a second electronic circuit responsive to an output signal of said photodetector, said second electronic circuit employed to decode information carried in said return light returned from the respective medium;

a third electronic circuit implemented to enable said light source to emit light at a first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon;

a data receiver positioned to accept data that is storable on the respective medium;

a data encoder linked to said data receiver to represent said data to be stored in a predetermined format, said data encoder also positioned to direct data to said third electronic circuit;

a write member connected to said third electronic circuit thereby capable of writing information on the respective medium;

a cartridge loading assembly to removably position the respective medium on said surface of said motor;

a servo error circuit coupled to said first electronic circuit and said photodetector to determine when said return light exceeds one-half said peak value, to search for a first zero crossing determining when said Quad Sum signal exceeds said one-half peak value, and to indicate to said first electronic circuit to direct close of focus by said second servomotor when said Quad Sum signal exceeds said one-half peak value, said servo error

This Sheet Has Been Replaced

circuit thereby having a servo error output signal;

a normalizing circuit to normalize said servo error output signal to said Quad Sum signal to form a normalized signal that is communicated in a feedback loop to at least one of said servomotors to effect indicated corrections in focusing and tracking; and

a housing structure for positioning components of the optical drive system with respect to one another.

69. The optical drive system according to claim 68 wherein said first servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

70. The optical drive system according to claim 68 wherein said second servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

71. The optical drive system according to any of claims 62, 65, or 68 wherein said first intensity includes a first write intensity level, a second write power level, and a third write power level.

72. The optical drive system according to any of claims 62, 65, or 68 wherein said magnetic field generator or said write member includes a bias coil assembly including a bar member wrapped in a coil of wire maintained substantially within a bias coil housing.

73. The optical drive system according to claim 72 wherein said bias coil assembly is linked to said cartridge loading assembly to position said bias coil assembly relative to said respective information storage medium so that when the respective medium is moved relative to said objective lens subassembly, a magnetic field may be generated over the entire respective medium thereby allowing information to be written to all portions thereof.

74. An optical disc system of the type having a focusing mechanism and a tracking mechanism, wherein the mechanisms are controlled by a feedback loop which comprises:

an electronic circuit for generating a servo error signal, wherein the error signal is communicated in the feedback loop for effecting corrections of said focusing mechanism and said tracking mechanism.

75. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative said actuator assembly;

a third servomotor for moving said actuator assembly in said tracking

direction relative the respective medium;

first electronic means for controlling said first, second, and third servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a hub assembly for supporting the respective medium;

a photodetector disposed in a path of light returning from the respective medium;

second electronic means responsive to an output signal of said photodetector for decoding information carried in said light returning from the respective medium;

third electronic means for enabling said light source to emit light at a first intensity level to encode information on the respective medium and at a second intensity level to read information encoded thereon;

data receiving means for accepting data that is storable on the respective medium;

data encoding means being responsive to said data receiving means for representing said data to be stored in a predetermined format, said data encoding means also for directing data to said third electronic means;

a magnetic field generator for producing a magnetic field on a portion of the respective medium and for coacting with said third electronic means and said light source to write and erase information on the respective medium;

a cartridge loading assembly for removably positioning the respective medium on said hub assembly of said motor;

servo error detecting means coupled to said first electronic means and disposed in said path of light returning from the respective medium for detecting a characteristic of said light returning that varies with a position of said objective lens relative to the respective medium; and

a housing structure for positioning components of said optical drive



system with respect to one another.

76. An optical drive system comprising:

an optical assembly;

a light source capable of transmitting light through said optical assembly;

an objective lens subassembly for directing light from said light source between said optical assembly and a respective information storage medium;

an objective lens disposed in said objective lens subassembly;

light detection means disposed in a path of light returning from the respective medium for measuring total light received from the respective medium;

an actuator assembly which suspends said objective lens subassembly for relative motion thereof with respect to said actuator assembly;

means for monitoring a Quad Sum signal;

a first servomotor for moving said objective lens subassembly in a tracking direction relative to said actuator assembly;

a second servomotor for moving said objective lens subassembly in a focusing direction relative said actuator assembly;

a third servomotor for moving said actuator assembly in said tracking direction relative the respective medium;

first electronic means for controlling said first, second, and third servomotors;

a motor for moving the respective medium relative to said objective lens subassembly, said motor having a surface for supporting the respective medium;

second electronic means responsive to an output signal of said light detection means for decoding information carried in said light returning from

* C L M S *

the respective medium;

third electronic means for enabling said light source to emit light at a first intensity to encode information on the respective medium and at a second intensity to read information encoded thereon;

data receiving means for accepting data that is storable on the respective medium;

data encoding means being responsive to said data receiving means for representing said data to be stored in a predetermined format, said data encoding means also for directing data to said third electronic means;

write means, coacting with said third electronic means, for writing information on the respective medium;

a cartridge loading assembly for removably positioning the respective medium on said surface of said motor;

servo error detecting means coupled to said first electronic means and disposed in said path of light returning from the respective medium for determining when said total light exceeds one-half the peak value measured, for searching for a first zero crossing determining when said Quad Sum signal exceeds one-half peak amplitude, and for indicating to said first electronic means to direct close of focus by said second servomotor when said Quad Sum signal exceeds one-half peak amplitude; and

a housing structure for positioning components of said optical drive system with respect to one another.

77. The optical drive system according to claim 76 wherein said first servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

This Sheet Has Been Replaced



* C L M S *

78. The optical drive system according to claim 76 wherein said second servomotor is further employed for moving, during focus capture, said objective lens to a first position, for moving said lens away from said first position toward the respective medium being read while a maximum Quad Sum signal is searched for, and for moving said lens back away from the respective medium.

79. An optical disc system of the type having a focusing mechanism and a tracking mechanism, a lens and a disc to be read, wherein the mechanisms are controlled by a feedback loop, comprising:

an electronic circuit for generating a servo signal for effecting corrections of said focusing mechanism and said tracking mechanism;

means for impinging light upon a disc to be read;

means for initially retracting the lens to the bottom of its stroke, for subsequently scanning up to the top of the lens stroke while searching for the maximum Quad Sum signal and for then moving said lens back away from the disc;

means for monitoring the total light coming back from said disc, and for determining, during said monitoring, when said total light is above one-half the peak value measured;

means for searching for the first zero crossing; and

means for determining when said Quad Sum signal is over one-half peak amplitude and closing focus at that point, whereby enhanced focus capture is achieved.